



**Ruijie XS-S1960-H Series Switches**

**RGOS Command Reference, Release 11.4(1)B42P17**

## **Copyright Statement**

Ruijie Networks©2019

Ruijie Networks reserves all copyrights of this document. Any reproduction, excerpt, backup, modification, transmission, translation or commercial use of this document or any portion of this document, in any form or by any means, without the prior written consent of Ruijie Networks is prohibited.

## **Exemption Statement**

This document is provided “as is”. The contents of this document are subject to change without any notice. Please obtain the latest information through the Ruijie Networks website. Ruijie Networks endeavors to ensure content accuracy and will not shoulder any responsibility for losses and damages caused due to content omissions, inaccuracies or errors.

## Preface

Thank you for using our products. This manual matches the RGOS Release 11.4(1)B42P17.

## Audience

This manual is intended for:

- Network engineers
- Technical support and servicing engineers
- Network administrators

## Obtaining Technical Assistance

- Ruijie Networks Website: <https://www.ruijienetworks.com/>
- Technical Support Website: <https://ruijienetworks.com/support>
- Case Portal: <https://case.ruijienetworks.com>
- Community: <https://community.ruijienetworks.com>
- Technical Support Email: [service\\_rj@ruijienetworks.com](mailto:service_rj@ruijienetworks.com)
- Skype: [service\\_rj@ruijienetworks.com](https://www.skype.com/people/service_rj@ruijienetworks.com)

## Related Documents

Documents	Description
Configuration Guide	Describes network protocols and related mechanisms that supported by the product, with configuration examples.
Hardware Installation and Reference Guide	Describes the functional and physical features and provides the device installation steps, hardware troubleshooting, module technical specifications, and specifications and usage guidelines for cables and connectors.

## Conventions

This manual uses the following conventions:

Convention	Description
<b>boldface font</b>	Commands, command options, and keywords are in <b>boldface</b> .
<i>italic font</i>	Arguments for which you supply values are in <i>italics</i> .
[ ]	Elements in square brackets are optional.

{ x   y   z }	Alternative keywords are grouped in braces and separated by vertical bars.
[ x   y   z ]	Optional alternative keywords are grouped in brackets and separated by vertical bars.

## Symbols



Means reader take note. Notes contain helpful suggestions or references.



Means reader be careful. In this situation, you might do something that could result in equipment damage or loss of data.





## System Configuration Commands

---

1. Command Line Interface Commands
2. Basic Configuration Management Commands
3. Line Commands
4. File System Commands
5. SYS Commands
6. Time Range Commands
7. HTTP Service Commands
8. Syslog Commands
9. CWMP Commands
10. CA-MONITOR Commands
11. ZAM Commands
12. Module Hot-plugging/Unplugging Commands
13. Supervisor Module Redundancy Commands
14. PoE Management Commands
15. PKG-MGMT Command
16. Auto Smart Deployment Commands

# 1 Command Line Interface Commands

## 1.1 alias

Use this command to configure a command alias in global configuration mode. Use the **no** or **default** form of this command to restore the default setting.

**alias** *mode command-alias original-command*

**no alias** *mode command-alias*

**default alias** *mode [command-alias]*

### Parameter Description

Parameter	Description
<i>mode</i>	Mode of the command represented by the alias
<i>command-alias</i>	Command alias
<i>original-command</i>	Syntax of the command represented by the alias

### Defaults

Some commands in user or privileged EXEC mode have default alias.

### Command Mode

Global configuration mode.

### Usage Guide

The following table lists the default alias of the commands in privileged EXEC mode.

Alias	Actual Command
h	help
p	ping
s	show
u	undebug
un	undebug

The default alias cannot be removed by the **no alias exec** command.

After configuring the alias, you can use a word to replace a command. For example, you can create an alias to represent the first part of a command, and then type the rest part of the command.

The mode of the command represented by the alias is the command mode existing in the current system. In the global configuration mode, you can use the **alias ?** command to list all the modes under which you can configure alias for commands.

```
Ruijie(config)# alias ?
aaa-gs          AAA server group mode
acl             acl configure mode
config         globle configure mode
```

.....

The alias also has its help information that is displayed after \* in the following format:

```
*command-alias=original-command
```

For example, in the privileged EXEC mode, the default alias s stands for show. You can enter s? to query the key words beginning with s and the help information of the alias.

```
Ruijie#s?
```

```
*s=show show start-chat start-terminal-service
```

If an alias represents more than one word, the command will be displayed in brackets. For example, if you set sv stand for show version in the privileged EXEC mode, then:

```
Ruijie#s?
```

```
*s=show *sv="show version" show start-chat
start-terminal-service
```

The alias must begin with the first letter of the command. The first letter of the command cannot be a space. The space before the command cannot be used as a valid alias.

```
Ruijie# s?
```

```
show start-chat start-terminal-service
```

The command alias also has its help information. For example, if the alias ia represents ip address in the interface configuration mode, then:

```
Ruijie(config-if)#ia ?
```

```
A.B.C.D IP address
```

```
dhcp IP Address via DHCP
```

```
Ruijie(config-if)# ip address
```

The above help information lists the parameters of **ip address** and shows the actual command name. You must enter an entire alias; otherwise it cannot be recognized.

Use the **show aliases** command to show the aliases setting in the system.

**Configuration Examples** The following example uses def-route to represent the default route setting of ip route 0.0.0.0 0.0.0.0 192.168.1.1 in the global configuration mode:

```
Ruijie# configure terminal
```

```
Ruijie(config)# alias config def-route ip route 0.0.0.0 0.0.0.0 192.168.1.1
```

```
Ruijie(config)#def-route?
```

```
*def-route="ip route 0.0.0.0 0.0.0.0 192.168.1.1"
```

```
Ruijie(config)# end
```

```
Ruijie# show aliases config
```

```
globe configure mode alias:
```

```
def-route ip route 0.0.0.0 0.0.0.0
```

```
192.168.1.1
```

#### Related Commands

Command	Description
<b>show aliases</b>	Displays the aliases settings.

**Platform Description** N/A

## 1.2 privilege

Use this command to attribute the execution rights of a command to a command level in global configuration mode. Use the **no** form of this command to restore the default setting.

**privilege** *mode* [ **all** ] [ **level** *level* | **reset** ] *command-string*

**no privilege** *mode* [ **all** ] [ **level** *level* ] *command-string*

### Parameter Description

Parameter	Description
<i>mode</i>	CLI mode of the command to which the execution rights are attributed.
<b>all</b>	Command alias
<b>level</b> <i>level</i>	Specifies the execution right levels (0–15) of a command or sub-commands
<b>reset</b>	Restores the command execution rights to its default level
<i>command-string</i> :	Command string to be authorized

**Defaults** N/A

**Command Mode** Global configuration mode.

**Usage Guide** The following table lists some key words that can be authorized by the **privilege** command in CLI mode. The number of command modes that can be authorized may vary with different devices. In the global configuration mode, you can use the **privilege ?** command to list all CLI command modes that can be authorized.

Mode	Description
config	Global configuration mode.
exec	Privileged EXEC mode
interface	Interface configuration mode
ip-dhcp-pool	DHCP address pool configuration mode
ip-dhcp-pool	DHCP address pool configuration mode
keychain	KeyChain configuration mode
keychain-key	KeyChain-key configuration mode

**Configuration Examples** The following example sets the password of CLI level 1 as **test** and attribute the **reload** rights to reset the device:

```
Ruijie(config)#privilege exec level 1 reload
```

You can access the CLI window as level-1 user to use the **reload** command:

```
Ruijie>reload ?
```

```
LINE Reason for reload
```

<cr> You can use the key word **all** to attribute all sub-commands of reload to level-1 users:

```
Ruijie(config)# privilege exec all level 1 reload
```

After the above setting, you can access the CLI window as level-1 user to use all sub commands of the **reload** command:

```
Ruijie>reload ?
LINE      Reason for reload
at                reload at a specific time/date
cancel            cancel pending reload scheme
in                reload after a time interval
<cr>
```

**Related  
Commands**

Command	Description
<b>enable secret</b>	Sets the CLI-level password.

**Platform** N/A.

**Description**

## 1.3 show aliases

Use this command to show all the command aliases or aliases in special command modes.

**show aliases** [ *mode* ]

**Parameter  
Description**

Parameter	Description
<i>mode</i>	Mode of the command represented by the alias.

**Defaults** N/A.

**Command  
Mode** Privileged EXEC mode.

**Usage Guide** This command displays the configuration of all aliases if no command mode is input.

**Configuration** The following example displays the command alias in privileged EXEC mode:

**Examples**

```
Ruijie#show aliases exec
exec mode alias:
h                help
p                ping
s                show
u                undebug
un               undebug
```

**Related  
Commands**

Command	Description
<b>alias</b>	Sets a command alias.

---

<b>Platform</b>	N/A.
<b>Description</b>	

## 2 Basic Configuration Management Commands

### 2.1 <1-99>

Use this command to restore the suspended Telnet Client session.

**<1-99>**

**Parameter  
Description**

Parameter	Description
N/A	N/A

**Defaults**

N/A

**Command  
Mode**

User EXEC mode

**Usage Guide**

This command is used to restore the suspended Telnet Client session. Hot keys (ctrl+shift+6 x) are used to exit the Telnet Client session creation. The **<1-99>** command is used to restore the session. If the session is created, you can use the **show session** command to display the session.

**Configuration**

The following example restores the suspended Telnet Client session.

**Examples**

```
Ruijie# 1
```

**Related  
Commands**

Command	Description
N/A	N/A

**Platform  
Description**

N/A

### 2.2 banner exec

Use this command to configure a message to welcome the user entering user EXEC mode through the line. Use the **no** form of this command to restore the default setting.

**banner exec c message c**

**no banner exec**

**Parameter  
Description**

Parameter	Description
c	Separator of the message. Delimiters are not allowed in the message.

<i>message</i>	Contents of the message.
----------------	--------------------------

**Defaults** N/A

**Command Mode** Global configuration mode

**Usage Guide** This command is used to configure the welcome message. The system discards all the characters next to the terminating symbol.

When you are logging in to the device, the MOTD message is displayed at first, and then the banner login message. After you have logged in, the EXEC message or the incoming message is displayed. If it's a reverse Telnet session, the incoming message is displayed. Otherwise, the EXEC message is displayed.

The messages are for all lines. If you want to disable display the EXEC message on a specific line, configure the **no exec-banner** command on the line.

**Configuration** The following example configures a welcome message.

**Examples** Ruijie(config)# banner exec \$ Welcome \$

**Related Commands**

Command	Description
N/A	N/A

**Platform Description** N/A

## 2.3 banner incoming

Use this command to configure a prompt message for reverse Telnet session. Use the **no** form of this command to remove the setting.

**banner incoming** *c message c*

**no banner incoming**

**Parameter Description**

Parameter	Description
<i>c</i>	Separator of the message. Delimiters are not allowed in the message.
<i>message</i>	Contents of the message.

**Defaults** N/A

**Command Mode** Global configuration mode



**Usage Guide** This command is used to configure a prompt message. The system discards all the characters next to the terminating symbol.

When you are logging in to the device, the MOTD message is displayed at first, and then the banner login message. After you have logged in, the welcome message or the prompt message is displayed. If it's a reverse Telnet session, the prompt message is displayed. Otherwise, the welcome message is displayed.

**Configuration** The following example configures a prompt message for reverse Telnet session.

**Examples** Ruijie(config)# banner incoming \$ Welcome \$

Related Commands	Command	Description
	N/A	N/A

**Platform** N/A  
**Description**

## 2.4 banner login

Use this command to configure a login banner. Use **no** form of this command to remove the setting.

**banner login c message c**

**no banner login**

Parameter Description	Parameter	Description
	c	Separator of the message contained in the login banner. Delimiters are not allowed in the MOTD.
	message	Contents of the login banner

**Defaults** N/A

**Command** Global configuration mode  
**Mode**

**Usage Guide** This command sets the login banner message, which is displayed at login. The system discards all the characters next to the terminating symbol.

**Configuration** The following example configures a login banner.

**Examples** Ruijie(config)# banner login \$ enter your password \$

Related Commands	Command	Description
	N/A	N/A

**Platform**  
**Description**

N/A

## 2.5 banner motd

Use this command to set the Message-of-the-Day ( MOTD ) . Use the **no** form of this command to remove the setting.

**banner [ motd ] c message c**

**no banner [ motd ]**

**Parameter**  
**Description**

Parameter	Description
<i>c</i>	Separator of the MOTD. Delimiters are not allowed in the MOTD.
<i>message</i>	Contents of an MOTD

**Defaults**

N/A

**Command**  
**Mode**

Global configuration mode

**Usage Guide** This command sets the MOTD, which is displayed at login. The letters that follow the separator will be discarded.

**Configuration** The following example configures the MOTD.

**Examples** Ruijie(config)# **banner motd** \$ *hello,world* \$

**Related**  
**Commands**

Command	Description
N/A	N/A

**Platform**  
**Description**

N/A

## 2.6 banner prompt-timeout

Use this command to configure the prompt-timeout message to notify timeout. Use the **no** form of this command to remove the setting.

**banner prompt-timeout c message c**

**no banner prompt-timeout**

**Parameter**  
**Description**

Parameter	Description
<i>c</i>	Separator of the message. Delimiters are not allowed in the

	message.
<i>message</i>	Contents of the message.

**Defaults** N/A

**Command Mode** Global configuration mode

**Usage Guide** The system discards all the characters next to the terminating symbol.  
When authentication times out, the banner prompt-timeout message is displayed.

**Configuration** The following example configures the prompt-timeout message to notify timeout.

**Examples** Ruijie(config)# banner exec \$ authentication timeout \$

Related Commands	Command	Description
	N/A	N/A

**Platform Description** N/A

## 2.7 banner slip-ppp

Use this command to configure the slip-ppp message for the SLIP/PPP session. Use the **no** form of this command to remove the setting.

**banner slip-ppp c message c**

**no banner slip-pp**

Parameter Description	Parameter	Description
	<i>c</i>	Separator of the message. Delimiters are not allowed in the message.
	<i>message</i>	Contents of the message.

**Defaults** N/A

**Command Mode** Global configuration mode

**Usage Guide** This command is used to configure the slip-ppp message for the SLIP/PPP session. The system discards all the characters next to the terminating symbol.  
When the SLIP/PPP session is created, the slip-ppp message is displayed on the corresponding terminal.

**Configuration** The following example configures the banner slip-ppp message for the SLIP/PPP session.

**Examples** Ruijie(config)# banner slip-ppp \$ Welcome \$

**Related  
Commands**

Command	Description
N/A	N/A

**Platform  
Description**

N/A

## 2.8 boot configure

Use this command to modify the path for saving startup configurations and the corresponding file name.

**boot config { flash:filename }**

**no boot config**

**Parameter  
Description**

Parameter	Description
<b>flash</b>	Saves the startup configuration file in the extensible Flash.



**Defaults**

By default, startup configuration file of a device is saved in **Flash:/config.text**

**Command  
Mode**

Privileged EXEC mode

**Usage Guide**

-  The startup configuration file name follows a slash "/", for example, **Flash:/ruijie.text**.
-  The startup configuration file name consists of a path and a file name. The path is mandatory. Otherwise, configurations cannot be saved by using the **write** command. Take **Flash:/ruijie/ruijie.text** as examples, where the **Flash:/ruijie** folder must exist. In master-slave mode, all device paths are required.

**Configuration** The following example sets the startup configuration file path to flash:/ruijie.text..

**Examples** Ruijie(config)#boot config flash:/ruijie.text

**Related  
Commands**

Command	Description
N/A	N/A

**Platform  
Description**

N/A

## 2.9 configure

Use this command to enter global configuration mode.

**configure** [ *terminal* ]

Parameter Description	Parameter	Description
	N/A	N/A

**Defaults** N/A

**Command  
Mode** Privileged EXEC mode

**Usage Guide** N/A

**Configuration** The following example enters global configuration mode.

**Examples**  
Ruijie# configure  
Ruijie(config)#

Related Commands	Command	Description
	N/A	N/A

**Platform  
Description** N/A

## 2.10 disable

Use this command to switch from privileged EXEC mode to user EXEC mode or lower the privilege level.

**disable** [ *privilege-level* ]

Parameter Description	Parameter	Description
	privilege-level	Privilege level

**Defaults** N/A

**Command  
Mode** User EXEC mode

**Usage Guide** Use this command to switch to user EXEC mode from privileged EXEC mode. If a new privilege level is added, the current privilege level will be lowered.

 The privilege level that follows the **disable** command must be lower than the current level.

**Configuration** The following example lowers the current privilege level of the device to level 10.

**Examples** Ruijie# disable 10

**Related  
Commands**

Command	Description
enable	Moves from user EXEC mode enter to privileged EXEC mode or reaches a higher level of authority.

**Platform  
Description** N/A

## 2.11 disconnect

Use this command to disconnect the Telnet Client session.

**disconnect** *session-id*

**Parameter  
Description**

Parameter	Description
<i>session-id</i>	Telnet Client session ID.

**Defaults** N/A

**Command  
Mode** User EXEC mode

**Usage Guide** This command is used to disconnect the Telnet Client session by setting the session ID.

**Configuration** The following example disconnects the Telnet Client session by setting the session ID.

**Examples** Ruijie# disconnect 1

**Related  
Commands**

Command	Description
N/A	N/A

**Platform  
Description** N/A

## 2.12 do telnet

Use this command to login to Telnet server.

**do telnet** *host* [ *port* ] [ **/source** { **ip** *A.B.C.D* | **ipv6** *X:X:X:X::X* | **interface** *interface-name* } ]

Parameter Description	Parameter	Description
	<i>host</i>	IPv4, IPv6 or host name of Telnet server.
	<i>port</i>	Configures TCP port ID. The default is 23.
	<b>/source</b>	Specifies source IP or source port for Telnet client.
	<b>ip</b> <i>A.B.C.D</i>	Specifies source IPv4 address for Telnet client.
	<b>ipv6</b> <i>X:X:X:X::X</i>	Specifies source IPv6 address for Telnet client.
	<b>interface</b> <i>interface-name</i>	Specifies source port for Telnet client.

**Defaults** N/A

**Command Mode** User EXEC mode/Privileged EXEC mode/Interface configuration mode

**Usage Guide** N/A

**Configuration Examples** The following example configures destination IPv6 address 2AAA:BBBB::CCCC.

```
Ruijie(config)# do telnet 2AAA:BBBB::CCCC
```

Related Commands	Command	Description
	N/A	N/A

**Platform Description** N/A

## 2.13 enable

Use this command to enter privileged EXEC mode.

**Enable** [ *privilege-level* ]

Parameter Description	Parameter	Description
	<i>privilege-level</i>	Privilege level

**Defaults** N/A

**Command** User EXEC mode

**Mode**

**Usage Guide** Use this command to enter privileged EXEC mode from User EXEC mode. You can raise or lower the privilege level by specifying the privilege level.

**Configuration** The following example lowers the privilege level to 14:

**Examples**

```
Ruijie> enable 14
```

```
Password:
```

**Related Commands**

Command	Description
N/A	N/A

**Platform**

N/A

**Description**

## 2.14 enable password

Use this command to configure passwords for different privilege levels. Use the **no** form of this command to restore the default setting.

**enable password** [ *level level* ] { [ **0** ] *password* | **7** *encrypted-password* }

**no enable password** [ *level level* ]

**Parameter Description**

Parameter	Description
<i>password</i>	Password for the user to enter the EXEC configuration layer
<b>level</b>	User's level.
<b>0</b>	The password is in plain text.
<b>7</b> <i>encrypted-password</i>	The password is encrypted.

**Defaults**

N/A

**Command Mode**

Global configuration mode

**Usage Guide** No encryption is required in general. The encryption type must be specified for copying and pasting a encrypted password for the device.

A valid password is defined as follows:

- Consists of 1-26 upper/lower case letters and numbers
- Leading spaces are allowed but usually ignored. Spaces in between or at the end are regarded as part of the password.



If an encryption type is specified and a plaintext password is entered, you cannot enter



privileged EXEC mode. A lost password that has been encrypted using any method cannot be restored. In this case, you can only reconfigure the device password.

**Configuration** The following example configures the password as **pw10**.

**Examples** Ruijie(config)# **enable password** pw10

**Related  
Commands**

Command	Description
<b>enable secret</b>	Sets the security password

**Platform**

N/A

**Description**

**enable secret** Sets the security password

## 2.15 enable secret

Use this command to configure a security password for different privilege levels. Use the **no** form of this command to restore the default setting.

**enable secret** [ **level** *level* ] { [ **0** ] *password* | **5** *encrypted-secret* }

**no enable secret** [ **level** *level* ]

**Parameter  
Description**

Parameter	Description
secret	Password for the user to enter the EXEC configuration layer
<b>level</b>	User's level.
<b>0</b>	The password is in plain text.
<b>5</b> <i>encrypted-password</i>	The password is encrypted.

**Defaults**

N/A

**Command**

Global configuration mode

**Mode**

**Usage Guide**

A password comes under two categories: "password" and "security". "Password" indicates a simple password, which can be set only for level 15. "Security" means a security password, which can be set for levels 0-15. If both types of passwords coexist in the system, no "password" type is allowed. If a "password" type password is set for a level other than 15, the system gives an alert and the password is automatically converted into a "security" password. If a "password" type password is set for level 15 and the same as a "security" password, an alert is given. The password must be encrypted, with simple encryption for "password" type passwords and security encryption for "security" type passwords.

**Configuration** The following example configures the security password as **pw10**.

**Examples** Ruijie(config)# **enable secret 0 pw10**

**Related  
Commands**

Command	Description
<b>enable password</b>	Sets passwords for different privilege levels.

**Platform  
Description** N/A

## 2.16 enable service

Use this command to enable or disable a specified service such as **SSH Server/Telnet Server/Web Server/SNMP Agent**.

**enable service { ssh-sesrver | telnet-server | web-server [ http | https | all ] | snmp-agent }**


**Parameter  
Description**

Parameter	Description
<b>ssh-server</b>	Enables SSH Server. IPv4 and IPv6 services are enabled at the same time.
<b>telnet-server</b>	Enables Telnet Server. IPv4 and IPv6 services are enabled at the same time.
<b>web-server [ http   https   all ]</b>	Enables HTTP Server. IPv4 and IPv6 services are enabled at the same time.
<b>snmp-agent</b>	Enables SNMP Agent. IPv4 and IPv6 services are enabled at the same time.

**Defaults** telnet-server, snmp-agent and web-server are enabled. ssh-server is disabled.

**Command  
Mode** Global configuration mode

**Usage Guide** Use this command to enable or disable a specified service. Use the **no enable service** command to disable the specified service.

 The **enable service web-server** command is followed by three optional keywords: [http | https | all]. If the command is followed by no keyword or by **all**, the command enables http and https services. Followed by **http**, the command enables http service only. Followed by **https**, the command enables https service only.

**Configuration** The following example enables the SSH Server.

**Examples** Ruijie(Config)# **enable service ssh-sesrver**

**Related**

Command	Description
---------	-------------

Commands		
	<b>show service</b>	Displays the service status in the current system.

**Platform**  
**Description**

N/A

## 2.17 end

Use this command to return to privileged EXEC mode.

**end**

Parameter Description	Parameter	Description
	N/A	N/A

**Defaults**

N/A

**Command Mode**

All modes except privileged EXEC mode

**Usage Guide**

Use this command to return to privileged EXEC mode.

**Configuration Examples**

The following example returns to privileged EXEC mode.

```
Ruijie#con
Enter configuration commands, one per line. End with CNTL/Z.
Ruijie(config)#line vty 0
Ruijie(config-line)#end
*May 20 09:49:38: %SYS-5-CONFIG_I: Configured from console by console
Ruijie#
```

Related Commands	Command	Description
	N/A	N/A

**Platform**  
**Description**

N/A

## 2.18 exec-banner

Use this command to enable display of the EXEC message on a specific line. Use the **no** form of this command to restore the default setting.

**exec-banner**


**no exec-banner****Parameter  
Description**

Parameter	Description
N/A	N/A

**Defaults** The EXEC message is displayed on all lines by default.

**Command  
Mode** LINE configuration mode

**Usage Guide** After you configure the **banner exec** and the **banner motd** commands, the EXEC and the MOTD messages are displayed on all lines by default. If you want to disable display of the EXEC and the MOTD messages on a specific line, configure the **no** form of this command on the line.

 This command does not work for the banner incoming message. If you configure the **banner incoming** command, the banner incoming message is displayed on all reverse Telnet sessions and the display cannot be disabled on a specific line.

**Configuration** The following example disables display of the EXEC message on line VTY 1.

**Examples**

```
Ruijie(config)# line vty 1
Ruijie(config-line)no exec-banner
```

**Related  
Commands**

Command	Description
N/A	N/A

**Platform  
Description** N/A

## 2.19 exec-timeout

Use this command to configure connection timeout for this device in LINE mode. Use the **no** form of this command to restore the default setting and the connection never expires.

**exec-timeout** *minutes* [ **seconds** ]

**no exec-timeout**

**Parameter  
Description**

Parameter	Description
<i>minutes</i>	Timeout in minutes.
<b>seconds</b>	(Optional) Timeout in minutes

**Defaults** The default is 10 minutes.

**Command** Line configuration mode

**Mode**

**Usage Guide** If there is no input or output for this connection within a specified time, this connection will expire, and this LINE will be restored to the free status.

**Configuration** The following example sets the connection timeout to 5'30''.

**Examples** Ruijie(config-line) #**exec-timeout** 5 30

**Related  
Commands**

Command	Description
N/A	N/A

**Platform  
Description** N/A

## 2.20 execute

Use this command to execute a command on the file.

**execute** { [ **flash:** ] *filename* }

**Parameter  
Description**

Parameter	Description
<i>filename</i>	Specifies the file path.

**Defaults** N/A

**Command  
Mode** Privileged EXEC mode

**Usage Guide** N/A

**Configuration** The following example executes a command to configure an IP address for the specified interface.

**Examples**

```
Ruijie#execute flash:mybin/config.text
executing script file mybin/config.text .....
executing done
Ruijie#config
Enter configuration commands, one per line. End with CNTL/Z.
Ruijie(config)#interface gigabitEthernet 0/1
Ruijie(config-if-GigabitEthernet 0/1)#ip address 192.168.21.158 24
Ruijie(config-if-GigabitEthernet 0/1)#end
*Sep 29 23:35:49: %SYS-5-CONFIG_I: Configured from console by console
Ruijie#
```

Related Commands	Command	Description
	N/A	N/A

**Platform**  
**Description**

N/A

## 2.21 exit

Use this command to return to the upper configuration mode.

**exit**

Parameter Description	Parameter	Description
	N/A	N/A

**Defaults**

N/A

**Command Mode**

All configuration modes

**Usage Guide**

N/A

**Configuration Examples** The following example returns to the upper configuration mode.

```
Ruijie#con
Enter configuration commands, one per line. End with CNTL/Z.
Ruijie(config)#line vty 0
Ruijie(config-line)#end
*May 20 09:49:38: %SYS-5-CONFIG_I: Configured from console by console
Ruijie#con
Enter configuration commands, one per line. End with CNTL/Z.
Ruijie(config)#line vty 0
Ruijie(config-line)#exit
Ruijie(config)#exit
*May 20 09:51:48: %SYS-5-CONFIG_I: Configured from console by console
Ruijie#exit

Press RETURN to get started
```

Related Commands	Command	Description
	N/A	N/A

**Platform**

N/A

**Description**

## 2.22 help

Use this command to display the help information.

**help**

**Parameter  
Description**

Parameter	Description
N/A	N/A

**Defaults** Any mode

**Command  
Mode**

**Usage Guide** This command is used to display brief information about the help system. You can use "?" to display all commands or a specified command with its parameters.

**Configuration** The following example displays brief information about the help system.

**Examples**

```
Ruijie#help
```

Help may be requested at any point in a command by entering a question mark '?'. If nothing matches, the help list will be empty and you must backup until entering a '?' shows the available options.

Two styles of help are provided:

1. Full help is available when you are ready to enter a command argument (e.g. 'show ?') and describes each possible argument.
2. Partial help is provided when an abbreviated argument is entered and you want to know what arguments match the input (e.g. 'show pr?'.)

The following example displays all available commands in interface configuration mode.

```
Ruijie(config-if-GigabitEthernet 0/0)#?
```

Interface configuration commands:

arp	ARP interface subcommands
bandwidth	Set bandwidth informational parameter
carrier-delay	Specify delay for interface transitions
dampening	Enable event dampening
default	Set a command to its defaults
description	Interface specific description
dldp	Exec data link detection command
duplex	Configure duplex operation
efm	Config efm for an interface

end	Exit from interface configuration mode
exit	Exit from interface configuration mode
expert	Expert extended ACL
flowcontrol	Set the flow-control value for an interface
full-duplex	Force full duplex operation
global	Global ACL
gvrp	GVRP configure command
half-duplex	Force half duplex operation
help	Description of the interactive help system
ip	Interface Internet Protocol config commands
ipv6	Internet Protocol Version 6
isis	Intermediate System - Intermediate System (IS-IS)
l2	Config L2 attribute
label-switching	Enable interface process mpls packet
lacp	LACP interface subcommands
lldp	Link Layer Discovery Protocol
load-interval	Specify interval for load calculation for an interface
mac	Mac extended ACL
mac-address	Set mac-address
mpls	Multi-Protocol Label Switching
mtu	Set the interface Maximum Transmission Unit (MTU)
no	Negate a command or set its defaults
ntp	Configure NTP
port-group	Aggregateport/port bundling configuration
redirect	Redirect packets
rmon	Rmon command
security	Configure the Security
show	Show running system information
shutdown	Shutdown the selected interface
snmp	Modify SNMP interface parameters
speed	Configure speed operation
switchport	Set switching mode characteristics
vrf	Multi-af VPN Routing/Forwarding parameters on the interface
vrrp	VRRP interface subcommands
xconnect	Xconnect commands

The following example displays the parameters of a specified command.

```
Ruijie(config)#access-list 1 permit ?
A.B.C.D Source address
any Any source host
host A single source host
```

#### Related Commands

Command	Description
N/A	N/A



**Platform**  
**Description**

N/A

## 2.23 hostname

Use this command to specify or modify the hostname of a device.

**hostname** *name*

**Parameter**  
**Description**

Parameter	Description
<i>name</i>	Device hostname, string, number or hyphen, up to 63 characters.

**Defaults** The default is Ruijie.

**Command** Global configuration mode  
**Mode**

**Usage Guide** This hostname is mainly used to identify the device and is taken as the username for the local device during dialup and CHAP authentication.

**Configuration** The following example configures the hostname of the device as BeiJingAgenda.

**Examples**

```
Ruijie(config)# hostname BeiJingAgenda
BeiJingAgenda(config)#
```

**Related**  
**Commands**

Command	Description
N/A	N/A

**Platform**  
**Description**

N/A

## 2.24 ip telnet source-interface

Use this command to configure the IP address of an interface as the source address for Telnet connection.

**ip telnet source-interface** *interface-name*

**Parameter**  
**Description**

Parameter	Description
<i>interface-name</i>	Configures the IP address of the interface, including AP port, Gi port, Loopback port, null port, Tunnel port and VLAN port, as the source address for Telnet connection.

**Defaults** N/A

**Command Mode** Global configuration mode

**Usage Guide** This command is used to specify the IP address of an interface as the source address for global Telnet connection. When using the telnet command to log in a Telnet server, apply the global setting if no source interface or source address is specified. Use the **no ip telnet source-interface** command to restore it to the default setting.

**Configuration Examples** The following example configures the IP address of the *Loopback1* interface as the source address for global Telnet connection.

```
Ruijie(Config)# ip telnet source-interface Loopback 1
```

**Related Commands**

Command	Description
telnet	Logs in a Telnet server.

**Platform Description** N/A

## 2.25 lock

Use this command to set a temporary password for the terminal.

**lock**

**Parameter Description**

Parameter	Description
N/A	N/A

**Defaults** N/A

**Command Mode** User EXEC mode

**Usage Guide** You can lock the terminal interface and maintain the session continuity to prevent access to the interface by setting a temporary password. Take the following steps to lock the terminal interface:

- Enter the **lock** command, and the system will prompt you for a password:
- Enter the password, which can be any character string. The system will prompt you to confirm the password, clear the screen, and display the "Locked" information.
- To access the terminal, enter the preset temporary password.
- To lock the terminal, run the **lockable** command in line configuration mode and enable terminal locking in the corresponding line.

**Configuration** The following example locks a terminal interface.

**Examples**

```
Ruijie(config-line)# lockable
Ruijie(config-line)# end
Ruijie# lock
Password: <password>
Again: <password>
Locked
Password: <password>
Ruijie#
```

**Related  
Commands**

Command	Description
<b>lockable</b>	Supports terminal locking in the line.

**Platform  
Description** N/A

## 2.26 lockable

Use this command to support the **lock** command at the terminal. Use the **no** form of this command to restore the default setting.

**lockable**  
**no lockable**

**Parameter  
Description**

Parameter	Description
N/A	N/A

**Defaults** This function is disabled by default.

**Command  
Mode** LINE configuration mode

**Usage Guide** This command is used to lock a terminal interface in the corresponding line. To lock the terminal, run the lock command in EXEC mode. Run the **lockable** command before running the **lock** command.

**Configuration** The following example enables terminal locking at the console port and locks the console.

**Examples**

```
Ruijie(config)# line console 0
Ruijie(config-line)# lockable
Ruijie(config-line)# end
Ruijie# lock
Password: <password>
Again: <password>
```

```
Locked
Password: <password>
```

**Related  
Commands**

Command	Description
<b>lock</b>	Locks the terminal.

**Platform  
Description**

N/A

## 2.27 login

Use this command to enable simple login password authentication on the interface if AAA is disabled. Use the **no** form of this command to restore the default setting.

**login****no login****Parameter  
Description**

Parameter	Description
N/A	N/A

**Defaults**

Login is disabled for console and enabled for AUX, TTY and VTY by default.

**Command  
Mode**

Line configuration mode

**Usage Guide**

If the AAA security server is inactive, this command enables simple password authentication at login. The password is configured for a VTY or console interface.

**Configuration**

The following example sets a login password authentication on VTY..

**Examples**

```
Ruijie(config)# no aaa new-model
Ruijie(config)# line vty 0
Ruijie(config-line)# password 0 normatest
Ruijie(config-line)# login
```

**Related  
Commands**

Command	Description
<b>password</b>	Configures the line login password

**Platform  
Description**

N/A

## 2.28 login access non-aaa

Use this command to configure non-AAA authentication on line when AAA is enabled. Use the **no** form of this command to restore the default setting.

**login access non-aaa**

**no login access non-aaa**

Parameter Description	Parameter	Description
	N/A	N/A

**Defaults** This function is disabled by default.

**Command Mode** Global configuration mode

**Usage Guide** N/A

**Configuration Examples** The following example configures VTY line authentication with AAA enabled.

```
Ruijie(config)#log access non-aaa
Ruijie(config)#aaa new-model
Ruijie(config)#line vty 0 4
Ruijie(config-line)#login local
Ruijie(config-line)#
```

Related Commands	Command	Description
	N/A	N/A

**Platform Description** N/A

## 2.29 login authentication

If the AAA is enabled, login authentication must be performed on the AAA server. Use this command to associate login authentication method list. Use the **no** form of this command to restore the default setting.

**login authentication { default | list-name }**

**no login authentication { default | list-name }**

Parameter Description	Parameter	Description
	default	Name of the default authentication method list

<i>list-name</i>	Name of the method list
------------------	-------------------------

**Defaults** Default authentication is used when AAA is enabled.

**Command** Line configuration mode  
**Mode**

### Usage Guide

**Configuration Examples** The following example associates the method list on VTY and perform login authentication on a radius server.

```
Ruijie(config)# aaa new-model  
Ruijie(config)# aaa authentication login default radius  
Ruijie(config)# line vty 0  
Ruijie(config-line)# login authentication default
```

### Related Commands

Command	Description
<b>aaa new-model</b>	Enables the AAA security service.
<b>aaa authentication login</b>	Configures the login authentication method list.

**Platform** N/A  
**Description**

## 2.30 login local

Use this command to enable local user authentication on the interface if AAA is disabled. Use the **no** form of this command to restore the default setting.

**login local**

**no login local**

### Parameter Description

Parameter	Description
N/A	N/A

**Defaults** N/A

**Command** Line configuration mode  
**Mode**

**Usage Guide** If the AAA security server is inactive, this command is used for local user login authentication. The user is allowed to use the **username** command.

**Configuration** The following example sets local user authentication on VTY.

**Examples**

```
Ruijie(config)# no aaa new-model
Ruijie(config)# username test password 0 test
Ruijie(config)# line vty 0
Ruijie(config-line)# login local
```

**Related  
Commands**

Command	Description
username	Configures local user information.

**Platform**

N/A

**Description**

## 2.31 login privilege log

Use this command to log privilege change. Use the **no** form of this command to restore the default setting.

**login privilege log****no login privilege log****Parameter  
Description**

Parameter	Description
N/A	N/A

**Defaults**

This command is disabled by default.

**Command  
Mode**

Global configuration mode

**Usage Guide**

N/A

**Configuration**

The following example enables the function of logging privilege change.

**Examples**

```
Ruijie(config)# login privilege log
```

The following example displays the log of privilege change failure.

```
Ruijie>enable 10
```

```
Password:
```

```
Password:
```

```
Password:
```

```
% Access denied
```

```
Ruijie>
```

```
*Sep 10 11:34:19: %SYS-5-PRIV_AUTH_FAIL: Authentication to
privilege level 10 from console failed
```

The following example displays the log of privilege change success.

```
Ruijie>enable 10

Password:
Ruijie#
*Sep 10 11:34:20: %SYS-5-PRIV_AUTH_SUCCESS: Authentication to
privilege level 10 from console success
```

**Related  
Commands**

Command	Description
N/A	N/A

**Platform  
Description**

N/A

## 2.32 motd-banner

Use this command to enable display of the MOTD message on a specified line. Use the **no** form of this command to restore the default setting.

**motd-banner****no motd-banner****Parameter  
Description**

Parameter	Description
N/A	N/A

**Defaults**

The MOTD message is displayed on all lines by default.

**Command  
Mode**

Line configuration mode

**Usage Guide**

After you configure the **banner exec** and the **banner motd** commands, the EXEC and the MOTD messages are displayed on all lines by default. If you want to disable display of the EXEC and the MOTD messages on a specific line, configure the **no** form of this command on the line.



This command does not work for the incoming message. If you configure the **banner incoming** command, the banner incoming message is displayed on all reverse Telnet sessions and the display cannot be disabled on a specific line.

**Configuration**

The following example disables display of the MOTD message on VTY 1.

**Examples**

```
Ruijie(config)# line vty 1
Ruijie(config-line)no motd-banner
```

**Related  
Commands**

Command	Description
---------	-------------



N/A

N/A

**Platform**

N/A

**Description**

## 2.33 password

Use this command to configure a password for line login, run the **password** command. Use the **no** form of this command to restore the default setting.

**password** { [ **0** ] *password* | **7** *encrypted-password* }

**no password**

**Parameter  
Description**

Parameter	Description
<i>password</i>	Password for remote line login
<b>0</b>	The password is in plain text.
<b>7</b> <i>encrypted-password</i>	The password is encrypted.

**Defaults**

N/A

**Command**

Line configuration mode

**Mode****Usage Guide**

**Configuration** The following example configures the line login password as "red".

**Examples**

```
Ruijie(config)# line vty 0  
Ruijie(config-line)# password red
```

**Related  
Commands**

Command	Description
<b>login</b>	Moves from user EXEC mode to privileged EXEC mode or enables a higher level of authority.

**Platform**

N/A

**Description**

## 2.34 prompt

Use this command to set the **prompt** command. Use the **no** form of this command to restore the default setting.

**prompt string**

<b>Parameter Description</b>	Parameter	Description
	<b>string</b>	Character string of the <b>prompt</b> command, containing up to 32 letters.
<b>Defaults</b>	N/A	
<b>Command Mode</b>	Global configuration mode	
<b>Usage Guide</b>	If no prompt string is configured, the system name applies and varies with the system name. The <b>prompt</b> command is valid only in EXEC mode.	
<b>Configuration Examples</b>	<p>The following example sets the prompt string to rgnos.</p> <pre>Ruijie(config)# <b>prompt</b> rgnos Ruijie(config)# <b>end</b> RGOS</pre>	
<b>Related Commands</b>	Command	Description
	N/A	N/A
<b>Platform Description</b>	N/A	

## 2.35 secret

Use this command to set a password encrypted by irreversible MD5 for line login. Use the **no** form of this command to restore the default setting.

**secret** { [ **0** ] *password* | **5 encrypted-secret** }

**no secret**

<b>Parameter Description</b>	Parameter	Description
	<b>0</b>	(Optional) sets the plaintext password text and encrypts it with irreversible MD5 after configuration.
	<i>password</i>	Sets the password plaintext, a string ranging from 1 to 25 characters.
	<b>5 encrypted-secret</b>	Sets the password text encrypted by irreversible MD5 and saves it as the encrypted password after configuration.
<b>Defaults</b>	N/A	
<b>Command mode</b>	Line configuration mode	

**Usage Guide** This command is used to set a password encrypted by irreversible MD5 that is authenticated by a remote user through line login.



If the specified encryption type is 5, the logical length of the cipher text to be entered must be 24 and the 1<sup>st</sup>, 3<sup>rd</sup> and 8<sup>th</sup> characters of the password text must be \$.

In general, the encryption type does not need to be specified as 5 except when the encrypted password is copied and pasted.

Line mode allows configuration of both “password” and “secret” type passwords at the same time. When the two passwords are the same, the system will send alert notification but the configuration will be permitted. When the system is configured with the two passwords, if the user enters a password that does not match the “secret” type password, it will not continue to match the “password” type password and login fails, enhancing security for the system password.

**Configuration** The following example sets the password encrypted by irreversible MD5 for line login to vty0.

**Examples**

```
Ruijie(config)# line vty 0
Ruijie(config-line)# secret vty0
```

The following displays the encryption outcome by running the **show** command.

```
secret 5 $1$X834$wvx6y794uAD8svzD
```

**Related  
Commands**

Command	Description
<b>login</b>	Sets simple password authentication on the interface as the login authentication mode

**Platform** N/A

**Description**

## 2.36 session

Use this command to connect to the management module or the service module through session in VSU master-slave environment (card-type device).

**session { master | [ device device-number ] slot { m1 | m2 } }**

Use this command to connect to another device in VSU multiple-device environment (box-type device).

**session { master | device device-number }**

**Parameter  
Description**

Parameter	Description
<b>master</b>	Configures the slave host to connect with the master host or the slave management module with the master management module.
<b>device device-number</b>	Sets the device number.
<b>slot { m1   m2 }</b>	Sets the management module to either m1 or m2.

**Defaults** N/A

**Command Mode** User EXEC mode

**Usage Guide** N/A

**Configuration** The following example configures the slave host to connect with the master host in VSU environment.

**Examples** Ruijie# session master

The following example connects to device1 through session in VSU multiple-device environment (box-type device).

Ruijie# session device 1

The following example connects to management module m1 of device1 through session in VSU master-slave environment (card-type device).

Ruijie# session device 1 slot m1

**Related Commands**

Command	Description
N/A	N/A

**Platform Description** N/A

## 2.37 session-timeout

Use this command to configure the session timeout for a remote terminal. Use the **no** form of this command to restore the default setting and the session never expires.

**session-timeout** *minutes* [ **output** ]

**no session-timeout**

**Parameter Description**

Parameter	Description
<i>minutes</i>	Timeout in minutes.
<b>output</b>	Regards data output as the input to determine whether the session expires.

**Defaults** The default timeout is 0.

**Command Mode** LINE configuration mode

**Usage Guide** If no input or output in current LINE mode is found on the remote terminal for the session within a specified time, this connection will expire, and this LINE will be restored to the free status.

**Configuration** The following example specifies the timeout as 5 minutes.

**Examples** Ruijie(config-line) #**exec-timeout 5 output**

**Related  
Commands**

Command	Description
N/A	N/A

**Platform  
Description** N/A

## 2.38 show boot config

Use this command to display the path for saving startup configurations and the corresponding file name.

**show boot config**

**Parameter  
Description**

Parameter	Description
N/A	N/A

**Defaults** N/A

**Command  
Mode** Privileged EXEC mode

**Usage Guide** N/A

**Configuration  
Examples** The following example displays the path for saving startup configurations and the corresponding file name..

```
Ruijie#show boot config
Boot config file: [flash:/ruijie.text]
```

**Related  
Commands**

Command	Description
N/A	N/A

**Platform  
Description** N/A

## 2.39 show debugging

Use this command to display debugging state.

**show debugging****Parameter  
Description**

Parameter	Description
N/A	N/A

**Defaults**

N/A

**Command  
Mode**

Privileged EXEC mode

**Usage Guide**

N/A

**Configuration** The following example displays debugging state.**Examples**

```
Ruijie#show debugging  
  
debug fw-group detect intf-state
```

**Related  
Commands**

Command	Description
N/A	N/A

**Platform  
Description**

N/A

## 2.40 show line

Use this command to display the configuration of a line.

**show line** { **aux** *line-num* | **console** **line-num** | **tty** *line-num* | **vty** *line-num* | *line-num* }**Parameter  
Description**

Parameter	Description
<b>console</b>	Displays the configuration of a console line.
<b>aux</b>	Checks configuration information relating to the aux line.
<b>tty</b>	Displays the configuration of an Async line.
<b>vty</b>	Displays the configuration of a vty line.
<i>line-num</i>	Number of the line.

**Defaults**

N/A

**Command  
Mode**

Privileged EXEC mode

**Usage Guide** N/A

**Configuration** The following example displays the configuration of a console port.

**Examples**

```
Ruijie# show line console 0
CON      Type      speed  Overruns
* 0      CON       9600   45927
Line 0, Location: "", Type: "vt100"
Length: 24 lines, Width: 79 columns
Special Chars: Escape Disconnect Activation
                ^^x      none      ^M
Timeouts:      Idle EXEC   Idle Session
                never      never
History is enabled, history size is 10.
Total input: 53564 bytes
Total output: 395756 bytes
Data overflow: 27697 bytes
stop rx interrupt: 0 times
```

**Related  
Commands**

Command	Description
N/A	N/A

**Platform  
Description** N/A

## 2.41 show reload

Use this command to display the system restart settings.

**show reload**

**Parameter  
Description**

Parameter	Description
N/A	N/A

**Defaults** N/A

**Command  
Mode** Privileged EXEC mode

**Usage Guide**

**Configuration** The following example displays the restart settings of the system.

**Examples**

```
Ruijie# show reload
Reload scheduled in 595 seconds.
```

```
At 2003-12-29 11:37:42
Reload reason: test.
```

**Related  
Commands**

Command	Description
N/A	N/A

**Platform  
Description**

N/A

## 2.42 show running-config

Use this command to display how the current device system is configured..

**show running-config**

**Parameter  
Description**

Parameter	Description
N/A	N/A

**Defaults**

N/A

**Command  
Mode**

Privileged EXEC mode

**Usage Guide**

N/A

**Configuration  
Examples**

N/A

**Related  
Commands**

Command	Description
N/A	N/A

**Platform  
Description**

N/A

## 2.43 show service

Use this command to display the service status.

**show service**

**Parameter  
Description**

Parameter	Description
-----------	-------------



N/A	N/A
-----	-----

**Defaults** N/A

**Command Mode** Privileged EXEC mode

**Usage Guide** N/A

**Configuration** The following example displays whether the service is enabled or disabled.

**Examples**

```
Ruijie# show service
web-server      : disabled
web-server(https) : disabled
snmp-agent      : enabled
ssh-server      : enabled
telnet-server   : disabled
```

Related Commands	Command	Description
	N/A	N/A

**Platform Description** N/A

## 2.44 show sessions

Use this command to display the Telnet Client session information.

**show sessions**

Parameter Description	Parameter	Description
	N/A	N/A

**Defaults** N/A

**Command Mode** User EXEC mode

**Usage Guide** Telnet Client session information includes the VTY number and the server IP address.

**Configuration** The following example displays the Telnet Client session information.

**Examples**

```
Ruijie#show sessions
Conn Address
*1    127.0.0.1
```

```
*2 192.168.21.122
```

**Related  
Commands**

Command	Description
N/A	N/A

**Platform  
Description**

N/A

## 2.45 show startup-config

Use this command to display the device configuration stored in the Non Volatile Random Access Memory (NVRAM).

**show startup-config**

**Parameter  
Description**

Parameter	Description
N/A	N/A

**Defaults**

N/A

**Command  
Mode**

Privileged EXEC mode

**Usage Guide**

The device configuration stored in the NVRAM is executed while the device is starting. On a device that does not support **boot config**, **startup-config** is contained in the default configuration file **/config.text** in the built-in flash memory.

**Configuration  
Examples**

N/A

**Related  
Commands**

Command	Description
<b>boot config</b>	Sets the name of the boot configuration file.

**Platform  
Description**

N/A

## 2.46 show this

Use this command to display effective configuration in the current mode.

### show this


Parameter Description	Parameter	Description
	N/A	N/A

**Defaults** N/A

**Command Mode** All modes.

**Usage Guide** The configuration in the following range modes cannot be displayed. If the **show this** command is run, the outcome is NULL.

1. Use the **line** *first-line last-line* command to configure lines in a continuous group and enter LINE configuration mode.
2. Use the **vlan range** command to configure VLANs and enter vlan range configuration mode.
3. Use the **interface range** command to configure interfaces and enter interface range configuration mode.

 In **vlan range** or **interface range** mode, if the number of VLANs or interfaces exceeds 50, the configuration of the first 50 VLANs or interfaces will be displayed.

**Configuration** Use this command to display effective configuration on interface fastEthernet 0/1.

**Examples**

```
Ruijie (config)#interface fastEthernet 0/1
Ruijie (config-if-FastEthernet 0/1)#show this
Building configuration...
!
spanning-tree link-type point-to-point
spanning-tree mst 0 port-priority 0
!
end
Ruijie (config-if-FastEthernet 0/1)#
```

Use this command to display configuration on interface VLAN 1-3.

```
Ruijie(config-if-range)#show this
Building configuration...
!
interface VLAN 1
ip address dhcp
interface VLAN 2
```

```
ip address 1.1.1.1 255.255.255.0
interface VLAN 3
ip address 3.3.3.3 255.255.255.0
!
end
Ruijie(config-if-range)#
```

**Related  
Commands**

Command	Description
N/A	N/A

**Platform**

N/A

**Description**

## 2.47 speed

Use this command to set the speed at which the terminal transmits packets. Use the **no** form of this command to restore the default setting.

**speed** *speed***no speed****Parameter  
Description**

Parameter	Description
<i>speed</i>	Transmission rate (bps) on the terminal. For serial ports, optional rates include 9600, 19200, 38400, 57600, and 115200 bps. The default rate is 9600 bps.

**Defaults**

The default is 9600.

**Command  
Mode**

Global configuration mode

**Usage Guide**

This command is used to set the speed at which the terminal transmits packets.

**Configuration**

The following example sets the rate of the serial port to 57600 bps.

**Examples**

```
Ruijie(config)# line console 0
Ruijie(config-line)# speed 57600
```

**Related  
Commands**

Command	Description
N/A	N/A

**Platform**

N/A

**Description**

## 2.48 telnet

Use this command to log in a server that supports telnet connection.

**telnet** *host* [ *port* ] [ /**source** { **ip** *A.B.C.D* | **ipv6** *X:X:X:X::X* | **interface** *interface-name* } ]

Parameter Description	Parameter	Description
	<i>host</i>	The IP address of the host or host name you want to log in.
	<i>port</i>	Selects the TCP port number for login, 23 by default.
	<b>/source</b>	Specifies the source IP address or source interface used by the Telnet client.
	<b>ip</b> <i>A.B.C.D</i>	Specifies the source IPv4 address used by the Telnet client.
	<b>ipv6</b> <i>X:X:X:X::X</i>	Specifies the source IPv6 address used by the Telnet client.
	<b>interface</b> <i>interface-name</i>	Specifies the source interface used by the Telnet client.

**Defaults** N/A

**Command Mode** User EXEC mode

### Usage Guide

**Configuration** The following example sets telnet to IPv6 address 2AAA:BBBB::CCCC.

**Examples** Ruijie# **telnet** 2AAA:BBBB::CCCC

Related Commands	Command	Description
	<b>ip telnet source-interface</b>	Specifies the IP address of the interface as the source address for Telnet connection.
	<b>show sessions</b>	Displays the currently established Telnet sessions.
	<b>exit</b>	Exits current connection.

**Platform Description** N/A

## 2.49 username


Use this command to set a local username and optional authorization information.. Use the **no** form of this command to restore the default setting.

**username** *name* [ **login mode** { **aux** | **console** | **ssh** | **telnet** } ] [ **online amount** *number* ]  
 [ **permission** *oper-mode path* ] [ **privilege** *privilege-level* ] [ **reject remote-login** ] [ **web-auth** ]  
 [ **pwd-modify** ] [ **nopassword** | **password** [ **0** | **7** ] *text-string* | **secret** [ **0** | **5** ] *text-string* ]

**no username** *name***Parameter  
Description**

Parameter	Description
<i>name</i>	Username
<b>login mode</b>	Sets the login mode.
<b>aux</b>	Sets the login mode to aux.
<b>console</b>	Sets the login mode to console.
<b>ssh</b>	Sets the login mode to ssh.
<b>telnet</b>	Sets the login mode to telnet.
<b>online amount</b> <i>number</i>	Sets the amount of users online simultaneously.
<b>permission</b> <i>oper-mode path</i>	Sets the permission on the specified file. <i>op-mode</i> refers to the operation mode and <i>path</i> to the file or the directory path.
<b>privilege</b> <i>privilege-level</i>	Sets the privilege level, in the range from 0 to 15.
<b>reject remote-login</b>	Confines the account to remote login.
<b>web-auth</b>	Confines the account to web authentication.
<b>pwd-modify</b>	Allows the web authentication user of this account to change the password. It works only when the <b>web-auth</b> command is configured.
<b>nopassword</b>	The account is not configured with a password.
<b>password</b> [ 0   7 ] <i>text-string</i>	If the password type is 0, the password is in plain text. If the type is 7, the password is encrypted. The password is in plain text by default.
<b>secret</b> [ 0   5 ] <i>text-string</i>	If the password type is 0, the password is in plain text. If the type is 5, the password is encrypted. The password is in plain text by default.

**Defaults** N/A**Command  
Mode** Global configuration mode**Usage Guide** This command is used to establish a local user database for authentication.

-  If encryption type is 7, the cipher text you enter should contain seven characters to be valid. In general, do not set the encryption type 7. Instead, specify the type of encryption as 7 only when the encrypted password is copied and pasted.

**Configuration** The following example configures a username and password and binds the user to level 15.**Examples**

```
Ruijie(config)# username test privilege 15 password 0 pw15
```

The following example configures the username and password exclusive to web authentication.

```
Ruijie(config)# username user1 web-auth password 0 pw
```

The following example configures user test with read and write permissions on all files and directories.

```
Ruijie(config)# username test permission rw /
```

The following example configures user test with read, write and execute permissions on all files and

directories except the config.text file.

```
Ruijie(config)# username test permission n /config.text
Ruijie(config)# username test permission rwx /
```

**Related  
Commands**

Command	Description
<b>login local</b>	Enables local authentication

**Platform**

N/A

**Description**

## 2.50 username import

Use this command to import user information from the file.

**username import** *filename*

**Parameter  
Description**

Parameter	Description
<i>filename</i>	The file name.

**Defaults**

N/A

**Command  
Mode**

Privileged EXEC mode

**Usage Guide**

This command is used to import user information from the file.

**Configuration**

The following example imports user information from the file.

**Examples**

```
Ruijie# username import user.csv
```

**Related  
Commands**

Command	Description
N/A	N/A

**Platform**

N/A

**Description**

## 2.51 username export

Use this command to export user information to the file.

**username export** *filename*

**Parameter**

Parameter	Description
-----------	-------------

<b>Description</b>		
	<i>filename</i>	The file name.
<b>Defaults</b>	N/A	
<b>Command Mode</b>	Privileged EXEC mode	
<b>Usage Guide</b>	This command is used to export user information to the file.	
<b>Configuration</b>	The following example exports user information to the file.	
<b>Examples</b>	<pre>Ruijie# username export user.csv</pre>	
<b>Related Commands</b>	<b>Command</b>	<b>Description</b>
	N/A	N/A
<b>Platform Description</b>	N/A	

## 2.52 write

Use this command to save **running-config** at a specified location.

**write [ memory | terminal ]**

<b>Parameter Description</b>	<b>Parameter</b>	<b>Description</b>
	<b>memory</b>	Writes the system configuration (running-config) into NVRAM, which is equivalent to <b>copy running-config startup-config</b> .
	<b>terminal</b>	Displays the system configuration, which is equivalent to <b>show running-config</b> .
<b>Defaults</b>	N/A	
<b>Command Mode</b>	Privileged EXEC mode	
<b>Usage Guide</b>	<p>Despite the presence of alternative commands, these commands are widely used and accepted. Therefore, they are reserved to facilitate user operations.</p> <p>The system automatically creates the specified file and writes it into system configuration if the device that stores the file exists;</p> <p>The system will ask you whether to save the current configuration in default boot configuration file /config.text and perform an action as required if the device that stores the file does not exist possibly because the boot configuration file is stored on a removable storage device, and the device has not</p>	



been loaded when you run the **write [ memory ]** command.

**Configuration** The following example saves **running-config** at a specified location.

**Examples**

```
Ruijie# write
Building configuration...
[OK]
```

**Related  
Commands**

Command	Description
N/A	N/A

**Platform  
Description**

N/A

## 2.53 zcm

Use this command to enable and disable the zero configuration function.

**zcm { enable | disable }**





**Parameter  
Description**

Parameter	Description
<b>enable</b>	Enables the zero configuration function.
<b>disable</b>	Disables the zero configuration function.

**Defaults** The zero configuration function is disabled by default.

**Command  
Mode** Privileged EXEC mode

**Usage Guide**

-  The zero configuration function is applicable to the ACS solution only.
-  The zero configuration function is applicable to standalone systems only.
-  With the zero configuration function, DHCP Snooping Trust is enabled only on the last two electrical ports and all SFP ports of the device by default, regardless of whether the device supports the MGMT port.
-  Enabling and disabling the zero configuration function will delete the startup configuration file of the device and trigger device restart.

**Configuration** The following example enables the zero configuration function.

**Examples**

```
Ruijie# zcm enable
%% Warning: After switching mode the device will automatically restart!
% Do you want to switch to zero configuration mode? [yes/no]:y
*Sep 29 12:36:20: %ZCM-5-MODE_SWITCH: The device is reloading due to zero or
```

non-zero configuration mode switch.

**Related  
Commands**

Command	Description
N/A	N/A

**Platform  
Description**

N/A

## 3 Line Commands

### 3.1 absolute-timeout

Use this command to set the absolute timeout period. Use the **no** form of this command to restore the default setting.

**absolute-timeout** *minutes*

**no absolute-timeout**

Parameter Description	Parameter	Description
	<i>minutes</i>	Sets the absolute timeout period, in the range from 0 to 60.

**Defaults** No absolute timeout period is set by default.

**Command Mode** LINE configuration mode

**Usage Guide** If the absolute timeout period is configured, the line is disconnected once the timeout timer expires, Before the terminal logs out, a message is displayed to prompt the remaining time.

```
Terminal will be login out after 20 second
```

**Configuration Examples** The following example sets the timeout period for the line between two consoles to 2 minutes.

```
Ruijie(config)# line console 0
Ruijie(config-line)#absolute-timeout 2
```

Related Commands	Command	Description
	N/A	N/A

**Platform** N/A  
**Description**

### 3.2 access-class

Use this command to control login into the terminal through IPv4 ACL. Use the **no** form of this command to restore the default setting.

**access-class** { *access-list-number* | *access-list-name* } { **in** | **out** }

**no access-class** { *access-list-number* | *access-list-name* } { **in** | **out** }

Parameter	Parameter	Description
-----------	-----------	-------------

<b>Description</b>		
	<i>access-list-number</i>	Specifies the ACL number. Standard IP ACL number is from 1 to 99 and from 1300 to 1999. Extended IP ACL number is from 100 to 199 and from 2000 to 2699.
	<i>access-list-name</i>	Specifies the ACL name.
	<b>in</b>	Filters the incoming connections.
	<b>out</b>	Filters the outgoing connections.

**Defaults** N/A

**Command Mode** Line configuration mode

**Usage Guide** N/A

**Configuration** The following example uses ACL 20 to filter the incoming connections in line VTY 0 5.

**Examples**

```
Ruijie(config)# line vty 0 5
Ruijie(config-line)access-list 20 in
```

The following example uses the ACL named “test” to filter the outgoing connections in line VTY 6 7.

```
Ruijie(config)# line vty 6 7
Ruijie(config-line)access-list test out
```

<b>Related Commands</b>	Command	Description
	<b>show running</b>	Displays status information

**Platform** N/A

**Description**

### 3.3 accounting commands

Use this command to enable command accounting in the line. Use the **no** form of this command to restore the default setting.

**accounting commands** *level* { **default** | *list-name* }

**no accounting commands** *level*

<b>Parameter Description</b>	Parameter	Description
	<i>level</i>	Command level ranging from 0 to 15. The command of this level is accounted when it is executed.
	<b>default</b>	Default authorization list name.
	<i>list-name</i>	Optional list name.

**Defaults** This function is disabled by default.

**Command Mode** Line configuration mode

**Usage Guide** This function is used together with AAA authorization. Configure AAA command accounting first, and then apply it on the line.

**Configuration Examples** The following example enables command accounting in line VTY 1 and sets the command level to 15.

```
Ruijie(config)# aaa new-model
Ruijie(config)# aaa accounting commands 15 default start-stop group tacacs+
Ruijie(config)# line vty 1
Ruijie(config-line)# accounting commands 15 default
```

Related Commands	Command	Description
	N/A	N/A

**Platform Description** N/A

## 3.4 accounting exec

Use this command to enable user access accounting in the line. Use the **no** form of this command to restore the default setting.

**accounting commands** *level* { **default** | *list-name* }

**no accounting commands** *level*

Parameter Description	Parameter	Description
	<i>level</i>	Command level ranging from 0 to 15. The command of this level is accounted when it is executed.
	<b>default</b>	Default authorization list name.
	<i>list-name</i>	Optional list name.

**Defaults** This function is disabled by default.

**Command Mode** Line configuration mode

**Usage Guide** This function is used together with AAA authorization. Configure AAA EXEC accounting first, and then apply it on the line.

**Configuration** The following example enables user access accounting in line VTY 1.

**Examples**

```
Ruijie(config)# aaa new-model
Ruijie(config)# aaa accounting exec default start-stop group radius
Ruijie(config)# line vty 1
Ruijie(config-line)# accounting exec default
```

**Related  
Commands**

Command	Description
N/A	N/A

**Platform** N/A  
**Description**

## 3.5 activation-character

Use this command to set the ASCII value of the character for activating the terminal session. Use the **no** form of this command to restore the default setting.

**activation-character** *ascii-value*

**no activation-character**

**Parameter  
Description**

Parameter	Description
<i>ascii-value</i>	Sets the ASCII value of the character for activating the terminal session, in the range from 0 to 127.

**Defaults** The default is CR (ASCII: 0x0D).

**Command** LINE configuration mode  
**Mode**

**Usage Guide** If the current line is configured with the **autoselect** function, *ascii-value* must be set to 0x0D.

**Configuration** The following example configures Ctrl+Y (ASCII: 25) for activating the terminal session.

**Examples**

```
Ruijie(config)#line console 0
Ruijie(config-line)#activation-character 25
Ruijie(config-line)#end
Ruijie#exit

Press CTRL+y to get started

Ruijie>
```

**Related  
Commands**

Command	Description
---------	-------------

N/A	N/A
-----	-----

**Platform** N/A

**Description**

## 3.6 authorization commands

Use this command to enable authorization on commands, Use the **no** form of this command to restore the default setting.

**authorization commands** *level* { **default** | *list-name* }

**no authorization commands** *level*

Parameter Description	Parameter	Description
	<i>level</i>	Command level ranging from 0 to 15. The command of this level is executed after authorization is performed.
	<b>default</b>	Default authorization list name,
	<i>list-name</i>	Optional list name.

**Defaults** This function is disabled by default.

**Command Mode** Line configuration mode

**Usage Guide** This function is used together with AAA authorization. Configure AAA authorization first, and then apply it on the line.

**Configuration** The following example enables authorization on commands of level 15 in line VTY 1.

**Examples**

```
Ruijie(config)# aaa new-model
Ruijie(config)# aaa authorization commands 15 default group tacacs+
Ruijie(config)# line vty 1
Ruijie(config-line)# authorization commands 15 default
```

Related Commands	Command	Description
	N/A	N/A

**Platform** N/A

**Description**

## 3.7 authorization exec

Use this command to enable EXEC authorization for the line. Use the **no** form of this command to

restore the default setting.

**authorization** { **default** | *list-name* }

**no authorization exec**

Parameter Description	Parameter	Description
	<b>default</b>	Default authorization list name,
	<i>list-name</i>	Optional list name.

**Defaults** This function is disabled by default,

**Command Mode** Line configuration mode

**Usage Guide** This function is used together with AAA authorization. Configure AAA EXEC authorization first, and then apply it on the line.

**Configuration** The following example performs EXEC authorization to line VTY 1.

**Examples**

```
Ruijie(config)# aaa new-model
Ruijie(config)# aaa authorization exec default group radius
Ruijie(config)# line vty 1
Ruijie(config-line)# authorization exec default
```

Related Commands	Command	Description
	N/A	N/A

**Platform** N/A  
**Description**

## 3.8 autocommand

Use this command to enable automatic command execution. Use the **no** form of this command to restore the default setting.

**autocommand** *autocommand-string*

**no autocommand**

Parameter Description	Parameter	Description
	<i>autocommand-string</i>	Enables automatic command execution.

**Defaults** This function is disabled by default.

**Command** LINE configuration mode



**Mode**

**Usage Guide** This command is used to enable the dumb terminal to log in to the specified host through Telnet or to obtain the specified app-based terminal service.

**Configuration** The following example enables automatic command execution and connects to line vty 0.

**Examples**

```
Ruijie(config)# line vty 0
Ruijie(config-line)# autocommand telnet 192.168.21.100

//Initiates connection to line vty 0:
Trying 192.168.21.100, 23...

Ruijie#show users
```

Line	User	Host(s)	Idle	Location
0 con 0	---	idle	00:01:31	---
* 1 vty 0	---	idle	00:00:00	192.168.21.200

**Related  
Commands**

Command	Description
N/A	N/A

**Platform** N/A  
**Description**

## 3.9 clear line

Use this command to clear connection status of the line.

**clear line** { **aux** *line-num* | **console** *line-num* | **tty** *line-num* | **vty** *line-num* | *line-num* }

**Parameter  
Description**

Parameter	Description
<b>aux</b>	Clears connection status of auxiliary port line. This parameter is on routers generally.
<b>console</b>	Clears connection status of the console line.
<b>tty</b>	Clears connection status of the asynchronous port line. This parameter is on routers generally.
<b>vty</b>	Clears connection status of the virtual terminal line.
<i>line-num</i>	Specifies the line to be cleared.

**Defaults** N/A

**Command** Privileged EXEC mode  
**Mode**

**Usage Guide** This command is used to clear connection status of the line and restore the line to the unoccupied status to create new connections.

**Configuration Examples** The following example clears connection status of line VTY 13. The connected session on the client (such as Telnet and SSH) in the line is disconnected immediately.

```
Ruijie# clear line vty 13
```

**Related Commands**

Command	Description
N/A	N/A

**Platform** N/A  
**Description**

## 3.10 databits

Use this command to set the databit number for every character on the async line in flow communication mode. Use the **no** form of this command to restore the default setting.

**databits** *bit*

**no databits**

**Parameter Description**

Parameter	Description
<i>bit</i>	Sets the databit number of every character, in the range from 5 to 8.

**Defaults** The default is 8.

**Command** LINE configuration mode  
**Mode**

**Usage Guide** The async line device generates 7 databits with parity check in flow communication mode. If parity check is enabled, the databit number is 7. Otherwise, the databit number is 8. The databit number may set to 5 or 6 on the earlier device.

**Configuration Examples** The following example sets the databit number for every character on the async line in flow communication mode to 7.

```
Ruijie(config)# line console 0  
Ruijie(config-line)#databits 7
```

**Related**

Command	Description
---------	-------------

Commands		
	N/A	N/A

**Platform** N/A

**Description**

## 3.11 disconnect-character

Use this command to set the hot key that disconnects the terminal service connection. Use the **no** form of this command to restore the default setting.

**disconnect-character** *ascii-value*

**no disconnect-character**

Parameter Description	Parameter	Description
	<i>ascii-value</i>	ASCII decimal value of the hot key that disconnects the terminal service connection, in the range from 0 to 255.

**Defaults** The default hot key is **Ctrl+D** and the ASCII decimal value is 0x04.

**Command Mode** Line configuration mode

**Usage Guide** This command is used to set the hot key that disconnects the terminal service connection. The hot key cannot be the commonly used ASCII node such as characters ranging from a to z, from A to Z or numbers ranging from 0 to 9. Otherwise, the terminal service cannot operate properly.

**Configuration Examples** The following example sets the hot key that disconnects the terminal service connection on line VTY 0 5 to **Ctrl+E** (0x05).

```
Ruijie(config)# line vty 0 5
Ruijie(config-line)# disconnect-character 5
```

Related Commands	Command	Description
	N/A	N/A

**Platform** N/A

**Description**

## 3.12 escape-character

Use this command to set the escape character for the line. Use the **no** form of this command to restore the default setting.

**escape-character** *escape-value*  
**no escape-character**

**Parameter  
Description**

Parameter	Description
<i>escape-value</i>	Sets the ASCII value corresponding to the escape character for the line, in the range from 0 to 255.

**Defaults**

The default escape character is **Ctrl+^** (**Ctrl+Shift+6**) and the ASCII decimal value is 30.

**Command  
Mode**

Line configuration mode

**Usage Guide**

After configuring this command, press the key combination of the escape character and then press **x**, the current session is disconnected to return to the original session.

**Configuration**

The following example sets the escape character for the line to 23 (**Ctrl+w**).

**Examples**

```
Ruijie(config)# line vty 0
Ruijie(config-line)# escape-character 23
```

**Related  
Commands**

Command	Description
N/A	N/A

**Platform**

N/A

**Description**

## 3.13 exec

Use this command to enable the line to enter the command line interface. Use the **no** form of this command to disable the function.

**exec**  
**no exec**

**Parameter  
Description**

Parameter	Description
N/A	N/A

**Defaults**

This function is enabled by default.

**Command  
Mode**

Line configuration mode

**Usage Guide**

The **no exec** command is used to ban the line from entering the command line interface. You have to

enter the command line interface through other lines,

**Configuration** The following example bans line VTY 1 from entering the command line interface.

**Examples**

```
Ruijie(config)# line vty 1
Ruijie(config-line)# no exec
Ruijie# show users
```

Line	User	Host(s)	Idle	Location
-----				
* 0 con 0	---	idle	00:00:00	---
1 vty 0	---	idle	00:01:03	20.1.1.2
3 vty 2	---	idle	00:00:13	20.1.1.2

**Related  
Commands**

Command	Description
N/A	N/A

**Platform** N/A

**Description**

## 3.14 exec-character-bits

Use this command to configure the coded character set for the async line. Use the **no** form of this command to restore the default setting.

**exec-character-bits { 7 | 8 }**

**no exec-character-bits**

**Parameter  
Description**

Parameter	Description
<b>7</b>	Configures a 7-bit coded character set.
<b>8</b>	Configures an 8-bit coded character set.

**Defaults** The default is 8.

**Command  
Mode** LINE configuration mode

**Usage Guide** If you want to enter Chinese characters in the command line or display Chinese characters, graphs or other international characters, configure the **exec-character-bits 8** command.

**Configuration** The following example configures a 7-bit coded character set for the async line.

**Examples**

```
Ruijie(config)# line console 0
Ruijie(config-line)#exec-character-bits 7
```

Related Commands	Command	Description
	N/A	N/A

Platform N/A

Description

## 3.15 flowcontrol

Use this command to configure the flow control mode for the async line. Use the **no** form of this command to restore the default setting.

**flowcontrol** { **hardware** | **none** | **software** }

**no flowcontrol** { **hardware** | **none** | **software** }

Parameter Description	Parameter	Description
	<b>hardware</b>	Configures hardware flow control.
	<b>none</b>	Configures no flow control.
	<b>software</b>	Configures software flow control.

**Defaults** No flow control is configured by default.

**Command Mode** LINE configuration mode

**Usage Guide** This command is used to control the data sending rate to make it consistent with the receiving rate at the receiving end. The terminal cannot receive data while sending data, so this function prevents data drop. Flow control is also configured for the communication between high speed device and low speed device (for example, printer and network interface). RGOS provides two flow control modes, namely, software flow control and hardware flow control. The stop and start characters are Ctrl+S ( XOFF, ASCII: 19) and Ctrl+Q (XON, ASCII: 17) respectively.

**Configuration** The following example configures software flow control for the async line.

**Examples**

```
Ruijie(config)#line console 0
Ruijie(config-line)#flowcontrol software
```

Related Commands	Command	Description
	N/A	N/A

Platform N/A

Description

## 3.16 history

Use this command to enable command history for the line or set the number of commands in the command history. Use the **no history** command to disable command history. Use the **no history size** command to restore the number of commands in the command history to the default setting.

**history** [ **size** *size* ]

**no history**

**no history size**

Parameter Description	Parameter	Description
	<b>size</b> <i>size</i>	The number of commands, in the range from 0 to 256.

**Defaults** This function is enabled by default, The default *size* is 10.

**Command Mode** Line configuration mode

**Usage Guide** N/A

**Configuration Examples** The following example sets the number of commands in the command history to 20 for line VTY 0 5.

```
Ruijie(config)# line vty 0 5
```

```
Ruijie(config-line)# history size 20
```

The following example disables the command history for line VTY 0 5.

```
Ruijie(config)# line vty 0 5
```

```
Ruijie(config-line)# no history
```

Related Commands	Command	Description
	N/A	N/A

**Platform Description** N/A

## 3.17 ipv6 access-class

Use this command to configure access to the terminal through IPv6 ACL. Use the **no** form of this command to restore the default setting.

**ipv6 access-class** *access-list-name* { **in** | **out** }

**no ipv6 access-class** *access-list-name* { **in** | **out** }

Parameter Description	Parameter	Description

<i>access-list-name</i>	Specifies the ACL name.
<b>in</b>	Filters the incoming connections.
<b>out</b>	Filters the outgoing connections.

**Defaults** N/A

**Command Mode** Line configuration mode

**Usage Guide** N/A

**Configuration Examples** The following example uses the ACL named “test” to filter the outgoing IPv6 connections in line VTY 0 4.

```
Ruijie(config)# line vty 0 4
Ruijie(config-line)ipv6 access-list test out
```

**Related Commands**

Command	Description
<b>show running</b>	Displays status information

**Platform Description** N/A

## 3.18 length

Use this command to set the screen length for the line. Use the **no** form of this command to restore the default setting.

**length** *screen-length*

**no length**

**Parameter Description**

Parameter	Description
<i>screen-length</i>	Sets the screen length, in the range from 0 to 512.

**Defaults** The default is 24.

**Command Mode** Line configuration mode

**Usage Guide** N/A

**Configuration Examples** The following example sets the screen length to 10.

```
Ruijie(config-line)# length 10
```



Related Commands	Command	Description
	N/A	N/A

**Platform** N/A  
**Description**

## 3.19 line

Use this command to enter the specified LINE mode.

**line** [ **aux** | **console** | **tty** | **vty** ] *first-line* [ *last-line* ]

Parameter Description	Parameter	Description
	<b>aux</b>	Auxiliary port, on the routers.
	<b>console</b>	Console port
	<b>tty</b>	Asynchronous port, on the routers.
	<b>vty</b>	Virtual terminal line, applicable for telnet/ssh connection.
	<i>first-line</i>	Number of first-line to enter
	<i>last-line</i>	Number of last-line to enter

**Defaults** N/A

**Command Mode** Global configuration mode

### Usage Guide

**Configuration** The following example enters the LINE mode from LINE VTY 1 to 3:

**Examples** Ruijie(config)# line vty 1 3

Related Commands	Command	Description
	N/A	N/A

**Platform** N/A  
**Description**

## 3.20 line vty

Use this command to increase the number of VTY connections currently available. Use the **no** form of this command to restore the default setting.

**line vty** *line-number*

**no line vty** *line-number*

**Parameter  
Description**

Parameter	Description
<i>line-number</i>	Number of VTY connections, in the range from 0 to 35.

**Defaults**

**Command** Global configuration mode.  
**Mode**

**Usage Guide**

**Configuration Examples** The following example increases the number of available VTY connections to 20. The available VTY connections are numbered 0 to 19.

```
Ruijie(config)# line vty 19
```

The following example decreases the number of available VTY connections to 10. The available VTY connections are numbered 0-9.

```
Ruijie(config)# line vty 10
```

**Related  
Commands**

Command	Description
N/A	N/A

**Platform** N/A  
**Description**

## 3.21 location

Use this command to configure the line location description. Use the **no** form of this command to restore the default setting.

**location** *location*

**no location**

**Parameter  
Description**

Parameter	Description
<i>location</i>	Line location description

**Defaults** N/A

**Command** Line configuration mode  
**Mode**

**Usage Guide** N/A

**Configuration** The following example describes the line location as Switch's Line VTY 0.

**Examples**

```
Ruijie(config)# line vty 0
Ruijie(config-line)# location Switch's Line Vty 0
```

Related Commands	Command	Description
	N/A	N/A

**Platform** N/A

**Description**

## 3.22 monitor

Use this command to enable log display on the terminal. Use the **no** form of this command to restore the default setting,

**monitor**

**no monitor**

Parameter Description	Parameter	Description
	N/A	N/A

**Defaults** N/A

**Command  
Mode** Line configuration mode

**Usage Guide** N/A

**Configuration** The following example enables log display on the terminal in VTY line 0 5.

**Examples**

```
Ruijie(config)# line vty 0 5
Ruijie(config-line)# monitor
```

Related Commands	Command	Description
	N/A	N/A

**Platform** N/A

**Description**

## 3.23 parity

Use this command to configure the parity for the async line. Use the **no** form of this command to restore the default setting.

**parity** { **even** | **none** | **odd** }

**no parity**

Parameter Description	Parameter	Description
	<b>even</b>	Configures even parity,
	<b>none</b>	Configures no parity.
	<b>odd</b>	Configures odd parity,

**Defaults** No parity check is configured by default.

**Command Mode** LINE configuration mode

**Usage Guide** Parity is required in communication through some devices (such as async serial ports and console ports).

**Configuration Examples** The following example configures even parity for the async line.

```
Ruijie(config)#line console 0
Ruijie(config-line)#parity even
```

Related Commands	Command	Description
	N/A	N/A

**Platform Description** N/A

## 3.24 privilege level

Use this command to set the privilege level for the line. Use the **no** form of this command to restore the default setting.

**privilege level** *level*

**no privilege level**

Parameter Description	Parameter	Description
	<i>level</i>	Privilege level, in the range from 0 to 15.

**Defaults** The default is 1.

**Command Mode** Line configuration mode

**Usage Guide** N/A

**Configuration** The following example sets the privilege level for the line VTY 0 4 to 14.

**Examples**

```
Ruijie(config)# line vty 0 4
Ruijie(config-line)privilege level 14
```

Related Commands	Command	Description
	N/A	N/A

**Platform** N/A

**Description**

## 3.25 show history

Use this command to display the command history of the line.

**show history**

Parameter Description	Parameter	Description
	N/A	N/A

**Defaults** N/A

**Command Mode** Privileged EXEC mode

**Usage Guide** N/A

**Configuration** The following example displays the command history of the line.

**Examples**

```
Ruijie# show history
exec:
sh privilege
sh run
show user
sh user all
show history
```

Related	Command	Description

Commands		
	N/A	N/A

**Platform** N/A

**Description**

## 3.26 show line

Use this command to display line configuration.

**show line** { **aux** *line-num* | **console** *line-num* | **tty** *line-num* | **vtty** *line-num* | *line-num* }

Parameter Description	Parameter	Description
	<b>aux</b>	Displays configuration for the auxiliary port line. This parameter is on routers generally.
	<b>console</b>	Displays configuration for the console line.
	<b>tty</b>	Displays configuration for the asynchronous port line. This parameter is on routers generally.
	<b>vtty</b>	Displays configuration for the virtual terminal line.
	<i>line-num</i>	Displays the line.

**Defaults** N/A

**Command Mode** Privileged EXEC mode

**Usage Guide** N/A

**Configuration** The following example displays configuration for the console port.

**Examples**

```
Ruijie# show line console 0
CON      Type      speed  Overruns
* 0      CON       9600   45927
Line 0, Location: "", Type: "vt100"
Length: 24 lines, Width: 79 columns
Special Chars: Escape Disconnect Activation
                ^^x      none      ^M
Timeouts:      Idle EXEC   Idle Session
                never      never
History is enabled, history size is 10.
Total input: 53564 bytes
Total output: 395756 bytes
Data overflow: 27697 bytes
stop rx interrupt: 0 times
```

Field	Description
CON	Terminal type. CON indicates console; 0 indicates terminal line number and * ahead of the number means that the terminal is in use.
Type	Terminal type, including CON, AUX, TTY, and VTY.
speed	Asynchronous speed.
Overruns	The number of overrun errors received by the flash.
Line 0	Terminal line number.
Location: ""	Line location configuration.
Type: "vt100"	Compatibility standard.
Special Chars	Special characters, including Escape, Disconnect, and Activation characters.
Timeouts	Timeout value; "never" indicates no timeout.
History	Whether to enable command history; the number of commands in the command history.
Total input	Data volume received from the drive.
Total output	Date volume sent to the drive.
Data overflow	Overflowing data volume.
stop rx interrupt	Data reception interruption times.

**Related  
Commands**

Command	Description
N/A	N/A

**Platform** N/A  
**Description**

## 3.27 show privilege

Use this command to display the privilege level of the line.

**show privilege**

**Parameter  
Description**

Parameter	Description
N/A	N/A

**Defaults** N/A

**Command  
Mode** Privileged EXEC mode

**Usage Guide** N/A

**Configuration** The following example displays the privilege level of the line.

**Examples**

```
Ruijie# show privilege
Current privilege level is 10
```

**Related  
Commands**

Command	Description
N/A	N/A

**Platform**

N/A

**Description**

## 3.28 show users

Use this command to display the login user information.

**show users [ all ]**

**Parameter  
Description**

Parameter	Description
<b>all</b>	Displays line user information, including users logging into the line and users not logging into the line.

**Defaults**

N/A

**Command  
Mode**

Privileged EXEC mode

**Usage Guide**

N/A

**Configuration** The following example displays the information about users logging into the line,

**Examples**

```
Ruijie# show users
Line          User          Host(s)          Idle           Location
-----
0 con 0      ---          idle           00:00:46      ---
1 vty 0      ---          idle           00:00:29      20.1.1.2
* 2 vty 1      ---          idle           00:00:00      20.1.1.2
```

The following example displays all line user information,

```
Ruijie(config)# show users all
Line          User          Host(s)          Idle           Location
-----
0 con 0      ---          idle           00:00:49      ---
1 vty 0      ---          idle           00:00:32      20.1.1.2
* 2 vty 1      ---          idle           00:00:00      20.1.1.2
3 vty 2      ---          idle           00:00:00      ---
```



```
4 vty 3      ---          00:00:00  ---
5 vty 4      ---          00:00:00  ---
6 vty 5      ---          00:00:00  ---
```

**Related  
Commands**

Command	Description
N/A	N/A

**Platform** N/A  
**Description**

## 3.29 speed

Use this command to configure the baud rate for the specified line. Use the **no** form of this command to restore the default setting,

**speed** *baudrate*  
**no speed**

**Parameter  
Description**

Parameter	Description
<i>baudrate</i>	Sets the baud rate, in the range from 9600 to 115200.

**Defaults** The default is 9600.

**Command  
Mode** LINE configuration mode

**Usage Guide** N/A

**Configuration  
Examples** The following example sets the baud rate to 115200,  

```
Ruijie(config-line)# speed 115200
```

**Related  
Commands**

Command	Description
N/A	N/A

**Platform** N/A  
**Description**

## 3.30 start-character

Use this command to  
on the async line. Use the **no** form of this command to restore the default setting.

**start-character** *ascii-value*  
**no start-character**

**Parameter  
Description**

Parameter	Description
<i>ascii-value</i>	Sets the ASCII value corresponding to the start character for software flow control on the async line, in the range from 0 to 255.

**Defaults** The default is Ctrl+Q (ASCII: 17).

**Command  
Mode** LINE configuration mode

**Usage Guide** The start character marks the start of the data transmission.

**Configuration  
Examples** The following example configures Ctrl+Y (ASCII: 25) for starting software flow control on the async line,

```
Ruijie(config)#line console 0
Ruijie(config-line)#start-character 25
```

**Related  
Commands**

Command	Description
N/A	N/A

**Platform  
Description** N/A

## 3.31 stopbits

Use this command to configure the stopbit number for every character for the async line. Use the **no** form of this command to restore the default setting.

**stopbits** { 1 | 2 }  
**no stopbits**

**Parameter  
Description**

Parameter	Description
<b>1</b>	Configures 1 stopbit.
<b>2</b>	Configures 2 stopbits.

**Defaults** The default is 2.

**Command  
Mode** LINE configuration mode

**Usage Guide** The stopbit is required in communication between the async line and the async device (such as the conventional numb terminals and modems).

**Configuration** The following example sets the stopbit number of every character for the async line to 1.

**Examples**

```
Ruijie(config)#line console 0
Ruijie(config-line)#stopbits 1
```

Related Commands	Command	Description
	N/A	N/A

**Platform** N/A

**Description**

## 3.32 stop-character

Use this command to configure the stop character for software flow control on the async line. Use the **no** form of this command to restore the default setting.

**stop-character** *ascii-value*

**no stop-character**

Parameter Description	Parameter	Description
	<i>ascii-value</i>	Sets the ASCII value corresponding to the stop character for software flow control on the async line, in the range from 0 to 255.

**Defaults** The default is Ctrl+S (ASCII: 19).

**Command** LINE configuration mode  
**Mode**

**Usage Guide** The stop character marks the end of the data transmission.

**Configuration** The following example configures Ctrl+Z (ASCII: 26) for stopping software flow control on the async line,

**Examples**

```
Ruijie(config)#line console 0
Ruijie(config-line)#stop-character 26
```

Related Commands	Command	Description
	N/A	N/A

**Platform** N/A

**Description**

### 3.33 terminal databits

Use this command to configure the databit number of the character for the current terminal in flow communication mode. Use the **no** form of this command to restore the default setting.

**terminal databits** *bit*

**terminal no databits**

Parameter Description	Parameter	Description
	<i>bit</i>	Configures the databit number of the character, in the range from 5 to 8.

**Defaults** The default is 8.

**Command Mode** Privileged EXEC mode

**Usage Guide** N/A

**Configuration Examples** The following example sets the databit number of every character for the current terminal in flow communication mode to 7.

```
Ruijie#terminal databits 7
```

Related Commands	Command	Description
	N/A	N/A

**Platform Description** N/A

### 3.34 terminal escape-character

Use this command to set the escape character for the current terminal. Use the **no** form of this command to restore the default setting.

**terminal escape-character** *escape-value*

**terminal no escape-character**

Parameter Description	Parameter	Description
	<i>escape-value</i>	Sets the ASCII value corresponding to the escape character for the current terminal, in the range from 0 to 255.

**Defaults** The default escape character is **Ctrl+^** (**Ctrl+Shift+6**) and the ASCII decimal value is 30.

**Command Mode** Privileged EXEC mode

**Usage Guide** After configuring this command, press the key combination of the escape character and then press **x**, the current session is disconnected to return to the original session.

**Configuration** The following example sets the escape character for the current terminal to 23 (**Ctrl+w**).

**Examples** Ruijie# terminal escape-character 23

Related Commands	Command	Description
	N/A	N/A

**Platform** N/A  
**Description**

### 3.35 terminal exec-character-bits

Use this command to configure the coded character set for the current terminal. Use the **no** form of this command to restore the default setting.

**terminal exec-character-bits { 7 | 8 }**

**terminal no exec-character-bits**

Parameter Description	Parameter	Description
	7	Configures a 7-bit coded character set.
	8	Configures an 8-bit coded character set.

**Defaults** The default is 8.

**Command Mode** Privileged EXEC mode

**Usage Guide** If you want to enter Chinese characters in the command line or display Chinese characters, graphs or other international characters, configure the **exec-character-bits 8** command.

**Configuration** The following example configures a 7-bit coded character set for the current terminal.

**Examples** Ruijie#terminal exec-character-bits 7

Related Commands	Command	Description
	N/A	N/A

**Platform** N/A  
**Description**

### 3.36 terminal flowcontrol

Use this command to configure the flow control mode for the current terminal. Use the **no** form of this command to restore the default setting.

**terminal flowcontrol** { **hardware** | **none** | **software** }

**terminal no flowcontrol** { **hardware** | **none** | **software** }

Parameter Description	Parameter	Description
	<b>hardware</b>	Configures hardware flow control.
	<b>none</b>	Configures no flow control.
	<b>software</b>	Configures software flow control.

**Defaults** The default flow control mode is **none**.

**Command Mode** Privileged EXEC mode

**Usage Guide** N/A

**Configuration Examples** The following example configures software flow control for the current terminal.

```
Ruijie#terminal flowcontrol software
```

Related Commands	Command	Description
	N/A	N/A

**Platform** N/A  
**Description**

### 3.37 terminal history

Use this command to enable command history for the current terminal or set the number of commands in the command history. Use the **no history** command to disable command history. Use the **no history size** command to restore the number of commands in the command history to the default setting.

**terminal history** [ **size** *size* ]

**terminal no history**

**terminal no history size**

<b>Parameter Description</b>	Parameter	Description
	<b>size</b> <i>size</i>	Sets the number of commands, in the range from 0 to 256.
<b>Defaults</b>	This function is enabled by default, The default <i>size</i> is 10.	
<b>Command Mode</b>	Privileged EXEC mode	
<b>Usage Guide</b>	N/A	
<b>Configuration Examples</b>	<p>The following example sets the number of commands in the command history to 20 for the current terminal.</p> <pre>Ruijie# terminal history size 20</pre> <p>The following example disables the command history for the current terminal.</p> <pre>Ruijie# terminal no history</pre>	
<b>Related Commands</b>	Command	Description
	N/A	N/A
<b>Platform Description</b>	N/A	

### 3.38 terminal length

Use this command to set the screen length for the current terminal. Use the **no** form of this command to restore the default setting.

**terminal length** *screen-length*

**terminal no length**

<b>Parameter Description</b>	Parameter	Description
	<i>screen-length</i>	Sets the screen length, in the range from 0 to 512.
<b>Defaults</b>	The default is 24.	
<b>Command Mode</b>	Privileged EXEC mode	
<b>Usage Guide</b>	N/A	
<b>Configuration Examples</b>	<p>The following example sets the screen length for the current terminal to 10.</p> <pre>Ruijie# terminal length 10</pre>	

Related Commands	Command	Description
	N/A	N/A

**Platform** N/A  
**Description**

### 3.39 terminal location

Use this command to configure location description for the current device. Use the **no** form of this command to restore the default setting.

**terminal location** *location*

**terminal no location**

Parameter Description	Parameter	Description
	<i>location</i>	Configures location description of the current device.

**Defaults** N/A

**Command  
Mode** Privileged EXEC mode

**Usage Guide** N/A

**Configuration  
Examples** The following example configures location description of the current device as "Switch's Line Vty 0".

```
Ruijie# terminal location Switch's Line Vty 0
```

Related Commands	Command	Description
	N/A	N/A

**Platform** N/A  
**Description**

### 3.40 terminal parity

Use this command to configure the parity for the current terminal. Use the **no** form of this command to restore the default setting.

**terminal parity** { **even** | **none** | **odd** }

**terminal no parity**



<b>Parameter Description</b>	Parameter	Description
	<b>even</b>	Configures even parity,
	<b>none</b>	Configures no parity.
	<b>odd</b>	Configures odd parity,
<b>Defaults</b>	No parity check is configured by default.	
<b>Command Mode</b>	Privileged EXEC mode	
<b>Usage Guide</b>	Parity is required in communication through some devices (such as async serial ports and console ports).	
<b>Configuration Examples</b>	The following example configures even parity for the current terminal. <pre>Ruijie#terminal parity even</pre>	
<b>Related Commands</b>	Command	Description
	N/A	N/A
<b>Platform Description</b>	N/A	

### 3.41 terminal speed

Use this command to configure the baud rate for the current terminal. Use the **no** form of this command to restore the default setting,

**terminal speed** *baudrate*

**terminal no speed**

<b>Parameter Description</b>	Parameter	Description
	<i>baudrate</i>	Sets the baud rate, in the range from 9600 to 115200.
<b>Defaults</b>	The default is 9600.	
<b>Command Mode</b>	Privileged EXEC mode	
<b>Usage Guide</b>	N/A	
<b>Configuration Examples</b>	The following example sets the baud rate for the current terminal to 115200, <pre>Ruijie# terminal speed 115200</pre>	

Related Commands	Command	Description
	N/A	N/A

**Platform** N/A

**Description**

## 3.42 terminal start-character

Use this command to configure the start character for software flow control on the current terminal.

Use the **no** form of this command to restore the default setting.

**terminal start-character** *ascii-value*

**terminal no start-character**

Parameter Description	Parameter	Description
	<i>ascii-value</i>	Sets the ASCII value corresponding to the start character for software flow control on the current terminal, in the range from 0 to 255.

**Defaults** The default is Ctrl+Q (ASCII: 17).

**Command Mode** Privileged EXEC mode

**Usage Guide** N/A

**Configuration Examples** The following example configures Ctrl+Y (ASCII: 25) for starting software flow control on the current device,

```
Ruijie#terminal start-character 25
```

Related Commands	Command	Description
	N/A	N/A

**Platform** N/A

**Description**

## 3.43 terminal stopbits

Use this command to set the stopbit number of every character for the current terminal. Use the **no** form of this command to restore the default setting.

**terminal stopbits** { 1 | 2 }

**terminal no stopbits**

Parameter Description	Parameter	Description
	1	Configures 1 stopbit,
	2	Configures 2 stopbits.

**Defaults** The default is 2.

**Command Mode** Privileged EXEC mode

**Usage Guide** N/A

**Configuration Examples** The following example configures 1 stopbit for the current terminal.

```
Ruijie#terminal stopbits 1
```

Related Commands	Command	Description
	N/A	N/A

**Platform Description** N/A

## 3.44 terminal stop-character

Use this command to configure the stop character for software flow control on the current terminal.

Use the **no** form of this command to restore the default setting.

**terminal stop-character** *ascii-value*

**terminal no stop-character**

Parameter Description	Parameter	Description
	<i>ascii-value</i>	Sets the ASCII value corresponding to the stop character for software flow control on the current terminal, in the range from 0 to 255.

**Defaults** The default is Ctrl+S (ASCII: 19).

**Command Mode** Privileged EXEC mode

**Usage Guide** N/A

**Configuration** The following example configures Ctrl+Z (ASCII: 26) for stopping software flow control on the current

**Examples** device.

```
Ruijie#terminal stop-character 26
```

**Related  
Commands**

Command	Description
N/A	N/A

**Platform** N/A

**Description**

## 3.45 terminal terminal-type

Use this command to configure the simulated terminal type string for the current terminal. Use the **no** form of this command to restore the default setting.

**terminal terminal-type** *terminal-type-string*

**terminal no terminal-type**

**Parameter  
Description**

Parameter	Description
<i>terminal-type-string</i>	Sets the terminal type string, such as vt100 and ansi.

**Defaults** The default is vt100.

**Command  
Mode** Privileged EXEC mode

**Usage Guide** N/A

**Configuration** The following example sets the simulated terminal type string for the current terminal to ansi.

**Examples** Ruijie#terminal terminal-type ansi

**Related  
Commands**

Command	Description
N/A	N/A

**Platform** N/A

**Description**

## 3.46 terminal width

Use this command to set the screen width for the terminal.

**terminal width** *screen-width*

**terminal no width**

<b>Parameter Description</b>	<b>Parameter</b>	<b>Description</b>
	<i>screen-width</i>	Sets the screen width for the terminal, in the range from 0 to 256.
<b>Defaults</b>	The default is 79.	
<b>Command Mode</b>	Privileged EXEC mode	
<b>Usage Guide</b>	N/A	
<b>Configuration Examples</b>	The following example sets the screen width for the terminal to 10. <pre>Ruijie# terminal width 10</pre>	
<b>Related Commands</b>	<b>Command</b>	<b>Description</b>
	N/A	N/A
<b>Platform Description</b>	N/A	

### 3.47 terminal-type

Use this command to configure the simulated terminal type string of the async line.

**terminal-type** *terminal-type-string*

**no terminal-type**

<b>Parameter Description</b>	<b>Parameter</b>	<b>Description</b>
	<i>terminal-type-string</i>	Configures the terminal type string, such as vt100 and ansi.
<b>Defaults</b>	The default is vt100.	
<b>Command Mode</b>	LINE configuration mode	
<b>Usage Guide</b>	You can use the <b>terminal-type vt100</b> command to restore the default terminal type. If you want to enable telnet connection, you should use the simulated terminal type to perform terminal type negotiation (Telnet: 0x18). See RFC 854 for details.	
<b>Configuration Examples</b>	The following example sets the simulated terminal type of the async line to ansi. <pre>Ruijie(config)#line console 0 Ruijie(config-line)#terminal-type ansi</pre>	

Related Commands	Command	Description
	N/A	N/A

**Platform** N/A

**Description**

## 3.48 timeout login

Use this command to set the login authentication timeout for the line. Use the **no** form of this command to restore the default setting.

**timeout login response** *seconds*

**no timeout login response**

Parameter Description	Parameter	Description
	<b>response</b>	The time period during which the line waits for the user to enter any message.
	<i>seconds</i>	Timeout value, in the range from 1 to 300 in the unit of seconds.

**Defaults** The default is 30.

**Command Mode** Line configuration mode

**Usage Guide** N/A

**Configuration** The following example sets the login authentication timeout to 300 seconds for line VTY 0 5.

**Examples**

```
Ruijie(config)# line vty 0 5
Ruijie(config-line) login timeout response 300
```

Related Commands	Command	Description
	N/A	N/A

**Platform** N/A

**Description**

## 3.49 transport input

Use this command to set the specified protocol under Line that can be used for communication. Use the **no** form of this command to restore the default setting.

**transport input** { **all** | **ssh** | **telnet** | **none** }

**no transport input** { **all** | **ssh** | **telnet** | **none** }

**Parameter  
Description**

Parameter	Description
<b>all</b>	Allows all the protocols under Line to be used for communication
<b>ssh</b>	Allows only the SSH protocol under Line to be used for communication
<b>telnet</b>	Allows only the Telnet protocol under Line to be used for communication
<b>none</b>	Allows none of protocols under Line to be used for communication

**Defaults**      **all**, **ssh** and **telnet** protocols are allowed.

**Command  
Mode**          Line configuration mode

**Usage Guide**    N/A

**Configuration**    The following example specifies that only the Telnet protocol is allowed to login in line vty 0 4.

**Examples**

```
Ruijie(config)# line vty 0 5
Ruijie(config-line)transport input ssh
```

**Related  
Commands**

Command	Description
<b>show running</b>	Displays status information

**Platform**          N/A

**Description**

## 3.50 vacant-message

Use this command to set the logout message. Use the **no** form of this command to restore the default setting.

**vacant-message** [ *c message c* ]

**no vacant-message**

**Parameter  
Description**

Parameter	Description
<i>c</i>	Delimiter of the logout message, which is not allowed within the message.
<i>message</i>	Logout message.

**Defaults** N/A

**Command Mode** Line configuration mode

**Usage Guide** This command is used to set the logout message for the line. The characters entered after the ending delimiter are discarded directly, The logout message is displayed when the user logs out.

**Configuration** The following example sets the logout message to "Logout from the ruijie device".

**Examples** Ruijie(config-line)#vacant-message @ Logout from the ruijie device @

Related Commands	Command	Description
	N/A	N/A

**Platform Description** N/A

## 3.51 width

Use this command to set the screen width for the line. Use the **no** form of this command to restore the default setting,

**width** *screen-width*

**no width**

Parameter Description	Parameter	Description
	<i>screen-width</i>	Sets the screen width for the line, in the range from 0 to 256,

**Defaults** The default is 79.

**Command Mode** Line configuration mode

**Usage Guide** N/A

**Configuration** The following example sets the screen width for the line to 10.

**Examples** Ruijie(config-line)# width 10

Related Commands	Command	Description
	N/A	N/A

**Platform** N/A



**Description**

## 4 File System Commands

### 4.1 cd

Use this command to set the present directory for the file system.

**cd** [ *filesystem:* ] [ *directory* ]

Parameter	Parameter	Description
Description	<i>filesystem:</i>	The URL of filesystem, followed by a colon (:). The filesystem includes <b>flash:</b> , <b>usb:</b> , and <b>tmp:</b> .
	<i>directory</i>	The path name. A file name starts with "/" is an absolute path. Otherwise, it is a relative path.

**Defaults** The default directory is the flash root directory.

**Command** Privileged EXEC mode.

**Mode**

**Usage Guide**

**Configuration**

**Examples**

Related	Command	Description
Commands	<b>pwd</b>	Displays the present word directory.

**Platform** N/A.

**Description**

### 4.2 copy

Use this command to copy a file from the specified source directory to the specified destination directory.

**copy** *source-url destination-url*

Parameter	Parameter	Description
Description	<i>source-url</i>	Source file URL, which can be local or remote.
	<i>destination-url</i>	Destination file URL, which can be local or remote.

**Defaults** N/A.

**Command** Privileged EXEC mode.

**Mode**

**Usage Guide** when the file to be copied exists on the target URL, the target file system determines the action, such as error report, overwrite, or offering you the choice.

The following table lists the URL:

Prefix	Description
<b>running-config</b>	Running configuration file.
<b>startup-config</b>	startup configuration file.
<b>flash:</b>	local FLASH file system.
<b>tftp:</b>	The URL of TFTP network server, in the format as follows: <b>tftp:[[/location]/directory]/filename</b>
<b>oob_tftp:</b>	The URL of TFTP network server connected with the Out-of-Band port, If there are multiple MGMT ports, you can specify one.

**Configuration Examples** The following example copies the netconfig file from device 192.168.64.2 to the FLASH disk and the netconfig file exists locally.

```
Ruijie#copy tftp://192.168.64.2/netconfig flash:/netconfig
Do you want to overwrite [/data/netconfig]? [Y/N]:y
Press Ctrl+C to quit
!
Copy success.
```

**Related Commands**

Command	Description
<b>delete</b>	Deletes the file.
<b>rename</b>	Renames the file.
<b>dir</b>	Displays the file list of the specified directory.

**Platform** N/A

**Description**

## 4.3 delete

Use this command to delete the files in the present directory.

**delete** [ *filesystem:* ] *file-url*

**Parameter Description**

Parameter	Description
<i>filesystem:</i>	The URL of file system, followed by a colon (:). The file system includes <b>flash:</b> , <b>usb:</b> and <b>tmp:</b> .
<i>file-url</i>	The file name containing the path. A file name starts with "/" is an absolute path. Otherwise, it is a relative path.

**Defaults** The default *filesystem:* is **flash:**.

**Command** Privileged EXEC mode.

**Mode**

### Usage Guide

**Configuration** The following example deletes the fstab file on the FLASH disk.

**Examples**

```
Ruijie#pwd
flash:/
Ruijie#dir
Directory of flash:/
1  -rw-      336   Jan 03 2012 18:53:42  fstab
2  -rw-     4096   Jan 03 2012 12:32:09   rc.d
3  -rw-   10485760 Jan 03 2012 18:13:37   rpmdb
3 files, 0 directories
10,490,192 bytes total (13,192,656 bytes free)
Ruijie#delete flash:/fstab
Do you want to delete [flash:/fstab]? [Y/N]:y
Delete success.

Ruijie#dir
Directory of flash:/
1  -rw-     4096   Jan 03 2012 12:32:09   rc.d
2  -rw-   10485760 Jan 03 2012 18:13:37   rpmdb
2 files, 0 directories
10,489,856 bytes total (13,192,992 bytes free)
```

Related Commands	Command	Description
	<b>copy</b>	Copies the file.
	<b>dir</b>	Displays the file list of the specified directory.

**Platform** N/A

**Description**

## 4.4 dir

Use this command to display the files in the present directory.

**dir** [ *filesystem*: ] [ *directory* ]

Parameter Description	Parameter	Description
	<i>filesystem</i>	The URL of file system, followed by a colon (:). The file system includes <b>flash:</b> , <b>usb:</b> and <b>tmp:</b> .
	<i>directory</i>	The path name. A file name starts with "/" is an absolute path. Otherwise, it is a relative path.

**Defaults** By default, only the information under the present working path is displayed.

**Command Mode** Privileged EXEC mode.

### Usage Guide

**Configuration** The following example displays the file information of the root directory in the FLASH disk.

#### Examples

```
Ruijie#dir flash:/
Directory of flash:/
 1  -rw-          336   Jan 03 2012 18:53:42  fstab
 2  -rw-          4096   Jan 03 2012 12:32:09  rc.d
 3  -rw-    10485760   Jan 03 2012 18:13:37  rpmdb
3 files, 0 directories
10,490,192 bytes total (13,192,656 bytes free)
```

Field	Description
1, 2, 3...	Index number
-rw-	Permissions on a file include: <ul style="list-style-type: none"> <li>● d: directory</li> <li>● r: read</li> <li>● w: write</li> <li>● x: executable</li> </ul>
10485760	File size
rpmdb	File name
files	File number
directories	Directory number
total	Total size
free	Available space

#### Related Commands

Command	Description
<b>pwd</b>	Displays the present directory.
<b>cd</b>	Sets the present directory of the file system.

**Platform** N/A.  
**Description**

## 4.5 erase

Use this command to erase the device or file that doesn't have a file system.

**erase** *filesystem*

#### Parameter

Parameter	Description
-----------	-------------

Description	filesystem: Name of the file system, followed by a colon (:). For example, usb0:.					
Defaults	N/A					
Command Mode	Privileged EXEC mode					
Usage Guide	N/A					
Configuration Examples	The following example erases the USB filesystem. <pre>Ruijie#erase usb0: Sure to erase usb0:? [Y/N] y Erasing disk usb0 ... Erase disk usb0 done!</pre>					
Related Commands	<table><tr><th>Command</th><th>Description</th></tr><tr><td>N/A</td><td>N/A</td></tr></table>	Command	Description	N/A	N/A	
Command	Description					
N/A	N/A					
Platform Description	N/A					

## 4.6 file

Use this command to display the information about a file.

**file** [ *filesystem:* ] *file-url*

<b>Parameter Description</b>	<table border="1"> <thead> <tr> <th>Parameter</th><th>Description</th></tr> </thead> <tbody> <tr> <td><i>filesystem:</i></td><td>The URL of file system, followed by a colon (:). The file system includes <b>flash:</b>, <b>usb:</b> and <b>tmp:</b>.</td></tr> <tr> <td><i>file-url</i></td><td>The file name containing the path. A file name starts with "/" is an absolute path. Otherwise, it is a relative path.</td></tr> </tbody> </table>	Parameter	Description	<i>filesystem:</i>	The URL of file system, followed by a colon (:). The file system includes <b>flash:</b> , <b>usb:</b> and <b>tmp:</b> .	<i>file-url</i>	The file name containing the path. A file name starts with "/" is an absolute path. Otherwise, it is a relative path.
Parameter	Description						
<i>filesystem:</i>	The URL of file system, followed by a colon (:). The file system includes <b>flash:</b> , <b>usb:</b> and <b>tmp:</b> .						
<i>file-url</i>	The file name containing the path. A file name starts with "/" is an absolute path. Otherwise, it is a relative path.						
<b>Defaults</b>	The default <i>filesystem:</i> is <b>flash:</b> .						
<b>Command Mode</b>	Privileged EXEC mode						
<b>Usage Guide</b>	N/A						
<b>Configuration Examples</b>	<p>The following example displays the information about gcc executable file.</p> <pre>Ruijie#file flash:/gcc /usr/bin/gcc-4.6: ELF 32-bit LSB executable, Intel 80386, version 1 (SYSV), dynamically linked (uses shared libs), for GNU/Linux 2.6.15, stripped</pre>						

Related	Command	Description
Commands	N/A	N/A

Platform N/A  
Description

## 4.7 file prompt

Use this command to set the prompt mode.

**file prompt** [ **noisy** | **quiet** ]

Parameter	Parameter	Description
Description	<b>noisy</b>	Displays prompt for all operation.
	<b>quiet</b>	Displays prompt rarely.

Defaults The default mode is noisy.

Command Privileged EXEC mode  
Mode

Usage Guide N/A

Configuration The following example sets the prompt mode to noisy.

Examples Ruijie#file prompt noisy

Related	Command	Description
Commands	N/A	N/A

Platform N/A  
Description

## 4.8 mkdir

Use this command to create a directory.

**mkdir** [ *filesystem:* ] *directory*

Parameter	Parameter	Description
Description	<i>filesystem:</i>	The URL of file system, followed by a colon (:). The file system includes <b>flash:</b> , <b>usb:</b> and <b>tmp:</b> .
	<i>directory</i>	The path name. A file name starts with "/" is an absolute path. Otherwise, it is a relative path.

Defaults The default *filesystem:* is **flash:**.

The default *directory* is the root directory.

**Command** Privileged EXEC mode.

**Mode**

### Usage Guide

**Configuration** The following example creates a directory named newdir:

### Examples

```
Ruijie#dir
Directory of flash:/
 1  -rw-      336   Jan 03 2012 18:53:42  fstab
 2  -rw-     4096   Jan 03 2012 12:32:09  rc.d
 3  -rw-   10485760   Jan 03 2012 18:13:37  rpmdb
3 files, 0 directories
10,490,132 bytes total (13,192,656 bytes free)
Ruijie#mkdir newdir
Created dir flash:/newdir
Ruijie#dir
Directory of flash:/
 1  -rw-      336   Jan 03 2012 18:53:42  fstab
 2  -rw-     4096   Jan 03 2012 12:32:09  rc.d
 3  -rw-   10485760   Jan 03 2012 18:13:37  rpmdb
 4  drw-     4096   Jan 03 2012 18:13:37  newdir
3 files, 1 directories
10,494,228 bytes total (13,188,560 bytes free)
```

Related Commands	Command	Description
	<b>rmdir</b>	Deletes the directory.
	<b>pwd</b>	Displays the present directory.

**Platform** N/A

**Description**

## 4.9 more

Use this command to display the content of a file.

**more** [ */ascii* | */binary* ] [ *filesystem:* ] *file-url*

Parameter Description	Parameter	Description
	<i>/ascii</i>	Displays the file content in the ASCII format.
	<i>/binary</i>	Displays the file content in the
	<i>filesystem:</i>	The URL of file system, followed by a colon (:). The file system includes <b>flash:</b> , <b>usb:</b> and <b>tmp:</b> .
	<i>file-url</i>	The file name containing the path. A file name starts with "/" is an



	absolute path. Otherwise, it is a relative path.
--	--

**Defaults** The file is displayed in its own format by default.

**Command Mode** Privileged EXEC mode

**Usage Guide** N/A

**Configuration** The following example displays the content of the netconfig file under root directory of FLASH disk.

**Examples**

```
Ruijie#more flash:/netconfig
#
# The network configuration file. This file is currently only used in
# conjunction with the TI-RPC code in the libtirpc library.
#
# Entries consist of:
#
#      <network_id> <semantics> <flags> <protofamily> <protoname> \
#      <device> <nametoaddr_libs>
#
# The <device> and <nametoaddr_libs> fields are always empty in this
# implementation.
#
udp      tpi_clts      v      inet      udp      -      -
tcp      tpi_cots_ord v      inet      tcp      -      -
udp6     tpi_clts      v      inet6     udp      -      -
tcp6     tpi_cots_ord v      inet6     tcp      -      -
rawip    tpi_raw       -      inet      -        -      -
local    tpi_cots_ord -      loopback  -        -      -
```

Related Commands	Command	Description
	N/A	N/A

**Platform Description** N/A

## 4.10 pwd

Use this command to display the working path.

**pwd**

Parameter Description	Parameter	Description
	N/A.	N/A.

**Defaults** N/A.

## Usage Guide

## Configuration

## Examples

Related Commands	Command	Description
	<b>cd</b>	Changes the file system in the present directory.

**Platform** N/A.

## Description

# 4.11 rename

Use this command to move or rename the specified file.

**rename** *src-url dst-url*

Parameter	Parameter	Description
<b>Description</b>	<i>src-url</i>	The source file URL to move.
	<i>dst-url</i>	The URL of the destination file or directory.

**Defaults** N/A.

**Command Mode** Privileged EXEC mode.

**Usage Guide** N/A

**Configuration Examples** The following example renames the fstab file in the root directory on the FLASH disk as new-fstab.

```
Ruijie#dir
Directory of flash:/
 1  -rw-      336   Jan 03 2012 18:53:42  fstab
 2  -rw-     4096   Jan 03 2012 12:32:09  rc.d
 3  -rw-   10485760   Jan 03 2012 18:13:37  rpmdb
3 files, 0 directories
10,490,192 bytes total (13,192,656 bytes free)
Ruijie#rename flash:/fstab flash:/new-fstab
Renamed file flash:/new-fstab
Ruijie#dir
Directory of flash:/
 1  -rw-      336   Jan 03 2012 18:53:42  new-fstab
 2  -rw-     4096   Jan 03 2012 12:32:09  rc.d
```

```
3  -rw-   10485760   Jan 03 2012 18:13:37  rpmdb
3 files, 0 directories
10,490,192 bytes total (13,192,656 bytes free)
```

#### Related Commands

Command	Description
<b>delete</b>	Deletes the file.
<b>copy</b>	Copies the file.

**Platform** N/A  
**Description**

## 4.12 rmdir

Use this command to delete an empty directory.

**rmdir** [ *filesystem:* ] *directory*

#### Parameter Description

Parameter	Description
<i>filesystem:</i>	The URL of file system, followed by a colon (:). The file system includes <b>flash:</b> , <b>usb:</b> and <b>tmp:</b> .
<i>directory</i>	The path name. A file name starts with "/" is an absolute path. Otherwise, it is a relative path.

**Defaults** The default *filesystem:* is **flash:**.

**Command** Privileged EXEC mode.  
**Mode**

#### Usage Guide

**Configuration** The following example deletes the null test directories.

#### Examples

```
Ruijie#mkdir newdir
Ruijie#dir
Directory of flash:/
1  -rw-       336   Jan 03 2012 18:53:42  fstab
2  -rw-      4096   Jan 03 2012 12:32:09  rc.d
3  -rw-   10485760   Jan 03 2012 18:13:37  rpmdb
4  drw-      4096   Jan 03 2012 18:13:37  newdir
3 files, 1 directories
10,494,228 bytes total (13,188,560 bytes free)
Ruijie#rmdir newdir
removed dir flash:/newdir
Ruijie#dir
Directory of flash:/
1  -rw-       336   Jan 03 2012 18:53:42  fstab
```

```

2  -rw-      4096   Jan 03 2012 12:32:09  rc.d
3  -rw-  10485760   Jan 03 2012 18:13:37  rpmdb
3 files, 0 directories
10,490,132 bytes total (13,192,656 bytes free)

```

Related	Command	Description
Commands	N/A.	N/A.

**Platform** N/A.

**Description**

## 4.13 show disk

Use this command to display USB/Flash information.

**show disk** *usb/flash*

Parameter	Parameter	Description
Description	<b>usb</b>	Displays USB information.
	<b>flash</b>	Displays FLASH information.

**Defaults** N/A

**Command Mode** User EXEC mode/Privileged EXEC mode/Global configuration mode/Interface configuration mode

**Usage Guide** N/A

**Configuration** The following example displays USB information.

**Examples**

```

Ruijie#show disk usb
Disk /dev/sdb: 8159 MB, 8159477760 bytes
252 heads, 62 sectors/track, 1020 cylinders
Units = cylinders of 15624 * 512 = 7999488 bytes

The following example displays FLASH information.

Ruijie#show disk flash
Nand flash size: 512MB
Nor flash size: 1MB

```

Related	Command	Description
Commands	N/A	N/A

**Platform** N/A

**Description**

## 4.14 show file systems

Use this command to display the file system information.

**show file systems**

Parameter	Parameter	Description
Description	N/A.	N/A.

**Defaults** N/A.

**Command Mode** User EXEC mode/Privileged EXEC mode/Global configuration mode/Interface configuration mode

### Usage Guide

**Configuration** The following example displays the file system information:

### Examples

```
Ruijie#show file systems
```

Size (KB)	Free (KB)	Type	Flags	Prefixes
NA	NA	ram	rw	tmp:
NA	NA	network	rw	tftp:
NA	NA	network	rw	oob_tftp:
NA	NA	xmodem	rw	xmodem:
8192	2416	disk	rw	flash:
1048576	548576	disk	rw	usb0:

Field	Description
Size(KB)	File system space, in the unit of KB.
Free(KB)	Available file system space, in the unit of KB.
Type	File system type
Flags	Permissions on the file system include: <ul style="list-style-type: none"><li>● ro: read-only</li><li>● wo: write-only</li><li>● rw: read and write</li></ul>
Prefixes	File system prefix

Related Commands	Command	Description
	N/A.	N/A.

**Platform** N/A.

**Description**

## 4.15 show mount

Use this command to display the mounted information.

**show mount**

Parameter	Parameter	Description
Description	N/A	N/A

**Defaults** N/A

**Command Mode** User EXEC mode/Privileged EXEC mode/Global configuration mode/Interface configuration mode

**Usage Guide** N/A

**Configuration** The following example displays the mounted information.

**Examples**

```
Ruijie#show mount
/dev/sda1 on / type ext4 (rw,errors=remount-ro,commit=0)
proc on /proc type proc (rw,noexec,nosuid,nodev)
sysfs on /sys type sysfs (rw,noexec,nosuid,nodev)
fusectl on /sys/fs/fuse/connections type fusectl (rw)
none on /sys/kernel/debug type debugfs (rw)
none on /sys/kernel/security type securityfs (rw)
udev on /dev type devtmpfs (rw,mode=0755)
devpts on /dev/pts type devpts (rw,noexec,nosuid,gid=5,mode=0620)
tmpfs on /run type tmpfs (rw,noexec,nosuid,size=10%,mode=0755)
none on /run/lock type tmpfs (rw,noexec,nosuid,nodev,size=5242880)
none on /run/shm type tmpfs (rw,nosuid,nodev)
/dev/sda3 on /hao-share type ext3 (rw,commit=0)
binfmt_misc on /proc/sys/fs/binfmt_misc type binfmt_misc
(rw,noexec,nosuid,nodev)
```

Field	Description
proc	Source address of mount.
on	-
/proc	Destination address of mount.
type	-
proc	Mount type.
(rw,noexec,nosuid,nodev)	Mount property.

Related Commands	Command	Description
	N/A	N/A

**Platform Description** N/A

## 4.16 tftp-client source

Use this command to bind a source IP address or source interface with a TFTP client. Use the **no** or **default** form of this command to restore the default setting.

**tftp-client source** { **ip** *ip-address* | **ipv6** *ipv6-address* | *interface* }

**no tftp-client source** { **ip** *ip-address* | **ipv6** *ipv6-address* | *interface* }

**default tftp-client source** { **ip** *ip-address* | **ipv6** *ipv6-address* | *interface* }

Parameter	Parameter	Description
Description	<i>ip-address</i>	Specifies the IPv4 source address.
	<i>ipv6-address</i>	Specifies the IPv6 source address.
	<i>interface</i>	Specifies the source interface

**Defaults** No source interface or IP address is bound with the TFTP client by default.

**Command Mode** Global configuration mode

**Usage Guide** N/A

**Configuration Examples** The following example binds source IP address 192.168.23.236 with the TFTP client.

```
Ruijie(config)# tftp-client source ip 192.168.23.236
```

The following example binds source IPv6 address 2003:0:0:0::2 with the TFTP client.

```
Ruijie(config)# tftp-client source ipv6 2003:0:0:0::2
```

The following example binds source interface gigabitEthernet 0/0 with the TFTP client.

```
Ruijie(config)# tftp-client source gigabitEthernet 0/0
```

The following example removes the configuration.

```
Ruijie(config)# no tftp-client source ip 192.168.23.236
```

The following example restores the default setting.

```
Ruijie(config)# default tftp-client source ip 192.168.23.236
```

Related Commands	Command	Description
	N/A	N/A

**Platform Description** N/A

## 4.17 tree

Use this command to display the file tree of the current directory.

**tree** [ *filesystem:* ] [ *directory* ]

Parameter	Parameter	Description
-----------	-----------	-------------

<b>Description</b>	<i>filesystem:</i>	The URL of file system, followed by a colon (:). The file system includes <b>flash:</b> , <b>usb:</b> and <b>tmp:</b> .
	<i>directory</i>	The path name. A file name starts with "/" is an absolute path. Otherwise, it is a relative path.

**Defaults**      The default *filesystem:* is **flash:**.

**Command Mode**      User EXEC mode/Privileged EXEC mode

**Usage Guide**      N/A

**Configuration**      The following example displays the file tree of flash:/echo

**Examples**

```
Ruijie#tree flash:/echo
+-- client_module
+-- client_userspace
+-- echo_cli.c
+-- echo_client.c
+-- echo_client.h
+-- echo_client.o
+-- echo_cli.o
+-- echo_flag.h
+-- echo.h
+-- echo.ko
+-- echo_server.h
+-- exec_set_echo.h
+-- exec_show_echo.h
+-- Makefile
+-- module
|   +-- echo.ko
|   +-- echo.mod.c
|   +-- echo.mod.o
|   +-- echo_module.c
|   +-- echo_module.o
|   +-- echo.o
|   +-- echo_server.c
|   +-- echo_server.o
|   +-- echo_sysfs.c
|   +-- echo_sysfs.h
|   +-- echo_sysfs.o
|   +-- Makefile
|   +-- modules.order
|   +-- Module.symvers
|   +-- msg_fd.c
```



```

|   +-- msg_fd.o
+-- readme
+-- server_module
+-- server_userspace
+-- sys_rgos.ko
+-- user_space
    +-- echo_server.c
    +-- echo_server.o
    +-- Makefile
    +-- msg_fd.c
    +-- msg_fd.o 10,490,132 bytes total (13,192,656 bytes free)

```

Related	Command	Description
Commands	N/A	N/A

**Platform** N/A

**Description**

## 4.18 verify

Use this command to compute, display and verify Message Digest 5 (MD5).

**verify** [ **/md5** *md5-value* ] *filesystem:* [ *file-url* ]

Parameter	Parameter	Description
Description	<b>/md5</b>	Computes and displays MD5.
	<b>md5-value</b>	The file MD5, which is compared with the computed MD5.
	<i>filesystem:</i>	The URL of file system, followed by a colon (:). The file system includes <b>flash:</b> , <b>usb:</b> and <b>tmp:</b> .
	<i>file-url</i>	The file name containing the path. A file name starts with "/" is an absolute path. Otherwise, it is a relative path.

**Defaults** The default *filesystem:* is **flash:**.

**Command Mode** Privileged EXEC mode.

**Usage Guide** N/A

**Configuration** The following example computes MD5 of flash:/gcc.

**Examples**

```

Ruijie#verify flash:/gcc
8b072de7db7affd8b2ef824e7e4d716c

```

The following example computes MD5 and makes a comparison.

```

Ruijie#verify /md5 8b072de7db7affd8b2ef824e7e4d716c flash:/gcc
%SUCCESS verifying flash:/gcc = 8b072de7db7affd8b2ef824e7e4d716c

```

```
Ruijie#verify /md5 8b072de7db7affd8b2ef824e7e4d71 flash:/gcc
>Error verifying flash:/gcc
Computed signature = 8b072de7db7affd8b2ef824e7e4d716c
Submitted signature = 8b072de7db7affd8b2ef824e7e4d71
```

Related Commands	Command	Description
	N/A	N/A

**Platform** N/A

**Description**



## 5 SYS Commands

### 5.1 calendar set

Use this command to set the hardware calendar.

**calendar set** { *hour* [ *:minute* [ *:second* ] ] } [ *month* [ *day* [ *year* ] ] ]

#### Parameter Description

Parameter	Description
<i>hour</i> [ <i>:minute</i> [ <i>:second</i> ] ]	Sets hardware time in the format of hour: minute: second. Only the specified parameters (hour, minute, or second) can be reset. The unspecified parameters keep the current system values.
<i>month</i>	Sets month. The range is from 1 to 12.
<i>day</i>	Sets date. The range is from 1 to 31. If the day does not exist in the current month, the date is calculated backward.
<i>year</i>	Sets year. The range is from 1970 to 2069.

#### Defaults

-

#### Command Mode

Privileged EXEC mode

#### Default Level

-

#### Usage Guide

1. The time parameter is mandatory. After setting time, set month, day, and year, which can be neglected according to your needs. The parameter that is neglected keeps the current system value. For example, if the current hardware time is "2012-02-29 09:33:44" and you want to change month and hour and keep values of other parameters, use the **calendar set 12 5** command to change the current time into "2012-05-29 12:33:44".
2. If the value of parameter *day* is between 1 and 31, but the current month does not contain that day, the value will be calculated backward. For example, February 2012 has 29 days. If you use the **calendar set 11:30 2 31 2012** command to set the date to February 31, by default, the system adds two days backwards. Therefore, the current hardware time is "2012-03-02 11:30:23".



The hardware time of the system is used as the UTC time, while the software time of the system refers to the local time of the device.

#### Configuration Examples

The following example changes the current hardware time of the system (for example, 2012-02-01 18:23:06) into 6 o'clock and keeps the values of other parameters.


```
Ruijie# calendar set 6
06:41:39 UTC Fri, Jul 6, 2012
```

The following example changes the current hardware time of the system (for example, 2012-02-01 18:23:06) into 06:42 and keeps the values of other parameters.

```
Ruijie# calendar set 6:42
06:42:27 UTC Fri, Jul 6, 2012
```

The following example changes the current hardware time of the system (for example, 2012-02-01 18:23:06) into March 2 and keeps the values of other parameters.

```
Ruijie# calendar set 18 3 2
18:43:05 UTC Fri, Mar 2, 2012
```

 Because the *hour* parameter is mandatory, set it to the current time if you do not need to change its value. As shown in the last example, enter **18** (hour), and then enter **3** (month) and **2** (day).

**Check Method** -

**Platform** -  
**Description**

## 5.2 clock read-calendar

Use this command to enable the system to synchronize the software time with the hardware time.

**clock read-calendar**

Parameter Description	Parameter	Description
	-	-

**Defaults** -

**Command** Privileged EXEC mode  
**Mode**

**Default Level** -

**Usage Guide** After you configure this command, the system will synchronize the software time with the current hardware time according to the time zone and summer time settings of the device.

**Configuration** The following example enables the system to synchronize the software time with the hardware time.  
**Examples**

```
Ruijie# clock read-calendar
Set the system clock from the hardware time.
```

**Check Method** -

**Platform** -

## Description

## 5.3 clock set

Use this command to set the system software clock.

**clock set** { *hour* [ *:minute* [ *:second* ] ] } [ *month* [ *day* [ *year* ] ] ]

Parameter  
Description

Parameter	Description
<i>hour</i> [ <i>:minute</i> [ <i>:second</i> ] ]	Sets software time in the format of hour: minute: second. Only the specified parameters (hour, minute, or second) can reset. The unspecified parameters keep the current system values.
<i>month</i>	Sets month. The range is from 1 to 12.
<i>day</i>	Sets date. The range is from 1 to 31. If the day does not exist in the current month, the date is calculated backward.
<i>year</i>	Sets year. The range is from 1970 to 2069.

## Defaults

-

Command  
Mode

Privileged EXEC mode

## Default Level

-

## Usage Guide

1. The time parameter is mandatory. After setting time, set month, day, and year, which can be neglected according to your needs. The parameter that is neglected keeps the current system value.



For example, if the current hardware time is "2012-02-29 09:33:44" and you want to change month and hour and keep values of other parameters, use the **clock set 12 5** command to change the current time into "2012-05-29 12:33:44".

2. If the value of parameter *day* is between 1 and 31, but the current month does not contain that day, the value will be calculated backward.



For example, February 2012 has 29 days. If you use the **clock set 11:30 2 31 2012** command to set the date to February 31, by default, the system adds two days backward. Therefore, the current hardware time is "2012-03-02 11:30:23".

Configuration  
Examples

The following example changes the current software time of the system (for example, 2012-02-01 18:23:06) into 6 o'clock and keeps the values of other parameters.

```
Ruijie# clock set 6
06:48:13 CST Fri, Mar 2, 2012
```


The following example changes the current software time of the system (for example, 2012-02-01

18:23:06) into 06:42 and keeps the values of other parameters.

```
Ruijie# clock set 6:42
06:42:31 CST Fri, Mar 2, 2012
```

The following example changes the current software time of the system (for example, 2012-02-01 18:23:06) into March 2 and keeps the values of other parameters.

```
Ruijie# clock set 18 3 2
18:42:48 CST Fri, Mar 2, 2012
```

 Because the *hour* parameter in this command is mandatory, set it to the current time if you do not need to change its value. As shown in the last example, enter **18** (hour), and then enter **3** (month) and **2** (day).

**Check Method** -

**Platform** -

**Description** -

## 5.4 clock summer-time

Use this command to set the summer time.

**clock summer-time** *zone* **start** *start-month* [*week*|**last**] *start-date hh:mm* **end** *end-month* [*week*|**last**] *end-date hh:mm* [**ahead** *hours-offset* [*minutes-offset* ]

Use this command to disable the summer time.

**no clock summer-time**

**Parameter  
Description**

Parameter	Description
<b>zone</b>	Summer time name. It can only be a letter between A and Z or between a and z, which is not case sensitive. The summer time name contains 3 to 31 characters.
<b>start</b>	Indicates the start time of the summer time.
<i>start-month</i>	Start month. Value range: January, February, March, April, May, June, July, August, September, October, November, and December. The value is not case sensitive and you are allowed to enter an incomplete word, for example, Febr and FebRu.
<i>week</i>	Start week in the start month. The range is from 1 to 5.
<b>last</b>	The last week of the specified month.
<i>start-date</i>	Day in the start week of the start month. Value range: Sunday, Monday, Tuesday, Wednesday, Thursday, Friday, and Saturday. The value is not case sensitive and you are allowed to enter an incomplete word, for example, Web and WeDne.
<b>hh:mm</b>	Time, in the format of hour : minute.
<b>end</b>	Indicates the end time of the summer time.
<i>end-month</i>	End month. Value range: January, February, March, April, May, June, July, August, September, October, November, and December. The value is not case sensitive and you may enter an incomplete word, for example, Febr and FebRu.
<b>ahead</b>	Indicates how much time for the summer time ahead of the standard time during the effective period of the summer time. By default, the summer time is one hour ahead of the standard time.
<i>hours-offset</i>	Hours ahead of the standard time. The range is from 0 to 12. You are not allowed to set it to 00:00.
<i>minutes-offset</i>	Minutes ahead of the standard time. The range is from 0 to 59. If <i>hours-offset</i> has been set to 0, you are not allowed to set <i>minutes-offset</i> to 0.

**Defaults** -

**Command Mode** Global configuration mode

**Default Level** -

**Usage Guide**

**Configuration Examples** Assume that the time zone name of your living place is ABC and the standard time is 8:15 ahead of UTC, namely, GMT+08:15. The summer time period starts from the first Saturday in February to the third Monday in May and the summer time is 01:20 ahead of the standard time. In this case, the summer time is



09:35 ahead of the UTC time, but non-summer time is still 08:15 ahead of the UTC time.

```
Ruijie(config)# clock timezone ABC 8 15
Set time zone name: ABC (GMT+08:15)
Ruijie(config)#show clock
16:39:16 ABC Wed, Feb 29, 2012
Ruijie(config)#show calendar
08:24:35 GMT Wed, Feb 29, 2012

Ruijie(config)# clock summer-time TZA start Feb 1 sat 2:00 end May 3 Monday 18:30 ahead 1 20
*May 10 03:45:58: %SYS-5-CLOCKUPDATE: Set summer-time: TZA from February the 1st Saturday at 2:00
TO May the 3rd Monday at 18:30, ahead 1 hour 20 minute
Set summer-time: TZA from February the 1st Saturday at 2:00 TO May the 3rd Monday at 18:30, ahead
1 hour 20 minute

Ruijie# show clock
18:00:08 TZA Wed, Feb 29, 2012

# If the time is set to non-summer time, the time zone name is restored to ABC.
Ruijie#clo set 18 1 1
*Jan 1 18:00:09: %SYS-5-CLOCKUPDATE: Set system clock: 18:00:09 ABC Sun, Jan 1, 2012
Set system clock: 18:00:09 ABC Sun, Jan 1, 2012
Ruijie#show clock
18:00:12 ABC Sun, Jan 1, 2012
```

If the system uses the default summer time that is one hour ahead of the standard time, ahead and the parameters behind ahead can be neglected. For example, set the summer time to start from 2:00 a.m. of the first Sunday in April to 2:00 a.m. of the last Sunday in October and set the summer time to one hour ahead of the standard time.

```
Ruijie(config)#clo summer-time PDT start April 1 sunday 2:00 end October last Sunday 2:00
*May 10 03:15:05: %SYS-5-CLOCKUPDATE: Set summer-time: PDT from April the 1st Sunday at 2:00 TO
October the last Sunday at 2:00, ahead 1 hour
Set summer-time: PDT from April the 1st Sunday at 2:00 TO October the last Sunday at 2:00, ahead
1 hour
```

The following example disables summer time.

```
Ruijie(config)#no clock summer-time
*Jan 1 18:01:09: %SYS-5-CLOCKUPDATE: Set no summer time.
Set no summer time.
```

**Check Method**

-

**Platform**

-

**Description**

## 5.5 clock timezone


Use this command to set the time zone.

**clock timezone** [ *name* *hours-offset* [ *minutes-offset* ] ]

Use this command to remove the time zone settings.

**no clock timezone**

### Parameter Description

Parameter	Description
<i>name</i>	Time zone name. It can only be a letter between A and Z or between a and z, which is not case sensitive. The name contains 3 to 31 characters.
<i>hours-offset</i>	Hours of time difference. It indicates whether the time is faster or smaller than the hardware UTC time. The range is from -12 to 12. The negative digit indicates that the time is slower than the hardware time, while the positive digit indicates that the time is faster than the hardware time.   If the time is slower than the UTC time, add "-" before <i>hours-offset</i> .
<i>minutes-offset</i>	Minutes of time difference. The range is from 0 to 59.

### Defaults

-

### Command Mode

Global configuration mode

### Default Level

-

### Usage Guide

### Configuration Examples

The following example sets the time zone name to CST. The software time is 8 hours faster than the hardware time.

```
Ruijie(config)# clock timezone CST 8
Set time zone name: CST (GMT+08:00)

Ruijie# show clock
18:00:17 CST Wed, Dec 5, 2012
```

The following example sets the time zone name TZA. The software time is 06:13 slower than the hardware time.

```
Ruijie(config)# clock timezone TZA -6 13
Set time zone name: TZA (GMT-06:13)
```

The following example removes the time zone settings.

```
Ruijie(config)# no clock timezone
```

```
Set no clock timezone.
```

**Check Method** -

**Platform** -

**Description**

## 5.6 clock update-calendar

Use this command to enable the system to synchronize the hardware time with the software time.

**clock update-calendar**

Parameter Description	Parameter	Description
	-	-

**Defaults** -

**Command  
Mode** Privileged EXEC mode

**Default Level** -

**Usage Guide** After you configure this command, the system will synchronize the hardware time with the current software time according to the time zone and summer time settings of the device.

**Configuration** The following example enables the system to synchronize the hardware time with the software time.

**Examples**

```
Ruijie# clock update-calendar
Set the hardware time from the system clock.
```

The following example sets the time zone of the hardware time to GMT+5:10, which indicates that the hardware time is 5:10 slower than the software time. The summer time is not set.

```
Ruijie# show clock
09:30:21 TSZ Wed, Feb 29, 2012
```

```
Ruijie# clock update-calendar
Set the hardware time from the system clock.
```

```
Ruijie#show calendar
04:20:25 UTC Wed, Feb 29, 2012
```

The following example sets the hardware time. If it is set to GMT+5:10 and the summer time is set to be 1:15 faster from the first Monday in February 1 to the second Sunday in June 1, it indicates that the hardware time is 6:25 slower than the software time during the effective period of the summer time.

```
Ruijie# show clock
09:30:02 TSZ Wed, Feb 29, 2012

Ruijie# clock update-calendar
Set the hardware time from the system clock.

Ruijie#show calendar
03:05:08 UTC Wed, Feb 29, 2012
```

**Check Method** -

**Platform** -

**Description** -

## 5.7 cpu high-watermark set

Use this command to set the high watermark of the CPU usage of the control core and enable CPU usage monitoring.

**cpu high-watermark set** [ [ **high** *high-value* ] [ **range** *range-value* ] ]

Use this command to disable CPU usage monitoring.

**no cpu high-watermark set**

Use this command to restore the default settings.

**default cpu high-watermark set**

Parameter Description	Parameter	Description
	<b>high</b> <i>high-value</i>	Sets the high watermark of the CPU usage. The range is from 2 to 99.
	<b>range</b> <i>range-value</i>	Sets the watermark fluctuation range. The range is from 1 to 20.
<b>Defaults</b>	By default, the watermark of the CPU usage is 80% and the watermark fluctuation range is 5% (namely, the range of the CPU usage watermark is from 75% and 85%).	
<b>Command Mode</b>	Global configuration mode	
<b>Default Level</b>	-	
<b>Usage Guide</b>	You can use this command to set the high watermark of the CPU usage and enable CPU usage monitoring. When detecting that the CPU usage exceeds the fluctuation range of the highest watermark, the system prints prompts.	
<b>Configuration Examples</b>	The following example sets the CPU usage watermark to the default value and enables CPU usage monitoring (if it is disabled).	
	<pre>Ruijie(config)# default cpu high-watermark set Reset default cpu watermark monitor set system cpu watermark high 80%(75~85%)</pre>	
	The following example disables CPU usage monitoring.	
	<pre>Ruijie(config)# no cpu high-watermark set Close cpu watermark monitor</pre>	
	The following example enables CPU usage monitoring. Keep the defined watermark value.	
	<pre>Ruijie(config)# cpu high-watermark set Open cpu watermark monitor set system cpu watermark high 80%(75~85%)</pre>	
	The following example enables CPU usage monitoring and sets the high watermark to 88% and fluctuation range to 3%.	
	<pre>Ruijie(config)# cpu high-watermark set high 88 range 3 Open cpu watermark monitor set system cpu watermark high 88%(85~91%)</pre>	
	In this case, the high watermark is set to 88%. The upper limit of the high watermark is 91% (88%+3%) and the lower limit is 85% (88%-3%).	
	-	
<b>Check Method</b>	-	
<b>Prompt Message</b>	If the high watermark of the CPU usage is allowed to fluctuate from 85% to 91%, the system will print the following warning message when the CPU usage exceeds the upper limit of the high watermark:	
	<pre>*Jan 19 16:23:01: %RG_SYSMON-4-CPU_WATERMARK_HIGH: warning! system cpu usage above high</pre>	

```
watermark(85%),current cpu usage 100%
```

When the CPU usage is less than the lower limit of the high watermark, the system will print the following message about warning release:

```
*Jan 20 07:02:52: %RG_SYSMON-5- CPU_WATERMARK:withdraw warning! system cpu usage below high watermark(85%), current cpu usage 36%
```

**Platform**

-

**Description**

## 5.8 memory history clear

Use this command to clear the history of the memory usage.

**memory history clear [ one-forth | half | all ]**

**Parameter  
Description**

Parameter	Description
<b>one-forth</b>	Clears one fourth entries.
<b>half</b>	Clears a half of entries.
<b>all</b>	Clears all the entries.

**Defaults**

-

**Command  
Mode**

Global configuration mode

**Default Level**

-

**Usage Guide**

-

**Configuration**

The following example clears a half of the history of the memory usage.

**Examples**

```
Ruijie# show memory history

Time Thu Jan  1 00:24:45 1970
Used(k) 148516
Maxinum memory users for this period
Process Name    Holding
tcpip.elf       270028
cli-memory      60600
rg_syslogd      36640

Time Thu Jan  1 00:24:41 1970
Used(k) 148492
Maxinum memory users for this period
Process Name    Holding
```

```

tcpip.elf      270028
cli-memory     52408
rg_syslogd     36640

Time Thu Jan  1 00:24:41 1970
Used(k) 148444
Maxinum memory users for this period
Process Name   Holding
tcpip.elf      270028
cli-memory     44088
rg_syslogd     36640

Ruijie(config)#memory history clear half
2 out of 5 records in the history table to be cleared...
Clear done !

```

**Check Method** -

**Prompt** -

**Message** -

**Platform** -

**Description** -

## 5.9 memory low-watermark set

Use this command to set the low watermark threshold of the memory and enable the memory low watermark detection.

**memory low-watermark set** *mem-value*

Use the **no** or **default** form of this command to disable the detection of memory low watermark.

**no memory low-watermark set**

**Parameter  
Description**

Parameter	Description
<i>mem-value</i>	Memory watermark threshold. The range is from 1 KB to 4,294,967,295 KB.

**Defaults** By default, the detection of memory low watermark is disabled.

**Command  
Mode** Global configuration mode

**Default Level** -

**Usage Guide** You can use this command to enable the detection of the memory low watermark and set the memory watermark threshold. When the system memory is less than this threshold, the system will print prompts.

**Configuration Examples** The following example sets the low watermark threshold of the memory to 500,000 KB and enables detection.

```
Ruijie(config)#memory low-watermark 500000
```

**Check Method** -

**Prompt Message**

**Platform Description** -

## 5.10 reload

Use this command to reload the device.

**reload** [ **at** { *hour* [ *:minute* [ *:second* ] ] } [ *month* [ *day* [ *year* ] ] ]

Parameter Description	Parameter	Description
	<i>hour</i> [ <i>:minute</i> [ <i>:second</i> ] ]	Sets the restart time in the format of hour : minute : second. Other neglected parameters keep the current system values.
	<i>month</i>	Sets the month, in the range from 1 to 12.
	<i>day</i>	Sets the day, in the range from 1 to 31.
	<i>year</i>	Sets the year, in the range from 1970 to 2069.

**Defaults** -

**Command Mode** Privileged EXEC mode

**Default Level** -

**Usage Guide** -

**Configuration Examples** The following example reloads the device.

```
Ruijie# reload
Reload system?(Y/N) Y
Sending all processes the TERM signal... [ OK ]
Sending all processes the KILL signal... [ OK ]
Restarting system...
```



**Check Method** -

**Prompt Message** -

**Platform Description** -

## 5.11 show calendar

Use this command to display the hardware calendar.

**show calendar**

Parameter Description	Parameter	Description
	-	-

**Command Mode** Privileged EXEC mode/ global configuration mode

**Default Level** -

**Usage Guide** -

**Configuration Examples** The following example displays the hardware calendar.

```
Ruijie# show calendar
21:57:48 GMT Sun, Feb 28, 2012
```

**Prompt Message** -

**Platform Description** -

## 5.12 show clock

Use this command to display the system software clock.

**show clock**

Parameter Description	Parameter	Description
	-	-

**Command Mode** Privileged EXEC mode / global configuration mode

**Default Level** -

**Usage Guide** -

**Configuration Examples** The following example displays the software clock when the time zone is disabled.

```
Ruijie# show clock
18:22:20 UTC Tue, Dec 11, 2012
```

The following example displays the software clock when the time zone is enabled.

```
Ruijie# show clock
03:07:49 TSZ Wed, Feb 29, 2012
```

**Prompt Message** -

**Platform Description** -

## 5.13 show cpu

Use this command to display the information on the system task running on the control core instead of the non-virtual core.

**show cpu**

Parameter Description	Parameter	Description
	-	-

**Command Mode** Privileged EXEC mode/ global configuration mode

**Default Level** -

**Usage Guide** If the system is equipped with a virtual core, you can use the **show processes cpu** command to check the CPU usage of the virtual core.

**Configuration Examples** The following example displays the information on the system task running on the control core instead of the non-virtual core.

```
Ruijie#show cpu
=====
CPU Using Rate Information
```

```
CPU utilization in five seconds:  4.80%
CPU utilization in one minute:    4.10%
CPU utilization in five minutes:  4.00%
```

```
NO      5Sec    1Min    5Min Process
  1    0.00%   0.00%   0.00% init
  2    0.00%   0.00%   0.00% kthreadd
  3    0.00%   0.00%   0.00% ksoftirqd/0
  4    0.00%   0.00%   0.00% events/0
```

```
--More--
```

**Prompt**

-

**Message**

**Platform**

-

**Description**

## 5.14 show memory

Use this command to display the system memory.

**show memory** [ **sorted total** | **history** | **low-watermark** | *process-id* | *process-name* ]

**Parameter  
Description**

Parameter	Description
<b>sorted total</b>	Ranked according to the memory usage.
<b>history</b>	Displays the history of memory usage.
<b>low-watermark</b>	Displays the memory low watermark threshold of the system.
<i>process-id</i>	Displays the memory usage of the task specified by <i>process-id</i> .
<i>process-name</i>	Displays the memory usage of the task specified by <i>process-name</i> .

**Command  
Mode**

Privileged EXEC mode/ global configuration mode

**Default Level**

-

**Usage Guide**

Every time when the **show memory history** command is used, the number of displayed entries increases by one. Up to 10 entries can be displayed. You can use the **memory history clear** command to clear history entries.

**Configuration  
Examples**

The following example displays the memory usage of each task and the ranking (based on the total memory usage).

```
Ruijie# show memory sorted
```

```
System Memory: 508324K total, 481560K used, 26764K free, 31.5% used rate
```

```
Used detail: 149112K active, 247776K inactive, 30460K mapped, 50460K slab, 3752K others
```

```

PID      Text (K)  Rss (K)  Data (K)      Stack (K)  Total (K)      Process
807      1568      4584     264728        84         270028        tcpip.elf
854       40       1436     246076        84         248840        cli-fileSystem
1237     52       1492     123260        84         126036        cli-memory
803       56       1104     74064         84         76920         ping.elf
727       84       1276     33812         84         36640         rg_syslogd
733       84       796     33536         84         36364         rg_syslogd
776      224      1416     16896         84         19800         lsmdemo
858       40      1324     16844         84         19612         rg-tty-admin
769       40      3600     11052         84         13812         skbdemo
--More--

```

Description of some keywords in the command:

Keyword	Description
total	Total system memory
used	Used memory
free	Remaining memory
used rate	Memory usage (percentage)
Active	Active page
inactive	Inactive page
mapped	Mapped memory
slab	Memory consumed by Slab
others	Memory capacity of the used memory except the memory used by active and inactive pages, mapped memory, and slab memory.

Description of the displayed information on each task:

Field	Description
PID	Process ID
Text	Code segment size
Rss	Resident memory size
Data	Data segment size
Stack	Stack size
Total	Total used memory
Process	Task name

**Prompt**

-

**Message**

**Platform**

-

**Description**

## 5.15 show pci-bus

Use this command to display the information on the device mounted to the PCI bus.

**show pci-bus**

Parameter Description	Parameter	Description
	-	-

**Command Mode** Privileged EXEC mode/ global configuration mode

**Default Level** -

**Usage Guide** -

**Configuration Examples** The following example displays the information on the device mounted to the PCI bus.

```
Ruijie# show pci-bus
N0:0
Vendor ID      : 0x1131
Device ID      : 0x1561
Domain:bus:dev.func : 0000:00:05.0
Status / Command : 0x2100000
Class / Revision : 0xc031030
Latency        : 0x0
first 64 bytes of configuration address space:
00: 31 11 61 15 00 00 10 02 30 10 03 0c 20 00 80 00
10: 00 00 00 f0 00 00 00 00 00 00 00 00 00 00 00 00
20: 00 00 00 00 00 00 00 00 00 00 00 00 31 11 61 15
30: 00 00 00 00 dc 00 00 00 00 00 00 00 29 01 01 2a

N0:1
Vendor ID      : 0x1131
Device ID      : 0x1562
Domain:bus:dev.func : 0000:00:05.1
Status / Command : 0x2100156
Class / Revision : 0xc032030
Latency        : 0x30
First 64 bytes of configuration address space:
00: 31 11 62 15 56 01 10 02 30 20 03 0c 20 30 80 00
10: 00 10 00 f0 00 00 00 00 00 00 00 00 00 00 00 00
20: 00 00 00 00 00 00 00 00 00 00 00 00 31 11 62 15
30: 00 00 00 00 dc 00 00 00 00 00 00 00 29 01 02 10
```

**Prompt**  
**Message** -  
**Platform**  
**Description** -

## 5.16 show processes cpu

Use this command to display system task information.

**show processes cpu [ history [ table ] | [ 5sec | 1min | 5min | 15min ] [ nonzero ] ]**

**Parameter**  
**Description**

Parameter	Description
<b>5sec   1min   5min   15min</b>	Displays lists of tasks in descending order of CPU usage within the last five seconds, one minute, five minutes, and 15 minutes.
<b>Nonzero</b>	Does not display the task with 0 CPU usage.
<b>History</b>	Displays the CPU usage of the control core within the last 60 seconds, 60 minutes, and 72 hours in histogram.
<b>Table</b>	Displays the CPU usage of the control core within the last 60 seconds, 60 minutes, and 72 hours in table.

**Command** Privileged EXEC mode/ global configuration mode  
**Mode**

**Default Level** -

### Usage Guide

**Configuration** The following example displays the tasks listed in ascending order of task IDs.

### Examples

```
Ruijie# show processes cpu
System Uptime: 19:08.6
CPU utilization for five seconds:1.2%; one minute:0.8%; five minutes:0.8%
set system cpu watermark (open): high 80%(85%~75%)

Tasks Statistics: 375 total, 10 running, 365 sleeping, 0 stopped, 0 zombie
  Pid Vsd S  PRI  P    5Sec    1Min    5Min    15Min Process
    1  0 S   20  0    0.0(0.0)  0.0(0.0)  0.0(0.0)  0.0(0.0) init
    2  0 S   20  1    0.0(0.0)  0.0(0.0)  0.0(0.0)  0.0(0.0) kthreadd
    3  0 S  -100  0    0.0(0.0)  0.0(0.0)  0.0(0.0)  0.0(0.0) migration/0
    4  0 S   20  0    0.0(0.0)  0.0(0.0)  0.0(0.0)  0.0(0.0) ksoftirqd/0
    5  0 S  -100  1    0.0(0.0)  0.0(0.0)  0.0(0.0)  0.0(0.0) migration/1

--More--
```

The following example displays the tasks listed in ascending order of task IDs without displaying the tasks

with 0 CPU usage within 15 minutes.

```
Ruijie# show processes cpu nonzero
```

Description of the information displayed in this command:

Field	Description
System Uptime	Total running time of the device, precious to seconds.
CPU Utilization	Total CPU usage of the control core within the last five seconds, one minute, and five minutes.
Virtual CPU usage	Total CPU usage of the virtual control core within the last five seconds, one minute, and five minutes.
Tasks Statistics	Task statistics information, including the total number of statistics tasks and the task status.
set system cpu watermark	CPU watermark value and status of the control core.

The task running statuses are listed below:

Task Running Status	Description
running	Running task
sleeping	Suspended task
stopped	Stopped task
zombie	Terminated task, but not reclaimed by the system

Description of each task:

Field	Description
Pid	Task ID
S	Task status. Five statuses in total: R (running), T (stopped), S (sleeping), D (waiting), and Z (zombie).
PRI	Task running priority
P	The core of the CPU on which the task runs
5sec/1min/5min/15min	CPU usage of the task within the last five seconds, one minute, five minutes, and 15 minutes. The value in the round brackets is the CPU usage that is not divided by the total number of cores where the task runs.
Process	Task name. Only the first 15 characters are displayed. The remaining characters are truncated.

The following example displays the CPU usage in ascending order of task IDs and only the processes with non-zero CPU usage within 15 minutes are displayed.

```
Ruijie #show processes cpu nonzero
```

The following example displays the CPU usage in descending order within five seconds and the tasks with zero CPU usage within one second are not displayed.

```
Ruijie #show processes cpu 5sec nonzero
```

The following example displays the CPU usage of the control core in histograms within the last 60 seconds, 60 minutes, and 72 hours.


The first histogram displays the CPU usage of the control core within 300 seconds. Every segment in the x-coordinate is five seconds, and every segment in the y-coordinate is 5%. The symbol "\*" indicates the CPU usage at the last specified second. In other words, the first segment on the x-coordinate nearest to 0 is the CPU usage in the last five seconds, measured in %.

The second histogram displays the CPU usage of the control core within the last 60 minutes, measured in %. Every segment on the x-coordinate is 1 minute.

The third histogram displays the CPU usage of the control core within the last 72 hours, measured in %. Every segment on the x-coordinate is 1 hour.

Example:

```
Ruijie#show processes cpu history
```

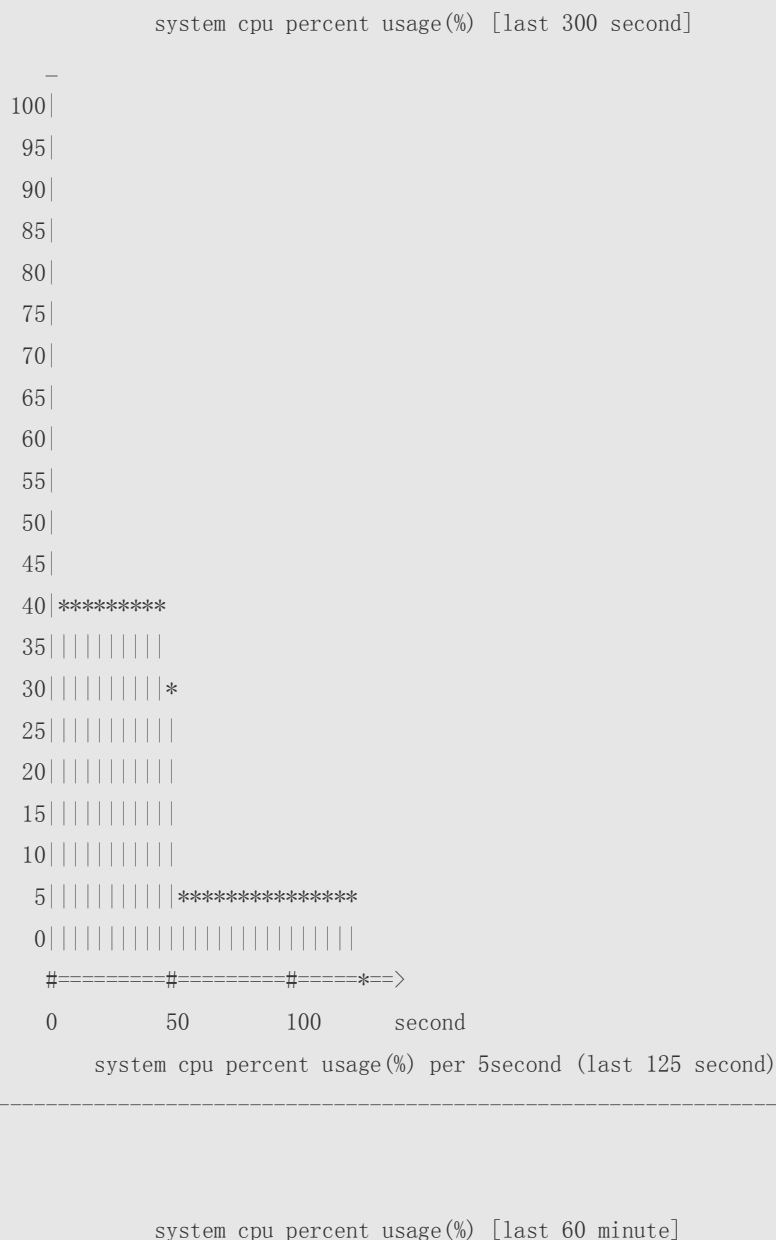



```

-
100|
95|
90|
85|
80|
75|
70|
65|
60|
55|
50|
45|
40|
35|
30|*
25| |
20| |
15| |
10| |
5| |*
0| |
#==*==>
0      minute
      system cpu percent usage(%) per 1minute (last 2 minute)
-----

```

The following example displays the CPU usage of the core 0 in tables within the last 60 seconds, 60 minutes, and 72 hours.

The first table lists the CPU usage within 300 seconds. The first cell indicates the CPU usage within the last five seconds.

The second table lists the CPU usage within the last 60 minutes, measured in %. The two adjacent cells show the CPU usage measured at an interval of one minute.

The third table lists the CPU usage within the last 72 hours, measured in %. The two adjacent cells show the CPU usage measured at an interval of one hour.

Example:

```

Ruijie #show processes cpu history table
      system cpu percent usage(%) [last 300 second]
#-----#
|          | 1| 2| 3| 4| 5| 6| 7| 8| 9| 10|
#-----#
#-----#
|          0| 2.0| 2.4| 2.3| 2.3| 2.8| 3.0| 2.7| 3.2| 2.6| 2.4|
#-----#
|          1| 2.7| 2.5| 2.7| 2.2| 2.4| 2.6| 2.2| 2.7| 2.3| 2.5|

```

```
#-----#
|      2|   2.9|   2.0|   2.4|   2.5|   2.7|   2.4|   2.4|   2.6|   2.6|   2.5|
#-----#
|      3|   2.7|   2.8|   2.8|   3.2|   2.5|   3.2|   3.1|   4.0|   2.7|   2.7|
#-----#
|      4|   4.0|   2.3|   2.1|   2.2|   2.7|   2.4|   2.5|   2.6|   2.4|   2.6|
#-----#
|      5|   2.4|   3.2|   2.5|   2.3|   2.3|   3.6|   2.8|   2.5|   2.2|   2.4|
#-----#

          system cpu percent usage(%) [last 60 minute]
#-----#
|      |   1|   2|   3|   4|   5|   6|   7|   8|   9|  10|
#-----#
#-----#
|      0|   2.6|   2.5|   3.0|   2.4|   2.6|
#-----#
```

**Prompt** -  
**Message**  
  
**Platform** -  
**Description**

5.17 show processes cpu detailed

Use this command to display the details of the specified task.  
**show processes cpu detailed** { *process-id* | *process-name* }

Parameter Description	Parameter	Description
	<i>process-id</i>	Displays the information on the task of the specified task ID.
	<i>process-name</i>	Displays the information on the task of the specified task name.

**Command Mode** Privileged EXEC mode/ global configuration mode

**Default Level** -

**Usage Guide**

**Configuration Examples** The following example displays the information on the task of the specified task name.


```
Ruijie# show processes cpu detailed demo
Process Id      : 1820
```

```

Process Name : demo
Vsdid       : 0
Process Ppid : 1

State       : R(running)
On CPU      : 0
Priority     : 20
Age Time    : 24:06.5
Run Time    : 00:01.0
Cpu Usage   :
    Lass 5 sec    0.3% (0.6%)
    Lass 1 min    0.3% (0.6%)
    Lass 5 min    0.3% (0.6%)
    Lass 15 min   0.3% (0.6%)
Tty         : ?

```

 **Code Usage:** 209.6 KB. If the specified task name is not unique, the system displays the following message:

```

Ruijie# show processes cpu detailed demo
duplicate process, choose one by id not name.
name: demo, id: 1089, state: S(sleeping)
name: demo, id: 1091, state: R(running)
process name: monitor_procs, do NOT exist, or NOT only one.

```

Description of the displayed information:

Field	Description
Process Id	Task ID
Process Name	Task name
Process Ppid	Parent process task ID
State	Task running status
On CPU	CPU where the task is running
Priority	Task priority
Age Time	Duration for the task from self-startup to now
Run Time	Duration for the task from self-startup to being executed
Cpu Usage	<p>CPU usage of the task within the last five seconds, one minute, five minutes, and 15 minutes.</p> <p>The value in the round brackets is the CPU usage that is not divided by the total number of cores where the task runs. For example, the demo task is running on No.0 core, which is the control core and the system has two control cores. In this case, the CPU usage is 0.3% (0.6%).</p>
Tty	Tty ID, in the format of "Primary device ID, secondary device ID". If it is 0, the value is ?.
Code Usage	Size occupied by the task code segment

The following example displays the information on the task of the specified task ID.

```
Ruijie# show process cpu detailed 1715
```

**Prompt** -

**Message** -

**Platform** -

**Description** -

## 5.18 show reboot-reason

Use this command to display the reboot reason.

**show reboot-reason** [ *all* ]

Parameter Description	Parameter	Description
	<i>all</i>	Displays the reboot reason of all devices/service modules

**Command Mode** Privileged EXEC mode/ global configuration mode/ User EXEC mode

**Default Level** -

**Usage Guide** -

**Configuration Examples** The following example displays the reboot reason of the device.

```
Ruijie#show reboot-reason
time: 1970-01-01 08:03:13
reason: reload cmd
info: /sbin/rg-sysmon/3844

Ruijie#
```

**Prompt** -

**Message** -

**Platform** -

**Description** -

## 5.19 show version

Use this command to display the system version information.

**show version**

Parameter Description	Parameter	Description
	-	-

**Command Mode** Privileged EXEC mode/ global configuration mode

**Default Level** -

**Usage Guide** -

**Usage Guide** The following example displays the system version information.

```
Ruijie# show version
System description      : Ruijie Indoor AP320-I (802.11a/n and 802.11b/g/n) By Ruijie Networks
System start time      : 2012-12-06 00:00:00
System uptime          : 0:03:20:07
System hardware version : 1.0.0
System software version : AP_RGOS11.0(1B1)
System serial number    : 1234942570018
System boot version     : 1.0.0
```

**Prompt Message** -

**Platform Description** -

## 6 Time Range Commands

### 6.1 absolute

Use this command to configure an absolute time range.

**absolute** { [ **start** *time date* ] [ **end** *time date* ] }

Use the **no** form of this command to remove the absolute time range.

**no absolute**

Parameter Description	Parameter	Description
	<b>start</b> <i>time date</i>	Indicates the start time of the range.
	<b>end</b> <i>time date</i>	Indicates the end time of the range.

**Defaults** The default absolute time range is the maximum range.

**Command Mode** Time range configuration mode

**Default Level** 14

**Usage Guide** Use the **absolute** command to configure a time absolute time range between a start time and an end time to allow a certain function to take effect within the absolute time range.  
The maximum absolute time range is from 00:00 January 1, 0 to 23:59 December 31, 9999.

**Configuration Examples** The following example creates a time range and enters time range configuration mode.

```
Ruijie(config)# time-range no-http
Ruijie(config-time-range)#
```

The following example configures an absolute time range.

```
Ruijie(config-time-range)# absolute start 1:1 1 JAN 2013 end 1:1 1 JAN 2014
```

**Check Method** Use the **show time-range** [ *time-range-name* ] command to display the time range configuration.

**Prompt Message** -

**Platform Description** -

## 6.2 periodic

Use this command to configure periodic time.

**periodic** *day-of-the-week time to [ day-of-the-week ] time*

Use the **no** form of this command to remove the configured periodic time.

**no periodic** *day-of-the-week time to [ day-of-the-week ] time*

Parameter Description	Parameter	Description
	<i>day-of-the-week</i>	Indicates the week day when the periodic time starts or ends.
	<i>time</i>	Indicates the exact time when the periodic time starts or ends.

**Defaults** No periodic time is configured by default.

**Command Mode** Time range configuration mode

**Default Level** 14

**Usage Guide** Use the **periodic** command to configure a periodic time interval to allow a certain function to take effect within the periodic time.

**Configuration** The following example creates a time range and enters time range configuration mode.

**Examples**

```
Ruijie(config)# time-range no-http
Ruijie(config-time-range)#
```

The following example configures a periodic time interval.

```
Ruijie(config-time-range)# periodic Monday 1:1 to Tuesday 2:2
```

**Check Method** Use the **show time-range** [ *time-range-name* ] command to display the time range configuration.

**Prompt Message** -

**Platform Description** -

## 6.3 show time-range

Use this command to display the time range configuration.

**show time-range** [ *time-range-name* ]

Parameter Description	Parameter	Description
	<i>time-range-name</i>	Displays a specified time range.

**Command Mode** Privileged EXEC mode

**Default Level** 14

**Usage Guide** Use this command to check the time range configuration.

**Configuration** The following example displays the time range configuration.

**Examples**

```
Ruijie# show time-range
time-range entry: test (inactive)
  absolute end 01:02 02 February 2012
```

**Prompt Message** -

**Platform Description** -

## 6.4 time-range

Use this command to create a time range and enter time range configuration mode.

**time-range** *time-range-name*

Use the **no** form of this command to remove the configured time range.

**no time-range** *time-range-name*

Parameter Description	Parameter	Description
	<i>time-range-name</i>	Time range name

**Defaults** No time range is configured by default.

**Command Mode** Global configuration mode

**Default Level** 2

**Usage Guide** Some applications (such as ACL ) may run based on time. For example, an ACL can be effective within certain time ranges of a week. To this end, first you must configure a time range. After the time range is



created, you can configure relevant time control in time range mode.

**Configuration** The following example creates a time range.

**Examples**

```
Ruijie(config)# time-range no-http
Ruijie(config-time-range)#
```

**Check Method** Use the **show time-range** [ *time-range-name* ] command to display the time range configuration.

**Prompt Message** -

**Platform Description** -

## 7 HTTP Service Commands

### 7.1 enable service web-server

Use this command to enable the HTTP service function.

Use the **no** or **default** form of this command to disable the HTTP service function.

**enable service web-server** [ **http** | **https** | **all** ]

**no enable service web-server** [ **http** | **https** ]

**default enable service web-server** [ **http** | **https** ]

**Parameter  
Description**

Parameter	Description
<b>http</b>	Enables the HTTP service.
<b>https</b>	Enables the HTTPS service.
<b>all</b>	Enables both the HTTP service and the HTTPS service.

**Defaults**

By default, the HTTP service function is disabled.

**Command  
mode**

Global configuration mode.

**Usage Guide**

If run a command ends with the keyword **all** or without keyword, it indicates enabling both the HTTP service and the HTTPS service; if run a command ends with keyword **http**, it indicates enabling the HTTP service; if run a command ends with keyword **https**, it indicates enabling the HTTPS service. Use the command **no enable service web-server** to disable the corresponding HTTP service.

**Configuration**

The following example enables both the HTTP service and the HTTPS service:

**Examples**

```
Ruijie#configure terminal
Enter configuration commands, one per line. End with CNTL/Z.
Ruijie(config)#enable service web-server
```

**Related  
Commands**

Command	Description
N/A	N/A

**Platform**

N/A

**Description**

### 7.2 http port

Use this command to configure the HTTP port number.

Use the **no** form of this command to restore the default HTTP port number.

**http port** *port-number*

**no http port**

**Parameter  
Description**

Parameter	Description
<i>port-number</i>	Configures the HTTP port number. The value includes 80, 1025 to 65,535.

**Defaults** The default HTTP port number is 80.

**Command  
mode** Global configuration mode.

**Usage Guide** Use this command to configure the HTTP port number.

**Configuration** The following example configures the HTTP port number as 8080:

**Examples** Ruijie(config)#http port 8080

**Related  
Commands**

Command	Description
N/A	N/A

**Platform  
Description** N/A

## 7.3 http secure-port

Use this command to configure the HTTPS port number.

Use the **no** form of this command to restore the default HTTPS port number.

**http secure-port** *port-number*

**no http secure-port**

**Parameter  
Description**

Parameter	Description
<i>port-number</i>	Configures the HTTPS port number. The value includes 443, 1025 to 65,535.

**Defaults** The default HTTP port number is 443.

**Command  
mode** Global configuration mode.

**Usage Guide** Use this command to configure the HTTPS port number.

**Configuration** The following example configures the HTTPS port number as 4443:

**Examples** Ruijie(config)#http secure-port 4443

**Related  
Commands**

Command	Description
<b>enable service web-server</b>	Enables the HTTP service.
<b>show web-server status</b>	Displays the configuration and status of the Web service.

**Platform** N/A

**Description**

## 7.4 show web-server status

Use this command to display the configuration and status of the Web service.

**show web-server status**

**Parameter  
Description**

Parameter	Description
N/A	N/A

**Defaults** N/A

**Command  
mode** Privileged EXEC mode

**Usage Guide** N/A

**Configuration** The following example displays the configuration and status of the Web service:

**Examples**

```
Ruijie#show web-server status
http server status : enabled
http server port : 80
https server status: enabled
https server port: 443
```

**Related  
Commands**

Command	Description
<b>enable service web-server</b>	Enables the HTTP service.
<b>http port</b>	Configures the HTTP port number.
<b>http secure-port</b>	Configures the HTTPS port number.

**Platform** N/A

**Description**

## 7.5 upgrade web

Use this command to upgrade the Web package in local file system.

**upgrade web** *uri*

**Parameter  
Description**

Parameter	Description
<i>uri</i>	The storage path of the Web package.

**Defaults** N/A

**Command mode** Privileged EXEC mode

**Usage Guide** Please use the **copy** command to copy the Web package into the file system before you use this command to upgrade the Web package.

**Configuration** The following example copies a Web package into the file system and upgrades the package.

**Examples**

```
Ruijie#copy tftp://192.168.23.24/web.upd flash:/web.upd
Ruijie#upgrade web flash:/web.upd
```

**Related  
Commands**

Command	Description
<b>enable service web-server</b>	Enables the HTTP service.

**Platform** N/A

**Description**

## 7.6 upgrade web download

Use this command to download the Web package from the TFTP server and upgrade the package automatically.

**upgrade web download** **tftp:** *path*

**Parameter  
Description**

Parameter	Description
<b>tftp:</b> <i>path</i>	<i>path</i> indicates the storage path of the Web package on the TFTP server.  <b>tftp</b> indicates the system downloads the Web package from the TFTP server through the physical port and upgrades the Web package automatically.

**Defaults** N/A

**Command mode** Global configuration mode.

**Usage Guide** N/A

**Configuration Examples** The following example downloads a Web package from the TFTP server and upgrades the package automatically.

```
Ruijie#upgrade web download tftp://192.168.23.24/web.upd
```

**Related Commands**

Command	Description
<b>enable service web-server</b>	Enables the HTTP service.

**Platform Description** N/A

## 7.7 webmaster level

Use this command to configure the username and password for Web login authentication. Use the **no** form of this command to restore the default setting.

**webmaster level** *privilege-level* **username** *name* **password** { *password* | [ **0** | **7** ] *encrypted-password* }

**no webmaster level** *privilege-level* [ **username** *name* ]

**Parameter Description**

Parameter	Description
<i>privilege-level</i>	Configures the user privilege-level.
<i>name</i>	Username.
<i>password</i>	Password.
<b>0</b>   <b>7</b>	Password type; 0 indicates plaintext, 7 indicates ciphertext.
<i>encrypted-password</i>	Password text.

**Defaults** By default, two users are configured.


1. User1 is configured with privilege level 1, username of admin and plaintext password of admin.
2. User2 is configured with privilege level 2, username of guest and plaintext password of guest.

**Command mode** Global configuration mode.

**Usage Guide** When HTTP is enabled, users can log in to the Web interface only after being authenticated. Use this command to configure the username and password for Web login authentication.

Use the **no webmaster level** *privilege-level* command to delete all the usernames and passwords with a specified *privilege-level*.

Use the **no webmaster level** *privilege-level* **username** *name* command to delete the specified username and password.

 Usernames and passwords come with three permission levels, each of which includes at most 10 usernames and passwords.

**Configuration** The following example configures the username and password for Web login authentication,

**Examples**

```
Ruijie(config)#webmaster level 0 username ruijie password admin
```

**Related  
Commands**

Command	Description
<b>enable service web-server</b>	Enables the HTTP service.

**Platform** N/A  
**Description**

## 8 Syslog Commands

### 8.1 clear logging

Use this command to clear the logs from the buffer in privileged EXEC mode.

#### clear logging

Parameter	Parameter	Description
Description	N/A	N/A

**Defaults** N/A

**Command Mode** Privileged EXEC mode

**Usage Guide** This command clears the log packets from the memory buffer. You cannot clear the statistics of the log packets.

**Configuration** The following example clears the log packets from the memory buffer.

**Examples** Ruijie# **clear logging**

Related	Command	Function
Commands	<b>logging on</b>	Turns on the log switch.
	<b>show logging</b>	Displays the logs in the buffer.
	<b>logging buffered</b>	Records the logs in the memory buffer.

**Platform Description** N/A

### 8.2 logging

Use this command to send the log message to the specified syslog server.

**logging** { *ip-address* | **ipv6** *ipv6-address* } [ **udp-prot** *port* ]

Use this command to delete the specified syslog server.

**no logging** { *ip-address* | **ipv6** *ipv6-address* }

Use this command to restore the default port 514.

**no logging** { *ip-address* | **ipv6** *ipv6-address* } **udp-prot**

Parameter	Parameter	Description
Description		



<i>ip-address</i>	Sets the IP address of the host receiving log messages.
<i>ipv6-address</i>	Sets the IPv6 address of the host receiving log messages.
<b>udp-port</b> <i>port</i>	Sets the port number of the host receiving log messages. The default is 514.

**Defaults** No log message is sent to syslog server by default.

**Command** Global configuration mode  
**Mode**

**Usage Guide** This command is used to configure a syslog server to receive log messages from the device. You can configure up to five syslog servers, log messages are sent to all configured syslog servers simultaneously,

**Configuration** The following example configures a syslog server with IP address 202.101.11.1.

**Examples** Ruijie(config)# logging 202.101.11.1

The following example configures a syslog server with IP address 10.1.1.100 and port number 8099.

Ruijie(config)# logging 202.101.11.1 udp-port 8099

The following example configures a syslog server with IPv6 address AAAA:BBBB::FFFF.

Ruijie(config)# logging ipv6 AAAA:BBBB::FFFF

**Related  
Commands**

Command	Description
N/A	N/A

**Platform** N/A  
**Description**

## 8.3 logging buffered

Use this command to set the memory buffer parameters (log severity, buffer size) for logs at global configuration layer. Use the **no** form of the command to disable recording logs in the memory buffer.

Use the **default** form of this command to restore the default setting.

**logging buffered** [ *buffer-size* | *level* ]

**no logging buffered**

**default logging buffered**

**Parameter  
Description**

Parameter	Description
<i>buffer-size</i>	Size of the buffer is related to the specific device type: For the access switches, 4 K to 1 M Bytes.
<i>level</i>	Severity of logs, from 0 to 7. The name of the severity or the numeral can be used.

**Defaults** The buffer size is related to the specific device type.  
access switches: 128 K Bytes;  
The log severity is 7.

**Command**

**Mode** Global configuration mode

**Usage Guide** The memory buffer for log is used in recycled manner. That is, when the memory buffer with the specified size is full, the oldest information will be overwritten. To show the log information in the memory buffer, run the **show logging** command in privileged user mode.


The logs in the memory buffer are temporary, and will be cleared in case of device restart or the execution of the **clear logging** command in privileged user mode. To trace a problem, it is required to record logs in flash or send them to Syslog Server.

The log information is classified into the following 8 levels (Table 1):

**Table-1**

Keyword	Level	Description
Emergencies	0	Emergency case, system cannot run normally
Alerts	1	Problems that need immediate remedy
Critical	2	Critical conditions
Errors	3	Error message
warnings	4	Alarm information
Notifications	5	Information that is normal but needs attention
informational	6	Descriptive information
Debugging	7	Debugging messages

Lower value indicates higher level. That is, level 0 indicates the information of the highest level. When the level of log information to be displayed on devices is specified, the log information at or below the set level will be allowed to be displayed.

 After running the system for a long time, modifying the log buffer size especially in condition of large buffer may fails due to the insufficient available continuous memory. The failure message will be shown. It is recommended to modify the log buffer size as soon as the system starts.

**Configuration Examples** The following example allows logs at and below severity 6 to be recorded in the memory buffer sized 10,000 bytes.

```
Ruijie(config)# logging buffered 10000 6
```

**Related  
Commands**

Command	Description
<b>logging on</b>	Turns on the log switch.

<b>show logging</b>	Displays the logs in the buffer.
<b>clear logging</b>	Clears the logs in the log buffer.

**Platform**  
**Description**

N/A

## 8.4 logging console

Use this command to set the severity of logs that are allowed to be displayed on the console in global configuration mode. Use the **no** form of this command to prohibit printing log messages on the console.

**logging console** [ *level* ]

**no logging console**

Parameter	Parameter	Description
<b>Description</b>	<i>level</i>	Severity of log messages, 0 to 7. The name of the severity or the numeral can be used. For the details of log severity, see table 1.

**Defaults** The default is debugging (7).

**Command Mode** Global configuration mode

**Usage Guide** When a log severity is set, the log messages at or below that severity will be displayed on the console.  
The **show logging** command displays the related setting parameters and statistics of the log.

**Configuration Examples** The following example sets the severity of log that is allowed to be displayed on the console as 6:

```
Ruijie(config)# logging console informational
```

Related Commands	Command	Description
	<b>logging on</b>	Turns on the log switch.
	<b>show logging</b>	Displays the logs and related log configuration parameters in the buffer.

**Platform**  
**Description**

N/A

## 8.5 logging count

Use this command to enable the log statistics function in global configuration mode. Use the **no** form of this command to restore the default setting.

**logging count****no logging count****Parameter  
Description**

Parameter	Description
N/A	N/A

**Defaults**

The log statistics function is disabled by default.

**Command  
Mode**

Global configuration mode

**Usage Guide**

This command enables the log statistics function. The statistics begins when the function is enabled. If you run the **no logging count** command, the statistics function is disabled and the statistics data is deleted.

**Configuration**

The following example enables the log statistics function:

**Examples**

```
Ruijie(config)# logging count
```

**Related  
Commands**

Command	Description
<b>show logging count</b>	Displays log information about modules of the system.
<b>show logging</b>	Displays basic configuration of log modules and log information in the buffer.

**Platform  
Description**

N/A

## 8.6 logging delay-send file

Use this command to set the name of the log file saved locally for delay sending. Use the **no** form of this command to restore the default setting.

**logging delay-send file flash:filename**

**no logging delay-send file**

**Parameter  
Description**

Parameter	Description
<b>flash:filename</b>	Sets the name of the log file saved locally for delay sending.

**Defaults**

The default name format is as follows: file size\_device IP address\_index.txt. If you want to change the file name, the file sent to the remote server should be named as follows: prefix\_ file size\_device IP address\_index.txt; the file saved locally should be named as follows: prefix\_index.txt. The default prefix is syslog\_ftp\_server.

**Command** Global configuration mode  
**Mode**

**Usage Guide** The file name cannot contain special symbols including . \ : \* " < > and |.  
For example, the file name is log\_server, file index 5, file size 1000B and device IP address 10.2.3.5. The log file sent to the remote server is named log\_server\_1000\_10.2.3.5\_5.txt and the log file saved locally is named log\_server\_5.txt.  
If the device has an IPv6 address, the colon (:) in the IPv6 address is replaced by the hyphen (-).  
For example, the is log\_server, file index 6, file size 1000B and device IPv6 address 2001::1. The log file sent to the remote server is named log\_server\_1000\_2001-1\_6.txt and the log file saved locally is named log\_server\_6.txt.

**Configuration** The following example sets the name of the log file saved locally to log\_server.

**Examples** Ruijie(config)# logging delay-send file flash:log\_server

**Related  
Commands**

Command	Description
N/A	N/A

**Platform  
Description** N/A

## 8.7 logging delay-send interval

Use this command to set the interval at which log sending is delayed. Use the **no** form of this command to restore the default setting.

**logging delay-send interval** *seconds*

**no logging delay-send interval**

**Parameter  
Description**

Parameter	Description
<i>seconds</i>	Sets the interval at which log sending is delayed, in the range from 600 to 65535 seconds.

**Defaults** The default is 3600.

**Command  
Mode** Global configuration mode

**Usage Guide** N/A

**Configuration** The following example sets the the interval at which log sending is delayed to 600 seconds.

**Examples** Ruijie(config)# logging delay-send interval 600

Related Commands	Command	Description
	N/A	N/A

**Platform**  
**Description**

N/A

## 8.8 logging delay-send server

Use this command to configure the server address and log sending mode. Use the **no** form of this command to restore the default setting.

**logging delay-send server** { *ip-address* | **ipv6** *ipv6-address* } **mode** { **ftp** **user** *username* **password** [ **0** | **7** ] *password* | **tftp** }  
**no logging delay-send server** { *ip-address* | **ipv6** *ipv6-address* }

Parameter Description	Parameter	Description
	<i>ip-address</i>	Specifies the IP address of the server.
	<b>ipv6</b> <i>ipv6-address</i>	Specifies the IPv6 address of the server.
	<i>username</i>	Sets the FTP server username.
	<i>password</i>	Sets the FTP server password.
	<b>0</b>	(Optional) The password is displayed in plaintext.
	<b>7</b>	The password are encrypted.

**Defaults** This function is disabled by default,

**Command Mode** Global configuration mode

**Usage Guide** This command is used to specify an FTP/TFTP server to receive logs. You can configure five FTP/TFTP servers. Logs are sent to all configured servers simultaneously.

**Configuration Examples** The following example specifies an FTP server whose IP address is 192.168.23.12, username admin and password admin,

```
Ruijie(config)# logging delay-send server 192.168.23.12 mode ftp user admin
password admin
```

The following example specifies a TFTP server whose IPv6 address is 2000::1.

```
Ruijie(config)# logging delay-send server ipv6 2000::1 mode tftp
```

Related Commands	Command	Description
	N/A	N/A

**Platform**  
**Description**

N/A

## 8.9 logging delay-send terminal

Use this command to enable delay in sending logs to console and remote terminal. Use the **no** form of this command to restore the default setting.

**logging delay-send terminal**

**no logging delay-send terminal**

**Parameter**  
**Description**

Parameter	Description
N/A	N/A

**Defaults** This function is disabled by default.

**Command** Global configuration mode  
**Mode**

**Usage Guide** N/A

**Configuration** The following example enables delay in sending logs to console and remote terminal.

**Examples** Ruijie(config)# logging delay-send terminal

**Related**  
**Commands**

Command	Description
N/A	N/A

**Platform**  
**Description**

N/A

## 8.10 logging facility

Use this command to configure the device value of the log information in global configuration mode. Use the **no** form of the command to restore the default setting.

**logging facility** *facility-type*

**no logging facility**

**Parameter**  
**Description**

Parameter	Description
<i>facility-type</i>	Syslog device value. For specific settings, refer to the usage guide.

**Defaults** The default is 23 if the RFC5424 format is enabled (Local7, local use).

The default is 16 if the RFC5424 format is disabled (Local0, local use).

**Command**

Global configuration mode

**Mode****Usage Guide**

The following table (Table-2) is the possible device values of Syslog:

Numerical Code	Facility
0 (kern)	Kernel messages
1 (user)	User-level messages
2 (mail)	Mail system
3 (daemon)	System daemons
4 (auth1)	security/authorization messages
5 (syslog)	Messages generated internally by syslogd
6 (lpr)	Line printer subsystem
7 (news)	USENET news
8 (uucp)	Unix-to-Unix copy system
9 (clock1)	Clock daemon
10 (auth2)	security/authorization messages
11 (ftp)	FTP daemon
12 (ntp)	NTP subsystem
13 (logaudit)	log audit
14 (logalert)	log alert
15 (clock2)	clock daemon
16 (local0)	Local use
17 (local1)	Local use
18 (local2)	Local use
19 (local3)	Local use
20 (local4)	Local use
21 (local5)	Local use
22 (local6)	Local use
23 (local7)	Local use

The default device value of RGOS is 23 (local 7).

**Configuration**

The following example sets the device value of **Syslog** as **kernel**:

**Examples**

```
Ruijie(config)# logging facility kern
```

**Related**

Command	Description
---------	-------------



Commands	<b>logging console</b>	Sets the severity of logs that are allowed to be displayed on the console.

Platform  
Description

N/A

## 8.11 logging file

Use this command to save log messages in the log file, which can be saved in hardware disk, expanded FLASH, USB or SD card. Use the **no** form of this command to restore the default setting, **logging file { flash:filename } [ max-file-size ] [ level ]**

**no logging file**


Parameter  
Description

Parameter	Description
<b>flash</b>	Saves the log file in expanded FLASH.
<i>filename</i>	Sets the file name. The file type is omitted, which is fixed as txt.
<i>max-file-size</i>	Sets the maximum file size, in the range from 128K to 6M bytes, The default is 128K,
<i>level</i>	Sets the level of the log message saved in the log file, which can be either the level name or the level number. The default is 6. See Usage Guide for details.

**Defaults** Log messages are not saved in expanded FLASH by default.

**Command Mode** Global configuration mode

**Usage Guide** You can save log messages in expanded FLASH if you don't want to transmit log messages on the network or there is no syslog server,  
The log file cannot be configured with the suffix, which is fixed as txt.

 If there is no expanded FLASH, the **logging file flash** command is hidden automatically and cannot be configured.

Keyword	Level	Description
Emergencies	0	Emergency case. The system fails to run.
Alerts	1	Problem that call for immediate solution.
Critical	2	Critical message.
Errors	3	Error message.
warnings	4	Alarm message.

Notifications	5	message that is normal but calls for attention.
informational	6	Descriptive message.
Debugging	7	Debugging message

**Configuration** The following example saves the log message in expanded FLASH and sets file name, file size and log level to syslog.txt, 128K and 6 respectively.

**Examples**

```
Ruijie(config)# logging file flash:syslog
```

**Related  
Commands**

Command	Description
N/A	N/A

**Platform** N/A  
**Description**

## 8.12 logging file numbers

Use this command to set the number of log files written into FLASH. Use the **no** form of this command to restore the default setting.

**logging file numbers** *numbers*

**no logging file numbers**

**Parameter  
Description**

Parameter	Description
<i>numbers</i>	Sets the number of log files written into FLASH, in the range from 2 to 32.

**Defaults** The default is 16.

**Command  
Mode** Global configuration mode

**Usage Guide** The system does not delete previously generated log files even if you change this configuration, Therefore, you need to delete the log files manually to save FLASH size (you can send log files to the server through TFTP before that). For example, 16 log files are generated by default before you want to change the number to 2. New logs are overwritten constantly in log files indexed 0 to 1. However, log files indexed from 2 to 16 remain. You can delete these log files manually as needed.

**Configuration** The following example sets the number of log files written into FLASH to 8.

**Examples**

```
Ruijie(config)# logging file numbers 8
```

**Related**

Command	Description
---------	-------------

Commands		
	N/A	N/A

**Platform**  
**Description**

N/A

## 8.13 logging filter direction

Use this command to filter the log messages destined to a certain direction. Use the **no** form of this command to restore the default setting.

**logging filter direction** { **all** | **buffer** | **file** | **server** | **terminal** }

**no logging filter direction** { **all** | **buffer** | **file** | **server** | **terminal** }

Parameter Description	Parameter	Description
	<b>all</b>	Log messages destined to all directions are filtered, including console, VTY terminal, log buffer, log file and log server.
	<b>buffer</b>	Log messages destined to the log buffer are filtered, including log messages displayed by running the <b>show logging</b> command.
	<b>file</b>	Log messages destined to the log file are filtered.
	<b>server</b>	Log messages destined to the log server are filtered.
	<b>terminal</b>	Log messages destined to the console and the VTY terminal (including Telnet and SSH).

**Defaults** Log messages destined to all directions are filtered by default.

**Command Mode** Global configuration mode

**Usage Guide** In general, log messages destined to all directions are filtered, including console, VTY terminal, log buffer, log file and log server. If you want to filter log messages destined to a certain direction, the terminal for instance, configure the **terminal** parameter.

**Configuration Examples** The following example filters log messages destined to the terminal (including the console and the VTY terminal).

```
Ruijie(config)# logging filter direction terminal
```

Related Commands	Command	Description
	N/A	N/A

**Platform**  
**Description**

N/A

## 8.14 logging filter rule

Use this command to configure the filter rule of the log message,

**logging filter rule** { **exact-match** **module** *module-name* **mnemonic** *mnemonic-name* **level** *level* | **single-match** [ **level** *level* | **mnemonic** *mnemonic-name* | **module** *module-name* ] }

Use this command to delete the “exact-match” filter rule.

**no logging filter rule exact-match** [ **module** *module-name* **mnemonic** *mnemonic-name* **level** *level* ]

Use this command to delete the “single-match” filter rule.

**no logging filter rule single-match** [ **level** *level* | **mnemonic** *mnemonic-name* | **module** *module-name* ]

### Parameter Description

Parameter	Description
<b>exact-match</b>	Exact-match filter rule. Fill in all the following three parameters.
<b>single-match</b>	Single-match filter rule. Fill in one of the following three parameters.
<b>module</b> <i>module-name</i>	Module name.
<b>mnemonic</b> <i>mnemonic-name</i>	Mnemonic name.
<b>level</b> <i>level</i>	Log level,

**Defaults** No filter rule is configured by default,

**Command Mode** Global configuration mode

**Usage Guide** If you want to filter a specific log message, use the “exact-match” filter rule and fill in all three parameters, namely, module name, mnemonic name and log level.

If you want to filter a specific kind of log messages, use the “single-match” filter rule and fill in one of three parameters, namely, module name, mnemonic name and log level.

When configured with the same module name, mnemonic name or log level, the “single-match” filter rule has a higher priority than the “exact-match” filter rule,

**Configuration Examples** The following example configures the “exact-match” filter rule with parameters of module name LOGIN, log level 5 and mnemonic name LOGOUT.

```
Ruijie(config)# logging filter rule exact-match module LOGIN mnemonic LOGOUT
level 5
```

The following example configures the “single-match” filter rule with the parameter of module name SYS.

```
Ruijie(config)# logging filter rule single-match module SYS
```

### Related Commands

Command	Description
N/A	N/A

**Platform** N/A

**Description**

## 8.15 logging filter type

Use this command to configure the filter type of log messages. Use the **no** form of this command to restore the default setting.

**logging filter type { contains-only | filter-only }**

**no logging filter type**

**Parameter  
Description**



Parameter	Description
<b>contains-only</b>	The log message containing the key word of the filter rule is printed.
<b>filter-only</b>	The log message containing the key word of the filter rule is filtered.

**Defaults** The default filter type is filter-only.

**Command  
Mode** Global configuration mode

**Usage Guide**

1. When too many log messages are printed, the terminal screen keeps being refreshed. If you are not concerned with these log messages, use the “filter-only” filter type to filter the log messages,
2. If you are concerned with certain log messages, use the “contains-only” filter type to print log messages containing the key word of the filter rule, so as to monitor whether certain events happen.

- 
-  In real operation, the contains-only and the filter-only filter types cannot be configured at the same time.
-  If you configure the filter direction and the filter type without configuring the filter rule, the log messages are not filtered.
- 

**Configuration** The following example sets the filter type to contains-only.

**Examples**

```
Ruijie(config)# logging filter type contains-only
```

**Related  
Commands**

Command	Description
N/A	N/A

**Platform** N/A

**Description**

## 8.16 logging flash flush

Use this command to write log messages in the system buffer into the flash file immediately.


**logging flash flush**

Parameter Description	Parameter	Description
	N/A	N/A

**Defaults** N/A

**Command Mode** Global configuration mode

**Usage Guide** In general, the log messages are cached in the log buffer. Only when the buffer is full or the timer expires are log messages written into the flash file. This command is used to write log messages in the system buffer into the flash file immediately.

 The **logging flash flush** command takes effect only once for each configuration. The log messages cached in the buffer are written into the flash file immediately after configuration.

**Configuration Examples** The following example writes log messages in the system buffer into the flash file immediately.

```
Ruijie(config)# logging flash flush
```

Related Commands	Command	Description
	N/A	N/A

**Platform Description** N/A

## 8.17 logging flash interval

Use this command to set the interval to write log messages into the flash file, Use the **no** form of this command to restore the default setting.

**logging flash interval** *seconds*


**no logging flash interval**

Parameter Description	Parameter	Description
	<b>interval</b> <i>seconds</i>	The interval to write log messages into the flash file, in the range from 1 to 57840 in the unit of seconds.

**Defaults** The default is 3600.

**Command Mode** Global configuration mode

**Usage Guide** This command is used to set the interval to write log messages into the flash file. The timer starts after configuration, If you want to restore the interval to 3600 seconds, use the **no logging flash interval** command.

 To avoid writing log messages into the flash file too frequently, it is not recommended to set a short interval.

**Configuration** The following example sets the interval to write log messages into the flash file to 300 seconds.

**Examples** Ruijie(config)# logging flash interval 300

**Related Commands**

Command	Description
N/A	N/A

**Platform Description** N/A

## 8.18 logging life-time

Use this command to configure the preservation duration of logs in expanded FLASH. Use the **no** form of this command to restore the default setting.

**logging life-time level level days**

**no logging life-time level level**

**Parameter Description**

Parameter	Description
<i>level</i>	Sets the log level, which can be either the level name or the level number.
<i>days</i>	Sets the preservation duration of logs.

**Defaults** No preservation duration is set by default.

**Command Mode** Global configuration mode

**Usage Guide** Due to difference in expanded FLASH size and log level, logs with different levels can be configured with different preservation durations.

 Once log preservation based on time is enabled, log preservation based on file size is disabled

automatically. The log files are stored under the syslog/ directory of the expanded FLASH,

**Configuration** The following example sets the preservation duration of logs whose level is 6 to 10 days.

**Examples** Ruijie(config)# logging life-time level 6 10

**Related  
Commands**

Command	Description
N/A	N/A

**Platform** N/A

**Description**

## 8.19 logging monitor

Use this command to set the severity of logs that are allowed to be displayed on the VTY window (telnet window, SSH window, etc.) in global configuration mode. Use the **no** form of this command to disable this function.

**logging monitor** [ *level* ]

**no logging monitor**

**Parameter  
Description**

Parameter	Description
<i>level</i>	Severity of the log message. The name of the severity or the numeral can be used. For the details of log severity, see Table-1.

**Defaults** The default is debugging (7).

**Command  
Mode** Global configuration mode

**Usage Guide** To print log information on the VTY window, run the **terminal monitor** command in privileged EXEC mode. The level of logs to be displayed is defined by **logging monitor**.  
The log level defined with "Logging monitor" is for all VTY windows.

**Configuration** The following example sets the severity of log that is allowed to be printed on the VTY window as 6:

**Examples** Ruijie(config)# **logging monitor informational**

**Related  
Commands**

Command	Description
<b>logging on</b>	Turns on the log switch.
<b>show logging</b>	Displays the log messages and related log configuration parameters in the buffer.



**Platform** N/A  
**Description**

## 8.20 logging on

Use this command globally to allow logs to be displayed on different devices. Use the **no** form of this command to disable this function.

**logging on**

**no logging on**

Parameter Description	Parameter	Description
	N/A	N/A

**Defaults** Logs are allowed to be displayed on different devices.

**Command Mode** Global configuration mode

**Usage Guide** Log information can not only be shown in the Console window and VTY window, but also be recorded in different equipments such as the memory buffer, the expanded FLASH and the Syslog Server. This command is the total log switch. If this switch is turned off, no log will be displayed or recorded unless the severity level is greater than 1.

**Configuration** The following example disables the log switch on the device.

**Examples** Ruijie(config)# **no logging on**

Related Commands	Command	Description
	<b>logging buffered</b>	Records the logs to a memory buffer.
	<b>logging server</b>	Sends logs to the Syslog server.
	<b>logging file flash:</b>	Records logs on the expanded FLASH.
	<b>logging console</b>	Allows the log level to be displayed on the console.
	<b>logging monitor</b>	Allows the log level to be displayed on the VTY window (such as telnet window) .
	<b>logging trap</b>	Sets the log level to be sent to the Syslog server.

**Platform** N/A  
**Description**

## 8.21 logging policy

Use this command to configure the severity ranking policy. Use the **no** form of this command to

remove one policy, Use the **no logging policy** command to remove all policies.

**logging policy module** *module-name* [ **not-lesser-than** ] *level* **direction** { **all** | **server** | **file** | **console** | **monitor** | **buffer** }

**no logging policy module** *module-name* [ **not-lesser-than** ] *level* **direction** { **all** | **server** | **file** | **console** | **monitor** | **buffer** }

**no logging policy**

**Parameter  
Description**

Parameter	Description
<i>module-name</i>	The name of the module applying the ranking policy.
<b>not-lesser-than</b>	If this parameter is specified, only when the log's level is not lower than the configured level can the log be sent. Otherwise, the log is filtered.  If this parameter is not specified, only when the log's level is not higher than the configured level can the log be sent. Otherwise, the log is filtered.
<i>level</i>	Severity level
<b>all</b>	Applies the ranking policy in all directions.
<b>server</b>	Applies the ranking policy to the direction toward the server.
<b>file</b>	Applies the ranking policy to the direction toward the log file.
<b>console</b>	Applies the ranking policy to the direction toward the console.
<b>monitor</b>	Applies the ranking policy to the direction toward the remote server.
<b>buffer</b>	Applies the ranking policy to the direction toward the buffer.

**Defaults** This function is disabled by default.

**Command Mode** Global configuration mode

**Usage Guide** This command is used to send logs to different destinations based on module and severity.

**Configuration Examples** The following example sends logs of the SYS module leveled above 5 to the console and sends logs of the SYS module leveled below 3 to the buffer.

```
Ruijie(config)# logging policy module SYS not-lesser-than 5 direction console
Ruijie(config)# logging policy module SYS 3 direction buffer
```

**Related  
Commands**

Command	Description
N/A	N/A

**Platform Description** N/A

## 8.22 logging rate-limit

Use this command to enable log rate limit function to limit the output logs in a second in the global configuration mode. Use the **no** form of this command to disable this function.

**logging rate-limit** { *number* | **all** *number* | **console** { *number* | **all** *number* } } [ **except** *severity* ]

**no logging rate-limit**

Parameter Description	Parameter	Description
	<i>number</i>	The number of logs that can be processed in a second in the range from 1 to 10000.
	<b>all</b>	Sets rate limit to all the logs with severity level 0 to 7.
	<b>console</b>	Sets the amount of logs that can be shown in the console in a second.
	<b>except</b>	By default, the severity level is error (3). The rate of the log whose severity level is less than or equal to error (3) is not controlled.
	<i>severity</i>	Log severity level in the range from 0 to 7. The lower the level is, the higher the severity is.

**Defaults** The log rate limit function is disabled by default.

**Command Mode** Global configuration mode

**Usage Guide** Use this command to control the syslog output to prevent the massive log output.

**Configuration Examples** The following example sets the number of the logs (including debug) that can be processed in a second as 10. However, the logs with warning or higher severity level are not controlled:

```
Ruijie(config)#logging rate-limit all 10 except warnings
```

Related Commands	Command	Description
	<b>show logging count</b>	Displays log information about modules of the system.
	<b>show logging</b>	Displays basic configuration of log modules and log information in the buffer.

**Platform Description** N/A

## 8.23 logging rd on

Use this command in global configuration mode on the host to enable the log re-direction function and allow re-directing logs on slave or backup devices to the host in the VSU environment. Use **no** form of this command to disable this function.

**logging rd on**

**no logging rd on**

Parameter	Parameter	Description
Description	N/A	N/A

**Defaults** The log re-direction function is enabled by default.

**Command Mode** Global configuration mode

**Usage Guide** The log information on slave or back devices not only can be shown on the Console window of slave or backup devices, but also can be re-directed to the host and exported to the Console and VTY windows of the host, and recorded in cache, expanded FLASH and Syslog Server of the host.

**Configuration** The following example enables the log re-direction function on a device:

**Examples** Ruijie(config)#logging rd on

Related	Command	Description
Commands	<b>show logging count</b>	Displays log information about modules of the system.
	<b>show logging</b>	Displays basic configuration of log modules and log information in the buffer.

**Platform Description** N/A

## 8.24 logging rd rate-limit

Use this command in global configuration mode on the host to enable the log re-direction rate limiting function to limit the number of logs that can be re-directed from a slave or backup device to the host each second in the VSU environment. Use the **no** form of this command to disable this function.

**logging rd rate-limit** *number* [ **except** [ *severity* ] ]

**no logging rd rate-limit**

Parameter	Parameter	Description
Description	<i>number</i>	Log information that can be re-directed each second, ranging from 1 to 10,000 logs
	<b>except</b>	Log information on or lower than the severity level will not be limited; error (3) by default, log information on or lower than the error level is not limited.

<i>severity</i>	Log information severity level; lower the level is, higher the severity is, ranging from 0 to 7
-----------------	---

**Defaults** The maximum number of logs that can be re-directed each second is 200 by default.

**Command Mode** Global configuration mode

**Usage Guide** This command is used to control the output of log information by system re-direction. You can use this command to prevent a slave or backup device from re-directing a large number of logs to the host.

**Configuration Examples** The following example sets the maximum number of logs (including debug) that can be re-directed from a slave device to the host each second at 10, excepting logs on and above the warning severity level:

```
Ruijie(config)#logging rd rate-limit 10 except warnings
```

**Related Commands**

Command	Description
<b>show logging count</b>	Displays log information about modules of the system.
<b>show logging</b>	Displays basic configuration of log modules and log information in the buffer.

**Platform Description** N/A

## 8.25 logging server

Use this command to send the logs to the specified Syslog Sever in global configuration mode. Use the **no** form of this command to remove the setting. Use the **default** form of this command to restore the default setting.

**logging server** { *ip-address* | **ipv6** *ipv6-address* } [ **udp-prot** *port* ]

**no logging server** { *ip-address* | **ipv6** *ipv6-address* }

**no logging server** { *ip-address* | **ipv6** *ipv6-address* } **udp-prot**

**Parameter Description**

Parameter	Description
<i>ip-address</i>	IP address of the host that receives log information.
<i>ipv6-address</i>	Specifies IPV6 address for the host receiving the logs.
<b>udp-port</b> <i>port</i>	Specifies the port number for the specified host (The default port number is 514).

**Defaults** No log is sent to any syslog server by default.

**Command** Global configuration mode

**Mode**

**Usage Guide** This command specifies a Syslog server to receive the logs of the device. Users are allowed to configure up to 5 Syslog Servers. The log information will be sent to all the configured Syslog Servers at the same time.

**Configuration** The following example specifies a syslog server of the address 202.101.11.1:

**Examples** Ruijie(config)# **logging server** 202.101.11.1

The following example specifies an ipv6 address as AAAA:BBBB:FFFF:

Ruijie(config)# **logging server ipv6** AAAA:BBBB:FFFF

Related Commands	Command	Description
	<b>logging on</b>	Turns on the log switch.
	<b>show logging</b>	Displays log messages and related log configuration parameters in the buffer.
	<b>logging trap</b>	Sets the level of logs allowed to be sent to Syslog server.

**Platform** N/A  
**Description**

## 8.26 logging source interface

Use this command to configure the source interface of logs in global configuration mode. Use the **no** form of this command to restore the default setting.

**logging source** [ **interface** ] *interface-type interface-number*

**no logging source** [ **interface** ]

Parameter Description	Parameter	Description
	<i>interface-type</i>	Interface type.
	<i>interface-number</i>	Interface number.

**Defaults** No source interface is configured by default.

**Command**  
**Mode** Global configuration mode

**Usage Guide** By default, the source address of the log messages sent to the syslog server is the address of the sending interface. For easy tracing and management, this command can be used to fix the source address of all log messages as an interface address, so that the administrator can identify which device is sending the message through the unique addresses. If the source interface is not configured on the device, or no IP address is configured for the source interface, the source address of the log messages is the address of the sending interface.

**Configuration** The following example specifies loopback 0 as the source address of the syslog messages:

**Examples** Ruijie(config)# **logging source interface loopback 0**

Related Commands	Command	Description
	<b>logging server</b>	Sends logs to the Syslog server.

**Platform  
Description** N/A

## 8.27 logging source ip | ipv6

Use this command to configure the source IP address of logs in global configuration mode. Use the **no** form of this command to restore the default setting.

**logging source {ip ip-address | ipv6 ipv6-address}**

**no logging source { ip | ipv6 }**

Parameter Description	Parameter	Description
	<i>ip-address</i>	Specifies the source IPV4 address sending the logs to IPV4 log server.
	<i>ipv6-address</i>	Specifies the source IPV6 address sending the logs to IPV6 log server.

**Defaults** No source address is configured by default.

**Command  
Mode** Global configuration mode

**Usage Guide** By default, the source address of the log messages sent to the syslog server is the address of the sending interface. For easy tracing and management, this command can be used to fix the source address of all log messages as an address, so that the administrator can identify which device is sending the message through the unique addresses. If this IP address is not configured on the device, the source address of the log messages is the address of the sending interface.

**Configuration** The following example specifies 192.168.1.1 as the source address of the syslog messages:

**Examples** Ruijie(config)# **logging source ip 192.168.1.1**

Related Commands	Command	Description
	<b>logging server</b>	Sends the logs to the Syslog server.

**Platform  
Description** N/A

## 8.28 logging statistic enable

Use this command to enable logging periodically. Use **no** form of this command to restore the default setting.

**logging statistic enable**

**no logging statistic enable**

Parameter Description	Parameter	Description
	N/A	N/A

**Defaults** This function is disabled by default.

**Command Mode** Global configuration mode

**Usage Guide** This command is used to send performance statistics at a certain interval for the server to monitor the system performance.

**Configuration** The following example enables logging periodically.

**Examples** Ruijie(config)# logging statistic enable

Related Commands	Command	Description
	N/A	N/A

**Platform Description** N/A

## 8.29 logging statistic interval

Use this command to configure the interval at which logs are sent. Use the **no** form of this command to restore the default setting.

**logging statistic mnemonic *mnemonic* interval *minutes***

**no logging statistic mnemonic *mnemonic***

Parameter Description	Parameter	Description
	<i>mnemonic</i>	Sets the mnemonics to identify the object.
	<i>minutes</i>	Sets the interval at which logs are sent, in the unit of minutes.

**Defaults** The default is 15.



**Command** Global configuration mode  
**Mode**

**Usage Guide** The available settings include 0, 15, 30, 60 and 120. 0 indicates this function is disabled.

**Configuration** The following example set the interval at which logs are sent to 30 minutes.

**Examples** Ruijie(config)# logging statistic mnemonic TUNNEL\_STAT interval 30

**Related  
Commands**

Command	Description
N/A	N/A

**Platform  
Description** N/A

## 8.30 logging statistic terminal

Use this command to enable logs to be sent to the console and the remote terminal periodically. Use the **no** form of this command to restore the default setting.

**logging statistic terminal**

**no logging statistic terminal**

**Parameter  
Description**

Parameter	Description
N/A	N/A

**Defaults** This function is disabled by default.

**Command** Global configuration mode  
**Mode**

**Usage Guide** N/A

**Configuration** The following example enable logs to be sent to the console and the remote terminal.

**Examples** Ruijie(config)# logging statistic terminal

**Related  
Commands**

Command	Description
N/A	N/A

**Platform  
Description** N/A

## 8.31 logging synchronous

Use this command to enable synchronization function between user input and log output in line configuration mode to prevent interruption when the user is keying in characters. Use the **no** form of this command to restore the default setting.

**logging synchronous**

**no logging synchronous**

Parameter	Parameter	Description
Description	N/A	N/A

**Defaults** The synchronization function between user input and log output is disabled by default.

**Command Mode** Line configuration mode

**Usage Guide** This command enables synchronization function between user input and log output, preventing the user from interrupting when keying in the characters.

**Configuration Examples**

```
Ruijie(config)#line console 0
Ruijie(config-line)#logging synchronous
```

Print UP-DOWN logs on the port when keying in the command, the input command will be output again:

```
Ruijie# configure terminal
Oct 9 23:40:55 %LINK-5-CHANGED: Interface GigabitEthernet 0/1, changed state to down
Oct 9 23:40:55 %LINEPROTO-5-UPDOWN: Line protocol on Interface GigabitEthernet 0/1, changed state to DOWN
Ruijie# configure terminal//----the input command by the user is output again rather than being intererupted.
```

Related Commands	Command	Description
	<b>show running-config</b>	Displays the configuration.

**Platform Description** N/A

## 8.32 logging trap

Use this command to set the severity of logs that are allowed to be sent to the syslog server in global configuration mode. Use the **no** form of this command to prohibit sending log messages to the Syslog server.

**logging trap** [*level*]**no logging trap**

Parameter	Parameter	Description
Description	<i>level</i>	Severity of the log message. The name of the severity or the numeral can be used. For the details of log severity, see Table 1.

**Defaults** The default is informational(6)**Command Mode** Global configuration mode**Usage Guide** To send logs to the Syslog Server, run the **logging** command in global configuration mode to configure the **Syslog Server**. Then, run the **logging trap** command to specify the severity level of logs to be sent.The **show logging** command displays the configured related parameters and statistics of the log.**Configuration Examples** The following example enables logs at severity 6 to be sent to the Syslog Server with the address of 202.101.11.22:

```
Ruijie(config)# logging 202.101.11.22
Ruijie(config)# logging trap informational
```

Related Commands	Command	Description
	<b>logging on</b>	Turns on the log switch.
	<b>logging</b>	Sends logs to the Syslog server.
	<b>show logging</b>	Displays the log messages and related log configuration parameters in the buffer.

**Platform Description** N/A

## 8.33 logging userinfo

Use this command to enable the logging function to record user log/exit. Use the **no** form of this command to restore the default setting.

**logging userinfo****no logging userinfo**

Parameter Description	Parameter	Description
	N/A	N/A

**Defaults** No log message is printed recording user log/exit by default.

**Command** Global configuration mode  
**Mode**

**Usage Guide** This command is used to print the log message to remind the administrator of user login. The log message is in the format as follows:

```
Mar 22 14:05:45 %LOGIN-5-LOGIN_SUCCESS: User login from vty0 (192.168.23.68)
OK.
```

**Configuration** The following example enables the logging function to record user log/exit.

**Examples** Ruijie(config)# logging user-info

**Related  
Commands**

Command	Description
N/A	N/A

**Platform** N/A  
**Description**

## 8.34 logging userinfo command-log

Use this command to enable the logging function to record user operation. Use the **no** form of this command to restore the default setting.

**logging userinfo command-log**

**no logging userinfo command-log**

**Parameter  
Description**

Parameter	Description
N/A	N/A

**Defaults** No log message is printed recording user operation by default.

**Command** Global configuration mode  
**Mode**

**Usage Guide** This command is used to print the log message to remind the administrator of configuration change. The log message is in the format as follows:

```
Mar 22 14:10:40 %CLI-5-EXEC_CMD: Configured from vty0 (192.168.23.68)
command-log: logging server 192.168.23.68.
```

**Configuration** The following example enables the logging function to record user operation.

**Examples** Ruijie(config)# logging user-info command-log

**Related**

Command	Description
---------	-------------

Commands		
	N/A	N/A

**Platform** N/A

**Description**

## 8.35 service log-format rfc5424

Use this command to enable the RFC5424 format. Use the **no** form of this command to restore the default setting.

**service log-format rfc5424**

**no service log-format rfc5424**

Parameter Description	Parameter	Description
	N/A	N/A

**Defaults** The RFC3164 format is used by default.

**Command** Global configuration mode  
**Mode**

**Usage Guide** After the RFC5424 format is enabled, the service sequence-numbers, service sysname, **service timestamps**, **service private-syslog** and **service standard-syslog** commands become invalid and hidden.

After switching back to the RFC3164 format, the **logging delay-send**, **logging policy** and **logging statistic** commands become invalid and hidden.

After switching the log format, the results of running the **show logging** and **show logging config** commands change,

**Configuration** The following example enables the RFC5424 format.

**Examples** Ruijie(config)# service log-format rfc5424

Related Commands	Command	Description
	N/A	N/A

**Platform** N/A  
**Description**

## 8.36 service private-syslog

Use this command to set the syslog format to the private syslog format. Use the **no** form of this

command to restore the default setting.

**service private-syslog**

**no service private-syslog**

Parameter Description	Parameter	Description
	N/A	N/A

**Defaults** The syslog is displayed in the default format.

**Command Mode** Global configuration mode

**Usage Guide** By default, the syslog is displayed in the format as follows:

\*timestamp: %facility-severity-mnemonic: description

Here is an example:

```
*May 31 23:25:21: %SYS-5-CONFIG_I: Configured from console by console
```

With this function enabled, the syslog is displayed in the format as follows:

timestamp facility-severity-mnemonic: description

Here is an example:

```
May 31 23:31:28 SYS-5-CONFIG_I: Configured from console by console
```

The difference between the private syslog format and the default syslog format lies in the following marks:

The private syslog does not have "\*" before the timestamp, ":" after the timestamp and "%" before the identifying string.

**Configuration** The following example sets the private syslog format.

**Examples** Ruijie(config)# service private-syslog

Related Commands	Command	Description
	N/A	N/A

**Platform** N/A  
**Description**

## 8.37 service sequence-numbers

Use this command to attach serial numbers into the logs in global configuration mode. Use the **no** form of this command to restore the default setting.

**service sequence-numbers**

**no service sequence-numbers**

Parameter	Parameter	Description
Description	N/A	N/A
Defaults	No serial number is contained in the logs by default.	
Command Mode	Global configuration mode	
Usage Guide	In addition to the timestamp, you can add serial numbers to the logs, numbering from 1. Then, it is clearly known whether the logs are lost or not and their sequence.	
Configuration Examples	The following example adds serial numbers to the logs. <pre>Ruijie(config)# service sequence-numbers</pre>	
Related Commands	Command	Description
	<b>logging on</b>	Turns on the log switch.
	<b>service timestamps</b>	Attaches timestamps to the logs.
Platform Description	N/A	

## 8.38 service standard-syslog

Use this command to set the syslog format to the standard syslog format defined in RFC3164. Use the **no** form of this command to restore the default setting.

**service standard-syslog**

**no service standard-syslog**

Parameter	Parameter	Description
Description	N/A	N/A
Defaults	The syslog is displayed in the default format.	
Command Mode	Global configuration mode	
Usage Guide	By default, the syslog is displayed in the format as follows: *timestamp: %facility-severity-mnemonic: description Here is an example: <pre>*May 31 23:25:21: %SYS-5-CONFIG_I: Configured from console by console</pre> With this function enabled, the syslog is displayed in the format as follows:	

timestamp %facility-severity-mnemonic: description

Here is an example:

```
May 31 23:31:28 %SYS-5-CONFIG_I: Configured from console by console
```

The difference between the standard syslog format and the default syslog format lies in the following marks:

The standard syslog does not have “\*” before the timestamp and “:” after the timestamp.

**Configuration** The following example sets the standard syslog format.

**Examples** Ruijie(config)# service standard-syslog

**Related  
Commands**

Command	Description
N/A	N/A

**Platform** N/A

**Description**

## 8.39 service sysname

Use this command to attach system name to logs in global configuration mode. Use the **no** form of this command to restore the default setting.

**service sysname**

**no service sysname**

**Parameter  
Description**

Parameter	Description
N/A	N/A

**Defaults** No system name is attached to logs by default.

**Command  
Mode** Global configuration mode

**Usage Guide** This command allows you to decide whether to add system name in the log information.

**Configuration** The following example adds a system name in the log information:

**Examples**

```
Mar 22 15:28:02 %SYS-5-CONFIG: Configured from console by console
Ruijie #config terminal
Enter configuration commands, one per line. End with CNTL/Z.
Ruijie (config)#service sysname
Ruijie (config)#end
Ruijie #
Mar 22 15:35:57 S3250 %SYS-5-CONFIG: Configured from console by console
```



Related Commands	Command	Function
	<b>show logging</b>	Displays basic configuration of log modules and log information in the buffer.

Platform  
Description

N/A

## 8.40 service timestamps

Use this command to attach timestamp into logs in global configuration mode. Use the **no** form of this command to remove the timestamp from the logs. Use the **default** form of this command to restore the default setting.

**service timestamps** [ *message-type* [ **uptime** | **datetime** [ **msec** | **year** ] ] ]

**no service timestamps** [ *message-type* ]

**default service timestamps** [ *message-type* ]

Parameter Description	Parameter	Description
	<i>message-type</i>	The log type, including <b>Log</b> and <b>Debug</b> . The <b>log</b> type indicates the log information with severity levels of 0 to 6. The <b>debug</b> type indicates that with severity level 7.
	<b>uptime</b>	Device start time in the format of *Day*Hour*Minute*Second, for example, 07:00:10:41.
	<b>datetime</b>	Current time of the device in the format of Month*Date*Hour*Minute*Second, for example, Jul 27 16:53:07.
	<b>msec</b>	Current time of the device in the format of Month*Date*Hour*Minute*Second*milisecond, for example, Jul 27 16:53:07.299
	<b>year</b>	Current time of the device in the format of Year*Month*Date*Hour*Minute*Second, for example, 2007 Jul 27 16:53:07

**Defaults** The time stamp in the log information is the current time of the device. If the device has no RTC, the time stamp is automatically set to the device start time.

**Command Mode** Global configuration mode

**Usage Guide** When the **uptime** option is used, the time format is the running period from the last start of the device to the present time, in seconds. When the **datetime** option is used, the time format is the date of the current device, in the format of YY-MM-DD, HH:MM:SS.

**Configuration Examples** The following example enables the timestamp for **log** and **debug** information, in format of Datetime, supporting millisecond display.

```
Ruijie(config)# service timestamps debug datetime msec
Ruijie(config)# service timestamps log datetime msec
Ruijie(config)# end
Ruijie(config)# Oct 8 23:04:58.301 %SYS-5-CONFIG I: configured from console
by console
```

Related Commands	Command	Description
	logging on	Turns on the log switch.
	service sequence-numbers	Enables serial numbers of logs.

**Platform Description** N/A

## 8. 41 show logging

Use this command to display configured parameters and statistics of logs and log messages in the memory buffer at privileged user layer. The log messages are sorted by the timestamp from before to now.

### show logging

Parameter	Parameter	Description
Description	N/A	N/A

**Defaults** N/A

**Command Mode** Privileged EXEC mode

**Usage Guide** N/A

**Configuration Examples** The following command displays the result of the **show logging** command with RFC5424 format disabled.

```
Ruijie# show logging
Syslog logging: enabled
  Console logging: level debugging, 15495 messages logged
  Monitor logging: level debugging, 0 messages logged
  Buffer logging: level debugging, 15496 messages logged
  Standard format: false
  Timestamp debug messages: datetime
```

```

Timestamp log messages: datetime
Sequence-number log messages: enable
Sysname log messages: enable
Count log messages: enable
Trap logging: level informational, 15242 message lines logged,0 fail
  logging to 202.101.11.22
  logging to 192.168.200.112
Log Buffer (Total 131072 Bytes): have written 1336,
015487: *Sep 19 02:46:13: Ruijie %LINK-3-UPDOWN: Interface FastEthernet 0/24,
changed state to up.
015488: *Sep 19 02:46:13: Ruijie %LINEPROTO-5-UPDOWN: Line protocol on
Interface FastEthernet 0/24, changed state to up.
015489: *Sep 19 02:46:26: Ruijie %LINK-3-UPDOWN: Interface FastEthernet 0/24,
changed state to down.
015490: *Sep 19 02:46:26: Ruijie %LINEPROTO-5-UPDOWN: Line protocol on
Interface FastEthernet 0/24, changed state to down.
015491: *Sep 19 02:46:28: Ruijie %LINK-3-UPDOWN: Interface FastEthernet
0/24, changed state to up.
015492: *Sep 19 02:46:28: Ruijie %LINEPROTO-5-UPDOWN: Line protocol on
Interface FastEthernet 0/24, changed state to up.

```

Log information description:

Field	Description
Syslog logging	Logging flag: enabled or disabled
Console logging	Level of the logs printed on the console, and statistics
Monitor logging	Level of the logs printed on the VTY window, and statistics
Buffer logging	Level of the logs recorded in the memory buffer, and statistics.
Standard format	Standard log format.
Timestamp debug messages	Timestamp format of the Debug messages
Timestamp log messages	Timestamp format of the Log messages
Sequence-number log messages	Serial number switch
Sequence log messages	Attaches system names to the logs.
Count log messages	Log statistics function
Trap logging	Level of the logs sent to the syslog server, and statistics
Log Buffer	Log files recorded in the memory buffer

The following example displays the result of the **show logging** command with RFC5424 format enabled.

```
Ruijie# show logging
Syslog logging: enabled
  Console logging: level debugging, 4740 messages logged
  Monitor logging: level debugging, 0 messages logged
  Buffer logging: level debugging, 4745 messages logged
  Statistic log messages: disable
  Statistic log messages to terminal: disable
  Delay-send file name:syslog_ftp_server, Current write index:3, Current send
index:3, Cycle:10 seconds
  Count log messages: enable
  Trap logging: level informational, 2641 message lines logged,4155 fail
  logging to 192.168.23.89
  logging to 2000::1
  Delay-send logging: 2641 message lines logged
  logging to 192.168.23.89 by tftp
Log Buffer (Total 4096 Bytes): have written 4096, Overwritten 3292
<135>1 2013-07-24T12:19:33.130290Z ruijie - 7 - - Please config the IP address
for capwap.
<132>1 2013-07-24T12:20:02.80313Z ruijie CAPWAP 4 NO_IP_ADDR - No ip address
for capwap.
<135>1 2013-07-24T12:20:02.80343Z ruijie - 7 - - Please config the IP address
for capwap.
<132>1 2013-07-24T12:20:32.250265Z ruijie CAPWAP 4 NO_IP_ADDR - No ip address
for capwap.
<134>1 2013-07-24T12:29:33.410123Z ruijie SYS 6 SHELL_LOGIN [USER@4881
name="" type="" from="console"] user login success.
<134>1 2013-07-24T12:29:34.343763Z ruijie SYS 6 SHELL_CMD
[USER@4881 name=""][CMD@4881 task="rl_con" cmd="enable"]
```

Field	Description
Syslog logging	Logging flag: enabled or disabled
Console logging	Level of the logs printed on the console, and statistics
Monitor logging	Level of the logs printed on the VTY window, and statistics
Buffer logging	Level of the logs recorded in the memory buffer, and statistics.
Count log messages	Log statistics function
Statistic log messages	Enables/disables log sending periodically
Statistic log messages to terminal	Enables/ disables log sending to console and remote terminal
Delay-send file name	Local filename of log delay-sending cache, index of write file and delay interval
Trap logging	Level of the logs sent to the syslog server and statistics

Delay-send logging	The server address, log sending mode and statistics
Log Buffer	Log files recorded in the memory buffer

Related Commands	Command	Function
	<b>logging on</b>	Turns on the log switch.
	<b>clear logging</b>	Clears the log messages in the buffer.

**Platform  
Description** N/A

## 8.42 show logging config

Use this command to display log configuration and statistics.

**show logging config**

Parameter Description	Parameter	Description
	N/A	N/A

**Defaults** N/A

**Command  
Mode** Privileged EXEC mode

**Usage Guide** N/A

**Configuration  
Examples** The following example displays the outcome of running the **show logging config** command with RFC5424 disabled.

```
Ruijie# show logging config
Syslog logging: enabled
  Console logging: level debugging, 15495 messages logged
  Monitor logging: level debugging, 0 messages logged
  Buffer logging: level debugging, 15496 messages logged
  Standard format: false
  Timestamp debug messages: datetime
  Timestamp log messages: datetime
  Sequence-number log messages: enable
  Sysname log messages: enable
  Count log messages: enable
  Trap logging: level informational, 15242 message lines logged,0 fail
    logging to 202.101.11.22
    logging to 192.168.200.112
```

Field	Description
-------	-------------

Syslog logging	Whether the logging function is enabled or disabled.
Console logging	The level and statistics of the log message printed on the console.
Monitor logging	The level and statistics of the log message printed on the VTY window.
Buffer logging	The level and statistics of the log message recorded in the memory buffer.
Standard format	Standard log format.
Timestamp debug messages	Timestamp format of debugging message.
Timestamp log messages	Timestamp format of log message.
Sequence-number log messages	Whether the sequence number function is enabled or disabled.
Sysname log messages	Adds the system name to the log message.
Count log messages	Log-counting function
Trap logging	The level and statistics of the log message sent to the syslog server.

The following example displays the outcome of running the **show logging config** command with RFC5424 enabled.

```
Ruijie# show logging
Syslog logging: enabled
  Console logging: level debugging, 4740 messages logged
  Monitor logging: level debugging, 0 messages logged
  Buffer logging: level debugging, 4745 messages logged
  Statistic log messages: disable
  Statistic log messages to terminal: disable
  Delay-send file name:syslog_ftp_server, Current write index:3, Current send
index:3, Cycle:10 seconds
  Count log messages: enable
  Trap logging: level informational, 2641 message lines logged,4155 fail
logging to 192.168.23.89
logging to 2000::1
  Delay-send logging: 2641 message lines logged
logging to 192.168.23.89 by tftp
```

Field	Description
Syslog logging	Logging flag: enabled or disabled
Console logging	Level of the logs printed on the console, and statistics
Monitor logging	Level of the logs printed on the VTY window, and statistics
Buffer logging	Level of the logs recorded in the memory buffer, and statistics.
Count log messages	Log statistics function
Statistic log messages	Enables/disables log sending periodically

Statistic log messages to terminal	Enables/ disables log sending to output console and remove terminal
Delay-send file name	Local filename of log delay-sending cache, index of write file and delay interval
Trap logging	Level of the logs sent to the syslog server and statistics
Delay-send logging	The server address, log sending way and statistics

#### Related Commands

Command	Description
N/A	N/A

Platform N/A

Description

## 8.43 show logging count

Use this command to display the statistics about occurrence times, and the last occurrence time of each module log in the system in privileged mode.

### show logging count

#### Parameter Description

Parameter	Description
N/A	N/A

Defaults N/A

Command Mode Privileged EXEC mode

**Usage Guide** To use the log packet statistics function, run the **logging count** command in global configuration mode. The **show logging count** command can show the information of a specific log, occurrence times, and the last occurrence time.

You can use the **show logging** command to check whether the log statistics function is enabled.

**Configuration Examples** The following example displays the result of the **show logging count** command:

```
Ruijie# show logging count
Module Name  Message Name Sev Occur      Last Time
SYS          CONFIG_I      5   1        Jul 6 10:29:57
SYS TOTAL                    1
```

#### Related Commands

Command	Function
logging count	Enables the log statistics function.

<b>show logging</b>	Displays basic configuration of log modules and log information in the buffer.
<b>clear logging</b>	Clears the logs in the buffer.

**Platform**  
**Description**

N/A

## 8.44 show logging reverse

Use this command to display configured parameters and statistics of logs and log messages in the memory buffer at privileged user layer. The log messages are sorted by the timestamp from now to before.

**show logging reverse**

Parameter Description	Parameter	Description
	N/A	N/A

**Defaults**

N/A

**Command Mode**

Privileged EXEC mode

### Usage Guide

**Configuration Examples** The following command displays the result of the **show logging reverse** command with RFC5424 format disabled.

```
Ruijie# show logging reverse
Syslog logging: enabled
  Console logging: level debugging, 15495 messages logged
  Monitor logging: level debugging, 0 messages logged
  Buffer logging: level debugging, 15496 messages logged
  Standard format: false
  Timestamp debug messages: datetime
  Timestamp log messages: datetime
  Sequence-number log messages: enable
  Sysname log messages: enable
  Count log messages: enable
  Trap logging: level informational, 15242 message lines logged,0 fail
    logging to 202.101.11.22
    logging to 192.168.200.112
Log Buffer (Total 131072 Bytes): have written 1336,
015492: *Sep 19 02:46:28: Ruijie %LINEPROTO-5-UPDOWN: Line protocol on
Interface FastEthernet 0/24, changed state to up.
```



```

015491: *Sep 19 02:46:28: Ruijie %LINK-3-UPDOWN: Interface FastEthernet 0/24,
changed state to up.
015490: *Sep 19 02:46:26: Ruijie %LINEPROTO-5-UPDOWN: Line protocol on
Interface FastEthernet 0/24, changed state to down.
015489: *Sep 19 02:46:26: Ruijie %LINK-3-UPDOWN: Interface FastEthernet 0/24,
changed state to down.
015488: *Sep 19 02:46:13: Ruijie %LINEPROTO-5-UPDOWN: Line protocol on
Interface FastEthernet 0/24, changed state to up.
015487: *Sep 19 02:46:13: Ruijie %LINK-3-UPDOWN: Interface FastEthernet 0/24,
changed state to up.

```

Field	Description
Syslog logging	Logging flag: enabled or disabled
Console logging	Level of the logs printed on the console, and statistics
Monitor logging	Level of the logs printed on the VTY window, and statistics
Buffer logging	Level of the logs recorded in the memory buffer, and statistics.
Standard format	Standard log format.
Timestamp debug messages	Timestamp format of the Debug messages
Timestamp log messages	Timestamp format of the Log messages
Sequence-number log messages	Serial number switch
Sequence log messages	Attaches system names to the logs.
Count log messages	Log statistics function
Trap logging	Level of the logs sent to the syslog server, and statistics
Log Buffer	Log files recorded in the memory buffer

The following example displays the result of the **show logging reverse** command with RFC5424 format enabled.

```

Ruijie# show logging reverse
Syslog logging: enabled
  Console logging: level debugging, 4740 messages logged
  Monitor logging: level debugging, 0 messages logged
  Buffer logging: level debugging, 4745 messages logged
  Statistic log messages: disable
  Statistic log messages to terminal: disable
  Delay-send file name:syslog_ftp_server, Current write index:3, Current send
index:3, Cycle:10 seconds

```

```

Count log messages: enable
Trap logging: level informational, 2641 message lines logged, 4155 fail
logging to 192.168.23.89
logging to 2000::1
Delay-send logging: 2641 message lines logged
logging to 192.168.23.89 by tftp
Log Buffer (Total 4096 Bytes): have written 4096, Overwritten 3292
<134>1 2013-07-24T12:29:34.343763Z ruijie SYS 6 SHELL_CMD [USER@4881
name=""][CMD@4881 task="rl_con" cmd="enable"]
<134>1 2013-07-24T12:29:33.410123Z ruijie SYS 6 SHELL_LOGIN [USER@4881 name=""
type="" from="console"] user login success.
<132>1 2013-07-24T12:20:32.250265Z ruijie CAPWAP 4 NO_IP_ADDR - No ip address
for capwap.
<135>1 2013-07-24T12:20:02.80343Z ruijie - 7 - - Please config the IP address
for capwap.
<132>1 2013-07-24T12:20:02.80313Z ruijie CAPWAP 4 NO_IP_ADDR - No ip address
for capwap.
<135>1 2013-07-24T12:19:33.130290Z ruijie - 7 - - Please config the
IP address for capwap.

```

Field	Description
Syslog logging	Logging flag: enabled or disabled
Console logging	Level of the logs printed on the console, and statistics
Monitor logging	Level of the logs printed on the VTY window, and statistics
Buffer logging	Level of the logs recorded in the memory buffer, and statistics.
Count log messages	Log statistics function
Statistic log messages	Enables/disables log sending periodically
Statistic log messages to terminal	Enables/ disables log sending to console and remote terminal
Delay-send file name	Local filename of log delay-sending cache, index of write file and delay interval
Trap logging	Level of the logs sent to the syslog server and statistics
Delay-send logging	The server address, log sending mode and statistics
Log Buffer	Log files recorded in the memory buffer

#### Related Commands

Command	Description
N/A	N/A

#### Platform Description

N/A

## 8.45 terminal monitor

Use this command to show logs on the current VTY window. Use the **no** form of this command to restore the default setting.

**terminal monitor**

**terminal no monitor**

### Parameter Description

Parameter	Description
N/A	N/A

### Defaults

Log information is not allowed to be displayed on the VTY window by default.

### Command Mode

Privileged EXEC mode

### Usage Guide

This command only sets the temporary attributes of the current VTY. As the temporary attribute, it is not stored permanently. At the end of the VTY terminal session, the system will use the default setting, and the temporary setting is invalid. This command can be also executed on the console, but it does not take effect.

### Configuration

The following example allows log information to be printed on the current VTY window:

### Examples

```
Ruijie# terminal monitor
```

### Related Commands

Command	Description
N/A	N/A

### Platform Description

N/A

### Command History

Version	Description
N/A	N/A

## 9 CWMP Commands

### 9.1 acs password

Use this command to configure the ACS password to be authenticated for the CPE to connect to the ACS. Use the **no** form of this command to cancel the configuration.

**acs password** { *password* | *encryption-type encrypted-password* }

**no acs password**

#### Parameter Description

Parameter	Description
<i>password</i>	Configures the ACS user password to be authenticated for the CPE to connect to the ACS.
<i>encryption-type</i>	Specifies the encryption type, which can be set to 0 (indicating that no encryption is used) or 7 (indicating that simple encryption is used).
<i>encrypted-password</i>	Specifies the password in encrypted form.

#### Defaults



encryption-type: 0  
encrypted-password: N/A

#### Command Mode

CWMP configuration mode

#### Usage Guide

Use this command to configure the ACS user password to be authenticated for the CPE to connect to the ACS. In general, the encryption type does not need to be specified. The encryption type needs to be specified only when copying and pasting the encrypted password of this command. A valid password should meet the following format requirements:

-  The command contains English letters in upper or lower case and numeric characters.
-  Blanks are allowed at the beginning of the password but will be ignored. Intermediate and ending blanks, however, are regarded as a part of the password.

#### Configuration Examples

The following example configures the ACS password to be authenticated for the CPE to connect to the ACS to 123.

```
Ruijie#config terminal
Enter configuration commands, one per line. End with CNTL/Z.
Ruijie(config)#cwmp
Ruijie(config-cwmp)#acs password 123
Ruijie(config-cwmp)#
```

#### Related Commands

Command	Description
---------	-------------

<b>show cwmp configuration</b>	Displays the current configuration of CWMP.
<b>show cwmp status</b>	Displays the running status of CWMP.
<b>acs username</b>	Configures the ACS username to be authenticated for the CPE to connect to the ACS.

**Platform** N/A

**Description**

## 9.2 acs url

Use this command to configure the URL of the ACS to which the CPE will connect.

Use the **no** form of this command to restore the default setting.

**acs url** *url*

**no acs url**

**Parameter  
Description**

Parameter	Description
<i>url</i>	Specifies the URL of the ACS.

**Defaults** N/A

**Command  
Mode** CWMP configuration mode

**Usage Guide** Use this command to configure the URL of the ACS to which the CPE will connect. If no ACS URL is manually specified but a dynamic ACS URL is obtained through DHCP, the CPE initiates a connection to the ACS using the dynamically obtained ACS URL. The URL of the ACS should meet the following format requirements:

- The URL of the ACS is formatted as [http://host\[:port\]/path](http://host[:port]/path) or [https://host\[:port\]/path](https://host[:port]/path).
- The URL of the ACS consists of at most 256 characters.

**Configuration** The following example specifies the URL of the ACS to <http://10.10.10.1:8080/acs>.

**Examples**

```
Ruijie#configure terminal
Enter configuration commands, one per line. End with CNTL/Z.
Ruijie(config)#cwmp
Ruijie(config-cwmp)#acs url http://10.10.10.1:8080/acs
Ruijie(config-cwmp)#
```

The following example specifies the URL of the ACS to <http://www.test.com/service/tr069servlet>.

```
Ruijie#configure terminal
Enter configuration commands, one per line. End with CNTL/Z.
Ruijie(config)#cwmp
Ruijie(config-cwmp)#acs url http://www.test.com/service/tr069servlet
```

```
Ruijie(config-cwmp) #
```

**Related  
Commands**

Command	Description
<b>show cwmp configuration</b>	Displays the current configuration of CWMP.
<b>show cwmp status</b>	Displays the running status of CWMP.

**Platform** N/A  
**Description**

## 9.3 acs username

Use this command to configure the ACS username to be authenticated for the CPE to connect to the ACS. Use the **no** form of this command to restore the default setting.

**acs username** *username*  
**no acs username**

**Parameter  
Description**

Parameter	Description
<i>username</i>	Configures the ACS username to be authenticated for the CPE to connect to the ACS.

**Defaults** N/A

**Command Mode** CWMP configuration mode

**Usage Guide** Configures the ACS username to be authenticated for the CPE to connect to the ACS.

**Configuration Examples** The following example configures the ACS username to be authenticated for the CPE to connect to the ACS to admin.

```
Ruijie#config terminal
Enter configuration commands, one per line. End with CNTL/Z.
Ruijie(config)#cwmp
Ruijie(config-cwmp)#acs username admin
Ruijie(config-cwmp) #
```

**Related  
Commands**

Command	Description
<b>show cwmp configuration</b>	Displays the current configuration of CWMP.
<b>show cwmp status</b>	Displays the running status of CWMP.
<b>acs password</b>	Configures the ACS password to be authenticated for the CPE to connect to the

ACS.

**Platform** N/A**Description**

## cpe back-up

Use this command to configure the backup and restoration of the main program and configuration file of the CPE.

Use the **no** form of this command to disable this function.

**cpe back-up** [ **delay-time** *seconds* ]

**no cpe back-up**

**Parameter  
Description**

Parameter	Description
<i>seconds</i>	Specifies the delay for backup and restoration of the main program and configuration file of the CPE, in the range from 30 to 10,000 in the unit of seconds

**Defaults** The default is 60 seconds.**Command  
Mode** CWMP configuration mode

**Usage Guide** You can configure the restoration function on a CPE, so that the CPE can restore itself from exceptions of its main program or configuration file. Then when the CPE fails to connect to the ACS and breaks away from the NMS after its main program or configuration file is upgraded, the previous main program or configuration file of the CPE can be restored in time for the ACS to manage the CPE. This kind of exception is generally caused by delivery of a wrong main program or configuration file.

**Configuration Examples** The following example disables the backup and restoration of the main program and configuration file of the CPE.

```
Ruijie#config terminal
Enter configuration commands, one per line. End with CNTL/Z.
Ruijie(config)#cwmp
Ruijie(config-cwmp)#no cpe back-up
Ruijie(config-cwmp)#
```

**Related  
Commands**

Command	Description
<b>show cwmp configuration</b>	Displays the current configuration of CWMP.
<b>show cwmp status</b>	Displays the running status of CWMP.

**Platform** N/A  
**Description**

## 9.4 cpe back-up

Use this command to enable the CPE backup function.

Use the **no** form of this command to restore the default setting.

**cpe back-up** [*delay-time seconds*]

**no cpe back-up**

Parameter Description	Parameter	Description
	<i>seconds</i>	Sets the backup delay time (30-10,000 seconds).

**Defaults** The default is 60 seconds.

**Command** CWMP configuration mode  
**Mode**

**Usage Guide** After upgrading main programs or configurations, CPE cannot communicate with ACS for wrong configuration delivery. Use this command to recover the previous programs and configurations.

**Configuration** The following example disables the CPE backup function.

### Examples

```
Ruijie#config terminal
Enter configuration commands, one per line. End with CNTL/Z.
Ruijie(config)#cwmp
Ruijie(config-cwmp)#no cpe back-up
Ruijie(config-cwmp)#
```

**Platform** N/A  
**Description**

## 9.5 cpe inform

Use this command to configure the periodic notification function of the CPE.

Use the **no** form of this command to restore the default setting

**cpe inform** [ *interval seconds* ] [ *starttime time* ]

**no cpe inform**

Parameter Description	Parameter	Description
	<i>seconds</i>	Specifies the periodical notification interval of the CPE in the range




	from 30 to 3,600 in the unit of seconds.
<i>time</i>	Specifies the date and time for starting periodical notification in yyyy-mm-ddThh:mm:ss format.

**Defaults** The default is 600 seconds.

**Command Mode** CWMP configuration mode

**Usage Guide** Use this command to configure the periodic notification function of the CPE.

- If the time for starting periodical notification is not specified, periodical notification starts after the periodical notification function is enabled. The notification is performed once within every notification interval.
- If the time for starting periodical notification is specified, periodical notification starts at the specified start time. For instance, if the periodical notification interval is set to 60 seconds and the start time is 12:00 am next day, periodical notification will start at 12:00 am next day and once every 60 seconds.

 The narrower periodical notification interval allows the ACS to track the latest CPE status more accurately. However, narrower periodical notification interval brings about more sessions between the CPE and the ACS, consuming more resources of them. So the user should specify the periodical notification interval of the CPE to a reasonable value according to the network performance and the ACS performance.

**Configuration Examples** The following example specifies the periodical notification interval of the CPE to 60 seconds.

```
Ruijie#config terminal
Enter configuration commands, one per line. End with CNTL/Z.
Ruijie(config)#cwmp
Ruijie(config-cwmp)#cpe inform interval 60
Ruijie(config-cwmp)#
```

**Related Commands**

Command	Description
<b>show cwmp configuration</b>	Displays the current configuration of CWMP.
<b>show cwmp status</b>	Displays the running status of CWMP.

**Platform** N/A

**Description**

## 9.6 cpe password

Use this command to configure the CPE password to be authenticated for the ACS to connect to the CPE. Use the **no** form of this command to cancel the configuration.

**cpe password** { *password* | *encryption-type encrypted-password* }  
**no cpe password**

**Parameter  
Description**

Parameter	Description
<i>password</i>	Configures the CPE user password to be authenticated for the ACS to connect to the CPE.
<i>encryption-type</i>	Specifies the encryption type, which can be set to 0 (indicating that no encryption is used) or 7 (indicating that simple encryption is used).
<i>encrypted-password</i>	Specifies the password in encrypted form.

**Defaults**



encryption-type: 0  
encrypted-password: N/A

**Command  
Mode**

CWMP configuration mode

**Usage Guide**

Use this command to configure the CPE user password to be authenticated for the ACS to connect to the CPE. In general, the encryption type does not need to be specified. The encryption type needs to be specified only when copying and pasting the encrypted password of this command. A valid password should meet the following format requirements:

-  The command contains English letters in upper or lower case and numeric characters.
-  Blanks are allowed at the beginning of the password but will be ignored. Intermediate and ending blanks, however, are regarded as a part of the password.

**Configuration  
Examples**

The following example configures the CPE password to be authenticated for the ACS to connect to the CPE to 123.

```
Ruijie#config terminal
Enter configuration commands, one per line. End with CNTL/Z.
Ruijie(config)#cwmp
Ruijie(config-cwmp)#cpe password 123
Ruijie(config-cwmp)#
```

**Related  
Commands**

Command	Description
<b>show cwmp configuration</b>	Displays the current configuration of CWMP.
<b>show cwmp status</b>	Displays the running status of CWMP.
<b>acs username</b>	Configures the CPE username to be authenticated for the ACS to connect to the CPE.

**Platform**

N/A

**Description**

## 9.7 cpe url

Use this command to configure the URL of the CPE to which the ACS will connect.

Use the **no** form of this command to restore default setting.

**cpe url** *url*

**no cpe url**

**Parameter  
Description**

Parameter	Description
<i>url</i>	Specifies the URL of the CPE.

**Defaults** N/A

**Command  
Mode** CWMP configuration mode

**Usage Guide** Use this command to configure the URL of the CPE to which the ACS will connect. If no CPE URL is manually specified but a dynamic CPE URL is obtained through DHCP, the ACS initiates a connection to the CPE using the dynamically obtained CPE URL. The URL of the CPE should meet the following format requirements:

- The URL of the CPE is formatted as http://ip [: port ]/ path.
- The URL of the CPE consists of at most 256 characters.

**Configuration** The following example specifies the URL of the CPE to <http://10.10.10.1:7547/acs>.

**Examples**

```
Ruijie#configure terminal
Enter configuration commands, one per line. End with CNTL/Z.
Ruijie(config)#cwmp
Ruijie(config-cwmp)#cpe url Hhttp://10.10.10.1:7547/
Ruijie(config-cwmp)#
```

**Related  
Commands**

Command	Description
<b>show cwmp configuration</b>	Displays the current configuration of CWMP.
<b>show cwmp status</b>	Displays the running status of CWMP.

**Platform** N/A

**Description**

## 9.8 cpe username

Use this command to configure the ACS username to be authenticated for the CPE to connect to the

ACS.

Use the **no** form of this command to restore the default setting.

**cpe username** *username*

**no cpe username**

Parameter Description	Parameter	Description
	<i>username</i>	Configures the CPE username to be authenticated for the ACS to connect to the CPE.

**Defaults** N/A

**Command Mode** CWMP configuration mode

**Usage Guide** Configures the CPE username to be authenticated for the ACS to connect to the CPE.

**Configuration Examples** The following example configures the CPE username to be authenticated for the ACS to connect to the CPE to admin.

```
Ruijie#config terminal
Enter configuration commands, one per line. End with CNTL/Z.
Ruijie(config)#cwmp
Ruijie(config-cwmp)#cpe username admin
Ruijie(config-cwmp)#
```

Related Commands	Command	Description
	<b>show cwmp configuration</b>	Displays the current configuration of CWMP.
	<b>show cwmp status</b>	Displays the running status of CWMP.
	<b>cpe password</b>	Configures the CPE password to be authenticated for the ACS to connect to the CPE.

**Platform** N/A

**Description**

## 9.9 cwmp

Use this command to enable the CWMP function.

Use the **no** form of this command to disable this function.

**cwmp**

**no cwmp**

Parameter	Parameter	Description
-----------	-----------	-------------

Description		
	N/A	N/A

**Defaults** N/A

**Command Mode** Global configuration mode

**Usage Guide** Use this command to enable or disable the CWMP function.

**Configuration** The following example disables the CWMP function.

**Examples**

```
Ruijie#config terminal
Enter configuration commands, one per line. End with CNTL/Z.
Ruijie(config)#no cwmp
Ruijie(config)#
```

Related Commands	Command	Description
	<b>show cwmp configuration</b>	Displays the current configuration of CWMP.
	<b>show cwmp status</b>	Displays the running status of CWMP.

**Platform** N/A

**Description**

## 9.10 disable download

Use this command to disable the function of downloading main program and configuration files from the ACS. Use the **no** form of this command to restore the default setting.

**disable download**

**no disable download**

Parameter Description	Parameter	Description
	N/A	N/A

**Defaults** By default, the CPE can download main program and configuration files from the ACS.

**Command Mode** CWMP configuration mode

**Usage Guide** N/A

**Configuration Examples** The following example disables the function of downloading main program and configuration files from the ACS.

```
Ruijie#config terminal
Enter configuration commands, one per line. End with CNTL/Z.
Ruijie(config)#cwmp
Ruijie(config-cwmp)#disable download
Ruijie(config-cwmp)#
```

**Related  
Commands**

Command	Description
<b>show cwmp configuration</b>	Displays the current configuration of CWMP.
<b>show cwmp status</b>	Displays the running status of CWMP.

**Platform** N/A**Description**

## 9.11 disable upload

Use this command to disable the function of uploading configuration and log files to the ACS.

Use the **no** form of this command to restore the default setting.

**disable upload**

**no disable upload**

**Parameter  
Description**

Parameter	Description
N/A	N/A

**Defaults** By default, the CPE can upload its configuration and log files to the ACS.**Command  
Mode** CWMP configuration mode**Usage Guide** Disables the function of uploading configuration and log files to the ACS.**Configuration** The following example disables the function of uploading configuration and log file to the ACS.**Examples**

```
Ruijie#config terminal
Enter configuration commands, one per line. End with CNTL/Z.
Ruijie(config)#cwmp
Ruijie(config-cwmp)#disable upload
Ruijie(config-cwmp)#
```

**Related  
Commands**

Command	Description
<b>show cwmp configuration</b>	Displays the current configuration of CWMP.
<b>show cwmp status</b>	Displays the running status of CWMP.

**Platform** N/A  
**Description**

## 9.12 show cwmp configuration

Use this command to display the current configuration of CWMP.

**show cwmp configuration**

Parameter Description	Parameter	Description
	N/A	N/A

**Defaults** N/A

**Command Mode** Privilege EXEC mode

### Usage Guide

**Configuration** The following example displays the current configuration of CWMP.

**Examples**

```
Ruijie(config-cwmp)#show cwmp configuration
CWMP Status           : enable
ACS URL                : http://www.ruijie.com.cn/acs
ACS username           : admin
ACS password           : *****
CPE URL                : http://10.10.10.2:7547/
CPE username           : ruijie
CPE password           : *****
CPE inform status      : disable
CPE inform interval    : 60s
CPE inform start time   : 0:0:0 0 0 0
CPE wait timeout       : 50s
CPE download status    : enable
CPE upload status      : enable
CPE back up status     : enable
CPE back up delay time : 60s
```

The descriptions to the fields shown after executing the command **show cwmp configuration**.

Field	Description
CWMP Status	Running status of CWMP.
ACS URL	URL of the ACS.
ACS username	ACS username to be authenticated for the CPE to connect to the ACS.
ACS password	ACS password to be authenticated for the CPE to connect to the ACS.

CPE URL	URL of the CPE.
CPE username	CPE username to be authenticated for the ACS to connect to the CPE.
CPE password	CPE password to be authenticated for the ACS to connect to the CPE.
CPE inform status	Status of CPE periodical notification function.
CPE inform interval	CPE periodical notification interval.
CPE wait timeout	Timeout period of CPE sessions.
CPE inform start time	The start time of periodical notification.
CPE download status	Indicates whether to download main program and configuration files from the ACS.
CPE upload status	Indicates whether to upload configuration files and log files to the ACS.
CPE back up status	Indicates whether backup and restoration of the main program and configuration file is enabled.
CPE back up delay time	Delay time of the backup and restoration of the main program and configuration files.

#### Related Commands

Command	Description
<b>show cwmp status</b>	Displays the running status of CWMP.

**Platform** N/A  
**Description**

## 9.13 show cwmp status

Uses this command to display the running status of CWMP

**show cwmp status**

#### Parameter Description

Parameter	Description
N/A	N/A

**Defaults** N/A

**Command Mode** Privileged EXEC mode

**Usage Guide** N/A

**Configuration** The following example displays the running status of CWMP.

**Examples** Ruijie#show cwmp status



```
CWMP Status           : enable
Session status         : Close
Last success session   : Unknown
Last success session time : Thu Jan 1 00:00:00 1970
Last fail session      : Unknown
Last fail session time  : Thu Jan 1 00:00:00 1970
Session retry times    : 0
```

The descriptions to the fields shown after executing the command **show cwmp configuration**.

Field	Description
CWMP Status	The running status of CWMP
Session status	The current status of the session between the CPE and the ACS
Last success session	The last success session type
Last success session time	The last success session time
Last fail session	The last failed session type
Last fail session time	The last failed session time
Session retry times	The number of session retransmission attempts

**Related  
Commands**

Command	Description
<b>show cwmp configuration</b>	Displays the current configuration of CWMP.

**Platform  
Description**

N/A

## 9.14 timer cpe-timeout

Uses this command to configure the session timeout period of the CPE.

**timer cpe- timeout** *seconds*

**no timer cpe-timeout**

**Parameter  
Description**

Parameter	Description
<i>seconds</i>	Sets the session timeout, in the range from 10 to 600 in the unit of seconds.

**Defaults** By default, the session timeout period is 30 seconds.

**Command  
Mode** CWMP configuration mode

**Usage Guide** Use this command to configure the session timeout period of the CPE.  
The maximum waiting period that the CPE has when the CPE failed to receive the ACS reply.

**Configuration** The following example configures the session timeout period of the CPE to 50 seconds.

**Examples**

```
Ruijie#config terminal
Enter configuration commands, one per line. End with CNTL/Z.
Ruijie(config)#cwmp
Ruijie(config-cwmp)#timer cpe-timeout 50
Ruijie(config-cwmp)#
```

**Related  
Commands**

Command	Description
<b>show cwmp configuration</b>	Displays the current configuration of CWMP.
<b>show cwmp status</b>	Displays the running status of CWMP.

**Platform** N/A  
**Description**

## 10 CA-MONITOR Commands

### 10.1 show power

Use this command to display power information including that of its basic condition, redundancy, allocation and version and etc.

**show power]**

Parameter Description	Parameter	Description
	N/A	N/A

**Command Mode** Privileged EXEC mode

**Level** 14

**Usage Guide** This command is used to display power information

Configuration Examples	N/A
------------------------	-----

**Prompt Messages** N/A

**Platforms** N/A

### 10.2 show fan

Use this command to display the operating status and speed adjustment mode of all the fan trays.

**show fan [ speed ]**

Parameter Description	Parameter	Description
	N/A	N/A

**Command Mode** Privileged EXEC mode

**Level** 14

**Usage Guide** Use the show fan command without parameters to display the operating status and speed adjustment

mode of all the fan trays.

**Configuration** The following example displays the power information of S29XS.

**Examples**

```
Ruijie#show fan
Fan-id Fan-type  Status
-----
1      RG_FAN   ok
Ruijie#show fan speed
Fan-id Fan-type  Status      Speed(R/m)  Speed-level
-----
1      RG_FAN   ok          5040        N/A
```

The following example displays the power information of S29XS PoE.

```
Ruijie#show fan
Fan-id Fan-type  Status
-----
1      RG_FAN   ok
2      RG_FAN   ok
Ruijie#show fan speed
Fan-id Fan-type  Status      Speed(R/m)  Speed-level
-----
1      RG_FAN   ok          N/A         1
2      RG_FAN   ok          N/A         1
Ruijie#
```

**Prompt** N/A

**Messages**

**Platforms** N/A

## 10.3 show temperature

Use this command to display board temperature, threshold configuration and other information.

show temperature

**Parameter  
Description**

Parameter	Description
N/A	N/A

**Command  
Mode** Privileged EXEC mode

**Level** 14

**Usage Guide** Use the command to display the current temperature and threshold configuration of each board.

The temperature threshold of CA products involves the alarm threshold and the hazard threshold.

Alarm threshold: When the temperature of the board exceeds the alarm threshold, the active supervisor module generates a Syslog message and the Alarm LED on the panel becomes yellow.

Hazard threshold: It indicates the power-off temperature. When the temperature of the board exceeds the hazard threshold, the board powers off automatically. In addition, the active supervisor module generates a Syslog message and the Alarm LED on the panel becomes red.

**Configuration** The following example displays the temperature and threshold configuration of all boards of S29XS.

**Examples**

```
Ruijie#show temperature
Slot    Card_type                Current(C)  Status
-----
1/0     S2910-48GT4XS-E             43         ok
        S2910-48GT4XS-E             42         ok
Ruijie#
```

The following example displays the temperature and threshold configuration of all boards of S29XS PoE.

```
Ruijie#show temperature
slot_type                Current(C)  Status
-----
0      S2910C-24GT2XS-HP-E      28         ok
Ruijie#
```

**Prompt Messages** N/A

**Platforms** N/A

## 11 ZAM Commands

### 11.1 show zam

Use this command to display the current configuration and status of ZAM.

**show zam**

Parameter Description	Parameter	Description
	N/A	N/A

**Defaults** N/A

**Command Mode** Privileged EXEC mode/Global configuration mode/Interface configuration mode

**Usage Guide** N/A

**Configuration Examples** The following example displays the current configuration and status of ZAM.

```
Ruijie#
Ruijie#show zam
ZAM state           : disable
ZAM status          : Now is idle
ZAM manage interface: Mgmt 0

Ruijie#
```

**Platform Description** N/A

### 11.2 zam

Use this command to enable ZAM. Use the **no** form of this command to disable ZAM.

**zam**

Parameter Description	Parameter	Description
	N/A	N/A

**Defaults** N/A

**Command**  
**Mode**            Global configuration mode

**Usage Guide**

**Configuration**    The following example disables ZAM.

**Examples**

```
Ruijie(config)# no zam
Ruijie(config)#
```

**Platform**        N/A  
**Description**

## 12 Module Hot-plugging/ unplugging Commands

### 12.1 remove configure device device-id

Use this command to remove the configuration on a VSU device, which validates in VSU mode after restart.

**remove configure device** *device-id*

Parameter Description	Parameter	Description
	<i>device-id</i>	The chassis number.

**Defaults** N/A

**Command Mode** Global configuration mode

**Usage Guide** This command is used to remove the configuration on a VSU device. It validates after the device is restarted.

**Configuration Examples** The following example clears the configuration on device 1.

```
Ruijie(config)# remove configure device 1
```

Related Commands	Command	Description
	N/A	N/A

**Platform Description** N/A

### 12.2 show manuinfo

Use this command to display asset information about all independent components in the system for asset management, including the chassis, fan, power, management board, and line card. The information covers the ID, slot number, name, serial number (SN), software and hardware version, and MAC address. Not all devices support display of the same information and only supported information is printed.

**show manuinfo**

Parameter Description	Parameter	Description



N/A	N/A
-----	-----

Defaults N/A

Command Privileged EXEC mode  
Mode

Usage Guide This command is used to display asset information about all independent components in the system

Configuration The following example displays asset information of the single physical device.

Examples

```
Ruijie#show manuinfo
Device 1
  Location:                Chassis
  Device name:              RG S12006
  Device Serial Number:     62150129A8B0DAF0F0321
  Hardware Version:         V1.0
  Mac Address:              00.D0.F8.00.11.22

Device 2
  Location:                Slot-M1
  Device name:              M12000 CM
  Device Serial Number:     32150129A8B0DAF0F0321
  Hardware Version:         V1.0
  Software Version:         RGOS 10.4(3b17) Release 129646
  Mac Address:              00.D0.F8.00.11.34

Device 3
  Location:                Slot-1
  Device name:              M12000-04XFP-EA
  Device Serial Number:     32150129A8B0DAF0F0322
  Hardware Version:         V1.0
  Software Version:         RGOS 10.4(3b17) Release 129646

Device 4
  Location:                Slot-2
  Device name:              M12000-04XFP-EA
  Device Serial Number:     32150129A8B0DAF0F0323
  Hardware Version:         V1.0
  Software Version:         RGOS 10.4(3b17) Release 129646

Device 5
  Location:                Power 1
  Device name:              RG PD1200I
  Device Serial Number:     42150129A8B0DAF0F0321
```

```
Hardware Version:      V1.0

Device 6
  Location:            Power 2
  Device name:         RG PD1200I
  Device Serial Number: 42150129A8B0DAF0F0322
  Hardware Version:    V1.0

Device 7
  Location:            FAN
  Device name:         M12000 FAN
  Device Serial Number: 52150129A8B0DAF0F0321
  Hardware Version:    V1.0
```

The following example displays asset information in VSU mode.

```
Ruijie#show manuinfo

Device 1
  Location:            Chassis 1
  Device name:         RG S12006
  Device Serial Number: 62150129A8B0DAF0F0321
  Hardware Version:    V1.0
  Mac Address:         00.D0.F8.00.11.22

Device 2
  Location:            Slot-1/M1
  Device name:         M12000 CM
  Device Serial Number: 32150129A8B0DAF0F0321
  Hardware Version:    V1.0
  Software Version:    RGOS 10.4(3b17) Release 129646
  Mac Address:         00.D0.F8.00.11.56

Device 3
  Location:            Slot-1/1
  Device name:         M12000-04XFP-EA
  Device Serial Number: 32150129A8B0DAF0F0322
  Hardware Version:    V1.0
  Software Version:    RGOS 10.4(3b17) Release 129646

Device 4
  Location:            Slot-1/2
  Device name:         M12000-04XFP-EA
  Device Serial Number: 32150129A8B0DAF0F0323
  Hardware Version:    V1.0
  Software Version:    RGOS 10.4(3b17) Release 129646
```

## Device 5

Location: Power 1/1  
Device name: RG PD1200I  
Device Serial Number: 42150129A8B0DAF0F0321  
Hardware Version: V1.0

## Device 6

Location: Power 1/2  
Device name: RG PD1200I  
Device Serial Number: 42150129A8B0DAF0F0322  
Hardware Version: V1.0

## Device 7

Location: FAN 1  
Device name: M12000 FAN  
Device Serial Number: 52150129A8B0DAF0F0322  
Hardware Version: V1.0

## Device 8

Location: Chassis 2  
Device name: RG S12006  
Device Serial Number: 62150129A8B0DAF0F0322  
Hardware Version: V1.0  
Software Version: RGOS 10.4(3b17) Release 129646  
Mac Address: 00.D0.F8.00.11.33

## Device 9

Location: Slot-2/M1  
Device name: M12000 CM  
Device Serial Number: 32150129A8B0DAF0F0324  
Hardware Version: V1.0  
Software Version: RGOS 10.4(3b17) Release 129646  
Mac Address: 00.D0.F8.00.11.22

## Device 10

Location: Slot-2/1  
Device name: M12000-04XFP-EA  
Device Serial Number: 32150129A8B0DAF0F0325  
Hardware Version: V1.0  
Software Version: RGOS 10.4(3b17) Release 129646

## Device 11

Location: Slot-2/2  
Device name: M12000-04XFP-EA

```

Device Serial Number:      32150129A8B0DAF0F0326
Hardware Version:          V1.0
Software Version:          RGOS 10.4(3b17) Release 129646

Device 12
  Location:                 Power 2/1
  Device name:              RG PD1200I
  Device Serial Number:     42150129A8B0DAF0F0323
  Hardware Version:         V1.0

Device 13
  Location:                 Power 2/2
  Device name:              RG PD1200I
  Device Serial Number:     42150129A8B0DAF0F0324
  Hardware Version:         V1.0

Device 14
  Location:                 FAN 2
  Device name:              M12000 FAN
  Device Serial Number:     52150129A8B0DAF0F0322
  Hardware Version:         V1.0

```

Related  
Commands

Command	Description
N/A	N/A

Platform  
Description

N/A

## 12.3 show sysmac

Use this command to display the MAC address of the current system.

**show sysmac**

Parameter  
Description

Parameter	Description
N/A	N/A

Defaults

N/A

Command  
Mode

Privileged EXEC mode.

**Usage Guide** N/A

**Configuration** The following example displays the MAC address of the current system.

**Examples**

```
Ruijie#show sysmac
00d0.f822.33e2
```

**Related  
Commands**

Command	Description
N/A	N/A

**Platform** N/A

**Description**

## 12.4 show version module detail

Use this command to display the details of the module.

**show version module detail** [ *slot-num* ]

**show version module detail** [ *device-id* / *slot-num* ]

**Parameter  
Description**

Parameter	Description
<i>slot-num</i>	(Optional) Slot number.
<i>device-id</i>	(Optional) Device ID.

**Defaults** N/A

**Command  
Mode** Privileged EXEC mode.

**Usage Guide** Use this command to display details of the module

**Configuration** Ruijie# **show version module detail** 2

**Examples**

```
Device   : 1
Slot     : 2
User Status :    none
Software Status: none
Online Module :
Type     :
Ports    : 0
Version  :
Configured Module :
Type     :
Ports    :
Version  :
```

```
Ruijie#
```

#### Related Commands

Command	Description
<b>show version slots</b>	Displays slot details.

**Platform** N/A

**Description**

## 12.5 show version slots

Use this command to display the details of the slot.

**show version slots** [ *slot-num* ]

**show version slots** [ *device-id* / *slot-num* ]

#### Parameter Description

Parameter	Description
<i>slot-num</i>	(Optional) Slot number.
<i>device-id</i>	(Optional) Device ID.

**Defaults** N/A

**Command Mode** Privileged EXEC mode.

**Usage Guide** N/A

**Configuration** Ruijie# **show version slots**

**Examples**

```

Dev Slot  Configured Module  Online Module  User Status  Software Status
-----
1 1      none              none
1 2  M8606-24SFP/12GT  M8606-24SFP/12GT  installed none
1 3  M8606-2XFP  M8606-2XFP  uninstalled  cannot startup
1 4  M8606-24GT/12SFP  M8606-24GT/12SFP  installed ok
1 M1  M8606-CM    M8606-CM                master
1  M2

```

#### Related Commands

Command	Description
<b>show version moduel detail</b>	Displays the details of the module.

**Platform** N/A

**Description**

## 12.6 sysmac

Use this command to configure a MAC address for the system. Use the **no** form of this command to remove the setting.

**Sysmac** *mac-address*

**no sysmac**

Parameter Description	Parameter	Description
	<i>mac-address</i>	Configures a MAC address for the system.

**Defaults** N/A

**Command Mode** Global configuration mode

- Usage Guide**
1. In general, the MAC address is programmed on the management board or the chassis flash. In virtual switching unit (VSU) mode, the system saves the MAC address in use in the configuration file to avoid flow interruption caused by MAC address change. The valid MAC address saved in the configuration file validates in preference after the device is restarted,
  2. The MAC address of the gateway may be bound on some downstream devices. If the system is configured with the **auth-mode gateway** command, you can use the **sysmac** command to replace the MAC address of the gateway without changing the MAC address configuration on the downstream devices.
  3. The configuration takes effect after the device is restarted.

**Configuration** The following example deletes the MAC address saved in the configuration file.

**Examples** Ruijie#no sysmac

The following example configures MAC address 00d0.f822.33e2 for the system.

Ruijie#sysmac 00d0.f822.33e2

Related Commands	Command	Description
	N/A	N/A

**Platform Description** N/A

## 13 Supervisor Module Redundancy Commands

### 13.1 auto-sync time-period

Use this command to configure the auto-sync time-period of running-config and startup-config when the dual supervisor module is redundant. Use the **no** form of this command to disable automatic synchronization for the dual supervisor modules. Use the **default** form of this command to restore the default automatic synchronization time period for the dual supervisor modules.

**auto-sync time-period** *value*

**no auto-sync time-period**

**default auto-sync time-period**

Parameter Description	Parameter	Description
	<i>value</i>	Automatic synchronization time interval measured in seconds, in the range from one second to one month (2,678,400 seconds).

**Defaults** The default is one hour (3600 seconds) by default.

**Command Mode** Redundancy configuration mode

**Usage Guide** N/A

**Configuration** The following example sets the automatic synchronization interval to 60 seconds.

**Examples**

```
Ruijie(config)# redundancy
Ruijie(config-red)# auto-sync time-period 60
Redundancy auto-sync time-period: enabled (60 seconds).
Ruijie(config-red)# exit
```

The following example disables automatic synchronization.

```
Ruijie(config)# redundancy
Ruijie(config-red)# no auto-sync time-period
Redundancy auto-sync time-period: disabled.
Ruijie(config-red)# exit
```

Related Commands	Command	Description
	N/A	N/A

**Platform Description** N/A



## 13.2 redundancy

Use this command to enter redundancy configuration mode.

**redundancy**

Parameter Description	Parameter	Description
	N/A	N/A

**Defaults** N/A

**Command  
Mode** Global configuration mode

**Usage Guide** N/A

**Configuration** The following example enters redundancy configuration mode.

**Examples**

```
Ruijie# config terminal
Ruijie(config)# redundancy
Ruijie(config-red)# exit
```

Related Commands	Command	Description
	N/A	N/A

**Platform  
Description** N/A

## 13.3 redundancy forceswitch

Use this command to perform active/standby supervisor module switchover.

**redundancy forceswitch**

Parameter Description	Parameter	Description
	N/A	N/A

**Defaults** N/A

**Command  
Mode** Privileged EXEC mode

**Usage Guide** If this command is executed on the active supervisor module, the module will be reset and the standby supervisor module will act as an active supervisor module.

The following conditions are required to perform hot backup switchover:

- This command is executed on the active supervisor module. There is a standby supervisor module.
- Hot backups on all virtual switch devices (VSDs) are in real-time status.
- Hot backup switchovers on VSDs are not prevented temporarily by any service entity.

When there are multiple VSDs, the system judges whether the hot backup on each VSD allows active/standby switchover; If any VSD does not allow the switchover, the command fails. Otherwise, active/standby switchovers are enforced on all VSDs.

**Configuration** The following example performs active/standby supervisor module switchover.

**Examples**

```
Ruijie# redundancy forceswitch
This operation will reload the master unit and force switchover to the slave
unit. Are you sure to continue? [N/y] y
```

Related Commands	Command	Description
	<b>reload</b>	Resets the active supervisor module.


**Platform** N/A

**Description**

## 13.4 redundancy reload

Use this command to reset the supervisor module.

**redundancy reload { peer | shelf [ switchid ] }**

Parameter Description	Parameter	Description
	<b>peer</b>	Resets the standby supervisor module.
	<b>shelf</b>	Resets both the active and standby supervisor modules on the device which works as a single physical device. The device ID should be specified on the device which works as a Virtual Switching Unit (VSU) device.
	<i>switchid</i>	VSU device ID, supported on a VSU device.   This parameter is not supported in stand-alone mode. It must be contained in the <b>redundancy reload shelf</b> command in VSU mode.

**Defaults** N/A

**Command** Privileged EXEC mode

**Mode**

**Usage Guide** Resetting the supervisor module does not affect data forwarding. Data forwarding will not be interrupted and the user session information will not be missing.

The **redundancy reload shelf** command is used to reset the device which works as a single physical device. The **redundancy reload shelf switchid** command is used to reset the specified device which works as a VSU device.

**Configuration** The following example resets the standby supervisor module.

**Examples**

```
Ruijie# redundancy reload peer
This operation will reload the current slave unit. Are you sure to continue?
[N/y] y
Preparing to reload peer!
```

The following example resets device 2 which works as a VSU device.

```
Ruijie# redundancy reload shelf 2
This operation will reload the device 2. Are you sure to continue? [N/y] y
Preparing to reload device 2!
```

**Related  
Commands**

Command	Description
N/A	N/A

**Platform** N/A

**Description**

## 13.5 show redundancy states

Use this command to display the current redundancy state.

**show redundancy states**

**Parameter  
Description**

Parameter	Description
N/A	N/A

**Defaults** N/A

**Command Mode** User EXEC mode / Privileged EXEC mode

**Usage Guide** Currently, only 1:1 hot backup (for the global active module and standby module) is supported in the VSU mode. Therefore, only the hot backup state of the local and peer device is displayed.

**Configuration** The following example displays the redundancy states of active supervisor module.

**Examples**

```
Ruijie> enable
Ruijie# show redundancy states
Redundancy role: master
Redundancy state: realtime
Auto-sync time-period: 3600 s
```

The following example displays the redundancy state of the standby supervisor module.

```
Ruijie> enable
Ruijie# show redundancy states
Redundancy role: slave
Redundancy state: realtime
```

The following example displays the redundancy state of the candidate supervisor module.

```
Ruijie> enable
Ruijie# show redundancy states
Redundancy role: candidate
Redundancy state: none
```

Field	Description
role	The role of the supervisor module.
state	The state of the supervisor module.
Auto-sync time-period	Displayed on the active supervisor module. The configuration file synchronizes the time interval automatically. "disabled" indicates no automatic synchronization.

**Related  
Commands**

Command	Description
N/A	N/A

**Platform  
Description**

N/A

## 14 PoE Management Commands

### 14.1 poe class-lldp enable

Use this command to configure LLDP two-event classification. Use the **no** or **default** form of this command to restore the default setting.

**poe class-lldp enable**

**no poe class-lldp enable**

**default poe class-lldp enable**

Parameter Description	Parameter	Description
	N/A	N/A

**Defaults** This function is disabled by default.

**Command Mode** Global configuration mode

**Usage Guide** N/A

**Configuration Examples** The following example enables LLDP two-event classification.

```
Ruijie(config)# poe class-lldp enable
Ruijie(config)# end
Ruijie#write
```

Related Commands	Command	Description
	N/A	N/A

**Platform Description** N/A

### 14.2 poe enable

Use this command to enable the power over Ethernet (PoE) function on the interface. Use the **no** form of this command to disable this function.

**poe enable**

**no poe enable**

Parameter	Parameter	Description
-----------	-----------	-------------

<b>Description</b>		
	N/A	N/A
<b>Defaults</b>	This function is enabled by default,	
<b>Command Mode</b>	Interface configuration mode	
<b>Usage Guide</b>	N/A	
<b>Configuration Examples</b>	The following example disables the PoE function on port GigabitEthernet 0/1, <pre>Ruijie(config)# interface GigabitEthernet 0/1 Ruijie(config-if-GigabitEthernet 0/1)# no poe enable</pre>	
<b>Related Commands</b>	<b>Command</b>	<b>Description</b>
	N/A	N/A
<b>Platform Description</b>	N/A	

## 14.3 poe legacy

Use this command to enable non-standard PD compatibility. Use the **no** or **default** form of this command to restore the default setting.

**poe legacy**

**no poe legacy**

**default poe legacy**

<b>Parameter Description</b>	<b>Parameter</b>	<b>Description</b>
	N/A	N/A
<b>Defaults</b>	This function is disabled by default.	
<b>Command Mode</b>	Interface configuration mode	
<b>Usage Guide</b>	N/A	
<b>Configuration Examples</b>	The following example enables non-standard compatibility for port GigabitEthernet 0/1. <pre>Ruijie(config)# interface GigabitEthernet 0/1 Ruijie(config-if-GigabitEthernet 0/1)# poe legacy</pre>	

Related Commands	Command	Description
	N/A	N/A

**Platform** N/A  
**Description**

## 14.4 poe max-power

Use this command to set the maximum power for the port. Use the **no** or **default** form of this command to restore the default setting,

**poe max-power** *int*

**no poe max-power**

**default poe max-power**

Parameter Description	Parameter	Description
	<i>int</i>	The maximum power, in the range from 0 to 30W. Note that this parameter is in the range from 0 to 15.4W on the system supporting 802.3af only. HPoE port ID is in the range from 0 to 90.

**Defaults** The maximum power is not set by default.

**Command** Interface configuration mode  
**Mode**

**Usage Guide** N/A.

**Configuration** The following example sets the maximum power for port GigabitEthernet 0/1 to 20W.

**Examples**

```
Ruijie(config)# interface GigabitEthernet 0/1
Ruijie(config-if-GigabitEthernet 0/1)# poe max-power 20
```

Related Commands	Command	Description
	N/A	N/A

**Platform** N/A  
**Description**

## 14.5 poe mode

Use this command to set the PoE management mode. Use the **no** or **default** form of this command to restore the default setting.

**poe mode { auto | energy-saving }**

**no poe mode**

**default poe mode**

### Parameter Description

Parameter	Description
<b>auto</b>	Sets the power management mode to auto mode, the default mode.
<b>energy-saving</b>	Sets the power management mode to energy-saving mode, the optional mode,

### Defaults

The default mode is auto.

### Command Mode

Global configuration mode

### Usage Guide

N/A

### Configuration

The following example sets the PoE management mode to energy-saving mode.

### Examples

```
Ruijie# configure
Ruijie(config)# poe mode energy-saving
Ruijie(config)# end
```

### Related Commands

Command	Description
N/A	N/A

### Platform

N/A

### Description

## 14.6 poe notification-control enable

Use this command to enable Trap notification in PoE MIB(RFC3621). Use the **no** or **default** form of this command to restore the default setting.

**poe notification-control enable**

**no poe notification-control enable**

**default poe notification-control enable**

### Parameter Description

Parameter	Description
-----------	-------------



N/A	N/A
-----	-----

**Defaults** This function is disabled by default.

**Command Mode** Global configuration mode

**Usage Guide** N/A

**Configuration** The following example enables Trap notification in PoE MIB(RFC3621).

**Examples**

```
Ruijie(config)# poe notification-control enable
Ruijie(config)# end
Ruijie#write
```

**Related Commands**

Command	Description
N/A	N/A

**Platform Description** N/A

## 14.7 poe pd-description

Use this command to set the PD descriptor for the port. Use the **no** or **default** form of this command to restore the default setting.

**poe pd-description** *pd-name*

**no poe pd-description**

**default poe pd-description**

**Parameter Description**

Parameter	Description
<i>pd-name</i>	PD descriptor name, a string no more than 32 characters.

**Defaults** N/A

**Command Mode** Interface configuration mode

**Usage Guide** N/A

**Configuration** The following example sets the PD descriptor for port GigabitEthernet 0/1.

**Examples**

```
Ruijie# configure
Ruijie(config)# interface GigabitEthernet 0/1
Ruijie(config-if-GigabitEthernet 0/1)# poe pd-description ap220
```

```
Ruijie(config-if-GigabitEthernet 0/1)# end
```

**Related  
Commands**

Command	Description
N/A	N/A

**Platform** N/A  
**Description**

## 14.8 poe power-off time-range name

Use this command to configure scheduled power-on for the port. Use the **no** or **default** form of this command to restore the default setting.

**poe power-off time-range** *name*

**no poe power-off time-range**

**default poe power-off time-range**

**Parameter  
Description**

Parameter	Description
<i>name</i>	Time-range name.

**Defaults** N/A

**Command** Interface configuration mode  
**Mode**

**Usage Guide** N/A

**Configuration** The following example sets the port GigabitEthernet 0/1 to be disabled from 8:30 to 17:30 every day.

**Examples**

```
Ruijie# configure
Ruijie(config)# time-range poe-time
Ruijie(config-time-range)# periodic weekdays 8:30 to 17:30
Ruijie(config-time-range)# exit
Ruijie(config)# interface GigabitEthernet 0/1
Ruijie(config-if-GigabitEthernet 0/1)# poe power-off time-range poe-time
```

**Related  
Commands**

Command	Description
N/A	N/A

**Platform** N/A  
**Description**

## 14.9 poe priority

Use this command to set the PoE priority for the port. Use the **no** or **default** form of this command to restore the default setting.

**poe priority { low | high | critical }**

**no poe priority**

**default poe priority**

Parameter Description	Parameter	Description
	{ low   high   critical }	Priority level.

**Defaults** The default is low.

**Command Mode** Interface configuration mode

**Usage Guide** N/A

**Configuration Examples** The following example sets the PoE priority for port GigabitEthernet 0/1 to critical.

```
Ruijie(config)# interface GigabitEthernet 0/1
Ruijie(config-if-GigabitEthernet 0/1)# poe priority critical
Ruijie(config-if-GigabitEthernet 0/1)# end
```

Related Commands	Command	Description
	N/A	N/A

**Platform Description** N/A

## 14.10 poe uninterruptible-power

Use this command to configure uninterruptible warm start, Use the **no** or **default** form of this command to restore the default setting.

**poe uninterruptible-power**

**no poe uninterruptible-power**

**default no poe uninterruptible-power**

Parameter Description	Parameter	Description
	N/A	N/A

**Defaults** This function is disabled by default.

**Command Mode** Global configuration mode

**Usage Guide** This function takes effect when the device is started after the configuration is saved.

**Configuration** The following example enables uninterruptible PoE for warm start and saves configuration.

**Examples**

```
Ruijie(config)# poe uninterruptible-power
Ruijie(config)# end
Ruijie#write
```

**Related Commands**

Command	Description
N/A	N/A

**Platform** N/A  
**Description**

## 14.11 poe warning-power

Use this command to set the power alarm threshold for the system. Use the **no** or **default** form of this command to restore the default setting,

**poe warning-power** *int*

**no poe warning-power**

**default poe warning-power**

**Parameter Description**

Parameter	Description
<i>int</i>	Power alarm threshold (percentage), in the range from 0 to 99.

**Defaults** The default is 99.

**Command Mode** Global configuration mode

**Usage Guide** N/A

**Configuration** The following example sets the power alarm threshold for the system to 80%.

**Examples**

```
Ruijie(config)# poe warning-power 80
Ruijie(config)# end
Ruijie#write
```

**Related**

Command	Description
---------	-------------

Commands		
	N/A	N/A

**Platform** N/A

**Description**

## 14.12 show poe interface

Use this command to display PoE configuration and status of the specified port.

**show poe interface** *interface-name*

Parameter Description	Parameter	Description
	<i>interface-name</i>	Interface name

**Defaults** N/A

**Command Mode** Privileged EXEC mode.

**Usage Guide** N/A

**Configuration** The following example displays the PoE configuration and status in interface GigabitEthernet 0/1.

**Examples** Ruijie#show poe interface GigabitEthernet 0/1

```
Interface           : Gi0/1
Power enabled       : enable
Power status        : on
Max power           : N/A
Allocate power      : N/A
Current power       : 14.8 W
Average power       : 14.8 W
Peak power          : 14.8 W
Voltage             : 53.5 V
Current             : 278 mA
PD class            : 4
Trouble cause       : None
Priority             : critical
Legacy              : off
Power-off time-range : N/A
Power management    : auto
4pair status        : normal
```

Related	Command	Description

Commands		
	N/A	N/A

**Platform** N/A

**Description**

## 14.13 show poe interfaces

Use this command to display PoE status or configuration of all ports.

**show poe interfaces status**

**show poe interfaces configuration**

Parameter	Parameter	Description
<b>Description</b>		
	<b>status</b>	Displays PoE status of all ports.
	<b>configuration</b>	Displays PoE configuration of all ports.

**Defaults** N/A

**Command** Privileged EXEC mode

**Mode**

**Usage Guide** This command is used to display PoE status or configuration of all ports.

**Configuration** The following example displays PoE status of all ports.

**Examples**

```
Ruijie#show poe interfaces status
```

Interface	Power Control	Power Status	Curr Power	Avg Power	Peak Power	Curr Current	Trouble Cause	PD Class	Port Voltage
Gi0/1	enable	on	14.8W	14.8W	14.8W	278mA	0	4	53.5V
Gi0/2	enable	on	28.4W	28.4W	28.4W	531mA	0	4	53.5V
Gi0/3	enable	on	14.9W	14.9W	14.9W	279mA	0	4	53.5V
Gi0/4	enable	off	0.0W	0.0W	0.0W	0mA	6	N/A	0.0V
Gi0/5	enable	on	14.8W	14.8W	14.8W	278mA	0	4	53.5V
Gi0/6	enable	on	15.0W	15.0W	15.0W	281mA	0	4	53.5V
Gi0/7	enable	on	6.1W	6.1W	6.1W	115mA	0	4	53.5V
Gi0/8	enable	on	14.8W	14.8W	14.8W	277mA	0	4	53.5V
Gi0/9	enable	on	14.7W	14.7W	14.7W	276mA	0	4	53.5V
Gi0/10	enable	on	14.8W	14.8W	14.8W	278mA	0	4	53.5V
Gi0/11	enable	on	14.7W	14.7W	14.7W	275mA	0	4	53.5V
Gi0/12	enable	off	0.0W	0.0W	0.0W	0mA	6	N/A	0.0V
Gi0/13	enable	on	14.8W	14.8W	14.8W	278mA	0	4	53.5V
Gi0/14	enable	on	0.3W	0.3W	0.3W	7mA	0	4	53.5V
Gi0/15	enable	off	0.0W	0.0W	0.0W	0mA	6	N/A	0.0V

```

Gi0/16   enable off   0.0W 0.0W 0.0W 0mA   6   N/A  0.0V
Gi0/17   enable off   0.0W 0.0W 0.0W 0mA   6   N/A  0.0V
Gi0/18   enable off   0.0W 0.0W 0.0W 0mA   6   N/A  0.0V
Gi0/19   enable off   0.0W 0.0W 0.0W 0mA   6   N/A  0.0V
Gi0/20   enable off   0.0W 0.0W 0.0W 0mA   6   N/A  0.0V
Gi0/21   enable off   0.0W 0.0W 0.0W 0mA   6   N/A  0.0V
Gi0/22   enable off   0.0W 0.0W 0.0W 0mA   6   N/A  0.0V
Gi0/23   enable off   0.0W 0.0W 0.0W 0mA   6   N/A  0.0V
Gi0/24   enable off   0.0W 0.0W 0.0W 0mA   6   N/A
0.0V

```

The following example displays PoE configuration of all ports.

```
Ruijie#show poe interfaces configuration
```

```

Interface  Power    Power  Max   Alloc Port      Port    Power-off
          Control Status  Power Power Priority Legacy Time-range
-----

```

```

Gi0/1      enable  on     N/A   N/A   critical off    N/A
Gi0/2      enable  on     N/A   N/A   critical off    N/A
Gi0/3      enable  on     N/A   N/A   critical off    N/A
Gi0/4      enable  off    N/A   N/A   critical off    N/A
Gi0/5      enable  on     N/A   N/A   critical off    N/A
Gi0/6      enable  on     N/A   N/A   high   off    N/A
Gi0/7      enable  on     N/A   N/A   high   off    N/A
Gi0/8      enable  on     N/A   N/A   high   off    N/A
Gi0/9      enable  on     N/A   N/A   high   off    N/A
Gi0/10     enable  on     N/A   N/A   high   off    N/A
Gi0/11     enable  on     N/A   N/A   high   off    N/A
Gi0/12     enable  off    N/A   N/A   high   off    N/A
Gi0/13     enable  on     N/A   N/A   low    off    N/A
Gi0/14     enable  on     N/A   N/A   low    off    N/A
Gi0/15     enable  off    N/A   N/A   low    off    N/A
Gi0/16     enable  off    N/A   N/A   low    off    N/A
Gi0/17     enable  off    N/A   N/A   low    off    N/A
Gi0/18     enable  off    N/A   N/A   low    off    N/A
Gi0/19     enable  off    N/A   N/A   low    off    N/A
Gi0/20     enable  off    N/A   N/A   low    off    N/A
Gi0/21     enable  off    N/A   N/A   low    off    N/A
Gi0/22     enable  off    N/A   N/A   low    off    N/A
Gi0/23     enable  off    N/A   N/A   low    off    N/A
Gi0/24     enable  off    N/A   N/A   low    off    N/A

```

#### Related Commands

Command	Description
N/A	N/A

**Platform** N/A

**Description**

## 14.14 show poe powersupply

Use this command to display the PoE power supply status.

**show poe powersupply**

Parameter Description	Parameter	Description
	N/A	N/A

**Defaults** N/A

**Command Mode** Privileged EXEC mode

**Usage Guide** N/A

**Configuration** The following example displays the PoE power supply status.

### Examples

```
Ruijie#show poe powersupply
Device member          : 1
Power management       : auto
PSE total power        : 1000W
PSE total power consumption : 300W
PSE total remain power : 700W
PSE total powered port : 0
PSE disconnect mode    : dc
PSE reserve power      : 0%
PSE warning power      : 99%
PSE class lldp         : disable
PSE uninterruptible-power : disable
    PSE member         : 1
        PSE Power status : normal      PSE Power
Enabled                : enable
    PSE max power       : 300W
    PSE priority        : low
    PSE alloc power     : 300W
    PSE available power : 300W
    PSE total power consumption : 0 W
    PSE total remain power : 300W
    PSE peak power      : 0 W
    PSE average power    : 0 W
    PSE powered port    : 0
```





Related Commands	Command	Description
	N/A	N/A

Platform  
Description

N/A

## 15 PKG\_MGMT Commands

### 15.1 clear storage

Use this command to remove an installation package on the local device.

**clearstorage** [ *url* ]

**Parameter  
Description**

Parameter	Description
<i>url</i>	A local <i>url</i> directory or full path name indicates where the installation package is stored

**Command  
Mode**

Privileged EXEC mode

**Default Level**

2

**Usage Guide**

This command is used to remove an installation package or all packages in a directory and all installation packages on the local device.

**Configuration**

```
Ruijie#clear storage
```

**Examples**

```
Remove the whole storage directory?[y/n]y
Ruijie#clear storage usb0
Remove the file or directory usb0 from the storage?[y/n]y
Ruijie#
```

**Verification**

Check specified *url*

**Platforms**

N/A

### 15.2 show component

Use this command to display all components already installed on current device and their information.

**show component** [ *component\_name* ]

**Parameter  
Description**


Parameter	Description
<i>component_name</i>	Name of the components When this parameter value is N/A, the command is used to display all components already installed on the device and basic information of these components.

	When this parameter value is not N/A, the command is used to display detailed information of the corresponding component, check whether the component is intact, and check whether this component works properly.
--	---

**Command Mode** Privileged EXEC mode

**Default Level** 2

**Usage Guide** This command includes one with *component\_name* and one without *component\_name*. During upgrade, it requires users to understand all components installed on current device and their version information before components deletion. This needs to use the **show component** command without *component\_name*. The **show component** command with *component\_name* is used to obtain details of the corresponding component. The detailed information enables users to easily realize components' operation and damage. It is significant to insure their troubleshooting, security and reliability.

 Some components in use will change their defaults files. Though this is more possibly normal than malicious, the **show component** command is used only to judge whether component files change in use. It is unable to distinguish natural damage from malicious one. It depends on users to make a further judgment.

**Configuration Examples** The following example displays all components already installed on the box device and their information.

```
Ruijie# show component
Package :sysmonit
  Version:1.0.1.23cd34aa      Build time: Wed Dec 7 00:58:56 2013
  Size:12877  Install time :Wed Mar 5 14:23:12 2012
  Description: this is a system monit package
  Required packages: None
-----
Package:bridge
  Version:2.0.1.37cd5cda      Build time: Wed Dec 7 00:54:56 2013
  Size:23245  Install time :Wed Mar 5 14:30:12 2012
  Description: this is a bridge package
  Required packages: None
-----
```

This command is used to obtain all components already installed on the device and their basic information. The information offers a basis for users to decide whether to upgrade or delete components.

Field	Description
Package	Name of the component
Version	Version number of the component

Build time	Compilation time of the component on the server
Size	Content size of the component
Install time	Installation time of the component
Description	Simple functional description of the component
Required packages	Name of required packages

The following example displays the information of specified components already installed on the box device.

```
Ruijie# show componentbridge
package:bridge
  Version: 2.3.1.1252ea      Build time: Wed Dec 7 00:54:56 2013
  Size:26945  Install time : Wed Mar 19:23:15 2012
  Description:this is a bridge package
  Required packages: None
  Package files:
    /lib64
    /lib64/libbridge.so
    /sbin
    /sbin/bridge

  Package file validate: [OK]
  Required relationship verify: [OK]
```

The other information except the basic information of components is listed as follows.

Field	Description
Package file validate	Checks whether the component files are intact. "OK" is displayed when all component files work properly; "ERR" is displayed together with their names when some component files are lost or revised.
Required package	Lists all required packages of the component. "OK" is labeled if required components are already installed; "ERR" is labeled if not together with detailed description about their names and versions.
Package files	Lists all files contained in the package.

#### Prompt Messages

The execution is successful with all components information displayed.

```
Package :sysmonit
  Version:1.0.1.23cd34aa      Build time: Wed Dec 7 00:58:56 2013
  Size:12877  Install time :Wed Mar 5 14:23:12 2012
  Description: this is a system monit package
  Required packages: None
```

```
-----  
Package:bridge  
  Version:2.0.1.37cd5cda      Build time: Wed Dec 7 00:54:56 2013  
  Size:23245  Install time :Wed Mar 5 14:30:12 2012  
  Description: this is a bridge package  
  Required packages: None  
-----
```

## 15.3 show upgrade auto-sync

Use this command to display related auto-sync configuration on the device.

**show upgrade auto-sync**

Parameter Description	Parameter	Description
	N/A	N/A

**Command Mode** Privileged EXEC mode

**Default Level** 2

**Usage Guide** This command is used to display the auto-sync upgrade configuration in the system including the policy, range and upgrade package's path.

**Prompt** The auto-sync information of the system is displayed after running.

**Messages**

```
Ruijie#show upgrade auto-sync  
  auto-sync policy: coordinate  
  auto-sync range: vsu  
  auto-sync package: flash:/eg1000m_main_1.0.0.0f328e91.bin
```

## 15.4 show upgrade file

Use this command to display the information of the installation package files in the device file system.

**show upgrade file *url***

Parameter Description	Parameter	Description
	<i>url</i>	The local <i>url</i> path indicates where an installation package file is stored.

**Command** Privileged EXEC mode

**Mode****Default Level** 2

**Usage Guide** This command is used to preview main messages of an installation package after it is downloaded into local file system.

**Configuration** The following example displays the information of an installation package file.

**Examples**

```
Ruijie# show upgrade file flash://bridge_eg1000m_2.3.1.1252ea-1.mips.rpm
Name      : bridge
Version:1.0.1.23cd34aa
Package type      : common component
Support target    : eg1000m
Size              : 26945
Build time        : Wed Dec 7 00:54:56 2013
Install date      : (not installed)
Description       : this is a bridge package
Package files :
    Package files:
        /lib64
        /lib64/libbridge.so
        /sbin
        /sbin/bridge
```

This command is used to obtain the information in the package.

Field	Description
Name	Name of the package
Version	Version of the package
Package type	Type of the package
Support target	Supported product description
Size	Content size of the package
Build time	Compilation time of the package
Install date	Installation time of the package
Description	Description of the package
Package files	All contents in the package

**Prompt** The package information is displayed after running.

**Messages**

```
Name      : bridge
Version:1.0.1.23cd34aa
Package type      : common component
Support target    : eg1000m
Size              : 26945
Build time        : Wed Dec 7 00:54:56 2013
Install date      : (not installed)
Description       : this is a bridge package
```

```
Package files :
  Package files:
    /lib64
    /lib64/libbridge.so
    /sbin
    /sbin/bridge
```

## 15.5 show upgrade history

Use this command to display the upgrade history.

**show upgrade history**

Parameter Description	Parameter	Description
	N/A	N/A

**Command** Privileged EXEC mode  
**Mode**

**Default Level** 2

**Configuration** The following example displays the upgrade history.

**Examples**

```
Ruijie#show upgrade history
Last Upgrade Information:
  Time:      2014-08-31 12:15:03
  Method:    LOCAL
Package Name: N18000_RGOS11.0(1)B1_CM_01200616_install.bin
Package Type: Distribution
```

**Prompt** N/A  
**Messages**

**Platforms** N/A

## 15.6 upgrade

Use this command to install and upgrade an installation package in the local file system.

**upgrade** *url* [ **force** ]

Parameter Description	Parameter	Description
	<i>url</i>	The local path indicates where an installation package is stored.

	This command is used to upgrade an installation package on the device.
<b>force</b>	Mandatory upgrade

**Command Mode** Privileged EXEC mode

**Default Level** 2

**Usage Guide** This command is applicable to installation packages of all subsystem components, chassis devices, and feature components. Before its use, run the **copy** command to copy feature packages into the file system in the device.

When there is no specified range of parameters, the command is used to upgrade the matched system components according to the auto-sync configuration.

#### Configuration Examples

**Verification** Run the **show version detail** command to check whether the upgrade of a subsystem component is successful.

Run the **show component** command to check whether the upgrade of a feature component is successful. upgrading a feature component

**Prompt Messages** The prompt message of successful running is displayed.

```
Upgrade info [OK]
```

The installation package is invalid or damaged and needs to be regained for upgrade command.

```
Invalid package file
```

The installation package is not available on the device and needs to be regained for upgrade command.

```
Device don't support
```

There is no need to upgrade the device.

```
The version in device is newer or the same
```

When there is insufficient space for upgrade, check USB flash disk attached on the device.

```
No enough space for decompress
```

Contact the service center to solve the system problem.

```
No enough space,rootfs been destroyed. Please upgrade in uboot
```



## 15.7 upgrade auto-sync package

Use this command to configure the path for the auto-sync upgrade.

**upgrade auto-sync package** *url*

Parameter Description	Parameter	Description
	<i>url</i>	The path of installation package.

**Defaults** The default is the last upgrade path.

**Command Mode** Privileged EXEC mode

**Default Level** 2

**Usage Guide** It is recommended to use default settings.

**Configuration Examples**

**Verification** Run the **show upgrade auto-sync** command to display current auto-sync policy.  
If *url* provides normal path, run the **stat** command to check whether it can be accessed.

**Prompt Messages**

## 15.8 Upgrade auto-sync policy

Use this command to set an auto-sync policy for the system.

**upgrade auto-sync policy** [ **none** | **compatible** | **coordinate** ]

Parameter Description	Parameter	Description
	<b>none</b>	No auto-sync upgrade
	<b>compatible</b>	Performs auto-synchronization based on the sequential order of versions.
	<b>coordinate</b>	Synchronizes with the version based on the system upgrade patch stored on the supervisor module.

**Defaults** **coordinate**

**Command** Privileged EXEC mode

**Mode****Default Level** 2**Usage Guide** Check whether the upgrade package is ready before using the command.**Configuration Examples** The following example sets the auto-sync policy of the device based on the version of supervisor modules.

```
Ruijie# upgrade auto-sync policy coordinate
```

**Verification** Display the current policy for auto-sync upgrade by running the **show upgrade auto-sync** command.**Prompt** The prompt message of successful running is displayed.**Messages** Upgrade auto-sync policy is set as coordinate.

## 15.9 upgrade auto-sync range

Use this command to set the range of auto-sync upgrade.

**upgrade auto-sync range [ chassis | vsu ]****Parameter Description**

Parameter	Description
<b>chassis</b>	Auto-sync version upgrade in the range of chassis
<b>vsu</b>	Auto-sync version upgrade in the range of the VSU system.

**Defaults** vsu**Command Mode** Privileged EXEC mode**Default Level** 2**Usage Guide** It is recommended to set the parameter to vsu to ensure system version consistency to the most extent.**Configuration Examples** The following example installs the auto-sync upgrade in the VSU system.

```
Ruijie# upgrade auto-sync range vsu
```

**Verification** Run the **show upgrade auto-sync** command to display the range of current auto-sync upgrade.**Prompt** The prompt message of successful running is displayed.**Messages** Upgrade auto-sync range is set as vsu.

## 15.10 upgrade download tftp

Use this command to download, install and upgrade installation packages from the tftp server.

**upgrade download tftp:/path [ force ]**

Parameter Description	Parameter	Description
	<i>path</i>	The path of installation packages on the tftp server This command is downloaded and upgraded automatically from the server.
	<b>force</b>	Enforces upgrade.

**Command Mode** Privileged EXEC mode

**Default Level** 2

**Usage Guide** This command is applicable to installation packages of all subsystem components, chassis devices, and feature components. This command is used to perform automatic installation, copy and upgrade of files.

**Configuration** The following example upgrades the main package.

**Examples**

```
Ruijie# upgrade download
tftp://192.168.201.98/eg1000m_main_1.0.0.0f328e91.bin
Accessing tftp://192.168.201.98/eg1000m_main_1.0.0.0f328e91.bin...
!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!
!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!
!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!
!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!
!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!
!!!!!!!!!!!!!!!!!!!!
Transmission finished, file length 21525888 bytes.
Upgrade processing is 10%
Upgrade processing is 60%
Upgrade processing is 90%
Upgrade info [OK]
    Kernel version[2.6.32.91f9d21->2.6.32.9f8b56f]
    Rootfs version[1.0.0.2ad02537->1.0.0.1bcc12e8]
Upgrade processing is 100%
Reload to take effect!
```

**Verification** Run the **show version detail** command to check whether the upgrade of a subsystem component is successful.

Run the **show component** command to check whether the upgrade of a feature component is successful.

**Prompt**

The prompt message of successful running is displayed.

**Messages**

```
Upgrade info [OK];
```

The installation package is invalid or damaged and needs to be regained for upgrade command.

```
Invalid package file
```

The installation package is not available on the device and needs to be regained for upgrade command.

```
Device don't support
```

There is no need to upgrade the device.

```
The version in device is newer or the same
```

When there is insufficient space for upgrade, check USB flash disk attached on the device.

```
No enough space for decompress
```

Contact the service center to solve the system problem.

```
No enough space,rootfs been destroyed. Please upgrade in uboot
```

## 16 Auto Smart Deployment Commands

### 16.1 show surveillance device

Use this command to display information about the IP cameras and Network Video Recorders (NVRs) recognized by a switch.

**show surveillance device**

Parameter Description	Parameter	Description
	N/A	N/A

**Command Mode** Privileged EXEC mode

**Default Level** 2

**Usage Guide** This command is used to display the information about the IP cameras and NVRs recognized by a switch, including the IP address, MAC address, connection time, device name and PoE power. In the CCTV scenario, when IP cameras or NVRs communicates with a connected switch via the ONVIF protocol, they are recognized by the switch.

**Configuration Examples**

```
Ruijie#show surveillance device
Smart surveillance status: ON
The number of NVR device:1
The number of IP Camera device:1
-----
Interface          Device Name          Connect Time          IP/MAC
Address          PoE Power
-----
GigabitEthernet 0/5    (Hikvision) IP-Camera    1970/0/1  21:52:15
172.31.61.156      2.7 W
GigabitEthernet 0/7    (Hikvision) NVR          1970/0/1  22:28:17
192.168.1.223      0.0 W
```

**Verification** N/A

**Platforms** N/A

## 16.2 clear surveillance configuration

Use this command to remove all recognized devices and the configuration pushed by Auto-Smart Deployment.

### clear surveillance configuration

Parameter Description	Parameter	Description
	N/A	N/A

**Command Mode** Privileged EXEC mode

**Default Level** 2

**Usage Guide** Auto Smart Deployment is able to automatically push configuration to the IP camera or NVR device. This command is used to remove all recognized devices and the configuration pushed by s Auto-Smart Deployment.

**Configuration** Ruijie#clear surveillance configuration

#### Examples

```
Ruijie#show surveillance device
Smart surveillance status: ON
The number of NVR device:0
The number of IP Camera device:0
-----
Interface          Device Name          Connect Time          IP/MAC
Address    PoE Power
-----
```

**Verification** N/A

**Platforms** N/A

## 16.3 surveillance on/off

Use this command to enable/disable Auto Smart Deployment.

**surveillance{ on | off }**

Parameter Description	Parameter	Description
-----------------------	-----------	-------------

<b>on</b>	Enables Auto Smart Deployment to recognize the IP camera or NVR device.
<b>off</b>	Disables Auto Smart Deployment to not recognize the IP camera or NVR device.

**Command Mode** Global configuration mode

**Usage Guide** This command is used to enable/disable Auto Smart Deployment.

**Configuration** Ruijie(config)#surveillance on

**Examples** Ruijie(config)#surveillance off

**Verification** N/A

**Platforms** N/A



## Ethernet Configuration Commands

---

1. Interface Commands
2. MAC Address Commands
3. Aggregate Port Commands
4. VLAN Commands
5. MAC VLAN Commands
6. Protocol VLAN Commands
7. Private VLAN Commands
8. Voice VLAN Commands
9. MSTP Commands
10. GVRP Commands
11. LLDP Commands
12. QinQ Commands
13. ERPS Commands



# 1 Interface Commands

## 1.1 bandwidth

Use this command to set the bandwidth on the interface. Use the **no** form of this command to restore the default setting.

**bandwidth** *kilobits*

**no bandwidth**

### Parameter Description

Parameter	Description
<i>kilobits</i>	Bandwidth per second, in the unit of Kbps.

### Defaults

If this command is not configured on the interface, use the show interface command to display the default setting in privileged EXEC mode.

### Command Mode

Interface configuration mode

### Usage Guide

This command does not affect the actual bandwidth on the interface. Instead, it is used to display the system the bandwidth specification. By default, the bandwidth is determined by the actual link rate on the interface. It can be set by the user as well.

### Configuration

The following example sets the bandwidth on the interface to 64 Kbps.

### Examples

```
Ruijie(config)#interface gigabitEthernet 0/1
Ruijie(config-if-GigabitEthernet 0/1)# bandwidth 64
```

### Related Commands

Command	Description
N/A	N/A

### Platform Description

N/A

## 1.2 carrier-delay

Use this command to set the carrier delay on the interface. Use the no form of this command to restore the default value.

**carrier-delay** { [ *milliseconds* ] *num* | **up** [ *milliseconds* ] *num* **down** [ *milliseconds* ] *num* }

**no carrier-delay**

Parameter Description	Parameter	Description
	<i>num</i>	(Optional) in the range from 0 to 60 in the unit of seconds.
	<i>milliseconds</i>	(Optional) in the range from 0 to 60000 in the unit of milliseconds.
	<b>up</b>	(Optional) Configures the delay after which DCD changes from Down to Up in status.
	<b>down</b>	(Optional) Configures the delay after which DCD changes from Up to Down in status.

**Defaults** The default is 2 seconds.

**Command Mode** Interface configuration mode

**Usage Guide** This parameter refers to the delay after which the carrier detection signal DCD of the interface link changes from the Down status to the Up status or vice versa. If the DCD changes within the delay, the system will ignore such changes without disconnecting the upper data link layer for renegotiation. If the DCD carrier is disconnected for a long time, the parameter should be set longer to accelerate route aggregation so that the routing table can be converged more quickly. On the contrary, if the DCD carrier interruption period is shorter than the time used for route aggregation, you should set the parameter to a higher value to avoid unnecessary route vibration.

**Configuration Examples** The following example sets the carrier delay of serial interface to 5 seconds.

```
Ruijie(config)# interface gigabitethernet 1/1
Ruijie(config)# carrier-delay 5
```

The following example sets the carrier delay of serial interface to 100 milliseconds.

```
Ruijie(config)# interface GigabitEthernet 1/1
Ruijie(config-if-GigabitEthernet 1/1)#carrier-delay milliseconds
100
```

The following example sets the DCD delay from Down to Up in status to 100 milliseconds and from Up to Down to 200 milliseconds.

```
Ruijie(config)# interface GigabitEthernet 1/1
Ruijie(config-if-GigabitEthernet 1/1)# carrier-delay up
milliseconds 100 down milliseconds 200
```

Related Commands	Command	Description
	N/A	N/A

**Platform Description** N/A

## 1.3 clear counters

Use this command to clear the counters on the specified interface.

**clear counters** [ *interface-id* ]

Parameter Description	Parameter	Description
	<i>interface-id</i>	Interface type and interface ID

**Defaults** N/A

**Command Mode** Privileged EXEC mode.

**Usage Guide** In the privileged EXEC mode, use the **show interfaces** command to display the counters or the **clear counters** command to clear the counters. If the interface is not specified, the counters on all interfaces will be cleared.

**Configuration Examples** The following example clears the counters on interface gigabitethernet 1/1.

```
Ruijie# clear counters gigabitethernet 1/1
```

Related Commands	Command	Description
	<b>show interfaces</b>	Displays the interface information.

**Platform Description** N/A

## 1.4 clear interface

Use this command to reset the interface.

**clear interface** *interface-type interface-number*

Parameter Description	Parameter	Description
	<i>interface-type</i> <i>interface-number</i>	Interface type and interface ID

**Defaults** N/A

**Command Mode** Privileged EXEC mode.

**Usage Guide** This command is only used on the switch port, member port of the L2 Aggregate port, routing port, and member port of the L3 aggregate port. This command is equal to the **shutdown** and **no shutdown** commands.

**Configuration** The following example resets the interface gigabitethernet 1/1.

**Examples** Ruijie# clear interface gigabitethernet 1/1

Related Commands	Command	Description
	shutdown	Disables the interface.

**Platform** N/A

**Description**

## 1.5 description

Use this command to configure the alias of interface. Use the **no** form of this command to restore the default setting.

**description** *string*

**no description**

Parameter Description	Parameter	Description
	<i>string</i>	Interface alias

**Defaults** No alias is configured by default.

**Command Mode** Interface configuration mode.

**Usage Guide** Use **show interfaces** to display the interface information, including the alias.

**Configuration** The following example configures the alias of interface.

**Examples** Ruijie(config)# interface gigabitethernet 1/1  
Ruijie(config-if)# description GBIC-1

Related Commands	Command	Description
	show interfaces	Displays the interface information.

**Platform** N/A

**Description**

## 1.6 duplex

Use this command to specify the duplex mode for the interface. Use the **no** form of this command to restore the default setting.

**duplex { auto | full | half }**

**no duplex**

### Parameter Description

Parameter	Description
<b>auto</b>	Self-adaptive full duplex and half duplex
<b>full</b>	Full duplex
<b>half</b>	Half duplex

### Defaults

The default is **auto**.

### Command Mode

Interface configuration mode.

### Usage Guide

The duplex mode is associated with the interface type. Use **show interfaces** to display the duplex mode of the interface.

### Configuration Examples

The following example specifies the duplex mode for the interface.

```
Ruijie(config-if) # duplex full
```

### Related Commands

Command	Description
<b>show interfaces</b>	Displays the interface information.

### Platform

N/A

### Description

## 1.7 eee enable

Use this command to enable Energy Efficient Ethernet (EEE) on the interface.

**eee enable**

### Parameter Description

Parameter	Description
N/A	N/A

### Defaults

This function is disabled by default.

### Command

Interface configuration mode

**Mode**

**Usage Guide** Use this command to achieve EEE on the interface in Low Power Idle(LPI) mode,

**Configuration** The following example enables EEE on GigabitEthernet 0/1.

**Examples**

```
Ruijie(config)#interface GigabitEthernet 0/1
Ruijie(config-if-GigabitEthernet 0/1)# eee enable
```

**Related  
Commands**

Command	Description
N/A	N/A

**Platform** N/A

**Description**

## 1.8 errdisable recovery

Use this command to recover the interface in violation.

**errdisable recovery [ interval time ]**

**Parameter  
Description**

Parameter	Description
<b>interval time</b>	Time for the command to take effect. The range is from 30 to 86,400 seconds.

**Defaults** By default, it is disabled.

**Command  
Mode** Global configuration mode.

**Usage Guide** Use the command to recover the port that triggers violation after being configured with the **violation shutdown** command.

**Configuration** The following example recovers the violation interface gigabitethernet 1/1.

**Examples**

```
Ruijie(config)# interface gigabitethernet 1/1
Ruijie(config-if)# errdisable recovery
```

**Related  
Commands**

Command	Description
<b>switchport port-security violation shutdown</b>	Configures the port security violation to shutdown.

**Platform** N/A.

## Description

## 1.9 fiber antifake enable

Use this command to enable or disable the optical module antifake detection. Use the **no** form of this command to restore the default setting.

**fiber antifake {ignore | enable}**

**no fiber antifake enable**

**Parameter  
Description**

Parameter	Description
<b>ignore</b>	N/A
<b>enable</b>	

**Defaults**

By default, optical module antifake detection is disabled.

**Command  
Mode**

Global configuration mode

**Usage Guide**

If the optical module antifake detection is enabled by default, when a non-original optical module is inserted, alarm logs are printed.

**Configuration**

The following example enables the optical module antifake detection.

**Examples**

```
Ruijie(config)# fiber antifake enable
```

**Related  
Commands**

Command	Description
N/A	N/A

**Platform  
Description**

N/A

## 1.10 flowcontrol

Use this command to enable or disable the flow control. Use the **no** form of this command to restore the default setting.

**flowcontrol { auto | off | on}**

**no flowcontrol**

**Parameter  
Description**

Parameter	Description
<b>auto</b>	Self-negotiates the flow control.
<b>off</b>	Disables the flow control.

<b>on</b>	Enables the flow control.
-----------	---------------------------

**Defaults** This function is disabled by default.

**Command Mode** Interface configuration mode.

**Usage Guide** Use the **show interfaces** command to display the flow control configuration.

**Configuration** The following example enables flow control on fastEthernet port 1/1.

**Examples**

```
Ruijie(config)# interface gigabitethernet 1/1
Ruijie(config-if)# flowcontrol on
```

<b>Related Commands</b>	Command	Description
	<b>show interfaces</b>	Displays the interface information.

**Platform** N/A

**Description**

## 1.11 interface

Use this command to enter the interface configuration mode.

**interface** *interface-type interface-number*

<b>Parameter Description</b>	Parameter	Description
	<i>interface-type</i>	The interface type.
	<i>interface-number</i>	The interface ID.

**Defaults** N/A

**Command Mode** Interface configuration mode

**Usage Guide** This command is used to enter interface configuration mode. The user can modify the interface configuration next,

**Configuration** The following example enters configuration mode on Aggregateport 1.

**Examples**

```
Ruijie(config)# interface Aggregateport 1
Ruijie(config-if-Aggregateport 1)#
```

The following example enters configuration mode on GigabitEthernet 1/2.

```
Ruijie(config)# interface GigabitEthernet 1/2
```



```
Ruijie(config-if-GigabitEthernet 1/2) #
```

The following example configuration mode on VLAN 1.

```
Ruijie(config) # interface vlan 1
```

```
Ruijie(config-if-VLAN 1) #
```

#### Related Commands

Command	Description
N/A	N/A

#### Platform

N/A

#### Description

## 1.12 interface range

Use this command to enter interface configuration mode on multiple interfaces.

**interface range** { *port-range* | **macro** *macro\_name* }

Use this command to define the macro name of the **interface range** command.

**define interface-range** *macro\_name*

#### Parameter Description

Parameter	Description
<i>port-range</i>	The interface type and ID range, entered in the form of <i>interface-type slot-number/interface-number</i> . The interface can be either an Ethernet physical interface or a loopback interface.
<b>macro</b> <i>macro_name</i>	The macro name which represents the interface range.

#### Defaults

The **interface range** command is disabled by default.

#### Command Mode

Global configuration mode

#### Usage Guide

Use the **define interface-range** command to define a range of interfaces as the macro name and then use the **interface range** macro *macro\_name* command to enter interface configuration mode on multiple interfaces.

#### Configuration Examples

The following example enters interface configuration mode on multiple interfaces by setting the interface range.

```
Ruijie(config) # interface range gigabitEthernet 0/0, 0/2
```

```
Ruijie(config-if-range) # bandwidth 100
```

The following example enters interface configuration mode on multiple interfaces by defining the macro name.

```
Ruijie(config) # define interface-range routel gigabitEthernet 0/0-2
```

```
Ruijie(config) # interface range macro routel
```

```
Ruijie(config-if-range) # bandwidth 100
```

**Related  
Commands**

Command	Description
N/A	N/A

**Platform** N/A

**Description**

## 1.13 line-detect

Use this command to detect the cable connection status.

**line-detect**
**Parameter  
Description**

Parameter	Description
N/A	N/A

**Defaults** N/A

**Command  
Mode** Interface configuration mode.

**Usage Guide** This command is used to detect the line status and locate the problem in case of a line failure, for example, the line is torn down.

**Configuration** The following example detects the cable connection status on gigabitEthernet 0/1.

**Examples**

```
Ruijie(config)#interface gigabitEthernet 0/1
Ruijie(config-if-GigabitEthernet 0/1)#line-detect
```

```
Interface : GigabitEthernet 0/1
start cable-diagnoses,please wait...
cable-daignoses end!this is result:
4 pairs
pair state      length(meters)
-----
A   Ok          1
pair state      length(meters)
-----
B   Ok          2
pair state      length(meters)
-----
C   Short       1
pair state      length(meters)
-----
```

D      Short      1

Field	Description
pairs	Number of line pairs included. For example, the twisted pair includes four pairs of lines.
state	Status of the current line pair: OK, Short or Open. In general, the 100M twisted pairs A and B are OK, C and D are Short. The 1000M twisted pairs A, B, C and D are all OK.
length	Length of the line in meter. Only the length of the line pair whose status is OK takes effect. Since the length is calculated based on the transmission time of signal, there may have a certain difference. The length of the line pair whose status is Short or Open is the length from the port to the faulty point.

#### Related Commands

Command	Description
N/A	N/A

Platform      N/A  
Description

## 1.14 load-interval

Use this command to set the interval for calculating load on the interface. Use the **no** form of this command to restore the default setting.

**load-interval** *seconds*

**no load-interval**

#### Parameter Description

Parameter	Description
<i>seconds</i>	In the range from 5 to 600 in the unit of seconds.

**Defaults**      The default is 10.

**Command Mode**      Interface configuration mode

**Usage Guide**      This command is used to set the interval for calculating load on the interface. In general, the numbers of incoming and outgoing packets and bytes are calculated every 10 seconds. For example, if the parameter is set to 180 seconds, the following outcome is displayed when the **show interface gigabitEthernet 0/1** command is run.

```
3 minutes input rate 15 bits/sec, 0 packets/sec
3 minutes output rate 14 bits/sec, 0 packets/sec
```

**Configuration** The following example sets the interval for calculating load on interface GigabitEthernet 0/1 to 180 seconds.

**Examples**

```
Ruijie(config)# interface gigabitEthernet 0/1
Ruijie(config-if-GigabitEthernet 0/1)# load-interval 180
```

**Related  
Commands**

Command	Description
N/A	N/A

**Platform** N/A  
**Description**

## 1.15 logging

Use this command to print information on the interface.

**logging [ link-updown | error-frame | link-dither ]**

**Parameter  
Description**

Parameter	Description
<b>link-updown</b>	Prints the status change information.
<b>error-frame</b>	Prints the error frame information.
<b>link-dither</b>	Prints the oscillation information.

**Defaults** This function is enabled by default.

**Command** Global configuration mode  
**Mode**

**Usage Guide** N/A

**Configuration** The following example prints information on the interface..

**Examples**

```
Ruijie(config)# logging link-updown
Ruijie(config)# logging error-frame
Ruijie(config)# logging link-dither
```

**Related  
Commands**

Command	Description
N/A	N/A

**Platform** N/A  
**Description**

## 1.16 medium-type

Use this command to specify the medium type for an interface. Use the **no** form of this command to restore the default setting.

**medium-type** { **auto-select** [ **prefer** [ **fiber** | **copper** ] ] | **fiber** | **copper** }

**no medium-type**

### Parameter Description

Parameter	Description
<b>fiber</b>	Optical interface.
<b>prefer</b> [ <b>fiber</b>   <b>copper</b> ]	The preferred medium type for the interface is selected.
<b>auto-select</b>	Auto-selects the medium type for the interface.
<b>copper</b>	Copper interface.

### Defaults

The default is **copper**.

### Command Mode

Interface configuration (physical interface, except for AP and SVI)

### Usage Guide

Select either fiber or copper as the medium type of a port when both medium types are available. Once the medium type is selected, all interface attributes, including the status, duplex mode, and speed, are configured for the interface of the selected medium type. If the interface type is changed, the attributes of the new interface type are the default attributes. You can reconfigure these attributes as required.

If you enable automatic selection of the medium type, the device uses the current medium if only one medium is available. If both media are available, the device uses the preferred medium as configured. By default, the preferred medium is copper. You can run the **medium-type auto-select prefer fiber** command to configure fiber as the preferred media. In automatic medium selection mode, the interface adopts the default settings of attributes, such as the speed, duplex mode, and flow control mode.

### Configuration Examples

The following example specifies the medium type for interface gigabitethernet 1/1.

```
Ruijie(config)# interface gigabitethernet 1/1
Ruijie(config-if)# medium-type copeer
```

### Related Commands

Command	Description
<b>show interfaces</b>	Displays the interface information.

### Platform Description

## 1.17 mtu

Use this command to set the MTU supported on the interface.

**mtu** *num*

Parameter Description	Parameter	Description
	<i>num</i>	64 to 9216 (or 65536, which varies by products)

**Defaults** The default is 1500.

**Command Mode** Interface configuration mode.

**Usage Guide** This command is used to set the maximum transmission unit (MTU) supported on the interface.

**Configuration** The following example sets the MTU supported on interface `gigabitethernet 1/1` to 9000.

**Examples**

```
Ruijie(config)# interface GigabitEthernet 1/1
Ruijie(config-if-GigabitEthernet)# mtu 9000
```

Related Commands	Command	Description
	show interfaces	Displays the interface information.

**Platform Description** N/A

## 1.18 negotiation mode

Use this command to enable or disable auto-negotiation mode. Use the **no** form of this command to restore the default setting.

**negotiation mode { on | off }**

**no negotiation mode**

Parameter Description	Parameter	Description
	<b>on</b>	Enables auto-negotiation.
	<b>off</b>	Disables auto-negotiation.

**Defaults** This function is disabled by default.

**Command Mode** Interface configuration mode

**Usage Guide** In general, the auto-negotiation status is determined by interface speed, duplex, flow control and auto-negotiation factor mode.

**Configuration** The following example enables auto-negotiation mode on interface GigabitEthernet 1/1.

**Examples**

```
Ruijie(config)# interface GigabitEthernet 1/1
Ruijie(config-if-GigabitEthernet 1/1)# negotiation mode on
```

**Related  
Commands**

Command	Description
N/A	N/A

**Platform** N/A  
**Description**

## 1.19 physical-port dither protect

Use this command to enable oscillation protection on the port.

**physical-port dither protect**


**Parameter  
Description**

Parameter	Description
N/A	N/A

**Defaults** This function is enabled by default.

**Command  
Mode** Global configuration mode

**Usage Guide** After you configure the **physical-port dither protect** command, the port will be shut down when the oscillation occurs for certain times.

 If oscillation occurs on the port for 6 times within 2 seconds, a syslog will be printed. If syslog is printed for 10 consecutive times, the port will be shut down, If oscillation occurs on the port for over 10 times within 10 seconds, a syslog will be printed but the port will not be shut down.

**Configuration** The following example enables oscillation protection on the port.

**Examples**

```
Ruijie(config)# physical-port dither protect
```

**Related  
Commands**

Command	Description
N/A	N/A

**Platform** N/A

**Description**

## 1.20 protected-ports route-deny

Use this command to configure L3 routing between the protected ports. Use the **no** form of this command to restore the default setting.

**protected-ports route-deny**

**no protected-ports route-deny**

**Parameter  
Description**

Parameter	Description
N/A	N/A

**Defaults**

This function is disabled by default..

**Command  
Mode**

Global configuration mode.

**Usage Guide**

The ports that are set as the protected ports can route on L3. Use this command to deny the L3 communication between protected ports. Use the **show running-config** command to display configuration.

**Configuration**

The following example configures L3 routing between the protected ports.

**Examples**

```
Ruijie(config)# protected-ports route-deny
```

**Related  
Commands**

Command	Description
<b>show running-config</b>	Displays the protected ports route-deny configuration.

**Platform**

N/A

**Description**

## 1.21 show eee interfaces status

Use this command to display interface EEE status.

**show eee interfaces** { *interface-type interface-number* | *status* }

**Parameter  
Description**

Parameter	Description
<i>interface-type</i> <i>interface-number</i>	Interface type and ID.
<i>status</i>	All interface EEE status.



**Defaults** N/A

**Command Mode** Privileged EXEC mode

**Usage Guide** If the interface is specified, the EEE status of the specified interface is displayed; otherwise, the EEE status of all interfaces is displayed.

**Configuration Examples** The following example displays EEE status of interface GigabitEthernet 0/1.

```
Ruijie#show eee interface gigabitEthernet 0/1
Interface           : Gi0/1
EEE Support         : Yes
Admin Status       : Enable
Oper Status        : Disable
Remote Status      : Disable
Trouble Cause      : Remote Disable
```

Field	Description
EEE Support	Whether EEE is supported
Admin Status	Configuration status
Oper Status	Operation status
Trouble Cause	Trouble cause

The following example displays EEE status of all interfaces.

```
Ruijie#show eee interface status
Interface EEE      Admin   Oper    Remote  Trouble
          Support Status   Status Status   Cause
-----
Gi0/1    Yes      Enable  Disable Disable  Remote Disable
Gi0/2    Yes      Enable  Disable Unknown  None
Gi0/3    Yes      Enable  Enable  Enable   None
Gi0/4    Yes      Enable  Enable  Enable   None
Gi0/5    Yes      Enable  Enable  Enable   None
Gi0/6    Yes      Enable  Enable  Enable   None
Gi0/7    Yes      Enable  Enable  Enable   None
Gi0/8    Yes      Enable  Enable  Enable   None
Gi0/9    Yes      Enable  Enable  Enable   None
Gi0/10   Yes      Enable  Enable  Enable   None
Gi0/11   Yes      Enable  Enable  Enable   None
Gi0/12   Yes      Enable  Enable  Enable   None
Gi0/13   Yes      Enable  Enable  Enable   None
Gi0/14   Yes      Enable  Enable  Enable   None
Gi0/15   Yes      Enable  Enable  Enable   None
Gi0/16   Yes      Enable  Enable  Enable   None
Gi0/17   Yes      Enable  Enable  Enable   None
```

Gi0/18	Yes	Enable	Enable	Enable	None
Gi0/19	Yes	Enable	Enable	Enable	None
Gi0/20	Yes	Enable	Enable	Enable	None
Gi0/21	Yes	Enable	Enable	Enable	None
Gi0/22	Yes	Enable	Enable	Enable	None
Gi0/23	Yes	Enable	Enable	Enable	None
Gi0/24	Yes	Enable	Enable	Enable	None
Gi0/25	No	-	-	-	-
Gi0/26	No	-	-	-	-
Gi0/27	No	-	-	-	-
Gi0/28	No	-	-	-	-

#### Related Commands

Command	Description
N/A	N/A

#### Platform Description

N/A

## 1.22 show interfaces

Use this command to display the interface information and optical module information.

**show interfaces** [ *interface-type interface-number* ] [ **description** | **switchport** | **trunk** ]

#### Parameter Description

Parameter	Description
<i>interface-id</i> <i>interface-number</i>	Interface (including Ethernet interface, aggregate port, SVI or loopback interface).
<b>description</b>	The description of the interface, including the link status.
<b>switchport</b>	Layer 2 interface information.
<b>trunk</b>	Trunk port, applicable for physical port and aggregate port.

#### Defaults

#### Command Mode

Privileged EXEC mode.

#### Usage Guide

This command is used to show all basic information if no parameter is specified.

#### Configuration Examples

The following example displays the interface information when the Gi0/1 is a Trunk port.

#### Examples

```
SwitchA#show interfaces gigabitEthernet 0/1
Index(dec):1 (hex):1
GigabitEthernet 0/1 is DOWN , line protocol is DOWN
```

```
Hardware is Broadcom 5464 GigabitEthernet
Interface address is: no ip address
  MTU 1500 bytes, BW 1000000 Kbit
  Encapsulation protocol is Bridge, loopback not set
  Keepalive interval is 10 sec , set
  Carrier delay is 2 sec
  RXload is 1 ,Txload is 1
  Queueing strategy: FIFO
    Output queue 0/0, 0 drops;
    Input queue 0/75, 0 drops
Switchport attributes:
  interface's description:""
  medium-type is copper
  lastchange time:0 Day: 0 Hour: 0 Minute:13 Second
  Priority is 0
  admin duplex mode is AUTO, oper duplex is Unknown
  admin speed is AUTO, oper speed is Unknown
flow receive control admin status is OFF,flow send control admin status is OFF,flow
receive control oper status is Unknown,flow send control oper status is Unknown
broadcast Storm Control is OFF,multicast Storm Control is OFF,unicast Storm Control
is OFF
Port-type: trunk
  Native vlan:1
Allowed vlan lists:1-4094
Active vlan lists:1, 3-4
  5 minutes input rate 0 bits/sec, 0 packets/sec
  5 minutes output rate 0 bits/sec, 0 packets/sec
    0 packets input, 0 bytes, 0 no buffer, 0 dropped
    Received 0 broadcasts, 0 runts, 0 giants
    0 input errors, 0 CRC, 0 frame, 0 overrun, 0 abort
    0 packets output, 0 bytes, 0 underruns , 0 dropped
0 output errors, 0 collisions, 0 interface resets
```

The following example displays the interface information when the Gi0/1 is an Access port.

```
SwitchA#show interfaces gigabitEthernet 0/1
Index(dec):1 (hex):1
GigabitEthernet 0/1 is DOWN , line protocol is DOWN
Hardware is Broadcom 5464 GigabitEthernet
Interface address is: no ip address
  MTU 1500 bytes, BW 1000000 Kbit
  Encapsulation protocol is Bridge, loopback not set
  Keepalive interval is 10 sec , set
  Carrier delay is 2 sec
  RXload is 1 ,Txload is 1
```

```
Queueing strategy: FIFO
  Output queue 0/0, 0 drops;
  Input queue 0/75, 0 drops
Switchport attributes:
  interface's description: ""
  medium-type is copper
  lastchange time:0 Day: 0 Hour: 0 Minute:13 Second
  Priority is 0
  admin duplex mode is AUTO, oper duplex is Unknown
  admin speed is AUTO, oper speed is Unknown
  flow receive control admin status is OFF,flow send control admin status is
OFF,flow receive control oper status is Unknown,flow send control oper status is
Unknown
broadcast Storm Control is OFF,multicast Storm Control is OFF,unicast Storm Control
is OFF
Port-type: access
Vlan id : 2
  5 minutes input rate 0 bits/sec, 0 packets/sec
  5 minutes output rate 0 bits/sec, 0 packets/sec
  0 packets input, 0 bytes, 0 no buffer, 0 dropped
  Received 0 broadcasts, 0 runts, 0 giants
  0 input errors, 0 CRC, 0 frame, 0 overrun, 0 abort
  0 packets output, 0 bytes, 0 underruns , 0 dropped
0 output errors, 0 collisions, 0 interface resets
```

The following example displays the layer-2 interface information when the Gi0/1 is a Hybrid port.

```
SwitchA#show interfaces gigabitEthernet 0/1
Index(dec):1 (hex):1
GigabitEthernet 0/1 is DOWN , line protocol is DOWN
Hardware is Broadcom 5464 GigabitEthernet
Interface address is: no ip address
  MTU 1500 bytes, BW 1000000 Kbit
  Encapsulation protocol is Bridge, loopback not set
  Keepalive interval is 10 sec , set
  Carrier delay is 2 sec
  RXload is 1 ,Txload is 1
  Queueing strategy: FIFO
    Output queue 0/0, 0 drops;
    Input queue 0/75, 0 drops
  Switchport attributes:
    interface's description: ""
    medium-type is copper
    lastchange time:0 Day: 0 Hour: 0 Minute:13 Second
    Priority is 0
```

```

admin duplex mode is AUTO, oper duplex is Unknown
admin speed is AUTO, oper speed is Unknown
flow receive control admin status is OFF,flow send control admin status is
OFF,flow receive control oper status is Unknown,flow send control oper status is
Unknown
broadcast Storm Control is OFF,multicast Storm Control is OFF,unicast Storm Control
is OFF
Port-type: hybrid
Tagged vlan id:2
Untagged vlan id:none
  5 minutes input rate 0 bits/sec, 0 packets/sec
  5 minutes output rate 0 bits/sec, 0 packets/sec
    0 packets input, 0 bytes, 0 no buffer, 0 dropped
    Received 0 broadcasts, 0 runts, 0 giants
    0 input errors, 0 CRC, 0 frame, 0 overrun, 0 abort
    0 packets output, 0 bytes, 0 underruns , 0 dropped
0 output errors, 0 collisions, 0 interface resets

```

The following example displays the layer-2 information of the Gi0/1.

```

Ruijie# show interfacesgigabitEthernet 0/1 switchport
Interface Switchport ModeAccess Native Protected VLAN lists
-----
GigabitEthernet 0/1 enabled Access 11 Disabled ALL

```

#### Related Commands

Command	Description
<b>duplex</b>	Duplex
<b>flowcontrol</b>	Flow control status.
<b>interface gigabitEthernet</b>	Selects the interface and enter the interface configuration mode.
<b>interface aggregateport</b>	Creates or accesses the aggregate port, and enters the interface configuration mode.
<b>interface vlan</b>	Creates or accesses the switch virtual interface (SVI), and enters the interface configuration mode.
<b>shutdown</b>	Disables the interface.
<b>speed</b>	Configures the speed on the port.
<b>switchport priority</b>	Configures the default 802.1q interface priority.
<b>switchport protected</b>	Configures the interface as a protected port.

**Platform** N/A  
**Description**

## 1.23 show interfaces counters

Use this command to display the received and transmitted packet statistics.

**show interfaces** [ *interface-type interface-number* ] **counters** [ **increment** | **error** | **rate** | **summary** ]  
[ *up* | *down* ]

Parameter Description	Parameter	Description
	<i>interface-type</i> <i>interface-number</i>	(Optional) The interface type and ID.
	<b>increment</b>	Displays the packet statistics increased during the last sample interval.
	<b>error</b>	Displays error packet statistics.
	<b>rate</b>	Displays packet receiving and transmitting rate.
	<b>summary</b>	Displays packet statistics summary.
	<i>up</i>	(Optional) Displays the port up statistics.
	<i>down</i>	(Optional) Displays the port down statistics.

**Defaults** N/A

**Command Mode** Any CLI mode

**Usage Guide** If you do not specify an interface, the packet statistics on all interfaces are displayed.

**Configuration** The following example displays packet statistics on interface GigabitEthernet 0/1.


### Examples

```
Ruijie#show interfaces GigabitEthernet 0/1 counters
Interface : GigabitEthernet 0/1
5 minute input rate : 9144 bits/sec, 9 packets/sec
5 minute output rate : 1280 bits/sec, 1 packets/sec
Rxload          : 1%
InOctets        : 17310045
InPkts          : 1000 (Unicast: 10%, Multicast: 10%, Broadcast: 80%)
InUcastPkts     : 100
InMulticastPkts : 100
InBroadcastPkts : 800
Txload          : 1%
OutOctets       : 1282535
OutPkts         : 1000 (Unicast: 10%, Multicast: 10%, Broadcast: 80%)
OutUcastPkts    : 100
OutMulticastPkts : 100
OutBroadcastPkts : 800
Undersize packets : 0
```

```

Oversize packets      : 0
collisions            : 0
Fragments             : 0
Jabbers               : 0
CRC alignment errors  : 0
AlignmentErrors       : 0
FCSErrors             : 0
dropped packet events (due to lack of resources): 0
packets received of length (in octets):
  64:46264
  65-127: 47427
  128-255: 3478
  256-511: 658
  512-1023: 18016
  1024-1518: 125
Packet increment in last sampling interval(5 seconds):
  InOctets            : 10000
  InPkts              : 1000(Unicast: 10%, Multicast: 10%, Broadcast: 80%)
  InUcastPkts         : 100
  InMulticastPkts     : 100
  InBroadcastPkts     : 800
  OutOctets           : 10000
  OutPkts             : 1000(Unicast: 10%, Multicast: 10%, Broadcast: 80%)
  OutUcastPkts        : 100
  OutMulticastPkts    : 100

```

-  Rxload refers to the receive bandwidth usage and Txload refers to the Tx bandwidth usage. InPkts is the total number of receive unicast, multicast and broadcast packets. OutPkts is the total number of transmit unicast, multicast and broadcast packets. Packet increment in last sampling interval (5 seconds) represents the packet statistics increased during the last sample interval (5 seconds).

The following example displays the packet statistics on interface GigabitEthernet 0/1 increased during the last sample interval.

```

Ruijie#show interfaces GigabitEthernet 0/1 counters increment
Interface : GigabitEthernet 0/1
Packet increment in last sampling interval(5 seconds):
  InOctets            : 10000
  InPkts              : 1000(Unicast: 10%, Multicast: 10%, Broadcast: 80%)
  InUcastPkts         : 100
  InMulticastPkts     : 100
  InBroadcastPkts     : 800
  OutOctets           : 10000
  OutPkts             : 1000(Unicast: 10%, Multicast: 10%, Broadcast: 80%)
  OutUcastPkts        : 100

```

```
OutMulticastPkts      : 100
```

The following example displays error packet statistics on interface GigabitEthernet 0/1.

```
Ruijie#show interfaces GigabitEthernet 0/1 counters increment
```

Interface	UnderSize	OverSize	Collisions	Fragments
Gi0/1	0	0	0	0

Interface	Jabbers	CRC-Align-Err	Align-Err	FCS-Err
Gi0/1	0	0	0	0



UnderSize is the number of valid packets smaller than 64 bytes.

OverSize is the number of valid packets smaller than 1518 bytes.

Collisions is the number of colliding transmit packets.

Fragments is the number of packets with CRC error or frame alignment error which are smaller than 64 bytes.

Jabbers is the number of packets with CRC error or frame alignment error which are smaller than 1518 bytes.

CRC-Align-Err is the number of receive packets with CRC error.

Align\_Err is the number of receive packets with frame alignment error.

FCS-Err is the number of receive packets with FCS error.

The following example displays packet receiving and transmitting rate on interface GigabitEthernet 0/1.

```
Ruijie#show interface gigabitEthernet 0/1 counters rate
```

Interface	Sampling Time	Input Rate	Input Rate
Output Rate	Output Rate		
		(bits/sec)	(packets/sec)
(bits/sec)	(packets/sec)		
Gi0/1	5 seconds	23391	23
124	0		



Sampling Time is the time when packets are sampled. Input rate is packet receiving rate and Output rate is packet transmitting rate.

The following example displays packet statistics summary on interface GigabitEthernet 0/1.

```
Ruijie#show interface gigabitEthernet 0/1 counters summary
```


Interface	InOctets	InUcastPkts	InMulticastPkts
Gi0/1	1475788005	1389	45880503



```

11886621
Interface      OutOctets      OutUcastPkts      OutMulticastPkts
OutBroadcastPkts
-----
Gi0/1          6667915         6382              31629
13410

```

 InOctets is the total number of packets received on the interface. InUcastPkts is the number of unicast packets received on the interface. InMulticastPkts is the number of multicast packets received on the interface. InBroadcastPkts is the number of broadcast packets received on the interface.

OutOctets is the total number of packets transmitted on the interface. OutUcastPkts is the number of unicast packets transmitted on the interface. OutMulticastPkts is the number of multicast packets transmitted on the interface. OutBroadcastPkts is the number of broadcast packets transmitted on the interface.

#### Related Commands

Command	Description
N/A	N/A

#### Platform Description

N/A

## 1.24 show interfaces link-state-change statistics

Use this command to display the link state change statistics, including the time and count.

**show interfaces** [ *interface-type interface-number* ] **link-state-change statistics**

#### Parameter Description

Parameter	Description
<i>interface-type</i> <i>interface-number</i>	The interface type and ID.

#### Defaults

N/A

#### Command Mode

Privileged EXEC mode

#### Usage Guide

If you do not specify an interface, the link state statistics of all interfaces are displayed.

#### Configuration Examples

The following example displays the link state statistics of interface GigabitEthernet 0/1.

```
Ruijie# show interfaces GigabitEthernet 0/1 link-state-change statistics
```

Interface	Link state	Link state change times	Last change time
-----	-----	-----	
-----			
Gi 0/1	down	100	2012-12-24 15:00:00

Interface	Description
Link state	Current link state.
Link state change times	The count of link state change.
Last change time	The time when the last link state change occurs.

**Related  
Commands**

Command	Description
N/A	N/A

**Platform  
Description**

N/A

## 1.25 show interfaces status

Use this command to display interface status information.

**show interfaces** [ *interface-type interface-number* ] **status**

**Parameter  
Description**

Parameter	Description
<i>interface-type</i> <i>interface-number</i>	The interface type and ID.
<b>status</b>	Displays interface status information, including speed and duplex.

**Defaults**

N/A

**Command  
Mode**

Privileged EXEC mode

**Usage Guide**

If you do not specify an interface, the status information of all interfaces is displayed.

**Configuration  
Examples**

The following example displays the status information of interface GigabitEthernet 0/1.

```
Ruijie#show interfaces GigabitEthernet 0/1 status
```

Interface	Status	Vlan	Duplex	Speed	Type
-----	-----	-----	-----	-----	-----
GigabitEthernet 0/1	up	1	Full	1000M	copper

Related Commands	Command	Description
	N/A	N/A
Platform	N/A	
Description		

## 1.26 show interfaces status err-disable

Use this command to display the interface violation status.

**show interfaces** [ *interface-type interface-number* ] **status err-disable**

Parameter Description	Parameter	Description
	<i>interface-type</i> <i>interface-number</i>	(Optional) The interface type and ID.


### Defaults

**Command Mode** Any CLI mode

**Usage Guide** If you do not specify an interface, violation status of all interfaces is displayed.

**Configuration Examples** The following example displays the violation status of interface GigabitEthernet 0/1.

```
Ruijie#show interface gigabitEthernet 0/1 status err-disabled
Interface                Status          Reason
-----
GigabitEthernet 0/1      err-disabled    BPDU Guard
```

 The violation status is displayed as **err-disabled**.

Related Commands	Command	Description
	N/A	N/A
Platform	N/A	
Description		

## 1.27 show interfaces transceiver

Use this command to display transceiver information of the interface.

**show interfaces** [ *interface-type interface-number* ] **transceiver** [ **alarm** | **diagnosis** ]

Parameter Description	Parameter	Description
	<i>interface-type</i> <i>interface-number</i>	The interface type and ID.
	<b>transceiver</b>	Displays the transceiver information.
	<b>alarm</b>	Displays the alarm message of the transceiver. If there is no alarm message, it is displayed as None.
	<b>diagnosis</b>	Displays the diagnostic parameters of the transceiver.

**Defaults** N/A

**Command Mode** Privileged EXEC mode

**Usage Guide** If you do not specify an interface, the transceiver information of all interfaces is displayed.

**Configuration Examples** The following example displays the transceiver information of interface GigabitEthernet 5/4.

#### Examples

```
Ruijie#show interfaces GigabitEthernet 5/4 transceiver
Transceiver Type      : 1000BASE-SX-SFP
Connector Type        : LC
Wavelength(nm)        : 850
Transfer Distance     :
    50/125 um OM2 fiber
        -- 550m
    62.5/125 um OM1 fiber
        -- 270m
Digital Diagnostic Monitoring : YES
Vendor Serial Number    : 101680093602489
```

The following example displays the alarm message of the transceiver of interface GigabitEthernet 5/4.

```
Ruijie#show interfaces GigabitEthernet 5/4 transceiver alarm
gigabitEthernet 5/4 transceiver current alarm information:
RX loss of signal
```

The following example displays the diagnostic parameters of the transceiver of interface GigabitEthernet 5/4.

```
Ruijie#show interfaces GigabitEthernet 5/4 transceiver diagnosis
Current diagnostic parameters[AP:Average Power]:
Temp(Celsius)  Voltage(V)      Bias(mA)          RX power(dBm)      TX
power(dBm)
38(OK)         3.20(OK)          0.04(OK)
-40.00(alarm)[AP] -40.00(alarm)
```

**Related Commands**

Command	Description
---------	-------------

N/A	N/A
-----	-----

**Platform** N/A

**Description**

## 1.28 show interfaces usage

Use this command to display bandwidth usage of the interface.

**show interfaces** [ *interface-type interface-number* ] **usage** [ *up* | *down* ]

**Parameter Description**

Parameter	Description
<i>interface-type</i> <i>interface-number</i>	(Optional) The interface type and ID.
<i>up</i>	(Optional) Displays the port up statistics.
<i>down</i>	(Optional) Displays the port down statistics.

**Defaults** N/A


**Command Mode** Any CLI mode

**Usage Guide** If you do not specify an interface, the bandwidth usage of all interfaces is displayed. Bandwidth refers to the actual link bandwidth rather than the *bandwidth* parameter configured on the interface.

**Configuration** The following example displays bandwidth usage of interface GigabitEthernet 0/1.

**Examples**

Interface	Bandwidth	Average Usage	Output Usage
Input Usage			
-----	-----	-----	-----
GigabitEthernet 0/0	1000 Mbit	0.002822759%	0.001183280%
0.004462237%			

 Bandwidth refers to the interface link bandwidth, the maximum speed of link. Average Usage refers to the current usage.

**Related Commands**

Command	Description
N/A	N/A

**Platform** N/A

**Description**

## 1.29 shutdown

Use this command to disable an interface. Use the **no** form of this command to enable a disabled port.

**shutdown**

**no shutdown**

### Parameter Description

Parameter	Description
N/A	N/A

### Defaults


By default, the administrative status of an interface is Up.

### Command Mode

Interface configuration mode

### Usage Guide

Use this command to stop the forwarding on the interface (Gigabit Ethernet interface, Aggregate port or SVI). You can enable the port with the **no shutdown** command. If you shut down the interface, the configuration of the interface exists, but does not take effect. You can view the interface status by using the **show interfaces** command.

 If you use the script to run no shutdown frequently and rapidly, the system may prompt the interface status reversal.

### Configuration

The following example disables an interface.

### Examples

```
Ruijie(config)# interface aggregateport 1
Ruijie(config-if)# shutdown
```

The following example enables an interface.

```
Ruijie(config)# interface aggregateport 1
Ruijie(config-if)# no shutdown
```

### Related Commands

Command	Description
<b>clear interface</b>	Resets the hardware.
<b>show interfaces</b>	Displays the interface information.

### Platform

N/A

### Description

## 1.30 snmp trap link-status

Use this command to send LinkTrap on a port. Use the **no** form of this command to disable this function.

**snmp trap link-status**  
**no snmp trap link-status**

**Parameter  
Description**

Parameter	Description
N/A	N/A

**Defaults** This function is enabled by default

**Command  
Mode** Interface configuration mode.

**Usage Guide** For an interface (for instance, Ethernet interface, AP interface, and SVI interface), this command sets whether to send LinkTrap on the interface. If the function is enabled, the SNMP sends the LinkTrap when the link status of the interface changes.

**Configuration** The following example disables the interface from sending LinkTrap on the interface.

**Examples**

```
Ruijie(config)# interface gigabitEthernet 1/1
Ruijie(config-if)# no snmp trap link-status
```

The following example enables the interface to forward Link trap.

```
Ruijie(config)# interface gigabitEthernet 1/1
Ruijie(config-if)# snmp trap link-status
```

**Related  
Commands**

Command	Description
<b>snmp trap link-status</b>	Enables the interface to send LinkTrap on the interface.
<b>no snmp trap link-status</b>	Disables the interface from sending LinkTrap on the interface.

**Platform** N/A  
**Description**

## 1.31 snmp-server if-index persist

Use this command to set the interface index persistence. The interface index remains the same after the device is restarted.

**snmp-server if-index persist**

**Parameter  
Description**

Parameter	Description
N/A	N/A

**Defaults** This function is disabled by default.

**Command Mode** Global configuration mode

**Usage Guide** After this command is configured, all interface indexes are saved in the configuration file. After the device is restarted, interface indexes remain the same as before.

**Configuration** The following example enables the interface index persistence.

**Examples** Ruijie(config)# snmp-server if-index persist

**Related Commands**

Command	Description
N/A	N/A

**Platform Description** N/A

## 1.32 speed

Use this command to configure the speed on the port. Use the **no** form of this command to restore the default setting.

**speed [ 10 | 100 | 1000 | auto ]**

**Parameter Description**

Parameter	Description
<b>10</b>	The transmission rate of the interface is 10Mbps.
<b>100</b>	The transmission rate of the interface is 100Mbps.
<b>1000</b>	The transmission rate of the interface is 1000Mbps.
<b>auto</b>	Self-adaptive

**Defaults** The default is **auto**.

**Command Mode** Interface configuration mode.

**Usage Guide** If an interface is the member of an aggregate port, the rate of the interface depends on the rate of the aggregate port. You can set the rate of the interface, but it does not take effect until the interface exits the aggregate port. Use **show interfaces** to display configuration. The rate varies by interface types. For example, you cannot set the rate of a SFP interface to 10M or 100M.

**Configuration** The following example sets the speed on interface gigabitethernet 1/1 to 100Mbps.

**Examples** Ruijie(config)# interface gigabitethernet 1/1



```
Ruijie(config-if)# speed 100
```

**Related  
Commands**

Command	Description
<b>show interfaces</b>	Displays the interface information.

**Platform** N/A  
**Description**

## 1.33 switchport

Use this command to configure a Layer 3 interface. Use the **no** form of this command to restore the default setting.

**switchport**

**no switchport**

**Parameter  
Description**

Parameter	Description
N/A	N/A

**Defaults** All the interfaces are in Layer 2 mode by default.

**Command  
Mode** Interface configuration mode.

**Usage Guide** This command is valid only for physical interfaces. The **switchport** command is used to disable the interface and re-enable it. In this status, the device will send the information to indicate the connect status. If the interface is changed to Layer 3 mode from Layer 2, all the attributes in Layer 2 mode will be cleared.

**Configuration** The following example configures a Layer 3 interface.

**Examples**

```
Ruijie(config-if)# switchport
```

**Related  
Commands**

Command	Description
<b>show interfaces</b>	Displays the interface information.

**Platform** N/A  
**Description**

## 1.34 switchport access

Use this command to configure an interface as a statics access port and add it to a VLAN. Use the **no**

form of this command to restore the default setting.

**switchport access vlan** *vlan-id*

**no switchport access vlan**

**Parameter  
Description**

Parameter	Description
<i>vlan-id</i>	The VLAN ID at which the port to be added.

**Defaults**

By default, the switch port is an access port and the VLAN is VLAN 1.

**Command  
Mode**

Interface configuration mode.

**Usage Guide**

Enter one VLAN ID. The system will create a new one and add the interface to the VLAN if you enter a new VLAN ID. If the VLAN ID already exists, the command adds the interface to the VLAN. If the port is a trunk port, the operation does not take effect.

**Configuration  
Examples**

The following example configures interface gigabitethernet 1/1 as a statistic access port and adds it to VLAN 2.

```
Ruijie(config)# interface gigabitethernet 1/1
Ruijie(config-if)# switchport access vlan 2
```

**Related  
Commands**

Command	Description
<b>switchport mode</b>	Configures the interface as Layer 2 mode (switch port mode).
<b>switchport trunk</b>	Configures a native VLAN and the allowed-VLAN list for the trunkport.

**Platform  
Description**

N/A

## 1.35 switchport mode

Use this command to specify a L2 interface (switch port) mode. You can specify this interface to be an access port or a trunk port or an 802.1Q tunnel. Use the **no** form of this command to restore the default setting.

**switchport mode { access | trunk }**

**no switchport mode**

**Parameter  
Description**

Parameter	Description
<b>access</b>	Configures the switch port as an access port.

<b>trunk</b>	Configures the switch port as a trunk port.
--------------	---

**Defaults** The default is **access**.

**Command Mode** Interface configuration mode.

**Usage Guide** If a switch port mode is access port, it can be the member port of only one VLAN. Use **switchport access vlan** to specify the member of the VLAN.

A trunk port can be the member port of various VLANs defined by the allowed-VLAN list. The allowed VLAN list of the interface determines the VLANs to which the interface may belong. The trunk port is the member of all the VLANs in the allowed VLAN list. Use **switchport trunk** to define the allowed-VLANs list.

**Configuration Examples** The following example specifies a L2 interface (switch port) mode.

```
Ruijie(config-if)# switchport mode trunk
```

**Related Commands**

Command	Description
<b>switchport access</b>	Configures an interface as a statics access port and assigns it to a VLAN.
<b>switchport trunk</b>	Configures a native VLAN and the allowed-VLAN list for the trunk port.

**Platform** N/A

**Description**

## 1.36 switchport protected

Use this command to configure the interface as the protected port. Use the **no** form of this command to restore the default setting.

**switchport protected**  
**no switchport protected**

**Parameter Description**

Parameter	Description
N/A	N/A

**Defaults** This function is disabled by default.

**Command Mode** Interface configuration mode.

**Usage Guide** The ports that are set as the protected ports cannot switch on L2, but can route on L3. A protected port can communicate with an unprotected port. Use the **show interfaces** command to display configuration.

**Configuration** The following example configures interface gigabitethernet 1/1 as a protected port.

**Examples**

```
Ruijie(config)#interface gigabitethernet 1/1
Ruijie(config-if)# switchport protected
```

**Related  
Commands**

Command	Description
<b>show interfaces</b>	Displays the interface information.

**Platform** N/A

**Description**

## 1.37 switchport trunk

Use this command to specify a native VLAN and the allowed-VLAN list for the trunk port. Use the **no** form of this command to restore the default setting.

**switchport trunk { allowed vlan { all | [ add | remove | except ] vlan-list } | native vlan vlan-id }**  
**no switchport trunk { allowed vlan | native vlan }**

**Parameter  
Description**

Parameter	Description
<b>allowed vlan</b> <i>vlan-list</i>	Configures the list of VLANs allowed on the trunk port. <i>vlan-list</i> can be a VLAN or a range of VLANs starting with the smaller VLAN ID and ending with the larger VLAN ID and being separated by hyphen, for example, 10 to 20. The segments can be separated with a comma (,), for example, 1 to 10, 20 to 25, 30, 33. all means that the allowed VLAN list contains all the supported VLANs; add means to add the specified VLAN list to the allowed VLAN list; remove means to remove the specified VLAN list from the allowed VLAN list; except means to add all the VLANs other than those in the specified VLAN list to the allowed VLAN list;
<b>native vlan</b> <i>vlan-id</i>	Configures the native VLAN.

**Defaults** The allowed VLAN list is all, the Native VLAN is VLAN1.

**Command  
Mode** Interface configuration mode.

**Usage Guide** Native VLAN:

A trunk port belongs to one native VLAN. A native VLAN means that the untagged packets received/sent on the trunk port belong to the VLAN. Obviously, the default VLAN ID of the interface (that is, the PVID in the IEEE 802.1Q) is the VLAN ID of the native VLAN. In addition, when frames belonging to the native VLAN are sent over the trunk port, they are untagged.

Allowed-VLAN List:

By default, a trunk port sends traffic to and received traffic from all VLANs (ID 1 to 4094). However, you can prevent the traffic from passing over the trunk by configuring allowed VLAN lists on a trunk. Use `show interfaces switchport` to display configuration.

**Configuration** The following example removes port 1/15 from VLAN 2.

**Examples**

```
Ruijie(config)# interface fastethernet 1/15
Ruijie(config-if)# switchport trunk allowed vlan remove 2
Ruijie(config-if)# end
Ruijie# show interfaces fastethernet1/15 switchport
Switchport is enabled
Mode is trunk port
Access vlan is 1,Native vlan is 1
Protected is disabled
Vlan lists is
1,3-4094
```

**Related  
Commands**

Command	Description
<b>show interfaces</b>	Displays the interface information.
<b>switchport access</b>	Configures an interface as a static access port and assigns it to a VLAN.

**Platform  
Description** N/A

## 2 MAC Address Commands

### 2.1 clear mac-address-table dynamic

Use this command to clear the dynamic MAC address.

**clear mac-address-table dynamic** [ **address** *mac-addr* [ **interface** *interface-id* ] [ **vlan** *vlan-id* ] | { [ **interface** *interface-id* ] [ **vlan** *vlan-id* ] } ]

Parameter	Parameter	Description
Description	<b>dynamic</b>	Clears all the dynamic MAC addresses.
	<b>address</b> <i>mac-addr</i>	Clears the specified dynamic MAC address.
	<b>interface</b> <i>interface-id</i>	Clears all the dynamic MAC addresses of the specified interface.
	<b>vlan</b> <i>vlan-id</i>	Clears all the dynamic MAC addresses of the specified VLAN, in the range from 1 to 4094.

**Defaults** N/A

**Command Mode** Privileged EXEC mode.

**Usage Guide** Use the **show mac-address-table dynamic** command to display all the dynamic MAC addresses.

**Configuration** The following command clears all the dynamic MAC addresses.

**Examples** Ruijie# clear mac-address-table dynamic

Related	Command	Description
Commands	<b>show mac-address-table dynamic</b>	Displays dynamic MAC address.

**Platform** N/A  
**Description**

### 2.2 mac-address-learning

Use this command to enable the port address learning. Use the **no** or **default** form of this command to restore the default setting.

**mac-address-learning**

**no mac-address-learning**

**default mac-address-learning**

Parameter	Parameter	Description
-----------	-----------	-------------

Description	N/A	N/A				
Defaults	The address learning function is enabled.					
Command Mode	Interface configuration mode.					
Usage Guide	MAC address learning cannot be disabled on the port where the security function is enabled. The security function cannot be configured on the port where address learning is disabled.					
Configuration Examples	The following example disables the port address learning function. Ruijie(config-if) # no mac-address-learning					
Related Commands	<table><tr><th>Command</th><th>Description</th></tr><tr><td>N/A</td><td>N/A</td></tr></table>	Command	Description	N/A	N/A	
Command	Description					
N/A	N/A					
Platform Description	N/A					

## 2.3 mac-address-learning (global)

Use this command to enable MAC address learning globally. Use the **no** or **default** form of this command to restore the default setting.

### **mac-address-learning enable**

Use this command to disable MAC address learning globally.

### **mac-address-learning disable**

Use this command to restore MAC address learning globally.

### **default mac-address-learning**

<b>Parameter Description</b>	<table><tr><th>Parameter</th><th>Description</th></tr><tr><td><b>enable</b></td><td>Enables MAC address learning globally.</td></tr><tr><td><b>disable</b></td><td>Disables MAC address learning globally.</td></tr></table>	Parameter	Description	<b>enable</b>	Enables MAC address learning globally.	<b>disable</b>	Disables MAC address learning globally.
Parameter	Description						
<b>enable</b>	Enables MAC address learning globally.						
<b>disable</b>	Disables MAC address learning globally.						
<b>Defaults</b>	The <b>mac-address-learning enable</b> command is enabled by default.						
<b>Command Mode</b>	Global configuration mode						
<b>Usage Guide</b>	When this function is enabled, the MAC address is learned in global configuration mode the same as learned in interface configuration mode.						
<b>Configuration Examples</b>	The following example disables MAC address learning globally. <pre>Ruijie(config) # mac-address-learning disable</pre>						

Related	Command	Description
Commands	N/A	N/A

Platform N/A  
Description

## 2.4 mac-address-table aging-time

Use this command to specify the aging time of the dynamic MAC address. Use the **no** or **default** form of the command to restore the default setting.

**mac-address-table aging-time** *seconds*

**no mac-address-table aging-time**

**default mac-address-table aging-time**

Parameter	Parameter	Description
Description	<i>seconds</i>	Aging time of the dynamic MAC address (in seconds). The time range depends on the switch.

Defaults The default is 300.

Command Global configuration mode.  
Mode

Usage Guide Use **show mac-address-table aging-time** to display configuration.

Configuration The following example sets the aging time of the dynamic MAC address to 500 seconds.

Examples 

```
Ruijie(config)# mac-address-table aging-time 500
```

Related	Command	Description
Commands	<b>show mac-address-table aging-time</b>	Displays the aging time of the dynamic MAC address.
	<b>show mac-address-table dynamic</b>	Displays dynamic MAC address.

Platform N/A  
Description

## 2.5 mac-address-table filtering

Use this command to configure the filtering MAC address. Use the **no** or **default** form of the command to restore the default setting.

**mac-address-table filtering** *mac-address* **vlan** *vlan-id*

**no mac-address-table filtering** *mac-address* **vlan** *vlan-id*



**default mac-address-table filtering** *mac-address* **vlan** *vlan-id*

<b>Parameter</b>	<b>Parameter</b>	<b>Description</b>
<b>Description</b>	<i>mac-address</i>	Filtering Address
	<i>vlan-id</i>	VLAN ID, in the range from 1 to 4094.
<b>Defaults</b>	No filtering address is configured by default.	
<b>Command Mode</b>	Global configuration mode.	
<b>Usage Guide</b>	The filtering MAC address shall not be a multicast address.	
<b>Configuration Examples</b>	The following example configures the filtering MAC address for VLAN 1.	
	<pre>Ruijie(config)#mac-address-table filtering 0000.0202.0303 vlan 3</pre>	
<b>Related Commands</b>	<b>Command</b>	<b>Description</b>
	<b>clear mac-address-table filtering</b>	Clears the filtering MAC address.
<b>Platform</b>	N/A	
<b>Description</b>		

## 2.6 mac-address-table notification

Use this command to enable the MAC address notification function. Use The **no** or **default** form of the command to restore the default setting.

**mac-address-table notification** [ **interval** *value* | **history-size** *value* ]

**no mac-address-table notification** [ **interval** | **history-size** ]

**default mac-address-table notification** [ **interval** | **history-size** ]

<b>Parameter</b>	<b>Parameter</b>	<b>Description</b>
<b>Description</b>	<b>interval</b> <i>value</i>	Sets the interval of sending the MAC address trap message, 1 second by default.
	<b>history-size</b> <i>value</i>	Sets the maximum number of the entries in the MAC address notification table, 50 entries by default.
<b>Defaults</b>	By default, the interval is 1 and the maximum number of the entries in the MAC address notification table is 50.	
<b>Command Mode</b>	Global configuration mode.	

**Usage Guide** The MAC address notification function is specific for only dynamic MAC address and secure MAC address. No MAC address trap message is generated for static MAC addresses. In the global configuration mode, you can use the **snmp-server enable traps mac-notification** command to enable or disable the switch to send the MAC address trap message.

**Configuration** The following example enables the MAC address notification function.

**Examples**

```
Ruijie(config)# mac-address-table notification
Ruijie(config)# mac-address-table notification interval 40
Ruijie(config)# mac-address-table notification history-size 100
```

Related Commands	Command	Description
	<b>snmp-server enable traps</b>	Sets the method of handling the MAC address trap message..
	<b>show mac-address-table notification</b>	Displays the MAC address notification configuration and the MAC address trap notification table.
	<b>snmp trap mac-notification</b>	Enables the MAC address trap notification function on the specified interface.

**Platform** N/A

**Description**

## 2.7 mac-address-table static

Use this command to configure a static MAC address. Use the **no** or **default** form of the command to restore the default setting.

**mac-address-table static** *mac-addr* **vlan** *vlan-id* **interface** *interface-id*

**no mac-address-table static** *mac-addr* **vlan** *vlan-id* **interface** *interface-id*

**default mac-address-table static** *mac-addr* **vlan** *vlan-id* **interface** *interface-id*

Parameter Description	Parameter	Description
	<i>mac-addr</i>	Destination MAC address of the specified entry
	<i>vlan-id</i>	VLAN ID of the specified entry, in the range from 1 to 4094.
	<i>interface-id</i>	Interface (physical interface or aggregate port) that packets are forwarded to

**Defaults** No static MAC address is configured by default.

**Command Mode** Global configuration mode.

**Usage Guide** A static MAC address has the same function as the dynamic MAC address that the switch learns. Compared with the dynamic MAC address, the static MAC address will not be aged out. It can only be configured and removed by manual. Even if the switch is reset, the static MAC address will not be lost. A static MAC address shall not be configured as a multicast address. Use **show mac-address-table static** to display the static MAC address.

**Configuration** N/A

**Examples**

Related	Command	Description
Commands	<b>show mac-address-table static</b>	Displays the static MAC address.

**Platform** N/A

**Description**

## 2.8 max-dynamic-mac-count

Use this command to set the maximum number of MAC address learned dynamically on the VLAN or interface. Use the **no** or **default** form of this command to restore the default setting.

**max-dynamic-mac-count** *num*

**no max-dynamic-mac-count**

**default max-dynamic-mac-count**

Parameter	Parameter	Description
Description	<i>num</i>	Sets the maximum number of MAC addresses.

**Defaults** The maximum number is not set by default.

**Command Mode** VLAN configuration mode / Interface configuration mode

**Usage Guide** This command is used to set the maximum number of MAC addresses learned dynamically on the VLAN or interface.

If the number of MAC addresses dynamically learned on the VLAN or interface reaches the upper limit, MAC address learning is disabled on the VLAN or interface.

If the number of MAC addresses reaches the upper limit when this command is configured, the surplus MAC addresses are not cleared. Instead, they remain and then age. MAC address learning is disabled on the VLAN or interface.

Use the **show mac-address-table max-dynamic-mac-count** command to display the maximum number of MAC addresses learned dynamically on the VLAN or interface.

**Configuration Examples** The following example sets the maximum number of MAC addresses dynamically learned on VLAN 1.

```
Ruijie#configure terminal
Enter configuration commands, one per line. End with CNTL/Z.
Ruijie(config)#vlan 1
Ruijie(config-vlan)#max-dynamic-mac-count 160
```

The following example sets the maximum number of MAC addresses dynamically learned on

```
interface GigabitEthernet 0/1.
```

```
Ruijie#configure terminal
```

```
Enter configuration commands, one per line. End with CNTL/Z.
```

```
Ruijie(config)#interface GigabitEthernet 0/1
```

```
Ruijie(config-if-GigabitEthernet 0/1)#max-dynamic-mac-count 160
```

Related Commands	Command	Description
	N/A	N/A

**Platform** N/A  
**Description**

## 2.9 show mac-address-learning

Use this command to display the MAC address learning.

**show mac-address-learning**

Parameter Description	Parameter	Description
	N/A	N/A

**Defaults** N/A

**Command** All modes.  
**Mode**

**Usage Guide** N/A

**Configuration** The following example displays the MAC address learning.

**Examples**

```
Ruijie# show mac-address-learning
```

```
GigabitEthernet 0/0      learning ability: disable
```

```
GigabitEthernet 0/1      learning ability: enable
```

```
GigabitEthernet 0/2      learning ability: enable
```

```
GigabitEthernet 0/3      learning ability: enable
```

Related Commands	Command	Description
	N/A	N/A

**Platform** N/A  
**Description**

## 2.10 show mac-address-table

Use this command to display all types of MAC addresses (including dynamic address, static address

and filter address).

**show mac-address-table** [ **address** *mac-addr* ] [ **interface** *interface-id* ] [ **vlan** *vlan-id* ]

#### Parameter Description

Parameter	Description
<b>address</b> <i>mac-addr</i>	The MAC address.
<b>interface</b> <i>interface-id</i>	The Interface ID.
<b>vlan</b> <i>vlan-id</i>	The VLAN ID, in the range from 1 to 4094.

**Defaults** N/A

**Command  
Mode** All modes

**Usage Guide** N/A

**Configuration** The following example displays the MAC address.

#### Examples

```
Ruijie# show mac-address-table address 00d0.f800.1001
Vlan      MAC Address      Type      Interface
-----
1         00d0.f800.1001    STATIC    GigabitEthernet 1/1
Ruijie# show mac-address-table
Vlan      MAC Address      Type      Interface
-----
1         00d0.f800.1001    STATIC    GigabitEthernet 1/1
1         00d0.f800.1002    DYNAMIC   GigabitEthernet 1/1
1         00d0.f800.1003    OTHER     GigabitEthernet 1/1
1         00d0.f800.1004    FILTER
```

Field	Description
Vlan	The interface address.
MAC Address	The MAC address.
Type	The MAC address type.
Interface	The interface corresponding to the MAC address.

#### Related Commands

Command	Description
N/A	N/A

#### Platform Description

N/A

## 2.11 show mac-address-table aging-time

Use this command to display the aging time of the dynamic MAC address.

**show mac-address-table aging-time**

<b>Parameter</b>	<table><tr><th>Parameter</th><th>Description</th></tr><tr><td>N/A</td><td>N/A</td></tr></table>	Parameter	Description	N/A	N/A
Parameter	Description				
N/A	N/A				
<b>Description</b>	N/A				
<b>Defaults</b>	N/A				
<b>Command Mode</b>	All modes.				
<b>Usage Guide</b>	N/A				
<b>Configuration Examples</b>	<p>The following example displays the aging time of the dynamic MAC address.</p> <pre>Ruijie# show mac-address-table aging-time Aging time : 300</pre>				
<b>Related Commands</b>	<table><tr><th>Command</th><th>Description</th></tr><tr><td><b>mac-address-table aging-time</b></td><td>Sets the aging time of the dynamic MAC address.</td></tr></table>	Command	Description	<b>mac-address-table aging-time</b>	Sets the aging time of the dynamic MAC address.
Command	Description				
<b>mac-address-table aging-time</b>	Sets the aging time of the dynamic MAC address.				
<b>Platform Description</b>	N/A				

## 2.12 show mac-address-table count

Use this command to display the number of address entries in the address table.

**show mac-address-table count [ interface *interface-id* | vlan *vlan-id* ]**

<b>Parameter</b>	<table><tr><th>Parameter</th><th>Description</th></tr><tr><td><b>interface</b> <i>interface-id</i></td><td>Interface ID</td></tr><tr><td><b>vlan</b> <i>vlan-id</i></td><td>VLAN ID, in the range from 1 to 4094.</td></tr></table>	Parameter	Description	<b>interface</b> <i>interface-id</i>	Interface ID	<b>vlan</b> <i>vlan-id</i>	VLAN ID, in the range from 1 to 4094.
Parameter	Description						
<b>interface</b> <i>interface-id</i>	Interface ID						
<b>vlan</b> <i>vlan-id</i>	VLAN ID, in the range from 1 to 4094.						
<b>Description</b>							
<b>Defaults</b>	N/A						
<b>Command Mode</b>	Privileged EXEC mode.						
<b>Usage Guide</b>	<p>The <b>show mac-address-table count</b> command is used to display the number of entries based on the type of MAC address entry.</p> <p>The <b>show mac-address-table count interface</b> command is used to display the number of entries based on the interface associated with the MAC address entry.</p> <p>The <b>show mac-address-table count vlan</b> command is used to display the number of entries based on the VLAN of MAC address entries.</p>						

**Configuration** The following example displays the number of MAC address entries.

**Examples**

```
Ruijie# show mac-address-table count
Dynamic Address Count : 51
Static Address Count : 0
Filter Address Count : 0
Total Mac Addresses : 51
Total Mac Address Space Available: 8139
```

The following example displays the number of MAC address in VLAN 1.

```
Ruijie# show mac-address-table count vlan 1
Dynamic Address Count : 7
Static Address Count : 0
Filter Address Count : 0
Total Mac Addresses : 7
```

The following example displays the number of MAC addresses on interface g0/1.

```
Ruijie# show mac-address-table interface g0/1
Dynamic Address Count : 10
Static Address Count : 0
Filter Address Count : 0
Total Mac Addresses : 10
```

**Related  
Commands**

Command	Description
<b>show mac-address-table static</b>	Displays the static address.
<b>show mac-address-table filtering</b>	Displays the filtering address.
<b>show mac-address-table dynamic</b>	Displays the dynamic address.
<b>show mac-address-table address</b>	Displays all the address information of the specified address.
<b>show mac-address-table interface</b>	Displays all the address information of the specified interface.
<b>show mac-address-table vlan</b>	Displays all the address information of the specified vlan.

**Platform** N/A

**Description**

## 2.13 show mac-address-table dynamic

Use this command to display the dynamic MAC address.

**show mac-address-table dynamic** [ **address** *mac-add r*] [ **interface** *interface-id*] [ **vlan** *vlan-id*]

**Parameter  
Description**

Parameter	Description
<i>mac-add r</i>	Destination MAC address of the entry
<i>vlan-id</i>	VLAN of the entry, in the range from 1 to 4094.
<i>interface-id</i>	Interface that the packet is forwarded to.

	It may be a physical port or an aggregate port
--	--

**Defaults****Command** All modes.**Mode****Usage Guide** N/A**Configuration** The following example displays the dynamic MAC address.**Examples**

```
Ruijie# show mac-address-table dynamic
Vlan    MAC Address      Type    Interface
-----
1       0000.0000.0001    DYNAMIC gigabitethernet 1/1
1       0001.960c.a740    DYNAMIC gigabitethernet 1/1
1       0007.95c7.dff9    DYNAMIC gigabitethernet 1/1
1       0007.95cf.eee0    DYNAMIC gigabitethernet 1/1
1       0007.95cf.f41f    DYNAMIC gigabitethernet 1/1
1       0009.b715.d400    DYNAMIC gigabitethernet 1/1
1       0050.bade.63c4    DYNAMIC gigabitethernet 1/1
```

**Related****Commands**

Command	Description
<b>clear mac-address-table dynamic</b>	Clears the dynamic MAC address.

**Platform** N/A**Description**

## 2.14 show mac-address-table filtering

Use this command to display the filtering MAC address.

**show mac-address-table filtering** [ **ddr** *mac-addr* ] [ **vlan** *vlan-id* ]**Parameter****Description**

Parameter	Description
<i>mac-addr</i>	Destination MAC address of the entry
<i>vlan-id</i>	VLAN ID of the entry, in the range from 1 to 4094.

**Defaults** N/A**Command** Privileged EXEC mode.**Mode****Usage Guide** N/A



**Configuration** The following example displays the filtering MAC address.

**Examples**

```
Ruijie# show mac-address-table filtering
Vlan    MAC Address    Type    Interface
-----
1       0000.2222.2222  FILTER  Not available
```

**Related  
Commands**

Command	Description
<b>mac-address-table filtering</b>	Configures the filtering MAC address.

**Platform** N/A  
**Description**

## 2.15 show mac-address-table interface

Use this command to display all the MAC addresses on the specified interface including static and dynamic MAC address

**show mac-address-table interface** [ *interface-id* ] [ **vlan** *vlan-id* ]

**Parameter  
Description**

Parameter	Description
<i>interface-id</i>	Displays the MAC address information of the specified Interface (physical interface or aggregate port).
<i>vlan-id</i>	VLAN ID of the entry, in the range from 1 to 4094..

**Defaults** N/A

**Command  
Mode** Privileged EXEC mode.

**Usage Guide** N/A

**Configuration** The following example displays all the MAC addresses on interface gigabitethernet 1/1.

**Examples**

```
Ruijie# show mac-address-table interface
gigabitethernet 1/1
Vlan    MAC Address    Type    Interface
-----
1       00d0.f800.1001  STATIC  gigabitethernet 1/1
1       00d0.f800.1002  STATIC  gigabitethernet 1/1
1       00d0.f800.1003  STATIC  gigabitethernet 1/1
1       00d0.f800.1004  STATIC  gigabitethernet 1/1
```

**Related  
Commands**

Command	Description
<b>show mac-address-table static</b>	Displays the static MAC address.
<b>show mac-address-table filtering</b>	Displays the filtering MAC address.

<b>show mac-address-table dynamic</b>	Displays the dynamic MAC address.
<b>show mac-address-table address</b>	Displays all types of MAC addresses.
<b>show mac-address-table vlan</b>	Displays all types of MAC addresses of the specified VLAN.
<b>show mac-address-table count</b>	Displays the address counts in the MAC address table.

**Platform** N/A

**Description**

## 2.16 show mac-address-table max-dynamic-mac-count

Use this command to display the maximum number of dynamic MAC addresses learned on the VLAN or interface.

**show mac-address-table max-dynamic-mac-count** { **vlan** [ *vlan-id* ] | **interface** [ *interface-id* ] }

Parameter Description	Parameter	Description
	<b>vlan</b>	Displays the dynamic MAC address learned on all VLANs which are configured with the maximum number of dynamic MAC address learning.
	<i>vlan-id</i>	Displays the dynamic MAC address learned on the specified VLAN.
	<b>interface</b>	Displays the dynamic MAC address learned on all interfaces which are configured with the maximum number of dynamic MAC address learning.
	<i>interface-id</i>	Displays the dynamic MAC address learned on the specified interface.

**Defaults** N/A

**Command Mode** Privileged EXEC mode

**Usage Guide** N/A

**Configuration Examples** The following example displays the MAC address learned on all VLANs which are configured with the maximum number of dynamic MAC addresses.

```
Ruijie#show mac-address-table max-dynamic-mac-count vlan
Vlan Limit  MAC count Learning
-----
1    160      6         YES
```

The following example displays the MAC address learned dynamically on the specified VLAN.

```
Ruijie#show mac-address-table max-dynamic-mac-count vlan 1
Vlan Limit  MAC count Learning
-----
```

1	160	6	YES
Field		Description	
Vlan		The VLAN ID.	
Limit		The maximum number of MAC addresses.	
MAC count		The number of MAC address learned dynamically on the VLAN.	
Learning		Whether MAC address learning is disabled on the VLAN.	

The following example displays the MAC address learned on all interfaces which are configured with the maximum number of the dynamic MAC address.

```
Ruijie#show mac-address-table max-dynamic-mac-count interface
Interface          Limit  MAC count Learning
-----
GigabitEthernet 0/1    160    6        YES
```

The following example displays the MAC address learned dynamically on the specified interface.

```
Ruijie#show mac-address-table max-dynamic-mac-count interface
GigabitEthernet 0/1
Interface          Limit  MAC count Learning
-----
GigabitEthernet 0/1    160    6        YES
```

Field	Description
Interface	The Interface ID
Limit	The maximum number of MAC addresses.
MAC count	The number of MAC address learned dynamically on the interface.
Learning	Whether MAC address learning is disabled on the interface

Related Commands	Command	Description
	N/A	N/A

**Platform** N/A  
**Description**

## 2.17 show mac-address-table notification

Use this command to display the MAC address notification configuration and the MAC address notification table.

**show mac-address-table notification [ interface [ *interface-id* ] | history ]**

Parameter Description	Parameter	Description
	<b>interface</b>	Displays the MAC address notification configuration on all interfaces.

<b>interface</b> <i>interface-id</i>	Displays the MAC address notification configuration on a specific interface.
<b>history</b>	Displays the MAC address notification history.

**Defaults****Command** Privileged EXEC mode.**Mode****Usage Guide** N/A**Configuration** The following example displays the MAC address notification configuration globally.

**Examples**

```
Ruijie#show mac-address-table notification
MAC Notification Feature : Enabled
Interval(Sec): 300
Maximum History Size : 50
Current History Size : 0
```

**Related  
Commands**

Command	Description
<b>mac-address-table notification</b>	Enables MAC address notification.
<b>snmp trap mac-notification</b>	Enables the MAC address trap notification function on the specified interface.

**Platform** N/A**Description**

## 2.18 show mac-address-table static

Use this command to display the static MAC address.

**show mac-address-table static** [**addr** *mac-addr* **r**] [**interface** *interface-id*] [**vlan** *vlan-id*]

Parameter	Parameter	Description
<b>Description</b>	<i>mac-addr</i>	Destination MAC address of the entry
	<i>vlan-id</i>	VLAN ID of the entry, within the range from 1 to 4094.
	<i>interface-id</i>	Interface of the entry physical interface or aggregate port

**Defaults** N/A**Command** Privileged EXEC mode.**Mode****Usage Guide** N/A

**Configuration** The following example displays the static MAC addresses

**Examples**

```
Ruijie# show mac-address-table static
Vlan    MAC Address      Type    Interface
-----
1  00d0.f800.1001  STATIC  gigabitethernet 1/1
1  00d0.f800.1002  STATIC  gigabitethernet 1/1
1  00d0.f800.1003  STATIC  gigabitethernet 1/1
```

**Related  
Commands**

Command	Description
<b>mac-address-table static</b>	Configures the static MAC address.

**Platform** N/A

**Description**

## 2.19 show mac-address-table vlan

Use this command to display all addresses of the specified VLAN.

**show mac-address-table vlan** [ *vlan-id* ]

**Parameter  
Description**

Parameter	Description
<i>vlan-id</i>	VLAN ID of the entry, within the range from 1 to 4094.

**Defaults** N/A

**Command  
Mode** Privileged EXEC mode

**Usage Guide** N/A

**Configuration** The following example displays all addresses of the specified VLAN.

**Examples**

```
Ruijie# show mac-address-table vlan 1
Vlan    MAC Address      Type    Interface
-----
1  00d0.f800.1001  STATIC  gigabitethernet 1/1
1  00d0.f800.1002  STATIC  gigabitethernet 1/1
1  00d0.f800.1003  STATIC  gigabitethernet 1/1
```

**Related  
Commands**

Command	Description
<b>show mac-address-table static</b>	Displays static addresses.
<b>show mac-address-table filtering</b>	Displays filtered addresses.
<b>show mac-address-table dynamic</b>	Displays dynamic addresses.
<b>show mac-address-table address</b>	Displays all address information about the specified address.

<b>show mac-address-table interface</b>	Displays all address information about the specified interface.
<b>show mac-address-table count</b>	Displays the number of addresses in the address table.

**Platform** N/A

**Description**

## 2.20 snmp trap mac-notification

Use this command to enable the MAC address trap notification on the specified interface. Use The **no** or **default** form of the command to restore the default setting.

**snmp trap mac-notification { added | removed }**

**no snmp trap mac-notification { added | removed }**

**default snmp trap mac-notification { added | removed }**

Parameter	Parameter	Description
<b>Description</b>	<i>added</i>	Notifies when a MAC address is added.
	<i>removed</i>	Notifies when a MAC address is removed

**Defaults**

**Command** Interface configuration mode.  
**Mode**

**Usage Guide** Use **show mac-address-table notification interface** to display configuration.

**Configuration** The following example enables the MAC address trap notification on interface gigabitethernet 1/1.

**Examples**

```
Ruijie(config)# interface gigabitethernet 1/1
Ruijie(config-if)# snmp trap mac-notification added
```

Related	Command	Description
<b>Commands</b>	<b>mac-address-table notification</b>	Enables MAC address notification.
	<b>show mac-address-table notification</b>	Displays the MAC address notification configuration and the MAC address notification table.

**Platform** N/A

**Description**

## 3 Aggregate Port Commands

### 3.1 aggregateport load-balance

Use this command to configure a global load-balance algorithm for aggregate ports or a load-balance algorithm for an aggregate port . Use the **no** form of this command to return the default setting.

**aggregateport load-balance { dst-mac | src-mac | src-dst-mac | dst-ip | src-ip | src-dst ip }**  
**no aggregateport load-balance**

Parameter	Parameter	Description
Description	<b>dst-mac</b>	Load balance based on the destination MAC addresses of the incoming packets. For all the links of an aggregate port, the messages with the same destination MAC addresses are sent to the same port, and those with different destination MAC addresses are sent to different ports.
	<b>src-mac</b>	Load balance based on the source MAC addresses of the incoming packets. For all the links of an aggregate port, the messages from different addresses are distributed to different ports, and those from the same addresses are distributed to the same port.
	<b>src-dst-ip</b>	Load balance based on the source IP address and destination IP address. Packets with different source and destination IP address pairs are forwarded through different ports. The packets with the same source and destination IP address pairs are forwarded through the same links. At layer 3, this load balancing style is recommended.
	<b>dst-ip</b>	Load balance based on the destination IP addresses of the incoming packets. For all the links of an aggregate port, the messages with the same destination IP addresses are sent to the same port, and those with different destination IP addresses are sent to different ports.
	<b>src-ip</b>	Load balance based on the source IP addresses of the incoming packets. For all the links of an aggregate port, the messages from different addresses are distributed to different ports, and those from the same addresses are distributed to the same port.
	<b>src-dst-mac</b>	Load balance based on the source and destination MAC addresses. Packets with different source and destination MAC address pairs are forwarded through different ports. The packets with the same source and destination MAC address pairs are forwarded through the same port.

**Defaults** Load balancing can be based on source and destination MAC addresses, source and destination IP addresses (applicable to gateways), or the profile of enhanced load balancing (applicable to switches with CB line cards).

**Command Mode** Global configuration mode/Interface configuration mode

**Usage Guide** You can run `aggregateport load-balance` in interface configuration mode of an AP port on devices that support load balancing configuration on a specific AP port. The configuration in interface configuration mode prevails. To disable the load balancing algorithm, run `no aggregateport load-balance` in interface configuration mode of the AP port. After that, the load balancing algorithm configured in global configuration mode takes effect.

**Configuration Examples** The following example configures a load-balance algorithm globally based on the destination MAC address.

```
Ruijie(config)# aggregateport load-balance dst-mac
```

Related Commands	Command	Description
	<code>show aggregateport load-balance</code>	Displays aggregate port configuration.

**Platform** N/A  
**Description**

## 3.2 aggregateport member linktrap

Use this command to send LinkTrap to aggregate port members. Use the **no** form of this command to restore the default setting.

**aggregateport member linktrap**

**no aggregateport member linktrap**

Parameter Description	Parameter	Description
	N/A	N/A

**Defaults** This function is disabled by default.

**Command Mode** Global configuration mode

**Usage Guide** This function cannot be enabled by running the **snmp trap link-status** command in interface configuration mode. However, it can be enabled by running the **aggregateport member linktrap** command in global configuration mode.

**Configuration Examples** The following example enables the LinkTrap function on the aggregate port members.

```
Ruijie# configure terminal
Ruijie(config)# aggregateport member linktrap
```

Related Commands	Command	Description
	N/A	N/A



**Platform** N/A  
**Description**

### 3.3 aggregateport member minimum

Use this command to set the minimum number of AP member ports. Use the **no** form of this command to restore the default setting.

**aggregateport member minimum** *number*

**no aggregateport member minimum** *number*

Use this command to set actions for the minimum AP member ports. Use the **no** form of this command to restore the default setting.

**aggregateport member minimum action** {shutdown}

**Parameter  
Description**

Parameter	Description
<i>number</i>	The minimum number of AP member ports
<i>shutdown</i>	Shutdown AP to enable action.

**Defaults** The default is 1. And no action is set.

**Command** Interface configuration mode  
**Mode**

**Usage Guide** Optional. For static AP, its peer end also has to apply the function.

**Configuration** The following example sets the minimum number of AP member ports to 2.

**Examples**

```
Ruijie(config)# interface GigabitEthernet 0/1
Ruijie(config-if-GigabitEthernet 0/1)# port-group 1 mode active
Ruijie(config-if-GigabitEthernet 0/1)# aggregateport minimum member 2
Ruijie(config-if-GigabitEthernet 0/1)# end
Ruijie# show interface aggregateport 1
...
Aggregate Port Informations:
    Aggregate Number: 1
    Name: "AggregatePort 1"
    Members: (count=1)      GigabitEthernet 0/1      Link Status: Up      LACP
Status: susp ...
```

**Related  
Commands**

Command	Description
N/A	N/A

**Platform** N/A  
**Description**

## 3.4 interfaces aggregateport

Use this command to create the aggregate port or enter interface configuration mode of the aggregate port. Use the **no** form of this command to restore the default setting.

**interfaces aggregateport** *ap-number*

**no interfaces aggregateport** *ap-number*

Parameter	Parameter	Description
Description	<i>ap-number</i>	Aggregate port number.

**Defaults** The aggregate port is not created by default.

**Command Mode** Global configuration mode

**Usage Guide** If the aggregate port is created, this command is used to enter the interface configuration mode. Otherwise, this command is used to create the aggregate port and then enter its interface configuration mode.

**Configuration Examples** The following example creates AP 5 and enters its interface configuration mode.

```
Ruijie# configure terminal
Ruijie(config)# interfaces aggregateport 5
Ruijie(config-if-Aggregateport 5)# end
```

Related Commands	Command	Description
	N/A	N/A

**Platform Description** N/A

## 3.5 lacp port-priority

Use this command to set the priority of the LACP AP member port. Use the **no** form of this command to restore the default setting.

**lacp port-priority** *port-priority*

**no lacp port-priority**

Parameter Description	Parameter	Description
	<i>port-priority</i>	The LACP port priority, in the range from 0 to 65535.

**Defaults** The default is 32768.

**Command Mode** Interface configuration mode

**Usage Guide** N/A

**Configuration** This example sets the LACP port priority of interface Gi0/1 to 4096.

**Examples**

```
Ruijie(config)# interface gigabitEthernet 0/1
Ruijie(config-if-GigabitEthernet 0/1)# lacp port-priority 4096
```

**Related Commands**

Command	Description
N/A	N/A

**Platform Description** N/A

## 3.6 lacp short-timeout

Use this command to configure the short-timeout mode for the LACP AP member port. Use the no form of this command to restore the default setting.

**lacp short-timeout**

**no lacp short-timeout**

**Parameter Description**

Parameter	Description
N/A	N/A

**Defaults** The default is long-timeout mode.

**Command Mode** Interface configuration mode

**Usage Guide** In long-timeout mode, the port sends an LACP packet every 30 seconds. If the packet is not received in 90 seconds, the connection times out.

In short-timeout mode, the port sends an LACP packet every 1 second. If the packet is not received in 3 seconds, the connection times out.

**Configuration** The following example configures the short-timeout mode for the LACP AP member port.

**Examples**

```
Ruijie(config)# interface gigabitEthernet 0/1
Ruijie(config-if-GigabitEthernet 0/1)# lacp short-timeout
```

**Related Commands**

Command	Description
---------	-------------

N/A	N/A
-----	-----

**Platform** N/A

**Description**

### 3.7 lacp system-priority

Use this command to set the LACP system priority. Use the **no** form of this command to restore the default setting.

**lacp system-priority** *system-priority*

**no lacp system-priority**

Parameter Description	Parameter	Description
	<i>system-priority</i>	The LACP system priority, in the range from 0 to 65535.

**Defaults** The default is 32768.

**Command Mode** Global configuration mode.

**Usage Guide**

**Configuration** The following example sets the LACP system priority to 4096.

**Examples** Ruijie(config)# lacp system-priority 4096

Related Commands	Command	Description
	<b>port-group</b> <i>key mode</i> { <b>active</b>   <b>passive</b> }	Enables the LACP on the port and specifies the aggregation group ID and operation mode.
	<b>lacp port-priority</b>	Sets the LACP port priority.

**Platform** N/A

**Description**

### 3.8 port-group

Use this command to assign a physical interface to be a member port of a static aggregate port or an LACP aggregate port. Use the **no** form of this command to restore the default setting.

**port-group** *port-group-number*

**port-group** *key-number mode* { **active** | **passive** }

**no port-group**

Parameter	Parameter	Description
Description	<i>port-group-number</i>	Member group ID of an aggregate port, the interface number of the aggregate port.
	<i>key-number</i>	Member group ID of an LACP aggregate port, the interface number of the LACP aggregate port.
	<b>active</b>	Places a port into an active negotiating state, in which the port initiates negotiations with remote ports by sending LACP packets.
	<b>passive</b>	Places a port into a passive negotiating state, in which the port responds to LACP packets it receives but does not initiate LACP negotiation.

**Defaults** By default, the physical port does not belong to any aggregate port.

**Command Mode** Interface configuration mode.

**Usage Guide** All the members of an aggregate port belong to a VLAN or configured to be trunk ports. The ports belonging to different native VLANs cannot form an aggregate port.

**Configuration Examples** The following example specifies the Ethernet interface 1/3 as a member of the static AP 3.

```
Ruijie(config)# interface gigabitethernet 1/3
Ruijie(config-if-GigabitEthernet 1/3)# port-group 3
```

The following example specifies the Ethernet interface 2/3 as a member of the LACP AP4 and set the aggregation mode to active.

```
Ruijie(config)# interface gigabitethernet 2/3
Ruijie(config-if-GigabitEthernet 2/3)# port-group 4 mode active
```

Related Commands	Command	Description
	N/A	N/A

**Platform Description** N/A

### 3.9 show aggregateport

Use this command to display the aggregate port configuration.

**show aggregateport** { [ *aggregate-port-number* ] **summary** | **load-balance** }

Parameter	Parameter	Description
Description	<i>aggregate-port-number</i>	Number of the aggregate port.
	<b>load-balance</b>	Displays the load-balance algorithm on the aggregate port.
	<b>summary</b>	Displays the summary of the aggregate port.

**Defaults** N/A

**Command Mode** Any mode

**Usage Guide** If the aggregate port number is not specified, all the aggregate port information will be displayed.

**Configuration** The following example displays the aggregate port configuration.

**Examples**

```
Ruijie# show aggregateport 1 summary
```

AggregatePort	MaxPorts	SwitchPort	Mode	Load balance	Ports
Ag1	8	Enabled	ACCESS	dst-mac	Gi0/2

**Related Commands**

Command	Description
<b>aggregateport load-balance</b>	Configures a load-balance algorithm of AP.

**Platform Description** N/A

## 3.10 show lacp summary

Use this command to display the LACP aggregation information.

**show lacp summary** [ *key* ]

**Parameter Description**

Parameter	Description
<i>key</i>	Specifies the aggregation group id to show. If it is not specified, all aggregation group information is displayed by default.

**Defaults** N/A

**Command Mode** Any mode.

**Usage Guide** N/A

**Configuration** The following example displays the LACP aggregation information.

**Examples**

```
Ruijie(config)# show lacp summary 3
System Id:32768, 00d0.f8fb.0002
Flags: S - Device is requesting Slow LACPDUs
F - Device is requesting Fast LACPDUs.
A - Device is in active mode.      P - Device is in passive mode.
Aggregate port 3:
```

Local information:

LACP port	Oper	Port	Port			
Port	Flags	State	Priority	Key	Number	State
Gi0/1	SA	bndl	4096	0x3	0x1	0x3d
Gi0/2	SA	bndl	4096	0x3	0x2	0x3d
Gi0/3	SA	bndl	4096	0x3	0x3	0x3d

Partner information:

		LACP port		Oper	Port	Port
Port	Flags	Priority	Dev ID	Key	Number	State
Gi0/1	SA	61440	00d0. f800. 0002	0x3	0x1	0x3d
Gi0/2	SA	61440	00d0. f800. 0002	0x3	0x2	0x3d
Gi0/3	SA	61440	00d0. f800. 0002	0x3	0x3	0x3d

Field	Description
Local information	Displays the local LACP information.
Port	Displays the system port ID.
Flags	Displays the port state flag: “S” indicates that the LACP is stable and in the state of periodically sending the LACPPDU; “A” indicates that the port is in the active mode.
State	Show the port aggregation information: “bndl” indicates that the port is aggregated; “Down” represents the disconnection port state; “susp” indicates that the port is not aggregated.
LACP Port Priority	Displays the LACP port priority.
Oper Key	Displays the port operation key.
Port Number	Displays the port number.
Port State	Displays the flag bit for the LACP port state.
Partner information	Partly Displays the LACP information of the peer port.
Dev ID	Partly Displays the system MAC information of the peer device.

#### Related Commands

Command	Description
<b>port-group</b> <i>key mode</i>	Enables the LACP on the port and specifies the aggregation group ID and operation mode.

#### Platform Description

N/A

## 4 VLAN Commands

### 4.1 add

Use this command to add one or a group Access interface into current VLAN. Use the **no** or **default** form of the command to remove the Access interface.

**add interface** { *interface-id* | **range** *interface-range* }

**no add interface** { *interface-id* | **range** *interface-range* }

**default add interface** { *interface-id* | **range** *interface-range* }

#### Parameter Description

Parameter	Description
<i>interface-id</i>	Layer-2 Ethernet interface or layer-2 AP port.
<b>range</b> <i>interface-range</i>	Range of the Layer-2 Ethernet interface or layer-2 AP port.

**Defaults** All layer-2 Ethernet interfaces are in the VLAN1.

**Command mode** VLAN configuration mode.

**Usage Guide** This command is only valid for the access port.

The configuration of this command is the same as specifying the VLAN to which interface belongs in the interface configuration mode (that is the **switchport access vlan** *vlan-id* command). For the two commands of adding the interface to the VLAN, the command configured later will overwrite the one configured before and take effect.

The configuration of adding the layer-2 AP into current VLAN through this command will only take effect for the layer-2 AP port, but not for the member port of the layer-2 AP port.

**Configuration Examples** The following example adds the interface GigabitEthernet 0/10 to VLAN20.

```
Ruijie# configure terminal
SwitchA(config)#vlan 20
SwitchA(config-vlan)#add interface GigabitEthernet 0/10
Ruijie# show interface GigabitEthernet 0/10 switchport
Interface  Switchport  Mode  Access  Native  Protected  VLAN lists
-----  -
GigabitEthernet 0/10 enabled ACCESS 20 1 Disabled ALL
```

The following example adds the interface range GigabitEthernet 0/1-10 to VLAN200.

```
Ruijie# configure terminal
SwitchA(config)#vlan 200
SwitchA(config-vlan)#add interface range GigabitEthernet 0/1-10
Ruijie# show vlan
```



```
SwitchA#show vlan
VLAN Name        Status               Ports
-----
1  VLAN0001      STATIC   Gi0/11,Gi0/12,Gi0/13,Gi0/14,Gi0/15,
Gi0/16,Gi0/17,Gi0/18,Gi0/19,Gi0/20,Gi0/21, Gi0/22, Gi0/23, Gi0/24
200 VLAN0200    STATIC   Gi0/1,Gi0/2,Gi0/3,Gi0/4,Gi0/5,
Gi0/6,Gi0/7,Gi0/8,Gi0/9,Gi0/10
```

The following example adds the AggregatePort10 to VLAN20.

```
Ruijie# configure terminal
SwitchA(config)#vlan 20
SwitchA(config-vlan)#add interface aggregateport 10
Ruijie# show interface aggregateport 10 switchport
Interface Switchport Mode Access Native Protected VLAN lists
-----
AggregatePort 10 enabled ACCESS 20 1 Disabled ALL
```

#### Related Commands

Command	Description
<b>show interface</b> <i>interface-id</i> <b>switchport</b>	Displays the layer-2 interfaces.

**Platform** N/A  
**Description**

## 4.2 name

Use this command to specify the name of a VLAN. Use the **no** or **default** form of this command to restore the default setting.

**name** *vlan-name*  
**no name**  
**default name**

#### Parameter Description

Parameter	Description
<i>vlan-name</i>	VLAN name

**Defaults** The default name of a VLAN is the combination of “VLAN” and VLAN ID, for example, the default name of the VLAN 2 is “VLAN0002”.

**Command mode** VLAN configuration Mode.

**Usage Guide** N/A

**Configuration** The following example sets the name of VLAN to 10.

**Examples**

```
Ruijie(config)# vlan 10
Ruijie(config-vlan)# name vlan10
```

**Related  
Commands**

Command	Description
<b>show vlan</b>	Displays member ports of the VLAN.

**Platform** N/A  
**Description**

## 4.3 show vlan

Use this command to display member ports of the VLAN.

**show vlan [ id *vlan-id* ]**

**Parameter  
Description**

Parameter	Description
<i>vlan-id</i>	VLAN ID

**Defaults** N/A

**Command  
mode** All modes

**Usage Guide** N/A

**Configuration** The following command displays the status of VLAN 1.

**Examples**

```
Ruijie(config-vlan)#show vlan id 20
VLAN Name                Status    Ports
-----
20 VLAN0020              STATIC    Gi0/1
```

The following command displays the status of all VLANs.

```
Ruijie(config-vlan)#show vlan
VLAN Name                Status    Ports
-----
1 VLAN0001              STATIC    Gi0/1, Gi0/2, Gi0/4, Gi0/5
                                   Gi0/6, Gi0/7, Gi0/8, Gi0/9
                                   Gi0/10, Gi0/11, Gi0/12, Gi0/13
                                   Gi0/14, Gi0/15, Gi0/16, Gi0/17
                                   Gi0/18, Gi0/19, Gi0/20, Gi0/21
                                   Gi0/22, Gi0/23, Gi0/24
```

```

2 VLAN0002          STATIC   Gi0/1
20 VLAN0020         STATIC   Gi0/1

```

#### Related Commands

Command	Description
<b>name</b>	VLAN name.
<b>switchport access</b>	Adds the interface to a VLAN.

**Platform** N/A  
**Description**

## 4.4 switchport access

Use this command to configure an interface as a static access port and assign it to a VLAN. Use the **no** or **default** form of the command to assign the port to the default VLAN.

**switchport access vlan** *vlan-id*

**no switchport access vlan**

**default switchport access vlan**

#### Parameter Description

Parameter	Description
<i>vlan-id</i>	The VLAN ID at which the port to be added.

**Defaults** By default, the switch port is an access port and the VLAN is VLAN 1.

**Command mode** Interface configuration mode.

**Usage Guide** Enter one VLAN ID. The system will create a new one and add the interface to the VLAN if you enter a new VLAN ID. If the VLAN ID already exists, the command adds the port to the VLAN.  
 If the port is a trunk port, the operation does not take effect.

**Configuration Examples**

```

Ruijie(config)# interface gigabitethernet 1/1
Ruijie(config-if)# switchport access vlan 2

```

#### Related Commands

Command	Description
<b>switchport mode</b>	Specifies the interface as Layer 2 mode (switch port mode).
<b>switchport trunk</b>	Specifies a native VLAN and the allowed-VLAN list for the trunkport.

**Platform** N/A  
**Description**

## 4.5 switchport hybrid allowed

Use this command to add the port to the VLAN or remove the port from the VLAN, Use the **no** or **default** form of this command to restore the default setting.

**switchport hybrid allowed vlan** { { [ **add** | **only** ] **tagged** *vlist* | [ **add** ] **untagged** *vlist* } | **remove** *vlist* }

**no switchport hybrid allowed vlan**

**default switchport hybrid allowed vlan**

Parameter Description	Parameter	Description
	<b>add</b>	Adds the port to the VLAN.
	<b>only</b>	Adds the port to the VLAN and removes the port from the VLANs not on the VLAN list.
	<b>tagged</b>	Adds the port to the VLAN and the VLAN packets going out on the port are tagged with VLAN ID.
	<b>untagged</b>	Adds the port to the VLAN and the VLAN packets going out on the port are not tagged with VLAN ID.
	<b>remove</b>	Removes the port from the VLAN.
	<i>vlist</i>	Specifies the VLAN.

**Defaults** By default, the hybrid port is in all VLANs. All VLAN packets (except native VLAN packets) going out on the port are tagged with VLAN ID. Native VLAN packets are not tagged with VLAN ID.

**Command mode** Interface configuration mode

**Usage Guide** N/A

**Configuration Examples** The following example adds the hybrid port to VLAN 20 and VLAN 30 and the VLAN packets going out on the port are not tagged with VLAN ID.

```
Ruijie(config)# interface gigabitEthernet 0/1
Ruijie(config-if-GigabitEthernet 0/1)# switchport mode hybrid
Ruijie(config-if-GigabitEthernet 0/1)#switchport hybrid allowed vlan untagged
20
Ruijie(config-if-GigabitEthernet 0/1)#switchport hybrid allowed vlan add
untagged 30
```

The following example adds the hybrid port to VLAN 40 and VLAN 50 and the VLAN packets going out on the port are tagged with VLAN ID,

```
Ruijie(config)# interface gigabitEthernet 0/1
Ruijie(config-if-GigabitEthernet 0/1)#switchport mode hybrid
Ruijie(config-if-GigabitEthernet 0/1)#switchport hybrid allowed vlan tagged
40
Ruijie(config-if-GigabitEthernet 0/1)#switchport hybrid allowed vlan tagged
50
```

The following example removes the hybrid port from VLAN 20.

```
Ruijie(config)# interface gigabitEthernet 0/1
Ruijie(config-if-GigabitEthernet 0/1)#switchport mode hybrid
Ruijie(config-if-GigabitEthernet 0/1)#switchport hybrid allowed
vlan remove 20
```

The following example adds the hybrid port to VLAN 20 and deletes all the other VLANs. The VLAN packets going out on the port are tagged with VLAN ID.

```
Ruijie(config)# interface gigabitEthernet 0/1
Ruijie(config-if-GigabitEthernet 0/1)#switchport mode hybrid
Ruijie(config-if-GigabitEthernet 0/1)#switchport hybrid allowed
vlan only tagged 20
```

#### Related Commands

Command	Description
N/A	N/A

#### Platform Description

N/A

## 4.6 switchport hybrid native

Use this command to configure the native VLAN for the hybrid port. Use the **no** or **default** form of this command to restore the default setting.

**switchport hybrid native vlan** *vlan-id*

**no switchport hybrid native vlan**

**default switchport hybrid native vlan**

#### Parameter Description

Parameter	Description
<i>vlan-id</i>	Configures the native VLAN for the hybrid port.

#### Defaults

The default is VLAN 1.

#### Command mode

Interface configuration mode

**Usage Guide** Native VLAN packets going out on the hybrid port are not tagged with VLAN ID. Packets not tagged with VLAN ID coming in on the hybrid port are taken as native VLAN packets.

**Configuration** The following example configures VLAN 20 as the native VLAN for hybrid port GigabitEthernet 0/1.

**Examples**

```
Ruijie(config-if-GigabitEthernet 0/1)#interface gigabitEthernet 0/1
Ruijie(config-if-GigabitEthernet 0/1)#switchport mode hybrid
Ruijie(config-if-GigabitEthernet 0/1)#switchport hybrid native
vlan 20
```

**Related  
Commands**

Command	Description
N/A	N/A

**Platform  
Description** N/A

## 4.7 switchport mode

Use this command to specify a L2 interface (switch port) mode. You can specify this interface to be an access port or a trunk port or a servicechain port. Use the **no** or **default** form of this command to restore the default setting.

**switchport mode { access | trunk | hybrid | uplink }**

**no switchport mode**

**default switchport mode**

**Parameter  
Description**

Parameter	Description
<b>access</b>	Configures the switch port as an access port.
<b>trunk</b>	Configures the switch port as a trunk port.
<b>hybrid</b>	Configures the switch port as a hybrid port.
<b>uplink</b>	Configures the switch port as an uplink port.

**Defaults** By default, the switch port is an access port.

**Command  
mode** Interface configuration mode.

**Usage Guide** If a switch port is an access port, the port can be added only to one VLAN. You can run the **switchport access vlan** command to specify the VLAN to which the port belongs.

If a switch port is a trunk port, the port is added to all VLANs by default. You can also run the **switchport trunk allowed** command to add the port to or remove the port from a specified VLAN.

If a switch port is an uplink port, the port is added to all VLANs by default. Different from the trunk port, the uplink port sends packets with a tag carried, that is, the tag of packets from default VLANs

will not be deleted. You can run the **switchport trunk allowed** command to add the port to or remove the port from a specified VLAN.

If a switch port is a hybrid port, the port is added to all VLANs by default. Different from a trunk port, a hybrid port can be added to a VLAN in tag or untag mode by running the **switchport hybrid allowed** command.

**Configuration** The following example configures port 1 as an access port.

**Examples**

```
Ruijie(config)#int g 0/1
Ruijie(config-if-GigabitEthernet 0/1)#switchport mode access
```

The following example configures port 1 as a trunk port.

```
Ruijie(config)#int g 0/1
Ruijie(config-if-GigabitEthernet 0/1)# switchport mode trunk
```

The following example configures port 1 as an uplink port.

```
Ruijie(config)#int g 0/1
Ruijie(config-if-GigabitEthernet 0/1)# switchport mode uplink
```

The following example configures port 1 as a hybrid port.

```
Ruijie(config)#int g 0/1
Ruijie(config-if-GigabitEthernet 0/1)# switchport mode hybrid
```

**Related  
Commands**

Command	Description
<b>switchport access</b>	Configures an interface as a statics access port and assigns it to a VLAN.
<b>switchport trunk</b>	Specifies a native VLAN and the allowed-VLAN list for the trunkport.

**Platform** N/A

**Description**

## 4.8 switchport trunk allowed vlan

Use this command to add the trunk/uplink port to the VLAN or remove a trunk/uplink port from the VLAN. Use the **no** or **default** form of the command to restore the default setting.

**switchport trunk allowed vlan** { **all** | { **add** *vlan-list* | **remove** *vlan-list* | **except** *vlan-list* | **only** *vlan-list* } }

**no switchport trunk allowed vlan**

**default switchport trunk allowed vlan**

**Parameter  
Description**

Parameter	Description
<b>all</b>	Adds the trunk/uplink port to all VLANs.
<b>add</b>	Adds the trunk/uplink port to the VLAN.

<b>remove</b>	Removes the trunk/uplink port from the VLAN port.
<b>except</b>	Removes the trunk/uplink port from the VLAN and adds the port to all the other VLANs.
<b>only</b>	Adds the trunk/uplink port to the specified VLAN and removes the port from the VLANs not on the VLAN list.
<i>vlan-list</i>	Specifies the VLAN.

**Defaults** The trunk/uplink port is in all VLANs by default.

**Command mode** Interface configuration mode.

**Usage Guide** A trunk/uplink port transmits all VLAN (1-4094) data by default. You can block some VLAN data by configuring this command. Use the **show interfaces** command to display configuration.

**Configuration Examples** The following example removes trunk port GigabitEthernet 0/10 from VLAN 2.

```
Ruijie(config)# interface gigabitEthernet 0/10
Ruijie(config-if-GigabitEthernet 0/10)# switchport mode trunk
Ruijie(config-if-GigabitEthernet 0/10)# switchport trunk allowed vlan remove
2
```

The following example removes trunk port GigabitEthernet 0/10 from VLAN 2.

```
Ruijie(config)# interface gigabitEthernet 0/10
Ruijie(config-if-GigabitEthernet 0/10)# switchport trunk allowed vlan except
10
```

The following example removes uplink port GigabitEthernet 0/10 from VLAN 10.

```
Ruijie(config)# interface gigabitEthernet 0/10
Ruijie(config-if-GigabitEthernet 0/10)# switchport mode uplink
Ruijie(config-if-GigabitEthernet 0/10)# switchport trunk allowed vlan remove
10
```

The following example adds uplink port GigabitEthernet 0/10 to all VLANs except VLAN10.

```
Ruijie(config)# interface gigabitEthernet 0/10
Ruijie(config-if-GigabitEthernet 0/10)# switchport trunk allowed
vlan except 10
```

**Related Commands**

Command	Description
N/A	N/A

**Platform Description** N/A



## 4.9 switchport trunk native vlan

Use this command to configure the native VLAN for the trunk/uplink port. Use the **no** or **default** form of this command to restore the default setting.

**switchport trunk native vlan** *vlan-id*

**no switchport trunk native vlan**

**default switchport trunk native vlan**

Parameter Description	Parameter	Description
	<i>vlan-id</i>	Native VLAN ID.

**Defaults** By default, the native VLAN for the trunk/uplink port is VLAN 1.

**Command mode** Interface configuration mode

**Usage Guide** After this function is enabled, packets not tagged with VLAN ID are taken as native VLAN packets. Tags are removed from native VLAN packets going out on the trunk port.

**Configuration Examples** The following example configures VLAN 10 as the native VLAN for trunk port GigabitEthernet 0/10.

```
Ruijie(config)#interface gigabitEthernet 0/10
Ruijie(config-if-GigabitEthernet 0/10)# switchport mode trunk
Ruijie(config-if-GigabitEthernet 0/10)# switch trunk native vlan 10
```

The following example configures VLAN 10 as the native VLAN for uplink port GigabitEthernet 0/10.

```
Ruijie(config)#interface gigabitEthernet 0/10
Ruijie(config-if-GigabitEthernet 0/10)# switchport mode uplink
Ruijie(config-if-GigabitEthernet 0/10)# switch trunk native vlan 10
```

Related Commands	Command	Description
	N/A	N/A

**Platform Description** N/A

## 4.10 vlan

Use this command to enter the VLAN configuration mode. Use the **no** or **default** form of this command to restore the default setting.

**vlan** { *vlan-id* | **range** *vlan-range* }

**no vlan** { *vlan-id* | **range** *vlan-range* }

**default vlan** { *vlan-id* | **range** *vlan-range* }

**Parameter  
Description**

Parameter	Description
<i>vlan-id</i>	VLAN ID Default VLAN (VLAN 1) cannot be removed.
<i>vlan-range</i>	VLAN ID range.

**Defaults**

The default is static VLAN.

**Command  
mode**

Global configuration mode.

**Usage Guide**

N/A

**Configuration**

The following example creates VLAN 10.

**Examples**

```
Ruijie(config)# vlan 10
Ruijie(config-vlan)#
```

**Related  
Commands**

Command	Description
<b>show vlan</b>	Displays member ports of the VLAN.

**Platform  
Description**

N/A

## 5 MAC VLAN Commands

### 5.1 mac-vlan enable

Use this command to enable the MAC VLAN function on the port.

Use the **no** form or **default** form of this command to restore the default setting.

**mac-vlan enable**

**no mac-vlan enable**

**default mac-vlan enable**

Parameter Description	Parameter	Description
	N/A	N/A

**Defaults** By default, MAC VLAN is disabled.

**Command mode** Interface configuration mode

**Usage Guide** The MAC VLAN entries configured globally will not take effect on the port unless the MAC VLAN function is enabled on this port.  
The MAC VLAN function can be enabled on the hybrid port only.

**Configuration Examples** The following example enables MAC VLAN.

```
Ruijie(config-if-interface-id)# mac-vlan enable
```

Related Commands	Command	Description
	N/A	N/A

**Platform Description** N/A

### 5.2 mac-vlan mac-address

Use this command to configure the static MAC VLAN entries.

Use the **no** form or **default** form of this command to restore the default setting.

**mac-vlan mac-address** *mac-address* [**mask** *mac-mask*] **vlan** *vlan-id* [**priority** *pri\_val*]

**no mac-vlan mac-address** *mac-address* [**mask** *mac-mask*] **vlan** *vlan-id* [**priority** *pri\_val*]

**default mac-vlan mac-address** *mac-address* [**mask** *mac-mask*] **vlan** *vlan-id* [**priority** *pri\_val*]

Parameter Description	Parameter	Description
	<i>mac-address</i>	Specifies the MAC address.
	<i>mac-mask</i>	Specifies the MAC address mask, with the high bits being all 1 in binary. This field is full of F by default.
	<i>vlan-id</i>	Specifies the VLAN corresponding to the MAC address. The range is from 1 to 4,094.
	<i>pri_val</i>	Specifies the 802.1p priority of the VLAN corresponding to the MAC address. The range is from 0 to 7. The default value is 0.

**Defaults** No static MAC VLAN entry is configured by default.

**Command mode** Global configuration mode

**Usage Guide** Use this command to configure a static MAC VLAN entry including the MAC address, VLAN ID and VLAN priority. Use the **no** form of this command to remove the static MAC VLAN entry.

**Configuration** The following example configures a static MAC VLAN entry.

**Examples**

```
Ruijie(config)# mac-vlan mac-address 0001.0001.0001 vlan 100 priority 3
Ruijie(config)# mac-vlan mac-address 0002.0002.0000 mask ffff.ffff.0000 vlan 200 priority 5
```

Related Commands	Command	Description
	N/A	N/A

**Platform** N/A

**Description**

## 5.3 show mac-vlan

Use this command to display the MAC VLAN entries.

**show mac-vlan** { **all** | **dynamic** | **static** | **vlan** *vlan-id* | **mac-address** *mac-address* [ **mask** *mac-mask* ] }

Parameter Description	Parameter	Description
	<b>all</b>	Displays all MAC VLAN entries.
	<b>dynamic</b>	Displays the dynamic MAC VLAN entries.
	<b>static</b>	Displays the static MAC VLAN entries.
	<b>mac-address</b> <i>mac-address</i>	Displays the MAC VLAN entry of the specified MAC address.
	<b>mask</b> <i>mac-mask</i>	Displays the MAC VLAN entry of the specified MAC address range.

<b>vlan</b> vlan-id	Displays the MAC VLAN entries of the specified VLAN.
---------------------	--

**Defaults** N/A

**Command mode** All configuration modes

**Usage Guide** If the **mac-address** parameter is specified without the **mask** parameter, the MAC-VLAN entry of the single MAC address is displayed.  
If parameters both of **mac-address** and **mask** are specified, the MAC-VLAN entries in the specified MAC address range are displayed.

**Configuration** The following example displays all MAC VLAN entries.

**Examples**

```
Ruijie# show mac-vlan all
The following MAC VLAN addresses exist:
S: Static   D: Dynamic
MAC ADDR      MASK                VLAN ID  PRIO  STATE
-----
0011.1100.0000 ffff.ff00.0000  100      1     S
0022.2222.0000 ffff.ffff.0000  200      2     S
0000.0000.0003 ffff.ffff.ffff  300      3     D
0000.0000.0004 ffff.ffff.ffff  400      4     D
0000.0000.0005 ffff.ffff.ffff  500      5     S&D
0000.0000.0006 ffff.ffff.ffff  600      6     S
0000.0000.0007 ffff.ffff.ffff  700      7     S&D
Total MAC VLAN address count: 7
```

**Related Commands**

Command	Description
N/A	N/A

**Platform** N/A  
**Description**

## 5.4 show mac-vlan interface

Use this command to display the interfaces which are enabled with MAC VLAN.

**show mac-vlan interface**

**Parameter Description**

Parameter	Description
N/A	N/A

**Defaults** N/A

**Command mode** All configuration modes

**Usage Guide** Use this command to verify whether the MAC VLAN function is enabled on the interface.

**Configuration** The following example displays the interfaces which are enabled with MAC VLAN.

**Examples**

```
Ruijie# show mac-vlan interface
MAC VLAN is enabled on following interface:
-----
fastethernet 0/3
fastethernet 0/10
```

**Related Commands**

Command	Description
N/A	N/A

**Platform Description** N/A

## 6 Protocol VLAN Commands

### 6.1 protocol-vlan ipv4 (in interface configuration mode)

Use this command to enable subnet VLAN. Use the **no** form of this command to restore the default setting.

**protocol vlan ipv4**

**no protocol vlan ipv4**

Parameter Description	Parameter	Description
	N/A	N/A

**Defaults** This function is disabled by default.

**Command mode** Interface configuration mode.

**Usage Guide** An interface must work in Trunk/Hybrid mode.

**Configuration Examples** The following example enables the subnet VLAN.

```
Ruijie(config)# interface GigabitEthernet 0/1
Ruijie(config-if-GigabitEthernet 0/1)# switchport
Ruijie(config-if-GigabitEthernet 0/1)# switchport mode hybrid
Ruijie(config-if-GigabitEthernet 0/1)# protocol-vlan ipv4
```

Related Commands	Command	Description
	<b>no protocol-vlan ipv4</b>	N/A

**Platform Description** N/A

### 6.2 protocol-vlan ipv4 (in global configuration mode)

Use this command to configure VLAN for the specified subnet.

**protocol-vlan ipv4 addr mask addr vlan id**

Use this command to remove VLAN configuration for the specified subnet.

**no protocol-vlan ipv4 addr mask addr**

Use this command to remove VLAN configuration for all subnets.

**no protocol-vlan ipv4**

<b>Parameter Description</b>	<b>Parameter</b>	<b>Description</b>
	<i>addr</i>	IP address in the x.x.x.x format.
	<i>id</i>	VLAN ID, the maximal VLAN the product supports
<b>Defaults</b>	It is disabled by default.	
<b>Command mode</b>	Global configuration mode.	
<b>Usage Guide</b>	N/A	
<b>Configuration Examples</b>	The following example configures VLAN 100 for the specified subnet. <pre>Ruijie(config)# protocol-vlan ipv4 192.168.100.3 mask 255.255.255.0 vlan 100</pre>	
<b>Related Commands</b>	<b>Command</b>	<b>Description</b>
	<b>show protocol-vlan ipv4</b>	N/A
	<b>no protocol-vlan ipv4 <i>addr</i> mask <i>addr</i></b>	N/A
	<b>no protocol-vlan ipv4</b>	N/A
<b>Platform Description</b>	N/A	

## 6.3 protocol-vlan profile (in interface configuration mode)

Use this command to apply some profile to an interface.

**protocol-vlan profile *num* vlan *id***

Use this command to clear the specified profile on the port.

**no protocol-vlan profile *id***

Use this command to clear all profiles on the port.

**no protocol-vlan profile**

<b>Parameter Description</b>	<b>Parameter</b>	<b>Description</b>
	<i>num</i>	Profile indexes
	<i>id</i>	VLAN ID, the maximal VLAN the product supports.
<b>Defaults</b>	This function is disabled by default.	
<b>Command mode</b>	Interface mode.	



**Usage Guide** The interface must be in Trunk or Hybrid mode.

**Configuration** The following example applies profile 1 to VLAN 101.

**Examples**

```
Ruijie(config-if)# protocol-vlan profile 1 vlan 101
```

**Related  
Commands**

Command	Description
<b>show protocol-vlan profile</b>	N/A
<b>show protocol-vlan profile num</b>	N/A
<b>no protocol-vlan profile</b>	N/A
<b>no protocol-vlan profile num</b>	N/A

**Platform** N/A

**Description**

## 6.4 protocol-vlan profile (in global configuration mode)

Use this command to configure the profile for the VLAN.

**protocol-vlan profile num frame-type type ether-type type**

**protocol-vlan profile num frame-type LLC DSAP value SSAP value**

Use this command to delete the specified profile.

**no protocol-vlan profile num**

Use this command to delete all profiles.

**no protocol-vlan profile**

**Parameter  
Description**

Parameter	Description
<i>num</i>	Profile indexes
<i>type</i>	Type of message and Ethernet
<i>value</i>	Service access point type.

**Defaults** It is disabled by default.

**Command mode** Global configuration mode.

**Usage Guide** N/A

**Configuration** The following example configures the profile for the VLAN.

**Examples**

```
Ruijie(config)# protocol-vlan profile 1 frame-type ETHERII ether-type aarp
Ruijie(config)# protocol-vlan profile 2 frame-type LLC DSAP 255 SSAP 255
```

Related Commands	Command	Description
	<b>show protocol-vlan profile</b>	N/A
	<b>show protocol-vlan profile</b> <i>num</i>	N/A
	<b>no protocol-vlan profile</b>	N/A
	<b>no protocol-vlan profile</b> <i>num</i>	N/A

**Platform** N/A

**Description**

## 6.5 show protocol-vlan

Use this command to display a protocol VLAN.

**show protocol-vlan** [ **profile** [ *id* ] | **ipv4** ]

Parameter Description	Parameter	Description
	<i>id</i>	Profile index.

**Defaults** N/A

**Command mode** Privileged EXEC mode.

**Usage Guide** N/A

**Configuration Examples** The following example displays the configuration of protocol VLAN.

```
Ruijie#show protocol-vlan
```

```

ip            mask            vlan
-----
1.2.1.0      255.255.255.0    5

```

```

interface      ipv4 status
-----
Gi0/1          enable

```

```

profile frame-type      ether-type/DSAP+SSAP  interface      vlan
-----
1      ETHERII          0x5fa                Gi0/1          12

```

Related	Command	Description
---------	---------	-------------

**Commands**

N/A	N/A

**Platform****Description**

## 7 Private VLAN Commands

### 7.1 debug bridge pvlan

Use this command to enable private VLAN debugging. Use the **no** or **default** form of this command to restore the default setting.

**debug bridge pvlan**


**no debug bridge pvlan**


Parameter Description	Parameter	Description
	N/A	N/A

**Defaults** Debugging is disabled by default.

**Command mode** Privileged EXEC mode

**Usage Guide** Debugging information includes error and prompt messages appearing during private VLAN configuration.  
This command can be used to troubleshoot VLAN and interface configuration failure.

 With private VLAN debugging enabled, all super VLAN configuration and packet processing on SVI is displayed.

 Debugging information helps troubleshooting and fault location.

**Configuration Examples** The following example enables private VLAN debugging.

```
Ruijie# debug bridge pvlan
```

The following example disables private VLAN debugging.

```
Ruijie# no debug bridge pvlan
```

Related Commands	Command	Description
	N/A	N/A

**Platform Description** N/A

### 7.2 private-vlan

Use this command to configure the private VLAN feature. Use the **no** or **default** form of this

command to restore the default setting.

**private-vlan { community | isolated | primary }**

**no private-vlan { community | isolated | primary }**

**default private-vlan { community | isolated | primary }**

Parameter Description	Parameter	Description
	<b>community</b>	Sets the community VLAN.
	<b>isolated</b>	Sets the isolated VLAN.
	<b>primary</b>	Sets the primary VLAN.

**Defaults** No private VLAN feature is configured by default.

**Command mode** VLAN configuration mode

**Usage Guide** N/A

**Configuration Examples** The following example configures the private VLAN feature.

```
Ruijie(config)#vlan 90
Ruijie(config-vlan)#private-vlan primary
Ruijie(config-vlan)#vlan 91
Ruijie(config-vlan)#private-vlan isolated
Ruijie(config-vlan)#vlan 92
Ruijie(config-vlan)#private-vlan community
```

The following example disables the private VLAN feature using the **no private-vlan** command.

```
Ruijie(config)#vlan 90
Ruijie(config-vlan)#no private-vlan primary
Ruijie(config-vlan)#vlan 91
Ruijie(config-vlan)#no private-vlan isolated
Ruijie(config-vlan)#vlan 92
Ruijie(config-vlan)#no private-vlan community
```

The following example disables the private VLAN feature using the **default private-vlan** command.

```
Ruijie(config)#vlan 90
Ruijie(config-vlan)#default private-vlan primary
Ruijie(config-vlan)#vlan 91
Ruijie(config-vlan)#default private-vlan isolated
Ruijie(config-vlan)#vlan 92
Ruijie(config-vlan)#default private-vlan community
```

Related Commands	Command	Description
	N/A	N/A

**Platform** N/A  
**Description**

## 7.3 private-vlan association

Use this command to associate the secondary VLAN with the primary VLAN on layer 2. Use the **no** or **default** form of this command to restore the default setting.

**private-vlan association** { *svlist* | **add** *svlist* | **remove** *svlist* }

**no private-vlan association**

**default private-vlan association**

**Parameter  
Description**

Parameter	Description
<i>svlist</i>	The secondary VLAN list
<b>add</b> <i>svlist</i>	Adds the associated secondary VLAN.
<b>remove</b> <i>svlist</i>	Removes the associated secondary VLAN.

**Defaults** This function is disabled by default.

**Command mode** VLAN configuration Mode.

**Usage Guide** N/A

**Configuration Examples** The following example associates the secondary VLAN with the primary VLAN on layer 2.

```
Ruijie(config)# vlan 22
Ruijie(config-vlan)# private-vlan association add 24-26
```

The following example removes the association between the secondary VLAN with the primary VLAN.

```
Ruijie(config)# vlan 22
Ruijie(config-vlan)# private-vlan association remove 24
```

**Related  
Commands**

Command	Description
<b>show vlan private-vlan</b>	N/A

**Platform** N/A  
**Description**

## 7.4 private-vlan mapping

Use this command to associate the secondary VLAN with the primary VLAN on layer 3. Use the **no** or

**default** form of this command to restore the default setting.

**private-vlan mapping** { *svlist* | **add** *svlist* | **remove** *svlist* }

**no private-vlan mapping**

**default private-vlan mapping**

Parameter Description	Parameter	Description
	<i>svlist</i>	Secondary VLAN list.
	<b>add</b> <i>svlist</i>	Adds the associated secondary VLAN.
	<b>remove</b> <i>svlist</i>	Removes the associated secondary VLAN.

**Defaults** This function is disabled by default.

**Command mode** Interface configuration mode

**Usage Guide** N/A

**Configuration Examples** The following example associates the secondary VLAN with the primary VLAN on layer 3.

```
Ruijie(config)# interface vlan 22
Ruijie(config-if)# private-vlan mapping add 24-26
```

Related Commands	Command	Description
	<b>show vlan private-vlan</b>	N/A

**Platform Description** N/A

## 7.5 show vlan private-vlan

Use this command to display the private VLAN configuration.

**show vlan private-vlan** [ **community** | **primary** | **isolated** ]

Use this command to display all the private VLANs configuration.

**show vlan private-vlan**

Parameter Description	Parameter	Description
	<b>primary</b>	Displays the primary VLAN information.
	<b>community</b>	Displays the community VLAN information.
	<b>isolated</b>	Displays the isolated VLAN information.

**Defaults** N/A

**Command mode** All modes

**Usage Guide** N/A

**Configuration Examples** The following example displays the private VLAN configuration.

Ruijie# show vlan private-vlan						
VLAN	Type	Status	Routed	Ports	Associated VLANs	
30	primary	inactive	Enabled			
31	isolated	inactive	Disabled		No Association	
90	primary	active	Disabled		91-92	
91	isolated	active	Disabled		90	
92	community	active	Disabled	Gi0/1	90	

Related Commands	Command	Description
	N/A	N/A

**Platform Description** N/A

## 7.6 switchport mode private-vlan

Use this command to declare the private VLAN mode of the interface. Use the **no** or **default** form of this command to restore the default setting.

**switchport mode private-vlan { host | promiscuous }**

**no switchport mode**

**default switchport mode**

Parameter Description	Parameter	Description
	<b>host</b>	Host mode of the private VLAN
	<b>promiscuous</b>	Promiscuous mode of the private VLAN

**Defaults** The port is an access port by default.

**Command mode** Interface configuration mode.

**Usage Guide** Before a port is configured as an isolated port or promiscuous port, and the port mode must be



configured as the host port mode.

The port mode must be configured as the promiscuous mode.

**Configuration** The following example applies the private host mode to the interface.

**Examples**

```
Ruijie(config)# interface gigabitEthernet 0/2
Ruijie(config-if)# switchport mode private-vlan host
```

The following example applies the promiscuous mode to the interface.

```
Ruijie(config)# interface gigabitEthernet 0/2
Ruijie(config-if-GigabitEthernet 0/2)#sw mode private-vlan promiscuous
```

**Related  
Commands**

Command	Description
<b>show vlan private-vlan</b>	N/A

**Platform** N/A

**Description**

## 7.7 switchport private-vlan host-association

Use this command to associate the primary VLAN, which is associated with the private VLAN mode of the interface, with the secondary VLAN. Use the **no** or **default** form of this command to restore the default setting.

**switchport private-vlan host-association** *p\_vid s\_vid*

**no switchport private-vlan host-association**

**default switchport private-vlan host-association**

**Parameter  
Description**

Parameter	Description
<i>p_vid</i>	Primary VID.
<i>s_vid</i>	Secondary VID

**Defaults** This function is disabled by default.

**Command mode** Interface configuration mode.

**Usage Guide** Before a port is configured as an isolated port or promiscuous port, and the port mode must be configured as the host port mode.

Whether a port is configured as an isolated port or community port depends on the *s\_vid* parameter. *p\_vid* and *s\_vid* must be respectively the IDs of the primary VLAN and secondary VLAN in a PVLAN pair, on which Layer-2 association is performed.

One host port can be associated with only one PVLAN pair.

**Configuration** The following example associates the secondary VLAN with the primary VLAN on the host port.

**Examples**

```
Ruijie(config)# interface gigabitEthernet 0/1
Ruijie(config-if)# switchport mode private-vlan host
Ruijie(config-if)# switchport private-vlan host-association 22 23
Ruijie(config-if)# default switchport private-vlan host-association
Ruijie(config-if)# switchport private-vlan host-association 22 25
```

**Related  
Commands**

Command	Description
<b>show vlan private-vlan</b>	N/A

**Platform** N/A  
**Description**

## 7.8 switchport private-vlan mapping

Use this command to configure the secondary VLAN for the promiscuous port. Use the **no** or **default** form of this command to restore the default setting.

**switchport private-vlan mapping** *p\_vid* { *svlist* | **add** *svist* | **remove** *svlist* }

**no switchport private-vlan mapping**

**default switchport private-vlan mapping**

**Parameter  
Description**

Parameter	Description
<i>p_vid</i>	Indicates the primary VLAN ID in a PVLAN pair.
<i>svlist</i>	Indicates the secondary VLAN associated with a promiscuous port. Layer-2 association must be performed between it and <i>p_vid</i> .
<b>add</b>	Adds a secondary VLAN to be associated with a port.
<b>remove</b>	Cancels the secondary VLAN associated with a port.

**Defaults** This function is disabled by default.

**Command mode** Interface configuration mode

**Usage Guide** The port mode must be configured as the promiscuous mode.  
Layer-2 association must be performed between the primary and secondary VLAN.

**Configuration** The following example configures the secondary VLAN for the promiscuous port.

**Examples**

```
Ruijie(config)# interface gigabitEthernet 0/1
Ruijie(config-if)# switchport mode private-vlan
promiscuous
```

```
Ruijie(config-if)# switchport private-vlan mapping 22 add 23-25
```

**Related  
Commands**

Command	Description
show vlan private-vlan	N/A

**Platform  
Description**

N/A

## 8 Voice VLAN Commands

### 8.1 show voice vlan

Use this command to display the Voice VLAN configurations and the current state, including the working mode of the port with Voice VLAN enabled.

**show voice vlan**

Parameter Description	Parameter	Description
	N/A	N/A

**Defaults** N/A

**Command mode** Privileged EXEC mode

**Usage Guide** N/A

**Configuration** The following example displays the Voice VLAN configurations and the current state.

**Examples**

```
Ruijie(config)# show voice vlan
Voice VLAN status: ENABLE           //Voice VLAN is enabled
Voice VLAN ID: 2                     //Voice VLAN ID
Voice VLAN security mode: Security  //Security Mode
Voice VLAN aging time: 5 minutes    //Aging Time
Voice VLAN cos: 6                    //Voice VLAN CoS
Voice VLAN dscp: 46                  //Voice VLAN DSCP
Current voice vlan enabled port mode: // Voice VLAN Enabled Port & Mode
PORT                                MODE
-----
Fa0/1                               Auto
```

Related Commands	Command	Description
	<b>voice vlan</b> <i>vlan-id</i>	Set a voice vlan.
	<b>voice vlan aging</b> <i>minutes</i>	Set the Voice VLAN aging time.
	<b>voice vlan cos</b> <i>cos-value</i>	Set the CoS value for the Voice VLAN.
	<b>voice vlan dscp</b> <i>dscp-value</i>	Set the DSCP value for the Voice VLAN.
	<b>voice vlan enable</b>	Enable the Voice VLAN.
	<b>voice vlan mode auto</b>	Set the Voice VLAN working mode.
	<b>voice vlan security enable</b>	Enable the Voice VLAN security mode.

**Platform** N/A

**Description**

## 8.2 show voice vlan oui

Use this command to display the OUI address, OUI mask and the description information.

**show voice vlan oui**

Parameter	Parameter	Description
Description	N/A	N/A

**Defaults** All modes.

**Command mode** Privileged EXEC mode

**Usage Guide** N/A

**Configuration** The following example displays the OUI address.

**Examples**

```
Ruijie(config)# show voice vlan oui
```

OUI	Mask	Description
0001.e300.0000	ffff.ff00.0000	Siemens phone
0003.6b00.0000	ffff.ff00.0000	Cisco phone
0004.0d00.0000	ffff.ff00.0000	Avaya phone
0060.b900.0000	ffff.ff00.0000	Philips/NEC phone
00d0.1e00.0000	ffff.ff00.0000	Pingtel phone
00e0.7500.0000	ffff.ff00.0000	Polycom phone
00e0.bb00.0000	ffff.ff00.0000	3com phone

The following lists the field description .

Field	Description
OUI	The OUI address, the source MAC address for the voice packet.
Mask	The OUI mask. The valid length for the OUI address.
Description	The description information for the OUI address.

Related Commands	Command	Description
	<b>voice vlan mac-address</b> <i>mac-addr</i> <b>mask</b> <i>oui-mask</i> [ <b>description</b> <i>text</i> ]	Set the OUI address for the voice packet recognized by the Voice VLAN.

**Platform** N/A  
**Description**

## 8.3 voice vlan

Use this command to enable Voice VLAN in the global configuration mode. Use the **no** form of this command to restore the default setting.

**voice vlan** *vlan-id*






**no voice vlan**

Parameter Description	Parameter	Description
	<i>vlan-id</i>	The Voice VLAN ID.

**Defaults** This function is disabled by default.

**Command mode** Global configuration mode

**Usage Guide** Use this command to enable the Voice VLAN and specify the Voice VLAN ID.

-  1. The corresponding VLAN shall be created before configuring the Voice VLAN;
-  2. The default VLAN is VLAN1 and cannot be set as the Voice VLAN;
-  3. A VLAN is not allowed to be set as the Voice VLAN and the Super VLAN at the same time;
-  4. With 802.1x VLAN auto-switching function enabled, the assigned VID shall not be set as the Voice VLAN ID;
-  5. RSPAN Remote VLAN and Voice VLAN cannot be the same VLAN, or it influences the remote port mirror and the Voice VLAN function.

**Configuration Examples** The following example sets the VLAN2 as the Voice VLAN.

```
Ruijie(config)# vlan 2
Ruijie(config-vlan)# exit
Ruijie(config)# voice vlan 2
```

Related Commands	Command	Description
	<b>show voice vlan</b>	Display Voice VLAN configurations and the current state.

**Platform** N/A  
**Description**

## 8.4 voice vlan aging

Use this command to set the Voice VLAN aging time in the global configuration mode. Use the **no** form of this command to restore the default setting.

**voice vlan aging** *minutes*

**no voice vlan aging**

### Parameter Description

Parameter	Description
<i>minutes</i>	The Voice VLAN aging time. Range: 5 to 10,000. Unit: minute.

### Defaults

The default is 1440 minutes.

### Command mode

Global configuration mode

### Usage Guide

If the device has not received any voice packets from the port within the aging time, this Voice VLAN will be removed from this port.

 The aging time is valid for the auto-mode only.

### Configuration Examples

The following example sets the Voice VLAN aging time to 10 minutes.

```
Ruijie(config)# voice vlan aging 10
```

### Related Commands

Command	Description
<b>show voice vlan</b>	Display Voice VLAN configurations and the current state.

### Platform

N/A

### Description

## 8.5 voice vlan cos

Use this command to set the Voice VLAN CoS value in the global configuration mode. Use the **no** form of this command to restore the default setting.

**voice vlan cos** *cos-value*

**no voice vlan cos**

### Parameter Description

Parameter	Description
<i>cos-value</i>	The Voice VLAN CoS value. Range: 0 to 7.

**Defaults** The default is 6.

**Command mode** Global configuration mode

**Usage Guide** You can improve the Voice VLAN priority level and the session quality, by modifying the Voice VLAN CoS and DSCP value.

**Configuration** The following example sets the Voice VLAN CoS value to 5.

**Examples** Ruijie(config)# voice vlan cos 5

Related Commands	Command	Description
	show voice vlan	Display Voice VLAN configurations and the current state.

**Platform** N/A  
**Description**

## 8.6 voice vlan dscp

Use this command to set the Voice VLAN DSCP value in the global configuration mode. Use the **no** form of this command to restore the default setting.

**voice vlan dscp** *dscp-value*

**no voice vlan dscp**

Parameter Description	Parameter	Description
	<i>dscp-value</i>	The Voice VLAN DSCP value. Range: 0 to 63.

**Defaults** The default is 46.

**Command mode** Global configuration mode

**Usage Guide** You can improve the Voice VLAN priority level and the session quality, by modifying the Voice VLAN CoS and DHCP value.

**Configuration** The following example sets the Voice VLAN DSCP value to 40.

**Examples** Ruijie(config)# voice vlan dscp 40

Related Commands	Command	Description



<b>show voice vlan</b>	Display Voice VLAN configurations and the current state.
------------------------	--

**Platform** N/A

**Description**

## 8.7 voice vlan enable

Use this command to enable the Voice VLAN DSCP value in the interface configuration mode. Use the **no** form of this command to restore the default setting.

**voice vlan enable**

**no voice vlan enable**

Parameter Description	Parameter	Description
	N/A	N/A

**Defaults** This function is disabled by default.

**Command mode** Interface configuration mode

**Usage Guide** Use this command to enable the Voice VLAN on the physical port only. The Voice VLAN can be enabled on the Access Port, Trunk Port, Hybrid Port, Private VLAN host port, Private VLAN promiscuous port and Uplink port on the Ruijie products.

 With the global Voice VLAN disabled, although the Voice VLAN can be enabled on the port, it is invalid.

**Configuration Examples** The following example enables the Voice VLAN function on the interface FastEthernet 0/1.

```
Ruijie(config)# interface fastEthernet 0/1
Ruijie(config-if)# voice vlan enable
```

Related Commands	Command	Description
	<b>show voice vlan</b>	Display Voice VLAN configurations and the current state.

**Platform** N/A

**Description**

## 8.8 voice vlan mac-address

Use this command to set the recognizable Voice VLAN OUI address. Use the **no** form of this command to restore the default setting.

**voice vlan mac-address** *mac-addr* **mask** *oui-mask* [ **description** *text* ]

**no voice vlan mac-address** *mac-addr*


### Parameter Description

Parameter	Description
<i>mac-addr</i>	In the format of <i>H.H.H</i> . The source MAC address for the voice packets.
<i>oui-mask</i>	In the format of <i>H.H.H</i> . The valid length for the OUI address.
<i>text</i>	The description for the OUI address.

**Defaults** By default, no OUI has been configured.

**Command mode** Global configuration mode

**Usage Guide** Use this command to identify the voice packets from different manufacturers. The first three bytes of the MAC address for the voice device are used to identify the manufacture. Voice VLAN determines whether the packets are voice packets or not through the OUI address obtained from the source MAC address and the OUI mask for the received packets.

 The Voice VLAN OUI address cannot be the multicast address and the configured mask shall be continuous.

**Configuration Examples** The following example sets the OUI address 0012.3400.0000 as the valid address for the Voice VLAN.

```
Ruijie(config)# voice vlan mac-address 0012.3400.0000 mask ffff.ff00.0000
description Company A
```

### Related Commands

Command	Description
<b>show voice vlan oui</b>	Display the OUI address, OUI address mask and the descriptions.

**Platform Description** N/A

## 8.9 voice vlan mode auto

Use this command to set the Voice VLAN auto mode. Use the **no** form of this command to disable

this function.

**voice vlan mode auto**

**no voice vlan mode auto**

#### Parameter Description

Parameter	Description
N/A	N/A

#### Defaults




This function is in auto mode by default.



#### Command mode

Interface configuration mode

#### Usage Guide

The Voice VLAN working mode can be classified into the auto-mode and the manual-mode, and configured on the port. The working modes for the Voice VLAN on each port are independent, and different ports can work in different working modes. In different working modes, the methods of enabling the Voice VLAN function on the port are different. The working mode can be set according to the IP phone type connected downward the port or the port type.

-  1. With the Voice VLAN enabled on the port and in the manual mode, this port must be added to the Voice VLAN manually to ensure the function validity.
-  2. When the port works in the auto-mode, note that the native VLAN of the port cannot be set as the Voice VLAN for the normal function performance.
-  3. The Trunk Port/Hybrid Port on the Ruijie product can transmit the packets in all VLANs by default. First remove the Voice VLAN from the allowed VLAN list for the port, then enable the Voice VLAN to ensure that the port disconnecting with the voice device cannot be added to the Voice VLAN, or the port not used for a long time can be still in the Voice VLAN.

-  1. With the Voice VLAN enabled on the port, the auto and manual modes switchover is disallowed. Disable the Voice VLAN first if it is necessary to switch the modes.
-  2. In the auto mode, it fails to add/remove the port to/from the Voice Vlan by using the command.

#### Configuration Examples

The following example sets the Voice VLAN on the interface FastEthernet 0/1 to work in the auto mode.

```
Ruijie(config)# interface fastEthernet 0/1
Ruijie(config-vlan)# voice vlan mode auto
```

#### Related Commands

Command	Description
<b>show voice vlan</b>	Display Voice VLAN configurations and the current state.

**Platform** N/A  
**Description**

## 8.10 voice vlan security enable

Use this command to enable the Voice VLAN security mode in the global configuration mode. Use the **no** form of this command to disable this function.

**voice vlan security enable**


**no voice vlan security enable**


Parameter Description	Parameter	Description
	N/A	N/A

**Defaults** This function is enabled by default.

**Command mode** Global configuration mode

**Usage Guide** The Voice VLAN working mode can be classified into the auto-mode and the manual-mode, and configured on the port. The working modes for the Voice VLAN on each port are independent, and different ports can work in different working modes. In different working modes, the methods of enabling the Voice VLAN function on the port are different. The working mode can be set according to the IP phone type connected downward the port or the port type.

 You are not recommended to transmit the voice and service data in the Voice VLAN at the same time. But if it is necessary for you, you shall ensure that the Voice VLAN security mode has been disabled.

 In the security mode, only the source MAC addresses for the untagged packets and the packets carried with Voice VLAN tag are checked. For other packets carried with non-voice vlan tag that free from the Voice VLAN security/normal mode, the devices forward or discard those packets according to the VLAN rule.

**Configuration** The following example enables the Voice VLAN security mode.

**Examples** Ruijie(config)# voice vlan security enable

Related Commands	Command	Description
	<b>show voice vlan</b>	Display Voice VLAN configurations and the current state.

**Platform** N/A

**Description**

## 9 MSTP Commands

### 9.1 bpdu src-mac-check

Use this command to enable the BPDU source MAC address check function on the interface. Use the **no** form of this command to restore the default setting.

**bpdu src-mac-check** *H.H.H*

**no bpdu src-mac-check**

Parameter Description	Parameter	Description
	<i>H.H.H</i>	Indicates that only the BPDU messages from this MAC address are received.

**Defaults** This function is disabled by default.

**Command Mode** Interface configuration mode.

**Usage Guide** BPDU source MAC address check prevents BPDU packets from maliciously attacking switches and causing MSTP abnormal. When the switch connected to a port on a point-to-point link is determined, you can enable BPDU source MAC address check to receive BPDU packets sent only by the peer switch and discard all other BPDU packets, thereby preventing malicious attacks. You can enable the BPDU source MAC address check in interface configuration mode for a specific port. One port can only filter one MAC address.

**Configuration Examples** The following example indicates only the BPDU with 00d0.f800.1e2f as the source MAC address will be received by interface Gi 1/1 .

```
Ruijie(config)# interface gigabitethernet 1/1
Ruijie(config-if-interface-id-interface-id)# bpdu src-mac-check
00d0.f800.1e2f
```

Related Commands	Command	Description
	N/A	N/A

**Platform Description** N/A

## 9.2 bridge-frame forwarding protocol bpdu

Use this command to enable BPDU transparent transmission. Use the **no** form of this command to restore the default setting.

**bridge-frame forwarding protocol bpdu**

**no bridge-frame forwarding protocol bpdu**

Parameter Description	Parameter	Description
	N/A	N/A

**Defaults** This function is disabled by default.

**Command Mode** Global configuration mode

**Usage Guide** In the IEEE 802.1Q standard, 01-80-C2-00-00-00, the destination MAC address of BPDU frames, is reserved. Devices following the IEEE 802.1Q standard don't forward BPDU frames. In real network deployment, devices may be required to support BPDU transparent transmission. For example, when a device is not enabled with STP, BPDU transparent transmission can help implement STP calculation.

BPDU transparent transmission works only when STP is disabled.

**Configuration Examples** The following example enables BPDU transparent transmission.

```
Ruijie(config)# bridge-frame forwarding protocol bpdu
```

Related Commands	Command	Description
	N/A	N/A

**Platform Description** N/A

## 9.3 clear spanning-tree counters

Use this command to clear the statistics of the sent and received STP packets.

**clear spanning-tree detected-protocols [ interface *interface-id* ]**

Parameter Description	Parameter	Description
	<i>interface-id</i>	ID of the interface

**Defaults** N/A

**Command Mode** Privileged EXEC mode

**Usage Guide** It is used to clear the statistics of the sent and received STP packets.

**Configuration** The following example clears the statistics of the sent and received STP packets.

**Examples** Ruijie# clear spanning-tree counters

The following example clears the statistics of the sent and received packets on interface Gi 0/1.

Ruijie# clear spanning-tree counters interface gigabitethernet 0/1

**Related Commands**

Command	Description
<b>show spanning-tree counters</b>	Displays the statistics of STP transceived packets.

**Platform Description** N/A

## 9.4 clear spanning-tree detected-protocols

Use this command to force the interface to send the RSTP BPDU message and check the BPDU messages.

**clear spanning-tree detected-protocols [ interface *interface-id* ]**

**Parameter Description**

Parameter	Description
<i>interface-id</i>	ID of the interface

**Defaults** N/A

**Command Mode** Privileged EXEC mode

**Usage Guide** Use this command to force the interface to send the RSTP BPDU message.

**Configuration** Forces to check the version of all interfaces.

**Examples** Ruijie# clear spanning-tree detected-protocols

**Related**

Command	Description
---------	-------------



<b>Commands</b>		
	<b>show spanning-tree interface</b>	Displays the STP configuration of the interface.

**Platform** N/A

**Description**

## 9.5 clear spanning-tree mst toponchange record

Use this command to clear STP topology change record.

**clear spanning-tree mst *instance-id* toponchange record**

<b>Parameter Description</b>	<b>Parameter</b>	<b>Description</b>
	<i>instance-id</i>	Instance ID. For STP and RSTP protocols, only instance 0 is valid.

**Defaults** N/A

**Command Mode** Privileged EXEC mode

**Usage Guide** N/A

**Configuration** The following example clears STP topology change record.

**Examples**

```
Ruijie# show spanning-tree mst 0 toponchange record
Topology change information on mst 0:
Time                Interface          Old status   New status   Type
-----
2013.5.1 4:18:46    GI0/6        Learning    Forwarding   Normal
Ruijie# clear spanning-tree mst 0 toponchange record
Ruijie# show spanning-tree mst 0 toponchange record
%There's no topology change information has been record on mst 0.
```

<b>Related Commands</b>	<b>Command</b>	<b>Description</b>
	N/A	N/A

**Platform** N/A

**Description**

## 9.6 instance instance-id vlan vlan-range

Use this command to set instance and VLAN mapping relations. Use the **no** form of the command to

restore the default setting.

**instance** *instance-id* **vlan** *vlan-range*

**no instance** *instance-id* { **vlan** *vlan-range* }

#### Parameter Description

Parameter	Description
<i>instance-id</i>	Instance ID, in the range from 0 to 64
<i>vlan-range</i>	VLAN range, in the range from 1 to 4094.

#### Defaults

The default is instance 0.

#### Command Mode

MST configuration mode

#### Usage Guide

**instance** *instance-id* **vlan** *vlan-range*: Add VLAN to MST instance. Instance-ID is in the range from 0 to 64 and VLAN is in the range from 1 to 4094. Use commas to separate VLAN IDs and use hyphen to indicate VLAN range, e.g., instance 10 vlan 2,3,6-9, which adds VLAN 2, 3, 4, 5, 6, 7, 8, 9 to instance 10. By default, all VLANs are in instance 0. Use the no form of this command to remove VLAN from instance 1-64.

If you create 64 instances by stacking on a Ruijie device with a small memory (e.g., 64M), the memory may be undersized. It is recommended to limit stacking instance number.

#### Configuration

This example enters MST mode and maps VLAN 3 and 5-10 to MST instance1.

#### Examples

```
Ruijie(config)# spanning-tree mst configuration
Ruijie(config-mst)# instance 1 vlan 3, 5-10
Ruijie(config-mst)# show spanning-tree mst configuration
Multi spanning tree protocol : Enable
Name      :
Revision  : 0
Instance  Vlans Mapped
-----
0          1-2,4,11-4094
1          3,5-10
-----
Ruijie(config-mst)# exit
Ruijie(config)#
```

The following example removes VLAN3 from instance 1.

```
Ruijie(config-mst)# no instance 1 vlan 3
```

The following example removes instance 1.

```
Ruijie(config-mst)# no instance 1
```

#### Related Commands

Command	Description
---------	-------------

N/A	N/A
-----	-----

**Platform** N/A

**Description**

## 9.7 l2protocol-tunnel stp

Use this command to enable BPDU TUNNEL globally. Use the **no** form of this command to disable this function.

**l2protocol-tunnel stp**

**no l2protocol-tunnel stp**

Parameter Description	Parameter	Description
	N/A	N/A

**Defaults** N/A

**Command Mode** Global configuration mode

**Usage Guide** If you want to BPDU TUNNEL globally, enable BPDU TUNNEL on the interface first.

**Configuration Examples** The following example enables BPDU TUNNEL globally.

```
Ruijie(config)# l2protocol-tunnel stp
Ruijie(config)# show l2protocol-tunnel stp

L2protocol-tunnel: stp Enable
L2protocol-tunnel destination mac address: 01d0.f800.0005
```

Related Commands	Command	Description
	N/A	N/A

**Platform** N/A

**Description**

## 9.8 l2protocol-tunnel stp enable

Use this command to enable BPDU TUNNEL on the interface. Use the **no** form of this command to disable this function.

**l2protocol-tunnel stp enable**

**no l2protocol-tunnel stp enable**

Parameter Description	Parameter	Description
	N/A	N/A
Defaults	N/A	
Command Mode	Interface configuration mode	
Usage Guide	If you want to BPDU TUNNEL globally, enable BPDU TUNNEL on the interface first.	
Configuration Examples	<p>The following example enables BPDU TUNNEL on the interface.</p> <pre>Ruijie(config-if-interface-id)# l2protocol-tunnel stp enable Ruijie(config-if-interface-id)# show l2protocol-tunnel stp  L2protocol-tunnel: stp Enable L2protocol-tunnel destination mac address: 01d0.f800.0005 GigabitEthernet 0/1 l2protocol-tunnel stp enable</pre>	
Related Commands	Command	Description
	N/A	N/A
Platform Description	N/A	

## 9.9 l2protocol-tunnel stp tunnel-dmac

Use this command to configure the STP address for transparent transmission through BPDU TUNNEL. Use the **no** form of this command to restore the default setting.

**l2protocol-tunnel stp tunnel-dmac** *mac-address*

**no l2protocol-tunnel stp tunnel-dmac**

Parameter Description	Parameter	Description
	<i>mac-address</i>	The STP address for transparent transmission.
Defaults	The default is 01d0.f800.0005.	
Command Mode	Global configuration mode	

**Usage Guide** The available STP address includes 01d0.f800.0005, 011a.a900.0005, 010f.e200.0003, 0100.0ccd.cdd0, 0100.0ccd.cdd1, and 0100.0ccd.cdd2.

**Configuration Examples** The following example configures the STP address for transparent transmission through BPDU TUNNEL.

```
Ruijie(config)# l2protocol-tunnel stp tunnel-dmac 011a.a900.0005
```

**Related Commands**

Command	Description
N/A	N/A

**Platform Description** N/A

## 9.10 name

Use this command to set MST name. Use the **no** form of the command to restore the default setting.

**name** *name*

**no name**

**Parameter Description**

Parameter	Description
<i>name</i>	MST name, up to 32 characters.

**Defaults** The default is NULL.

**Command Mode** MST configuration mode

**Usage Guide** **name** *name*: Sets the MST name, up to 32 characters.  
**show spanning-tree mst configuration**: Displays MST region information.

**Configuration Examples** This example sets MST name to region1.

```
Ruijie(config)# spanning-tree mst configuration
Ruijie(config-mst)# name region1
Ruijie(config-mst)# show spanning-tree mst configuration
Multi spanning tree protocol : Enable
Name      : region1
Revision  : 0
Instance  Vlans Mapped
-----
0          : ALL
Ruijie(config-mst)# exit
```

```
Ruijie(config)#
```

**Related  
Commands**

Command	Description
N/A	N/A

**Platform  
Description**

N/A

## 9.11 revision

Use this command to set revision number of MSTP region. Use the **no** form of the command to restore the default setting.

**revision** *version***no revision****Parameter  
Description**

Parameter	Description
<i>version</i>	MST revision number, in the range from 0 to 65535.

**Defaults**

The default is 0.

**Command  
Mode**

MST configuration mode

**Usage Guide****revision** *version*: Sets the MST version, in the range from 0 to 65535.**show spanning-tree mst configuration**: Displays MST region information.**Configuration  
Examples**

This example sets revision number to 1.

```
Ruijie(config)# spanning-tree mst configuration
Ruijie(config-mst)# revision 1
Ruijie(config-mst)# show spanning-tree mst configuration
Multi spanning tree protocol : Enable
Name      :
Revision  : 1
Instance  Vlans Mapped
-----
0          : ALL
Ruijie(config-mst)# exit
Ruijie(config)#
```

**Related  
Commands**

Command	Description
---------	-------------

N/A	N/A
-----	-----

**Platform** N/A

**Description**

## 9.12 spshow l2protocol-tunnel stp

Use this command to display BPDU TUNNEL configuration.

**show l2protocol-tunnel stp**

**Parameter  
Description**

Parameter	Description
N/A	N/A

**Defaults** N/A

**Command Mode** Privileged EXEC mode / Global configuration mode / Interface configuration mode

**Usage Guide** N/A

**Configuration** The following example displays BPDU TUNNEL configuration.

**Examples**

```
Ruijie# show l2protocol-tunnel stp

L2protocol-tunnel: stp Enable
L2protocol-tunnel destination mac address:011a.a900.0005
GigabitEthernet 0/1 l2protocol-tunnel stp enable
```

**Related  
Commands**

Command	Description
N/A	N/A

**Platform** N/A

**Description**

## 9.13 show spanning-tree

Use this command to display the global spanning-tree configuration.

**show spanning-tree [summary | forward-time | hello-time | max-age | inconsistentports | tx-hold-count | pathcost method | max\_hops | counters]**

**Parameter  
Description**

Parameter	Description
-----------	-------------

<b><i>summary</i></b>	Displays the information of MSTP instances and forwarding status of the interfaces.
<b><i>inconsistentports</i></b>	Displays the block port due to root guard or loop guard.
<b><i>forward-time</i></b>	Displays BridgeForwardDelay.
<b><i>hello-time</i></b>	Displays BridgeHelloTime.
<b><i>max-age</i></b>	Displays BridgeMaxAge.
<b><i>max-hops</i></b>	Displays the maximum hops of an instance.
<b><i>tx-hold-count</i></b>	Displays TxHoldCount.
<b><i>pathcost method</i></b>	Displays the method used for calculating path cost.
<b><i>counters</i></b>	Displays the statistics of STP transceived packets.

**Defaults** N/A

**Command Mode** Privileged EXEC mode, global configuration mode and interface configuration mode.

**Usage Guide** N/A

**Configuration** The following example displays the global spanning-tree configuration.

**Examples** Ruijie# show spanning-tree hello-time

The following example displays the sent and received STP packets.

```
Ruijie# show spanning-tree counters
----- STP BPDU count -----
Port                      Receive      Send
GigabitEthernet 0/3       0           122594

----- STP TC or TCN count -----
MSTID    Port                      Receive      Send
0         GigabitEthernet 0/3       0           0
```

**Related Commands**

Command	Description
<b>spanning-tree pathcost method</b>	Sets the pathcost method.
<b>spanning-tree forward-time</b>	Sets BridgeForwardDelay.
<b>spanning-tree hello-time</b>	Sets BridgeHelloTime.
<b>spanning-tree max-age</b>	Sets BridgeMaxAge.
<b>spanning-tree max-hops</b>	Sets the maximum hops of an instance.
<b>spanning-tree tx-hold-count</b>	Displays TxHoldCount.

**Platform Description** N/A



## 9.14 show spanning-tree interface

Use this command to display the STP configuration of the interface, including the optional spanning tree.

**show spanning-tree interface** *interface-id* [ { **bpdudfilter** | **portfast** | **bpduguard** | **link-type** } ]

### Parameter Description

Parameter	Description
<i>interface-id</i>	Interface ID
<b>bpdudfilter</b>	Displays the status of BPDU filter.
<b>portfast</b>	Displays the status of portfast.
<b>bpduguard</b>	Displays the status of BPDU guard.
<b>link-type</b>	Displays the link type of an interface.

**Defaults** N/A

**Command Mode** Privileged EXEC mode, global configuration mode and interface configuration mode.

**Usage Guide** N/A

**Configuration Examples** The following example displays the STP configuration on interface Gi 0/1.

```
Ruijie# show spanning-tree int gi 0/1

PortAdminPortFast : Disabled
PortOperPortFast : Disabled
PortAdminAutoEdge : Enabled
PortOperAutoEdge : Disabled
PortAdminLinkType : auto
PortOperLinkType : point-to-point
PortBPDUGuard : Disabled
PortBPDUFilter : Disabled
PortGuardmode : None

##### MST 0 vlans mapped :ALL
PortState : forwarding
PortPriority : 128
PortDesignatedRoot : 32768.001a.a979.00ea
PortDesignatedCost : 0
PortDesignatedBridge :32768.001a.a979.00ea
PortDesignatedPortPriority : 128
PortDesignatedPort : 1
PortForwardTransitions : 1
PortAdminPathCost : 200000
```

```
PortOperPathCost : 200000
Inconsistent states : normal
PortRole : rootPort
```

#### Related Commands

Command	Description
<b>spanning-tree bpdupfilter</b>	Enables the BPDU filter feature someone the interface.
<b>spanning-tree portfast</b>	Enables the portfast on the interface.
<b>spanning-tree bpduguard</b>	Enables the BPDU guard on the interface.
<b>spanning-tree link-type</b>	Sets the link type of the interface to point-to-point.

**Platform** N/A

#### Description

## 9.15 show spanning-tree mst

Use this command to display the information of MST and instances.

**show spanning-tree mst { configuration | instance-id [ interface interface-id ] }**

#### Parameter Description

Parameter	Description
<b>configuration</b>	The MST configuration of the equipment.
<i>instance-id</i>	Instance number
<i>interface-id</i>	Interface number

**Defaults** N/A

**Command Mode** Privileged EXEC mode/Global configuration mode/Interface configuration mode

**Usage Guide** N/A

**Configuration Examples** The following example displays the information of MST and instances.

#### Examples

```
Ruijie# show spanning-tree mst configuration
Multi spanning tree protocol : Enable
Name      : test
Revision  : 0
Instance  Vlans Mapped
-----
0          : 2-4094
1          : 1
```

## Field Description

Field	Description
Multi spanning tree protocol	Enables MSTP protocol.
Name	Name of the MST region
Revision	Revision of the MST region
Instance Vlans Mapped	Mapping relation between the instance and VLAN

## Related Commands

Command	Description
<b>spanning-tree mst configuration</b>	Configures the MST region.
<b>spanning-tree mst cost</b>	Displays the path cost of the instance.
<b>spanning-tree mst max-hops</b>	Displays the maximum hops of the instance.
<b>spanning-tree mst priority</b>	Displays the equipment priority of the instance.
<b>spanning-tree mst port-priority</b>	Displays the port priority of the instance.

Platform N/A

Description

## 9.16 show spanning-tree mst topochange record

Use this command to display the STP topology change record.

**show spanning-tree mst *instance-id* topochange record**

## Parameter Description

Parameter	Description
<i>instance-id</i>	Instance ID.

Defaults N/A

**Command Mode** Privileged EXEC mode / Global configuration mode / Interface configuration mode

Usage Guide N/A

**Configuration Examples** The following example displays the STP topology change record of instance 0.

```
Ruijie# show spanning-tree mst 0 topochange record
Topology change information on mst 0:
Time                Interface          Old status  New status  Type
-----
2013.5.1 4:18:46    GI0/6       Learning   Forwarding  Normal
```

Field	Description
-------	-------------

Time	The time when the topology changes.
Interface	The interface whose topology changes.
Old status	Old STP status on the interface.
New status	New STP status on the interface.
Type	Topology change may be caused by the following causes: Normal: UP/DOWN state change on the interface, LoopGuard Block: Loop-inconsistence causes the interface to be blocked. RootGuard Block: Root-inconsistence causes the interface to be blocked. Inferior Block: Receiving inferior BPDU frames causes the interface to be blocked. LoopGuard Unblock: The interface returns to Forward status from loop-inconsistence. RootGuard Unblock: The interface returns to Forward status from root-inconsistence. Inferior Unblock-The interface returns to Forward status after not receiving inferior BPDU frames.

#### Related Commands

Command	Description
N/A	N/A

#### Platform Description

N/A

## 9.17 spanning-tree

Use this command to enable MSTP and configure its basic settings globally. The **no** form of the command disables the spanning-tree function. The **no** form of the command with parameters only restores the corresponding parameters to the default values, but does not disable the spanning-tree function.

**spanning-tree** [ **forward-time** *seconds* | **hello-time** *seconds* | **max-age** *seconds* ]

**no spanning-tree** [ **forward-time** | **hello-time** | **max-age** ]

#### Parameter Description

Parameter	Description
<b>forward-time</b> <i>seconds</i>	Interval at which the port status changes, in the range from 4 to 30 in the unit of seconds. The default is 15.
<b>hello-time</b> <i>seconds</i>	Interval at which the switch sends the BPDU message, in the range

	from 1 to 10 in the unit of seconds. The default is 2.
<b>max-age</b> <i>seconds</i>	Maximum aging time of the BPDU message, in the range from 6 to 40 in the unit of seconds. The default is 20.

**Defaults** This function is disabled by default.

**Command** Global configuration mode.

**Mode**

**Usage Guide** The values of **forward-time**, **hello time** and **max-age** are interrelated. Modifying one of these three parameters will affect the others. There is a restricted relationship among the above three values.

$$2 * (\text{Hello Time} + 1.0\text{snd}) \leq \text{Max-Age Time} \leq 2 * (\text{Forward-Delay} - 1.0\text{snd})$$

If the values do not according with the condition, the settings do not work.

**Configuration** The following example enables the spanning-tree function.

**Examples** Ruijie(config)# **spanning-tree**

The following example configures the BridgeForwardDelay.

Ruijie(config)# spanning-tree forward-time 10

**Related  
Commands**

Command	Description
<b>show spanning-tree</b>	Displays the global STP configuration.
<b>spanning-tree mst cost</b>	Sets the PathCost of an STP interface.
<b>spanning-tree tx-hold-count</b>	Sets the global TxHoldCount of STP.

**Platform** N/A

**Description**

## 9.18 spanning-tree autoedge

Use this command to enable Autoedge on the interface. Use the **disabled** form of this command to disable this function.

**spanning-tree autoedge [ disabled ]**

**Parameter  
Description**

Parameter	Description
disabled	Disabled Autoedge on the interface.

**Defaults** This function is enabled by default.

**Command** Interface configuration mode.

**Mode**

**Usage Guide** If the designated port of a device does not receive a BPDU from the downlink port within a specific period (3 seconds), the device regards a network device connected to the designated port, configures the port as an edge port, and switches the port directly into the forwarding state. The edge port will be automatically identified as a non-edge port after receiving a BPDU.

You can run the spanning-tree autoedge disabled command to disable Auto Edge.

**Configuration** The following example disables Autoedge on the interface.

**Examples**

```
Ruijie(config)# interface gigabitethernet 1/1
Ruijie(config-if-interface-id-interface-id)# spanning-tree autoedge disabled
```

**Related  
Commands**

Command	Description
<b>show spanning-tree interface</b>	Displays the STP configuration information of the interface.

**Platform** N/A

**Description**

## 9.19 spanning-tree bpdudfilter

Use this command to enable BPDU filter on the interface. You can use the **enabled** or **disabled** option of the command to enable or disable the BPDU filter function on the interface.

**spanning-tree bpdudfilter [ enabled | disabled ]**

**Parameter  
Description**

Parameter	Description
enabled	Enables BPDU filter on the interface.
disabled	Disables BPDU filter on the interface.

**Defaults** This function is disabled by default,

**Command  
Mode** Interface configuration mode.

**Usage Guide** If BPDU filter is enabled on a port, the port neither sends nor receives BPDUs.

**Configuration** The following example enables BPDU filter on interface Gi 1/1.

**Examples**

```
Ruijie(config)# interface gigabitethernet 1/1
Ruijie(config-if-interface-id-interface-id)# spanning-tree bpdudfilter enable
```

**Related  
Commands**

Command	Description
<b>show spanning-tree interface</b>	Displays the STP configuration of the interface.

**Platform** N/A  
**Description**

## 9.20 spanning-tree bpduguard

Use this command to enable the BPDU guard function on the interface. You can use the **enabled** or **disabled** option of the command to enable or disable the BPDU guard function on the interface.

**spanning-tree bpduguard [ enabled | disabled ]**

**Parameter  
Description**

Parameter	Description
enabled	Enables BPDU guard on the interface.
disabled	Disables BPDU guard on the interface.

**Defaults** This function is disabled by default.

**Command  
Mode** Interface configuration mode.

**Usage Guide**

1. If BPDU guard is enabled on a port, the port enters the error-disabled state after receiving a BPDU.
2. Run command **errdisable recovery [ interval seconds ]** to recover the interface in Error-disabled state.

**Configuration** The following example enables the BPDU guard function on the interface.

**Examples**

```
Ruijie(config)# interface gigabitethernet 1/1
Ruijie(config-if-interface-id-interface-id)# spanning-tree bpduguard enable
```

**Related  
Commands**

Command	Description
<b>show spanning-tree interface</b>	Displays the STP configuration of the interface.

**Platform** N/A  
**Description**

## 9.21 spanning-tree compatible enable

Use this command to send the message selectively carried with MSTI according to the interface attribute of current port to realize interconnection with other vendors. Use the **no** form of this command to restore the default setting.

**spanning-tree compatible enable**

**no spanning-tree compatible enable**

Parameter Description	Parameter	Description
	N/A	N/A
Defaults	This function is disabled by default. .	
Command Mode	Interface configuration mode.	
Usage Guide	If the compatibility mode is enabled on a port, this port will add different MSTI information into the to-be-sent BPDU based on the current port to realize interconnection between Ruijie devices and other SPs' devices.	
Configuration Examples	<p>The following example enables the compatibility mode on interface Gi 0/1.</p> <pre>Ruijie(config)# interface gigabitethernet 0/1 Ruijie(config-if-interface-id-interface-id)#spanning-tree compatible enable</pre>	
Related Commands	Command	Description
	N/A	N/A
Platform Description	N/A	

## 9.22 spanning-tree guard loop

Use this command to enable **loop guard** on the interface to prevent the root port or backup port from generating loop since they cannot receive bpdu. Use the **no** form of this command to disable **loop guard**.

**spanning-tree guard loop**

**no spanning-tree guard loop**

Parameter Description	Parameter	Description
	N/A	N/A
Defaults	This function is disabled by default.	
Command Mode	Interface configuration mode.	
Usage Guide	1. Enabling loop guard on a root port or backup port will prevent possible loops caused by BPDU	



receipt failure.

2. The loop guard function and root guard function cannot be enabled at the same time.

**Configuration** The following example enables **loop guard** on interface Gi 0/1.

**Examples**

```
Ruijie(config)# interface gigabitethernet 0/1
Ruijie(config-if-interface-id)# spanning-tree guard loop
```

**Related  
Commands**

Command	Description
N/A	N/A

**Platform** N/A

**Description**

## 9.23 spanning-tree guard none

Use this command to disable **guard** on the interface. Use the **no** form of this command to enable this function

**spanning-tree guard none**

**no spanning-tree guard none**

**Parameter  
Description**

Parameter	Description
N/A	N/A

**Defaults** This function is enabled by default.

**Command  
Mode** Interface configuration mode.

**Usage Guide** N/A

**Configuration** The following example disables **guard** on interface Gi 0/1.

**Examples**

```
Ruijie(config)# interface gigabitethernet 0/1
Ruijie(config-if-interface-id)# spanning-tree guard none
```

**Related  
Commands**

Command	Description
N/A	N/A

**Platform** N/A

**Description**

## 9.24 spanning-tree guard root

Use this command to enable **root guard** on the interface to prevent the change of current root bridge position because of error configuration and illegal packet attack. Use the **no** form of this command to restore the default setting.

**spanning-tree guard root**

**no spanning-tree guard root**

Parameter Description	Parameter	Description
	N/A	N/A

**Defaults** This function is disabled by default.

**Command Mode** Interface configuration mode.

**Usage Guide**

3. If root guard is enabled, the current root bridge will not change due to incorrect configuration or illegal packet attacks.
4. The loop guard function and root guard function cannot be enabled at the same time.

**Configuration Examples** The following example enables **root guard** on the interface.

```
Ruijie(config)# interface gigabitethernet 0/1
Ruijie(config-if-interface-id)# spanning-tree guard root
```

Related Commands	Command	Description
	N/A	N/A

**Platform Description** N/A

## 9.25 spanning-tree ignore tc

Use this command to enable the tc filtering on the interface. Use the **no** form of this command to restore the default setting. With tc filtering enabled, the TC packets received on the interface will not be processed.

**spanning-tree ignore tc**

**no spanning-tree ignore tc**

Parameter Description	Parameter	Description
	N/A	N/A

**Defaults** This function is disabled by default.

**Command Mode** Interface configuration mode.

**Usage Guide** If TC filter is enabled on a port, the port does not process received TC packets.

**Configuration** The following example enables the tc filtering on the interface.

**Examples**

```
Ruijie(config)# interface gigabitethernet 0/1
Ruijie(config-if-interface-id)# spanning-tree ignore tc
```

**Related Commands**

Command	Description
N/A	N/A

**Platform Description** N/A

## 9.26 spanning-tree link-type

Use this command to configure the link type of the interface. Use the **no** form of this command to restore the default setting.

**spanning-tree link-type [ point-to-point | shared ]**

**no spanning-tree link-type**

**Parameter Description**

Parameter	Description
<b>point-to-point</b>	Sets the link type of the interface to point-to-point.
<b>shared</b>	Forcibly sets the link type of the interface to shared.

**Defaults** For a full-duplex interface, its link type is set to point-to-point link; for a half-duplex interface, its link type is set to shared.

**Command Mode** Interface configuration mode.

**Usage Guide** If the link type of a port is point-to-point connection, RSTP can rapidly converge. If the link type is not configured, the device automatically sets the link type based on the duplex mode of the port.

**Configuration** The following example configures the link type of the interface.

**Examples**

```
Ruijie(config)# interface gigabitethernet 1/1
Ruijie(config-if-interface-id)# spanning-tree link-type point-to-point
```

Related Commands	Command	Description
	<b>show spanning-tree interface</b>	Displays the STP configuration of the interface.

**Platform** N/A  
**Description**

## 9.27 spanning-tree loopguard default

Use this command to enable **loop guard** globally to prevent the root port or backup port from generating loop since they cannot receive bpdu. Use the **no** form of this command to restore the default setting.

**spanning-tree loopguard default**

**no spanning-tree loopguard default**

Parameter Description	Parameter	Description
	N/A	N/A

**Defaults** This function is disabled by default.

**Command Mode** Global configuration mode.

**Usage Guide** Enabling loop guard on a root port or backup port will prevent possible loops caused by BPDU receipt failure.

**Configuration Examples** The following example enables **loop guard** globally to prevent the root port or backup port from generating loop since they cannot receive bpdu.

```
Ruijie(config)# spanning-tree loopguard default
```

Related Commands	Command	Description
	N/A	N/A

**Platform** N/A  
**Description**

## 9.28 spanning-tree max-hops

Use this command to set the maximum number of hops(Max-hopsCount) of the BPDU message in the global configuration mode, the number of hops in a region that the BPDU message passes before

being dropped. This parameter takes effect for all instances. Use the **no** form of this command to restore the default setting.

**spanning-tree max-hops** *hop-count*

**no spanning-tree max-hops**

Parameter Description	Parameter	Description
	<i>hop-count</i>	Number of hops in a region that the BPDU message passes before being dropped. The range is 1 to 40 hops.

**Defaults** The default is 20 hops.

**Command Mode** Global configuration mode.

**Usage Guide** In the region, the BPDU message sent by the root bridge includes a Hop Count field. When the BPDU message passes a device, the Hop Count is decreased by 1 until it reaches 0, which indicates the BPDU message times out. The device will drop the BPDU message whose Hop Count is 0. Changing the max-hops command affects all instances.

**Configuration Examples** This example sets the max-hops of the spanning tree to 10 for all instances.

```
Ruijie(config)# spanning-tree max-hops 10
```

Related Commands	Command	Description
	<b>show spanning-tree</b>	Displays the MSTP information.

**Platform Description** N/A

## 9.29 spanning-tree mode

Use this command to set the STP version. Use the **no** form of the command to restore the default setting.

**spanning-tree mode** [ **stp** | **rstp** | **mstp** ]

**no spanning-tree mode**

Parameter Description	Parameter	Description
	<b>stp</b>	Spanning tree protocol(IEEE 802.1d)
	<b>rstp</b>	Rapid spanning tree protocol(IEEE 802.1w)
	<b>mstp</b>	Multiple spanning tree protocol(IEEE 802.1s)

**Defaults** The default is **mstp**.

**Command**

**Mode** Global configuration mode.

**Usage Guide** However, some vendors' devices do not work according to 802.1 protocol standards, possibly causing incompatibility. If other vendors' devices are incompatible with Ruijie devices, run this command to switch the STP mode to a lower version.

**Configuration** The following example sets the STP version.

**Examples** Ruijie(config)# spanning-tree mode stp

**Related  
Commands**

Command	Description
<b>show spanning-tree</b>	Displays the spanning-tree configuration.

**Platform** N/A

**Description**

## 9.30 spanning-tree mst configuration

Use this command to enter the MST configuration mode in the global configuration mode and configure the MSTP region. Use the **no** form of the command to restore the default setting.

**spanning-tree mst configuration**

**no spanning-tree mst configuration**

**Parameter  
Description**

Parameter	Description
N/A	N/A

**Defaults**

**Command** Global configuration mode.

**Mode**

**Usage Guide** To return to the privileged EXEC mode, enter end or Ctrl+C.

To return to the global configuration mode, enter exit.

After entering the MST configuration mode, you can configure MSTP Region parameters:

**Configuration** This example enters the MST configuration mode.

**Examples** Ruijie(config)# spanning-tree mst configuration

Ruijie(config-mst)# instance 1 vlan 3, 5-10

```

Ruijie(config-mst)# name region 1
Ruijie(config-mst)# revision 1
Ruijie(config-mst)# show spanning-tree mst configuration
Multi spanning tree protocol : Enable
Name      : region1
Revision : 1Instance Vlans Mapped
-----
0         1-2,4,11-4094
1         3,5-10
-----
Ruijie(config-mst)# exit
Ruijie(config)#

```

#### Related Commands

Command	Description
<b>show spanning-tree mst</b>	Displays the MST region configuration.
<b>instance</b> <i>instance-id</i> <b>vlan</b> <i>vlan-range</i>	Adds VLANs to the MST instance.
<b>name</b>	Configures the name of MST.
<b>revision</b>	Configures the version of MST.

**Platform** N/A  
**Description**

## 9.31 anning-tree mst cost

Use this command to set the path cost of an instance in the interface configuration mode. Use the **no** form of the command to restore the default setting.

**spanning-tree** [**mst** *instance-id*] **cost** *cost*

**no spanning-tree** [**mst** *instance-id*] *cost*

#### Parameter Description

Parameter	Description
instance-id	Instance ID in the range from 0 to 64.
cost	Path cost in the range from 1 to 200,000,000.

#### Defaults

The default instance-id is 0.

The default value is calculated by the link rate of the interface automatically.

1000 Mbps—20000

100 Mbps—200000

10 Mbps—2000000

#### Command

Interface configuration mode.

**Mode**

**Usage Guide** A higher cost value means a higher path cost.

**Configuration** This example sets the path cost to 400 on the interface associated with instances 3.

**Examples**

```
Ruijie(config)# interface gigabitethernet 1/1
Ruijie(config-if)# spanning-tree mst 3 cost 400
```

**Related  
Commands**

Command	Description
<b>show spanning-tree mst</b>	Displays the MSTP information of an interface.
<b>spanning-tree mst port-priority</b>	Configures the priority of an interface.
<b>spanning-tree mst priority</b>	Configures the priority of an instance.

**Platform** N/A

**Description**

## 9.32 spanning-tree mst port-priority

Use this command to configure the interface priority for different instances in the interface configuration mode. It will determine which interface of a loop in a region is in charge of forwarding.

Use the **no** form of this command to restore the default setting.

**spanning-tree [ mst *instance-id* ] port-priority *priority***

**no spanning-tree [ mst *instance-id* ] port-priority**

**Parameter  
Description**

Parameter	Description
<i>instance-id</i>	Instance ID, in the range of 0 to 64
<i>priority</i>	Interface priority. Sixteen integers are available: 0, 16, 32, 48, 64, 80, 96, 112, 128, 144, 160, 176, 192, 208, 224, 240, which are the multiples of 16.

**Defaults** The default instance-id is 0.  
The default priority is 128.

**Command Mode** Interface configuration mode.

**Usage Guide** When a loop occurs in the region, the interface of the higher priority will be in charge of forwarding. If all interfaces have the same priority value, the interface of the smaller number will be in charge of the forwarding.  
Run this command to determine which port in the loop of a region enters the forwarding state.



**Configuration** This example sets the priority of **gigabitethernet 1/1** to 10 in instance 20.

**Examples**

```
Ruijie(config)# interface gigabitethernet 1/1
Ruijie(config-if-interface-id)# spanning-tree mst 20 port-priority 0
```

**Related  
Commands**

Command	Description
<b>show spanning-tree mst</b>	Displays the MSTP information of an interface.
<b>spanning-tree mst cost</b>	Sets the path cost.
<b>spanning-tree mst priority</b>	Sets the device priority for different instances.

**Platform** N/A

**Description**

## 9.33 spanning-tree mst priority

Use this command to set the device priority for different instances in the global configuration mode.

Use the **no** form of this command to restore the default setting.

**spanning-tree [mst *instance-id*] priority *priority***

**no spanning-tree [ mst *instance-id*] priority**

**Parameter  
Description**

Parameter	Description
<i>instance-id</i>	Instance ID, in the range of 0 to 64
<i>priority</i>	Device priority. Sixteen integers are available: 0, 4096, 8192, 12288, 16384, 20480, 24576, 28672, 32768, 36864, 40960, 45056, 49152, 53248, 57344 and 61440, which are all multiples of 4096.

**Defaults**

The default instance ID is 0.  
The default device priority is 32768.

**Command  
Mode**

Global configuration mode.

**Usage Guide**

Configure the switch priority to determine a device as the root of the entire network and to determine the topology of the entire network.

**Configuration** The following example sets the device priority of the Instance to 8192.

**Examples**

```
Ruijie(config)# spanning-tree mst 20 priority 8192
```

**Related  
Commands**

Command	Description
<b>show spanning-tree mst</b>	Displays the MSTP information of an interface.
<b>spanning-tree mst cost</b>	Sets path cost.

<b>spanning-tree mst port-priority</b>	Sets the port priority of an instance.
--	--

**Platform** N/A

**Description**

## 9.34 spanning-tree pathcost method

Use this command to configure the path cost of the port. Use the **no** form of this command to restore the default setting.

**spanning-tree pathcost method** { **long** [ **standard** ] | **short** }

**no spanning-tree pathcost method**

Parameter Description	Parameter	Description
	<b>Long</b> [ <b>standard</b> ]	Adopts the 802.1t standard to configure path cost. The standard indicates that use the expression recommended by the standard to calculate the cost value.
	<b>short</b>	Adopts the 802.1d standard to configure path cost.

**Defaults** 802.1T standard is adopted to set path cost by default.

**Command Mode** Global configuration mode.

**Usage Guide** If the port path cost uses the default value, the device automatically calculates the port path cost based on the port rate.

**Configuration Examples** The following example configures the path cost of the port.

```
Ruijie(config-if)# spanning-tree pathcost method long
```

Related Commands	Command	Description
	<b>show spanning-tree interface</b>	Displays the STP configuration of the interface.

**Platform** N/A

**Description**

## 9.35 spanning-tree portfast

Use this command to enable the portfast on the interface. Use the disabled form of this command to restore the default setting,

**spanning-tree portfast** [ **disabled** ]

Parameter Description	Parameter	Description
	<b>disabled</b>	Disables the portfast on the interface.
Defaults	This function is disabled by default.	
Command Mode	Interface configuration mode.	
Usage Guide	After PortFast is enabled on a port, the port directly enters the forwarding state. However, since the Port Fast Operational State becomes disabled due to receipt of BPDUs, the port can properly run the STP algorithm and enter the forwarding state.	
Configuration Examples	The following example enables the portfast on the interface. <pre>Ruijie(config)# interface gigabitethernet 1/1 Ruijie(config-if-interface-id)# spanning-tree portfast</pre>	
Related Commands	Command	Description
	<b>show spanning-tree interface</b>	Displays the STP configuration of the interface.
Platform Description	N/A	

## 9.36 spanning-tree portfast bpdufilter default

Use this command to enable the BPDU filter function globally. You can use the **no** form of the command to restore the default setting.

**spanning-tree portfast bpdufilter default**  
**no spanning-tree portfast bpdufilter default**

Parameter Description	Parameter	Description
	N/A	N/A
Defaults	This function is disabled by default,	
Command Mode	Global configuration mode.	
Usage Guide	Once the BPDU filter is enabled, the BPDU message is neither received nor sent on the Port Fast interface. Use the <b>show spanning-tree</b> command to display the configuration.	

**Configuration** The following example enables the BPDU filter function globally.

**Examples** Ruijie(config)# spanning-tree portfast bpdupfilter default

**Related  
Commands**

Command	Description
show spanning-tree interface	Displays the global STP configuration.

**Platform** N/A  
**Description**

## 9.37 spanning-tree portfast bpduguard default

Use this command to enable the BPDU guard globally. Use the **no** form of this command to restore the default setting.

**spanning-tree portfast bpduguard default**

**no spanning-tree portfast bpduguard default**

**Parameter  
Description**

Parameter	Description
N/A	N/A

**Defaults** This function is disabled by default.

**Command  
Mode** Global configuration mode.

**Usage Guide** Once the BPDU guard is enabled on the interface, it will enter the error-disabled status if the BPDU message arrives at the interface. Use the **show spanning-tree** command to display the configuration.

 The global BPDU guard takes effect only when PortFast is enabled on a port.

**Configuration** The following example enables the GPDU guard globally.

**Examples** Ruijie(config)# spanning-tree portfast bpduguard default

**Related  
Commands**

Command	Description
show spanning-tree interface	Displays the global STP configuration.

**Platform** N/A  
**Description**

## 9.38 spanning-tree portfast default

Use this command to enable the portfast feature on all interfaces globally. Use the **no** form of this command to restore the default setting.

**spanning-tree portfast default**

**no spanning-tree portfast default**

Parameter Description	Parameter	Description
	N/A	N/A

**Defaults** This function is disabled by default.

**Command Mode** Global configuration mode.

**Usage Guide** N/A

**Configuration Examples** The following example enables the portfast feature on all interfaces globally.

```
Ruijie(config)# spanning-tree portfast default
```

Related Commands	Command	Description
	<b>show spanning-tree interface</b>	Displays the global STP configuration.

**Platform Description** N/A

## 9.39 spanning-tree reset

Use this command to restore the **spanning-tree** configuration to the default setting.

**spanning-tree reset**

Parameter Description	Parameter	Description
	N/A	N/A

**Defaults** N/A

**Command Mode** Global configuration mode.

**Usage Guide** The function do not have a **no** command.

**Configuration** The following example resets STP.

**Examples** Ruijie(config)# spanning-tree reset

**Related  
Commands**

Command	Description
<b>show spanning-tree</b>	Displays the global STP configuration.
<b>show spanning-tree interface</b>	Displays the STP configuration of the interface.

**Platform** N/A

**Description**

## 9.40 spanning-tree tc-guard

Use this command to enable **tc-guard** on the interface to prevent the spread of TC messages. Use the **no** form of this command to disable this function on the interface.

**spanning-tree tc-guard**

**no spanning-tree tc-guard**

**Parameter  
Description**

Parameter	Description
N/A	N/A

**Defaults** This function is disabled by default.

**Command  
Mode** Global configuration mode.

**Usage Guide** Enable TC guard to prevent TC packets from spreading

**Configuration** The following example enables **tc-guard** on the interface to prevent the spread of TC messages.

**Examples** Ruijie(config)# spanning-tree tc-guard

**Related  
Commands**

Command	Description
N/A	N/A

**Platform** N/A

**Description**

## 9.41 spanning-tree tc-protection

Use this command to enable **tc-protection** globally. Use The **no** form of this command to disable this

function.

**spanning-tree tc- protection**

**no spanning-tree tc- protection**

**Parameter  
Description**

Parameter	Description
N/A	N/A

**Defaults**

This function is enabled by default.

**Command  
Mode**

Global configuration mode.

**Usage Guide**

N/A

**Configuration  
Examples**

The following example enables **tc-protection** globally.

```
Ruijie(config)# spanning-tree tc-protection
```

**Related  
Commands**

Command	Description
N/A	N/A

**Platform  
Description**

N/A

## 9.42 spanning-tree tc-protection tc-guard

Use this command to enable tc-guard to prevent TC packets from being flooded. Use the **no** form of this command to restore the default setting.

**spanning-tree tc-protection tc-guard**

**no spanning-tree tc-protection tc-guard**

**Parameter  
Description**

Parameter	Description
N/A	N/A

**Defaults**

This function is disabled by default.

**Command  
Mode**

Global configuration mode.

**Usage Guide**

Enable TC guard to prevent TC packets from spreading.

**Configuration** The following example enables tc-guard to prevent TC packets from being flooded.

**Examples** Ruijie(config)# spanning-tree tc-protection tc-guard

**Related  
Commands**

Command	Description
N/A	N/A

**Platform** N/A  
**Description**

## 9.43 spanning-tree tx-hold-count

Use this command to configure the TxHoldCount of the STP, the maximum number of the BPDU messages sent in one second. Use the **no** form of this command to restore the default setting.

**spanning-tree tx-hold-count** *tx-hold-count*

**no spanning-tree tx-hold-count**

**Parameter  
Description**

Parameter	Description
<i>tx-hold-count</i>	Indicates the maximum number of BPDUs sent per second. The value ranges from 1 to 10. The default value is 3.

**Defaults** The default is 3.

**Command  
Mode** Global configuration mode.

**Usage Guide** N/A

**Configuration** The following example sets the maximum number of the BPDU messages sent in one second.

**Examples** Ruijie(config)# spanning-tree tx-hold-count 5

**Related  
Commands**

Command	Description
<b>show spanning-tree</b>	Displays the global MSTP configuration.

**Platform** N/A  
**Description**



## 10 GVRP Commands

### 10.1 bridge-frame forwarding protocol gvrp

Use this command to enable GVRP PDUs transparent transmission. Use the **no** form of this command to restore the default setting.

**bridge-frame forwarding protocol gvrp**

**no bridge-frame forwarding protocol gvrp**

Parameter Description	Parameter	Description
	N/A	N/A

**Defaults** This function is disabled by default.

**Command mode** Global configuration mode

**Usage Guide** In the IEEE 802.1Q standard, the MAC address 01-80-C2-00-00-21 of GVRP PDUs is reserved for future standardization. In other words, the device following the IEEE 802.1Q standard does not forward GVRP PDUs frames. However, in actual network deployment, GVRP PDUs transparent transmission may be required. For example, the device not enabled with GVRP needs to transmit GVRP PDUs frames transparently to ensure proper GVRP topology calculation.

**Configuration Examples** The following example enables GVRP PDUs transparent transmission.

```
Ruijie(config)# bridge-frame forwarding protocol gvrp
```

Related Commands	Command	Description
	N/A	N/A

**Platform Description** N/A

### 10.2 clear gvrp statistic

Use this command to clear the GVRP statistics for re-counting.

**clear gvrp statistics** { *interface-id* | **all** }

Parameter Description	Parameter	Description

<i>interface-id</i>	Interface id
---------------------	--------------

**Defaults** N/A

**Command mode** Privileged EXEC mode.

**Usage Guide** Use the **show gvrp statistics** to display the statistics.

**Configuration** The following example clears GVRP statistics.

**Examples** Ruijie# clear gvrp statistics all

Related Commands	Command	Description
	N/A	N/A

**Platform** N/A  
**Description**

## 10.3 gvrp applicant state

Use this command configures the GVRP advertisement mode on the interface.. Use the **no** form of this command to restore default setting.

**gvrp applicant state { normal | non-applicant }**

**no gvrp applicant state**

Parameter Description	Parameter	Description
	normal	The interface sends VLAN advertisement.
	non-applicant	The interface does not send VLAN advertisement.

**Defaults** The interface sends GVRP advertisement by default.

**Command mode** Interface configuration mode.

**Usage Guide** N/A

**Configuration** The following example configures the GVRP advertisement mode on the interface.

**Examples** Ruijie(config-if)# gvrp applicant state normal

Related	Command	Description

Commands		
	show gvrp configuration	Displays the GVRP configurations.

Platform N/A

Description

## 10.4 gvrp dynamic-vlan-creation

Use this command to enable dynamic VLAN creation. Use the **no** form of this command to restore the default setting.

**gvrp dynamic-vlan-creation enable**

**no gvrp dynamic-vlan-creation enable**

Parameter Description	Parameter	Description
	N/A	N/A

Defaults This function is disabled by default.

Command mode Global configuration mode.

Usage Guide Use the **show gvrp configuration** to display the configuration.

Configuration Examples The following example enables dynamic VLAN creation.

```
Ruijie(config)# gvrp dynamic-vlan-creation enable
```

Related Commands	Command	Description
	show gvrp configuration	Displays the GVRP configurations.

Platform N/A

Description

## 10.5 gvrp enable

Use this command to enable the GVRP function. Use the **no** form of this command to restore the default setting.

**gvrp enable**

**no gvrp enable**

Parameter Description	Parameter	Description

N/A	N/A
-----	-----

**Defaults** This function is disabled by default.

**Command mode** Global configuration mode

**Usage Guide** This command is used to display the configuration.

**Configuration** The following example enables the GVRP function.

**Examples** Ruijie(config)#gvrp enable

Related Commands	Command	Description
	show gvrp configuration	Displays the GVRP configurations.

**Platform** N/A  
**Description**

## 10.6 gvrp registration mode

Use this command to set the registration mode to control whether to enable dynamic VLAN creation/registration/canceling on the port. Use the **no** form of this command to restore the default setting.

**gvrp registration mode { normal | disabled }**

**no gvrp registration mode**

Parameter Description	Parameter	Description
	normal	Enables dynamic VLAN creation/registration/canceling on the port.
	disabled	Disables dynamic VLAN creation/registration/canceling on the port.

**Defaults** Dynamic VLAN creation/registration/canceling is enabled by default,

**Command mode** Interface configuration mode.

**Usage Guide** N/A

**Configuration** The following example sets the registration mode.

**Examples** Ruijie(config-if)# gvrp registration mode normal

Related	Command	Description
---------	---------	-------------

<b>Commands</b>		
	show gvrp configuration	Displays the GVRP configurations.

**Platform** N/A

**Description**

## 10.7 gvrp timer

Use this command to set the GVRP timer. Use the **no** form of this command to restore the default setting.

**gvrp timer** { **join** *timer\_value* | **leave** *timer\_value* | **leaveall** *timer\_value* }

**no gvrp timer**

<b>Parameter Description</b>	Parameter	Description
	join <i>timer_value</i>	Controls the maximum delay before sending the advertisement on the port. The actual sending interval is in the range of 0 to the maximum delay.
	leave <i>timer_value</i>	Controls the waiting time before removing the VLAN from the port with the Leave Message received. If the Join Message is received again within this time range, the port-VLAN relation still exists and the timer becomes invalid. If no Join Message is received on the port, the port status will be the Empty and removed from the VLAN member list.
	leave all <i>timer_value</i>	Controls the minimum interval of sending the LeaveAll Message on the port. If the LeaveAll Message is received before the timer expires, the timer re-counts. If the timer expires, send the LeaveAll Message on the port and also send this Message to the port, so that the Leave timer begins counting. The actual sending interval ranges from leaveall to leaveall+join.

**Defaults** Join timer: 200 milliseconds;  
Leave timer: 600 milliseconds;  
Leaveall timer: 10000 milliseconds.

**Command mode** Global configuration mode

**Usage Guide** Use the **show gvrp configuration** to display the configuration.  
Use the **no gvrp timer** command to restore **join**, **leave** and **leaveall timer** to default settings.

**Configuration** The following example configures the join timer.

**Examples** Ruijie(config)# gvrp timer join 200

Related Commands	Command	Description
	<b>show gvrp configuration</b>	Displays the GVRP configuration.

**Platform** N/A  
**Description**

## 10.8 l2protocol-tunnel gvrp

Use this command to enable global GVRP PDUs TUNNEL globally. Use the **no** form of this command to restore the default setting.

**l2protocol-tunnel gvrp**  
**no l2protocol-tunnel gvrp**

Parameter Description	Parameter	Description
	N/A	N/A

**Defaults** This function is disabled by default.

**Command mode** Global configuration mode

**Usage Guide** If you want to enable global GVRP PDUs TUNNEL, enable GVRP PDUs TUNNEL on the interface first.

**Configuration Examples** The following example enables GVRP PDUs TUNNEL globally.

```
Ruijie(config)# l2protocol-tunnel gvrp
Ruijie(config)# show l2protocol-tunnel gvrp

L2protocol-tunnel: Gvrp Disable
L2protocol-tunnel destination mac address:01d0.f800.0006
```

Related Commands	Command	Description
	N/A	N/A

**Platform** N/A  
**Description**

## 10.9 l2protocol-tunnel gvrp enable

Use this command to enable GVRP PDUs TUNNEL on the interface. Use this command to restore the default setting.

**l2protocol-tunnel gvrp enable**

**no l2protocol-tunnel gvrp enable**

Parameter Description	Parameter	Description
	N/A	N/A

**Defaults** This function is disabled by default.

**Command mode** Interface configuration mode

**Usage Guide** If you want to enable global GVRP PDUs TUNNEL, enable GVRP PDUs TUNNEL on the interface first.

**Configuration** The following example enables GVRP PDUs TUNNEL on the interface.

**Examples**

```
Ruijie(config-if-interface-id)# l2protocol-tunnel gvrp enable
Ruijie(config-if-interface-id)# show l2protocol-tunnel gvrp

L2protocol-tunnel: Gvrp Disable
L2protocol-tunnel destination mac address:01d0.f800.0006
GigabitEthernet 0/1 l2protocol-tunnel gvrp enable
```

Related Commands	Command	Description
	N/A	N/A

**Platform** N/A  
**Description**

## 10.10 l2protocol-tunnel gvrp tunnel-dmac

Use this command to configure the MAC address for transparent transmission in GVRP PDUs TUNNEL. Use the **no** form of this command to restore the default setting.

**l2protocol-tunnel gvrp tunnel-dmac mac-address**

**no l2protocol-tunnel gvrp tunnel-dmac**

Parameter Description	Parameter	Description

<i>mac-address</i>	The MAC address for transparent transmission in GVRP PDUs TUNNEL.
--------------------	---

**Defaults** The default is 01d0.f800.0006.

**Command mode** Global configuration mode

**Usage Guide** The available MAC address *f* ranges from 01d0.f800.0006 to 011a.a900.0006.

**Configuration Examples** The following example configures the MAC address for transparent transmission in GVRP PDUs TUNNEL.

```
Ruijie(config)# l2protocol-tunnel gvrp tunnel-dmac 011a.a900.0006
```

**Related Commands**

Command	Description
N/A	N/A

**Platform Description** N/A

## 10.11 show gvrp configuration

Use this command to display the GVRP configuration.

**show gvrp configuration**

**Parameter Description**

Parameter	Description
N/A	N/A

**Defaults** N/A

**Command mode** Privileged EXEC mode.

**Usage Guide** Use the **show gvrp configuration** to display the configuration.

**Configuration Examples** The following example displays GVRP configuration.

```
Global GVRP Configuration:
GVRP Feature:enabled
GVRP dynamic VLAN creation:enabled
Join Timers(ms):200
Leave Timers(ms):600
```



```
Leaveall Timers(ms):1000
```

```
Port based GVRP Configuration:
```

PORT	Applicant Status	Registration Mode
GigabitEthernet 0/2	normal	normal

Field	Description
GVRP Feature	Whether to enable GVRP
GVRP dynamic VLAN creation	Whether to enable dynamic VLAN creation
Join Timers	Join timer
Leave Timers	Leave timer
Leaveall Timers	Leaveall timer
PORT	Port
Applicant Status	Advertisement mode
Registration Mode	Registration mode

#### Related Commands

Command	Description
N/A	N/A

**Platform** N/A

**Description**

## 10.12 show gvrp statistics

Use this command to display the GVRP statistics of one interface or all interfaces.

**show gvrp statistics** { *interface-id* | **all** }

#### Parameter Description

Parameter	Description
<i>interface-id</i>	Interface id.

**Defaults** N/A

**Command mode** Privileged EXEC mode

**Usage Guide** Use the **show gvrp statistics** to display the statistics of one interface or all interfaces.

**Configuration Examples** Ruijie# show gvrp statistics gigabitethernet 1/1

```
Interface      GigabitEthernet 3/1
RecValidGvrpPdu      0
RecInvalidGvrpPdu    0
RecJoinEmpty      0
```

```

RecJoinIn      0
RecEmpty       0
RecLeaveEmpty   0
RecLeaveIn      0
RecLeaveAll     0
SentGvrpPdu    0
SentJoinEmpty  0
SentJoinIn     0
SentEmpty      0
SentLeaveEmpty  0
SentLeaveIn     0
SentLeaveAll    0
JoinIndicated  0
LeaveIndicated  0
JoinPropagated 0
LeavePropagated 0

```

Field	Description
RecValidGvrpPdu	Number of received valid GPDU packets.
RecInvalidGvrpPdu	Number of received unvalid GPDU packets.
RecJoinEmpty/ SentJoinEmpty	Number of received/sent JoinEmpty messages.
RecJoinIn/ SentJoinIn	Number of received/sent JoinIn messages.
RecEmpty/SentEmpty	Number of received/sent Empty messages.
RecLeaveEmpty/SentLeaveEmpty	Number of received/sent LeaveEmpty messages,
RecLeaveIn/ SentLeaveIn	Number of received/sent LeaveIn messages.
RecLeaveAll/SentLeaveAll	Number of received/sent LeaveAll messages.
SentGvrpPdu	Number of sent GPDU messages.
JoinIndicated/ LeaveIndicated	Number of Join/Leave service requests.
JoinPropagated / LeavePropagated	Number of Join/Leave topology update requests.

#### Related Commands

Command	Description
clear gvrp statistics	Clears the statistics of one interface or all interfaces.

**Platform** N/A

**Description**

## 10.13 show gvrp status

Use this command to display all dynamic VLAN ports generated by GVRP and the dynamic VLAN ports added to the static VLAN.

**show gvrp status**

Parameter Description	Parameter	Description
	N/A	N/A

**Defaults** N/A

**Command mode** Privileged EXEC mode.

**Usage Guide** Use the **show gvrp status** command to display the GVRP status.

**Configuration Examples** The following example displays the GVRP status.

```
Ruijie# show gvrp status
VLAN 1
Dynamic Ports:
DVLAN 2
Dynamic Ports:
```

Field	Description
VLAN	Static VLAN
DVLAN	Dynamic VLAN
Dynamic Ports	Dynamic ports.

Related Commands	Command	Description
	N/A	N/A

**Platform Description** N/A

## 10.14 show l2protocol-tunnel gvrp

Use this command to display GVRP PDUs TUNNEL configuration.

**show l2protocol-tunnel gvrp**

Parameter Description	Parameter	Description
	N/A	N/A

**Defaults** N/A

**Command** Privileged EXEC mode/Global configuration mode/Interface configuration mode  
**mode**

**Usage Guide** N/A

**Configuration** The following example displays GVRP PDUs TUNNEL configuration.

**Examples** Ruijie# show l2protocol-tunnel gvrp

```
L2protocol-tunnel: Gvrp Enable
```

```
L2protocol-tunnel destination mac address:011a.a900.0006
```

```
GigabitEthernet 0/1 l2protocol-tunnel gvrp enable
```

**Related  
Commands**

Command	Description
N/A	N/A

**Platform  
Description** N/A

## 11 LLDP Commands

### 11.1 { voice | voice-signaling } vlan

Use this command to configure the LLDP network policy. Use the **no** form of this command to delete the policy.

```
{ voice | voice-signaling } vlan { { vlan-id [ cos cvalue | dscp dvalue ] } | { dot1p [ cos cvalue | dscp dvalue ] } | none | untagged }
```

```
no { voice | voice-signaling } vlan
```

Parameter	Parameter	Description
Description	<b>voice</b>	Voice application
	<b>voice-signaling</b>	Voice-signaling application
	<i>vlan-id</i>	(Optional) VLAN ID of voice flow. The value ranges from 1 to 4094.
	<b>cos</b>	(Optional) Class of service
	<i>cvalue</i>	(Optional) CoS of the configured voice flow. The value ranges from 0 to 7, and the default value is 5.
	<b>dscp</b>	(Optional) Differentiated services code point
	<i>dvalue</i>	(Optional) DSCP value of the configured voice flow. The value ranges from 0 to 63. The default value is 46.
	<b>dot1p</b>	(Optional) 802.1p priority tagging. The tag frame includes user_priority and vlan id is 0.
	<b>none</b>	(Optional) The network policy is not advertised. VoIP determines the network policy based on its configuration.
	<b>untagged</b>	(Optional) The untag frame is sent in the voice vlan in VoIP. In this case, the value of vlan id and cos are ignored.

**Defaults** N/A

**Command Mode** LLDP network policy configuration mode

**Usage Guide** In the LLDP network policy configuration mode, configure the LLDP network policy.

Voice indicates the voice data type, and voice-signaling indicates the voice signal type.

If a device connects to an IP phone and the IP phone supports LLDP-MED, the network policy TLV can be configured to deliver policies to the IP phone, so that the IP phone changes the voice stream tag and QoS. Excluding the preceding policy, the following operations need to be performed on the device:

1. Enable the voice VLAN function and add the port connected to the IP phone to the voice VLAN in static mode.
2. Configure the port connected to the IP phone to a QoS trusted port. (It is recommended to use the

trusted DSCP mode.)

3. If 802.1X authentication is enabled on the port at the same time, a security channel needs to be configured to transmit packets from the voice VLAN.

If the IP phone does not support LLDP-MED, the voice VLAN function must be enabled. In addition, the MAC address of the IP phone needs to be added to the voice VLAN OUI list manually.

For details about how to configure the QoS trusted mode, see chapter "IP QoS." For details about how to configure the voice VLAN, see chapter "Voice VLAN." For details about how to configure the security channel, see chapter "ACL."

**Configuration Examples** The following example configures the LLDP network policy (profile-num is 1).

```
Ruijie#config
Ruijie(config)#lldp network-policy profile 1
Ruijie(config-lldp-network-policy)# voice vlan untagged
Ruijie(config-lldp-network-policy)# voice-signaling vlan 3 cos 4
Ruijie(config-lldp-network-policy)# voice-signaling vlan 3 dscp 6
```

**Related  
Commands**

Command	Description
<b>show lldp network-policy profile</b> [ <i>profile-num</i> ]	Displays the LLDP network policy.

**Platform  
Description**

N/A

## 11.2 civic-location

Use this command to configure a common LLDP address. Use the **no** form of this command to delete the address.

**civic-location** { **country** | **state** | **county** | **city** | **division** | **neighborhood** | **street-group** | **leading-street-dir** | **trailing-street-suffix** | **street-suffix** | **number** | **street-number-suffix** | **landmark** | **additional-location-information** | **name** | **postal-code** | **building** | **unit** | **floor** | **room** | **type-of-place** | **postal-community-name** | **post-office-box** | **additional-code** } *ca-word*

**no civic-location** { **country** | **state** | **county** | **city** | **division** | **neighborhood** | **street-group** | **leading-street-dir** | **trailing-street-suffix** | **street-suffix** | **number** | **street-number-suffix** | **landmark** | **additional-location-information** | **name** | **postal-code** | **building** | **unit** | **floor** | **room** | **type-of-place** | **postal-community-name** | **post-office-box** | **additional-code** } *ca-word*

**Parameter  
Description**

Parameter	Description
<b>country</b>	Country code, two bytes. For example, the country code of China is CH.
<b>state</b>	Address information, CA type 1
<b>county</b>	CA type 2

<b>city</b>	CA type 3
<b>division</b>	CA type 4
<b>neighborhood</b>	CA type 5
<b>street-group</b>	CA type 6
<b>leading-street-dir</b>	CA type 16
<b>trailing-street-suffix</b>	CA type 17
<b>street-suffix</b>	CA type 18
<b>number</b>	CA type 19
<b>street-number-suffix</b>	CA type 20
<b>landmark</b>	CA type 21
<b>additional-location-information</b>	CA type 22
<b>name</b>	CA type 23
<b>postal-code</b>	CA type 24
<b>building</b>	CA type 25
<b>unit</b>	CA type 26
<b>floor</b>	CA type 27
<b>room</b>	CA type 28
<b>type-of-place</b>	CA type 29
<b>postal-community-name</b>	CA type 30
<b>post-office-box</b>	CA type 31
<b>additional-code</b>	CA type 32
<i>ca-word</i>	Address information

**Defaults** N/A

**Command Mode** LLDP Civic address configuration mode

**Usage Guide** This command is used to configure a common LLDP address in LLDP Civic address configuration mode.

**Configuration Examples** The following example configures an LLDP Civic Address (ID: 1).

```
Ruijie#config
Ruijie(config)# lldp location civic-location identifier 1
Ruijie(config-lldp-civic)# country CH
Ruijie(config-lldp-civic)# city Fuzhou
```

Related Commands	Command	Description
	<b>show lldp location civic-location { identifier id   interface interface-name   static }</b>	Displays the information about an LLDP Civic address.

**Platform Description** N/A

## 11.3 clear lldp statistics

Use this command to clear LLDP statistics.

**clear lldp statistics** [ **interface** *interface-name* ]

Parameter	Parameter	Description
Description	<i>interface-name</i>	Interface name

**Defaults** N/A

**Command Mode** Privileged EXEC mode

**Usage Guide** **interface** parameter: clear the LLDP statistics of the specified interface

**Configuration Examples** The following example clears LLDP statistics of interface 1.

```
Ruijie# clear lldp statistics interface GigabitEthernet 0/1
Ruijie# show lldp statistics interface GigabitEthernet 0/1
Lldp statistics information of port [GigabitEthernet 0/1]
-----
The number of lldp frames transmitted : 0
The number of frames discarded      : 0
The number of error frames          : 0
The number of lldp frames received  : 0
The number of TLVs discarded        : 0
The number of TLVs unrecognized    : 0
The number of neighbor information aged out : 0
```

Related Commands	Command	Description
	N/A	N/A

**Platform Description** N/A

## 11.4 clear lldp table

Use this command to clear LLDP neighbor information.

**clear lldp table** [ **interface** *interface-name* ]

Parameter	Parameter	Description
Description	<i>interface-name</i>	Interface name

**Defaults** N/A



**Command** Privileged EXEC mode

**Mode**

**Usage Guide** If the **interface** parameter is specified, the LLDP neighbor information on the specified interface is cleared.

If the **interface** parameter is not specified, the LLDP neighbor information on all interfaces is cleared.

**Configuration** The following example clears the LLDP neighbor information on interface 1.

**Examples**

```
Ruijie# show lldp neighbors interface GigabitEthernet 0/1
Lldp statistics information of port [GigabitEthernet 0/1]
-----
The number of lldp frames transmitted : 0
The number of frames discarded      : 0
The number of error frames         : 0
The number of lldp frames received  : 0
The number of TLVs discarded       : 0
The number of TLVs unrecognized    : 0
The number of neighbor information aged out : 0
Ruijie# clear lldp table interface GigabitEthernet 0/1
Ruijie# show lldp neighbors interface GigabitEthernet 0/1
```

Related Commands	Command	Description
	N/A	N/A

**Platform** N/A

**Description**

## 11.5 device-type

Use this command to configure the device type. Use the **no** form of this command to restore the default setting.

**device-type** *device-type*

**no device-type**

Parameter Description	Parameter	Description
	<i>device-type</i>	Device type. The value ranges from 0 to 2. 0: The device type is DHCP Server. 1: The device type is switch. 2: The device type is LLDP MED terminal.

**Defaults**

**Command** LLDP Civic address configuration mode

**Mode**

**Usage Guide** This command is used to configure the device type in a common LLDP address in LLDP Civic address configuration mode.

**Configuration** The following example sets the device type to switch.

**Examples**

```
Ruijie#config
Ruijie(config)# lldp location civic-location identifier 1
Ruijie(config-lldp-civic)# device-type 1
```

**Related****Commands**

Command	Description
<b>show lldp location civic-location { identifier <i>id</i>   interface <i>interface-name</i>   static }</b>	Displays LLDP Civic Address information.

**Platform** N/A

**Description**

## 11.6 lldp compliance vendor

Use this command to enable detection of compatible neighbors.

**lldp compliance vendor**

**no lldp compliance vendor**

**Parameter****Description**

Parameter	Description
N/A	N/A

**Defaults** This function is disabled by default.

**Command** Global configuration mode

**Mode**

**Usage Guide** N/A

**Configuration** The following example enables detection of compatible neighbors.

**Examples**

```
Ruijie#configure terminal
Ruijie(config)# lldp compliance vendor
```

**Related****Commands**

Command	Description
N/A	N/A

**Platform** N/A

**Description**

## 11.7 lldp enable

Use this command to enable the LLDP globally or on the interface. Use **no** form of this command to disable this function.

**lldp enable**

**no lldp enable**

Parameter	Parameter	Description
Description	N/A	N/A

**Defaults** This function is enabled by default.

**Command Mode** Global (or interface) configuration mode

**Usage Guide** LLDP takes effect on an interface only when LLDP is enabled globally.

**Configuration Examples** The following example disables LLDP globally and on the interface.

```
Ruijie#config
Ruijie(config)#no lldp enable
Ruijie(config)#interface gigabitethernet 0/1
Ruijie(config-if)# no lldp enable
```

Related Commands	Command	Description
	<b>show lldp status</b>	Displays LLDP status information.

**Platform Description** N/A

## 11.8 lldp encapsulation snap

Use this command to configure the encapsulation format of LLDP packets. Use the **no** form of this command to restore the default setting.

**lldp encapsulation snap**

**no lldp encapsulation snap**

Parameter	Parameter	Description
Description	N/A	N/A

**Defaults** By default, Ethernet II encapsulation format is used.

**Command** Interface configuration mode.

**Mode****Usage Guide**

To guarantee the normal communication between local device and neighbor device, the same LLDP packet encapsulation format must be used.

**Configuration****Examples**

```
The following example sets LLDP packet encapsulation format to
SNAP.
Ruijie#config
Ruijie(config)#interface gigabitethernet 0/1
Ruijie(config-if)#lldp encapsulation snap
```

**Related****Commands**

Command	Description
<b>show lldp status</b>	Displays LLDP status information.

**Platform**

N/A

**Description**

## 11.9 lldp error-detect

Use this command to configure the LLDP error detection, including the detection of VLAN configurations on both sides of the link, port state detection, port aggregation configuration detection, MTU configuration detection and loop detection. If any error is detected by LLDP, warning message will be printed to notify the administrator. Use the **no** form of this command to disable this function.

**lldp error-detect****no lldp error-detect****Parameter****Description**

Parameter	Description
N/A	N/A

**Defaults**

This function is enabled by default.

**Command****Mode**

Interface configuration mode.

**Usage Guide**

LLDP error detection relies on the specific TLV in the LLDP packets exchanged between devices on both sides of the link. To ensure normal functioning of the detection feature, correct TLVs must be advertised.

**Configuration****Examples**

The following example configures LLDP error detection.

```
Ruijie#config
Ruijie(config)#interface gigabitethernet 0/1
Ruijie(config-if)#lldp error-detect
```

**Related**

Command	Description
---------	-------------

<b>Commands</b>	<b>show interface status</b>	Displays LLDP status information.
-----------------	------------------------------	-----------------------------------

**Platform** N/A

**Description**

## 11.10 lldp fast-count

When a new neighbor is detected or when LLDP operating mode changes from shutdown or Rx to TxRx or Tx, to allow the neighbor device to quickly study the information about this device, the fast sending mechanism will be initiated. The fast sending mechanism shortens the LLDPDU sending interval to 1 second and continuously transmits a certain number of LLDPDUs before restoring to the normal transmit interval. Use the **no** form of this command to restore the default setting.

**lldp fast-count** *value*

**no lldp fast-count**

Parameter	Parameter	Description
<b>Description</b>	<i>value</i>	The number of fast sent LLDP packets, in the range from 1 to 10.

**Defaults** The default is 3.

**Command Mode** Global configuration mode.

**Usage Guide** N/A

**Configuration Examples** The following example sets the number of fast sent LLDP packets to 5.

```
Ruijie#config
Ruijie (config)#lldp fast-count 5
```

Related	Command	Description
<b>Commands</b>	<b>show interface status</b>	Displays LLDP status information.

**Platform** N/A

**Description**

## 11.11 lldp hold-multiplier

Use this command to set the TTL multiplier. Use the **no** form of this command to restore to default setting.

**lldp hold-multiplier** *value*

**no lldp hold-multiplier**

Parameter	Parameter	Description
-----------	-----------	-------------

Description	value	TTL multiplier, in the range from 2 to 10.
Defaults	The default is 4.	
Command Mode	Global configuration mode.	
Usage Guide	The value of Time To Live (TLV) in LLDP packet = TTL multiplier × LLDP packet transmit interval + 1. Therefore, the TTL of local device information on the neighbor device can be controlled by adjusting TTL multiplier.	
Configuration Examples	The following example sets TTL multiplier to 5. Ruijie#config Ruijie(config)#lldp hold-multiplier 5	
Related Commands	Command	Description
	show lldp status	Displays LLDP status information.
Platform Description	N/A	

## 11.12 lldp location civic-location identifier

Use this command to create a common address of a device connected to the network in LLDP Civic Address configuration mode. Use the **no** form of this command to delete the address.

**lldp location civic-location identifier** *id*  
**no lldp location civic-location identifier** *id*

<b>Parameter Description</b>	<table><tr><th>Parameter</th><th>Description</th></tr><tr><td><i>id</i></td><td>ID of a common address of a network device, in the range from 1 to 1024.</td></tr></table>	Parameter	Description	<i>id</i>	ID of a common address of a network device, in the range from 1 to 1024.
Parameter	Description				
<i>id</i>	ID of a common address of a network device, in the range from 1 to 1024.				
<b>Defaults</b>	N/A				
<b>Command Mode</b>	Global configuration mode				
<b>Usage Guide</b>	This command can be used to enter the LLDP Civic Address configuration mode.				
<b>Configuration Examples</b>	The following example creates the Civic Address information in LLDP MED-TLV as follows: set <i>id</i> to 1. <pre>Ruijie#config Ruijie(config)#lldp location civic-location identifier 1</pre>				

```
Ruijie(config-lldp-civic) #
```

Related Commands	Command	Description
	<b>show lldp location civic-location</b> { <b>identifier</b> <i>id</i>   <b>interface</b> <i>interface-name</i>   <b>static</b> }	Displays the LLDP Civic Address information.

**Platform** N/A

**Description**

## 11.13 lldp location elin identifier

Use this command to set an emergency number encapsulated in a Location Identification TLV. Use the **no** form of this command to delete the number.

**lldp location elin identifier** *id* **elin-location** *tel-number*

**no lldp location elin identifier** *id*

Parameter Description	Parameter	Description
	<i>id</i>	ID of an emergency number, in the range from 1 to 1024.
	<i>tel-number</i>	Emergency number, in the range from 10 to 25 bytes.

**Defaults** N/A

**Command Mode** Global configuration mode

**Usage Guide** This command is used to configure an emergency number.

**Configuration Examples** The following example sets an emergency number.

```
Ruijie#config
Ruijie(config)#lldp location elin identifier 1 elin-location 085283671111
```

Related Commands	Command	Description
	<b>show lldp location elin-location</b> { <b>identifier</b> <i>id</i>   <b>interface</b> <i>interface-name</i>   <b>static</b> }	Displays an LLDP emergency number.

**Platform** N/A

**Description**

## 11.14 lldp management-address-tlv

Use this command to configure the management address advertised in LLDP packets. Use the **no** form of this command to disable the advertisement of management address.

**lldp management-address-tlv** [ *ip-address* ]

**no lldp management-address-tlv**

Parameter	Parameter	Description
Description	<i>ip-address</i>	The management address advertised in LLDP packets.

**Defaults** N/A

**Command Mode** Interface configuration mode.

**Usage Guide** By default, the management address is advertised in LLDP packets, and is the IPv4 address of the lowest-ID VLAN carried on the port. If IPv4 address is not configured for this VLAN, the next lowest-ID VLAN carried on the port will be tried until the IPv4 address is obtained.

If the IPv4 address is still not found, the IPv6 address of the lowest-ID VLAN carried on the port will be tried.

If the IPv6 address is still not found, the MAC address of the device will be advertised as the management address.

**Configuration Examples** The following example configures the management address advertised in LLDP packets to 192.168.1.1.

```
Ruijie#config
Ruijie(config)#interface gigabitethernet 0/1
Ruijie(config-if)#lldp management-address-tlv 192.168.1.1
```

Related Commands	Command	Description
	<b>show lldp local-information</b>	Displays LLDP local information

**Platform Description** N/A

## 11.15 lldp mode

Use this command to configure the LLDP operating mode. Use **no** form of this command to restore the default setting.

**lldp mode { rx | tx | txrx }**

**no lldp mode**

Parameter	Parameter	Description
Description	<b>rx</b>	Only sends LLDPDUs.
	<b>tx</b>	Only receives LLDPDUs.
	<b>txrx</b>	Sends and receives LLDPDUs.



**Defaults** The default is **txrx**.

**Command Mode** Interface configuration mode

**Usage Guide** Disable LLDP operating mode on the interface. The interface won't send and receive LLDP packets. The precondition for enabling LLDP on the interface is that LLDP has been enabled globally and LLDP operates in tx, rx or txrx mode.

**Configuration Examples** The following example sets LLDP operating mode to tx on the interface.

```
Ruijie#config
Ruijie(config)#interface gigabitethernet 0/1
Ruijie(config-if)#lldp mode tx
```

Related Commands	Command	Description
	<b>show lldp status</b>	Displays LLDP status information

**Platform** N/A  
**Description**

## 11.16 lldp network-policy profile

Use this command to create an LLDP network policy and enter the LLDP network policy configuration mode. Use the no form of this command to delete the policy.

**lldp network-policy profile** *profile-num*

**no lldp network-policy profile** *profile-num*

Parameter Description	Parameter	Description
	<i>profile-num</i>	ID of an LLDP network policy, in the range from 1 to 1024.

**Defaults** N/A

**Command Mode** Global configuration mode

**Usage Guide** This command is used to enter the LLDP network policy configuration mode. When this command is run, the policy ID must be specified.  
In LLDP network-policy mode, the { **voice** | **voice-signaling** } **vlan** command can be used to configure the specific network policy.

**Configuration Examples** The following example creates an LLDP network policy whose ID is 1.

```
Ruijie#config
Ruijie(config)#lldp network-policy profile 1
```

```
Ruijie(config-lldp-network-policy) #
```

Related Commands	Command	Description
	<b>show lldp network-policy profile</b> [ <i>profile-num</i> ]	Displays an LLDP network policy.

**Platform** N/A  
**Description**

## 11.17 lldp notification remote-change enable

Use this command to configure LLDP Trap. Use the **no** form of this command to restore the default setting.

**lldp notification remote-change enable**

**no lldp notification remote-change enable**

Parameter Description	Parameter	Description
	N/A	N/A

**Defaults** This function is disabled by default.

**Command Mode** Interface configuration mode.

**Usage Guide** By configuring LLDP Trap, the LLDP information of local device (such as information about the detection of new neighbor or the fault on the communication link) can be sent to the network management server. The administrator can monitor the network operation status according to such information.

**Configuration Examples** The following example configures LLDP Trap.

```
Ruijie#config
Ruijie(config)#interface gigabitethernet 0/1
Ruijie(config-if)#lldp notification remote-change enable
```

Related Commands	Command	Description
	<b>show lldp status</b>	Displays LLDP status information.

**Platform** N/A  
**Description**

## 11.18 lldp timer notification-interval

Use this command to set an interval of sending LLDP Traps. Use the **no** form of this command to

restore the default setting.

**lldp timer notification-interval** *seconds*

**no lldp timer notification-interval**

Parameter	Parameter	Description
Description	<i>seconds</i>	Interval of sending LLDP Traps, in the range from 5 to 3600 in the unit of seconds.

**Defaults** The default is 5.

**Command Mode** Global configuration mode.

**Usage Guide** To prevent excessive LLDP traps from being sent, you can set an interval of sending LLDP Traps. If LLDP information change is detected during this interval, traps will be sent to the network management server.

**Configuration Examples** The following example sets the interval of sending LLDP Traps to 10 seconds.

```
Ruijie#config
Ruijie(config)#lldp timer notification-interval 10
```

Related Commands	Command	Description
	<b>show lldp status</b>	Displays LLDP status information.

**Platform Description** N/A

## 11.19 lldp timer reinit-delay

Use this command to set port initialization delay. Use the **no** form of this command to restore the default setting.

**lldp timer reinit-delay** *seconds*

**no lldp timer reinit-delay**

Parameter	Parameter	Description
Description	<i>seconds</i>	Port initialization delay, in the range from 1 to 10 in the unit of seconds.

**Defaults** The default is 2.

**Command Mode** Global configuration mode.

**Usage Guide** To prevent LLDP from being initialized too frequently due to the frequent operating mode change, you can configure port initialization delay.

**Configuration Examples** The following example sets LLDP port initialization delay to 3 seconds.

```
Ruijie#config
Ruijie(config)#lldp timer reinit-delay 3
```

Related Commands	Command	Description
	show lldp status	Displays LLDP status information.

**Platform** N/A  
**Description**

## 11.20 lldp timer tx-delay

Use this command to set LLDP packet transmission delay. Use the **no** form of this command to restore the default setting.

**lldp timer tx-delay** *seconds*

**no lldp timer tx-delay**

Parameter Description	Parameter	Description
	<i>seconds</i>	LLDP packet transmission delay, in the range from 1 to 8192 in the unit of seconds.

**Defaults** The default is 2.

**Command Mode** Global configuration mode.

**Usage Guide** An LLDP-enabled port will send LLDP packets when the local device information changes. To avoid frequently sending LLDP packets due to the frequent local device information change, configure the LLDP packet transmission delay to control the frequent transmission of LLDP packets.

**Configuration Examples** The following example sets LLDPDU transmission delay to 3 seconds.

```
Ruijie#config
Ruijie(config)#lldp timer tx-delay 3
```

Related Commands	Command	Description
	show lldp status	Displays LLDP status information.

**Platform** N/A

**Description**

## 11.21 lldp timer tx-interval

Use this command to set the interval of sending the LLDP packets. Use **no** form of this command to restore the default setting.

**lldp timer tx-interval** *seconds*

**no lldp timer tx-interval**

Parameter	Parameter	Description
Description	<i>seconds</i>	Interval of sending the LLDP packets, in the range from 5 to 32768 in the unit of seconds.

**Defaults** The default is 30.

**Command Mode** Global configuration mode.

**Usage Guide** N/A

**Configuration Examples** The following example sets the interval of sending the LLDP packets to 10 seconds.

```
Ruijie#config
Ruijie(config)#lldp timer tx-interval 10
```

Related Commands	Command	Description
	<b>show lldp status</b>	Displays LLDP status information.

**Platform** N/A

**Description**

## 11.22 lldp tlv-enable

Use this command to configure the types of advertisable TLVs. Use the **no** form of this command to restore the default setting.

**lldp tlv-enable** { **basic-tlv** { **all** | **port-description** | **system-capability** | **system-description** | **system-name** } | **dot1-tlv** { **all** | **port-vlan-id** | **protocol-vlan-id** [ *vlan-id* ] | **vlan-name** [ *vlan-id* ] } | **dot3-tlv** { **all** | **link-aggregation** | **mac-physic** | **max-frame-size** | **power** } | **med-tlv** { **all** | **capability** | **inventory** | **location** { **civic-location** | **elin** } | **identifier** *id* | **network-policy profile** [ *profile-num* ] | **power-over-ethernet** } }

```
no lldp tlv-enable { basic-tlv { all | port-description | system-capability | system-description |
system-name } | dot1-tlv { all | port-vlan-id | protocol-vlan-id | vlan-name } | dot3-tlv { all |
link-aggregation | mac-physic | max-frame-size | power } | med-tlv { all | capability | inventory |
location { civic-location | elin } identifier id | network-policy profile [ profile-num ] |
power-over-ethernet } }
```

Parameter	Parameter	Description
Description	<b>basic-tlv</b>	Basic management TLV
	<b>port-description</b>	Port Description TLV
	<b>system-capability</b>	System Capabilities TLV
	<b>system-description</b>	System Description TLV
	<b>system-name</b>	System Name TLV
	<b>dot1-tlv</b>	802.1 organizationally specific TLV
	<b>port-vlan-id</b>	Port VLAN ID TLV
	<b>protocol-vlan-id</b>	Port And Protocol VLAN ID TLV
	<i>vlan-id</i>	VLAN ID
	<i>vlan-name</i>	VLAN Name TLV
	<i>vlan-id</i>	VLAN ID corresponding to the specified VLAN name
	<b>dot3-tlv</b>	802.3 organizationally specific TLV
	<b>link-aggregation</b>	Link Aggregation TLV
	<b>mac-physic</b>	MAC/PHY Configuration/Status TLV
	<b>max-frame-size</b>	Maximum Frame Size TLV
	<b>power</b>	Power Via MDI TLV
	<b>med-tlv</b>	LLDP MED TLV
	<b>capability</b>	LLDP-MED Capabilities TLV
	<b>inventory</b>	Inventory management TLVs, including hardware revision TLVs, firmware revision TLVs, software revision TLVs, serial number TLVs, manufacturer name TLVs, model name TLVs, and asset ID TLVs.
	<b>location</b>	Location Identification TLV
	<b>civic-location</b>	Common address information about the network device in location identification TLVs.
	<b>elin</b>	Encapsulated emergency number
	<i>id</i>	Policy ID
	<b>network-policy</b>	Network Policy TLV
	<i>profile-num</i>	ID of network policy
	<b>power-over-ethernet</b>	Extended Power-via-MDI TLV

**Defaults** By default, all TLVs other than Location Identification TLV can be advertised on the interface for products other than S12000. For the S12000 product series, only basic TLVs and IEEE 802.1 TLVs are advertised. To advertise IEEE 802.3 TLVs and LLDP-MED TLVs, run the **lldp tlv-enable** command.

**Command** Interface configuration mode

**Mode**

**Usage Guide** During configuration of basic management TLVs, IEEE 802.1 TLVs, and IEEE 802.3 TLVs, if the **all** parameter is specified, all optional TLVs of the types are advertised.

During configuration of LLDP-MED TLVs, if the **all** parameter is specified, all LLDP-MED TLVs except Location Identification TLVs are advertised.

When configuring LLDP-MED Capability TLVs, configure LLDP-MED MAC/PHY TLVs first. When canceling LLDP-MED MAC/PHY TLVs, cancel LLDP-MED Capability TLVs first.

When configuring LLDP-MED TLVs, configure LLDP-MED Capability TLVs first so that LLDP-MED TLVs of other types can be configured.

To cancel LLDP-MED TLVs, cancel LLDP-MED TLVs of other types first so that LLDP-MED Capability TLVs can be canceled.

**Configuration** The following example configures all IEEE 802.1 TLVs to be advertised.

**Examples**

```
Ruijie# configure terminal
Ruijie(config)#interface gigabitethernet 0/1
Ruijie(config-if-GigabitEthernet 0/1)#lldp tlv-enable dot1-tlv all
```

The following example applies LLDP network policy 1 on the 0/1 interface.

```
Ruijie#config
Ruijie(config)#interface gigabitethernet 0/1
Ruijie(config-if-GigabitEthernet 0/1)#lldp tlv-enable med-tlv network-policy
profile 1
```

The following example applies the LLDP Civic Address (ID: 1) configuration on the 0/1 interface.

```
Ruijie#config
Ruijie(config)#interface gigabitethernet 0/1
Ruijie(config-if-GigabitEthernet 0/1)#lldp tlv-enable med-tlv location
civic-location identifier 1
```

The following example applies the emergency number (ID: 1) on the 0/1 interface.

```
Ruijie#config
Ruijie(config)#interface gigabitethernet 0/1
Ruijie(config-if-GigabitEthernet 0/1)#lldp location elin identifier 1
```

**Related****Commands**

Command	Description
<b>show lldp tlv-config interface</b>	Displays the attributes of advertisable TLVs

**Platform**

N/A

**Description**

## 11.23 show lldp local-information

Use this command to display the LLDP information of local device. The information will be

encapsulated in the TLVs and sent to the neighbor device.

**show lldp local-information** [ **global** | **interface** *interface-name* ]

Parameter	Parameter	Description
Description	<i>interface-name</i>	Interface name

**Defaults** N/A

**Command Mode** Privileged EXEC mode

**Usage Guide**

- **global** parameter: display the global LLDP information to be sent.
- **Interface** parameter: displays the LLDP information to be sent out the interface specified.
- No parameter: display all LLDP information, including global and interface-based LLDP information.

**Configuration Examples** The following example displays the device information to be sent to neighbor device.

```
Ruijie# show lldp local-information
Global LLDP local-information:
  Chassis ID type      : MAC address
  Chassis id          : 00d0.f822.33aa
  System name         : System name
  System description   : System description
  System capabilities supported : Repeater, Bridge, Router
  System capabilities enabled  : Repeater, Bridge, Router

  LLDP-MED capabilities   : LLDP-MED Capabilities, Network Policy, Location
  Identification, Extended Power via MDI-PD, Inventory
  Device class          : Network Connectivity
  HardwareRev           : 1.0
  FirmwareRev           :
  SoftwareRev           : RGOS 10.4(3) Release(94786)
  SerialNum             : 1234942570001
  Manufacturer name     : Manufacturer name
  Asset tracking identifier :

-----
Lldp local-information of port [GigabitEthernet 0/1]
-----

Port ID type          : Interface name
Port id              : GigabitEthernet 0/1
Port description      :
```



```

Management address subtype : 802 mac address
Management address       : 00d0.f822.33aa
Interface numbering subtype :
Interface number         : 0
Object identifier        :

802.1 organizationally information
Port VLAN ID            : 1
Port and protocol VLAN ID (PPVID) : 1
  PPVID Supported       : YES
  PPVID Enabled         : NO
VLAN name of VLAN 1     : VLAN0001
Protocol Identity       :

802.3 organizationally information
Auto-negotiation supported : YES
Auto-negotiation enabled   : YES
PMD auto-negotiation advertised : 100BASE-TX full duplex mode, 100BASE-TX half
duplex mode
Operational MAU type      :
PoE support               : NO
Link aggregation supported : YES
Link aggregation enabled   : NO
Aggregation port ID       : 0
Maximum frame Size        : 1500

LLDP-MED organizationally information
Power-via-MDI device type : PD
Power-via-MDI power source : Local
Power-via-MDI power priority :
Power-via-MDI power value  :
Model name                 : Model name

```

**show lldp local-information** command output description:

Field	Description
Chassis ID type	Chassis ID type for identifying the Chassis ID field
Chassis ID	Used to identify the device, and is generally represented with MAC address
System name	Name of the sending device
System description	Description of the sending device, including hardware/software version, operating system and etc.

System capabilities supported	Capabilities supported by the system
System capabilities enabled	Capabilities currently enabled by the system
LLDP-MED capabilities	LLDP-MED capabilities supported by the system
Device class	<p>MED device class, which is divided into 2 categories: network connectivity device and terminal device.</p> <p>Network connectivity device</p> <p>Class I: normal terminal device</p> <p>Class II: media terminal device; besides Class I capabilities, it also supports media streams.</p> <p>Class III: communication terminal device; it supports all the capabilities of Class I and Class II and IP communication.</p>
HardwareRev	Hardware version
FirmwareRev	Firmware version
SoftwareRev	Software version
SerialNum	Serial number
Manufacturer name	Device manufacturer
Asset tracking identifier	Asset tracking ID
Port ID type	Port ID type
Port ID	Port ID
Port description	Port description
Management address subtype	Management address type
Management address	Management address
Interface numbering subtype	Type of the interface identified by the management address
Interface number	ID of the interface identified by the management address
Object identifier	ID of the object identified by the management address
Port VLAN ID	Port VLAN ID
Port and protocol VLAN ID	Port and Protocol VLAN ID
PPVID Supported	Indicates whether port and protocol VLAN is supported
PPVID Enabled	Indicates whether port and protocol VLAN is enabled
VLAN name of VLAN 1	Name of VLAN 1
Protocol Identity	Protocol identifier
Auto-negotiation supported	Indicates whether auto-negotiation is supported
Auto-negotiation enabled	Indicates whether auto-negotiation is enabled
PMD auto-negotiation advertised	Auto-negotiation advertising capability of the port
Operational MAU type	Speed and duplex state of the port
PoE support	Indicates whether POE is supported
Link aggregation supported	Indicates whether link aggregation is supported
Link aggregation enabled	Indicates whether link aggregation is enabled
Aggregation port ID	ID of the link aggregation port
Maximum frame Size	Maximum frame size supported by the port

Power-via-MDI device type	Device type, including: PSE (power sourcing equipment) PD (powered device)
Power-via-MDI power source	Power source type
Power-via-MDI power priority	Power supply priority
Power-via-MDI power value	Available power on port
Model name	Name of model

Related Commands	Command	Description
	N/A	N/A

**Platform** N/A  
**Description**

## 11.24 show lldp location

Use this command to display the common LLDP address or emergency number of the local device.

**show lldp location** { **civic-location** | **elin** } { **identifier** *id* | **interface** *interface-name* | **static** }

Parameter Description	Parameter	Description
	<b>civic-location</b>	Encapsulates a common address of a network device.
	<b>elin</b>	Encapsulates an emergency number.
	<b>identifier</b>	Displays one address or emergency number configured.
	<i>id</i>	Policy ID of configured information
	<b>interface</b>	Displays the address or emergency number on an interface.
	<i>interface-name</i>	Interface name
	<b>static</b>	Displays all addresses or emergency numbers configured.

**Defaults** N/A

**Command Mode** Privileged EXEC mode

**Usage Guide** If the policy ID is specified, the specified address or emergency number is displayed.  
If the interface name is specified, the address or emergency number configured on the interface is displayed.  
If no parameter is specified, all addresses or emergency numbers are displayed.

**Configuration Examples** The following example displays all addresses.

```
Ruijie# show lldp location civic-location static
LLDP Civic location information
-----
```

```

Identifier      : testt
County         : china
City Division   : 22
Leading street direction : 44
Street number   : 68
Landmark       : 233
Name           : liuy
Building       : 19bui
Floor          : 1
Room           : 33
City           : fuzhou
Country        : 86
Additional location : aaa
Ports          : Gi0/1
-----
Identifier      : tee
-----

```

The following example displays all emergency numbers.

```

Ruijie# show lldp location elin-location static
Elin location information
-----
Identifier : t
Elin      : iiiiixixixi
Ports     : Gi1/0/3
-----

```

Related	Command	Description
Commands	N/A	N/A

**Platform** N/A  
**Description**

## 11.25 show lldp neighbors

Use this command to display the LLDP information about a neighboring device.

**show lldp neighbors** [ **interface** *interface-name* ] [ **detail** ]

Parameter	Parameter	Description
<b>Description</b>	<i>interface-name</i>	Interface name
	<b>detail</b>	All information about a neighboring device

**Defaults** N/A

**Command** Privileged EXEC mode

**Mode**

**Usage Guide** If the **detail** parameter is not specified, the brief information about a neighboring device is displayed.  
If the **detail** parameter is specified, the detailed information about a neighboring device is displayed.  
If the **interface** parameter is specified, the neighboring device information received on the specified interface is displayed.

**Configuration Examples** The following example displays the neighboring device information received on all ports.

```
Ruijie# show lldp neighbors detail
Lldp neighbor-information of port [GigabitEthernet 0/1]
Neighbor index      : 1
Device type         : LLDP Device
Update time         : 1hour 53minutes 30seconds
Aging time          : 5seconds

Chassis ID type      : MAC address
Chassis id           : 00d0.f822.33cd
System name          : System name
System description   : System description
System capabilities supported : Repeater, Bridge, Router
System capabilities enabled : Repeater, Bridge, Router

Management address subtype : 802 mac address
Management address       : 00d0.f822.33cd
Interface numbering subtype :
Interface number          : 0
Object identifier         :

LLDP-MED capabilities    :
Device class              :
HardwareRev                :
FirmwareRev                :
SoftwareRev                :
SerialNum                  :
Manufacturer name          :
Asset tracking identifier   :

Port ID type              : Interface name
Port id                    : GigabitEthernet 0/1
Port description           :
```

```

802.1 organizationally information
Port VLAN ID      : 1
Port and protocol VLAN ID (PPVID) : 1
  PPVID Supported   : YES
  PPVID Enabled     : NO
VLAN name of VLAN 1 : VLAN0001
Protocol Identity   :
802.3 organizationally information
Auto-negotiation supported : YES
Auto-negotiation enabled   : YES
PMD auto-negotiation advertised : 1000BASE-T full duplex mode, 100BASE-TX full duplex mode, 100BASE-TX half duplex mode, 10BASE-T full duplex mode, 10BASE-T half duplex mode
Operational MAU type      : speed(1000)/duplex(Full)
PoE support               : NO
Link aggregation supported : YES
Link aggregation enabled   : NO
Aggregation port ID       : 0
Maximum frame Size        : 1500
LLDP-MED organizationally information
Power-via-MDI device type :
Power-via-MDI power source :
Power-via-MDI power priority :
Power-via-MDI power value :

```

Description of fields:

Field	Description
Neighbor index	Neighbor index
Device type	Type of neighboring device
Update time	Latest update time of neighbor information
Aging time	Aging time of a neighbor, namely the time after which a neighbor is aged and deleted
Chassis ID type	Chassis ID type
Chassis ID	Used to identify a device. Usually, a MAC address is used.
System name	Device name
System description	Device description, including hardware/software version and operating system
System capabilities supported	Functions supported by the system
System capabilities enabled	Functions enabled by the system
Management address subtype	Type of management address
Management address	Management address
Interface numbering subtype	Interface type of management address
Interface number	Interface ID of management address

Object identifier	Object ID of management address
Device class	<p>MED device type: network connectivity device and terminal device</p> <p>Network connectivity device:</p> <p>Class I: general terminal device</p> <p>Class II: media terminal device, including capabilities of Class I and supporting media stream</p> <p>Class III: communication terminal device, including capabilities of Class I and Class II and supporting IP communication</p>
HardwareRev	Hardware version
FirmwareRev	Firmware version
SoftwareRev	Software version
SerialNum	Serial number
Manufacturer name	Manufacturer name
Asset tracking identifier	Asset ID
Port ID type	Port ID type
Port ID	Port ID
Port description	Port description
Port VLAN ID	VLAN ID of a port
Port and protocol VLAN ID	Port and protocol VLAN ID
PPVID Supported	Whether port and protocol VLAN is supported
PPVID Enabled	Whether port and protocol VLAN is enabled
VLAN name of VLAN 1	VLAN 1 name
Protocol Identity	Protocol ID
Auto-negotiation supported	Whether auto-negotiation is supported
Auto-negotiation enabled	Whether auto-negotiation is enabled
PMD auto-negotiation advertised	Port auto-negotiation advertisement capability
Operational MAU type	Rate and duplex status of port auto-negotiation
PoE support	Whether POE is supported
Link aggregation supported	Whether link aggregation is supported
Link aggregation enabled	Whether link aggregation is enabled
Aggregation port ID	ID of link aggregation port
Maximum frame Size	Maximum frame length supported by a port
Power-via-MDI device type	<p>Device type, including:</p> <ul style="list-style-type: none"> <li>● PSE</li> <li>● PD</li> </ul>
Power-via-MDI power source	Power type
Power-via-MDI power priority	Power supply priority
Power-via-MDI power value	Power value of a port where power is supplied

## Related

Command	Description
---------	-------------

Commands	N/A	N/A
----------	-----	-----

Platform N/A

Description

## 11.26 show lldp network-policy profile

Use this command to display the information about an LLDP network policy.

**show lldp network-policy** { **profile** [ *profile-num* ] | **interface** *interface-name* }

Parameter	Parameter	Description
Description	<i>profile-num</i>	ID of a network policy, in the range from 1 to 1024.
	<i>interface-name</i>	Interface name

Defaults N/A

Command Privileged EXEC mode  
Mode

Usage Guide If *profile-num* is specified, the information about the specified network policy is displayed.  
If no parameter is specified, the information about all network policies is displayed.

Configuration Examples The following example displays the information about a network policy.

```
Ruijie#  
show lldp network-policy profile  
network-policy information:  
-----  
Network Policy Profile 1  
  voice vlan 2 cos 4 dscp 6  
  voice-signaling vlan 2000 cos 4 dscp 6
```

Related	Command	Description
Commands	N/A	N/A

Platform N/A

Description

## 11.27 show lldp statistics

The following example displays LLDP statistics.

**show lldp statistics** [ **global** | **interface** *interface-name* ]

Parameter	Parameter	Description
Description	<i>interface-name</i>	Interface name



**Defaults** N/A

**Command Mode** Privileged EXEC mode

**Usage Guide**

- **global** parameter: display the global LLDP statistics.
- **Interface** parameter: display the LLDP statistics of the specified interface.

**Configuration Examples** The following example displays all LLDP statistics.

```
Ruijie# show lldp statistics
lldp statistics global Information:
Neighbor information last changed time : 1hour 52minute 22second
The number of neighbor information inserted : 2
The number of neighbor information deleted : 0
The number of neighbor information dropped : 0
The number of neighbor information age out : 1

-----
Lldp statistics information of port [GigabitEthernet 0/1]
-----

The number of lldp frames transmitted : 26
The number of frames discarded : 0
The number of error frames : 0
The number of lldp frames received : 12
The number of TLVs discarded : 0
The number of TLVs unrecognized : 0
The number of neighbor information aged out : 0
```

**show lldp statistics** command output description:

Field	Description
Neighbor information last change time	Time the neighbor information is latest updated
The number of neighbor information inserted	Number of times of adding neighbor information
The number of neighbor information deleted	Number of times of removing neighbor information
The number of neighbor information dropped	Number of times of dropping neighbor information
The number of neighbor information aged out	Number of the neighbor information entries that have aged out
The number of lldp frames transmitted	Total number of the LLDPDUs transmitted

The number of frames discarded	Total number of the LLDPDUs discarded
The number of error frames	Total number of the LLDP error frames received
The number of lldp frames received	Total number of the LLDPDUs received
The number of TLVs discarded	Total number of the LLDP TLVs dropped
The number of TLVs unrecognized	Total number of the LLDP TLVs that cannot be recognized
The number of neighbor information aged out	Number of the neighbor information entries that have aged out

Related Commands	Command	Description
	N/A	N/A

**Platform** N/A  
**Description**

## 11.28 show lldp status

Use this command to display LLDP status information.

**show lldp status** [ **interface** *interface-name* ]

Parameter Description	Parameter	Description
	<i>interface-name</i>	Interface name

**Defaults** N/A

**Command Mode** Privileged EXEC mode

**Usage Guide** **interface** parameter: display the LLDP status information of the specified interface.

**Configuration Examples** The following example displays LLDP status information of all ports.

```
Ruijie# show lldp status
Global status of LLDP      : Enable
Neighbor information last changed time : 1hour 52minute 22second
Transmit interval         : 30s
Hold multiplier            : 4
Reinit delay               : 2s
Transmit delay             : 2s
Notification interval      : 5s
Fast start counts          : 3
-----
Port [GigabitEthernet 0/1]
```

```

-----
Port status of LLDP      : Enable
Port state               : UP
Port encapsulation      : Ethernet II
Operational mode        : RxAndTx
Notification enable     : NO
Error detect enable     : YES
Number of neighbors     : 1
Number of MED neighbors  : 0

```

**show lldp status** command output description:

Field	Description
Global status of LLDP	Whether LLDP is globally enabled
Neighbor information last changed time	Time the neighbor information is latest updated
Transmit interval	LLDPDU transmit interval
Hold multiplier	TTL multiplier
Reinit delay	Port re-initialization delay
Transmit delay	LLDPDU transmit delay
Notification interval	Interval for sending LLDP Traps
Fast start counts	The number of fast sent LLDPDUs
Port status of LLDP	Whether LLDP is enabled on the port
Port state	Link status of port: UP or DOWN
Port encapsulation	LLDPDU encapsulation format
Operational mode	Operating mode of LLDP
Notification enable	Whether LLDP Trap is enabled on the port
Error detect enable	Whether error detection is enabled on the port
Number of neighbors	Number of neighbors
Number of MED neighbors	Number of MED neighbors

Related Commands	Command	Description
	N/A	N/A

**Platform** N/A  
**Description**

## 11.29 show lldp tlv-config

Use this command to display the advertisable TLV configuration of a port.

**show lldp tlv-config** [ **interface** *interface-name* ]

Parameter Description	Parameter	Description
	<i>interface-name</i>	Interface name

**Defaults** N/A

**Command Mode** Privileged EXEC mode

**Usage Guide** **Interface** parameter: display the LLDP TLV configuration of the specified interface.

**Configuration Examples** The following example displays TLV information of port 1.

```
Ruijie# show lldp tlv-config interface GigabitEthernet 0/1
LLDP tlv-config of port [GigabitEthernet 0/1]
-----
      NAME      STATUS DEFAULT
-----
Basic optional TLV:
Port Description TLV      YES YES
System Name TLV          YES YES
System Description TLV    YES YES
System Capabilities TLV   YES YES
Management Address TLV    YES YES

IEEE 802.1 extend TLV:
Port VLAN ID TLV          YES YES
Port And Protocol VLAN ID TLV YES YES
VLAN Name TLV             YES YES

IEEE 802.3 extend TLV:
MAC-Physic TLV            YES YES
Power via MDI TLV         YES YES
Link Aggregation TLV      YES YES
Maximum Frame Size TLV    YES YES

LLDP-MED extend TLV:
Capabilities TLV           YES YES
Network Policy TLV        YES YES
Location Identification TLV NO NO
Extended Power via MDI TLV YES YES
Inventory TLV              YES YES
```

Related Commands	Command	Description
	N/A	N/A

**Platform** N/A

**Description**

## 12 QinQ Commands

### 12.1 dot1q new-outer-vlan *new-vid* translate old-outer-vlan *vid* inner-vlan

*v-list*

Use this command to modify the policy list of outer vid based on the inner Tag VID and outer Tag VID on the access, trunk, hybrid, uplink port. Use the **no** form of this command to restore the default setting.

**dot1q new-outer-vlan** *new-vid* **translate old-outer-vlan** *vid* **inner-vlan** *v\_list*

**no dot1q new-outer-vlan** *new-vid* **translate old-outer-vlan** *vid* **inner-vlan** *v\_list*

#### Parameter Description

Parameter	Description
new-vid	Vid list of the
vid	Vid of outer tag.
no	Removes the setting.

**Defaults** The policy list is null by default.

**Command Mode** Interface configuration mode.

**Usage Guide** N/A.

**Configuration Examples** The following example modifies the vid to 3888 when the input packets inner tag vid.

```
Ruijie(config)# vlan 1888, 3888
Ruijie(config)# interface gigabitEthernet 0/1
Ruijie(config-if)# switchport mode trunk
Ruijie(config-if)# dot1q new-outer-vlan 3888 translate old-outer-vlan 1888
inner-vlan 2001-3000
Ruijie(config-if)# end
```

#### Related Commands

Command	Description
N/A	N/A

**Platform Description** N/A

## 12.2 dot1q outer-vid vid register inner-vid v-list

Use this command to configure the add policy list of outer vid based on protocol on tunnel port. Use the **no** or **default** form of this command to restore the default setting.

**dot1q outer-vid** *vid* **register inner-vid** *v\_list*

**no dot1q outer-vid** *vid* **register inner-vid** *v\_list*

Parameter Description	Parameter	Description
	<i>v_list</i>	Inner vlan id list
	<i>vid</i>	Outer vlan id list

**Defaults** The policy list is null by default.

**Command Mode** Interface configuration mode.

**Usage Guide** N/A

**Configuration Examples** The following example specifies vid in the tag of input message as 4-22 and setss the vid to 3.

```
Ruijie#configure
Ruijie(config)#interface gigabitEthernet 0/1
Ruijie(config-if)#switchport mode dot1q-tunnel
Ruijie(config-if)#dot1q outer-vid 3 register inner-vid 4-22
Ruijie(config-if)#end
```

Related Commands	Command	Description
	<b>show registration-table</b> [ interface <i>intf-id</i> ]	N/A

**Platform Description** N/A

## 12.3 dot1q relay-vid vid translate local-vid v-list

Use this command to configure the modify policy list of outer vid based on protocol on access, trunk, hybrid port. Use the **no** or **default** form of this command to restore the default setting.

**dot1q relay-vid** *vid* **translate local-vid** *v-list*

**no dot1q relay-vid** *vid* **translate local-vid** *v-list*

**default dot1q relay-vid** *vid* **translate local-vid** *v-list*

Parameter Description	Parameter	Description
-----------------------	-----------	-------------

v_list	Outer vlan list of input message
vid	Modified outer vlan id list
no	Removes the settings.

**Defaults** The policy list is null by default.

**Command Mode** Interface configuration mode.

**Usage Guide** N/A

**Configuration Examples** The following example specifies vid in the outer tag of input message as 10-20 and sets the vid to 100.

```
Ruijie(config)# interface gigabitEthernet 0/1
Ruijie(config-if)# switchport mode access
Ruijie(config-if)# dot1q relay-vid 100 translate local-vid 10-20
Ruijie(config-if)# end
```

**Related Commands**

Command	Description
show translation-table [ interface <i>intf-id</i> ]	N/A

**Platform Description** N/A

## 12.4 dot1q relay-vid vid translate inner-vid v-list

Use this command to configure the modify policy list of outer vid based on protocol on access, trunk, hybrid port. Use the **no** or **default** form of this command to restore the default setting.

**dot1q relay-vid vid translate inner-vid v-list**

**no dot1q relay-vid vid translate inner-vid v-list**

**default dot1q relay-vid vid translate inner-vid v-list**

**Parameter Description**

Parameter	Description
v_list	Outer vlan list of input message
vid	Modified outer vlan id list

**Defaults** The policy list is null by default.

**Command Mode** Interface configuration mode.



**Usage Guide** N/A

**Configuration Examples** The following example configures vid in the outer tag of input message as 10-20 and sets the vid to 100.

```
Ruijie(config)# interface gigabitEthernet 0/1
Ruijie(config-if)# switchport mode access
Ruijie(config-if)# dot1q relay-vid 100 translate inner-vid 10-20
Ruijie(config-if)# end
```

**Related Commands**

Command	Description
show translation-table [ interface <i>intf-id</i> ]	N/A

**Platform Description** N/A

## 12.5 dot1q-tunnel cos inner-cos-value remark-cos outer-cos-value

Use this command to map the priority from the outer tag to the inner tag for the packets on the interface. Use the **no** form of this command to restore the default setting.

**dot1q-tunnel cos inner-cos-value remark-cos outer-cos-value**

**no dot1q-tunnel cos inner-cos-value remark-cos outer-cos-value**

**default dot1q-Tunnel cos *inner-cos-value* remark-cos *outer-cos-value***

**Parameter Description**

Parameter	Description
<i>inner-cos-value</i>	Indicates the CoS value of the inner tag.
<i>outer-cos-value</i>	Indicates the CoS value of the outer tag.
no	Cancels the priority mapping of the packets on the interface.

**Defaults** The policy list is null by default.

**Command Mode** Interface configuration mode.

**Usage Guide** If the QoS policy based on the COS value is set for the service provider's network to which a user network connects, the COS value of the outer tag can be set to different values based on the data packet importance. In this case, important services can be preferentially processed and transmitted.

**Configuration Examples** The following example configures the priority mapping from the outer tag to the inner tag.

```
ruijie# configure
ruijie(config)# interface gigabitEthernet 0/2
ruijie(config-if)# dot1q-tunnel cos 3 remark-cos 5
ruijie(config-if)# end
```

Related Commands	Command	Description
	<b>show interface intf-name remark</b>	N/A

**Platform** N/A  
**Description**

## 12.6 frame-tag tpid

Use this command to set the packet TPID compatible with the manufacturer TPID. Use the **no** or **default** form of this command to restore the default setting.

**frame-tag tpid** *tpid*

**no frame-tag tpid**

**default frame-tag tpid**

Parameter Description	Parameter	Description
	tpid	Packet TPID.

**Defaults** The default is 0x8100.

**Command Mode** Interface configuration mode.

**Usage Guide** If the TPID value of the connected third-party device is not 0x8100 (default value) defined in IEEE802.1Q, the TPID value on the egress used to connect to the third-party device is the TPID value of the third-party device.

**Configuration Examples** The following example sets the packet TPID compatible with the manufacturer TPID.

```
Ruijie(config)# interface g0/3
Ruijie(config-if)# frame-tag tpid 0x9100
Ruijie(config-if)# end
Ruijie# show frame-tag tpid
Port      tpid
-----  -
Gi0/3     0x9100
```

Related Commands	Command	Description
	<b>show frame-tag tpid</b>	N/A

**Platform** N/A

## Description

## 12.7 inner-priority-trust enable

Use this command to copy the priority of the inner tag to the outer tag of the packets on the interface.

Use the **no** or **default** form of this command to restore the default setting.

**inner-priority-trust enable**

**no inner-priority-trust enable**

**default inner-priority-trust enable**

Parameter Description	Parameter	Description
	N/A	N/A

**Defaults** This function is disabled by default.

**Command Mode** Interface configuration mode.

**Usage Guide** If the QoS policy is configured based on the COS value of the user's VLAN tag for the service provider's network to which a user network connects, the user's VLAN tag priority can be copied to the outer VLAN tag, so that the user's packets are encapsulated with the outer VLAN tag and have the same priority as the user's VLAN tag. In this case, the user's packets can be preferentially processed and transmitted on the service provider's network.

**Configuration Examples** The following example copies the priority of the inner tag to the outer tag of the packets on the interface.

```
ruijie#configure terminal
ruijie(config)# interface gigabitEthernet 0/2
ruijie(config-if)# inner-priority-trust enable
ruijie(config-if)#end
```

Related Commands	Command	Description
	<b>show inner-priority-trust</b>	N/A

**Platform Description** N/A

## 12.8 l2protocol-tunnel

Use this command to set the dot1q-tunnel port to receive L2 protocol message. Use the **no** or **default** form of this command to disable this function.

```

l2protocol-tunnel { stp | gvrp }
no l2protocol-tunnel { stp | gvrp }
default l2protocol-tunnel { stp | gvrp }

```

Parameter Description	Parameter	Description
	<b>stp</b>	Receives stp message.
	<b>gvrp</b>	Receives gvrp message.

**Defaults** N/A

**Command Mode** Global configuration mode.

**Usage Guide** If the STP and GVRP packets need to be transparently transmitted, this function must be enabled in global configuration mode.

**Configuration Examples** The following example enables the function of receiving L2 protocol gvrp and stp.

```

Ruijie#configure
Ruijie(config)# l2protocol-tunnel stp
Ruijie(config)# l2protocol-tunnel gvrp
Ruijie(config)#end

```

Related Commands	Command	Description
	<b>show l2protocol-tunnel { gvrp   stp }</b>	N/A

**Platform Description** N/A

## 12.9 l2protocol-tunnel enable

Use this command to enable transparent transmission of L2 protocol message. Use the **no** or **default** form of this command to restore the default setting.

```

l2protocol-tunnel { stp | gvrp } enable
no l2protocol-tunnel { stp | gvrp } enable

```

Parameter Description	Parameter	Description
	<b>stp</b>	Transparently transmits stp message.
	<b>gvrp</b>	Transparently transmits gvrp message.

**Defaults** It is disabled by default.

**Command** Intereface configuration mode.

**Mode**

**Usage Guide** If this function is enabled in global and interface configuration modes, STP packets can be transparently transmitted after the bridge-frame forwarding protocol bpdv command is enabled in global configuration mode.

**Configuration** Here is an example of enabling transparent transmission of L2 protocol message :

**Examples**

```
Ruijie#configure
Ruijie(config)# interface fa 0/1
Ruijie(config-if)# l2protocol-tunnel gvrp enable
Ruijie(config-if)#end
```

**Related  
Commands**

Command	Description
<b>show l2protocol-tunnel { gvrp   stp }</b>	N/A

**Platform** N/A

**Description**

## 12.10 l2protocol-tunnel tunnel-dmac

Use this command to set the MAC address for the transparent transmission of the corresponding protocol messages. Use the **no** or **default** form of this command to restore the default setting.

**l2protocol-tunnel { stp|gvrp } tunnel-dmac mac-address**

**no l2protocol-tunnel { stp|gvrp } tunnel-dmac mac-address**

**default l2protocol-tunnel { stp | gvrp } tunnel-dmac mac-address**

**Parameter  
Description**

Parameter	Description
<b>stp</b>	Sets the STP transparent transmission address.
<b>gvrp</b>	Sets the GVRP transparent transmission address.

**Defaults** The first three bytes of the address are 01d0f8 and the last three bytes are 000005 for **stp** and 000006 for **gvrp** by default.

**Command  
Mode** Global configuration mode.

**Usage Guide** N/A

**Configuration** The following example sets the MAC address for the L2-protocol transparent transmission function:

**Examples**

```
ruijie# configure terminal
```

```
Ruijie(config-if)# l2protocol-tunnel gvrp tunnel-dmac 011AA9 000005
Ruijie(config-if)#end
```

#### Related Commands

Command	Description
<b>show l2protocol-tunnel { gvrp   stp }</b>	N/A

**Platform** N/A

**Description**

## 12.11 mac-address-mapping x source-vlan *src-vlan-list* destination-vlan *dst-vlan-id*

Use this command to copy the MAC address dynamically-learned from the source VLAN to the destination VLAN. Use the **no** or **default** form of this command to restore the default setting.

**mac-address-mapping x source-vlan *src-vlan-list* destination-vlan *dst-vlan-id***

**no mac-address-mapping x source-vlan *src-vlan-list* destination-vlan *dst-vlan-id***

**default mac-address-mapping x source-vlan *src-vlan-list* destination-vlan *dst-vlan-id***

#### Parameter Description

Parameter	Description
index-id	Policy ID of copying MAC addresses.
src-vlan-list	Source VLAN list of copying MAC addresses.
dst-vlan-id	Destination VLAN ID of copying MAC addresses.

**Defaults** This function is disabled by default.

**Command Mode** Interface configuration mode.

**Usage Guide** N/A

**Configuration Examples** The following example copies the MAC addresses dynamically-learned from the source VLANs 1-3 to the destination VLAN 5.

```
ruijie#configure
ruijie(config)# interface gigabitEthernet 0/2
ruijie(config-if)# mac-address-mapping 1 source-vlan 1-3 destination-vlan 5
ruijie(config-if)#end
```

#### Related Commands

Command	Description
<b>show interface mac-address-mapping x</b>	N/A

**Platform** N/A

**Description**

## 12.12 show dot1q-tunnel

Use this command to display whether dot1q-tunnel of interface is enabled or not.

**show dot1q-tunnel** [ interface *intf-id* ]

**Parameter  
Description**

Parameter	Description
intf-id	The specified interface.

**Defaults** N/A

**Command  
Mode** Any mode

**Usage Guide** N/A

**Configuration** The following example displays whether dot1q-tunnel of interface is enabled or not.

**Examples**

```
Ruijie# show dot1q-tunnel
Ports    Dot1q-tunnel
-----  -
Gi0/1    Enable
```

**Related  
Commands**

Command	Description
N/A	N/A

**Platform**

**Description**

## 12.13 show frame-tag tpid

Use this command to display the configuration of interface tpid.

**show frame-tag tpid** [interface <*intf-id*>]

**Parameter  
Description**

Parameter	Description
intf-id	Specifies the interface.

**Defaults** N/A

**Command** Any mode

**Mode**

**Usage Guide** N/A

**Configuration** The following example displays the configuration of interface tpid.

**Examples**

```
Ruijie# show frame-tag tpid
Ports      tpid
-----
Gi0/1      0x9100
```

**Related  
Commands**

Command	Description
N/A	N/A

**Platform** N/A

**Description**

## 12.14 show inner-priority-trust

Use this command to display whether the priority copy function is enabled.

**show inner-priority-trust**

**Parameter  
Description**

Parameter	Description
N/A	N/A

**Defaults** N/A

**Command** Any mode

**Mode**

**Usage Guide** N/A

**Configuration** The following example displays whether the priority copy function is enabled.

**Examples**

```
Ruijie# show inner-priority-trust
Port      inner-priority-trust
----
Gi0/1     enable
```

**Related  
Commands**

Command	Description
---------	-------------



N/A	N/A
-----	-----

**Platform****Description**

## 12.15 show interfaces dot1q-tunnel

Use this command to display the VLAN configuration on the dot1q-tunnel port.

**show interfaces** [ *intf-id* ] **dot1q-tunnel**

**Parameter  
Description**

Parameter	Description
intf-id	Specifies the interface.

**Defaults** N/A

**Command  
Mode** Any mode

**Usage Guide** N/A

**Configuration** The following example displays the VLAN configuration on the dot1q-tunnel port.

**Examples**

```
Ruijie# show interfaces dot1q-tunnel
Interface: Gi0/3
Native vlan: 10
Allowed vlan list: 4-6, 10, 30-60
Tagged vlan list: 4, 6, 30-60
```

**Related  
Commands**

Command	Description
N/A	N/A

**Platform** N/A

**Description**

## 12.16 show interfaces mac-address-mapping

Use this command to display the MAC address mapping configuration.

**show interfaces mac-address-mapping**

**Parameter  
Description**

Parameter	Description
N/A	N/A

**Defaults** N/A

**Command Mode** Any mode

**Usage Guide** N/A

**Configuration** The following example displays the MAC address mapping configuration.

**Examples**

```
ruijie# show interfaces mac-address-mapping
Ports          Status      Index      Destination-VID Source-VID-list
-----
Gi0/1          active      2           3              2
```

**Related Commands**

Command	Description
N/A	N/A

**Platform Description** N/A

## 12.17 show interfaces remark

Use this command to display the priority mapping configuration.

**show interfaces** [ *intf-id* ] **remark**

**Parameter Description**

Parameter	Description
<i>intf-id</i>	specifies an interface

**Defaults** N/A

**Command Mode** Any mode

**Usage Guide** N/A

**Configuration** The following example displays the priority mapping configuration.

**Examples**

```
Ruijie# show interfaces remark
Ports          Type          From value  To value
-----
Gi0/1          Cos-To-Cos    3           5
```

Related Commands	Command	Description
	N/A	N/A

**Platform** N/A

**Description**

## 12.18 show interfaces vlan-mapping

Use this command to display the VLAN mapping configuration.

**show interfaces vlan-mapping**

Parameter Description	Parameter	Description
	N/A	N/A

**Defaults** N/A

**Command  
Mode** Any mode

**Usage Guide** N/A

**Configuration** The following example displays the VLAN mapping configuration.

### Examples

```
ruijie# show interfaces vlan-mapping
Ports          Type    Status Destination-VID Source-VID-list
-----
Gi0/1          in      active         5             3
Gi0/1          out     active         3             5
```

Related Commands	Command	Description
	N/A	N/A

**Platform** N/A

**Description**

## 12.19 show l2protocol-tunnel

Use this command to display transparent transmission configuration of L2 protocol.

**show l2protocol-tunnel { gvrp | stp }**

Parameter	Parameter	Description

<b>Description</b>		
	<b>gvrp</b>	Displays configuration of transparently transmitting gvrp protocol.
	<b>stp</b>	Displays configuration of transparently transmitting stp protocol.
<b>Defaults</b>	N/A	
<b>Command Mode</b>	Any mode	
<b>Usage Guide</b>	N/A	
<b>Configuration</b>	The following example displays transparent transmission configuration of L2 protocol.	
<b>Examples</b>	<pre>Ruijie# show l2protocol-tunnel stp L2protocol-tunnel: Stp Enable Ruijie# show l2protocol-tunnel gvrp L2protocol-tunnel: gvrp Disable</pre>	
<b>Related Commands</b>	<b>Command</b>	<b>Description</b>
	N/A	N/A
<b>Platform Description</b>	N/A	

## 12.20 show registration-table

Use this command to display vid add policy list of prorocol-based dot1q-tunnel port.

**show registration-table** [ interface *intf-id* ]

<b>Parameter Description</b>	<b>Parameter</b>	<b>Description</b>
	intf-id	Specifies the interface.
<b>Defaults</b>	N/A	
<b>Command Mode</b>	Any mode	
<b>Usage Guide</b>	N/A	
<b>Configuration</b>	The following example displays vid add policy list of prorocol-based dot1q-tunnel port.	
<b>Examples</b>	<pre>Ruijie# show registration-table</pre>	

Ports	Type	Outer-VID	Inner-VID-list
-----	-----	-----	-----
Gi0/7	Add-outer	5	7-10,15,20-30

**Related  
Commands**

Command	Description
N/A	N/A

**Platform** N/A  
**Description**

## 12.21 show traffic-redirect

Use this command to display flow-based vid change or add policy list.

**show traffic-redirect** [ **interface** *intf-id* ]

**Parameter  
Description**

Parameter	Description
intf-id	Specifies the interface.

**Defaults** N/A

**Command  
Mode** Any mode

**Usage Guide** N/A

**Configuration** The following example displays flow-based vid change or add policy list.

**Examples**

```
Ruijie# show traffic-redirect
Ports          Type          VID    Match-filter
-----
Gi0/3          Mod-outer     23     11
Gi0/3          Mod-outer     3       4
Gi0/3          Mod-outer     6       5
Gi0/3          Mod-inner     8     inner-to-8
Gi0/6          Mod-inner     9     100
Gi0/7          Nested-vid    13    nest-13
```

**Related  
Commands**

Command	Description
N/A	N/A

**Platform** N/A

## Description

## 12.22 show translation-table

Use this command to display vid modify policy list of prorocol-based access, trunk, hybrid port.

**show translation-table** [ **interface** *intf-id* ]

Parameter Description	Parameter	Description
	<i>intf-id</i>	Specifies the interface.

**Defaults** N/A

**Command Mode** Any mode

**Usage Guide** N/A

**Configuration Examples** The following example displays vid modify policy list of prorocol-based access, trunk, hybrid port.

```
Ruijie# show translation-table
Ports      Type      Relay-VID  Old-local  Local\inner-VID-list
-----
Gi0/7      Inner-CVID 8          N/A        10-20
Gi0/7      Local-SVID 1001       N/A        30-60
Gi0/7      In+Out     8          20         50
```

Related Commands	Command	Description
	N/A	N/A

**Platform Description** N/A

## 12.23 switchport dot1q-tunnel allowed vlan

Use this command to configure the allowed VLAN of dot1q-tunnel. Use the **no** or **default** form of this command to restore the default setting.

**switchport dot1q-tunnel allowed vlan** { [ **add** ] **tagged** *vlist* | [ **add** ] **untagged** *vlist* | **remove** *vlist* }

**no switchport dot1q-tunnel allowed vlan**

**default switchport dot1q-tunnel allowed vlan**

Parameter Description	Parameter	Description

<b>add</b>	Add allowed VLAN.
<b>tagged</b>	Tag-carried.
<b>untagged</b>	Not tag-carried.
<i>v_list</i>	vlan id list.
<b>no</b>	Remove the settings.

**Defaults** The default is **untagged 1**.

**Command Mode** Interface configuration mode.

**Usage Guide** N/A

**Configuration Examples** The following example specifies vlan 3-6 of dot1q-tunnel port as allowed VLAN and outputting the frame with tag.

```
Ruijie(config)#interface gigabitEthernet 0/1
Ruijie(config-if)#switchport dot1q-tunnel allowed vlan tagged 3-6
Ruijie(config)#end
```

**Related Commands**

Command	Description
<b>show interface dot1q-tunnel</b>	N/A

**Platform Description** N/A

## 12.24 switchport dot1q-tunnel native vlan

Use this command to configure the default vlan id of dot1q-tunnel. Use the **no** or **default** form of this command to restore the default setting.

**switchport dot1q-tunnel native vlan vid**

**no switchport dot1q-tunnel native vlan**

**default switchport dot1q-tunnel native vlan**

**Parameter Description**

Parameter	Description
vid	Configures default vlan id.

**Defaults** The default is VLAN 1.

**Command Mode** Interface configuration mode.

**Usage Guide** N/A

**Configuration** The following example specifies default VLAN of dot1q-tunnel port as 8.

**Examples**

```
Ruijie(config)#interface gigabitEthernet 0/1
Ruijie(config-if)#switchport dot1q-tunnel native vlan 8
Ruijie(config)#end
```

**Related  
Commands**

Command	Description
<b>show interface dot1q-tunnel</b>	N/A

**Platform** N/A

**Description**

## 12.25 switchport mode dot1q-tunnel

Use this command to configure the interface as the dot1q-tunnel interface. Use the **no** or **default** form of this command to restore the default setting.

**switchport mode dot1q-tunnel**

**no switchport mode**

**default switchport mode**

**Parameter  
Description**

Parameter	Description
N/A	N/A

**Defaults** The interface is not a tunnel port by default.

**Command  
Mode** Interface configuration mode.

**Usage Guide** N/A

**Configuration** The following example configures the interface as the dot1q-tunnel interface.

**Examples**

```
ruijie(config)# interface gigabitEthernet 0/1
ruijie(config-if)# switchport mode dot1q-tunnel
ruijie(config)# end
```

**Related  
Commands**

Command	Description
<b>show vlan</b>	N/A

**Platform** N/A



## Description

## 12.26 traffic-redirect access-group *acl* inner-vlan *vid* out

Use this command to configure the modification policy of inner vid based on flow for the packets outputted from the access, trunk, hybrid port. Use the **no** or **default** form of this command to restore the default setting.

**traffic-redirect access-group *acl* inner-vlan *vid* out**

**no traffic-redirect access-group *acl* inner-vlan**

**default traffic-redirect access-group *acl* inner-vlan**

**Parameter  
Description**

Parameter	Description
<i>acl</i>	Flow matching.
<i>vid</i>	Modified inner vid

**Defaults** By default, no policy is configured.

**Command  
Mode** Interface configuration mode.

**Usage Guide** N/A

**Configuration  
Examples** The following example specifies the outer vid of outgoing messages whose source address is 1.1.1.2 as 6,

```
Ruijie#configure
Ruijie(config)#ip access-list standard to_6
Ruijie(config-std-nacl)#permit host 1.1.1.2
Ruijie(config-std-nacl)#exit
Ruijie(config)# interface gigabitEthernet 0/1
Ruijie(config-if)# switchport mode trunk
Ruijie(config-if)# traffic-redirect access-group to_6 inner-vlan 6 out
Ruijie(config-if)# end
```

**Related  
Commands**

Command	Description
<b>show traffic-redirect</b>	N/A

**Platform  
Description** N/A

## 12.27 traffic-redirect access-group acl nested-vlan vid in

Use this command to configure vid add policy list based on flow on dot1q-tunne port. Use the **no** or **default** form of this command to restore the default setting.

**traffic-redirect access-group acl nested-vlan vid in**

**no traffic-redirect access-group acl nested -vlan**

**default traffic-redirect access-group acl nested -vlan**

Parameter Description	Parameter	Description
	<i>acl</i>	Flow matching.
	<i>vid</i>	vid list to be added.

**Defaults** The policy list is null by default.

**Command Mode** Interface configuration mode.

**Usage Guide** N/A

**Configuration Examples** The following example specifies the vid of input message whose source address is 1.1.1.3 as 9.

```
Ruijie#configure
Ruijie(config)#ip access-list standard 20
Ruijie(config-std-nacl)#permit host 1.1.1.3
Ruijie(config-std-nacl)#exit
Ruijie(config)# interface gigabitEthernet 0/1
Ruijie(config-if)# switchport mode dot1q-tunnel
Ruijie(config-if)# traffic-redirect access-group 20 nested-vlan 10 in
Ruijie(config-if)# end
```

Related Commands	Command	Description
	<b>show traffic-redirect</b>	N/A

**Platform Description** N/A

## 12.28 traffic-redirect access-group acl outer-vlan vid in

Use this command to configure the modify policy list of outer vid based on flow on access, trunk, hybrid port. Use the **no** or **default** form of this command to restore the default setting.

**traffic-redirect access-group acl outer-vlan vid in**

**no traffic-redirect access-group acl outer-vlan**

**default traffic-redirect access-group *acl* outer-vlan****Parameter  
Description**

Parameter	Description
<i>acl</i>	Flow matching.
<i>vid</i>	Modified outer vid list
<b>no</b>	Removes the settings.

**Defaults**

The policy list is null by default.

**Command  
Mode**

Interface configuration mode.

**Usage Guide**

N/A

**Configuration**

The following example specifies outer vid of input message whose source address is 1.1.1.1 as 3.

**Examples**

```
Ruijie# configure
Ruijie(config)#ip access-list standard 2
Ruijie(config-std-nacl)# permit host 1.1.1.1
Ruijie(config-std-nacl)# exit
Ruijie(config)# interface gigabitEthernet 0/1
Ruijie(config-if)# switchport mode trunk
Ruijie(config-if)# traffic-redirect access-group 2 outer-vlan 3 in
Ruijie(config-if)# end
```

**Related  
Commands**

Command	Description
<b>show traffic-redirect</b>	N/A

**Platform**

N/A

**Description**

## 12.29 vlan-mapping-out vlan src-vlan remark dest-vlan

Use this command to configure the policy list of the one-to-one VLAN mapping in the outgoing direction on the access, trunk, hybrid, uplink port. Use the **no** or **default** form of this command to restore the default setting.

**vlan-mapping-out vlan *src-vlan* remark *dest-vlan***

**no vlan-mapping-out vlan *src-vlan* remark *dest-vlan***

**default vlan-mapping-out vlan *src-vlan* remark *dest-vlan***

**Parameter  
Description**

Parameter	Description
-----------	-------------

<i>src-vlan</i>	Vid of the input packets
<i>dest-vlan</i>	The modified vid
<b>no</b>	Removes the settings.

**Defaults** The policy list is null by default.

**Command Mode** Interface configuration mode.

**Usage Guide** N/A

**Configuration Examples** The following example specifies the vid of the incoming messages whose vid in the tag is 3 as 4 and forwards it.

```
Ruijie# configure terminal
Ruijie(config)# vlan range 3-4
Ruijie(config-vlan-range)# exit
Ruijie(config)# interface gigabitEthernet 0/1
Ruijie(config-if)# switchport mode trunk
Ruijie(config-if)# vlan-mapping-out vlan 3 remark 4
Ruijie(config-if)# end
```

**Related Commands**

Command	Description
<b>show interface [ <i>intf-id</i> ] vlan-mapping</b>	N/A

**Platform Description** N/A

## 13 ERPS Commands

### 13.1 associate sub-ring

Use this command to associate the ethernet ring with its sub-rings.

**associate sub-ring raps-vlan** *vlan-list*

**no associate sub-ring raps-vlan** *vlan-list*

Parameter Description	Parameter	Description
	<i>vlan-list</i>	Sub-rings' R-APS VLAN.

**Defaults** By default, Ethernet ring is not associated with its sub-rings.

**Command Mode** ERPS configuration mode.

**Usage Guide** You need to configure this command on all nodes of the Ethernet ring, so as to transmit its sub-ring's ERPS protocol packets in the Ethernet ring.

Configuring the association is mainly to make the sub-ring's protocol packets transmit in the Ethernet ring. Users can also adopt the configuration command provided by the VLAN module to configure elaborately the VLAN and the relation between ports and VLAN, so as to transmit the sub-ring's protocol packets in other Ethernet rings and not leak the packets to the user network.

**Configuration Examples** The following example associates the Ethernet sub-ring with other Ethernet rings:

#Enter the privileged EXEC mode

```
Ruijie# configure terminal
```

Enter configuration commands, one per line. End with CNTL/Z.

# Configure the link mode of the Ethernet ring port and the default VLAN.

```
Ruijie(config)# interface fastEthernet 0/1
```

```
Ruijie(config-if)# switchport mode trunk
```

```
Ruijie(config-if)# exit
```

```
Ruijie(config)# interface fastEthernet 0/2
```

```
Ruijie(config-if)# switchport mode trunk
```

```
Ruijie(config-if)# exit
```

# Enter the erps configuration mode.

```
Ruijie(config)# erps raps-vlan 4093
```

#Add the ports that participate in the ERPS protocol computing to the Ethernet ring.

```
Ruijie(config-erps4093)# ring-port west fastEthernet 0/1 east fastEthernet
```

0/2

**# Configure the Ethernet subring**

```
Ruijie(config)# erps raps-vlan 100
Ruijie(config)# interface fastEthernet 0/3
Ruijie(config-if)# switchport mode trunk
Ruijie(config-if)# exit
Ruijie(config)# erps raps-vlan 100
Ruijie(config-erps100)# ring-port west fastEthernet 0/3 east virtual-channel
Ruijie(config-if)# exit
```

**# Associate the subring with other Ethernet rings.**

```
Ruijie(config)# erps raps-vlan 4093
Ruijie(config-erps4093)# associate sub-ring raps-vlan 100
```

**Related  
Commands**

Command	Description
N/A	N/A

**Platform  
Description**

N/A

## 13.2 erps enable

Use this command to enable/disable the ERPS function in the global configuration mode.

**erps enable****no erps enable****Parameter  
Description**

Parameter	Description
N/A	N/A

**Defaults**

Disabled

**Command  
Mode**

Global configuration mode.

**Usage Guide**

The ERPS protocol of the specified ring will begin running truly only after the global ERPS protocol and the ERPS protocol of the specified ring are both enabled.

**Configuration**

The following example enables the ERPS protocol globally:

**Examples**

```
# Enter the privileged EXEC mode
Ruijie# configure terminal
```

```
Enter configuration commands, one per line. End with CNTL/Z.
```

```
# Enable the ERPS function globally.
```

```
Ruijie(config)# erps enable
```

```
# Enter the ERPS configuration mode
```

```
Ruijie(config)# erps raps-vlan 4093
```

```
# Enable the ERPS function for the specified ring.
```

```
Ruijie(config-erps4093)# state enable
```

#### Related Commands

Command	Description
<b>state enable</b>	After entering the ERPS configuration mode of the specified ring, configure this command to enable the ERPS protocol of this specified ring.

**Platform** N/A

#### Description

## 13.3 erps monitor link-state by oam

Use this command to configure the method of monitoring the ERPS link state.

**erps monitor link-state by oam vlan** *vlan-id*

**no erps monitor link-state by oam**

#### Parameter Description

Parameter	Description
<i>vlan-id</i>	Indicates the VLAN that monitors link state.

#### Defaults

By default, it adopts the directly monitoring the link physical state (up or down) rather than the oam method.

#### Command Mode

Global configuration mode.

#### Usage Guide

For the link state monitoring, use the method of directly monitoring the link physical state (up or down), also monitor the logic state (unidirectional fault, bidirectional fault or normal) of the link by the OAM. By default, the former is adopted. If the OAM method is used, the inefficient link state monitoring may cause the convergence time longer when the topology changes.

**Configuration** The following example configures the method of monitoring the link state.

#### Examples

```
# Enter the privileged EXEC mode.
```

```
Ruijie# configure terminal
```

```
Enter configuration commands, one per line. End with CNTL/Z.

# Configure the method of monitoring the link state.
Ruijie(config)# erps monitor link-state by oam vlan 100
```

#### Related Commands

Command	Description
N/A	N/A

#### Platform

N/A

#### Description

## 13.4 erps raps-vlan

Use this command to configure the R-APS VLAN of Ethernet ring.

**erps raps-vlan** *vlan-id*

**no erps raps-vlan** *vlan-id*

#### Parameter Description

Parameter	Description
<i>vlan-id</i>	R-APS VLAN ID

#### Defaults

No R-APS VLAN is configured.

#### Command Mode

Global configuration mode.

#### Usage Guide

The R-APS VLAN must be the VLAN that is not used on the device. Cannot set the VLAN1 to the R-APS VLAN.

The same Ethernet ring of different devices needs the same R-APS VLAN.

If you want to transparently transmit the ERPS protocol packets on a device without the ERPS function configured, make sure that only the two ports connected to the Ethernet ring on this device allow the R-APSA VLAN packets corresponding to this ERPS ring passing through. Otherwise, the other VLAN packets may enter the R-APS VLAN through the transparent transmission, causing the shock to the ERPS ring.

#### Configuration Examples

```
# Enter the privileged EXEC mode.
Ruijie# configure terminal
Enter configuration commands, one per line. End with CNTL/Z.

#Configure the R-APS VLAN globally.
Ruijie(config)# erps raps-vlan 4093
```

#### Related

Command	Description
---------	-------------



Commands		
	N/A	N/A

**Platform** N/A

**Description**

## 13.5 protected-instance

Use this command to configure the VLAN protected by the Ethernet ring to implement the load balance function.

**protected-instance** *instance-id-list*

**no protected-instance**

Parameter Description	Parameter	Description
	<i>instance-id-list</i>	Instance protected by this Ethernet ring. (The VLANs corresponding to these instances are the VLANs protected by the Ethernet ring.)

**Defaults** By default, all VLANs are protected.

**Command Mode** EPRS configuration mode.

**Usage Guide** The protected VLAN consists of the R-APS VLAN of this Ethernet ring and the data VLAN protected by this Ethernet ring.

**Configuration Examples** Suppose that the ERP1 and ERP2 are configured on the switch to implement the load balance. The R-APS VLAN of the ERPS1 is 100, the protected data VLAN is in the range of 1 to 99 and 101-2000, the R-APS VLAN of the ERPS2 is 4093, and the protected data VLAN is in the range of 2001 to 4092 and 4094. Configuration for the load balance is shown as below:

```
# Enter the privileged EXEC mode.
Ruijie# configure terminal
Enter configuration commands, one per line. End with CNTL/Z.
```

```
# Configure the VLAN configured by the ERP1.
Ruijie(config)# spanning-tree mst configuration
Ruijie(config-mst)# instance 1 vlan 100, 1-99, 101-2000
Ruijie(config-mst)# exit
Ruijie(config)# erps raps-vlan 100
Ruijie(config-erps100)#protected-instance 1
```

```
# Configure the VLAN configured by the ERP2.
Ruijie(config)# spanning-tree mst configuration
Ruijie(config-mst)# instance 2 vlan 4093, 2001-4092, 4094
```

```
Ruijie(config-mst)# exit
Ruijie(config)# erps raps-vlan 4093
Ruijie(config-erps4093)#protected-instance 2
```

#### Related Commands

Command	Description
N/A	N/A

**Platform** N/A  
**Description**

## 13.6 ring-port

Use this command to configure the ERPS ring.

**ring-port west** { *interface-name1* | **virtual-channel** } **east** { *interface-name2* | **virtual-channel** }  
**no ring-port**

#### Parameter Description

Parameter	Description
<i>interface-name1</i>	Name of the West port.
<i>interface-name2</i>	Name of the East port.

**Defaults** No ERPS ring is configured.

**Command Mode** EPRS configuration mode.

**Usage Guide**

- 1) After adding the port to the ERP ring, the trunk attribute of the port is not allowed to be modified any more.
- 2) If the ring port is configured on the virtual-channel, this ring will be considered as a sub-ring.
- 3) Ports running the ERPS do not participate in the STP computing. ERPS, RERP and REUP do not share the port.

**Configuration** The following example is for the ERPS ring.

#### Examples

```
# Enter the privileged EXEC mode.
Ruijie# configure terminal
Enter configuration commands, one per line. End with CNTL/Z.
```

```
# Configure the link mode of the Ethernet ring port and the default VLAN.
Ruijie(config)# interface fastEthernet 0/1
Ruijie(config-if)# switchport mode trunk
Ruijie(config-if)# exit
Ruijie(config)# interface fastEthernet 0/2
Ruijie(config-if)# switchport mode trunk
```

```
Ruijie(config-if)# exit
```

```
# Enter the ERPS configuration mode.
Ruijie(config)# erps raps-vlan 4093
```

```
#Add the ports that participate in the ERPS protocol computing to the Ethernet ring.
Ruijie(config-erps4093)# ring-port west fastEthernet 0/1 east fastEthernet
0/2
```

#### Related Commands

Command	Description
<b>state enable</b>	Enable the ERPS protocol of the specified ring in the ERPS mode of the specified ring.
<b>sub-ring associate raps-vlan</b> <i>vlan-id</i>	Establish the association between the subring and other Ethernet rings in the subring ERPS configuration mode.

**Platform** N/A

**Description**

## 13.7 rpl-port

Use this command to configure the RPL port and RPL owner.

```
rpl-port { west | east } [ rpl-owner ]
no rpl-port
```

#### Parameter Description

Parameter	Description
<b>west</b>	Name of the West port.
<b>east</b>	Name of the East port.

**Defaults** No RPL port and RPL owner are configured.

**Command Mode** EPRS configuration mode.

**Usage Guide** Up to one RPL link and one RPL owner node are needed and configurable for each ring.

**Configuration Examples** The following example configures the RPL port and RPL owner.

```
# Enter the privileged EXEC mode.
Ruijie# configure terminal
Enter configuration commands, one per line. End with CNTL/Z.
```

```
# Configure the link mode of the Ethernet ring port and the default VLAN.
Ruijie(config)# interface fastEthernet 0/1
Ruijie(config-if)# switchport mode trunk
Ruijie(config-if)# exit
Ruijie(config)# interface fastEthernet 0/2
Ruijie(config-if)# switchport mode trunk
Ruijie(config-if)# exit
```

```
# Enter the ERPS configuration mode.
Ruijie(config)# erps raps-vlan 4093
```

```
# Add the ports that participate in the ERPS protocol computing to the Ethernet ring.
Ruijie(config-erps4093)# ring-port west fastEthernet 0/1 east fastEthernet
0/2
```

```
# Specify the port where the RPL link is and the RPL owner.
Ruijie(config-erps4093)# rpl-port west rpl-owner
```

#### Related Commands

Command	Description
<b>ring-port west</b> { <i>interface-name1</i>   <b>virtual-channel</b> } <b>east</b> { <i>interface-name2</i>   <b>virtual-channel</b> }	Configure the specified ERP ring in the ERPS configuration mode of the specified ring.
<b>state enable</b>	Enable the ERPS protocol of the specified ring in the ERPS configuration mode of the specified ring.

**Platform** N/A

**Description**

## 13.8 show erps

Use this command to show the parameters and states of the ERPS.

```
show erps [ { global | raps_vlan vlan-id [ sub-ring ] } ]
```

#### Parameter Description

Parameter	Description
<b>global</b>	Displays global ERPS information.
<b>raps_vlan</b> <i>vlan-id</i>	Displays specified ERPS information.
<b>sub-ring]</b>	Displays specified sub ring information.

**Defaults** N/A

**Command** Any mode.  
**Mode**

**Usage Guide** N/A

**Configuration** The following example shows the use of this command.

**Examples**

```
Ruijie# show erps
ERPS Information
Global Status           : Enabled
Link monitored by       : Not Oam
-----
R-APS VLAN              : 4092
Ring Status             : Enabled
West Port               : Gi 0/5 (Blocking)
East Port               : Gi 0/7 (Forwarding)
RPL Port                : West Port
RPL Port Blocked VLAN   : All
RPL Owner               : Enabled
Holdoff Time            : 0 milliseconds
Guard Time              : 500 milliseconds
WTR Time                : 5 minutes
Current Ring State      : Idle
-----
R-APS VLAN              : 4093
Ring Status             : Enabled
West Port               : Virtual Channel
East Port               : Gi 0/10 (Forwarding)
RPL Port                : None
RPL Port Blocked VLAN   : All
RPL Owner               : Disabled
Holdoff Time            : 0 milliseconds
Guard Time              : 500 milliseconds
WTR Time                : 5 minutes
Current Ring State      : Idle
-----
R-APS VLAN              : 4094
Ring Status             : Enabled
West Port               : Virtual Channel
East Port               : 12 (Forwarding)
RPL Port                : None
RPL Port Blocked VLAN   : All
RPL Owner               : Disabled
Holdoff Time            : 0 milliseconds
Guard Time              : 500 milliseconds
```

```
WTR Time                : 5 minutes
Current Ring State      : Idle
```

```
Ruijie# show erps raps_vlan 4093 sub-ring
R-APS VLAN: 4093
Sub-Ring R-APS VLANs    TC Propagation State
-----
100                      Enable
200                      Enable
```

#### Related Commands

Command	Description
N/A	N/A

#### Platform Description

N/A

## 13.9 state enable

Use this command to enable/disable the specified R-APS ring.

**state enable**

**no state enable**

#### Parameter Description

Parameter	Description
N/A	N/A

#### Defaults

Disabled

#### Command Mode

EPRS configuration mode.

#### Usage Guide

Only after the global ERPS protocol and the ERPS protocol of the specified ring are both enabled, the ERPS protocol of the specified ring will begin truly running.

#### Configuration

The following example enables the specified ERPS ring:

#### Examples

```
#Enter the privileged EXEC mode.
Ruijie# configure terminal
Enter configuration commands, one per line. End with CNTL/Z.

#Configure the link mode of the Ethernet ring port and the default VLAN.
Ruijie(config)# interface fastEthernet 0/1
Ruijie(config-if)# switchport mode trunk
Ruijie(config-if)# exit
```

```

Ruijie(config)# interface fastEthernet 0/2
Ruijie(config-if)# switchport mode trunk
Ruijie(config-if)# exit

# Enter the ERPS configuration mode.
Ruijie(config)# erps raps-vlan 4093

# Add the ports that participate in the ERPS protocol computing to the Ethernet ring.
Ruijie(config-erps4093)# ring-port west fastEthernet 0/1 east fastEthernet
0/2

# Enable the ERPS function for the specified ring.
Ruijie(config-erps4093)#state enable

# Enable the global ERPS function.
Ruijie(config-erps4093)# exit
Ruijie(config)# erps enable

```

**Related  
Commands**

Command	Description
<b>erps enable</b>	Enable the global ERPS protocol.

**Platform** N/A

**Description**

## 13.10 sub-ring tc-propagation

Use this command to specify the devices corresponding to the crossing node on the crossing ring whether to send out the notification when the subring topology changes.

**sub-ring tc\_propagation enable**

**no sub-ring tc\_propagation**

**Parameter  
Description**

Parameter	Description
N/A	N/A

**Defaults** By default, the topology changing notification is not sent.

**Command  
Mode** EPRS configuration mode.

**Usage Guide** This command is just needed to be configured on the crossing nodes on the crossing ring.

**Configuration** The following example is configured when the subring topology changes.

**Examples**

```
# Enter the privileged EXEC mode.
Ruijie# configure terminal
Enter configuration commands, one per line. End with CNTL/Z.

#Configure the link mode of the Ethernet ring port and the default VLAN.
Ruijie(config)# interface fastEthernet 0/1
Ruijie(config-if)# switchport mode trunk
Ruijie(config-if)# exit
Ruijie(config)# interface fastEthernet 0/2
Ruijie(config-if)# switchport mode trunk
Ruijie(config-if)# exit

# Enter the ERPS configuration mode.
Ruijie(config)# erps raps-vlan 4093

# Add the ports that participate in the ERPS protocol computing to the Ethernet ring.
Ruijie(config-erps4093)# ring-port west fastEthernet 0/1 east fastEthernet
0/2

#Configure the Ethernet subring.
Ruijie(config)# erps raps-vlan 100
Ruijie(config)# interface fastEthernet 0/3
Ruijie(config-if)# switchport mode trunk
Ruijie(config-if)# exit
Ruijie(config)# erps raps-vlan 100
Ruijie(config-erps100)# ring-port west fastEthernet 0/3 east virtual-channel

# Associate the subring with other Ethernet rings.
Ruijie(config-erps100)# sub-ring associate raps-vlan 4093

# Enable the topology changing notification for the subring.
Ruijie(config-erps100)# sub-ring tc-propagation enable
```

**Related  
Commands**

Command	Description
N/A	N/A

**Platform**

N/A

**Description**

## 13.11 timer

Use this command to configure the timer of the ERPS protocol.

**timer** { **holdoff-time** *interval1* | **guard-time** *interval2* | **wtr-time** *interval3* }



**no timer { holdoff-time | guard-time | wtr-time }**

**Parameter  
Description**

Parameter	Description
<b>holdoff-time</b> <i>interval1</i>	Value of the Holdoff timer in 100 milliseconds, the valid range is 0 to 100.
<b>guard-time</b> <i>interval2</i>	Value of the Guard timer in 10 milliseconds, the valid range is 1 to 200.
<b>wtr-time</b> <i>interval3</i>	Value of the WTR in minute, the valid range is 5 to 12.

**Defaults**

Holdoff timer: 0.  
Guard timer: 500 milliseconds.  
WTP timer: 5 seconds.

**Command  
Mode**

EPRS configuration mode.

**Usage Guide**

**Holdoff timer:** This timer is used to avoid the ERPS from topology switchingswitching continuously due to the link intermittent fault. With this timer configured, if the link fault is detected, the ERPS does not perform the topology switching immediately until the timer times out and the link fault is verified.

**Guard timer:** This timer is used to prevent the device receiving the timed-out R-APS messages. When the device detects the recovery from failure of the link, it sends out the message of link recovery and starts up the Guard timer. Before the Guard times out, except for the flush packets indicating the subring topology change, other packets are discarded directly without being handled.

**WTR (Wait-to-restore) timer:** This timer is only valid for the RPL owner device. It is mainly used to prevent the RPL owner making the erroneous judgment to the ring network status. When the RPL detects the fault recovery, it does not perform the topology switching immediately until the WTR times out and the Ethernet ring indeed recovers from the fault. If the ring network fault is checked again before the WTR times out, then the WTR timer will be canceled and topology switching will be not executed any longer.

**Configuration**

The following example configures the timer of the ERPS protocol.

**Examples**

```
# Enter the privileged EXEC mode.
Ruijie# configure terminal
Enter configuration commands, one per line. End with CNTL/Z.
# Enter the ERPS configuration mode.
Ruijie(config)# erps raps-vlan 4093

# Configure the protocol timer.
Ruijie(config-erps4093)# timer holdoff-time 10
Ruijie(config-erps4093)# timer guard-time 10
Ruijie(config-erps4093)# timer wtr-time 10
```

**Related**

Command	Description
---------	-------------

<b>Commands</b>		
	N/A	N/A

**Platform**      N/A  
**Description**



## IP Address & Application Commands

---

1. IP Address/Service Commands
2. ARP Commands
3. IPv6 Commands
4. DHCP Commands
5. DHCPv6 Commands
6. DNS Commands
7. FTP Server Commands
8. FTP Client Commands
9. TFTP Server Commands
10. Network Connectivity Test Tool Commands
11. TCP Commands
12. IPv4/IPv6 REF Commands

# 1 IP Address/Service Commands

## 1.1 ip-address

Use this command to configure the IP address of an interface. Use the **no** form of this command to restore the default setting.

**ip address** *ip-address network-mask* [ **secondary** ] | [ **slave** ]

**no ip address** [ *ip-address network-mask* [ **secondary** ] | [ **slave** ] ]

### Parameter Description

Parameter	Description
<i>ip-address</i>	32-bit IP address, with 8 bits in one group in decimal format. Groups are separated by dots.
<i>network-mask</i>	32-bit network mask. 1 stands for the mask bit, 0 stands for the host bit, with 8 bits in one group in decimal format. Groups are separated by dots.
<b>slave</b>	Slave IP address.
<b>secondary</b>	Secondary IP address

**Defaults** No IP address is configured for the interface by default.

**Command Mode** Interface configuration mode

**Usage Guide** The equipment cannot receive and send IP packets before it is configured with an IP address. After an IP address is configured for the interface, the interface is allowed to run the Internet Protocol (IP).

The network mask is also a 32-bit value that identifies which bits among the IP address is the network portion. Among the network mask, the IP address bits that correspond to value “1” are the network address. The IP address bits that correspond to value “0” are the host address. For example, the network mask of Class A IP address is “255.0.0.0”. You can divide a network into different subnets using the network mask. Subnet division means to use the bits in the host address part as the network address part, so as to reduce the capacity of a host and increase the number of networks. In this case, the network mask is called subnet mask.

The RGOS software supports multiple IP address for an interface, in which one is the primary IP address and others are the secondary/slave IP addresses. Theoretically, there is no limit for the number of secondary IP addresses. The primary IP address must be configured before the secondary IP addresses. The secondary IP address and the primary IP address must belong to the same network or different networks. Secondary IP addresses are often used in network construction. Typically, you can try to use secondary IP addresses in the following situations:

A network hasn't enough host addresses. At present, the LAN should be a class C network where 254 hosts can be configured. However, when there are more than 254 hosts in the LAN, another class C network address is necessary since one class C network is not enough. Therefore, the device should be connected to two networks and multiple IP addresses should be configured.

Many older networks are layer 2-based bridge networks that have not been divided into different subnets. Use of secondary IP addresses will make it very easy to upgrade this network to an IP layer-based routing network. The equipment configures an IP address for each subnet.

Two subnets of a network are separated by another network. You can create a subnet for the separated network, and connect the separated subnet by configuring a secondary IP address. One subnet cannot appear on two or more interfaces of a device.

Slave IP address is applied to the gateway cluster scenario. Only after the primary IP address is configured can the slave IP address be configured. Both slave and primary addresses are configured on an Layer 3 interface, backing up each other. In general, the master device adopts the primary IP address and the slave device uses the slave IP address. When the slave device becomes the master, its IP address becomes the primary IP address. When the master device turns into a slave, its IP address becomes the slave IP address,

#### Configuration Examples

The following example configures the primary IP address and the network mask as 10.10.10.1 and 255.255.255.0 respectively .

```
Ruijie(config-if)# ip address 10.10.10.1 255.255.255.0
```

The following example configures the master and slave IP addresses as 10.10.10.1/24 and 10.10.20.1/24 respectively.

```
Ruijie(config)# interface gigabitEthernet 0/1
Ruijie(config-if-GigabitEthernet 0/1)# ip address 10.10.10.1 255.255.255.0
Ruijie(config-if-GigabitEthernet 0/1)# ip address 10.10.20.1 255.255.255.0
slave
```

#### Related Commands

Command	Description
<b>show interface</b>	Displays detailed information of the interface.

#### Platform Description

N/A

## 1.2 ip broadcast-addresss

Use this command to define a broadcast address for an interface in the interface configuration mode. Use the **no** form of this command to restore the default setting.

**ip broadcast-addresss** *ip-address*

**no ip broadcast-addresss**

<b>Parameter</b>	<b>Parameter</b>	<b>Description</b>
<b>Description</b>	<i>ip-address</i>	Broadcast address of IP network
<b>Defaults</b>	The default IP broadcast address is 255.255.255.255.	
<b>Command Mode</b>	Interface configuration mode.	
<b>Usage Guide</b>	At present, the destination address of IP broadcast packet is all "1", represented as 255.255.255.255. The RGOS software can generate broadcast packets with other IP addresses through definition, and can receive both all "1" and the broadcast packets defined by itself.	
<b>Configuration Examples</b>	<p>The following example sets the destination address of IP broadcast packets generated by this interface to 0.0.0.0.</p> <pre>Ruijie(config)# interface gigabitEthernet 0/1 Ruijie(config-if-GigabitEthernet 0/1)# ip broadcast-address 0.0.0.0</pre>	
<b>Related Commands</b>	<b>Command</b>	<b>Description</b>
	N/A	N/A
<b>Platform Description</b>	N/A	

## 1.3 ip directed-broadcast

Use this command to enable the conversion from IP directed broadcast to physical broadcast in the interface configuration mode. Use the **no** form of this command to restore the default setting.

**ip directed-broadcast** [*access-list-number*]

**no ip directed-broadcast**

<b>Parameter</b>	<b>Parameter</b>	<b>Description</b>
<b>Description</b>	<i>access-list-number</i>	(Optional) Access list number, in the range from 1 to 199 and from 1300 to 2699. After an access list number has been defined, only the IP directed broadcast packets that match this access list are converted.
<b>Defaults</b>	This function is disabled by default.	
<b>Command Mode</b>	Interface configuration mode.	

**Usage Guide**

IP directed broadcast packet is an IP packet whose destination address is an IP subnet broadcast address. For example, the packet with the destination address 172.16.16.255 is called a directed broadcast packet. However, the node that generates this packet is not a member of the destination subnet.

The device that is not directly connected to the destination subnet receives an IP directed broadcast packet and handles this packet in the same way as forwarding a unicast packet. After the directed broadcast packet reaches a device that is directly connected to this subnet, the device converts the directed broadcast packet into a flooding broadcast packet (typically the broadcast packet whose destination IP address is all "1"), and then sends the packet to all the hosts in the destination subnet in the manner of link layer broadcast.

You can enable conversion from directed broadcast into physical broadcast on a specified interface, so that this interface can forward a direct broadcast packet to a directly connected network. This command affects only the final transmission of directed broadcast packets that have reached the destination subnet instead of normal forwarding of other directed broadcast packets.

You can also define an access list on an interface to control which directed broadcast packets to forward. After an access list is defined, only the packets that conform to the conditions defined in the access list undergo conversion from directed broadcast into physical broadcast.

If the **no ip directed-broadcast** command is configured on an interface, RGOS will discard the directed broadcast packets received from the directly connected network.

**Configuration Examples**

The following example enables forwarding of directed broadcast packet on the fastEthernet 0/1 port of a device.

```
Ruijie(config)# interface fastEthernet 0/1
Ruijie(config-if)# ip directed-broadcast
```

**Related Commands**

Command	Description
N/A	N/A

**Platform**

N/A

**Description**

## 1.4 ip icmp error-interval

Use this command to set the rate to send the ICMP destination unreachable packets triggered by DF in the IP header. Use the **no** form of this command to restore the default setting.

**ip icmp error-interval** DF milliseconds [ *bucket-size* ]

**no ip icmp error-interval** DF milliseconds [ *bucket-size* ]

Use this command to set the rate to send other ICMP error packets. Use the **no** form of this command to restore the default setting.

`ip icmp error-interval milliseconds [bucket-size]`  
**no ip icmp error-interval** *milliseconds* [ *bucket-size* ]

Parameter	Parameter	Description
Description	<i>milliseconds</i>	The refresh period of the token bucket, in the range from 0 to 2147483647 in the unit of milliseconds. 0 indicates no limit on the rate to send ICMP error packets. The default is 100.
	<i>bucket-size</i>	The number of tokens in the bucket, in the range is from 1 to 200. The default is 10.

**Defaults** The default rate is 10 packets per 100 millisecond.

**Command Mode** Global configuration mode.

**Usage Guide** To prevent DoS attack, the token bucket algorithm is adopted to limit the rate to send ICMP error packets.

If IP packets need to be fragmented while the DF is set to 1, the device sends ICMP destination unreachable packets numbered 4 to the source IP address for path MTU discovery. Rate limits on ICMP destination unreachable packets and other error packets are needed to prevent path MTU discovery failure.

It is recommended to set the refresh period to an integral multiple of 10 milliseconds. If the refresh period is not an integral multiple of 10 milliseconds, it is adjusted automatically. For example, 1 per 5 milliseconds is adjusted to 2 per 10 milliseconds; 3 per 15 milliseconds is adjusted to 2 per 10 milliseconds.

**Configuration Examples** The following example sets the rate to send the ICMP destination unreachable packets triggered by DF in the IP header to 100 per second.

```
Ruijie(config)# ip icmp error-interval DF 1000 100
```

The following example sets the rate to send other ICMP error packets to 10 per second.

```
Ruijie(config)# ip icmp error-interval 1000 10
```

Related Commands	Command	Description
	N/A	N/A

**Platform Description** N/A

## 1.5 ip mask-reply

Use this command to configure the RGOS software to respond the ICMP mask request and



send an ICMP response message in the interface configuration mode. Use the **no** form of this command to restore the default setting.

**ip mask-reply**

**no ip mask-reply**

Parameter	Parameter	Description
Description	N/A	N/A

**Defaults** This function is disabled by default.

**Command mode** Interface configuration mode.

**Usage Guide** Sometimes, a network device needs the subnet mask of a subnet on the Internet. To obtain such information, the network device can send an ICMP mask request message, and the network device that receives this message will send a mask response message.

**Configuration Examples** The following example sets the FastEthernet 0/1 interface of a device to respond the ICMP mask request message.

```
Ruijie(config)# interface fastEthernet 0/1
Ruijie(config-if)# ip mask-reply
```

Related	Command	Description
Commands	N/A	N/A

**Platform Description** N/A

## 1.6 ip mtu

Use this command to set the Maximum Transmission Unit (MTU) for an IP packet in the interface configuration mode. Use the **no** form of this command is restore the default setting.

**ip mtu bytes**

**no ip mtu**

Parameter	Parameter	Description
Description	<i>bytes</i>	Maximum transmission unit of IP packet , in the range from 68 to 1500 bytes

**Defaults** It is the same as the value configured in the interface command **mtu** by default.

**Command Mode** Interface configuration mode.

**Usage Guide** If an IP packet is larger than the IP MTU, the RGOS software will split this packet. All the

devices in the same physical network segment must have the same IP MTU for the interconnected interface.

If the interface configuration command **mtu** is used to set the maximum transmission unit value of the interface, IP MTU will automatically match with the MTU value of the interface. However, if the IP MTU value is changed, the MTU value of the interface will remain unchanged.

**Configuration Examples** The following example sets the IP MTU value of the fastEthernet 0/1 interface to 512 bytes.

```
Ruijie(config)# interface fastEthernet 0/1
Ruijie(config-if)# ip mtu 512
```

Related Commands	Command	Description
	mtu	Sets the MTU value of an interface.

**Platform** N/A

**Description**

## 1.7 ip redirects

Use this command to allow the RGOS software to send an ICMP redirection message in the interface configuration mode. Use the **no** form of this command to disable this function.

**ip redirects**

**no ip redirects**

Parameter Description	Parameter	Description
	N/A	N/A

**Defaults** This function is enabled by default.

**Command Mode** Interface configuration mode.

**Usage Guide** When the route is not optimum, it may make the device to receive packets through one interface and send it though the same interface. If the device sends the packet through the interface through which this packet is received, the device will send an ICMP redirection message to the data source, telling the data source that the gateway for the destination address is another device in the subnet. In this way the data source will send subsequent packets along the optimum path.

**Configuration Examples** The following example disables ICMP redirection for the fastEthernet 0/1 interface.

```
Ruijie(config)# interface fastEthernet 0/1
Ruijie(config-if)# no ip redirects
```

Related	Command	Description

<b>Commands</b>	N/A	N/A
-----------------	-----	-----

**Platform** N/A

**Description**

## 1.8 ip source-route

Use this command to allow the RGOS software to process an IP packet with source route information in global configuration mode. Use the **no** form of this command to disable this function.

**ip source-route**

**no ip source-route**

Parameter	Parameter	Description
<b>Description</b>	N/A	N/A

**Defaults** This function is enabled by default.

**Command Mode** Global configuration mode.

**Usage Guide** RGOS supports IP source route. When the device receives an IP packet, it will check the options of the IP packet, such as strict source route, loose source route and record route. Details about these options can be found in RFC 791. If an option is found to be enabled in this packet, a response will be made. If an invalid option is detected, an ICMP parameter problem message will be sent to the data source, and then this packet is discarded.

**Configuration** The following example disables the IP source route.

**Examples** Ruijie(config)# no ip source-route

Related	Command	Description
<b>Commands</b>	N/A	N/A

**Platform** N/A

**Description**

## 1.9 ip ttl

Use this command to set the TTL value of the unicast packet. Use the **no** form of this command to restore the default setting.

**ip ttl value**

**no ip ttl**

Parameter	Parameter	Description
-----------	-----------	-------------

Description	<i>value</i>	Sets the TTL value of the unicast packet, in the range from 0 to 255.				
Defaults	The default is 64.					
Command Mode	Global configuration mode					
Usage Guide	N/A					
Configuration Examples	The following example sets the TTL value of the unicast packet to 100. <pre>Ruijie(config)# ip ttl 100</pre>					
Related Commands	<table><tr><th>Command</th><th>Description</th></tr><tr><td>N/A</td><td>N/A</td></tr></table>	Command	Description	N/A	N/A	
Command	Description					
N/A	N/A					
Platform Description	N/A					

## 1.10 ip unreachable

Use this command to allow the RGOS software to generate ICMP destination unreachable messages. Use the **no** form of this command to disable this function.

**ip unreachable**

**no ip unreachable**

<b>Parameter Description</b>	<table border="1"> <thead> <tr> <th>Parameter</th><th>Description</th></tr> </thead> <tbody> <tr> <td>N/A</td><td>N/A</td></tr> </tbody> </table>	Parameter	Description	N/A	N/A
Parameter	Description				
N/A	N/A				
<b>Defaults</b>	This function is enabled by default.				
<b>Command Mode</b>	Interface configuration mode.				
<b>Usage Guide</b>	<p>RGOS software will send a ICMP destination unreachable message if it receives unicast message with self-destination-address and can not process the upper protocol of this message.</p> <p>RGOS software will send ICMP host unreachable message to source data if it can not forward a message due to no routing.</p> <p>This command influences all ICMP destination unreachable messages.</p>				
<b>Configuration</b>	The following example disables sending ICMP destination unreachable message on FastEthernet				

**Examples**

0/1.

```
Ruijie(config)# interface fastEthernet 0/1
Ruijie(config-if)# no ip unreachable
```

**Related****Commands**

Command	Description
N/A	N/A

**Platform**

N/A

**Description**

## 1.11 show ip interface

Use this command to display the IP status information of an interface.

**show ip interface** [ *interface-type interface-number* | **brief** ]

**Parameter****Description**

Parameter	Description
<i>interface-type</i>	Specifies interface type.
<i>interface-number</i>	Specifies interface number.
<i>brief</i>	Displays the brief configurations about the IP of the layer-3 interface (including the interface primary ip, secondary ip and interface status)

**Defaults**

N/A.

**Command**

Privileged EXEC mode.

**Mode****Usage Guide**

When an interface is available, RGOS will create a direct route in the routing table. The interface is available in that the RGOS software can receive and send packets through this interface. If the interface changes from available status to unavailable status, the RGOS software removes the appropriate direct route from the routing table.

If the interface is unavailable, for example, two-way communication is allowed, the line protocol status will be shown as "UP". If only the physical line is available, the interface status will be shown as "UP".

The results shown may vary with the interface type, because some contents are the interface-specific options

**Configuration**

The following example displays the output of the **show ip interface brief** command.

**Examples**

```
Ruijie#show ip interface brief
Interface IP-Address(Pri) IP-Address(Sec) Status Protocol
GigabitEthernet 0/10 2.2.2.2/24 3.3.3.3/24 down down
GigabitEthernet 0/11 no address no address down down
```

```
VLAN 1 1.1.1.1/24 no address down down
```

Description of fields:

Field	Description
Status	Link status of an interface. The value can be <b>up</b> , <b>down</b> , or <b>administratively down</b> .
Protocol	IPv4 protocol status of an interface.

The following example displays the output of the **show ip interface vlan** command.

```
SwitchA#show ip interface vlan 1
VLAN 1
  IP interface state is: DOWN
  IP interface type is: BROADCAST
  IP interface MTU is: 1500
  IP address is:
  1.1.1.1/24 (primary)
  IP address negotiate is: OFF
  Forward direct-broadcast is: OFF
  ICMP mask reply is: ON
  Send ICMP redirect is: ON
  Send ICMP unreachable is: ON
  DHCP relay is: OFF
  Fast switch is: ON
  Help address is:
  Proxy ARP is: OFF
ARP packet input number: 0
  Request packet: 0
  Reply packet: 0
  Unknown packet: 0
TTL invalid packet number: 0
ICMP packet input number: 0
  Echo request: 0
Echo reply: 0
  Unreachable: 0
  Source quench: 0
  Routing redirect: 0
```

Description of fields in the results:

Field	Description
IP interface state is:	The network interface is available, and both its interface hardware status and line protocol status are "UP".
IP interface type is:	Show the interface type, such as broadcast, point-to-point, etc.
IP interface MTU is:	Show the MTU value of the interface.
IP address is:	Show the IP address and mask of the interface.

IP address negotiate is:	Show whether the IP address is obtained through negotiation.
Forward direct-broadcast is:	Show whether the directed broadcast is forwarded.
ICMP mask reply is:	Show whether an ICMP mask response message is sent.
Send ICMP redirect is:	Show whether an ICMP redirection message is sent.
Send ICMP unreachable is:	Show whether an ICMP unreachable message is sent.
DHCP relay is:	Show whether the DHCP relay is enabled.
Fast switch is:	Show whether the IP fast switching function is enabled.
Route horizontal-split is:	Show whether horizontal split is enabled, which will affect the route update behavior of the distance vector protocol.
Help address is:	Show the helper IP address.
Proxy ARP is:	Show whether the agent ARP is enabled.
ARP packet input number: Request packet: Reply packet: Unknown packet:	Show the total number of ARP packets received on the interface, including: ARP request packet ARP reply packet Unknown packet
TTL invalid packet number:	Show the TTL invalid packet number
ICMP packet input number: Echo request: Echo reply: Unreachable: Source quench: Routing redirect:	Show the total number of ICMP packets received on the interface, including: Echo request packet Echo reply packet Unreachable packet Source quench packet Routing redirection packet

**Related  
Commands**

Command	Description
N/A.	N/A.

**Platform  
Description**

N/A.

## 1.12 show ip packet queue

Use this command to display the statistics of IP packet queues.

**show ip packet queue**

**Parameter  
Description**

Parameter	Description
N/A	N/A


**Defaults**

N/A

**Command Mode** Privileged EXEC mode.

**Usage Guide** N/A.

**Configuration Examples** The following example displays the statistics of IP packet queues.

 XS-S1960-H series products do not support the VRF parameter. The following example is for reference purpose. Please take the actual product as the standard.

```
Ruijie#show ip packet queue
Receive 31925 packets(fragment=0):
  IP packet receive queue: length 0, max 1542, overflow 0.
  Receive 13 ICMP echo packets, 25 ICMP reply packets .
  Discards:
    Failed to alloc skb: 0.
    Receive queue overflow: 0.
    Unknow protocol drops: 0.
    ICMP rcv drops: 0. for skb check fail.
    ICMP rcv drops: 0. for skb is broadcast.
Sent packets:
  Success: 15644
  Generate 13 and send 8 ICMP reply packets, send 26 ICMP echo packets.
  It records 187 us as max time in ICMP reply process.
Failed to alloc ebuf: 0
  Dropped by EFMP: 0
  NoRoutes: 887
  Get vrf fails: 0
  Cannot assigned address drops: 0
  Failed to encapsulate ethernet head: 0
ICMP error queue: length 0, max 1542, overflow 0.
```

Field	Description
IP packet receive queue	Statistics of received packets
Discards	Statistics of discarded packets
Sent packets	Statistics of sent packets
ICMP error queue	Statistics of ICMP error packets

**Related Commands**

Command	Description
N/A	N/A

**Platform Description** N/A



## 1.13 show ip packet statistics

Use this command to display the statistics of IP packets.

**show ip packet statistics** [ **total** | *interface-name* ]

Parameter	Parameter	Description
Description	<i>interface-name</i>	Interface name
	<i>total</i>	Displays the total statistics of all interfaces.

**Defaults** N/A.

**Command Mode** Privileged EXEC mode.

**Usage Guide** N/A.

**Configuration** The following example displays the output of this command.

### Examples

```
R1#show ip packet statistics
Total
  Received 113962 packets, 11948991 bytes
    Unicast:90962,Multicast:5232,Broadcast:17768
  Discards:0
    HdrErrors:0 (BadChecksum:0,TTLExceeded:0,Others:0)
  NoRoutes:0
  Others:0
  Sent 34917 packets, 1863146 bytes
    Unicast:30678,Multicast:4239,Broadcast:0
GigabitEthernet 0/1
  Received 6715 packets, 416587 bytes
    Unicast:2482,Multicast:4233,Broadcast:0
  Discards:0
    HdrErrors:0 (BadChecksum:0,TTLExceeded:0,Others:0)
  NoRoutes:0
  Others:0
  Sent 6720 packets, 417096 bytes
    Unicast:2481,Multicast:4239,Broadcast:0
Loopback 0
  Received 0 packets, 0 bytes
    Unicast:0,Multicast:0,Broadcast:0
  Discards:0
    HdrErrors:0 (BadChecksum:0,TTLExceeded:0,Others:0)
  NoRoutes:0
  Others:0
  Sent 0 packets, 0 bytes
    Unicast:0,Multicast:0,Broadcast:0
```

```

Tunnel 1
  Received 0 packets, 0 bytes
    Unicast:0,Multicast:0,Broadcast:0
  Discards:0
    HdrErrors:0 (BadChecksum:0,TTLExceeded:0,Others:0)
    NoRoutes:0
    Others:0
  Sent 21584 packets, 1122848 bytes
    Unicast:21584,Multicast:0,Broadcast:0

```

**Related  
Commands**

Command	Description
N/A	N/A

**Platform  
Description**

N/A

## 1.14 show ip raw-socket

Use this command to display IPv4 raw sockets.

**show ip raw-socket** [ *num* ]

**Parameter  
Description**

Parameter	Description
<i>num</i>	Protocol.

**Defaults**

N/A.

**Command Mode**

Privileged EXEC mode.

**Usage Guide**

N/A.

**Configuration  
Examples**

The following example displays all IPv4 raw sockets.

```

Ruijie# show ip raw-socket
Number Protocol Process name
1      ICMP      dhcp.elf
2      ICMP      vrrp.elf
3      IGMP      igmp.elf
4      VRRP      vrrp.elf
Total: 4

```

**Field Description**

Field	Description
Number	Number
Protocol	Protocol

Process name	Process name
Total	Total number

Related Commands	Command	Description
	N/A	N/A

**Platform** N/A

**Description**

## 1.15 show ip sockets

Use this command to display all IPv4 sockets.

**show ip sockets**

Parameter Description	Parameter	Description
	N/A.	N/A.

**Defaults** N/A.

**Command Mode** Privileged EXEC mode.

**Usage Guide** N/A.

**Configuration** The following displays all IPv4 sockets.

### Examples

```
Ruijie# show ip sockets
Number Process name      Type      Protocol LocalIP:Port  ForeignIP:Port
State
1      dhcp.elf             RAW       ICMP        0.0.0.0:1      0.0.0.0:0
*
2      vrrp.elf             RAW       ICMP        0.0.0.0:1      0.0.0.0:0
*
3      igmp.elf            RAW       IGMP        0.0.0.0:2      0.0.0.0:0
*
4      vrrp.elf            RAW       VRRP        0.0.0.0:112    0.0.0.0:0
*
5      dhcpc.elf          DGRAM     UDP         0.0.0.0:68     0.0.0.0:0
*
6      rg-snmpd           DGRAM     UDP         0.0.0.0:161    0.0.0.0:0
*
7      wbav2              DGRAM     UDP         0.0.0.0:2000   0.0.0.0:0
*
8      vrrp_plus.elf       DGRAM     UDP         0.0.0.0:3333   0.0.0.0:0
*
```

```

9      mpls.elf          DGRAM    UDP      0.0.0.0:3503  0.0.0.0:0
*
10     rds_other_th      DGRAM    UDP      0.0.0.0:3799  0.0.0.0:0
*
11     rg-snmpd          DGRAM    UDP      0.0.0.0:14800 0.0.0.0:0
*
12     rg-sshd           STREAM   TCP      0.0.0.0:22    0.0.0.0:0
LISTEN
13     rg-telnetd        STREAM   TCP      0.0.0.0:23    0.0.0.0:0
LISTEN
14     wbard             STREAM   TCP      0.0.0.0:4389  0.0.0.0:0
LISTEN
15     wbard             STREAM   TCP      0.0.0.0:7165  0.0.0.0:0
LISTEN
Total: 15

```

## Field Description

Field	Description
Number	Serial number.
Process name	Process name.
Type	Socket type, including the following types: RAW: raw sockets DGRAM: datagram type STREAM: stream type.
Protocol	Protocol.
LocalIP:Port	Local IP address and port.
ForeignIP:Port	Peer IP address and port.
State	State. This field is for only TCP sockets.
Total	The total number of sockets.

Related  
Commands

Command	Description
N/A	N/A

Platform  
Description

N/A

## 1.16 show ip udp

Use this command to display IPv4 UDP sockets.

**show ip udp** [ **local-port** *num* ]

Use this command to display IPv4 UDP socket statistics.

**show ip udp statistics**

Parameter	Parameter	Description
Description	<b>local-port</b> <i>num</i>	Local port number

**Defaults** N/A.

**Command Mode** Privileged EXEC mode.

**Usage Guide** N/A.

**Configuration** The following example displays all IPv4 UDP sockets.

**Examples**

```
Ruijie# show ip udp
```

Number	Local Address	Peer Address	Process name
1	0.0.0.0:68	0.0.0.0:0	dhcpc.elf
2	0.0.0.0:161	0.0.0.0:0	rg-snmpd
3	0.0.0.0:2000	0.0.0.0:0	wbav2
4	0.0.0.0:3333	0.0.0.0:0	vrrp_plus.elf
5	0.0.0.0:3503	0.0.0.0:0	mpls.elf
6	0.0.0.0:3799	0.0.0.0:0	rds_other_th
7	0.0.0.0:14800	0.0.0.0:0	rg-snmpd

**Field Description**

Field	Description
Number	Number.
Local Address	Local IP address and port.
Peer Address	Peer IP address and port.
Process name	Process name.

Related	Command	Description
Commands	N/A	N/A

**Platform** N/A  
**Description**

## 2 ARP Commands

### 2.1 arp

Use this command to add a permanent IP address and MAC address mapping to the ARP cache table. Use the **no** form of this command to restore the default setting.

**arp** *ip-address* *MAC-address* *type* [ *alias* ]

**no arp** *ip-address* *MAC-address* *type* [ *alias* ]

Parameter	Parameter	Description
Description	<i>ip-address</i>	The IP address that corresponds to the MAC address. It includes four parts of numeric values in decimal format separated by dots.
	<i>MAC-address</i>	48-bit data link layer address
	<i>type</i>	ARP encapsulation type. The keyword is arpa for the Ethernet interface.

**Defaults** There is no static mapping record in the ARP cache table by default.

**Command Mode** Global configuration mode.

**Usage Guide** RGOS finds the 48-bit MAC address according to the 32-bit IP address using the ARP cache table. Since most hosts support dynamic ARP resolution, usually static ARP mapping is not necessary. The **clear arp-cache** command can be used to delete the ARP mapping that is learned dynamically.

**Configuration Examples** The following example sets an ARP static mapping record for a host in the Ethernet.

```
Ruijie(config)# arp 1.1.1.1 4e54.3800.0002 arpa
```

Related Commands	Command	Description
	clear arp-cache	Clears the ARP cache table

**Platform Description** N/A

### 2.2 arp anti-ip-attack

For the messages corresponds to the directly-connected route, if the switch does not learn the ARP that corresponds to the destination IP address, it is not able to forward the message in hardware, and it needs to send the message to the CPU to resolve the address(that is the ARP learning). Sending large number of this message to the CPU will influence the other tasks of the switch. To prevent the IP messages from attacking the CPU, a discarded entry is set to the

hardware during the address resolution, so that all sequential messages with that destination IP address are not sent to the CPU. After the address resolution, the entry is updated to the forwarding status, so that the switch could forward the message with that destination IP address in hardware.

In general, during the ARP request ,if the switch CPU receives three destination IP address messages corresponding to the ARP entry, it is considered to be possible to attack the CPU and the switch sets the discarded entry to prevent the unknown unicast message from attacking the CPU. User could set the *num* parameter of this command to decide whether it attacks the CPU in specific network environment or disable this function. Use the **arp anti-ip-attack** command to set the parameter or disable this function. Use the **no** form of this command to restore the default setting.

**arp anti-ip-attack** *num*

**no arp anti-ip-attack**

**Parameter  
Description**

Parameter	Description
<i>num</i>	The number of the IP message to trigger the ARP to discarded entry in the range from 0 to 100. 0 stands for disabling the arp anti-ip-attack function.

**Defaults**

By default, set the discarded entry after 3 unknown unicast messages are sent to the CPU.

**Command Mode**

Global configuration mode.

**Usage Guide**

The arp anti-ip-attack function needs to occupy the switch hardware routing resources when attacked by the unknown unicast message. If there are enough resources, the **arp anti-ip-attack** *num* could be smaller. If not, in order to preferential ensure the use of the normal routing, the *num* could be larger or disable this function.

**Configuration  
Examples**

The following example sets the IP message number that triggers ARP to discarding entry as 5.

```
Ruijie(config)# arp anti-ip-attack 5
```

The following example disables the ARP anti-ip-attack function.

```
Ruijie(config)# arp anti-ip-attack 0
```

**Related Commands**

Command	Description
N/A	N/A

**Platform  
Description**

N/A

## 2.3 arp cache interface-limit

Use this command to set the maximum number of ARP learned on the interface.

Use the **no** form of this command to restore the default setting.

**arp cache interface-limit** *limit*

**no arp cache interface-limit**

**Parameter  
Description**

Parameter	Description
<i>limit</i>	Sets the maximum number of ARP learned on the interface, including static and dynamic ARPs, in the range from 0 to the number supported on the interface. 0 indicates that the number is not limited.

**Defaults**

The default is 0.

**Command  
Mode**

Interface configuration mode

**Usage Guide**

This function can prevent ARP attacks from generating ARP entries to consume memory. *limit* must be no smaller than the number of ARPs learned on the interface. Otherwise, the configuration does not take effect.

**Configuration**

The following example sets the maximum number of ARP learned on the interface to 300.

**Examples**

```
Ruijie(config)# interface gi 0/0
Ruijie(config-if-GigabitEthernet 0/0)# arp cache interface-limit 300
```

The following example restores the default setting.

```
Ruijie(config)# interface gi 0/0
Ruijie(config-if-GigabitEthernet 0/0)# no arp any-ip
```

**Related  
Commands**

Command	Description
N/A	N/A

**Platform  
Description**

N/A

## 2.4 arp gratuitous-send interval

Use this command to set the interval of sending the free ARP request message on the interface. Use the **no** form of this command to restore the default setting.

**arp gratuitous-send interval** *seconds*

**no arp gratuitous-send**

**Parameter  
Description**

Parameter	Description
<i>seconds</i>	The time interval to send the free ARP request message in the range from 1 to 3600 in the unit of seconds.



<b>Defaults</b>	This function is disabled by default.				
<b>Command Mode</b>	Interface configuration mode.				
<b>Usage Guide</b>	If an interface of the switch is used as the gateway of its downlink devices and counterfeit gateway behavior occurs in the downlink devices, you can configure to send the free ARP request message regularly on this interface to notify that the switch is the real gateway.				
<b>Configuration Examples</b>	<p>The following example sets to send one free ARP request to SVI 1 per second.</p> <pre>Ruijie(config)# <b>interface vlan 1</b> Ruijie(config-if)# arp gratuitous-send interval 1</pre> <p>The following example stops sending the free ARP request to SVI 1.</p> <pre>Ruijie(config)# <b>interface vlan 1</b> Ruijie(config-if)# no arp gratuitous-send</pre>				
<b>Related Commands</b>	<table border="1"> <thead> <tr> <th>Command</th><th>Description</th></tr> </thead> <tbody> <tr> <td>N/A</td><td>N/A</td></tr> </tbody> </table>	Command	Description	N/A	N/A
Command	Description				
N/A	N/A				
<b>Platform</b>	N/A				
<b>Description</b>					

## 2.5 arp retry interval

Use this command to set the frequency for sending the arp request message locally, namely, the time interval between two continuous ARP requests sent for resolving one IP address. Use the **no** form of this command to restore the default setting.

**arp retry interval** *seconds*

**no arp retry interval**

<b>Parameter Description</b>	<table border="1"> <thead> <tr> <th>Parameter</th><th>Description</th></tr> </thead> <tbody> <tr> <td><i>seconds</i></td><td>Time for retransmitting the ARP request message in the range from 1 to 3600 in the unit of seconds.</td></tr> </tbody> </table>	Parameter	Description	<i>seconds</i>	Time for retransmitting the ARP request message in the range from 1 to 3600 in the unit of seconds.
Parameter	Description				
<i>seconds</i>	Time for retransmitting the ARP request message in the range from 1 to 3600 in the unit of seconds.				
<b>Defaults</b>	The default is 1.				
<b>Command Mode</b>	Global configuration mode.				
<b>Usage Guide</b>	The switch sends the ARP request message frequently, and thus causing problems like network busy. In this case, you can set the retry interval of the ARP request message longer. In general, it should not exceed the aging time of the dynamic ARP entry.				
<b>Configuration</b>	The following example sets the retry interval of the ARP request as 30 seconds.				

**Examples** Ruijie(config)# arp retry interval 30

Related Commands	Command	Description
	arp retry times	Number of times for retransmitting an ARP request message.

**Platform** N/A  
**Description**

## 2.6 arp retry times

Use this command to set the local retry times of the ARP request message, namely, the times of sending the ARP request message to resolve one IP address. Use the **no** form of this command to restore the default setting.

**arp retry times** *number*

**no arp retry times**

Parameter Description	Parameter	Description
	<i>number</i>	The times of sending the same ARP request in the range from 1 to100.When it is set as 1, it indicates that the ARP request is not retransmitted, only 1 ARP request message is sent.

**Defaults** The default is 5.

**Command Mode** Global configuration mode.

**Usage Guide** The switch sends the ARP request message frequently, and thus causing problems like network busy. In this case, you can set the retry times of the ARP request smaller. In general, the retry times should not be set too large.

**Configuration Examples** The following example sets the local ARP request not to be retried.

```
Ruijie(config)# arp retry times 1
```

The following example sets the local ARP request to be retried for one time.

```
Ruijie(config)# arp retry times 2
```

Related Commands	Command	Description
	arp retry interval	Interval for retransmitting an ARP request message

**Platform** N/A  
**Description**

## 2.7 arp timeout

Use this command to configure the timeout for the ARP static mapping record in the ARP cache.

Use the **no** form of this command to restore the default setting.

**arp timeout** *seconds*

**no arp timeout**

Parameter	Parameter	Description
Description	<i>seconds</i>	The timeout is in the range from 0 to 2147483 in the unit of seconds.

**Defaults** The default is 3600.

**Command Mode** Interface configuration mode/Global configuration mode

**Usage Guide** The ARP timeout setting is only applicable to the IP address and the MAC address mapping that are learned dynamically. The shorter the timeout, the truer the mapping table saved in the ARP cache, but the more network bandwidth occupied by the ARP. Hence the advantages and disadvantages should be weighted. Generally it is not necessary to configure the ARP timeout unless there is a special requirement.

**Configuration Examples** The following example sets the timeout for the dynamic ARP mapping record that is learned dynamically from FastEthernet port 0/1 to 120 seconds.

```
Ruijie(config)# interface fastEthernet 0/1
Ruijie(config-if)# arp timeout 120
```

Related Commands	Command	Description
	<b>clear arp-cache</b>	Clears the ARP cache list.
	<b>show interface</b>	Displays the interface information.

**Platform Description** N/A

## 2.8 arp trusted

Use this command to set the maximum number of trusted ARP entries. Use the **no** form of this command to restore the default setting.

**arp trusted** *number*

**no arp trusted**

Parameter	Parameter	Description
Description	<i>number</i>	Maximum number of trusted ARP entries.

**Defaults** N/A

**Command Mode** Global configuration mode.

**Usage Guide** To make this command valid, enable the trusted ARP function firstly. The trusted ARP entries and other entries share the memory. Too much trusted ARP entries may lead to insufficient ARP entry space. In general, you should set the maximum number of trusted ARP entries according to your real requirements.

**Configuration Examples** The following example sets 1000 trusted ARPs.

```
Ruijie(config)# arp trusted 1000
```

**Related Commands**

Command	Description
<b>service trustedarp</b>	Enables the trusted ARP function.

**Platform Description** N/A

## 2.9 arp trusted aging

Use this command to set trusted ARP aging. Use the **no** form of this command to restore the default setting.

**arp trusted aging**

**no arp trusted aging**

**Parameter Description**

Parameter	Description
N/A	N/A

**Defaults** This function is disabled by default.

**Command Mode** Global configuration mode.

**Usage Guide** Use this command to set trusted ARP aging. Aging time is the same as dynamic ARP aging time. Use the **arp timeout** command to set aging time in interface mode.

**Configuration Examples** N/A

**Related Commands**

Command	Description
<b>service trustedarp</b>	Enables trusted ARP function.

**Platform** N/A  
**Description**

## 2.10 arp trusted user-vlan

Use this command to execute the VLAN transformation while setting the trusted ARP entries. Use the **no** form of this command to restore the default setting.

**arp trusted user-vlan** *vid1* **translated-vlan** *vid2*

**no arp trusted user-vlan** *vid1*

Parameter	Parameter	Description
Description	<i>vid1</i>	VID set by the server.
	<i>vid2</i>	VID after the transformation.

**Defaults** This function is disabled by default.

**Command Mode** Global configuration mode.

**Usage Guide** In order to validate this command, enable the trusted ARP function first. This command is needed only when the VLAN sent by the server is different from the VLAN which takes effect in the trusted ARP entry.

**Configuration Examples** The following example sets the VLAN sent by the server to 3, but the VLAN which takes effect in the trusted ARP entry to 5.

```
Ruijie(config)# arp trusted user-vlan 3 translated-vlan 5
```

Related Commands	Command	Description
	<b>service trustedarp</b>	Enables the trusted ARP function.

**Platform** N/A  
**Description**

## 2.11 arp trust-monitor enable

Use this command to enable egress gateway trusted ARP. Use the **no** form of this command to restore the default setting.

**arp trust-monitor enable**

**no arp trust-monitor enable**

Parameter	Parameter	Description
Description	N/A	N/A

**Defaults** This function is disabled by default.

**Command Mode** Interface configuration mode

**Usage Guide** The egress gateway trusted ARP is different from GSN trusted ARP. With this function enabled, the device sends a unicast request for confirmation when learning an ARP table entry. The device learns the ARP table entry after receiving the response. When the device receives the ARP packet, only if the ARP table entry is aged or incomplete and the ARP packet is a response packet will the packet be handled. After egress gateway trusted ARP is enabled, the aging time of the ARP table entry turns to 60 seconds. After this function is disabled, the aging time restores to 3600 seconds.

**Configuration** The following example enables egress gateway trusted ARP.

**Examples**

```
Ruijie(config)# interface gi 0/0
Ruijie(config-if-GigabitEthernet 0/0)# arp trust-monitor enable
```

The following example disables engress gateway trusted ARP.

```
Ruijie(config)# interface gi 0/0
Ruijie(config-if-GigabitEthernet 0/0)# no arp trust-monitor enable
```

Related Commands	Command	Description
	N/A	N/A

**Platform** N/A

**Description**

## 2.12 arp unresolve

Use this command to set the maximum number of the unresolved ARP entries. Use **no** form of this command to restore the default setting.

**arp unresolve** *number*

**no arp unresolve**

Parameter Description	Parameter	Description
	<i>number</i>	The maximum number of the unresolved ARP entries in the range from 1 to the ARP table size supported by the device.

**Defaults** The default is the ARP table size supported by the device.

**Command Mode** Global configuration mode.

**Usage Guide** If there are a large number of unresolved entries in the ARP cache table and they do not disappear after a period of time, this command can be used to limit the quantity of the unresolved entries.

**Configuration** The following example sets the maximum number of the unresolved items to 500.

**Examples** Ruijie(config)# arp unresolve 500

Related	Command	Description
Commands	N/A	N/A

**Platform** N/A

**Description**

## 2.13 clear arp-cache

Use this command to remove a dynamic ARP mapping record from the ARP cache table and clear an IP route cache table.

**clear arp-cache** [ **trusted** ] [ **ip** [ *mask* ] ] | **interface** *interface-name* ]

Parameter	Parameter	Description
<b>Description</b>	<i>trusted</i>	Deletes trusted ARP entries. Dynamic ARP entries are deleted by default.
	<i>ip</i>	Deletes ARP entries of the specified IP address. If <i>trusted</i> value is specified, trusted ARP entries are deleted; otherwise, all dynamic ARP entries are deleted which is the default.
	<i>mask</i>	Deletes ARP entries in a subnet mask. If <i>trusted</i> value is specified, trusted ARP entries in the subnet mask are deleted; otherwise, all dynamic ARP entries are deleted. The dynamic ARP entry specified by the IP address is deleted by default.
	<b>interface</b> <i>interface-name</i>	Deletes dynamic ARP entries on the specified interface. Dynamic ARP entries are deleted on all interfaces by default.

**Command** Privileged EXEC mode

**Mode**

**Usage Guide** This command can be used to refresh an ARP cache table.

On a NFPP-based (Network Foundation Protection Policy) device, it receives one ARP packet for every mac/ip address per second by default. If the interval of two **clear arp** times is within 1s, the second response packet will be filtered and the ARP packet will not be resolved for a short time.

**Configuration** The following example deletes all dynamic ARP mapping records.

**Examples** Ruijie# clear arp-cache

The following deletes the dynamic ARP entry 1.1.1.1.

Ruijie# clear arp-cache 1.1.1.1

The following example deletes the dynamic ARP entry on interface SVI1.

```
Ruijie# clear arp-cache interface Vlan 1
```

Related Commands	Command	Description
	arp	Adds a static mapping record to the ARP cache table.

Platform N/A

Description

## 2.14 ip proxy-arp

Use this command to enable ARP proxy function on the interface. Use the **no** form of this command to restore the default setting.

**ip proxy-arp**

**no ip proxy-arp**

Parameter Description	Parameter	Description
	N/A	N/A

Defaults By default, ARP proxy is disabled.

Command Mode Interface configuration mode.

**Usage Guide** Proxy ARP helps those hosts without routing message obtain MAC address of other networks or subnet IP address. For example, a device receives an ARP request. The IP addresses of request sender and receiver are in different networks. However, the device that knows the routing of IP address of request receiver sends ARP response, which is Ethernet MAC address of the device itself.

**Configuration Examples** The following example enables ARP on FastEthernet port 0/1.

```
Ruijie(config)# interface fastEthernet 0/1  
Ruijie(config-if)# ip proxy-arp
```

Related Commands	Command	Description
	N/A	N/A

Platform N/A

Description

## 2.15 local-proxy-arp

Use this command to enable local proxy ARP on the SVI interface. Use the **no** form of this command to restore the default setting.



**local-proxy-arp**  
**no local-proxy-arp**

Parameter	Parameter	Description
Description	N/A	N/A

**Defaults** N/A

**Command Mode** Interface configuration mode

**Usage Guide** With local proxy ARP enabled, the device helps a host to obtain MAC addresses of other hosts on the subnet. If the device enables switchport protected, users on different ports are segregated on layer 2. After local proxy ARP is enabled, the device serves as a proxy to send a response after receiving an ARP request. The ARP response contains a MAC address which is the device's Ethernet MAC address, realizing communication between different hosts through L3 routes.

**Configuration Examples** The following example enables local proxy ARP on VLAN1.

```
Ruijie(config)# interface vlan 1
Ruijie(config-if-VLAN 1)# local-proxy-arp
```

Related Commands	Command	Description
	N/A	N/A

**Platform Description** N/A

## 2.16 service trustedarp

Use this command to enable the trusted ARP function. Use the **no** form of this command to restore the default setting.

**service trustedarp**  
**no service trustedarp**

Parameter	Parameter	Description
Description	N/A	N/A

**Defaults** This function is disabled by default.

**Command Mode** Global configuration mode

**Usage Guide** The trusted ARP function of the device is to prevent the ARP fraud function. As a part of the GSN

scheme, it should be used together with the GSN scheme.

**Configuration** The following example enables the trusted ARP function in global configuration mode.

**Examples**

```
Ruijie(config)# service trustedarp
```

Related Commands	Command	Description
	N/A	N/A

**Platform** N/A

**Description**

## 2.17 show arp

Use this command to display the Address Resolution Protocol (ARP) cache table

**show arp** [ *interface-type interface-number* | **trusted** [*ip [mask]*] | [*ip [mask]* | *mac-address* | **static** | **complete** | **incomplete** ] ]

Parameter Description	Parameter	Description
	<i>interface-type</i> <i>interface-number</i>	Displays the ARP entry of a specified Layer-2 or Layer-3 port.
	<b>trusted</b>	Displays the trusted ARP entries. Currently, only the global VRF supports the trusted ARP.
	<i>ip</i>	Displays the ARP entry of the specified IP address. If <b>trusted</b> is configured, only trusted ARP entries are displayed. Otherwise, untrusted ARP entries are displayed.
	<i>mask</i>	Displays the ARP entries of the network segment included within the mask. If <b>trusted</b> is configured, only trusted ARP entries are displayed. Otherwise, untrusted ARP entries are displayed.
	<b>static</b>	Displays all the static ARP entries.
	<b>complete</b>	Displays all the resolved dynamic ARP entries.
	<b>incomplete</b>	Displays all the unresolved dynamic ARP entries.
	<i>mac-address</i>	Displays the ARP entry with the specified mac address.

**Defaults** N/A

**Command Mode** Privileged EXEC mode

**Usage Guide** N/A

**Configuration** The following example displays the output result of the **show arp** command:

**Examples**

```
Ruijie# show arp
Total Numbers of Arp: 7
```

```

Protocol Address Age(min) Hardware Type Interface
Internet 192.168.195.68 0 0013.20a5.7a5f arpa VLAN 1
Internet 192.168.195.67 0 001a.a0b5.378d arpa VLAN 1
Internet 192.168.195.65 0 0018.8b7b.713e arpa VLAN 1
Internet 192.168.195.64 0 0018.8b7b.9106 arpa VLAN 1
Internet 192.168.195.63 0 001a.a0b5.3990 arpa VLAN 1
Internet 192.168.195.62 0 001a.a0b5.0b25 arpa VLAN 1
Internet 192.168.195.5 -- 00d0.f822.33b1 arpa VLAN 1

```

The meaning of each field in the ARP cache table is described as below:

Table 1 Fields in the ARP cache table

Field	Description
Protocol	Protocol of the network address, always to be Internet
Address	IP address corresponding to the hardware address
Age (min)	Age of the ARP cache record, in minutes; If it is not locally or statically configured, the value of the field is represented with "-".
Hardware	Hardware address corresponding to the IP address
Type	Hardware address type, ARPA for all Ethernet addresses
Interface	Interface associated with the IP addresses

The following example displays the output result of **show arp 192.168.195.68**

```

Ruijie# show arp 192.168.195.68
Protocol Address Age(min) Hardware Type Interface
Internet 192.168.195.68 1 0013.20a5.7a5f arpa VLAN 1

```

The following example displays the output result of **show arp 192.168.195.0 255.255.255.0**

```

Ruijie# show arp 192.168.195.0 255.255.255.0
Protocol Address Age(min) Hardware Type Interface
Internet 192.168.195.64 0 0018.8b7b.9106 arpa VLAN 1
Internet 192.168.195.2 1 00d0.f8ff.f00e arpa VLAN 1
Internet 192.168.195.5 -- 00d0.f822.33b1 arpa VLAN 1
Internet 192.168.195.1 0 00d0.f8a6.5af7 arpa VLAN 1
Internet 192.168.195.51 1 0018.8b82.8691 arpa VLAN 1

```

The following example displays the output result of **show arp 001a.a0b5.378d**

```

Ruijie# show arp 001a.a0b5.378d
Protocol Address Age(min) Hardware Type Interface
Internet 192.168.195.67 4 001a.a0b5.378d arpa VLAN 1

```

#### Related Commands

Command	Description
N/A	N/A

**Platform** N/A

**Description**

## 2.18 show arp counter

Use this command to display the number of ARP entries in the ARP cache table.

**show arp counter**

Parameter	Parameter	Description
Description	N/A	N/A

**Defaults** N/A

**Command Mode** Privileged EXEC mode

**Usage Guide** N/A

**Configuration Examples** The following example displays the output result of the **show arp counter** command:

```
Ruijie#sho arp counter
ARP Limit:                75000
Count of static entries:  0
Count of dynamic entries: 1 (complete: 1 incomplete: 0)
Total:                     1
```

Related Commands	Command	Description
	N/A	N/A

**Platform** N/A

**Description**

## 2.19 show arp detail

Use this command to display the details of the Address Resolution Protocol (ARP) cache table.

**show arp detail** [ *interface-type interface-number* | trusted [*ip [mask]*] | [*ip [mask]*] | *mac-address* | static | complete | incomplete ]

Parameter	Parameter	Description
Description	<i>interface-type interface-number</i>	Displays the ARP of the layer 2 port or the layer 3 interface.

<b>trusted</b>	Displays the trusted ARP entries. Currently, only the global VRF supports the trusted ARP.
<i>ip</i>	Displays the ARP entry of the specified IP address.
<i>ip mask</i>	Displays the ARP entries of the network segment included within the mask.
<i>mac-address</i>	Displays the ARP entry of the specified MAC address.
<b>static</b>	Displays all the static ARP entries.
<b>complete</b>	Displays all the resolved dynamic ARP entries.
<b>incomplete</b>	Displays all the unresolved dynamic ARP entries.

**Defaults** N/A

**Command Mode** Privileged EXEC mode

**Usage Guide** Use this command to display the ARP details, such as the ARP type (Dynamic, Static, Local, Trust), the information on the layer2 port.

If you enter a *min\_value* greater than *max\_value*, no error message is prompted. Instead, ARP entries corresponding to the subvlan are displayed.

**Configuration Examples** The following example displays the output result of the **show arp detail** command:

```
Ruijie# show arp detail
IP Address MAC Address Type Age(min) Interface Port
20.1.1.1 000f.e200.0001 Static -- -- --
20.1.1.1 000f.e200.0001 Static -- V13 --
20.1.1.1 000f.e200.0001 Static -- V13 Gi2/0/1
193.1.1.70 00e0.fe50.6503 Dynamic 1 V13 Gi2/0/1
192.168.0.1 0012.a990.2241 Dynamic 10 Gi2/0/3 Gi2/0/3
192.168.0.1 0012.a990.2241 Dynamic 20 Ag1 Ag1
192.168.0.1 0012.a990.2241 Dynamic 30 V12 Ag2
192.168.0.39 0012.a990.2241 Local -- V13 --
192.168.0.39 0012.a990.2241 Local -- Gi2/0/3 --
192.168.0.1 0012.a990.2241 Local -- V13 --
192.168.0.1 0012.a990.2241 Local -- Gi2/3/2 --
```

The following example displays arp details including InnerVLAN on products supporting QinQ termination:

```
Ruijie# show arp detail
IP Address      MAC Address      Type      Age(min)  Interface  Port
SubVlan  InnerVlan
20.1.1.2        0020.0101.0002    Static    --        Te2/5      --      --
20.1.1.1        00d0.f822.33bb    Local     --        Te2/5      --      --
1.1.1.2         00d0.1111.1112    Dynamic   1         V12        Te2/1    4
300
1.1.1.1         00d0.f822.33bb    Local     --        V12        --      --
```

The meaning of each field in the ARP cache table is described as below:

Table 1 Fields in the ARP cache table

Field	Description
IP Address	IP address corresponding to the hardware address
MAC Address	hardware address corresponding to the IP address
Age (min)	Age of the ARP learning, in minutes
Port	Layer2 port associated with the ARP
Type	ARP type, includes the Static, Dynamic, Trust, Local
Interface	Layer 3 interface associated with the IP addresses
SubVLAN	SubVLAN corresponding to the ARP entries
InnerVLAN	InnerVLAN or CE-VLAN corresponding to the ARP entries
Location	Local: ARP entries are generated or learned on the local device. Remote: ARP entries are synced from a remote gateway.

**Related  
Commands**

Command	Description
N/A	N/A

**Platform  
Description**

N/A

## 2.20 show arp packet statistics

Use this command to display the statistics of ARP packets.

**show arp packet statistics** [ *interface-name* ]

**Parameter  
Description**

Parameter	Description
<i>interface-name</i>	Displays the statistics of ARP packets on the specified interface.

**Defaults**

N/A.

**Command  
Mode**

Privileged EXEC mode.

**Usage Guide**

N/A.

**Configuration**

The following example displays the output information of the command.

**Examples**

```
Ruijie# show arp packet statistics
Interface Received Received Received Sent Sent
Name Requests Replies Others Requests Replies
```

```
-----  
VLAN 1 10 20 1 50 10  
VLAN 2 5 8 0 10 10  
VLAN 3 20 5 0 15 12  
VLAN 4 5 8 0 10 10  
VLAN 5 20 5 0 15 12  
VLAN 6 20 5 0 15 12  
VLAN 7 20 5 0 15 12  
VLAN 8 5 8 0 10 10  
VLAN 9 20 5 0 15 12  
VLAN 10 20 5 0 15 12  
VLAN 11 20 5 0 15 12  
VLAN 12 20 5 0 15 12
```

Description of fields:

Field	description
Received Requests	Number of received ARP requests
Received Replies	Number of received ARP response messages
Received Others	Number of other received ARP packets
Sent Requests	Number of sent ARP requests
Sent Replies	Number of sent ARP requests

Related Commands	Command	Description
	N/A.	N/A.

**Platform** N/A  
**Description**

## 2.21 show arp timeout

Use this command to display the aging time of a dynamic ARP entry on the interface.

**show arp timeout**

Parameter	Parameter	Description
Description	N/A.	N/A.

**Defaults** N/A.

**Command Mode** Privileged EXEC mode

**Usage Guide** N/A.

**Configuration** The following example displays the output of the **show arp timeout** command:

**Examples**

```
Ruijie# show arp timeout
Interface arp timeout(sec)
-----
VLAN 1 3600
```

The meaning of each field in the ARP cache table is described in Table 1.

**Related  
Commands**

Command	Description
N/A.	N/A.

**Platform  
Description**

N/A

## 2.22 show ip arp

Use this command to display the Address Resolution Protocol (ARP) cache table.

**show ip arp**

**Parameter  
Description**

Parameter	Description
N/A.	N/A.

**Defaults**

N/A.

**Command  
Mode**

Privileged EXEC mode.

**Usage Guide**

N/A.

**Configuration**

The following example displays the output of **show ip arp**:

**Examples**

```
Ruijie# show ip arp
Protocol Address Age(min) Hardware Type Interface
Internet 192.168.7.233 23 0007.e9d9.0488 ARPA FastEthernet 0/0
Internet 192.168.7.112 10 0050.eb08.6617 ARPA FastEthernet 0/0
Internet 192.168.7.79 12 00d0.f808.3d5c ARPA FastEthernet 0/0
Internet 192.168.7.1 50 00d0.f84e.1c7f ARPA FastEthernet 0/0
Internet 192.168.7.215 36 00d0.f80d.1090 ARPA FastEthernet 0/0
Internet 192.168.7.127 0 0060.97bd.ebee ARPA FastEthernet 0/0
Internet 192.168.7.195 57 0060.97bd.ef2d ARPA FastEthernet 0/0
Internet 192.168.7.183 -- 00d0.f8fb.108b ARPA FastEthernet 0/0
```

Each field in the ARP cache table has the following meanings:

Field	Description
Protocol	Network address protocol, always Internet.
Address	The IP address corresponding to the hardware address.



Age (min)	Age of the ARP cache record, in minutes; If it is not locally or statically configured, the value of the field is represented with "-".
Hardware	Hardware address corresponding to the IP address
Type	The type of hardware address. The value is ARPA for all Ethernet addresses.
Interface	Interface associated with the IP address.

**Related  
Commands**

Command	Description
N/A.	N/A.

**Platform  
Description**

N/A

## 3 IPv6 Commands

### 3.1 clear ipv6 neighbors

Use this command to clear the dynamic IPv6 neighbors.

**clear ipv6 neighbors** [*interface-id*]

Parameter Description	Parameter	Description
	<i>interface-id</i>	Interface name. Clear the dynamically learned IPv6 neighbors on the specified interface.

**Defaults** N/A

**Command Mode** Privileged EXEC mode.

**Usage Guide** This command does not clear all the dynamic neighbors on authentication VLAN.  
Note that the static neighbors will not be cleared.

**Configuration Examples** The following example clears the dynamic IPv6 neighbors.

```
Ruijie# clear ipv6 neighbors
```

Related Commands	Command	Description
	ipv6 neighbor	Configures the neighbor.
	show ipv6 neighbors	Displays the neighbor information.

**Platform** N/A

**Description**

### 3.2 ipv6 address

Use this command to configure an IPv6 address for a network interface. Use the **no** form of this command to restore the default setting.

**ipv6 address ipv6-address/prefix-length**

**ipv6 address** *ipv6-prefix/prefix-length* **eui-64**

**ipv6 address** *prefix-name sub-bits/prefix-length* [ **eui-64** ]

**no ipv6 address**

**no ipv6 address** *ipv6-address/prefix-length*

**no ipv6 address** *ipv6-prefix/prefix-length* **eui-64**

**no ipv6 address** *prefix-name sub-bits/prefix-length* [ **eui-64** ]

Parameter	Parameter	Description
Description	<i>ipv6-prefix</i>	IPv6 address prefix in the format defined in RFC4291. The address shall be in hex; the fields in the address shall be separated by comma, and each field shall contain 16 bits.
	<i>ipv6-address</i>	IPv6 address in the format defined in RFC4291. The address shall be in hex; the fields in the address shall be separated by comma, and each field shall contain 16 bits.
	<i>prefix-length</i>	Length of the IPv6 prefix, the network address of the IPv6 address. Note: The prefix length range of the IPv6 address of the interface of S86 is 0 to 64 or 128 to 128.
	<i>prefix-name</i>	The general prefix name. Use the specified general prefix to generate the interface address.
	<i>sub-bits</i>	The value of the sub-prefix bit and the host bit generates the interface address combining with the general prefix. The value shall be in the format defined in the RFC4291.
	<i>eui-64</i>	The generated IPV6 address consists of the address prefix and the 64 bit interface ID

**Defaults** N/A

**Command Mode** Interface configuration mode

**Usage Guide** When an IPv6 interface is created and the link status is UP, the system will automatically generate a local IP address for the interface.

The IPv6 address could also be generated using the general prefix. That is, the IPv6 address consists of the general prefix and the sub-prefix and the host bit. The general prefix could be configured using the **ipv6 general-prefix** command or may be learned through the DHCPv6 agent PD (Prefix Discovery) function (please refer to the *DHCPv6 Configuration*). Use the *sub-bits/prefix-length* parameter of this command to configure the sub-prefix and the host bit.

If no deleted address is specified when using **no ipv6 address**, all the manually configured addresses will be deleted.

**no ipv6 address *ipv6-prefix/prefix-length eui-64*** can be used to delete the addresses configured with **ipv6 address *ipv6-prefix/prefix-length eui-64***.

**Configuration Examples**

```
Ruijie(config-if)# ipv6 address 2001:1::1/64
Ruijie(config-if)# no ipv6 address 2001:1::1/64
Ruijie(config-if)# ipv6 address 2002:1::1/64 eui-64
Ruijie(config-if)# no ipv6 address 2002:1::1/64 eui-64
```

Related Commands	Command	Description
	N/A	N/A

**Platform** N/A

**Description**

### 3.3 ipv6 address autoconfig

Use this command to automatically configure an IPv6 stateless address for a network interface. Use the **no** form of this command to restore the default setting.

**ipv6 address autoconfig [ default ]**

**no ipv6 address autoconfig**

Parameter	Parameter	Description
Description	<b>default</b>	(Optional) If this keyword is configured, a default routing is generated. Note that only one layer3 interface on the entire device is allowed to use the <b>default</b> keyword

**Defaults** N/A

**Command Mode** Interface configuration mode

**Usage Guide** The stateless automatic address configuration is that when receiving the RA (Route Advertisement) message, the device could use the prefix information of the RA message to automatically generate the EUI-64 interface address.

If the RA message contains the flag of the “other configurations”, the interface will obtain these “other configurations” through the DHCPv6. The “other configurations” usually means the IPv6 address of the DNS server, the IPv6 address of the NTP server, etc.

Use the **no ipv6 address autoconfig** command to delete the IPv6 address.

**Configuration Examples**

```
Ruijie(config-if)# ipv6 address autoconfig default
Ruijie(config-if)# no ipv6 address autoconfig
```

Related Commands	Command	Description
	<b>ipv6 address <i>ipv6-prefix/prefix-length</i> [ <i>eui-64</i> ]</b>	Configures the IPv6 address for the interface manually.

**Platform Description** N/A

### 3.4 ipv6 enable

Use this command to enable the IPv6 function on an interface. Use the **no** form of this command to restore the default setting.

**ipv6 enable**

**no ipv6 enable**

Parameter	Parameter	Description
Description	N/A	N/A

**Defaults** This function is disabled by default.

**Command Mode** Interface configuration mode

**Usage Guide** The IPv6 function of an interface can be enabled by configuring **ipv6 enable** or by configuring IPv6 address for the interface.

 If an IPv6 address is configured for the interface, the IPv6 function will be enabled automatically on the interface and cannot be disabled with **no ipv6 enable**.

**Configuration Examples** Ruijie (config-if) # **ipv6 enable**

Related	Command	Description
Commands	<b>show ipv6 interface</b>	Displays the related information of an interface.

**Platform Description** N/A

### 3.5 ipv6 general-prefix

Use this command to configure the IPv6 general prefix in the global configuration mode.

**ipv6 general-prefix** *prefix-name ipv6-prefix/prefix-length*

**no ipv6 general-prefix** *prefix-name ipv6-prefix/prefix-length*

Parameter	Parameter	Description
Description	<i>prefix-name</i>	The general prefix name.
	<i>pv6-prefix</i>	The network prefix value of the general-prefix following the format defined in RFC4291.
	<i>prefix-length</i>	The length of the general prefix.

**Defaults** N/A

**Command Mode** Global configuration mode.

**Usage Guide** It is convenient to number the network by using the general prefix, which defines a prefix so that many longer specified prefixes could refer to it. These specified prefixes are updated whenever the general prefix changes. If the network number changes, just modify the general prefix.

A general prefix could contain multiple prefixes.

These longer specified prefixes are usually used for the Ipv6 address configuration on the interface.

**Configuration** The following example configures manually a general prefix as my-prefix.

**Examples** Ruijie(config)# `ipv6 general-prefix my-prefix 2001:1111:2222::/48`

Related Commands	Command	Description
	<code>ipv6 address prefix-name sub-bits/prefix-length</code>	Configures the interface address using the general prefix.
	<code>show ipv6 general-prefix</code>	Displays the general prefix.

**Platform** N/A

**Description**

### 3.6 ipv6 hop-limit

Use this command to configure the default hopcount to send unicast messages in the global configuration mode.

**ipv6 hop-limit** *value*

**no ipv6 hop-limit**

Parameter	Parameter	Description
Description	N/A	N/A

**Defaults** The default is 64.

**Command Mode** Global configuration mode.

**Usage Guide** This command takes effect for the unicast messages only, not for multicast messages.

**Configuration Examples** Ruijie(config)# `ipv6 hop-limit 100`

Related Commands	Command	Description
	N/A	N/A

**Platform** N/A

**Description**

### 3.7 ipv6 icmp error-interval

Use this command to set the frequency with which ICMPv6-oversize error packets are sent. Use the **no** form of this command to restore the default setting.

**ipv6 icmp error-interval too-big** *milliseconds* [ *bucket-size* ]

**no ipv6 icmp error-interval too-big** *milliseconds* [ *bucket-size* ]

Use this command to set the frequency with which other ICMPv6 error packets are sent. Use the **no** form of this command to restore the default setting.

**ipv6 icmp error-interval** *milliseconds* [ *bucket-size* ]

**no ipv6 icmp error-interval** *milliseconds* [ *bucket-size* ]

**Parameter  
Description**

Parameter	Description
<i>milliseconds</i>	Sets the refresh interval of the token bucket, in the range from 0 to 2147483647 in the unit of seconds. Setting the value to 0 indicates that the frequency with which ICMPv6 error packets are sent is not fixed.
<i>bucket-size</i>	Sets the number of tokens in the token bucket, in the range from 1 to 200.

**Defaults** The default *milliseconds* is 100 and *bucket-size* is 10.

**Command  
Mode** Global configuration mode

**Usage Guide** The token bucket algorithm is adopted to set the frequency with which ICMPv6 error packets are sent so as to prevent Denial of Service (DoS) attack.

If the forwarded IPv6 packet is greater than the egress IPv6 MTU in size, the router discards the IPv6 packet and sends the ICMPv6-oversize error packet to the source IPv6 address. This kind of ICMPv6 error packet is used for IPv6 path MTU discovery. If there are too many ICMPv6 error packets, the ICMPv6-oversize error packet may not be sent, causing IPv6 path MTU discovery failure. Therefore, it is recommended to set the frequency of ICMPv6-oversize error packet and other ICMPv6 error packet respectively. Note that ICMPv6 redirect packet is not an ICMPv6 error packet and Ruijie sets the frequency of the ICMPv6 redirect packet the same as that of other ICMPv6 error packet.

For the timer is accurate to 10 milliseconds, it is recommended to set the refresh interval of the token bucket to an integer multiple of 10 milliseconds. If the refresh interval is not an integer multiple of 10 milliseconds, it is converted automatically. For example, the frequency of 1 per five milliseconds turns out to be 2 per 10 milliseconds; the frequency of 3 per 15 milliseconds is converted to 2 per 10 milliseconds.

**Configuration  
Examples** The following example sets the frequency with which ICMPv6-oversize error packets are sent to 100 per second.

```
Ruijie(config)# ipv6 icmp error-interval too-big 1000 100
```

The following example sets the frequency with which other ICMPv6 error packets are sent to 10 per second.

```
Ruijie(config)# ipv6 icmp error-interval 1000 10
```

**Related  
Commands**

Command	Description
N/A	N/A

**Platform** N/A

**Description**

### 3.8 ipv6 mtu

Use this command to configure the MTU of IPv6 packets. Use the **no** form of this command to restore the default setting.

**ipv6 mtu** *bytes*

**no ipv6 mtu**

Parameter	Parameter	Description
Description	<i>bytes</i>	MTU of IPv6 packets, in bytes. The value ranges from 1280 to 1500.

**Defaults** The default configuration is the same as the configuration of the **mtu** command.

**Command Mode** Interface configuration mode

**Usage Guide** If the size of an IPv6 packet exceeds the IPv6 MTU, the RGOS software segments the packet. For all devices in the same physical network segment, the IPv6 MTU of the interconnected interface must be the same.

**Configuration Examples** The following example sets the IPv6 MTU of the FastEthernet 0/1 interface to 1400 bytes.

```
Ruijie(config)# interface fastEthernet 0/1
Ruijie(config-if)# ipv6 mtu 1400
```

Related	Command	Description
Commands	<b>mtu</b>	Sets the MTU of an interface.

**Platform** This command cannot be used on Layer 2 devices.

**Description**

### 3.9 ipv6 nd cache interface-limit

Use this command to set the maximum number of neighbors learned on the interface. Use the **no** form of this command to restore the default setting.

**ipv6 nd cache interface-limit** *value*

**no ipv6 nd cache interface-limit**

Parameter	Parameter	Description
Description	<i>value</i>	Sets the maximum number of neighbors learned on the interface, including the static and dynamic



	neighbors, in the range from 0 to the number supported by the device. 0 indicates the number is not limited.
--	--

**Defaults** The default is 0.

**Command Mode** Interface configuration mode

**Usage Guide** This function can prevent neighbor entries generated by malicious neighbor attacks from consuming memory. *limit* must be no smaller than the number of neighbors learned on the interface. Otherwise, the configuration does not take effect.

**Configuration Examples** The following example sets the number of neighbors learned on the interface to 100.

```
Ruijie(config)# interface GigabitEthernet 0/1
Ruijie(config-if-GigabitEthernet 0/1)# ipv6 nd cache interface-limit 100
```

Related Commands	Command	Description
	N/A	N/A

**Platform Description** N/A

### 3.10 ipv6 nd dad attempts

Use this command to set the number of the NS packets to be continuously sent for IPv6 address collision check on the interface. Use the **no** form of this command to restore it to the default setting.

ipv6 nd dad attempts *value*

**no** ipv6 nd dad attempts *value*

Parameter Description	Parameter	Description
	<i>value</i>	Number of the NS packets. If it is set to 0, it indicates that the IPv6 address collision check is disabled on the interface. The range is 0 to 600.

**Defaults** The default is 1.

**Command Mode** Interface configuration mode.

**Usage Guide** When the interface is configured with a new IPv6 address, the address collision shall be checked before the address is assigned to the interface, and the address shall be in the "tentative" status. After the address collision check is completed, if no collision is detected, the address can be used normally; if collision is detected and the interface ID of the address is an EUI-64 ID, it indicates that

the link-layer address is repeated, and the system will automatically shut down the interface (that is, to prohibit IPv6 operations on the interface). In this case, you shall modify and configure a new address manually, and restart address collision check for the **down/up** interface. Whenever the state of an interface changes from **down** to **up**, the address collision check function of the interface will be enabled.

**Configuration** Ruijie(config-if)# ipv6 nd dad attempts 3

#### Examples

Related	Command	Description
Commands	show ipv6 interface	Displays the interface information.

**Platform** N/A

#### Description

## 3.11 ipv6 nd dad retry

Use this command to set the interval for address conflict detection. Use the **no** form of this command to restore the default setting.

**ipv6 nd dad retry** *value*

**no ipv6 nd dad retry**

Parameter	Parameter	Description
Description	<i>value</i>	Sets the interval for address conflict detection, 60 seconds by default. Setting <i>value</i> to 0 indicates that the function is disabled.

**Defaults** N/A

**Command Mode** Global configuration mode

**Usage Guide** Before configuring a new IPv6 address for an interface, enable address conflict detection on the interface. If a conflict address is detected, the device does not receive the IPv6 packet destined to the conflict address. This command is used to perform conflict detection again when the interval expires. If there is no conflict, the address can be used.

**Configuration** The following example sets the interval for address conflict detection to 10s.

**Examples** Ruijie(config)# ipv6 nd dad retry 10

Related	Command	Description
Commands	N/A	N/A

**Platform** N/A  
**Description**

## 3.12 ipv6 nd managed-config-flag

Use this command to set the “managed address configuration” flag bit of the RA message. Use the **no** form of this command to restore the default setting.

**ipv6 nd managed-config-flag**

**no ipv6 nd managed-config-flag**

Parameter	Parameter	Description
Description	N/A	N/A

**Defaults** N/A

**Command**

**Mode** Interface configuration mode.

**Usage Guide** This flag determines whether the host that receives the RA message obtains an IP address through stateful auto configuration. If the flag is set, the host obtains an IP address through stateful auto configuration, otherwise it does not be used.

**Configuration Examples** Ruijie(config-if)# ipv6 nd managed-config-flag

Related	Command	Description
Commands	<b>show ipv6 interface</b>	Displays the interface information.
	<b>ipv6 nd other-config-flag</b>	Sets the flag for obtaining all information except IP address through stateful auto configuration.

**Platform** N/A  
**Description**

## 3.13 ipv6 nd ns-interval

Use this command to set the interval for the interface to retransmitting NS (Neighbor Solicitation). Use the **no** form of this command to restore the default setting.

**ipv6 nd ns-interval** *milliseconds*

**no ipv6 nd ns-interval**

Parameter	Parameter	Description
Description	<i>milliseconds</i>	Interval for retransmitting NS in the range of 1000 to 429467295 milliseconds

**Defaults** The default value in RA is 0 (unspecified); the interval for retransmitting NS is 1000 milliseconds (1 second).

**Command mode** Interface configuration mode.

**Usage Guide** The configured value will be advertised through RA and will be used by the device itself. It is not recommended to set a too short interval.

**Configuration Examples**

```
Ruijie(config-if)# ipv6 nd ns-interval 2000
```

Related Commands	Command	Description
	<b>show ipv6 interface</b>	Displays the interface information.

**Platform Description** N/A

### 3.14 ipv6 nd other-config-flag

Use this command to set “other stateful configuration” flag bit of the RA message. Use the **no** form of this command to delete the flag bit.

**ipv6 nd other-config-flag**

**no ipv6 nd other-config-flag**

Parameter	Parameter	Description
<b>Description</b>	N/A	N/A

**Defaults** The flag bit is not set by default.

**Command mode** Interface configuration mode.

**Usage Guide** With this flag bit set, the flag bit of the RA message sent by the device is set. After receiving this flag bit, the host uses the dhcpv6 to acquire the information excluding the IPv6 address for the purpose of automatic configuration. When the **managed address configuration** is set, the default **other stateful configuration** is also set

**Configuration Examples**

```
Ruijie(config-if)# ipv6 nd other-config-flag
```

Related Commands	Command	Description
	<b>show ipv6 interface</b>	Displays the interface information.

**Platform** N/A

**Description**

### 3.15 ipv6 nd prefix

Use this command to configure the address prefix included in the RA. Use the **no** form of this command to delete the set prefix or restore the default setting.

```
ipv6 nd prefix { ipv6-prefix/prefix-length | default } [ [ valid-lifetime preferred-lifetime ] ] [ at valid-date preferred-date ] [ [ infinite | preferred-lifetime ] ] [ no-advertise ] [ [ off-link ] [ no-autoconfig ] ] [ [ pool pool-name ] ]
```

```
no ipv6 nd prefix { ipv6-prefix/prefix-length | default }
```

Parameter	Parameter	Description
<b>Description</b>	<i>ipv6-prefix</i>	IPv6 network ID following the format defined in RFC4291
	<i>prefix-length</i>	Length of the IPv6 prefix. “/” shall be added in front of the prefix
	<i>valid-lifetime</i>	Valid lifetime of the RA prefix received by the host
	<i>preferred-lifetime</i>	Preferred lifetime of the RA prefix received by the host
	<i>at valid-date preferred-date</i>	Sets the dead line for the valid lifetime and that of the preferred lifetime, in day, month, year, hour, minute.
	<b>infinite</b>	Indicates that the prefix is always valid.
	<b>default</b>	Sets the default prefix.
	<b>no-advertise</b>	The prefix will not be advertised by the device.
	<b>off-link</b>	When the host sends an IPv6 packet, if the prefix of the destination address matches the set prefix, it is considered that the destination is on-link and is directly reachable. If this option is set, it indicates that the prefix is not used for on-link judgment.
	<b>no-autoconfig</b>	Indicates that the RA prefix received by the host cannot be used for auto address configuration.
	<b>pool</b> pool-name	Indicates the IPv6 prefix pool

**Defaults** By default, the advertised prefix is the one set with **ipv6 address** on the interface. The default parameters of the prefix configured in the RA are as follows:

*valid-lifetime*: 2592000s (30 days)

*preferred-lifetime*: 604800s (7 days),

The prefix is advertised and is used for on-link judgment and auto address configuration.

**Command** Interface configuration mode.

**Mode**

**Usage Guide** This command can be used to configure the parameters of each prefix, including whether to advertise the prefix. By default, the prefix advertised in RA is the one set with **ipv6 address** on the interface. To add other prefixes, use this command.

**ipv6 nd prefix default**

Set the default parameters to be used by the interface. If no parameter is specified for an added prefix, the parameters set with **ipv6 nd prefix default** will be used. Note that after a parameter is specified for the prefix, the default configuration will not be used. That is to say, the configuration of the prefix cannot be modified with **ipv6 nd prefix default**; only the prefix that uses all the default configurations can be modified with this command.

**at valid-date preferred-date**

The valid lifetime of a prefix can be specified in two ways. One way is to specify a fixed time for each prefix in the RA; the other way is to specify the end time (in this mode, the valid lifetime of the prefix sent in RA will be gradually reduced until the end time is 0).

**Configuration** The following example adds a prefix for SVI 1.

**Examples**

```
Ruijie(config)# interface vlan 1
Ruijie(config-if)# ipv6 nd prefix 2001::/64 infinite 2592000
```

The following example sets the default prefix parameters for SVI 1 (they cannot be used for auto address configuration):

```
Ruijie(config)# interface vlan 1
Ruijie(config-if)# ipv6 prefix default no-autoconfig
```

If no parameter is specified, the default parameters will be used, and the prefix cannot be used for auto address configuration.

Related Commands	Command	Description
	<b>show ipv6 interface</b>	Displays the RA information of an interface.

**Platform** N/A

**Description**

## 3.16 ipv6 nd ra-hoplimit

Use this command to set the hopcount of the RA message. Use the **no** form of this command to restore the default setting.

**ipv6 nd ra-hoplimit** *value*

**no ipv6 nd ra-hoplimit**

Parameter Description	Parameter	Description
	<i>value</i>	Hopcount

**Defaults** The default is 64.

**Command** Interface configuration mode.

**Mode**

**Usage Guide** This command is used to set the hopcount of the RA message.

**Configuration** Ruijie(config-if)# **ipv6 nd ra-hoplimit** 110

**Examples****Related****Commands**

Command	Description
<b>show ipv6 interface</b>	Displays the interface information.
<b>ipv6 nd ra-lifetime</b>	Sets the lifetime of the device.
<b>ipv6 nd ra-interval</b>	Sets the interval of sending the RA message.
<b>ipv6 nd ra-mtu</b>	Sets the MTU of the RA message.

**Platform** N/A

**Description**

### 3.17 ipv6 nd ra-interval

Use this command to set the interval of sending the RA. Use the **no** form of this command to restore the default setting.

**ipv6 nd ra-interval** { *seconds* | **min-max** *min\_value* *max\_value* }

**no ipv6 nd ra-interval**

**Parameter****Description**

Parameter	Description
<i>seconds</i>	Interval of sending the RA message in seconds, 3-1800s.
<b>min-max</b>	Maximum and minimum interval sending the RA message in seconds
<i>min_value</i>	Minimum interval sending the RA message in seconds
<i>max_value</i>	Maximum interval sending the RA message in seconds

**Defaults** 200s. The actual interval of sending the RA message will be fluctuated 20% based on 200s.

**Command** Interface configuration mode.

**Mode**

**Usage Guide** If the device serves as the default device, the set interval shall not be longer than the lifetime of the device. Besides, to ensure other devices along the link occupies network bandwidth while sending the RA message, the actual interval for sending the RA message will be fluctuated 20% based on the set value.

If the key word **min-max** is specified, the actual interval for sending the packet will be chosen between the range of minimum value and maximum value.

**Configuration** Ruijie(config-if)# **ipv6 nd ra-interval** 110

**Examples** Ruijie(config-if)# **ipv6 nd ra-interval min-max** 110 120

Related	Command	Description
Commands	<b>show ipv6 interface</b>	Displays the interface information.
	<b>ipv6 nd ra-lifetime</b>	Sets the lifetime of the device.
	<b>ipv6 nd ra-hoplimit</b>	Sets the hopcount of the RA message.
	<b>ipv6 nd ra-mtu</b>	Sets the MTU of the RA message.

**Platform** N/A

**Description**

### 3.18 ipv6 nd ra-lifetime

Use this command to set the device lifetime of the RA sent on the interface. Use the **no** form of this command to restore the default setting.

**ipv6 nd ra-lifetime** *seconds*

**no ipv6 nd ra-lifetime**

Parameter	Parameter	Description
Description	<i>seconds</i>	Default life time of the device on the interface, in the range from 0 to 9000 in the unit of seconds.

**Defaults** The default is 1800.

**Command Mode** Interface configuration mode.

**Usage Guide** The router lifetime field is available in each RA. It specifies the time during which the hosts along the link of the interface can select the device as the default device. If the value is set to 0, the device will not serve as the default device any longer. If it is not set to 0, it shall be larger than or equal to the interval of sending the RA (ra-interval)

**Configuration Examples** Ruijie(config-if)# ipv6 nd ra-lifetime 2000

Related	Command	Description
Commands	<b>show ipv6 interface</b>	Displays the interface information.
	<b>ipv6 nd ra-interval</b>	Sets the interval of sending the RA.
	<b>ipv6 nd ra-hoplimit</b>	Sets the hopcount of the RA.
	<b>ipv6 nd ra-mtu</b>	Sets the MTU of the RA.

**Platform** N/A

**Description**



### 3.19 ipv6 nd ra-mtu

Use this command to set the MTU of the RA message. Use the **no** form of this command to restore the default setting.

**ipv6 nd ra-mtu** *value*

**no ipv6 nd ra-mtu**

Parameter	Parameter	Description
Description	<i>value</i>	MTU value, in the range from 0 to 4294967295.

**Defaults** IPv6 MTU value of the network interface.

**Command Mode** Interface configuration mode.

**Usage Guide** If it is specified as 0, the RA will not have the MTU option

**Configuration Examples**

```
Ruijie(config-if)# ipv6 nd ra-mtu 1400
```

Related Commands	Command	Description
	<b>show ipv6 interface</b>	Displays the interface information.
	<b>ipv6 nd ra-lifetime</b>	Sets the lifetime of the device.
	<b>ipv6 nd ra-interval</b>	Sets the interval of sending the RA message.
	<b>ipv6 nd ra-hoplimit</b>	Sets the hopcount of the RA message.

**Platform Description** N/A

### 3.20 ipv6 nd reachable-time

Use this command to set the reachable time after the interface checks the reachability of the neighbor dynamically learned through NDP. Use the **no** form of this command to restore the default setting.

**ipv6 nd reachable-time** *milliseconds*

**no ipv6 nd reachable-time**

Parameter	Parameter	Description
Description	<i>milliseconds</i>	Reachable time for the neighbor in the range from 0 to 3600000 in the unit of milliseconds.

**Defaults** The default value in RA is 0 (unspecified); the reachable time for the neighbor is 30000 milliseconds (30 seconds) when the device discovers the neighbor.

**Command** Interface configuration mode.  
**Mode**

**Usage Guide** The device checks the unreachable neighbor through the set time. A shorter time means that the device can check the neighbor failure more quickly, but more network bandwidth and device resource will be occupied. Therefore, it is not recommended to set a too short reachable time.

The configured value will be advertised through RA and will be used by the device itself. If the value is set to 0, it indicates that the time is not specified, that is, the default value is used.

According to RFC4861, the actual time to reach neighbor is not consistent with the configured value, ranging from 0.5\*configured value to 1.5\*configured value.

**Configuration** Ruijie(config-if)# ipv6 nd reachable-time 1000000

**Examples**

Related Commands	Command	Description
	show ipv6 interface	Displays the interface information.

**Platform** N/A  
**Description**

## 3.21 ipv6 nd state-time

Use this command to set the period for the neighbor to maintain the state. Use the **no** form of this command to restore the default setting.

**ipv6 nd state-time** *seconds*

**no ipv6 nd state-time**

Parameter Description	Parameter	Description
	Seconds	Sets the period for the neighbor to maintain the state, in the range from 0 to 86400 in the unit of seconds.

**Defaults** The default is 3600.

**Command** Global configuration mode  
**Mode**

**Usage Guide** This command is used to set the period for the neighbor to maintain the state. After the period expires, neighbor unreachability detection is performed. The shorter the period, the faster the neighbor is found unreachable. On the other hand, more network bandwidth and device resources are consumed. Therefore, it is recommended to set a value not too small.

**Configuration** The following example sets the period to 600 seconds for the neighbor to maintain the state.

**Examples** Ruijie(config)# ipv6 nd state-time 600

Related Commands	Command	Description
	N/A	N/A

Platform N/A  
Description

### 3.22 ipv6 nd suppress-ra

Use this command to disable the interface from sending the RA message. Use the **no** form of this command to enable the function.

**ipv6 nd suppress-ra**

**no ipv6 nd suppress-ra**

Parameter Description	Parameter	Description
	N/A	N/A

**Defaults** The **ipv6 nd suppress-ra** command is enabled by default.

**Command Mode** Interface configuration mode.

**Usage Guide** This command suppresses the sending of the RA message on an interface.

**Configuration Examples**  
Ruijie(config-if) # ipv6 nd suppress-ra

Related Commands	Command	Description
	<b>show ipv6 interface</b>	Displays the interface information.

Platform N/A  
Description

### 3.23 ipv6 nd unresolved

Use this command to set the maximum number of the unresolved neighbor table entries. Use the **no** form of this command to restore the default setting.

**ipv6 nd unresolved** *number*

**no ipv6 nd unresolved**

Parameter Description	Parameter	Description
	<i>number</i>	Sets the maximum number of the unresolved neighbor table entries, in the range from 1 to the neighbor table size supported by the device.

<b>Defaults</b>	The default is 0. (The maximum number is the neighbor table size supported by the device)				
<b>Command Mode</b>	Global configuration mode				
<b>Usage Guide</b>	This command is used to prevent unresolved ND table entries generated by malicious scan attacks from consuming table entry resources,				
<b>Configuration Examples</b>	<p>The following example sets the maximum number of the unresolved neighbor table entries to 200.</p> <pre>Ruijie(config)# ipv6 nd unresolved 200</pre>				
<b>Related Commands</b>	<table> <tr> <th>Command</th><th>Description</th></tr> <tr> <td>N/A</td><td>N/A</td></tr> </table>	Command	Description	N/A	N/A
Command	Description				
N/A	N/A				
<b>Platform Description</b>	N/A				

### 3.24 ipv6 neighbor

Use this command to configure a static neighbor. Use the **no** form of this command to delete a static neighbor.

**ipv6 neighbor** *ipv6-address interface-id hardware-address*

**no ipv6 neighbor** *ipv6-address interface-id*

<b>Parameter Description</b>	Parameter	Description
	<i>ipv6-address</i>	The neighbor IPv6 address, in the form as defined in RFC4291.
	<i>interface-id</i>	Specifies the network interface where the neighbor is (including Router Port, L3 AP port and SVI interface).
	<i>hardware-address</i>	The 48-bit MAC address, a dotted triple of four-digit hexadecimal numbers.

<b>Defaults</b>	No static neighbor is configured by default.
<b>Command Mode</b>	Global configuration mode
<b>Usage Guide</b>	<p>This command can only be configured on the interface enabled with IPv6 protocol, similar to the ARP command.</p> <p>If the neighbor to be configured has been learned through Neighbor Discovery Protocol (NDP) and stored in the NDP neighbor table, the dynamic neighbor turns to be static. If the static neighbor is valid, it is always reachable. An invalid static neighbor refers to the neighbor whose IPv6 address is not valid (not in the IPv6 network segment configured for the interface or interface address conflict).</p>

The packet is not forwarded to the MAC address as specified by the invalid static neighbor. The invalid static neighbor is in inactive state. Use the `show ipv6 neighbor static` command to display the state of the static neighbor.

Use the **clear ipv6 neighbors** command to clear all neighbors learned dynamically through NDP.

**Configuration** The following example configures a static neighbor on SVI 1.

**Examples**

```
Ruijie(config)# ipv6 neighbor 2001::1 vlan 1 00d0.f811.1111
```

Related Commands	Command	Description
	N/A	N/A

**Platform** N/A

**Description**

## 3.25 ipv6 ns-linklocal-src

Use this command to set the local address of the link as the source IP address to send neighbor requests. Use the **no** form of this command to use the global IP address w as the source address to send neighbor requests.

**ipv6 ns-linklocal-src**

**no ipv6 ns-linklocal-src**

Parameter Description	Parameter	Description
	N/A	N/A

**Defaults** The local address of the link is always used as the source address to send neighbor requests.

**Command Mode** Global configuration mode.

**Usage Guide** N/A

**Configuration Examples**

```
Ruijie(config)# no ipv6 ns-linklocal-src
```

Related Commands	Command	Description
	N/A	N/A

**Platform** N/A

**Description**

## 3.26 ipv6 redirects

Use this command to control whether to send ICMPv6 redirect message when the switch receives and forwards an IPv6 packet through an interface. Use the **no** form of this command to restore the default setting.

**ipv6 redirects**

**no ipv6 redirects**

Parameter	Parameter	Description
Description	N/A	N/A

**Defaults** This function is enabled by default.

**Command Mode** Interface configuration mode.

**Usage Guide** The transmission rate of any ICMPv6 error message is limited. By default, it is 10pps.

**Configuration Examples** The following example enables ICMPv6 redirection on interface GigabitEthernet 0/1.

```
Ruijie(config-if-GigabitEthernet 0/1)# ipv6 redirects
```

Related Commands	Command	Description
	<b>show ipv6 interface</b>	Displays the interface information.

**Platform Description** N/A

## 3.27 ipv6 source-route

Use this command to forward the IPv6 packet with route header. Use the **no** form of this command to restore the default setting.

**ipv6 source-route**

**no ipv6 source-route**

Parameter	Parameter	Description
Description	N/A	N/A

**Defaults** The **ipv6 source-route** command is disabled by default.

**Command Mode** Global configuration mode.

**Usage Guide** Because of the potential security of the header of type 0 route, it's easy for the device to suffer from

the denial service attack. Therefore, forwarding the IPv6 packet with route header is disabled by default. However, the IPv6 packet of route header with type 0 that destined to the local machine is processed.

**Configuration** Ruijie(config)# no ipv6 source-route

#### Examples

Related	Command	Description
Commands	N/A	N/A

**Platform** N/A

#### Description

## 3.28 show ipv6 address

Use this command to display the IPv6 addresses.

**show ipv6 address** [ *interface-name* ]

Parameter	Parameter	Description
Description	<i>interface-name</i>	Interface name

**Defaults** N/A

**Command Mode** Privileged EXEC mode.

**Usage Guide** N/A

**Configuration Examples** The following example displays all IPv6 address configured on the device.

```
Ruijie#show ipv6 address
Global unicast address limit: 1024, Global unicast address count: 3
Tentative address count: 2,Duplicate address count: 1
Preferred address count: 3,Deprecated address count: 0
Gi 0/5
  FE80::1/64 Preferred
    Preferred lifetime: INFINITE, Valid lifetime: INFINITE
  1000::1/64 Duplicate
    Preferred lifetime: INFINITE, Valid lifetime: INFINITE
Gi 0/6
  FE80::1/64 Tentative
    Preferred lifetime: INFINITE, Valid lifetime: INFINITE
  1111:1111:1111:1111:1111:1111:1111:1111/64 Tentative
    Preferred lifetime: INFINITE, Valid lifetime: INFINITE
Gi 0/7
  FE80::1/64 Preferred
    Preferred lifetime: INFINITE, Valid lifetime: INFINITE
  2000:1111:1111:1111:1111:1111:1111:1111/64 Preferred
    Preferred lifetime: INFINITE, Valid lifetime: INFINITE
```

The following example displays the IPv6 address configured on the GigabitEthernet 0/1.

```
Ruijie#show ipv6 address Gi 0/5
Global unicast address count: 3
Tentative address count: 0,Duplicate address count: 1
Preferred address count: 1,Deprecated address count: 0
FE80::1/64 Preferred
  Preferred lifetime: INFINITE, Valid lifetime: INFINITE
1000::1/64 Duplicate
  Preferred lifetime: INFINITE, Valid lifetime: INFINITE
```

Related Commands	Command	Description
	N/A	N/A

Platform N/A  
Description

## 3.29 show ipv6 general-prefix

Use this command to display the information of the general prefix.

**show ipv6 general-prefix**

Parameter Description	Parameter	Description
	N/A	N/A

Defaults N/A

Command Privileged EXEC mode.  
Mode



**Usage Guide** Use this command to display the information of the general prefix including the manually configured and learned from the DHCPv6 agent.

**Configuration Examples** The following example displays the information of the general prefix.

```
Ruijie# show ipv6 general-prefix
There is 1 general prefix.
IPv6 general prefix my-prefix, acquired via Manual configuration
  2001:1111:2222::/48
  2001:1111:3333::/48
```

Related Commands	Command	Description
	<b>ipv6 general-prefix</b>	Configures the general prefix.

**Platform Description** N/A

### 3.30 show ipv6 interface

Use this command to display the IPv6 interface information.

**show ipv6 interface** [ *interface-id* ] [ **ra-info** ] [ **brief** [ *interface-id* ] ]

Parameter Description	Parameter	Description
	<i>interface-id</i>	Interface (including Ethernet interface, aggregate port, or SVI)
	<b>ra-info</b>	Displays the RA information of the interface.
	<b>brief</b>	Displays the brief information of the interface (interface status and address information).

**Defaults** N/A

**Command Mode** Privileged EXEC mode.

**Usage Guide** Use this command to display the address configuration, ND configuration and other information of an IPv6 interface.

**Configuration Examples** The following example displays the information of the IPv6 interface.

```
Ruijie# show ipv6 interface vlan 1
Interface vlan 1 is Up, ifindex: 2001
address(es):
Mac Address: 00:00:00:00:00:01
INET6: fe80::200:ff:fe00:1 , subnet is fe80::/64
Joined group address(es):
```

```

ff01:1::1
ff02:1::1
ff02:1::2
ff02:1::1:ff00:1
INET6: 2001::1 , subnet is 2001::/64 [TENTATIVE]
Joined group address(es):
ff01:1::1
ff02:1::1
ff02:1::2
ff02:1::1:ff00:1
MTU is 1500 bytes
ICMP error messages limited to one every 10 milliseconds
ICMP redirects are enabled
ND DAD is enabled, number of DAD attempts: 1
ND reachable time is 30000 milliseconds
ND advertised reachable time is 0 milliseconds
ND retransmit interval is 1000 milliseconds
ND advertised retransmit interval is 0 milliseconds
ND router advertisements are sent every 200 seconds<240--160>
ND device advertisements live for 1800 seconds

```

The following line is included in the above information: 2001::1, subnet is 2001::/64 [TENTATIVE]. The flag bit in the [ ] following the INET6 address is explained as follows:

Flag	Meaning
ANYCAST	Indicate that the address is an anycast address.
TENTATIVE	Indicate that the DAD is underway. The address is a tentative before the DAD is completed.
DUPLICATED	Indicate that a duplicate address exists.
DEPRECATED	Indicate that the preferred lifetime of the address expires.
NODAD	Indicate that no DAD is implemented for the address.
AUTOIFID	Indicate that the interface ID of the address is automatically generated by the system, which is usually an EUI-64 ID.

The following example displays the RA information of the IPv6 interface. Ruijie#

```

show ipv6 interface vlan 1 ra-info
vlan 1: DOWN
RA timer is stopped
waits: 0, initcount: 3
statistics: RA(out/in/inconsistent): 4/0/0, RS(input): 0
Link-layer address: 00:00:00:00:00:01
Physical MTU: 1500
ND device advertisements live for 1800 seconds
ND device advertisements are sent every 200 seconds<240--160>

```

```

Flags: !M!O, Adv MTU: 1500
ND advertised reachable time is 0 milliseconds
ND advertised retransmit time is 0 milliseconds
ND advertised CurHopLimit is 64
Prefixes: (total: 1)
fec0:1:1:1::/64(Def,Auto,vltime: 2592000, pltime: 604800, flags: LA)

```

Description of the fields in **ra-info**:

Field	Meaning
RA timer is stopped (on)	Indicate whether the RA timer is started.
waits	Indicate that the RS is received but the number of the responses is not available.
initcount	Indicate the number of the RAs when the RA timer is restarted.
RA(out/in/ inconsistent)	out: Indicate the number of the RAs that are sent. In: Indicate the number of the RAs that are received. inconsistent: Indicate the number of the received RAs in which the parameters are different from those contained in the RAs advertised by the device.
RS(input)	Indicate the number of the RSs that are received.
Link-layer address	Link-layer address of the interface.
Physical MTU	Link MTU of the interface.
!M   M	!M indicates the managed-config-flag bit in the RA is not set. M: Conversely
!O   O	!O indicates the other-config-flag bit in the RA is not set. O: Conversely

Description of the fields of the prefix list in **ra-info**:

Field	Meaning
total	The number of the prefixes of the interface.
fec0:1:1:1::/64	A specific prefix.
Def	Indicate that the interfaces use the default prefix.
Auto   CFG	Auto: Indicate the prefix is automatically generated after the interface is configured with the corresponding IPv6 address. CFG: Indicate that the prefix is manually configured.
!Adv	Indicate that the prefix will not be advertised.
vltime	Valid lifetime of the prefix, measured in seconds.
pltime	Preferred lifetime of the prefix, measured in seconds.

L   !L	L: Indicate that the on-link in the prefix is set. !L: Indicate that the on-link in the prefix is not set.
A   !A	A: Indicate that the auto-configure in the prefix is set. !A: It indicates that the auto-configure in the prefix is not set.

The following example displays the brief information of the IPv6 interface.

```
Ruijie#show ipv6 interface brief

GigabitEthernet 0/1          [down/down]
    2222::2
    FE80::1614:4BFF:FE5C:ED3A
```

Related Commands	Command	Description
	N/A	N/A

**Platform** N/A  
**Description**

### 3.31 show ipv6 neighbors

Use this command to display the IPv6 neighbors.

**show ipv6 neighbors [ verbose ] [ interface-id ] [ ipv6-address ]**  
**show ipv6 neighbors static**

Parameter Description	Parameter	Description
	<b>verbose</b>	Displays the neighbor details.
	<b>static</b>	Displays the validity status of static neighbors.
	<i>interface-id</i>	Displays the neighbors of the specified interface.
	<i>ipv6-address</i>	Displays the neighbors of the specified IPv6 address.

**Defaults** N/A

**Command Mode** Privileged EXEC mode.

**Usage Guide** N/A

**Configuration Examples**

The following example displays the neighbors on the SVI 1 interface:

```
Ruijie# show
ipv6 neighbors vlan 1
IPv6 Address Linklayer Addr Interface
fa::1 00d0.0000.0002 vlan 1
fe80::200:ff:fe00:2 00d0.0000.0002 vlan 1
Show the neighbor details:
Ruijie# show ipv6 neighbors verbose
```

```
IPv6 Address Linklayer Addr Interface
2001::1 00d0.f800.0001 vlan 1
  State: Reach/H Age: - asked: 0
fe80::200:ff:fe00:1 00d0.f800.0001 vlan 1
  State: Reach/H Age: - asked: 0
```

Field	Meaning
IPv6 Address	IPv6 address of the Neighbor
Linklayer Addr	Link address, namely, MAC address. If it is not available, incomplete is displayed.
Interface	Interface the neighbor locates.
State	<p>State of the neighbor: state/H(R)</p> <p>The values of STATE are as below:</p> <p>INCOMP (Incomplete): The address resolution of the neighbor is underway, the NS is sent, but the NA is not received.</p> <p>REACH (Reachable): The switch is connected with the neighbor. In this state, the switch takes no additional action when sending packets to the neighbor.</p> <p>STALE: The reachable time of the neighbor expires. In this state, the switch takes no additional action; it only starts NUD (Neighbor Unreachability Detection) after a packet is sent to the neighbor.</p> <p>DELAY: A packet is sent to the neighbor in STALE state. If the STALE state changes to DELAY, DELAY will be changed to PROBE if no neighbor reachability notification is received within DELAY_FIRST_PROBE_TIME seconds (5s), the NS will be sent to the neighbor to start NUD.</p> <p>PROBE: The NUD is started to check the reachability of the neighbor. The NS packets are sent to the neighbor at the interval of RetransTimer milliseconds until the response from the neighbor is received or the number of the sent NSs hits MAX_UNICAST_SOLICIT(3).</p> <p>?: Unknown state.</p> <p>/R—indicate the neighbor is considered as a device</p> <p>/H: The neighbor is a host.</p>
Age	The reachable time of the neighbor. '-' indicates that the neighbor is always reachable. Note that the reachability of a static neighbor depends on the actual situation. 'expired' indicates that the lifetime of the neighbor expires, and the neighbor is waits for the triggering of NUD.
Asked	The number of the NSs that are sent to the neighbor for the resolution of the link address of the neighbor.

**Related  
Commands**

Command	Description
<b>ipv6 neighbor</b>	Configures a neighbor.

**Platform** N/A

**Description**

### 3.32 show ipv6 neighbors statistics

Use the following command to show the statistics of IPv6 neighbors.

**show ipv6 neighbors statistics [all]**

Parameter	Parameter	Description
Description	all	Displays the statistics of all IPv6 neighbors.

**Defaults** N/A

**Command Mode** Privileged EXEC mode.

**Usage Guide** N/A

**Configuration** The following example displays the statistics of the global neighbors.

**Examples**

```
Ruijie#show ipv6 neighbor statistics
```

```
Memory: 0 bytes
```

```
Entries: 0
```

```
Static: 0,Dynamic: 0,Local: 0
```

```
Incomplete:0, Reachable:0, Stale:0, Delay:0, Probe:0
```

```
Ruijie#
```

The following example displays the statistics of all IPv6 neighbors.

```
Ruijie#show ipv6 neighbor statistics all
```

```
IPv6 neighbor table count: 1
```

```
Static neighbor count: 0(0 active, 0 inactive)
```

```
Total
```

```
Memory: 0 bytes
```

```
Entries: 0
```

```
Static: 0,Dynamic: 0,Local: 0
```

```
Incomplete:0, Reachable:0, Stale:0, Delay:0, Probe:0;
```

```
Global
```

```
Memory: 0 bytes
```

```
Entries: 0
```

```
Static: 0,Dynamic: 0,Local: 0
```

```
Incomplete:0, Reachable:0, Stale:0, Delay:0, Probe:0;
```

```
Ruijie#
```

Related Commands	Command	Description
	N/A	N/A

**Platform** N/A

**Description**

### 3.33 show ipv6 packet statistics

Use this command to display the statistics of IPv6 packets.

**show ipv6 packet statistics** [ **total** | *interface-name* ]

Parameter Description	Parameter	Description
	<b>total</b>	Displays total statistics of all interfaces.
	<i>interface-name</i>	Interface name

**Defaults** N/A

**Command Mode** Privileged EXEC mode.

**Usage Guide** N/A

**Configuration Examples** The following example displays the total statistics of the IPv6 packets and the statistics of each interface.

```
Ruijie#show ipv6 pack statistics
Total
Received 0 packets, 0 bytes
  Unicast:0,Multicast:0
Discards:0
  HdrErrors:0 (HoplimitExceeded:0,Others:0)
  NoRoutes:0
  Others:0
Sent 0 packets, 0 bytes
  Unicast:0,Multicast:0
GigabitEthernet 0/5
Received 0 packets, 0 bytes
  Unicast:0,Multicast:0
Discards:0
  HdrErrors:0 (HoplimitExceeded:0,Others:0)
  NoRoutes:0
  Others:0
```

```
Sent 0 packets, 0 bytes
    Unicast:0,Multicast:0
Ruijie#
```

The following example displays the total statistics of the IPv6 packets.

```
Ruijie#show ipv6 pack statistics total
Total
    Received 0 packets, 0 bytes
        Unicast:0,Multicast:0
    Discards:0
        HdrErrors:0 (HoplimitExceeded:0,Others:0)
        NoRoutes:0
        Others:0
    Sent 0 packets, 0 bytes
        Unicast:0,Multicast:0
Ruijie#
```

Related Commands	Command	Description
	N/A	N/A

**Platform** Supported on all platforms.

**Description**

### 3.34 show ipv6 raw-socket

Use this command to display all IPv6 raw sockets.

**show ipv6 raw-socket** [ *num* ]

Parameter Description	Parameter	Description
	<u><i>num</i></u>	Protocol.

**Defaults** N/A

**Command  
Mode** Privileged EXEC mode.

**Usage Guide** N/A

**Configuration** The following example displays all IPv6 raw sockets.

**Examples**

```
Ruijie# show ipv6 raw-socket
Number Protocol Process name
1      ICMPv6   vrrp.elf
2      ICMPv6   tcpip.elf
3      VRRP     vrrp.elf
Total: 3
```



Field	Description
Number	Number.
Protocol	Protocol.
Process name	Process number.
Total	Total number of IPv6 raw sockets.

Related Commands	Command	Description
	N/A	N/A

**Platform** N/A  
**Description**

### 3.35 show ipv6 routers

In the IPv6 network, some neighbor routers send out the advertisement messages. Use this command to display the neighbor routers and the advertisement.

**show ipv6 routers** [ *interface-type interface-number* ]

Parameter	Parameter	Description
<b>Description</b>	<i>interface-type</i> <i>interface-number</i>	(Optional) Displays the routing advertisement of the specified interface.

**Defaults** N/A

**Command Mode** Privileged EXEC mode.

**Usage Guide** Use this command to display the neighbor routers and the routing advertisement. If no interface is specified, all the routing advertisement of this device will be displayed.

**Configuration Examples** The following example displays the IPv6 router

```
Ruijie# show ipv6 routers
Router FE80::2D0:F8FF:FEC1:C6E1 on VLAN 2, last update 62 sec
Hops 64, Lifetime 1800 sec, ManagedFlag=0, OtherFlag=0, MTU=1500
Preference=MEDIUM
Reachable time 0 msec, Retransmit time 0 msec
Prefix 6001:3::/64 onlink autoconfig
Valid lifetime 2592000 sec, preferred lifetime 604800 sec
Prefix 6001:2::/64 onlink autoconfig
Valid lifetime 2592000 seconds, preferred lifetime 604800 seconds
```

Related	Command	Description
---------	---------	-------------

<b>Commands</b>	N/A	N/A
-----------------	-----	-----

**Platform** N/A

**Description**

### 3.36 show ipv6 sockets

Use this command to display all IPv6 sockets.

**show ipv6 sockets**

Parameter	Parameter	Description
<b>Description</b>	N/A	N/A

**Defaults** N/A

**Command** Privileged EXEC mode.

**Mode**

**Usage Guide** N/A

**Configuration** The following example displays all IPv6 sockets.

**Examples**

```
Ruijie# show ipv6 sockets
Number Process name      Type  Protocol  LocalIP:Port  ForeignIP:Port  State
1      vrrp.elf             RAW   ICMPv6    :::58         :::0            *
2      tcpip.elf             RAW   ICMPv6    :::58         :::0            *
3      vrrp.elf             RAW   VRRP      :::112        :::0            *
4      rg-snmpd             DGRAM UDP        :::161        :::0            *
5      rg-snmpd             DGRAM UDP        :::162        :::0            *
6      dhcp6.elf            DGRAM UDP        :::547        :::0            *
7      rg-sshd              STREAM TCP       :::22         :::0            LISTEN
8      rg-telnetd           STREAM TCP       :::23         :::0            LISTEN
Total: 8
```

Field	Description
Number	Number.
Process name	Process name.
Type	Socket type. RAW indicates the raw socket. DGRAM indicates data packet type. STREAM indicates traffic type.
Protocol	Protocol number
LocalIP:Port	Local IPv6 address and port.
ForeignIP:Port	Peer IPv6 address and port.
State	State (for IPv6 TCP sockets).

Total	Total number of sockets.
-------	--------------------------

Related Commands	Command	Description
	N/A	N/A

**Platform** N/A  
**Description**

### 3.37 show ipv6 udp

Use this command to display all IPv6 UDP sockets.

**show ipv6 udp [ local-port *num* ] [ peer-port *num* ]**

Use this command to display IPv6 UDP socket statistics.

**show ipv6 udp statistics**

Parameter Description	Parameter	Description
	<b>local-port</b> <i>num</i>	Local port number.
	<b>peer-port</b> <i>num</i>	Peer port number.

**Defaults** N/A

**Command Mode** Privileged EXEC mode

**Usage Guide** N/A

**Configuration Examples** The following example displays all IPv6 UDP sockets.

```
Ruijie# show ipv6 udp
Number Local Address   Peer Address   Process name
1      :::161             :::0           rg-snmpd
2      :::162             :::0           rg-snmpd
3      :::547           :::0           dhcp6.elf
```

Filed	Description
Number	Number.
Local Address	Local IPv6 address and port.
Peer Address	Peer IPv6 address and port.
Process name	Process name.

Related Commands	Command	Description
	N/A	N/A

<b>Platform</b>	N/A
<b>Description</b>	

## 4 DHCP Commands

### 4.1 address range

Use this command to specify the network segment range of the addresses that can be allocated by CLASS associated with DHCP address pool. Use the **no** form of this command to restore the default setting.

**address range** *low-ip-address high-ip-address*

**no address range**

Parameter	Parameter	Description
Description	<i>low-ip-address</i>	Start address in the network segment range.
	<i>high-ip-address</i>	End address in the network segment range.

**Defaults** By default, the associated CLASS is not configured with the network segment range. The default is the address pool range.

**Command Mode** Address pool CLASS configuration mode.

**Usage Guide** Each CLASS corresponds to one network range which must be from low address to high address, so as to allow the duplication of network segment range between multiple CLASSes. If the CLASS associated with the address pool is specified without configuring the corresponding network segment range, the default network segment range of this CLASS is same as the range of the address pool where this CLASS is.

**Configuration Examples** The following example configures the network segment of class1 associated with address pool mypool0 ranging from 172.16.1.1 to 172.16.1.8.

```
Ruijie(config)# ip dhcp pool mypool0
Ruijie(dhcp-config)# class class1
Ruijie (config-dhcp-pool-class)# address range 172.16.1.1 172.16.1.8
```

Related Commands	Command	Description
	<b>ip dhcp pool</b>	Defines the name of the DHCP address pool and enters the DHCP address pool configuration mode.
	<b>class</b>	Configures the CLASS associated with the DHCP address pool and enters the address pool CLASS configuration mode.

**Platform Description** N/A

## 4.2 bootfile

Use this command to define the startup mapping file name of the DHCP client. Use the **no** or **default** form of this command to restore the default setting.

**bootfile** *file-name*

**no bootfile**

**default bootfile**

Parameter	Parameter	Description
Description	<i>file-name</i>	Startup file name.

**Defaults** No startup file name is defined by default.

**Command Mode** DHCP address pool configuration mode

**Usage Guide** Some DHCP clients need to download the operating system and configure the file during the startup. The DHCP server should provide the mapping file name required for the startup, so that DHCP clients can download the file from the corresponding server (such as TFTP). Other servers are defined by the **next-server** command.

**Configuration Examples** The following example defines the device.conf as the startup file name.

```
bootfile device.conf
```

Related Commands	Command	Description
	<b>ip dhcp pool</b>	Defines the name of the DHCP address pool and enter the DHCP address pool configuration mode.
	<b>next-server</b>	Configures the next server IP address of the DHCP client startup process.

**Platform Description** N/A

## 4.3 class

Use this command to configure the associated CLASS in the DHCP address pool. Use the **no** form of this command to restore the default setting.

**class** *class-name*

**no class**

Parameter	Parameter	Description
Description	<i>class-name</i>	Class name, which can be the character string or numeric such as myclass or 1.

**Defaults** By default, no CLASS is associated with the address pool.

**Command** DHCP address pool configuration mode

**Mode**

**Usage Guide** Each DHCP address pool performs the address assignment according to the Option82 matching information. We can divide this Option82 information into classes and specify the available network segment range for these classes in the DHCP address pool. These classes are called CLASS. One DHCP address pool can map to multiple CLASSES, and each CLASS can specify different network segment range.

During the address assignment, firstly, ensure the assignable address pool through the network segment where the client is, then according to the Option82 information further ensure the CLASS and assign the IP address from the network segment range corresponding to the CLASS. If one request packet matches multiple CLASSES in the address pool, perform the address assignment according to the sequencing of configuring the CLASS in the address pool. If this CLASS's assigned addresses have been to the upper limit, then continue to assign the address from the next CLASS, and so on. Each CLASS corresponds to one network segment range that must be from low addresses to high addresses and the duplicated network ranges between multiple CLASSES are allowed. If the CLASS corresponding to the address pool is specified and the network segment corresponding to the CLASS is not configured, this CLASS's default network segment range is same as the range of address pool where the CLASS is.

**Configuration Examples** The following example configures the address *mypool0* to associate with class1.

```
Ruijie(config)# ip dhcp pool mypool0
Ruijie(dhcp-config)# class class1
```

Related Commands	Command	Description
	<b>ip dhcp pool</b>	Defines the name of the DHCP address pool and enters the DHCP address pool configuration mode.

**Platform** N/A

**Description**

## 4.4 clear ip dhcp binding

Use this command to clear the DHCP binding table in the privileged user mode.

**clear ip dhcp binding** { \* | *ip-address* }

Parameter Description	Parameter	Description
	*	Deletes all DHCP bindings.
	<i>ip-address</i>	Deletes the binding of the specified IP addresses.

**Defaults** N/A.

**Command** Privileged EXEC mode.

**Mode**

**Usage Guide** This command can only clear the automatic DHCP binding, but the manual DHCP binding can be deleted by the **no ip dhcp pool** command.

**Configuration** The following example clears the DHCP binding with the IP address 192.168.12.100.

**Examples**

```
clear ip dhcp binding 192.168.12.100
```

Related Commands	Command	Description
	<b>show ip dhcp binding</b>	Displays the address binding of the DHCP server.

**Platform** N/A

**Description**

## 4.5 clear ip dhcp conflict

Use this command to clear the DHCP address conflict record.

**clear ip dhcp conflict** { \* | *ip-address* }

Parameter Description	Parameter	Description
	*	Deletes all DHCP address conflict records.
	<i>ip-address</i>	Deletes the conflict record of the specified IP addresses.

**Defaults** N/A.

**Command  
Mode** Privileged EXEC mode.

**Usage Guide** The DHCP server uses the ping session to detect the address conflict, while the DHCP client uses the address resolution protocol (ARP) to detect the address conflict. The **clear ip dhcp conflict** command can be used to delete the history conflict record.

**Configuration** The following example clears all address conflict records.

**Examples**

```
clear ip dhcp conflict *
```

Related Commands	Command	Description
	<b>ip dhcp ping packets</b>	Defines the number of the data packets sent by the ping operation for the detection of the address conflict when the DHCP server assigns an IP address.
	<b>show ip dhcp conflict</b>	Displays the address conflict that the DHCP server detects when it assigns an IP address.

**Platform** N/A



**Description**

## 4.6 clear ip dhcp history

Use this command to clear the address assigned by the DHCP server.

**clear ip dhcp history**{ \* | *mac-address* }

Parameter	Parameter	Description
Description	*	Clears all addresses assigned by the DHCP server.
	<i>mac-address</i>	Clears the address assigned by the DHCP server corresponding to the specified MAC address.

**Defaults** N/A

**Command Mode** Privileged EXEC mode

**Usage Guide** This command is configured on the DHCP server.

**Configuration Examples** The following example clears all addresses assigned by the DHCP server.

```
Ruijie# clear ip dhcp history *
```

Related Commands	Command	Description
	N/A	N/A

**Platform Description** N/A

## 4.7 clear ip dhcp relay statistics

Use this command to clear the DHCP relay statistics.

**clear ip dhcp relay statistics**

Parameter	Parameter	Description
Description	N/A	N/A

**Defaults** N/A

**Command Mode** Privileged EXEC mode

**Usage Guide** The DHCP relay is configured with the counter to count various packets received or transmitted by the relay. This command is used to clear the counters.

**Configuration** The following example clears the DHCP relay statistics.

**Examples** Ruijie# clear ip dhcp relay statistics

Related Commands	Command	Description
	N/A	N/A

**Platform** N/A

**Description**

## 4.8 clear ip dhcp server rate

Use this command to clear statistics about the packet processing rate of every module.

**clear ip dhcp server rate**

Parameter Description	Parameter	Description
	N/A	N/A

**Defaults** N/A

**Command  
Mode** Privileged EXEC mode

**Usage Guide** This command is used to clear statistics about the packet processing rate of every module, including arp, hot backup, lsm, and socket.

**Configuration** The following example clears statistics about the packet processing rate of every module.

**Examples** Ruijie# clear ip dhcp server rate

Related Commands	Command	Description
	N/A	N/A

**Platform** N/A

**Description**

## 4.9 clear ip dhcp server statistics

Use this command to reset the counter of the DHCP server in the privileged user mode.

**clear ip dhcp server statistics**

Parameter Description	Parameter	Description
	N/A	N/A

**Defaults** N/A

**Command Mode** Privileged EXEC mode.

**Usage Guide** The DHCP server carries out the statistics counter, records the DHCP address pool, automatic binding, manual binding and expired binding. Furthermore, it also carries out the statistics to the number of sent and received DHCP messages. The **clear ip dhcp server statistics** command can be used to delete the history counter record and carry out the statistics starting from scratch.

**Configuration Examples** The following example clears the statistics record of the DHCP server.

```
clear ip dhcp server statistics
```

Related Commands	Command	Description
	<b>show ip dhcp server statistics</b>	Displays the statistics record of the DHCP server.

**Platform Description** N/A

## 4.10 client-identifier

Use this command to define the unique ID of the DHCP client (indicated in hex, separated by dot) in the DHCP address pool configuration mode. Use the **no** form of this command to restore the default setting.

**client-identifier** *unique-identifier*

**no client-identifier**

Parameter Description	Parameter	Description
	<i>unique-identifier</i>	The DHCP client ID is indicated in hex and separated by dot, for instance, 0100.d0f8.2233.b467.6967.6162.6974.4574.6865.726e.6574.302f.31.

**Defaults** N/A.

**Command Mode** DHCP address pool configuration mode.

**Usage Guide** When some DHCP clients request the DHCP server to assign IP addresses, they use their client IDs rather than their hardware addresses. The client ID consists of media type, MAC addresses and interface name. For instance, the MAC address is 00d0.f822.33b4, the interface name is GigabitEthernet 0/1, and the corresponding client ID is 0100.d0f8.2233.b467.6967.6162.6974.4574.6865.726e.6574.302f.31, where, 01 denotes the type of the Ethernet media.

The 67.6967.6162.6974.4574.6865.726e.6574.302f.31 is the hex code of GigabitEthernet0/1. For the definition of the media code, refer to the Address Resolution Protocol Parameters section in RFC1700.

This command is used only when the DHCP is defined by manual binding.

**Configuration Examples** The following example defines the client ID of the Ethernet DHCP client whose MAC address is 00d0.f822.33b4.

```
client-identifier
0100.d0f8.2233.b467.6967.6162.6974.4574.6865.726e.6574.302f.31
```

Related Commands	Command	Description
	<b>hardware-address</b>	Defines the hardware address of DHCP client.
	<b>host</b>	Defines the IP address and network mask, which is used to configure the DHCP manual binding.
	<b>ip dhcp pool</b>	Defines the name of the DHCP address pool and enters the DHCP address pool configuration mode.

**Platform** N/A

**Description**

## 4.11 client-name

Use this command to define the name of the DHCP client in the DHCP address pool configuration mode. Use the **no** form of this command to restore the default setting.

**client-name** *client-name*

**no client-name**

Parameter Description	Parameter	Description
	client-name	Name of DHCP client, a set of standards-based ASCII characters. The name should not include the suffix domain name. For instance, you can define the name of the DHCP client as river, not river.i-net.com.cn.

**Defaults** No client name is defined by default.

**Command Mode** DHCP address pool configuration mode.

**Usage Guide** This command can be used to define the name of the DHCP client only when the DHCP is defined by manual binding. This name should not include the suffix domain name.

**Configuration Examples** The following example defines a string river as the name of the client.

```
Ruijie(dhcp-config)# client-name river
```

Related Commands	Command	Description
	<b>host</b>	Defines the IP address and network mask, which is used to

	configure the DHCP manual binding.
<b>ip dhcp pool</b>	Defines the name of the DHCP address pool and enters the DHCP address pool configuration mode.

**Platform** N/A

**Description**

## 4.12 default-router

Use this command to define the default gateway of the DHCP client in the DHCP address pool configuration mode. Use the **no** form of this command to restore the default setting.

**default-router** *ip-address* [ *ip-address2...ip-address8* ]

**no default-router**

Parameter	Parameter	Description
<b>Description</b>	<i>ip-address</i>	Defines the IP address of the equipment. It is required to configure one IP address at least.
	<i>ip-address2...ip-address8</i>	(Optional) Up to 8 gateways can be configured.

**Defaults** No gateway is defined by default.

**Command Mode** DHCP address pool configuration mode.

**Usage Guide** In general, the DHCP client should get the information of the default gateway from the DHCP server. The DHCP server should specify one gateway address for the client at least, and this address should be of the same network segment as the address assigned to the client.

**Configuration Examples** The following example defines 192.168.12.1 as the default gateway.

```
default-router 192.168.12.1
```

Related Commands	Command	Description
	<b>ip dhcp pool</b>	Defines the name of the DHCP address pool and enters the DHCP address pool configuration mode.

**Platform** N/A

**Description**

## 4.13 dns-server

Use this command to define the DNS server of the DHCP client in the DHCP address pool configuration mode. Use the **no** form of this command to restore the default setting.

**dns-server** { *ip-address* [ *ip-address2...ip-address8* ] | **use-dhcp-client** *interface-type*

*interface-number* }  
**no dns-server**

Parameter Description	Parameter	Description
	<i>ip-address</i>	Defines the IP address of the DNS server. At least one IP address should be configured.
	<i>ip-address2...ip-address8</i>	(Optional) Up to 8 DNS servers can be configured.
	<b>use-dhcp-client</b> interface-type interface-number	Uses the DNS server learned by the DHCP client of the RGOS software as the DNS server of the DHCP client.

**Defaults** No DNS server is defined by default.

**Command Mode** DHCP address pool configuration mode.

**Usage Guide** When more than one DNS server is defined, the former will possess higher priority, so the DHCP client will select the next DNS server only when its communication with the former DNS server fails.  
 If the RGOS software also acts as the DHCP client, the DNS server information obtained by the client can be transmitted to the DHCP client.

**Configuration Examples** The following example specifies the DNS server 192.168.12.3 for the DHCP client.

```
dns-server 192.168.12.3
```

Related Commands	Command	Description
	<b>domain-name</b>	Defines the suffix domain name of the DHCP client.
	<b>ip address dhcp</b>	Enables the DHCP client on the interface to obtain the IP address information.
	<b>ip dhcp pool</b>	Defines the name of the DHCP address pool and enters the DHCP address pool configuration mode.

**Platform** N/A  
**Description**

## 4.14 domain-name

Use this command to define the suffix domain name of the DHCP client in the DHCP address pool configuration mode. Use the **no** form of this command to restore the default setting.

**domain-name** *domain-name*  
**no domain-name**

Parameter Description	Parameter	Description
	<i>domain-name</i>	Defines the suffix domain name string of the DHCP client.

**Defaults** No suffix domain name by default.

**Command** DHCP address pool configuration mode.

**Mode**

**Usage Guide** After the DHCP client obtains specified suffix domain name, it can access a host with the same suffix domain name by the host name directly.

**Configuration** The following example defines the suffix domain name i-net.com.cn for the DHCP client.

**Examples** Ruijie (dhcp-config) #domain-name ruijie.com.cn

Related Commands	Command	Description
	<b>dns-server</b>	Defines the DNS server of the DHCP client.
	<b>ip dhcp pool</b>	Defines the name of the DHCP address pool and enter the DHCP address pool configuration mode.

**Platform** N/A

**Description**

## 4.15 hardware-address

Use this command to define the hardware address of the DHCP client in the DHCP address pool configuration mode. Use the **no** form of this command to restore the default setting.

**hardware-address** *hardware-address* [ *type* ]

**no hardware-address**

Parameter Description	Parameter	Description
	<i>hardware-address</i>	Define the MAC address of the DHCP client.
	<i>type</i>	To indicate the hardware platform protocol of the DHCP client, use the string definition or digits definition. String option: Ethernet ieee802 Digits option: 1 (10M Ethernet) 6 (IEEE 802)

**Defaults** No hardware address is defined by default.

If there is no option when the hardware address is defined, it is the Ethernet by default.

**Command** DHCP address pool configuration mode.

**Mode**

**Usage Guide** This command can be used only when the DHCP is defined by manual binding.

**Configuration** The following example defines the MAC address 00d0.f838.bf3d with the type ethernet.

**Examples** `hardware-address 00d0.f838.bf3d`

Related Commands	Command	Description
	<b>client-identifier</b>	Defines the unique ID of the DHCP client (Indicated by the hexadecimal numeral, separated by dot).
	<b>host</b>	Defines the IP address and network mask, which is used to configure the DHCP manual binding.
	<b>ip dhcp pool</b>	Defines the name of the DHCP address pool and enter the DHCP address pool configuration mode.
	<b>default-router</b>	Defines the default route of the DHCP client.

**Platform** N/A

**Description**

## 4.16 host

Use this command to define the IP address and network mask of the DHCP client host in the DHCP address pool configuration mode. Use the **no** form of this command to restore the default setting.

**host** *ip-address* [*netmask*]

**no host**

Parameter Description	Parameter	Description
	<i>ip-address</i>	Defines the IP address of DHCP client.
	<i>netmask</i>	Defines the network mask of DHCP client.

**Defaults** No IP address or network mask of the host is defined.

**Command Mode** DHCP address pool configuration mode.

**Usage Guide** If the network mask is not defined definitely, the DHCP server will use the natural network mask of this IP address: 255.0.0.0 for class A IP address, 255.255.0 for class B IP address, and 255.255.255.0 for class C IP address.

This command can be used only when the DHCP is defined by manual binding.

**Configuration Examples** The following example sets the client IP address as 192.168.12.91, and the network mask as 255.255.255.240.

`host 192.168.12.91 255.255.255.240`

Related Commands	Command	Description
	<b>client-identifier</b>	Defines the unique ID of the DHCP client (Indicated in hex and



<b>default-router</b>		separated by dot).
	<b>hardware-address</b>	Defines the hardware address of DHCP client.
	<b>ip dhcp pool</b>	Defines the name of the DHCP address pool and enters the DHCP address pool configuration mode.
	Define the default route of the DHCP client.	<b>default-router</b>

**Platform** N/A

**Description**

## 4.17 ip address dhcp

Use this command to make the Ethernet interface or the PPP, HDLC and FR encapsulated interface obtain the IP address information by the DHCP in the interface configuration mode. Use the **no** form of this command to restore the default setting.

**ip address dhcp**

**no ip address dhcp**

Parameter	Parameter	Description
Description	N/A	N/A

**Defaults** The interface cannot obtain the IP address by the DHCP by default.

**Command Mode** Interface configuration mode.

**Usage Guide** When requesting the IP address, the DHCP client of the RGOS software also requires the DHCP server provide 5 configuration parameter information: 1) DHCP option 1, client subnet mask, 2) DHCP option 3, it is the same as the gateway information of the same subnet, 3) DHCP option 6, the DNS server information, 4) DHCP option 15, the host suffix domain name, and 5) DHCP option 44, the WINS server information (optional).

The client of the RGOS software is allowed to obtain the address on the PPP, FR or HDL link by the DHCP, which should be supported by the server. At present, our server can support this function.

**Configuration Examples** The following example makes the FastEthernet 0 port obtain the IP address automatically.

```
Ruijie(config)# interface GigabitEthernet 0/1
Ruijie(config-if-GigabitEthernet 0/1) ip address dhcp
```

<b>Related Commands</b>	<b>Command</b>	<b>Description</b>
	<b>dns-server</b>	Defines the DNS server of DHCP client.
	<b>ip dhcp pool</b>	Defines the name of the DHCP address pool and enters the DHCP address pool configuration mode.

**Platform** N/A  
**Description**

## 4.18 ip dhcp class

Use this command to define a CLASS and enter the global CLASS configuration mode. Use the **no** form of this command to restore the default setting.

**ip dhcp class** *class-name*

**no ip dhcp class** *class-name*

Parameter	Parameter	Description
Description	<i>class-name</i>	Class name, which can be character string or numeric such as myclass or 1.

**Defaults** By default, the class is not configured.

**Command Mode** Global configuration mode.

**Usage Guide** After executing this command, it enters the global CLASS configuration mode which is shown as "Ruijie (config-dhcp-class)#". In this configuration mode, user can configure the Option82 information that matches the CLASS and the CLASS identification information.

**Configuration Examples** The following example configures a global CLASS.

```
Ruijie(config)# ip dhcp class myclass
```

Related Commands	Command	Description
	N/A	N/A

**Platform** N/A  
**Description**

## 4.19 ip dhcp excluded-address

Use this command to define some IP addresses and make the DHCP server not assign them to the DHCP client in the global configuration mode. Use the **no** form of this command to restore the default setting.

**ip dhcp excluded-address** *low-ip-address* [ *high-ip-address* ]

**no ip dhcp excluded-address** *low-ip-address* [ *high-ip-address* ]

Parameter	Parameter	Description
Description	<i>low-ip-address</i>	Excludes the IP address, or excludes the start IP address within the range of the IP address.
	<i>high-ip-address</i>	Excludes the end IP address within the range of the IP address.

**Defaults** The DHCP server assigns the IP addresses of the whole address pool by default.

**Command Mode** Global configuration mode.

**Usage Guide** If the excluded IP address is not configured, the DHCP server attempts to assign all IP addresses in the DHCP address pool. This command can reserve some IP addresses for specific hosts to prevent these addresses are assigned to the DHCP client, and define the excluded IP address accurately to reduce the conflict detecting time when the DHCP server assigns the address.

**Configuration Examples** In the following example, the DHCP server will not attempt to assign the IP addresses within 192.168.12.100~150.

```
ip dhcp excluded-address 192.168.12.100 192.168.12.150
```

Related Commands	Command	Description
	<b>ip dhcp pool</b>	Defines the name of the DHCP address pool and enters the DHCP address pool configuration mode.
	<b>network (DHCP)</b>	Defines the network number and network mask of the DHCP address pool.

**Platform** N/A  
**Description**

## 4.20 ip dhcp force-send-nak

Use this command to configure the forcible NAK packet sending function. Use the **no** or **default** form of this command to restore the default setting.

**ip dhcp force-send-nak**  
**no ip dhcp force-send-nak**  
**default ip dhcp force-send-nak**

Parameter Description	Parameter	Description
	N/A	N/A

**Defaults** This function is disabled by default.

**Command Mode** Global configuration mode.

**Usage Guide** The DHCP client checks the previously used IP address every time it is started and sends a DHCPREQUEST packet to continue leasing this IP address. If the address is not available, the DHCP

server sends an NAK packet to let the client resend a DHCPDISCOVER packet to apply for a new IP address. If no corresponding lease record can be found on the server, the client keeps sending DHCPDISCOVER packets. The forcible NAK packet sending function is added to shorten the interval at which the client sends DHCPDISCOVER packets.

**Configuration Examples** The following example enables the forcible NAK packet sending function in global configuration mode.

```
Ruijie(config)# ip dhcp force-send-nak
```

Related Commands	Command	Description
	N/A	N/A

**Platform Description** N/A

## 4.21 ip dhcp monitor-vrrp-state

Use this command in layer-3 configuration mode to enable the DHCP Server to monitor the status of VRRP interfaces so that the DHCP Server processes only those packets sent from a VRRP interface in the Master state. Use the **no** form of this command to restore the default setting. If it is canceled, the DHCP Server processes packets from VRRP interfaces in the Master or Backup state.

**ip dhcp monitor-vrrp-state**

**no ip dhcp monitor-vrrp-state**

Parameter Description	Parameter	Description
	N/A	N/A

**Defaults** The **ip dhcp monitor-vrrp-state** command is disabled by default. .

**Command Mode** Layer-3 interface configuration mode.

**Usage Guide** If a VRRP address is configured for an interface, the DHCP Server processes packets sent from the master interface and discards packets sent from the backup interface. If no VRRP address is configured, the DHCP Server does not monitor the status of VRRP interfaces. All DHCP packets will be processed.

**Configuration Examples** The following example enables the DHCP Server to monitor the status of VRRP interfaces.

```
Ruijie(config-if)# ip dhcp monitor-vrrp-state
```

Related Commands	Command	Description
	N/A	N/A

**Platform** N/A  
**Description**

## 4.22 ip dhcp ping packets

Use this command to configure the times of pinging the IP address when the DHCP server detects address conflict in the global configuration mode. Use the **no** form of this command to restore the default setting.

**ip dhcp ping packets** [ *number* ]

**no ip dhcp ping packets**

Parameter	Parameter	Description
Description	<i>number</i>	(Optional) Number of packets in the range of 0 to 10, where 0 indicates disabling the ping operation. The Ping operation sends two packets by default.

**Defaults** The Ping operation sends two packets by default.

**Command Mode** Global configuration mode.

**Usage Guide** When the DHCP server attempts to assign the IP address from the DHCP address pool, use the ping operation to check whether this address is occupied by other hosts. Record it if the address is occupied, otherwise, assign it to the DHCP client. The Ping operation will send up to 10 packets, two packets by default.

**Configuration Examples** The following example sets the number of the packets sent by the ping operation as 3.

```
ip dhcp ping packets 3
```

Related Commands	Command	Description
	<b>clear ip dhcp conflict</b>	Clears the DHCP history conflict record.
	<b>ip dhcp ping packet</b>	Configures the timeout time that the DHCP server waits for the Ping response. If all the ping packets are not responded within the specified time, it indicates that this IP address can be assigned. Otherwise, it will record the address conflict.
	<b>show ip dhcp conflict</b>	Displays the DHCP server detects address conflict when it assigns an IP address.

**Platform** N/A  
**Description**

## 4.23 ip dhcp ping timeout

Use this command to configure the timeout that the DHCP server waits for response when it uses the

ping operation to detect the address conflict in the global configuration mode. Use the **no** form of this command to restore the default setting.

**ip dhcp ping timeout** *milli-seconds*

**no ip dhcp ping timeout**

Parameter	Parameter	Description
Description	<i>milli-seconds</i>	Time that the DHCP server waits for ping response in the range 100 to 10000 milliseconds.

**Defaults** The default is 500 seconds.

**Command Mode** Global configuration mode.

**Usage Guide** This command defines the time that the DHCP server waits for a ping response packet.

**Configuration Examples** The following example configures the waiting time of the ping response packet to 600ms.

```
ip dhcp ping timeout 600
```

Related Commands	Command	Description
	<b>clear ip dhcp conflict</b>	Clears the DHCP history conflict record.
	<b>ip dhcp ping packets</b>	Defines the number of the data packets sent by the ping operation for the detection of the address conflict when the DHCP server assigns an IP address.
	<b>show ip dhcp conflict</b>	Displays the address conflict the DHCP server detects when it assigns an IP address.

**Platform** N/A

**Description**

## 4.24 ip dhcp pool

Use this command to define a name of the DHCP address pool and enter the DHCP address pool configuration mode in the global configuration mode. Use the **no** form of this command to restore the default setting.

**ip dhcp pool** *pool-name*

**no ip dhcp pool** *pool-name*

Parameter	Parameter	Description
Description	<i>pool-name</i>	A string of characters and positive integers, for instance, mypool or 1.

**Defaults** No DHCP address pool is defined by default.

**Command Mode** Global configuration mode.

**Usage Guide** Execute the command to enter the DHCP address pool configuration mode:

```
Ruijie (dhcp-config) #
```

In this configuration mode, configure the IP address range, the DNS server and the default gateway.

**Configuration Examples** The following example defines a DHCP address pool named mypool0.

```
ip dhcp pool mypool0
```

**Related Commands**

Command	Description
<b>host</b>	Defines the IP address and network mask, which is used to configure the DHCP manual binding.
<b>ip dhcp excluded-address</b>	Defines the IP addresses that the DHCP server cannot assign to the clients.
<b>network (DHCP)</b>	Defines the network number and network mask of the DHCP address pool.

**Platform** N/A

**Description**

## 4.25 ip dhcp relay check server-id

Use this command to enable the **ip dhcp relay check server-id** function. Use the **no** form of this command to restore the default setting.

**ip dhcp relay check server-id**

**no ip dhcp relay check server-id**

**Parameter Description**

Parameter	Description
N/A	N/A

**Defaults** The **ip dhcp relay check server-id** command is disabled.

**Command Mode** Global configuration mode.

**Usage Guide** Switch will select the server to be sent according to server-id option when forwarding DHCP REQUEST via this command. Without this command configured, the switch forwards the DHCP REQUEST to all configured DHCP servers.

**Configuration Examples** The following example enables the ip dhcp relay check server-id function.

```
Ruijie# configure terminal
```

```
Ruijie(config)# ip dhcp relay check server-id
```

Related Commands	Command	Description
	<b>service dhcp</b>	Enables the DHCP Relay.

**Platform** N/A  
**Description**

## 4.26 ip dhcp relay information circuit-id format

Use this command to set the custom string for circuit-id. Use the **no** form of this command to restore the default setting.

**ip dhcp relay information circuit-id format {hex | ascii} [ string ]**

**no ip dhcp relay information circuit-id format {hex | ascii}**

Parameter Description	Parameter	Description
	hex	Hexadecimal
	ascii	ASCII code.
	<i>string</i>	Custom string

**Defaults** This function is disabled by default.

**Command Mode** Global configuration mode.

**Usage Guide** This command is configured on the DHCP Relay. When you configure the **ip dhcp relay information circuit-id format** command, the device, as the DHCP Relay, adds the option information in the DHCP request packets.

**Configuration Examples** The following example sets the custom string for circuit-id.

```
Ruijie(config)# ip dhcp relay information circuit-id format hex abc111
Ruijie(config)# ip dhcp relay information circuit-id format ascii
device-test
```

The following example disables this function.

```
Ruijie(config)# no ip dhcp relay information circuit-id format hex
Ruijie(config)# no ip dhcp relay information circuit-id format ascii
```

Related Commands	Command	Description
	N/A	N/A

**Platform** N/A  
**Description**



## 4.27 ip dhcp relay information circuit-id string

Use this command to set the device name for circuit-id. Use the **no** form of this command to restore the default setting.

**ip dhcp relay information circuit-id string** [ *devicename* ]

**no ip dhcp relay information option82**

Parameter	Parameter	Description
Description	<i>devicename</i>	Sets the device name.

**Defaults** This function is disabled by default.

**Command Mode** Global configuration mode

**Usage Guide** This command is configured on the DHCP Relay. When you configure the **ip dhcp relay information circuit-id string** command, the device, as the DHCP Relay, adds the option information in the DHCP request packets.

**Configuration** The following example sets the device name for circuit-id.

**Examples** Ruijie(config)# ip dhcp relay information circuit-id string device-name

The following example disables this function.

Ruijie(config)# no ip dhcp relay information circuit-id string

Related	Command	Description
Commands	N/A	N/A

**Platform** N/A  
**Description**

## 4.28 ip dhcp relay information option82

Use this command to enable the **ip dhcp relay information option82** function. Use the **no** form of this command to restore the default setting.

**ip dhcp relay information option82**

**no ip dhcp relay information option82**

Parameter	Parameter	Description
Description	N/A	N/A

**Defaults** The **ip dhcp relay information option82** command is disabled.

**Command** Global configuration mode.

**Mode**

**Usage Guide** This command is exclusive with the **option dot1x** command.

**Configuration** The following example enables the option82 function on the DHCP relay.

**Examples**

```
Ruijie# configure terminal
Ruijie(config)# Ip dhcp relay information option82
```

**Related  
Commands**

Command	Description
<b>service dhcp</b>	Enables the DHCP Relay.

**Platform** N/A

**Description**

## 4.29 ip dhcp relay information remote-id format

Use this command to set the custom string for remote-id.. Use the **no** form of this command to restore the default setting.

**ip dhcp relay information remote-id format { hex | ascii } [ string ]**

**no ip dhcp relay information remote-id format { hex | ascii }**

**Parameter  
Description**

Parameter	Description
<b>hex</b>	Hexadecimal
<b>ascii</b>	ASCII code
<i>string</i>	Custom string

**Defaults** This function is disabled by default.

**Command  
Mode** Global configuration mode

**Usage Guide** This command is configured on the DHCP Relay. When you configure the **ip dhcp relay information remote-id format** command, the device, as the DHCP Relay, adds the option information in the DHCP request packets.

**Configuration** The following example sets the custom string for circuit-id.

**Examples**

```
Ruijie(config)# ip dhcp relay information remote-id format hex abc111
Ruijie(config)# ip dhcp relay information remote-id format ascii port-test
```

The following example disables this function.

```
Ruijie(config)# no ip dhcp relay information remote-id format hex
Ruijie(config)# no ip dhcp relay information remote-id format ascii
```

**Related**

Command	Description
---------	-------------

Commands	N/A	N/A
----------	-----	-----

Platform N/A

Description

## 4.30 ip dhcp relay information remote-id string

Use this command to set the port name for remote-id. Use the **no** form of this command to restore the default setting.

**ip dhcp relay information remote-id string** [ *portname* ]

**no ip dhcp relay information remote-id string**

Parameter	Parameter	Description
Description	<i>portname</i>	Sets the port name.

**Defaults** This function is disabled by default.

**Command Mode** Global configuration mode

**Usage Guide** This command is configured on the DHCP Relay. When you configure the **ip dhcp relay information remote-id string** command, the device, as the DHCP Relay, adds the option information in the DHCP request packets.

**Configuration Examples** The following example sets the port name for remote-id.

```
Ruijie(config)# ip dhcp relay information remote-id string port-name
```

The following example disables this function.

```
Ruijie(config)# no ip dhcp relay information remote-id string
```

Related Commands	Command	Description
	N/A	N/A

Platform N/A

Description

## 4.31 ip dhcp relay suppression

Use this command to enable the DHCP binding globally. Use the **no** form of this command to disable the DHCP binding globally and enable the **DHCP relay** suppression on the port.

**ip dhcp relay suppression**

**no ip dhcp relay suppression**

Parameter	Parameter	Description
-----------	-----------	-------------

<b>Description</b>	N/A	N/A
--------------------	-----	-----

**Defaults** The **ip dhcp relay suppression** command is disabled.

**Command Mode** Interface configuration mode.

**Usage Guide** After executing this command, the system will not relay the DHCP request message on the interface.

**Configuration Examples** The following example enables the relay suppression function on the interface 1.

```
Ruijie# configure terminal
Ruijie(config)# interface fastEthernet 0/1
Ruijie(config-if)# ip dhcp relay suppression
Ruijie(config-if)# exit
Ruijie(config)#
```

Related Commands	Command	Description
	<b>service dhcp</b>	Enables the DHCP Relay.

**Platform Description** N/A

## 4.32 ip dhcp relay-information remote-id format

Use this command to set the custom string for remote-id on an interface. Use the **no** form of this command to restore the default setting.

**ip dhcp relay-information remote-id format {hex | ascii} [ string ]**

**no ip dhcp relay-information remote-id format {hex | ascii}**

Parameter Description	Parameter	Description
	<b>hex</b>	Hexadecimal
	<b>ascii</b>	ASCII code
	<i>string</i>	Custom string

**Defaults** This function is disabled by default.

**Command Mode** Interface configuration mode

**Usage Guide** This command is configured on the DHCP Relay. When you configure the **ip dhcp relay-information remote-id format** command, the device, as the DHCP Relay, adds the option information in the DHCP request packets.

**Configuration** The following example sets the custom string for circuit-id.

**Examples**

```
Ruijie(config-if-GigabitEthernet 0/2)# ip dhcp relay information remote-id  
format hex abc111
```

```
Ruijie(config-if-GigabitEthernet 0/2)# ip dhcp relay information remote-id  
format ascii port-test
```

The following example disables this function.

```
Ruijie(config-if-GigabitEthernet 0/2)# no ip dhcp relay information remote-id  
format hex
```

```
Ruijie(config-if-GigabitEthernet 0/2)# no ip dhcp relay information remote-id  
format ascii
```

**Related**

**Commands**

Command	Description
N/A	N/A

**Platform**

N/A

**Description**

## 4.33 ip dhcp relay-information remote-id string

Use this command to set the port name for remote-id on an interface. Use the **no** form of this command to restore the default setting.

**ip dhcp relay-information remote-id string** [ *portname* ]

**no ip dhcp relay-information remote-id string**

**Parameter**

**Description**

Parameter	Description
<i>portname</i>	Sets the port name.

**Defaults**

This function is disabled by default.

**Command**

Interface configuration mode

**Mode**

**Usage Guide**

This command is configured on the DHCP Relay. When you configure the **ip dhcp relay-information remote-id string** command, the device, as the DHCP Relay, adds the option information in the DHCP request packets.

**Configuration**

The following example sets the port name for remote-id on an interface.

**Examples**

```
Ruijie(config-if-GigabitEthernet 0/2)# ip dhcp relay-information remote-id  
string if-port-name
```

The following example disables this function.

```
Ruijie(config-if-GigabitEthernet 0/2)# no ip dhcp relay-information remote-id  
string
```

Related Commands	Command	Description
	N/A	N/A

Platform N/A  
Description

## 4.34 ip dhcp server arp-detect

Use this command to enable the user-offline detection. Use the **no** or **default** form this command to restore the default setting.

**ip dhcp server arp-detect**

**no ip dhcp server arp-detect**

**default ip dhcp server arp-detect**

Parameter Description	Parameter	Description
	N/A	N/A

**Defaults** This function is disabled by default.

**Command Mode** Global configuration mode

**Usage Guide** This command is used to detect whether the user has gone offline, If the user does not go online within a certain period, the IP address is reclaimed.

**Configuration Examples** The following example enables the user-offline detection.

```
Ruijie(config)# ip dhcp server arp-detect
```

Related Commands	Command	Description
	N/A	N/A

Platform N/A  
Description

## 4.35 ip dhcp use class

Use this command to enable the CLASS to allocate addresses in the global configuration mode. Use the **no** form of this command can be used to disable the CLASS.

**ip dhcp use class**

**no ip dhcp use class**

Parameter Description	Parameter	Description
	N/A	N/A

**Defaults** Enabled

**Command Mode** This function is enabled by default.

**Usage Guide** N/A

**Configuration** The following example enables the CLASS to allocate addresses.

**Examples** Ruijie(config)# ip dhcp use class

Related Commands	Command	Description
	N/A	N/A

**Platform** N/A  
**Description**

## 4.36 ip helper-address

Use this command to add an IP address of the DHCP server. Use the **no** form of this command to delete an IP address of the DHCP server.

The server address can be configured globally or on a specific interface. Therefore, this command can run in the global configuration mode or the interface configuration mode to add the DHCP server information.

**ip helper-address { cycle-mode | A.B.C.D }**

**no ip helper-address { cycle-mode | A.B.C.D }**

Parameter Description	Parameter	Description
	<b>cycle-mode</b>	Forwards the DHCP request packets to all DHCP servers.
	<i>A.B.C.D</i>	DHCP server IP address

**Defaults** N/A

**Command Mode** Global configuration mode, interface configuration mode.

**Usage Guide** Up to 20 DHCP server IP addresses can be configured globally or on a layer-3 interface. One DHCP request of this interface will be sent to these servers. You can select one for confirmation.

**Configuration** The following example sets the IP address for the global server to 192.168.1.1

**Examples** Ruijie# configure terminal  
Ruijie(config)# ip helper-address 192.168.1.1

Related Commands	Command	Description
	<b>service dhcp</b>	Enables the DHCP relay.

Platform N/A

Description

## 4.37 lease

Use this command to define the lease time of the IP address that the DHCP server assigns to the client in the DHCP address pool configuration mode. Use the **no** form of this command to restore the default setting. A limited lease time ranges from 1 minute to 23 hours and 59 minutes.

**lease** { *days* [ *hours* ] [ *minutes* ] | **infinite** }

**no lease**

Parameter Description	Parameter	Description
	<i>days</i>	Lease time in days
	<i>hours</i>	(Optional) Lease time in hours. It is necessary to define the days before defining the hours.
	<i>minutes</i>	(Optional) Lease time in minutes. It is necessary to define the days and hours before defining the minutes.
	<b>infinite</b>	Infinite lease time.

**Defaults** The lease time for a static address pool is infinite. The lease time for other address pools is 1 day.

**Command Mode** DHCP address pool configuration mode.

**Usage Guide** When the lease is getting near to expire, the DHCP client will send the request of renewal of lease. In general, the DHCP server will allow the renewal of lease of the original IP address.

**Configuration Examples** The following example sets the DHCP lease to 1 hour.

```
lease 0 1
```

The following example sets the DHCP lease to 1 minute.

```
lease 0 0 1
```

Related Commands	Command	Description
	<b>ip dhcp pool</b>	Defines the name of the DHCP address pool and enters the DHCP address pool configuration mode.

Platform N/A

Description



## 4.38 lease-threshold

Use this command in DHCP address pool configuration mode to define the DHCP alarm threshold.

Use the **default** or **no** form of this command to restore the default setting.

**lease-threshold** *percentage*

**default lease-threshold**

**no lease-threshold**

Parameter	Parameter	Description
Description	<i>percentage</i>	Usage of the address pool, ranging from 60 to 100 in percentage.

**Defaults** 90

**Command Mode** DHCP address pool configuration mode.

**Usage Guide** If the maximum IP usage of the address pool reaches the threshold, the DHCP Server generates a SYSLOG alarm. The IP usage indicates the ratio of the number of assigned address pools to the total number of assignable address pools. If the number of assigned pools stays above the alarm threshold, an alarm is generated every 5 minutes.

**Configuration Examples** The following example sets the alarm threshold to 80%.

```
lease-threshold 80
```

The following example restores the default alarm threshold.

```
default lease-threshold
```

The following example disables the address pool alarm function.

```
no lease-threshold
```

Related Commands	Command	Description
	<b>ip dhcp pool</b>	Defines the name of the DHCP address pool and enters the DHCP address pool configuration mode.

**Platform Description** N/A

## 4.39 netbios-name-server

Use this command to configure the WINS name server of the Microsoft DHCP client NETBIOS in the DHCP address pool configuration mode. The **no** form of this command can be used to restore the default setting.

**netbios-name-server** *ip-address* [ *ip-address2...ip-address8* ]

**netbios-name-server**

Parameter	Parameter	Description
Description	<i>ip-address</i>	IP address of the WINS server. It is required to configure one IP address at least.
	<i>ip-address2...ip-address8</i>	(Optional) IP addresses of WINS servers. Up to 8 WINS servers can be configured.
Defaults	No WINS server is defined by default.	
Command Mode	DHCP address pool configuration mode.	
Usage Guide	When more than one WINS server is defined, the former has higher priority. The DHCP client will select the next WINS server only when its communication with the former WINS server fails.	
Configuration Examples	The following example specifies the WINS server 192.168.12.3 for the DHCP client.	
	<pre>netbios-name-server 192.168.12.3</pre>	
Related Commands	Command	Description
	<b>ip address dhcp</b>	Enables the DHCP client on the interface to obtain the IP address.
	<b>ip dhcp pool</b>	Defines the name of the DHCP address pool and enter the DHCP address pool configuration mode.
	<b>netbios-node-type</b>	Defines the netbios node type of the client host.
Platform	N/A	
Description		

## 4.40 netbios-node-type

Use this command to define the node type of the master NetBIOS of the Microsoft DHCP client in the DHCP address configuration mode. Use the **no** form of this command to restore the default setting.

**netbios-node-type** *type*

**no netbios-node-type**

Parameter	Parameter	Description
Description	<i>type</i>	Type of node in two modes: Digit in hexadecimal form in the range of 0 to FF. Only the following numerals are available: 1: b-node. 2: p-node. 4: m-node. 8: h-node. String: b-node: broadcast node

	p-node: peer-to-peer node m-node: mixed node h-node: hybrid node
--	--

**Defaults** No type of the NetBIOS node is defined by default.

**Command** DHCP address pool configuration mode.

**Mode**

**Usage Guide** There are 4 types of the NetBIOS nodes of the Microsoft DHCP client: 1) Broadcast, which carries out the NetBIOS name resolution by the broadcast method, 2) Peer-to-peer, which directly requests the WINS server to carry out the NetBIOS name resolution, 3) Mixed, which requests the name resolution by the broadcast method firstly, and then carry out the name resolution by the WINS server connection, 4) Hybrid, which requests the WINS server to carry out the NetBIOS name resolution firstly, and it will carry out the NetBIOS name resolution by the broadcast method if the response is not received.

By default, the node type for Microsoft operating system is broadcast or hybrid. If the WINS server is not configured, broadcast node is used. Otherwise, hybrid node is used. It is recommended to set the type of the NetBIOS node as Hybrid.

**Configuration** The following example sets the NetBIOS node of Microsoft DHCP client as Hybrid.

**Examples**

```
netbios-node-type h-node
```

Related Commands	Command	Description
	<b>ip dhcp pool</b>	Defines the name of DHCP address pool and enters the DHCP address pool configuration mode.
	<b>netbios-name-server</b>	Configures the WINS name server of the Microsoft DHCP client NETBIOS.

**Platform** N/A

**Description**

## 4.41 network (DHCP)

Use this command to define the network number and network mask of the DHCP address pool in the DHCP address pool configuration mode. Use the **no** form of this command to restore the default setting.

**network** *net-number net-mask*

**no network**

Parameter Description	Parameter	Description
	<i>net-number</i>	Network number of the DHCP address pool
	<i>net-mask</i>	Network mask of the DHCP address pool. If the network mask is not

	defined, the natural network mask will be used by default.
--	--

**Defaults** No network number or network mask is defined by default.

**Command Mode** DHCP address pool configuration mode.

**Usage Guide** This command defines the subnet and subnet mask of a DHCP address pool, and provides the DHCP server with an address space which can be assigned to the clients. Unless excluded addresses are configured, all the addresses of the DHCP address pool can be assigned to the clients. The DHCP server assigns the addresses in the address pool orderly. If the DHCP server found an IP address is in the DHCP binding table or in the network segment, it checks the next until it assigns an effective IP address.

The **show ip dhcp binding** command can be used to view the address assignment, and the **show ip dhcp conflict** command can be used to view the address conflict detection configuration.

**Configuration Examples** The following example defines the network number of the DHCP address pool as 192.168.12.0, and the network mask as 255.255.255.240.

```
network 192.168.12.0 255.255.255.240
```

Related Commands	Command	Description
	<b>ip dhcp excluded-address</b>	Defines the IP addresses that the DHCP server cannot assign to the clients.
	<b>ip dhcp pool</b>	Defines the name of the DHCP address pool and enters the DHCP address pool configuration mode.

**Platform Description** N/A

## 4.42 next-server

Use this command to define the startup sever list that the DHCP client accesses during startup in the DHCP address configuration mode. Use the **no** form of this command to restore the default setting.

**next-server** *ip-address* [*ip-address2...ip-address8*]

**no next-server**

Parameter Description	Parameter	Description
	<i>ip-address</i>	Defines the IP address of the startup server, which is usually the TFTP server. It is required to configure one IP address at least.
	<i>ip-address2...ip-address8</i>	(Optional) Up to 8 startup servers can be configured.

**Defaults** N/A

**Command Mode** DHCP address pool configuration mode.

**Usage Guide** When more than one startup server is defined, the former will possess higher priority. The DHCP client will select the next startup server only when its communication with the former startup server fails.

**Configuration Examples** The following example specifies the startup server 192.168.12.4 for the DHCP client.

**Examples** `next-server 192.168.12.4`

Related Commands	Command	Description
	<b>bootfile</b>	Defines the default startup mapping file name of the DHCP client.
	<b>ip dhcp pool</b>	Defines the name of the DHCP address pool and enter the DHCP address pool configuration mode.
	<b>ip help-address</b>	Defines the Helper address on the interface.
	<b>option</b>	Configures the option of the RGOS software DHCP server.

**Platform Description** N/A

## 4.43 option

Use this command to configure the option of the DHCP server in the DHCP address pool configuration mode. Use the **no** form of this command to restore the default setting.

**option** *code* { **ascii** *string* | **hex** *string* | **ip** *ip-address* }  
**no option**

Parameter Description	Parameter	Description
	<i>code</i>	Defines the DHCP option codes.
	<b>ascii</b> <i>string</i>	Defines an ASCII string.
	<b>hex</b> <i>string</i>	Defines a hex string.
	<b>ip</b> <i>ip-address</i>	Defines an IP address list.

**Defaults** N/A

**Command Mode** Global configuration mode

**Usage Guide** The DHCP provides a mechanism to transmit the configuration information to the host in the TCP/IP network. The DHCP message has a variable option field that can be defined according to the actual requirement. The DHCP client needs to carry the DHCP message with 32 bytes of option information at least. Furthermore, the fixed data field in the DHCP message is also referred to as an option. For the definition of current DHCP option, refer to RFC 2131.

**Configuration Examples** The following example defines the option code 19, which determines whether the DHCP client can enable the IP packet forwarding. 0 indicates to disable the IP packet forwarding, and 1 indicates to enable the IP packet forwarding. The configuration below enable the IP packet forwarding on the DHCP client.

```
Ruijie(dhcp-config)# option 19 hex 1
```

The following example defines the option code 33, which provides the DHCP client with the static route information. The DHCP client will install two static routes: 1) the destination network 172.16.12.0 and the gateway 192.168.12.12, 2) the destination network 172.16.16.0 and the gateway 192.168.12.16.

```
option 33 ip 172.16.12.0 192.168.12.12 172.16.16.0 192.168.12.16
```

Related Commands	Command	Description
	<b>ip dhcp pool</b>	Defines the name of the DHCP address pool and enters the DHCP address pool configuration mode.

**Platform** N/A  
**Description**

## 4.44 pool-status

Use this command to enable or disable the DHCP address pool.

**pool-status { enable | disable }**

Parameter Description	Parameter	Description
	<b>enable</b>	Enables the address pool.
	<b>disable</b>	Disables the address pool.

**Defaults** By default, the address pool is enabled after it is configured.

**Command Mode** DHCP address pool configuration mode

**Usage Guide** This command is configured on the DHCP server.

**Configuration Examples** The following example disables the address pool.

```
Ruijie(dhcp-config)# pool-status disable
```

Related Commands	Command	Description
	N/A	N/A

**Platform** N/A

**Description**

## 4.45 relay agent information

Use this command to enter the Option82 matching information configuration mode in the global CLASS configuration mode. Use the **no** form of this command to delete the Option82 matching information of the CLASS.

**relay agent information**

**no relay agent information**

Parameter	Parameter	Description
Description	N/A	N/A

**Defaults** N/A

**Command Mode** Global CLASS configuration mode

**Usage Guide** After executing this command, it enters the Option82 matching information configuration mode which is shown as "Ruijie (config-dhcp-class-relayinfo)#".  
In this configuration mode, user can configure the class matching multiple Option82 information.

**Configuration Examples** The following example configures a global CLASS and enters the Option82 matching information configuration mode.

```
Ruijie(config)# ip dhcp class myclass
Ruijie(config-dhcp-class)# relay agent information
Ruijie(config-dhcp-class-relayinfo)#
```

Related Commands	Command	Description
	<b>ip dhcp class</b>	Defines a CLASS and enters the global CLASS configuration mode.

**Platform Description** N/A

## 4.46 relay-information hex

Use this command to enter the Option82 matching information configuration mode. Use the **no** form of this command to delete a piece of matching information.

**relay-information hex aabb.ccdd.eeff... [ \* ]**

**no relay-information hex aabb.ccdd.eeff... [ \* ]**

Parameter	Parameter	Description
Description	<b>aabb.ccdd.eeff...[*]</b>	Hexadecimal Option82 matching information. The "*" symbol means partial

	matching which needs the front part matching only. Without the "*" means needing full matching.
--	---

**Defaults** N/A

**Command Mode** Global CLASS configuration mode

**Usage Guide** N/A

**Configuration Examples** The following example configures a global CLASS which can match multiple Option82 information.

```
Ruijie(config)# ip dhcp class myclass
Ruijie(config-dhcp-class)# relay agent information
Ruijie(config-dhcp-class-relayinfo)# relay-information
hex 0102256535
Ruijie(config-dhcp-class-relayinfo)# relay-information
hex 010225654565
Ruijie(config-dhcp-class-relayinfo)# relay-information
hex 060225654565
Ruijie(config-dhcp-class-relayinfo)# relay-information
hex 060223*
```

Related Commands	Command	Description
	<b>ip dhcp class</b>	Defines a CLASS and enter the global CLASS configuration mode.
	<b>relay agent information</b>	Enters the Option82 matching information configuration mode.

**Platform** N/A

**Description**

## 4.47 remark

Use this command to configure the identification which is used to describe the CLASS in this global CLASS configuration mode. Use the **no** form of this command to delete the identification.

**remark** *class-remark*

**no remark**

Parameter Description	Parameter	Description
	class-remark	Information used to identify the CLASS, which can be the character strings with space in them.

**Defaults** N/A.

**Command** Global CLASS configuration mode.



**Mode****Usage Guide** N/A**Configuration** The following example configures the identification information for a global CLASS.**Examples**

```
Ruijie(config)# ip dhcp class myclass
Ruijie(config-dhcp-class)# remark used in #1 build
```

**Related****Commands**

Command	Description
<b>ip dhcp class</b>	Defines a CLASS and enter the global CLASS configuration mode.

**Platform** N/A**Description**

## 4.48 service dhcp

Use this command to enable the DHCP server and the DHCP relay on the device in global configuration mode. Use the **no** form of this command to restore the default setting.

**service dhcp****no service dhcp****Parameter****Description**

Parameter	Description
N/A	N/A

**Defaults**The **service dhcp** command is disabled.**Command**

Global configuration mode

**Mode****Usage Guide**

The DHCP server can assign the IP addresses to the clients automatically, and provide them with the network configuration information such as DNS server and default gateway. The DHCP relay can forward the DHCP requests to other servers, and the returned DHCP responses to the DHCP client, serving as the relay for DHCP packets.

**Configuration**

The following example enables the DHCP server and the DHCP relay feature.

**Examples**

```
service dhcp
```

**Related****Commands**

Command	Description
<b>show ip dhcp server statistics</b>	Displays various statistics information of the DHCP server.
<b>ip helper-address [ vrf ] A.B.C.D</b>	Adds an IP address of the DHCP server.

**Platform** N/A**Description**

## 4.49 show dhcp lease

Use this command to display the lease information of the IP address obtained by the DHCP client.

**show dhcp lease**

Parameter	Parameter	Description
Description	N/A	N/A

**Defaults** N/A

**Command Mode** Privileged EXEC mode.

**Usage Guide** If the IP address is not defined, display the binding condition of all addresses. If the IP address is defined, display the binding condition of this IP address.

**Configuration** The following example displays the result of the show dhcp lease.

**Examples**

```
Ruijie# show dhcp lease
Temp IP addr: 192.168.5.71 for peer on Interface: FastEthernet0/0
Temp sub net mask: 255.255.255.0
  DHCP Lease server: 192.168.5.70, state: 3 Bound
  DHCP transaction id: 168F
  Lease: 600 secs, Renewal: 300 secs, Rebind: 525 secs
Temp default-gateway addr: 192.168.5.1
  Next timer fires after: 00:04:29
  Retry count: 0 Client-ID: redgaint-00d0.f8fb.5740-Fa0/0
```

Related	Command	Description
Commands	N/A	N/A

**Platform Description** N/A

## 4.50 show ip dhcp binding

Use this command to display the binding condition of the DHCP address.

**show ip dhcp binding [ ip-address ]**

Parameter	Parameter	Description
Description	<i>ip-address</i>	(Optional) Only displays the binding condition of the specified IP addresses.

**Defaults** N/A

**Command** Privileged EXEC mode.  
**Mode**

**Usage Guide** If the IP address is not defined, show the binding condition of all addresses. If the IP address is defined, show the binding condition of this IP address

**Configuration** The following is the result of the show ip dhcp binding.

**Examples**

```
Ruijie# show ip dhcp binding
Total number of clients : 4
Expired clients : 3
Running clients : 1

IP address      Hardware address      Lease expiration      Type
20.1.1.1        2000.0000.2011          000 days 23 hours 59 mins Automatic
```

The meaning of various fields in the show result is described as follows.

Field	Description
IP address	The IP address to be assigned to the DHCP client.
Client-Identifier /Hardware address	The client identifier or hardware address of the DHCP client.
Lease expiration	The expiration date of the lease. The Infinite indicates it is not limited by the time. The IDLE indicates the address is in the free status currently for it is not renewed or the DHCP client releases it actively.
Type	The type of the address binding. The Automatic indicates an IP address is assigned automatically, and the Manual indicates an IP address is assigned by manual.

**Related  
Commands**

Command	Description
<b>clear ip dhcp binding</b>	Clears the DHCP address binding table.

**Platform** N/A  
**Description**

## 4.51 show ip dhcp conflict

Use this command to show the conflict history record of the DHCP sever.

**show ip dhcp conflict**

**Parameter**

Parameter	Description
-----------	-------------

<b>Description</b>	N/A	N/A
--------------------	-----	-----

**Defaults** N/A

**Command Mode** Privileged EXEC mode.

**Usage Guide** This command can display the conflict address list detected by the DHCP server.

**Configuration** The following example displays the output result of the **show ip dhcp conflict** command.

**Examples**

```
Ruijie# show ip dhcp conflict
IP address  Detection Method
192.168.12.1  Ping
```

The meaning of various fields in the show result is described as follows.

Field	Description
IP address	The IP addresses which cannot be assigned to the DHCP client.
Detection Method	The conflict detection method.

<b>Related Commands</b>	<table><tr><th>Command</th><th>Description</th></tr><tr><td><b>clear ip dhcp conflict</b></td><td>Clears the DHCP conflict record.</td></tr></table>	Command	Description	<b>clear ip dhcp conflict</b>	Clears the DHCP conflict record.
Command	Description				
<b>clear ip dhcp conflict</b>	Clears the DHCP conflict record.				

**Platform Description** N/A

## 4.52 show ip dhcp history

Use this command to display the DHCP lease history.

**show ip dhcp history**

<b>Parameter Description</b>	<table><tr><th>Parameter</th><th>Description</th></tr><tr><td>N/A</td><td>N/A</td></tr></table>	Parameter	Description	N/A	N/A
Parameter	Description				
N/A	N/A				

**Defaults** N/A

**Command Mode** Privileged EXEC mode

**Usage Guide** This command is configured on the DHCP server.

**Configuration** The following example displays the DHCP lease history.

**Examples**

```
Ruijie#show ip dhcp history
```

```

Expired clients          : 3
IP address      Hardware address      Lease expiration      Vlan/Relay
10.1.1.5        2222.abcd.47ac        IDLE                   4097
10.1.1.4        2222.abcd.47ae        IDLE                   4097
10.1.1.3        2222.abcd.47ad        IDLE                   4097
Running clients          : 0

```

Related	Command	Description
Commands	N/A	N/A

Platform N/A

Description

## 4.53 show ip dhcp identifier

Use this command to display the DHCP address pool ID and address usage.

**show ip dhcp identifier**

Parameter	Parameter	Description
Description	N/A	N/A

Defaults N/A

Command Privileged EXEC mode

Mode

Usage Guide N/A

**Configuration** The following example displays the DHCP address pool ID and address usage.

### Examples

```

Ruijie# show ip dhcp identifier
Pool name      Identifier      Total      Distributed  Remained
-----
wvp            597455782      65533      0            65533

```

Pool name	Address pool name.
Identifier	Address pool ID.
Total	Total number of addresses.
Distributed	Number of allocated addresses.
Remained	Number of remained addresses.

Related	Command	Description
Commands	N/A	N/A

**Platform** N/A

**Description**

## 4.54 show ip dhcp pool

Use this command to display the address statistics of an address pool.

**show ip dhcp pool** [ *poolname* ]

Parameter	Parameter	Description
Description	<i>poolname</i>	(Optional) Address pool whose address statistics are to be displayed.

**Defaults** Privileged EXEC mode.

**Command** N/A

**Mode**

**Usage Guide** Use this command to show the address statistics of an address pool.

**Configuration** The following example displays the output result of the **show ip dhcp pool** *poolname* command.

**Examples**

```
Ruijie# show ip dhcp poolname
Pool poolname:
  Address range      192.168.0.1 - 192.168.0.254
  Class range        192.168.0.1 - 192.168.0.254
  Total address      252
  Excluded           2
  Distributed         30
  Conflict            10
  Remained            212
  Usage percentage    84.12698%
  Lease threshold     90%
```

The meaning of various fields in the show result is described as follows.

Field	Description
Address range	Address range of the address pool.
Class range	Class address range. By default, the address range for the same address pool is not configured. Otherwise, the class range is displayed.
Total address	Total number of addresses that can be assigned in the address pool.
Excluded	Number of excluded addresses.
Distributed	Number of assigned addresses.
Conflict	Number of conflicting addresses in the address pool.
Remained	Number of remaining addresses that have not been assigned or can be reused.

Usage percentage	Address pool usage.
Lease threshold	Lease threshold.

**Related  
Commands**

Command	Description
ip dhcp pool	Defines the name of the DHCP address pool and enters the DHCP address pool configuration mode.

**Platform** N/A**Description**

## 4.55 show ip dhcp relay-statistics

Use this command to display the statistics of the DHCP relay.

**show ip dhcp relay-statistics**

Parameter	Parameter	Description
Description	N/A	N/A

**Defaults** N/A**Command  
Mode** Privileged EXEC mode**Usage Guide** This command is used to display the statistics of the DHCP relay.**Configuration** The following example displays the statistics of the DHCP relay.**Examples**

```
Ruijie# show ip dhcp relay-statistics
Cycle mode                0

Message                    Count
Discover                  0
Offer                     0
Request                   0
Ack                       0
Nak                       0
Decline                   0
Release                   0
Info                      0
Bad                       0

Direction                  Count
Rx client                  0
Rx client uni              0
```

Rx client bro	0
Tx client	0
Tx client uni	0
Tx client bro	0
Rx server	0

**Related  
Commands**

Command	Description
N/A	N/A

**Platform  
Description**

N/A

## 4.56 show ip dhcp server statistics

Use this command to display the statistics of the DHCP server.

**show ip dhcp server statistics**

**Parameter  
Description**

Parameter	Description
N/A	N/A

**Defaults**

N/A

**Command  
Mode**

Privileged EXEC mode

**Usage Guide** This command displays the statistics of the DHCP server.

**Configuration Examples** The following example displays the output result of the **show ip dhcp server statistics** command.

```
Ruijie# show ip dhcp server statistics
Address pools          2
Lease counter          4
Active Lease Counter   0
Expired Lease Counter   4
Malformed messages     0
Dropped messages       0

Message                Received
BOOTREQUEST            216
DHCPDISCOVER           33
DHCPREQUEST            25
DHCPDECLINE             0
DHCPRELEASE            1
```



```

DHCPINFORM          150

Message             Sent
BOOTREPLY           16
DHCPOFFER           9
DHCPACK              7
DHCPNAK              0
DHCPREQTIMES         0
DHCPREQSUCTIMES      0
DISCOVER-PROCESS-ERROR 0
LEASE-IN-PINGSTATE   0
NO-LEASE-RESOURCE    0
SERVERID-NO-MATCH    0
-----
recv                 0
send                  0

```

The meaning of various fields in the show result is described as follows.

Field	Description
Address pools	Number of address pools.
Lease count	Number of allocated lease.
Automatic bindings	Number of automatic address bindings.
Manual bindings	Number of manual address bindings.
Expired bindings	Number of expired address bindings.
Malformed messages	Number of malformed messages received by the DHCP.
Message Received or Sent	Number of the messages received and sent by the DHCP server respectively.

**Related  
Commands**

Command	Description
<b>clear ip dhcp server statistics</b>	Clears the DHCP server statistics.

**Platform  
Description**

N/A

## 4.57 show ip dhcp socket

Use this command to display the socket used by the DHCP server.

**show ip dhcp socket**

Parameter	Parameter	Description
Description	N/A	N/A

**Defaults** N/A

**Command Mode** Privileged EXEC mode

**Usage Guide** N/A

**Configuration** The following example displays the socket used by the DHCP server.

**Examples**

```
ruijie#show ip dhcp socket
dhcp socket = 47.
```

Related	Command	Description
Commands	N/A	N/A

**Platform Description** N/A

## 5 DHCPv6 Commands

### 5.1 clear ipv6 dhcp client

Use this command to reset the DHCPv6 client.

**clear ipv6 dhcp client** *interface-type interface-number*

Parameter	Parameter	Description
Description	<i>interface-type</i> <i>interface-number</i>	Sets the interface type and the interface number.

**Defaults** N/A

**Command Mode** Privileged EXEC mode

**Usage Guide** This command is used to reset the DHCPv6 client, which may lead the client to request for the configurations from the server again.

**Configuration Examples** The following example resets DHCP client VLAN 1.

```
Ruijie# clear ipv6 dhcp client vlan 1
```

Related Commands	Command	Description
	N/A	N/A

**Platform Description** N/A

### 5.2 clear ipv6 dhcp relay statistics

Use this command to clear the packet sending and receiving condition with the DHCPv6 Relay function enabled.

**clear ipv6 dhcp relay statistics**

Parameter	Parameter	Description
Description	N/A	N/A

**Defaults** N/A

**Command** Privileged EXEC mode

**Mode****Usage Guide** N/A

**Configuration Examples** The following example clears the packet sending and receiving condition with the DHCPv6 Relay function enabled.

```
Ruijie# clear ipv6 dhcp relay statistics
```

Related Commands	Command	Description
	<b>show ipv6 dhcp relay statistics</b>	Displays the statistical information.

**Platform** N/A**Description**

## 5.3 ipv6 dhcp client ia

Use this command to enable DHCPv6 client mode and request the IANA address from the DHCPv6 server. Use the **no** form of this command to restore the default setting.

**ipv6 dhcp client ia [rapid-commit]**

**no ipv6 dhcp client ia**

Parameter Description	Parameter	Description
	<b>rapid-commit</b>	Allows the two-message interaction process.

**Defaults** This function is disabled by default.

**Command Mode** Interface configuration mode

**Usage Guide** This command is used to enable DHCPv6 client mode and request the IANA address from the DHCPv6 server,

The **rapid-commit**key allows the two-message interaction process between the client and the server. After the key is configured, the solicit message transmitted by the client contains the rapid-commit option.

**Configuration Examples** The following example enables the request for the IANA address on the interface.

```
Ruijie(config)# interface fastethernet 0/1
Ruijie(config-if)# ipv6 dhcp client ia
```

Related Commands	Command	Description
	N/A	N/A

**Platform** N/A

**Description**

## 5.4 ipv6 dhcp client pd

Use this command to enable the DHCPv6 client and request for the prefix address information.

Use the **no** form of this command to restore the default setting.

**ipv6 dhcp client pd** *prefix-name* [ **rapid-commit** ]

**no ipv6 dhcp client pd**

Parameter	Parameter	Description
Description	<i>prefix-name</i>	Defines the IPv6 prefix name.
	<b>rapid-commit</b>	Allows the two-message interaction process.

**Defaults** This function is disabled by default.

**Command Mode** Interface configuration mode

**Usage Guide** With the DHCPv6 client mode disabled, use this command to enable the DHCPv6 client mode on the interface.

With the **ipv6 dhcp client pd** command enabled, the DHCPv6 client sends the prefix request to the DHCPv6 server

The keyword **rapid-commit** allows the client and the server two-message interaction process. With this keyword configured, the solicit message sent by the client includes the **rapid-commit** item.

**Configuration Examples** The following example enables the prefix information request on the interface.

```
Ruijie(config)# interface fastethernet 0/1
Ruijie(config-if)# ipv6 dhcp client pd pd_name
```

Related Commands	Command	Description
	<b>clear ipv6 dhcp client</b>	Resets the DHCPv6 client function on the interface.
	<b>show ipv6 dhcp interface</b>	Displays the DHCPv6 interface configuration.

**Platform Description** N/A

## 5.5 ipv6 dhcp relay destination

Use this command to enable the DHCPv6 relay service and configure the destination address to which the messages are forwarded.

Use the **no** form of this command to restore the default setting.

**ipv6 dhcp relay destination** *ipv6-address* [ *interface-type interface-number* ]

**no ipv6 dhcp relay destination** *ipv6-address* [ *interface-type interface-number* ]

Parameter	Parameter	Description
Description	<i>ipv6-address</i>	Sets the DHCPv6 relay destination address.
	<i>interface-type</i>	Specifies the forwarding output interface if the forwarding address is the local link address.
	<i>interface-number</i>	

**Defaults** By default, the relay and forward function is disabled, and the forwarding destination address and the output interface are not configured.

**Command Mode** Interface configuration mode

**Usage Guide** With the DHCPv6 relay service enabled on the interface, the DHCPv6 message received on the interface can be forwarded to all configured destination addresses. Those received DHCPv6 messages can be from the client, or from another DHCPv6 relay service.

The forwarding output interface configuration is mandatory if the forwarding address is the local link address or the multicast address. And the forwarding output interface configuration is optional if the forwarding address is global or station unicast or multicast address.

Without the forwarding output interface configured, the interface is selected according to the unicast or multicast routing protocol.

The relay reply message can be forwarded without the relay function enabled on the interface.

**Configuration Examples** The following example sets the relay destination address on the interface.

```
Ruijie(config)# interface fastethernet 0/1
Ruijie(config-if)# ipv6 dhcp relay destination 2008:1::1
```

Related Commands	Command	Description
	<b>show ipv6 dhcp interface</b>	Displays the DHCPv6 interface information.

**Platform Description** N/A

## 5.6 show ipv6 dhcp

Use this command to display the device DUID.

**show ipv6 dhcp**

Parameter	Parameter	Description
Description	N/A	N/A

**Defaults** N/A

**Command Mode** Privileged EXEC mode/Interface configuration mode/Global configuration mode

**Usage Guide** The server, client and relay on the same device share a DUID.

**Configuration** The following example displays the device DUID.

**Examples**

```
Ruijie# show ipv6 dhcp
This device's DHCPv6 unique identifier(DUID): 00:03:00:01:00:d0:f8:22:33:b0
```

Related Commands	Command	Description
	N/A	N/A

**Platform** N/A

**Description**

## 5.7 show ipv6 dhcp interface

Use this command to display the DHCPv6 interface information.

**show ipv6 dhcp interface** [ *interface-name* ]

Parameter Description	Parameter	Description
	<i>interface-name</i>	Sets the interface name.

**Defaults** N/A

**Command Mode** Privileged EXEC mode

**Usage Guide** If the *interface-name* is not specified, all DHCPv6 interface information is displayed. If the *interface-name* is specified, the specified interface information is displayed.

**Configuration** The following example displays the DHCPv6 interface information.

**Examples**

```
Ruijie# show ipv6 dhcp interface
VLAN 1 is in server mode
  Server pool dhcp-pool
  Rapid-Commit: disable
```

Related Commands	Command	Description
	N/A	N/A

**Platform** N/A

**Description**

## 5.8 show ipv6 dhcp relay destination

Use this command to display the destination information about DHCPv6 Relay Agent.

```
show ipv6 dhcp relay destination
```

Parameter description	Parameter	Description
	<b>all</b>	Displays information about all configured destination addresses and relay exits.
	<b>Interface</b> <i>interface-type</i> <i>interface-number</i>	Displays the relay destination address and relay exit configured for a specified interface.

Defaults	N/A
----------	-----

**Command** Privileged EXEC mode

<b>Usage</b>	Use this command to show the relay destination address to which DHCPv6 packets sent from a client
<b>guideline</b>	are forwarded through a specified relay exit (optional) by an interface for which the relay function has been enabled by Relay Agent.

**Examples** The following example displays all the relay destination addresses.

```
Ruijie# show ipv6 dhcp relay destination all
Interface: Vlan1    //interface for which the relay function has been enabled
Destination address(es)                Output Interface
3001::2
FF02::1:2      //specified destination address                Vlan2    //specified
relay exit
```

Related commands	Command	Description
	N/A	N/A

Platform description	N/A
----------------------	-----

## 5.9 show ipv6 dhcp relay statistics

Use this command to display the packet sending and receiving condition with the DHCPv6 Relay function enabled.

```
show ipv6 dhcp relay statistics
```

Parameter	Parameter	Description
Description	N/A.	N/A.



**Defaults** N/A.

**Command Mode** Privileged EXEC mode

**Usage Guide** N/A.

**Configuration Examples** The following example displays the packet sending and receiving condition with the DHCPv6 Relay function enabled.

```
Ruijie# show ipv6 dhcp relay statistics
Packets dropped          : 2
  Error                  : 2
  Excess of rate limit   : 0
Packets received         : 28
  SOLICIT                : 0
  REQUEST                : 0
  CONFIRM                : 0
  RENEW                  : 0
  REBIND                 : 0
  RELEASE                : 0
  DECLINE                : 0
  INFORMATION-REQUEST    : 14
  RELAY-FORWARD          : 0
  RELAY-REPLY            : 14
Packets sent             : 16
  ADVERTISE              : 0
  RECONFIGURE             : 0
  REPLY                  : 8
  RELAY-FORWARD          : 8
  RELAY-REPLY            : 0
```

Related Commands	Command	Description
	<b>clear ipv6 dhcp relay statistics</b>	Clears the statistical information.

**Platform Description** N/A

## 6 DNS Commands

### 6.1 clear host

Use this command to clear the dynamically learned host name.

**clear host** [ \* | *host-name* ]

**Parameter  
Description**

Parameter	Description
<i>host-name</i>	Deletes the specified dynamic domain name buffer.
*	Deletes all dynamic domain name buffer.

**Defaults** N/A

**Command  
Mode** Privileged EXEC mode.

**Usage Guide** You can obtain the mapping record of the host name buffer table in two ways: 1) the **ip host** static configuration, 2) the DNS dynamic learning. Execute this command to delete the host name records learned by the DNS dynamically.

**Configuration  
Examples** The following configuration deletes the dynamically learned mapping records from the host name-IP address buffer table.

```
Ruijie(config)#clear host *
```

**Related  
Commands**

Command	Description
<b>show hosts</b>	Displays the host name buffer table.

**Platform  
Description** N/A

### 6.2 ip domain-lookup

Use this command to enable DNS domain name resolution. Use the **no** form of this command to disable the DNS domain name resolution function.

**ip domain-lookup**

**no ip domain-lookup**

**Parameter  
Description**

Parameter	Description
-----------	-------------

N/A	N/A
-----	-----

**Defaults** This function is enabled by default.

**Command Mode** Global configuration mode.

**Usage Guide** This command enables the domain name resolution function.

**Configuration** The following example disables the DNS domain name resolution function.

**Examples** Ruijie(config)# no ip domain-lookup

Related Commands	Command	Description
	<b>show hosts</b>	Displays the DNS related configuration information.

**Platform** N/A  
**Description**

## 6.3 ip host

Use this command to configure the mapping of the host name and the IP address. Use the **no** form of the command to remove the host list.

**ip host** *host-name ip-address*

**no ip host** *host-name ip-address*

Parameter Description	Parameter	Description
	<i>host-name</i>	The host name of the equipment
	<i>ip-address</i>	The IP address of the equipment

**Defaults** N/A

**Command Mode** Global configuration mode.

**Usage Guide** N/A

**Configuration** The following example configures IPv4 address 192.168.5.243 for domain name www.test.com.

**Examples** Ruijie(config)# ip host www.test.com 192.168.5.243

Related	Command	Description
---------	---------	-------------

Commands		
	<b>show hosts</b>	Show the DNS related configuration information.

Platform N/A

Description

## 6.4 ip name-server

Use this command to configure the IP address of the domain name server. Use the **no** form of this command to delete the configured domain name server.

**ip name-server** { *ip-address* | *ipv6-address* }

**no ip name-server** [ *ip-address* | *ipv6-address* ]

Parameter Description	Parameter	Description
	<i>ip-address</i>	The IP address of the domain name server.
	<i>ipv6-address</i>	The IPv6 address of the domain name server.

Defaults No domain name server is configured by default.

Command  
Mode Global configuration mode.

**Usage Guide** Add the IP address of the DNS server. Once this command is executed, the equipment will add a DNS server. When the device cannot obtain the domain name from a DNS server, it will attempt to send the DNS request to subsequent servers until it receives a response.  
Up to 6 DNS servers are supported. You can delete a DNS server with the *ip-address* option or all the DNS servers.

Configuration N/A

Examples

Related Commands	Command	Description
	<b>show hosts</b>	Displays the DNS related configuration information.

Platform N/A

Description

## 6.5 ipv6 host

Use this command to configure the mapping of the host name and the IPv6 address by manual. Use the **no** form of the command to remove the host list.

**ipv6 host** *host-name ipv6-address*

**no ipv6 host** *host-name ipv6-address*

Parameter Description	Parameter	Description
	<i>host-name</i>	The host name of the equipment
	<i>ipv6-address</i>	The IPv6 address of the equipment

**Defaults** N/A

**Command Mode** Global configuration mode.

**Usage Guide** To delete the host list, use the **no ipv6 host** *host-name ipv6-address* command.

**Configuration Examples** The following example configures the IPv6 address for the domain name.

```
Ruijie(config)# ipv6 host switch 2001:0DB8:700:20:1::12
```

Related Commands	Command	Description
	<b>show hosts</b>	Displays the DNS related configuration information.

**Platform Description** N/A

## 6.6 show hosts

Use this command to display DNS configuration.

**show hosts** [ *hostname* ]

Parameter Description	Parameter	Description
	<i>hostname</i>	Displays the specified domain name information,

**Defaults** All domain name information is displayed by default.

**Command Mode** Privileged EXEC mode.

**Usage Guide** This command is used to display the DNS related configuration information.

**Configuration****Examples**

```
Ruijie# show hosts
```

```
Name servers are:
```

```
192.168.5.134 static
```

Host	type	Address	TTL(sec)
switch	static	192.168.5.243	---
www.ruijie.com	dynamic	192.168.5.123	126

Field	Description
Name servers	Domain name server
Host	Domain name
type	Resolution type: Static resolution and dynamic resolution.
Address	IP address corresponding to the domain name
TTL	TTL of entries corresponding to the domain name/IP address.

**Related  
Commands**

Command	Description
<b>ip host</b>	Configures the host name and IP address mapping by manual.
<b>ipv6 host</b>	Configures the host name and IPv6 address mapping by manual.
<b>ip name-server</b>	Configures the DNS server.

**Platform** N/A  
**Description**

## 7 FTP Server Commands

### 7.1 ftp-server enable

Use this command to enable the FTP server. Use the **default** form of this command to restore the default setting.

**ftp-server enable**

**default ftp-server enable**

#### Parameter Description

Parameter	Description
N/A	N/A

#### Defaults

This function is disabled by default.

#### Command Mode

Global configuration mode

#### Usage Guide

This command is used to enable the FTP server to connect the FTP client to upload/download the files.



#### Configuration Examples

The following example enables the FTP Server and confines the FTP client access to the syslog subdirectory:

```
Ruijie(config)# ftp-server topdir /syslog
Ruijie(config)# ftp-server enable
```

The following example disables the FTP Server:

```
Ruijie(config)# no ftp-server enable
```

#### Related Commands

Command	Description
N/A	N/A

#### Platform Description

N/A

## 7.2 ftp-server login timeout

Use this command to set the timeout interval for login to the FTP server. Use the **no** or **default** form of this command to restore the default setting.

**ftp-server login timeout** *time*

**no ftp-server login timeout**

**default ftp-server login timeout**

Parameter Description	Parameter	Description
	<i>time</i>	Sets the timeout interval for login to the FTP server, in the range from 1 to 30 in the unit of minutes.

**Defaults** The default is 2 minutes.

**Command Mode** Global configuration mode

**Usage Guide** The timeout interval refers to the maximum time when your account is allowed online after you login to the server. If you don't perform authentication again before the timeout interval expires, you will be forced offline.

**Configuration Examples** The following example sets the timeout interval for login to the FTP server to 5 minutes.

```
Ruijie(config)# ftp-server login timeout 5
```

The following example restores the default setting.

```
Ruijie(config)# no ftp-server login timeout
```

Related Commands	Command	Description
	N/A	N/A

**Platform** N/A  
**Description**

## 7.3 ftp-server login times

Use this command to set the number of login attempts. Use the **no** or **default** form of this command to restore the default setting.

**ftp-server login times** *time*

**no ftp-server login times**

**default ftp-server login times**



Parameter Description	Parameter	Description
	<i>time</i>	Sets the number of login attempts, in the range from 1 to 10.
Defaults	The default is 3.	
Command Mode	Global configuration mode	
Usage Guide	The number of login attempts refers to the maximum count you are allowed to perform authentication. If the number of your login attempts exceeds 3, you will be forced offline.	
Configuration Examples	The following example sets the number of login attempts to 5. <pre>Ruijie(config)# ftp-server login times 5</pre> The following example restores the default setting. <pre>Ruijie(config)# no ftp-server login times</pre>	
Related Commands	Command	Description
	N/A	N/A
Platform Description	N/A	

## 7.4 ftp-server timeout

Use this command to set the FTP session idle timeout. Use the **no** form of this command to restore the default setting.

**ftp-server timeout** *time*

**no ftp-server timeout**

Parameter Description	Parameter	Description
	<i>time</i>	Sets the session idle timeout, in the range from 1 to 3600 in the unit of minutes.
Defaults	The default is 10 minutes.	
Command Mode	Global configuration mode.	
Usage Guide	Use this command to set the FTP session idle timeout. If the session is idle, the FTP server deems	

the session connection is invalid and disconnects with the user.



The session idle time refers to the time for the FTP session between two FTP operations

**Configuration** The following example sets the session idle timeout to 5 minutes:

**Examples**

```
Ruijie(config)# ftp-server timeout 5
```

The following example restores the default setting.

```
Ruijie(config)# no ftp-server timeout
```

**Related  
Commands**

Command	Description
N/A	N/A

**Platform** N/A

**Description**

## 7.5 ftp-server topdir

Use this command to set the directory range for the FTP client to access to the FTP server files. Use the **no** form of this command to restore the default setting.

**ftp-server topdir** *directory*

**no ftp-server topdir**

**Parameter  
Description**

Parameter	Description
<i>directory</i>	Sets the top-directory.

**Defaults** No top-directory is configured by default.

**Command  
Mode** Global configuration mode.

**Usage Guide** The FTP server top directory specifies the directory range of the files accessed by the client. Can the FTP client accesses to the files on the FTP server with the top directory correctly specified.  
Without this command configured, FTP client fails to access to any file or directory on the FTP server.

**Configuration  
Examples** The following example enables the FTP Server and confines the FTP client access to the syslog subdirectory.

```
Ruijie(config)# ftp-server topdir /syslog
```

```
Ruijie(config)# ftp-server enable
```

The following example restores the default setting.

```
Ruijie(config)# no ftp-server topdir
```

**Related  
Commands**

Command	Description
N/A	N/A

**Platform**

N/A

**Description**

## 7.6 ftp-server username password

Use this command to set the login username and password for the FTP server. Use the **no** form of this command to restore the default setting.

**ftp-server username** *username* **password** [*type*] *password*

**no ftp-server username** *username*

**default ftp-server username** *username*

**Parameter  
Description**

Parameter	Description
<i>username</i>	Sets the login username.
<i>password</i>	Sets the log password

**Defaults**

No username or password is set by default.

**Command  
Mode**

Global configuration mode

**Usage Guide**

Use this command to set the login username for the FTP server. To log in to the FTP server, the correct username and password shall be provided.

The maximum length of the username is 64 characters and the spaces are not allowed in the middle of the username. The username consists of letters, semiangle number and semiangle mark. One username can be configured for the FTP server at most.

The password must contain letters or numbers. Spaces before or behind the password are allowed but will be ignored. The spaces within are part of the password.

The plaintext password is in the range from 1 to 25 characters. The encrypted password is in the range from 4 to 52 characters.



The anonymous user login is not supported on the FTP server. The client fails to pass the identity verification if the username is removed.

**Configuration** The following example sets the username to user:

**Examples**

```
Ruijie(config)# ftp-server username user password pass
```

The following example restores the default setting:

```
Ruijie(config)# no ftp-server username user
```

**Related  
Commands**

Command	Description
N/A	N/A

**Platform** N/A  
**Description**

## 7.7 show ftp-server

Use this command to show the status information of the FTP server.

**show ftp-server**

**Parameter  
Description**

Parameter	Description
N/A	N/A

**Defaults** N/A

**Command  
Mode** Privileged EXEC mode

**Usage Guide** The FTP server status information includes:

- Enabled/Disabled server
- The FTP server top directory
- The FTP server user information, including username, password and connection number. If connection is set up, the IP address, port, transmission type, active/passive mode is shown

**Configuration** The following example displays the related status information of the FTP server:

**Examples**

```
Ruijie#show ftp-server  
  
ftp-server information  
=====
```

```

enable : Y

topdir : tmp:/

timeout: 10min

username:aaaa      password:(PLAIN)bbbb      connect num[2]

[0]trans-type:BINAR (ctrl)server IP:192.168.21.100[21]
client IP:192.168.21.26[3927]

[1]trans-type:ASCI (ctrl)server IP:192.168.21.100[21]
client IP:192.168.21.26[3929]

username:a1      password:(PLAIN)bbbb      connect num[0]
username:a2      password:(PLAIN)bbbb      connect num[0]
username:a3      password:(PLAIN)bbbb      connect num[0]
username:a4      password:(PLAIN)bbbb      connect num[0]
username:a5      password:(PLAIN)bbbb      connect num[0]
username:a6      password:(PLAIN)bbbb      connect num[0]
username:a7      password:(PLAIN)bbbb      connect num[0]
username:a8      password:(PLAIN)bbbb      connect num[0]
username:a9      password:(PLAIN)bbbb      connect num[0]

```

**Related  
Commands**

Command	Description
N/A	N/A

**Platform  
Description**

N/A

## 8 FTP CLIENT Commands

### 8.1 copy flash

Use this command to upload the file from the server to the device through FTP Client.

**copy flash:** *[ local-directory/ ] local-file ftp://username:password@dest-address [ /remote-directory ] /remote-file*

#### Parameter Description

Parameter	Description
<i>username</i>	The username for logging into FTP Server. It is limited to 40 bytes and must not contain ":", "@", "/" and space, neither can it be omitted.
<i>password</i>	The password for logging into FTP Server. It is limited to 32 bytes and must not contain ":", "@", "/" and space, neither can it be omitted.
<i>dest-address</i>	IP address of the target FTP Server.
<i>remote-directory</i>	File directory of FTP Server. It is optional and limited to 255 bytes. No space or Chinese character is supported. If left blank, it implies the current directory of FTP server.
<i>remote-file</i>	Filename on the remote server. It is limited to 255 bytes and doesn't support space or Chinese character.
<i>local-directory</i>	Directory of local folder (optional). If this directory is specified, this directory must have been created beforehand. This command doesn't support automatic directory creation. If left blank, it implies the current directory on the local device. It is limited to 255 bytes and doesn't support space or Chinese characters.
<i>local-file</i>	Filename on the local device. It is limited to 255 bytes and doesn't support space or Chinese character.

**Defaults** N/A

**Command Mode** Privileged EXEC mode

**Usage Guide** N/A

**Configuration** The following example uploads the file named "local-file" in directory "home" of local device to directory "root" on the FTP Server whose user name is user, password is pass and IP address is 192.168.23.69, and changes the filename to "remote-file".

**Examples**

```
Ruijie# copy flash:home/local-file
ftp://user:pass@192.168.23.69/root/remote-file
```

**Related Commands**

Command	Description
N/A	N/A

**Platform** N/A

**Description**

## 8.2 copy ftp

Use this command to download the file from the server to the device through FTP Client.

**copy** **ftp:***//username:password@dest-address* [*/remote-directory*] / *remote-file*  
**flash:***[ local-directory/ ] local-file*

**Parameter Description**

Parameter	Description
<i>username</i>	The username for logging into FTP Server. It is limited to 40 bytes and must not contain ":", "@", "/" and space, neither can it be omitted.
<i>password</i>	The password for logging into FTP Server. It is limited to 32 bytes and must not contain ":", "@", "/" and space, neither can it be omitted.
<i>dest-address</i>	IP address of the target FTP Server.
<i>remote-directory</i>	File directory of FTP Server. It is optional and limited to 255 bytes. No space or Chinese character is supported. If left blank, it implies the current directory of FTP server.
<i>remote-file</i>	Filename on the remote server. It is limited to 255 bytes and doesn't support space or Chinese character.
<i>local-directory</i>	Directory of local folder (optional). If this directory is specified, this directory must have been created beforehand. This command doesn't support automatic directory creation. If left blank, it implies the current directory on the local device. It is limited to 255 bytes and doesn't support space or Chinese characters.
<i>local-file</i>	Filename on the local device. It is limited to 255 bytes and doesn't support space or Chinese character.

**Defaults** N/A

**Command Mode** Privileged EXEC mode

**Usage Guide** N/A

**Configuration Examples** The following example uses username of "user" and password of "pass" to download a file named "remote-file" from the directory "root" on FTP Server with IP address 192.168.23.69 to directory "home" on the local device, and changes the name to "local-file".

```
Ruijie# copy ftp://user:pass@192.168.23.69/root/remote-file  
flash:home/local-file
```

**Related Commands**

Command	Description
<b>copy tftp</b>	Uses the TFTP protocol to transfer files.

**Platform Description** N/A

## 8.3 ftp-client ascii

Use this command to use ASCII mode for FTP transfer.

Use the **no** form of this command to restore the default setting.

**ftp-client ascii**

**no ftp-client ascii**

**default ftp-client**

**Parameter Description**

Parameter	Description
N/A	N/A

**Defaults** The default FTP transfer mode is binary.

**Command Mode** Global configuration mode

**Usage Guide** The **default** command is used to restore the FTP client setting. Specifically, data connection is in PASV mode and file transfer BINARY. The client source IP address is not bound.

**Configuration Examples** The following example configures ASCII FTP transfer.

```
Ruijie (config)# ftp-client ascii
```

The following example configures binary FTP transfer.



```
Ruijie(config)# no ftp-client ascii
```

The following example restores the default setting of the FTP Client.

```
Ruijie(config)# default ftp-client
```

**Related  
Commands**

Command	Description
N/A	N/A

**Platform  
Description**

N/A

## 8.4 ftp-client port

Use this command to configure PORT mode used for FTP data connection. Use the **no** form of this command to restore the default setting.

**ftp-client port**

**no ftp-client port**

**default ftp-client**

**Parameter  
Description**

Parameter	Description
N/A	N/A

**Defaults**

The default is PASV mode for FTP data connection.

**Command  
Mode**

Global configuration mode.

**Usage Guide**

This command is used to configure the connection mode to PORT mode, in which the server will actively connect with the client.

The **default** command is used to restore the FTP client setting. Specifically, data connection is in PASV mode and file transfer BINARY. The client source IP address is not bound.

**Configuration**

The following example configures PORT mode used for FTP data connection

**Examples**

```
Ruijie (config)# ftp-client port
```

The following example configures PASV mode for FTP data connection.

```
Ruijie(config)# no ftp-client port
```

**Related  
Commands**

Command	Description
N/A	N/A

**Platform**

N/A

**Description**

## 8.5 ftp-client source-address

Use this command to bind FTP Client with the source IP address of client and use this IP address to communicate with server. Use the **no** form of this command to disable source IP address binding.

Use the **default** form of this command to restore the default setting.

**ftp-client source-address** {ip-address | ipv6-address}

**no ftp-client source-address**

**default ftp-client**

Parameter Description	Parameter	Description
	N/A	N/A

**Defaults** By default, the IP address is not bound with the client locally. Instead, it is selected by the route.

**Command Mode** Global configuration mode

**Usage Guide** The **default** command is used to restore the FTP client setting. Specifically, data connection is in PASV mode and file transfer BINARY. The client source IP address is not bound.

**Configuration Examples** The following example binds FTP Client with source IP address 192.168.23.236.

```
Ruijie(config)# ftp-client source-address 192.168.23.236
```

The following example binds FTP Client with source IP address 2003:0:0:0::2.

```
Ruijie(config)# ftp-client source-address 2003:0:0:0::2
```

The following example disables source IP address binding.

```
Ruijie(config)# no ftp-client source-address
```

The following example restores the default setting of the FTP Client.

```
Ruijie(config)# default ftp-client
```

Related Commands	Command	Description
	N/A	N/A

**Platform Description** N/A

## 9 TFTP Server Commands

### 9.1 tftp-server enable

Use this command to enable the TFTP server.

Use the **no** form of this command to disable the TFTP server.

**tftp-server enable**

**no tftp-server enable**

Parameter Description	Parameter	Description
	N/A	N/A
Defaults	The TFTP server is disabled by default.	
Command	Global configuration mode	
Modes		
Usage Guide	Only with the TFTP server enabled and the top directory configured meanwhile, TFTP clients are able to upload or download files.	
Configuration Examples	<p>The following example enables the TFTP server and sets the top directory of the TFTP server to <b>/syslog</b>.</p> <pre>Ruijie(config)# tftp-server topdir /syslog Ruijie(config)# tftp-server enable</pre> <p>The following example disables the TFTP server.</p> <pre>Ruijie(config)# no tftp-server enable</pre>	
Platform Description	N/A	

### 9.2 tftp-server topdir

Use this command to configure the top directory for TFTP clients.

Use the **no** or **default** form of this command to restore the default setting.

**tftp-server topdir** *directory*

**no tftp-server topdir**

**default tftp-server topdir**

Parameter Description	Parameter	Description

<i>directory</i>	The top directory for TFTP clients to access. "/" means the root directory.
------------------	---

**Defaults** No top directory is configured by default (no read-write permission).

**Command** Global configuration mode

**Modes**

**Usage Guide** The top directory on the TFTP server defines what files and folders the client is able to access. And the client cannot access the TFTP server before a top directory is correctly configured for the server.

**Configuration** The following example enables the TFTP servicer and sets the top directory for TFTP clients to **/syslog**.

**Examples**

```
Ruijie(config)# tftp-server topdir /syslog
Ruijie(config)# tftp-server enable
```

The following example removes the top directory.

```
Ruijie(config)# no tftp-server topdir
```

**Platform  
Description** N/A

## 10 Network Connectivity Test Tool Commands

### 10.1 clear rping table all

Use this command to clear Rping entries.

**clear rping table** [**all** | [**ping-object** *owner test-name*] | [**trace-object** *owner test-name*]]

#### Parameter Description

Parameter	Description
<i>owner</i>	User index
<i>test-name</i>	Test index

**Defaults** N/A

**Command Mode** Privileged EXEC mode

**Usage Guide** N/A

**Configuration** The following example clears all Rping entries.

#### Examples

```
Ruijie# clear rping table all
```

The following example clears the specified Rping entry.

```
Ruijie# clear rping table user ruijie
```

#### Related Commands

Command	Description
N/A	N/A

**Platform Description** N/A

### 10.2 ping

Use this command to test the connectivity of a network to locate the network connectivity problem. The command format is as follows:

**ping** [**ip**] [*address*] [**length** *length*] [**ntimes** *times*] [**timeout** *seconds*] [**data** *data*] [**source** *source*] [**df-bit**] [**validate**] [**detail**] [**interval** *millisecond*] [**out-interface** *interface*] [**next-hop** *next-hop*]]

#### Parameter Description

Parameter	Description
-----------	-------------


<i>address</i>	Specifies an IPv4 address.
<i>length</i>	Specifies the length of the packet to be sent (range: 36-18024, default: 100).
<i>times</i>	Specifies the number of packets to be sent (range:1-4294967295).
<i>seconds</i>	Specifies the timeout time (range: 1-10 seconds).
<i>data</i>	Specifies the data to fill in.
<i>source</i>	Specifies the source IPv4 address or the source interface. The loopback interface address (for example: 127.0.0.1) is not allowed to be the source address.
<b>df-bit</b>	Sets the DF bit for the IP address. DF bit=1 indicates not to segment the datagrams. By default, the DF bit is 0.
<b>validate</b>	Sets whether to validate the reply packets or not.
<b>detail</b>	Sets whether to contain details in the echoed message. By default, only "!" and "." are displayed.
<i>interface</i>	Specifies the outbound interface
<i>next-hop</i>	Specifies the next hop IPv4 address
<i>millisecond</i>	Specifies the ping interval, in the range from 10 to 300000 milliseconds. Default: 100 milliseconds.

**Defaults** Five packets with 100Byte in length are sent to the specified IP address within specified time (2s by default).

**Command Mode** Privileged EXEC mode.

**Usage Guide** If the device can be pinged, the response information is displayed, and the statistics is listed at the end. For the extension functions of ping, the number, quantity and timeout time of the packets to be sent can be specified, and the statistics is also displayed in the end. To use the domain name function, configure the domain name server firstly. For the concrete configuration, refer to the DNS Configuration section.

**Configuration Examples** The following example tests the connectivity of a network to locate the network connectivity problem.

 (XS-S1960-H series products do not support the VRF parameter. The following example is for reference purpose. Please take the actual device as the standard.)

```
(regular ping).Ruijie# ping 192.168.21.26
Sending 5, 100-byte ICMP Echoes to 192.168.21.26, timeout is 2 seconds:
 < press Ctrl+C to break >
!!!!!
Success rate is 100 percent (5/5), round-trip min/avg/max = 1/2/10 ms
```

The following example displays details.

```
Ruijie#ping 192.168.21.26 detail
*Apr 16 09:16:08: %PING-7-DEBUG: Ping vrf index -1.
Sending 5, 100-byte ICMP Echoes to 192.168.21.26, timeout is 2 seconds:
```

```
< press Ctrl+C to break >
Reply from 192.168.21.26: bytes=100 time=4ms TTL=64
Reply from 192.168.21.26: bytes=100 time=3ms TTL=64
Reply from 192.168.21.26: bytes=100 time=1ms TTL=64
Reply from 192.168.21.26: bytes=100 time=1ms TTL=64
Reply from 192.168.21.26: bytes=100 time=1ms TTL=64
Success rate is 100 percent (5/5), round-trip min/avg/max = 1/2/4 ms.2
```

The following example tests the connectivity of a network to locate the network connectivity problem (extension ping).

```
Ruijie# ping 192.168.21.26 length 1500 ntimes 100 data ffff source 192.168.21.99
timeout 3
Sending 100, 1500-byte ICMP Echoes to 192.168.21.26, timeout is 3 seconds:
< press Ctrl+C to break >
!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!
!!!!!!!!!!!!!!!!!!!!!!!!!!!!
Success rate is 100 percent (100/100), round-trip min/avg/max = 2/2/3 ms
```

The following example displays the details.

```
ping 192.168.21.26 length 1500 ntimes 20 data ffff source 192.168.21.99 timeout 3
detail
Sending 20, 1500-byte ICMP Echoes to 192.168.21.26, timeout is 3 seconds:
< press Ctrl+C to break >
Reply from 192.168.21.26: bytes=1500 time=1ms TTL=64
Reply from 192.168.21.26: bytes=1500 time=1ms TTL=64
Reply from 192.168.21.26: bytes=1500 time=1ms TTL=64
Reply from 192.168.21.26: bytes=1500 time=1ms TTL=64
Reply from 192.168.21.26: bytes=1500 time=1ms TTL=64
Reply from 192.168.21.26: bytes=1500 time=1ms TTL=64
Reply from 192.168.21.26: bytes=1500 time=1ms TTL=64
Reply from 192.168.21.26: bytes=1500 time=2ms TTL=64
Reply from 192.168.21.26: bytes=1500 time=1ms TTL=64
Reply from 192.168.21.26: bytes=1500 time=1ms TTL=64
Reply from 192.168.21.26: bytes=1500 time=1ms TTL=64
Reply from 192.168.21.26: bytes=1500 time=1ms TTL=64
Reply from 192.168.21.26: bytes=1500 time=1ms TTL=64
Reply from 192.168.21.26: bytes=1500 time=1ms TTL=64
Reply from 192.168.21.26: bytes=1500 time=1ms TTL=64
Reply from 192.168.21.26: bytes=1500 time=1ms TTL=64
Reply from 192.168.21.26: bytes=1500 time=1ms TTL=64
Reply from 192.168.21.26: bytes=1500 time=3ms TTL=64
Reply from 192.168.21.26: bytes=1500 time=1ms TTL=64
Reply from 192.168.21.26: bytes=1500 time=1ms TTL=64

Success rate is 100 percent (20/20), round-trip min/avg/max = 1/1/3 ms
```

### Related Commands

Command	Description
N/A	N/A

**Platform** N/A

### Description

## 10.3 ping ipv6

Use this command to test the connectivity of a network to locate the network connectivity problem. The command format is as follows:

**ping** [**ipv6**] [*ip-address* [**length** *length*] [**ntimes** *times*] [**timeout** *seconds*] [**data** *data*] [**source** *source*] [**detail**] [**interval** *millisecond*] [**out-interface** *interface* [**next-hop** *next-hop*]]]

### Parameter Description

Parameter	Description
<i>ip-address</i>	Specifies an IPv6 address.
<i>length</i>	Specifies the length of the packet to be sent (range: 36-18024, default: 100).
<i>times</i>	Specifies the number of packets to be sent (range:1-4294967295).
<i>seconds</i>	Specifies the timeout time (range: 1-10 seconds).
<i>data</i>	Specifies the data to fill in.
<i>source</i>	Specifies the source IPv6 address or the source interface. The loopback interface address (for example: 127.0.0.1) is not allowed to be the source address.
<b>detail</b>	Sets whether to contain details in the echoed message. By default, only "!" and "." are displayed.
<i>interface</i>	Specifies the outbound interface
<i>next-hop</i>	Specifies the next hop IPv6 address
<i>millisecond</i>	Specifies the ping interval, in the range from 10 to 300000 milliseconds. Default: 100 milliseconds.

**Defaults** Five packets with 100Byte in length are sent to the specified IP address within specified time 2 seconds by default

**Command Mode** Privileged EXEC mode.

**Usage** If the device can be pinged, the response information is displayed, and the statistics is listed at the end. If the



**Guide** response data does not match the request data, a 'Request receive error.' message is displayed and the statistics is listed in the end. For the extension functions of ping ipv6, the number, quantity and timeout time of the packets to be sent can be specified, and the statistics is also displayed in the end. To use the domain name function, configure the domain name server firstly. For the concrete configuration, refer to the DNS Configuration section.

**Configuration** The following example tests the connectivity of a network to locate the network connectivity problem.

**Examples**

```
Ruijie# ping ipv6 2000::1
Sending 5, 100-byte ICMP Echoes to 2000::1, timeout is 2 seconds:
 < press Ctrl+C to break >
!!!!
Success rate is 100 percent (5/5), round-trip min/avg/max = 1/2/10 ms

The example below shows the extension ping ipv6.
Ruijie# ping ipv6 2000::1 length 1500 ntimes 100 timeout 3 data ffff source 192.168.4.10:
Sending 100, 1500-byte ICMP Echoes to 2000::1, timeout is 3 seconds
 < press Ctrl+C to break >
!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!
!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!
Success rate is 100 percent (100/100), round-trip min/avg/max = 2/2/3 ms
```

**Related Commands**

Command	Description
N/A	N/A

**Platform** N/A  
**Description**  
 n

## 10.4 show rping detail

Use this command to display Rping information.

**show rping detail**

**Parameter Description**

Parameter	Description
N/A	N/A

**Defaults** N/A

**Command Mode** Privileged EXEC mode/Global configuration mode/Interface configuration mode

**Usage Guide** This command is used to display the Rping information such as numbers of test accounts and users.

**Configuration** The following example displays Rping information.

**Examples**

```
Ruijie#show rping detail
Total owner number: 2
Total test number: 4
owner: user1
    test name: taget_1      storage type: volatile
test name: taget_2      storage type: nonVolatile
owner: user2
    test name: taget_1      storage type: permanent
test name: taget_2      storage type: readOnly
```

Field	Description
Total owner number	The number of users
Total test number	The number of Rping accounts
owner	Username
test name	Test name
storage type	Storage type

**Related Commands**

Command	Description
N/A	N/A

**Platform** N/A

**Description**

## 10.5 traceroute

Use this command to display all gateways passed by the test packets from the source address to the destination address.

**traceroute** [**ip**] [**address** [**probe** *number*] [**source** *source*] [**timeout** *seconds*] [**ttl** *minimum maximum*]] [**out-interface** *interface* [**next-hop** *next-hop*]]]

**Parameter Description**

Parameter	Description
<i>address</i>	Specifies an IPv4 address.
<i>number</i>	Specifies the number of probe packets to be sent (range: 1-255).
<i>source</i>	Specifies the source IPv4 address or the source interface. The loopback interface address (for example: 127.0.0.1) is not allowed to be the source address.
<i>seconds</i>	Specifies the timeout time (range: 1-10 seconds).

<i>minimum maximum</i>	Specifies the minimum and maximum TTL values (range:1-255).
<i>interface</i>	Specifies the outbound interface
<i>next-hop</i>	Specifies the next hop IPv4 address

**Defaults** By default, *seconds* is 3 seconds, *number* is 3, *minimum* and *maximum* are 1 and 255.

**Command** Privileged EXEC mode: enables extended functions.

**Mode** User EXEC mode: enables basic functions.

**Usage Guide** Use the **tracert** command to test the connectivity of a network to exactly locate the network connectivity problem when the network failure occurs. To use the function domain name, configure the domain name server. For the concrete configuration, refer to the DNS Configuration part.

**Configuration Examples** The following is two examples of the application about tracert, the one is of the smooth network, and the other is the network in which some gateways aren't connected successfully.

1. When the network is connected smoothly:

```
Ruijie# traceroute 61.154.22.36
< press Ctrl+C to break >
Tracing the route to 61.154.22.36

 1  192.168.12.1      0 msec  0 msec  0 msec
 2  192.168.9.2       4 msec  4 msec  4 msec
 3  192.168.9.1       8 msec  8 msec  4 msec
 4  192.168.0.10      4 msec  28 msec 12 msec
 5  192.168.9.2       4 msec  4 msec  4 msec
 6  202.101.143.154   12 msec  8 msec  24 msec
 7  61.154.22.36     12 msec  8 msec  22 msec
```

From above result, it's clear to know that the gateways passed by the packets sent to the host with an IP address of 61.154.22.36 (gateways 1~6) and the spent time are displayed. Such information is helpful for network analysis.

2. When some gateways in the network fail:

```
Ruijie# traceroute 202.108.37.42
< press Ctrl+C to break >
Tracing the route to 202.108.37.42

 1  192.168.12.1      0 msec  0 msec  0 msec
 2  192.168.9.2       0 msec  4 msec  4 msec
 3  192.168.110.1     16 msec 12 msec 16 msec
 4  * * *
 5  61.154.8.129      12 msec 28 msec 12 msec
 6  61.154.8.17       8 msec 12 msec 16 msec
 7  61.154.8.250      12 msec 12 msec 12 msec
 8  218.85.157.222    12 msec 12 msec 12 msec
 9  218.85.157.130    16 msec 16 msec 16 msec
```

```

10      218.85.157.77      16 msec   48 msec   16 msec
11      202.97.40.65       76 msec   24 msec   24 msec
12      202.97.37.65       32 msec   24 msec   24 msec
13      202.97.38.162      52 msec   52 msec   224 msec
14      202.96.12.38       84 msec   52 msec   52 msec
15      202.106.192.226    88 msec   52 msec   52 msec
16      202.106.192.174     52 msec   52 msec   88 msec
17      210.74.176.158    100 msec   52 msec   84 msec
18      202.108.37.42      48 msec   48 msec   52 msec

```

The above result clearly shown that the gateways passed by the packets sent to the host with an IP address of 202.108.37.42 (gateways 1~17) and the spent time are displayed, and gateway 4 fails.

```
Ruijie# traceroute www.ietf.org
```

```
Translating "www.ietf.org"...[OK]
```

```
< press Ctrl+C to break >
```

```
Tracing the route to 64.170.98.32
```

```

 1      192.168.217.1       0 msec   0 msec   0 msec
 2      10.10.25.1         0 msec   0 msec   0 msec
 3      10.10.24.1         0 msec   0 msec   0 msec
 4      10.10.30.1         10 msec   0 msec   0 msec
 5      218.5.3.254        0 msec   0 msec   0 msec
 6      61.154.8.49        10 msec   0 msec   0 msec
 7      202.109.204.210    0 msec   0 msec   0 msec
 8      202.97.41.69       20 msec  10 msec  20 msec
 9      202.97.34.65       40 msec  40 msec  50 msec
10      202.97.57.222      50 msec  40 msec  40 msec
11      219.141.130.122    40 msec  50 msec  40 msec
12      219.142.11.10     40 msec  50 msec  30 msec
13      211.157.37.14     50 msec  40 msec  50 msec
14      222.35.65.1       40 msec  50 msec  40 msec
15      222.35.65.18      40 msec  40 msec  40 msec
16      222.35.15.109     50 msec  50 msec  50 msec
17      *          *          *
18      64.170.98.32      40 msec  40 msec  40 msec

```

#### Related Commands

Command	Description
N/A	N/A

#### Platform Description

N/A

## 10.6 traceroute ipv6

Use this command to display all gateways passed by the test packets from the source address to the destination address.

**traceroute** [**ipv6** ] [ *address* [ **probe** *number* ] [ **timeout** *seconds* ] [ **ttl** *minimum maximum* ] [ **out-interface** *interface* [ **next-hop** *next-hop* ] ] ]

### Parameter Description

Parameter	Description
<i>address</i>	Specifies an IPv6 address.
<i>number</i>	Specifies the number of probe packets to be sent.
<i>seconds</i>	Specifies the timeout time.
<i>minimum maximum</i>	Specifies the minimum and maximum TTL values.
<i>interface</i>	Specifies the outbound interface
<i>next-hop</i>	Specifies the next hop IPv6 address

### Defaults

By default, *seconds* is 3 seconds, *number* is 3, *minimum* and *maximum* are 1 and 255.

### Command

Privileged EXEC mode: enables extended functions.

### Mode

User EXEC mode: enables basic functions.

### Usage Guide

Use the **traceroute ipv6** command to test the connectivity of a network to exactly locate the network connectivity problem when the network failure occurs. To use the function domain name, configure the domain name server. For the concrete configuration, refer to the DNS Configuration part.

### Configuration

The following is two examples of the application about traceroute ipv6, the one is of the smooth network, and the other is the network in which some gateways aren't connected successfully.

### Examples

1. When the network is connected smoothly:

```
Ruijie# traceroute ipv6 3004::1
< press Ctrl+C to break >
Tracing the route to 3004::1
 1  3000::1      0 msec  0 msec  0 msec
 2  3001::1      4 msec  4 msec  4 msec
 3  3002::1      8 msec  8 msec  4 msec
 4  3004::1      4 msec  28 msec 12 msec
```

From above result, it's clear to know that the gateways passed by the packets sent to the host with an IP address of 3004::1 (gateways 1~4) and the spent time are displayed. Such information is helpful for network analysis.

2. When some gateways in the network fail:

```
Ruijie# traceroute ipv6 3004::1
< press Ctrl+C to break >
Tracing the route to 3004::1
 1  3000::1      0 msec  0 msec  0 msec
```

```
2      3001::1      4 msec  4 msec  4 msec
3      3002::1      8 msec  8 msec  4 msec
4      * * *
5      3004::1      4 msec  28 msec 12 msec
```

The above result clearly shown that the gateways passed by the packets sent to the host with an IP address of 3004::1 (gateways 1~5) and the spent time are displayed, and gateway 4 fails.

**Related  
Commands**

Command	Description
N/A	N/A

**Platform  
Description**

N/A

## 11 TCP Commands

### 11.1 ip tcp keepalive

Use this command to enable the TCP keepalive function. Use the **no** form of this command to restore the default setting.

**ip tcp keepalive** [ **interval** *num1* ] [ **times** *num2* ] [ **idle-period** *num3* ]

**no ip tcp keepalive**

#### Parameter Description

Parameter	Description
<b>interval</b> <i>num1</i>	The interval of sending the keepalive packet, in the range from 1 to 120 in the unit of seconds, The default is 75.
<b>times</b> <i>num2</i>	Keepalive packet sending times, in the range from 1 to 10. The default is 6.
<b>idle-period</b> <i>num3</i>	Idle time, the time period during which the peer end does not send any packet to the local end, in the range from 60 to 1800 in the unit of seconds. The default is 900.

**Defaults** The function is disabled by default.

**Command Mode** Global configuration mode

**Usage Guide** The keepalive function enables TCP to detect whether the peer end is operating properly. Suppose the keepalive function is enabled together with default **interval**, **times** and **idle-period** settings. TCP begins to send the keepalive packet at an interval of 75 seconds if it does not receive any packet from the peer end in 900 seconds. The TCP connection is considered invalid and then disconnected automatically if the device sends the keepalive packet for six consecutive times without receiving any TCP packet from the peer end. This command applies to both IPv4 and IPv6 TCP.

**Configuration Examples** The following example enables the TCP keepalive function on the device and sets the **idle-period** and **interval** to 180 and 60 respectively. If the device sends the keepalive packet for four consecutive times without receiving any TCP packet from the peer end, the TCP connection is considered invalid.

```
Ruijie(config)# ip tcp keepalive interval 60 times 4 idle-period 180
```

#### Related Commands

Command	Description
N/A	N/A

**Platform Description** N/A

## 11.2 ip tcp mss

Use this command to set the upper limit of the MSS value. Use the **no** form of this command to restore the default setting.

**ip tcp mss** *max-segment-size*

**no ip tcp mss**

### Parameter Description

Parameter	Description
<i>max-segment-size</i>	Upper limit of the MSS value in the range from 68 to 10000 bytes

### Defaults

The default MSS = Outgoing IPv4/v6 MTU- IPv4/v6 header-TCP header.

### Command Mode

Global configuration mode

### Usage Guide

This command is used to limit the maximum value of MSS for the TCP connection to be created. The negotiated MSS cannot exceed the configured value. You can use this command to reduce the maximum value of MSS. However, this configuration is not needed in general. This command applies to both IPv4 and IPv6 TCP.

### Configuration Examples

The following example sets the upper limit of the MSS value to 1300 bytes.

```
Ruijie(config)# ip tcp mss 1300
```

### Related Commands

Command	Description
N/A	N/A

### Platform Description

N/A

## 11.3 ip tcp path-mtu-discovery

Use this command to enable Path Maximum Transmission Unit (PMTU) discovery function for TCP in global configuration mode. Use the **no** form of this command to restore the default setting.

**ip tcp path-mtu-discovery** [ **age-timer** *minutes* | **age-timer** *infinite* ]

**no ip tcp path-mtu-discovery**

### Parameter Description

Parameter	Description
<b>age-timer</b> <i>minutes</i>	The time interval for further discovery after discovering PMTU. Its value ranges from 10 to 30 minutes. The default value is 10.
<b>age-timer</b> <i>infinite</i>	No further discovery after discovering PMTU



**Defaults** This function is disabled by default.

**Command Mode** Global configuration mode

**Usage Guide** Based on RFC1191, the TCP path MTU function improves the network bandwidth utilization and data transmission when the user uses TCP to transmit the data in batch.

Enabling or disabling this function takes no effect for existent TCP connections and is only effective for TCP connections to be created. This command applies to only IPv4 TCP. This function is enabled for IPv6 TCP constantly and cannot be disabled.

According to RFC1191, after discovering the PMTU, the TCP uses a greater MSS to detect the new PMTU at a certain interval, which is specified by the parameter **age-timer**. If the PMTU discovered is smaller than the MSS negotiated between two ends of the TCP connection, the device will be trying to discover the greater PMTU at the specified interval until the PMTU value reaches the MSS or the user stops this timer. Use the parameter **age-timer infinite** to stop this timer.

**Configuration** The following example enables PMTU discovery.

**Examples** Ruijie(config)# ip tcp path-mtu-discovery

**Related Commands**

Command	Description
<b>show tcp pmtu</b>	Shows the PMTU value for the TCP connection.

**Platform Description** N/A

## 11.4 ip tcp send-reset

Use this command to enable the device to send the reset packet when receiving the TCP port unreachable packet. Use the **no** form of this command to disable this function,

**ip tcp send-reset**

**no ip tcp send-reset**

**Parameter Description**

Parameter	Description
N/A	N/A

**Defaults** This function is enabled by default.

**Command Mode** Global configuration mode

**Usage Guide** In general, when dispatching the TCP packet, the TCP module replies a reset packet automatically to disconnect the TCP connection with the peer end if the TCP connection that this packet belongs to is not found. However, flooding TCP port unreachable packets pose an attack threat to the device. This command can be used to disable the device from sending the reset packet when receiving the TCP port unreachable packet. This command applies to both IPv4 and IPv6 TCP.

**Configuration Examples** The following example disables the device from sending the reset packet when receiving the TCP port unreachable packet.

```
Ruijie(config)# no ip tcp send-reset
```

**Related Commands**

Command	Description
N/A	N/A

**Platform Description** N/A

## 11.5 ip tcp synwait-time

Use this command to set the timeout value for SYN packets (the maximum time from SYN transmission to successful three-way handshake). Use the **no** form of this command to restore the default setting.

**ip tcp synwait-time** *seconds*

**no ip tcp synwait-time** *seconds*

**Parameter Description**

Parameter	Description
<i>seconds</i>	Timeout value for SYN packets in the range from 5 to 300 in the unit of seconds.

**Defaults** The default is 20.

**Command Mode** Global configuration mode

**Usage Guide** If there is an SYN attack in the network, reducing the SYN timeout value can prevent resource consumption, but it takes no effect for successive SYN attacks. When the device actively requests a connection with an external device, reducing the SYN timeout value can shorten the time for the user to wait, such as telnet login. For poor network conditions, the timeout value can be increased properly. This command applies to both IPv4 and IPv6 TCP.

**Configuration Examples** The following example set the timeout value for SYN packets to 10 seconds.

```
Ruijie(config)# ip tcp syntime-out 10
```

Related Commands	Command	Description
	N/A	N/A

**Platform** N/A  
**Description**

## 11.6 ip tcp window-size

Use this command to change the size of receiving buffer and sending buffer for TCP connections.

Use the **no** form of this command to restore the default setting.

**ip tcp window-size** *size*

**no ip tcp window-size**

Parameter Description	Parameter	Description
	<i>size</i>	Size of receiving buffer and sending buffer for TCP connections in the range from 128 to 65535 << 14 bytes.

**Defaults** The default is 65535.

**Command Mode** Global configuration mode

**Usage Guide** The TCP receiving buffer is used to buffer the data received from the peer end. These data will be subsequently read by application programs. Generally, the window size of TCP packets implies the size of free space in the receiving buffer. For connections involving a large bandwidth and mass data, increasing the size of receiving buffer will remarkably improve TCP transmission performance.

The sending buffer is used to buffer the data of application programs. Each byte in the sending buffer has a sequence number, and bytes with sequence numbers acknowledged will be removed from the sending buffer. Increasing the sending buffer will improve the interaction between TCP and application programs, thus enhancing the performance. However, increasing the receiving buffer and sending buffer will result in more memory consumption of TCP.

This command is used to change the size of receiving buffer and sending buffer for TCP connections. This command changes both the receiving buffer and sending buffer, and only applies to subsequent connections. This command applies to both IPv4 and IPv6 TCP.

**Configuration Examples** The following example sets the TCP window size to 16386 bytes.

```
Ruijie(config)# ip tcp window-size 16386
```

Related Commands	Command	Description
	N/A	N/A

**Platform** N/A

**Description**

## 11.7 service tcp-keepalives-in

Use this command to enable the keepalive function for the TCP server. Use the **no** form of this command to restore the default setting.

**service tcp-keepalives-in** [ *interval* ] [ **garbage** ]

**no service tcp-keepalives-in**

**Parameter  
Description**

Parameter	Description
<i>interval</i>	The interval of sending keepalive packets, in the range from 1 to 65535 in the unit of seconds. The default is 60.
<b>garbage</b>	The keepalive packet contains one-byte invalid data. The invalid data is not contained by default.

**Defaults** This function is disabled by default.

**Command  
Mode** Global configuration mode

**Usage Guide** The keepalive function enables the TCP server to detect whether the client is operating properly. If the TCP server sends the keepalive packet for four consecutive times without receiving any TCP packet from the client, the TCP connection is considered invalid and then is disconnected automatically.

**Configuration  
Examples** The following example enables the keepalive function for the TCP server and sets the interval of sending the keepalive packet to 10 seconds. The keepalive packet contains one-byte invalid data.

```
Ruijie(config)# service tcp-keepalives-in 10 garbage
```

**Related  
Commands**

Command	Description
N/A	N/A

**Platform** N/A

**Description**

## 11.8 service tcp-keepalives-out

Use this command to enable the keepalive function for the TCP client. Use the **no** form of this command to restore the default setting,

**service tcp-keepalives-out** [ *interval* ] [ **garbage** ]  
**no service tcp-keepalives-out** [ *interval* ] [ **garbage** ]

**Parameter  
Description**

Parameter	Description
<i>interval</i>	The interval of sending keepalive packets, in the range from 1 to 65535 in the unit of seconds. The default is 60.
<b>garbage</b>	The keepalive packet contains one-byte invalid data. The invalid data is not contained by default.

**Defaults** This function is disabled by default.

**Command  
Mode** Global configuration mode

**Usage Guide** The keepalive function enables the TCP client to detect whether the server is operating properly. If the TCP client sends the keepalive packet for four consecutive times without receiving any TCP packet from the server, the TCP connection is considered invalid and then is disconnected automatically.

**Configuration Examples** The following example enables the keepalive function for the TCP client and sets the interval of sending the keepalive packet to 10 seconds. The keepalive packet contains one-byte invalid data

```
Ruijie(config)# service tcp-keepalives-out 10 garbage
```

**Related  
Commands**

Command	Description
N/A	N/A

**Platform  
Description** N/A

## 11.9 show ipv6 tcp connect

Use this command to display the current IPv6 TCP connection information.

**show ipv6 tcp connect** [ **local-ipv6** *X:X:X:X::X* ] [ **local-port** *num* ] [ **peer-ipv6** *X:X:X:X::X* ]  
[ **peer-port** *num* ]

Use this command to display the current IPv6 TCP connection statistics.

**show ipv6 tcp connect statistics**

**Parameter  
Description**

Parameter	Description
<b>local-ipv6</b> <i>X:X:X:X::X</i>	Local IPv6 address

<b>local-port</b> <i>num</i>	Local port
<b>peer-ipv6</b> <i>X:X:X:X::X</i>	Peer IPv6 address
<b>peer-port</b> <i>num</i>	Peer port
<b>statistics</b>	Displays IPv6 TCP connection statistics

**Defaults** N/A

**Command Mode** Privileged EXEC mode

**Usage Guide** N/A

**Configuration** The following example displays the current IPv6 TCP connection information.

**Examples**

```
Ruijie#show ipv6 tcp connect
Number Local Address      Foreign Address      State      Process name
1      :::22                :::0                LISTEN     rg-sshd
2      :::23                :::0                LISTEN     rg-telnetd
3      1000::1:23          1000::2:64201      ESTABLISHED rg-telnetd

The following example displays the current IPv6 TCP connection statistics.
Ruijie#show ipv6 tcp connect statistics
State      Count
-----
ESTABLISHED 1
SYN_SENT   0
SYN_RECV   0
FIN_WAIT1  0
FIN_WAIT2  0
TIME_WAIT  0
CLOSED     0
CLOSE_WAIT 0
LAST_ACK   0
LISTEN     1
CLOSING    0
Total: 2
```

**Related Commands**

Command	Description
N/A	N/A

**Platform Description** N/A

## 11.10 show ipv6 tcp pmtu

Use this command to display information about IPv6 TCP PMTU.

**show ipv6 tcp pmtu** [ **local-ipv6** X:X:X:X::X ] [ **local-port** num ] [ **peer-ipv6** X:X:X:X::X ] [ **peer-port** num ]

### Parameter Description

Parameter	Description
<b>local-ipv6</b> X:X:X:X::X	Local IPv6 address
<b>local-port</b> num	Local port
<b>peer-ipv6</b> X:X:X:X::X	Peer IPv6 address
<b>peer-port</b> num	Peer port

**Defaults** N/A

**Command Mode** Privileged EXEC mode

**Usage Guide** N/A

**Configuration Examples** The following example information about IPv6 TCP PMTU.

```
Ruijie# show ipv6 tcp pmtu
```

Number	Local Address	Foreign Address	PMTU
1	1000::1:23	1000::2.13560	

Field	Description
Number	Number
Local Address	Local address and port number. The number after the last colon is the port number.
Foreign Address	Remote address and port number. The number after the last colon is the port number.
PMTU	Path MTU.

### Related Commands

Command	Description
N/A	N/A

**Platform Description** N/A

## 11.11 show ipv6 tcp port

Use this command to display the current IPv6 TCP port status.

**show ipv6 tcp port [ num ]****Parameter  
Description**

Parameter	Description
<i>num</i>	Port number

**Defaults** N/A**Command  
Mode** Privileged EXEC mode**Usage Guide** N/A**Configuration** The following example displays the current IPv6 TCP port status.**Examples**

```
Ruijie#show ipv6 tcp port
TCP connections on port 23:
Number  Local Address Foreign Address  State
1       1000::1:23    1000::2:64571    ESTABLISHED
Total: 1

TCP connections on port 2650:
Number  Local Address Foreign Address  State
Total: 0
```

Field	Description
Number	Number
Local Address	Local address and port number.
Foreign Address	Remote address and port number.



State	<p>Current status of the TCP connection. There are eleven possible states:</p> <p>CLOSED: The connection has been closed.</p> <p>LISTEN: Listening state</p> <p>SYNSENT: In the three-way handshake phase when the SYN packet has been sent out.</p> <p>SYNRCVD: In the three-way handshake phase when the SYN packet has been received.</p> <p>ESTABLISHED: The connection has been established.</p> <p>FINWAIT1: The local end has sent the FIN packet.</p> <p>FINWAIT2: The FIN packet sent by the local end has been acknowledged.</p> <p>CLOSEWAIT: The local end has received the FIN packet from the peer end.</p> <p>LASTACK: The local end has received the FIN packet from the peer end, and then sent its own FIN packet.</p> <p>CLOSING: The local end has sent the FIN packet from the peer end, and received the FIN packet from the peer end before the ACK packet for the peer end to respond with this FIN packet is received.</p> <p>TIMEWAIT: The FIN packet sent by the local end has been acknowledged, and the local end has also acknowledged the FIN packet.</p>
-------	--

#### Related Commands

Command	Description
N/A	N/A

#### Platform Description

N/A

## 11.12 show tcp connect

Use this command to display basic information about the current TCP connections.

**show tcp connect** [ **local-ip** *a.b.c.d* ] [ **local-port** *num* ] [ **peer-ip** *a.b.c.d* ] [ **peer-port** *num* ]

Use this command to display the current IPv4 TCP connection statistics.

**show tcp connect statistics**

#### Parameter Description

Parameter	Description
<b>local-ip</b> <i>a.b.c.d</i>	Local IP address.
<b>local-port</b> <i>num</i>	Local port.
<b>peer-ip</b> <i>a.b.c.d</i>	Peer IP address.
<b>peer-port</b> <i>num</i>	Peer port.
<b>statistics</b>	Displays IPv4 TCP connection statistics.

**Defaults** N/A

**Command Mode** Privileged EXEC mode

**Usage Guide** N/A

**Configuration** The following example displays the current IPv4 TCP connection information.

**Examples**

```
Ruijie#show tcp connect
```

Number	Local Address	Foreign Address	State	Process name
1	0.0.0.0:22	0.0.0.0:0	LISTEN	rg-sshd
2	0.0.0.0:23	0.0.0.0:0	LISTEN	rg-telnetd
3	1.1.1.1:23	1.1.1.2:64201	ESTABLISHED	rg-telnetd

Field	Description
Number	Sequence number.
Local Address	The Local address and port number. The number after the last "." is the port number. For example, in "2002::2.23" and "192.168.195.212.23", "23" is the port number.
Foreign Address	The remote address and port number. The number after the last "." is the port number. For example, in "2002::2.23" and "192.168.195.212.23", "23" is the port number.
State	<p>Current status of the TCP connection. There are eleven possible states:</p> <p>CLOSED: The connection has been closed.</p> <p>LISTEN: Listening state</p> <p>SYNSENT: In the three-way handshake phase when the SYN packet has been sent out.</p> <p>SYNRCVD: In the three-way handshake phase when the SYN packet has been received.</p> <p>ESTABLISHED: The connection has been established.</p> <p>FINWAIT1: The local end has sent the FIN packet.</p> <p>FINWAIT2: The FIN packet sent by the local end has been acknowledged.</p> <p>CLOSEWAIT: The local end has received the FIN packet from the peer end.</p> <p>LASTACK: The local end has received the FIN packet from the peer end, and then sent its own FIN packet.</p> <p>CLOSING: The local end has sent the FIN packet from the peer end, and received the FIN packet from the peer end before the ACK packet for the peer end to respond with this FIN packet is received.</p> <p>TIMEWAIT: The FIN packet sent by the local end has been acknowledged, and the local end has also acknowledged the</p>

	FIN packet.
Process name	Process name.

The following example displays the current IPv4 TCP connection statistics.

```
Ruijie#show tcp connect statistics
```

```
State          Count
```

```
-----
```

```
ESTABLISHED 1
```

```
SYN_SENT     0
```

```
SYN_RECV     0
```

```
FIN_WAIT1    0
```

```
FIN_WAIT2    0
```

```
TIME_WAIT    0
```

```
CLOSED       0
```

```
CLOSE_WAIT   0
```

```
LAST_ACK     0
```

```
LISTEN       1
```

```
CLOSING      0
```

```
Total: 2
```

#### Related Commands

Command	Description
N/A	N/A

#### Platform Description

N/A

## 11.13 show tcp parameter

Use this command to show TCP parameters.

**show tcp parameter**

#### Parameter Description

Parameter	Description
N/A	N/A

#### Defaults

N/A

#### Command Mode

Privileged EXEC mode

#### Usage Guide

N/A

**Configuration** The following example shows TCP parameters.

**Examples**

```
Ruijie#show tcp parameter
Hash table information:
  Established hash bucket size: 16384
  Bind hash bucket size: 16384
Memory information:
  Global memory limit: low=92160, pressure=122880, high=184320 (unit: pages)
  Per-socket receive buffer size: min=4096, default=87380, max=3932160 (unit:
bytes)
  Per-socket send buffer size: min=4096, default=16384, max=3932160 (unit:
bytes)
  Current allocated memory: 0
  Current memory pressure flag: 0
SYN specific information:
  Max SYN_RECV sockets per LISTEN socket: 65535
  Max SYN retries: 5
  Max SYN ACK retries: 5
Timewait specific information:
  Max timewait sockets: 180000
  Current timewait sockets: 0
  Timewait recycle: 0
  Reuse timewait port: 0
Keepalive information:
  Keepalive on: 0
  Idle period: 900 seconds
  Interval: 75 seconds
  Max probes: 6
MTU probing:
  Enable mtu probing: 0
FIN specific information:
  FIN_WAIT_2 timeout: 60 seconds
Orphan socket information:
  Max orphans: 16384
  Max orphan retries: 0
Current orphans: 0
```

**Related  
Commands**

Command	Description
N/A	N/A

**Platform  
Description**

N/A

## 11.14 show tcp pmtu

Use this command to display information about TCP PMTU.

**show tcp pmtu** [ **local-ip** *a.b.c.d* ] [ **local-port** *num* ] [ **peer-ip** *a.b.c.d* ] [ **peer-port** *num* ]

Parameter Description	Parameter	Description
	<b>local-ip</b> <i>a.b.c.d</i>	Local IP address.
	<b>local-port</b> <i>num</i>	Local port.
	<b>peer-ip</b> <i>a.b.c.d</i>	Peer IP address.
	<b>peer-port</b> <i>num</i>	Peer port.

**Defaults** N/A

**Command Mode** Privileged EXEC mode

**Usage Guide** N/A

**Configuration Examples** The following example displays PMTU of IPv4 TCP connection.

```
Ruijie# show tcp pmtu
Number  Local Address          Foreign Address          PMTU
1       192.168.195.212.23     192.168.195.112.13560  1440
```

Field	Description
Number	Sequence number.
Local Address	The local address and the port number. The number after the last "." is the port number. For example, in "2002::2.23" and "192.168.195.212.23", "23" is the port number.
Foreign Address	The remote address and the port number. The number after the last "." is the port number. For example, in "2002::2.23" and "192.168.195.212.23", "23" is the port number.
PMTU	PMTU value.

Related Commands	Command	Description
	<b>ip tcp path-mtu-discovery</b>	Enables the TCP PMTU discovery function.

**Platform Description** N/A

## 11.15 show tcp port

Use this command to display information about the current TCP port.

**show tcp port** [ *num* ]

Parameter Description	Parameter	Description
	<i>num</i>	Port number

**Defaults** N/A

**Command Mode** Privileged EXEC mode

**Usage Guide** N/A

**Configuration** The following example displays the current IPv4 TCP port status.

**Examples**

```
Ruijie#sh tcp port
tcp port status:
Tcpv4 listen on 2650 have connections:
TCB          Foreign Address          Port      State
Tcpv4 listen on 2650 have total 0 connections.
Tcpv4 listen on 23 have connections:
TCB          Foreign Address          Port      State
c340800      1.1.1.2                  64571     ESTABLISHED
Tcpv4 listen on 23 have total 1 connections.
Tcpv6 listen on 23 have connections:
TCB          Foreign Address          Port      State
c429980      3000::2                  64572     ESTABLISHED
```

Tcpv6 listen on 23 have total 1 connections.

Field	Description
TCB	The control block's location in the current memory
Foreign Address	Remote address
Port	Remote port number
State	Status of the current TCP connection. There are eleven possible states: CLOSED: The connection has been closed. LISTEN: Listening state SYNSENT: In the three-way handshake phase when the SYN packet has been sent. SYNRCVD: In the three-way handshake phase when the SYN packet has been received.

	<p>ESTABLISHED: The connection has been established.</p> <p>FINWAIT1: The local end has sent the FIN packet.</p> <p>FINWAIT2: The FIN packet sent by the local end has been acknowledged.</p> <p>CLOSEWAIT: The local end has received the FIN packet from the peer end.</p> <p>LASTACK: The local end has received the FIN packet from the peer end, and then sent its own FIN packet.</p> <p>CLOSING: The local end has sent the FIN packet from the peer end, and received the FIN packet from the peer end before the ACK packet for the peer end to respond with this FIN packet is received.</p> <p>TIMEWAIT: The FIN packet sent by the local end has been acknowledged, and the local end has also acknowledged the FIN packet.</p>
--	---

**Related  
Commands**

Command	Description
N/A	N/A

**Platform  
Description**

N/A

## 11.16 show tcp statistics

Use this command to show TCP statistics on received packets, three way handshake and time-wait.

**show tcp parameter****Parameter  
Description**

Parameter	Description
N/A	N/A

**Defaults**

N/A

**Command  
Mode**

Privileged EXEC mode

**Usage Guide**

N/A

**Configuration** The following example shows TCP parameters.**Examples**

```
Ruijie#show tcp statistics
TCP Packets
  Received: 1103
```

```

Errors : 0 (checksum: 0)
Three way handshake
  Request queue overflow: 0
  Accept backlog full: 0
  Web authentication limit per user: 0
  Failed to alloc memory for request sock: 0
  Failed to create open request child: 0
  SYN ACK retransmits: 0
  Timeouted requests: 0
Time-wait
  Time-wait bucket table overflow: 0

```

## Field Description

Field	Description
TCP Packets	Normal packets and error packets
Three way handshake	Three way handshake information, including session request count, server-client connection count, three way handshake failure count caused by Web authentication limit, TCP socket failure count caused by memory shortage, sub-session failure count, packet retransmission count and session failure count caused by retransmission timeout.
Time-wait	Session in TIMEWAIT state

Related  
Commands

Command	Description
N/A	N/A

Platform  
Description

N/A



## 12 IPv4/IPv6 REF Commands

### 12.1 clear ip ref packet statistics

Use this command to clear IPv4 Ruijie Express Forwarding (REF) packet statistics.

**clear ip ref packet statistics**

Parameter	Parameter	Description
Description	N/A	N/A

**Defaults** N/A

**Command Mode** Privileged EXEC mode

**Usage Guide** N/A

**Configuration Examples** The following example clears IPv4 REF packet statistics.

```
Ruijie #clear ip ref packet statistics
```

Related Commands	Command	Description
	N/A	N/A

**Platform Description** N/A

### 12.2 clear ipv6 ref packet statistics

Use this command to clear IPv6 REF packet statistics.

**clear ipv6 ref packet statistics**

Parameter	Parameter	Description
Description	N/A	N/A

**Defaults** N/A

**Command Mode** Privileged EXEC mode

**Usage Guide** N/A

**Configuration** The following example clears IPv6 REF packet statistics.

**Examples** Ruijie #clear ipv6 ref packet statistics

Related Commands	Command	Description
	N/A	N/A

**Platform** N/A

**Description**

## 12.3 show ip ref adjacency

Use this command to display the information about the specified adjacent node or all adjacent nodes.

**show ip ref adjacency** [ **glean** | **local** | *ip-address* | **interface** *interface\_type interface\_number* | **discard** | **statistics** ]

Parameter Description	Parameter	Description
	<b>glean</b>	Aggregate adjacent node, which is used for a direct route
	<b>local</b>	Local adjacent node, which is used by the local host
	<i>ip</i>	Next-hop IP address
	<i>interface_type</i>	Interface type
	<i>interface_number</i>	Interface number
	<b>discard</b>	Displays discarded adjacent nodes.
	<b>statistics</b>	Statistics

**Defaults** N/A

**Command Mode** Privileged EXEC mode

**Usage Guide** This command can be used to display the information about the adjacent node table in the current REF module. By specifying parameters, the information about the aggregate adjacent node, local adjacent node, adjacent node of the specified IP address, adjacent node associated with the specified interface, and all adjacent nodes can be displayed.

**Configuration Examples** The following example displays the information about all adjacent nodes in the adjacent node table.

```
Ruijie#show ip ref adjacency
id state      type    rfct chg  ip           interface      linklayer(header
data)
1  unresolved mcast   1    0   224.0.0.0
9  resolved  forward 1    0  192.168.50.78 GigabitEthernet 0/0  00 25 64 C5
9D 6A 00 D0 F8 98 76 54 08 00
7  resolved  forward 1    0  192.168.50.200 GigabitEthernet 0/0  00 04 5F 87
69 66 00 D0 F8 98 76 54 08 00
```

```

6 unresolved glean 1 0 0.0.0.0 GigabitEthernet 0/0
4 unresolved local 3 0 0.0.0.0 Local 1

```

Description of fields:

Field	Description
id	Adjacent node ID
state	Adjacent node state: Unresolved Resolved
type	Adjacent node type Local: local adjacency Forward: forward adjacency Discard: discard adjacency Glean: glean adjacency Mcast: multicast adjacency
rfct	Reference count of the adjacent node
chg	Whether the adjacent node is on the changing link.
ip	IP address of the adjacent node
interface	Interface
linklayer	Layer 2 head

Related	Command	Description
Commands	<b>show ip ref route</b>	Displays all route information in the current REF module.

Platform N/A

Description

## 12.4 show ip ref exact-route

This command is used to display the IPv4 REF exact route.

**show ip ref exact-route** *source\_ipaddress dest\_ipaddress*

Parameter	Parameter	Description
Description	<i>source_ipaddress</i>	Source IP address of the packet
	<i>dest_ipaddress</i>	Destination IP address of the packet

Defaults N/A

Command Privileged EXEC mode  
Mode

**Usage Guide** This command is used to specify the source and the destination IP address of the IP packets, and to display the path of forwarding the current packet with REF

**Configuration** The following example displays the IPv4 REF exact route from 192.168.217.74 to 192.168.13.1.

**Examples**

```
Ruijie# show ip ref exact-route 192.168.217.74 192.168.13.1
192.168.217.74 --> 192.168.13.1:
id state   type    rfct chg ip          interface      linklayer(header
data)
9  resolved forward 1      0  192.168.17.1 GigabitEthernet 0/0 00 25 64 C5 9D
6A 00 D0 F8 98 76 54 08 00
```

Description of fields:

Field	Description
id	Adjacency ID
state	Adjacency state: Unresolved Resolved
type	Adjacency type Local: local adjacency Forward: forward adjacency Discard: discard adjacency Glean: glean adjacency Mcast: multicast adjacency
rfct	Reference count of the adjacency
chg	Whether the adjacency is on the changing link.
ip	Adjacency IP address
interface	Interface
linklayer	Layer 2 head

<b>Related Commands</b>	Command	Description
	<b>show ip ref route</b>	Displays all routing information in the current REF module.

**Platform** N/A

**Description**

## 12.5 show ip ref packet statistics

Use this command to display IPv4 REF packet statistics.

**show ip ref packet statistics**

<b>Parameter</b>	Parameter	Description
------------------	-----------	-------------

<b>Description</b>		
	N/A	N/A

**Defaults** N/A

**Command Mode** Privileged EXEC mode

**Usage Guide** N/A

**Configuration** The following example displays IPv4 REF packet statistics.

**Examples** Ruijie #show ip ref pkt-statistic

```

ref packet statistic:
  bad head      : 0
  lookup fib fail : 0
  local adj     : 0
  glean adj     : 0
  forward      : 0
  redirect      : 0
  punt adj      : 0
  outif not in ef : 0
  ttl expiration : 0
  no ip routing  : 0

```

Field	Description
total recved	Number of total packets received by REF
bad head	Number of the packets with false header
lookup fib fail	Number of the packets with failed REF routing
drop adj	Number of the packets matching the dropped adjacency
local adj	Number of the packets matching the local adjacency
glean adj	Number of the packets matching the gleaned adjacency
forward	Number of the packets matching the forwarded adjacency
no ip routing	Number of the packets not allowed to be forwarded and sent to local.

<b>Related Commands</b>	<b>Command</b>	<b>Description</b>
	N/A	N/A

**Platform** N/A  
**Description**

## 12.6 show ip ref resolve-list

Use this command to display the IPv4 REF resolution information.

**show ip ref resolve-list**

Parameter	Parameter	Description
Description	N/A	N/A

**Defaults** N/A

**Command Mode** Privileged EXEC mode

**Usage Guide** N/A

**Configuration** The following example displays IPv4 REF resolution information.

### Examples

```
Ruijie#show ip ref resolve-list
IP                res_state flags interface
1.1.1.1           unres     1    GigabitEthernet 0/0
```

Field	Description
IP	IP address
res_state	unres: unresolved res: resolved
flags	0: related to adjacency 1: unrelated to adjacency
interface	Interface

Related Commands	Command	Description
	N/A	N/A

**Platform** N/A  
**Description**

## 12.7 show ip ref route

Use this command to display all the routing information in the IPv4 REF table.

**show ip ref route [ default | ip mask | statistics ]**

Parameter	Parameter	Description
Description		

<b>default</b>	Specifies the default route.
<i>ip</i>	Specifies the destination IP address of the route
<i>mask</i>	Specifies the mask of the route.
<b>statistics</b>	Statistics

**Defaults** N/A

**Command Mode** Privileged EXEC mode

**Usage Guide** This command is used to display the related routing information on the current REF table, and specify the default route and all the routing information matching IP/MASK.

**Configuration Examples** The following example displays all the routing information in the IPv4 REF table.

```
Ruijie#show ip ref route
Codes: * - default route
       # - zero route
ip      mask      weight path-id    next-hop    interface
255.255.255.255 255.255.255.255 1 4 0.0.0.0 Local 0
224.0.0.0      240.0.0.0      1 1 224.0.0.0
224.0.0.0      255.255.255.0 1 4 0.0.0.0 Local 0
192.168.50.0   255.255.255.0 1 6 0.0.0.0 FastEthernet 0/0
192.168.50.255 255.255.255.255 1 2 0.0.0.0
192.168.50.200 255.255.255.255 1 7 192.168.50.200 FastEthernet 0/0
192.168.50.122 255.255.255.255 1 4 0.0.0.0 Local 0
192.168.50.78 255.255.255.255 1 9 192.168.50.78 FastEthernet 0/0
```

Field	Description
ip	Destination IP address
mask	Mask
path-id	Adjacent identity
next-hop	Address of next hop
weight	Routing weight
interface	Egress

**Related Commands**

Command	Description
show ip ref exact-route	Displays the accurate REF forwarding path of an IP packet.

**Platform Description** N/A

## 12.8 show ipv6 ref adjacency

Use this command to display the information about the IPv6 adjacent node.

**show ipv6 ref adjacency** [**glean** | **local** | *ipv6-address* | **interface** *interface\_type interface\_number* | **discard** | **statistics** ]

Parameter	Parameter	Description
Description	<b>glean</b>	Aggregate adjacent node, which is used for a direct route
	<b>local</b>	Local adjacent node, which is used by the local host
	<i>ipv6-address</i>	Next-hop IP address
	<i>interface_type</i>	Interface type
	<i>interface_number</i>	Interface number
	<b>discard</b>	Displays discarded adjacent nodes.
	<b>statistics</b>	Statistics

**Defaults** N/A

**Command Mode** Privileged EXEC mode

**Usage Guide** This command can be used to display the information about the adjacent node table in the privileged EXEC mode and global configuration mode.

**Configuration Examples** The following example displays the information about the IPv6 adjacent node..

```
Ruijie#show ipv6 ref adjacency
id   state      type   rfct chg ip   interface          linklayer(header
data)
1    unresolved  glean  1    0   ::   GigabitEthernet 0/0
2    unresolved  local  2    0   ::1   Local 1
```

Description of fields:

Field	Description
id	Adjacent node ID
state	Adjacent node state: Unresolved Resolved
type	Adjacent node type Local: local adjacency Forward: forward adjacency Discard: discard adjacency Glean: glean adjacency Mcast: multicast adjacency
rfct	Reference count of the adjacent node



chg	Whether the adjacent node is on the changing link.
ip	IP address of the adjacent node
interface	Interface
linklayer	Layer 2 head

For distributed routers, id is divided into two fields, namely, gid and lid, standing for global adjacent node ID and local adjacent node ID respectively.

Related Commands	Command	Description
	N/A	N/A

**Platform** N/A  
**Description**

## 12.9 show ipv6 ref exact-route

This command is used to display the IPv6 REF exact route.

**show ipv6 ref exact-route** *source-ipv6-address destination-ipv6-address*

Parameter Description	Parameter	Description
	<i>source-ipv6-address</i>	Source IP address of the packet
	<i>destination-ipv6-address</i>	Destination IP address of the packet

**Defaults** N/A

**Command Mode** Privileged EXEC mode

**Usage Guide** N/A

**Configuration Examples** The following example displays the IPv4 REF exact route from 2001:db8:1::1 to 3001:db8:2::2.

```
Ruijie#show ipv6 exact-route 2001:db8:1::1 3001:db8:2::2
2001:db8:1::1 --> 3001:db8:2::2:
ID state      type    rfct chg ip interface          linklayer(header data)
3  unresolved  glean   1    0   :: GigabitEthernet 0/0
```

Description of fields:

Field	Description
id	Adjacent node ID
state	Adjacent node state: Unresolved Resolved

type	Adjacent node type Local: local adjacency Forward: forward adjacency Discard: discard adjacency Glean: glean adjacency Mcast: multicast adjacency
rfct	Reference count of the adjacent node
chg	Whether the adjacent node is on the changing link.
ip	IP address of the adjacent node
interface	Interface
linklayer	Layer 2 head

Related	Command	Description
Commands	N/A	N/A

**Platform** N/A

**Description**

## 12.10 show ipv6 ref packet statistics

Use this command to display IPv6 REF packet statistics.

**show ipv6 ref packet statistics**

Parameter	Parameter	Description
Description	N/A	N/A

**Defaults** N/A

**Command Mode** Privileged EXEC mode

**Usage Guide** N/A

**Configuration** The following example displays IPv6 REF packet statistics.

**Examples**

```
Ruijie#show ipv6 ref packet statistics
ref packet statistic:
  bad head      : 0
  lookup fib fail : 0
  local adj     : 0
  glean adj     : 0
```

```
forward      : 0
redirect     : 0
hop-limit expiration : 0
no ipv6 unicast-routing : 0
```

Field	Description
bad head	Number of the packets with false header
lookup fib fail	Number of the packets with failed REF routing
drop adj	Number of the packets matching the dropped adjacency
local adj	Number of the packets matching the local adjacency
glean adj	Number of the packets matching the gleaned adjacency
forward	Number of the packets matching the forwarded adjacency
no ip routing	Number of the packets not allowed to be forwarded and sent to local.

**Related  
Commands**

Command	Description
N/A	N/A

**Platform  
Description**

N/A

## 12.11 show ipv6 ref resolve-list

This command is used to display the IPv6 REF resolution information.

**show ipv6 ref resolve-list**

**Parameter  
Description**

Parameter	Description
N/A	N/A

**Defaults**

N/A

**Command  
Mode**

Privileged EXEC mode

**Usage Guide**

N/A

**Configuration**

The following example displays IPv6 REF resolution information.

**Examples**

```
Ruijie#show ipv6 ref resolve-list
IP           res_state flags interface
1000::1      unres      1      GigabitEthernet 0/0
```

Field	Description
IP	IPv6 address
res_state	unres: unresolved res: resolved
flags	0: related to adjacency 1: unrelated to adjacency
interface	Interface

**Related****Commands**

Command	Description
N/A	N/A

**Platform**

N/A

**Description**

## 12.12 show ipv6 ref route

Use this command to display all the routing information in the IPv6 REF table.

**show ipv6 ref route [ default | statistics | prefix/len ]**

**Parameter  
Description**

Parameter	Description
<b>default</b>	Specifies the default route.
<b>statistics</b>	Statistics
<b>prefix/len</b>	Displays the route with the specified prefix (X:X:X:X::X/<0-128>).

**Defaults**

N/A

**Command  
Mode**

Privileged EXEC mode

**Usage Guide**

This command is used to display all routing information in the IPv6 REF table.

**Configuration** The following example displays all the routing information in the REF IPv6 table.

**Examples**

```
Ruijie#show ipv6 ref route
Codes: * - default route

prefix/len          weight path_id next_hop interface
2001:da8:ffe:2::/64      1       3      ::      GigabitEthernet 0/0
2001:da8:ffe:2::3/128    1       2      :::1     Local 1
fe80::/10             1       6      ::      Null 0
fe80::21a:a9ff:fe3b:fa41/128 1       2      :::1     Local 1
```

Field	Description
prefix/len	IPv6 prefix and prefix length.
path-id	Adjacent identity
next-hop	Address of next hop
weight	Routing weight
interface	Interface

**Related  
Commands**

Command	Description
N/A	N/A

**Platform  
Description**

N/A



## IP Routing Commands

---

- 1 RIP Commands
- 2 RIPng Commands
- 3 NSM Commands
- 4 Protocol-independent Configuration Commands
- 5 OSPFv2 Commands
- 6 OSPFv3 Commands

# 1 RIP Commands

## 1.1 auto-summary

Use this command to enable automatic summary of RIP routes. Use the **no** form of this command to disable this function

**auto-summary**

**no auto-summary**

### Parameter Description

Parameter	Description
N/A	N/A

**Defaults** Automatic summary of RIP routes is enabled by default

### Command

**Mode** Routing process configuration mode

**Usage Guide** Automatic RIP route summary means the subnet routes will be automatically summarized into the routes of the classified network when they traverse through the subnet. Automatic route summary is enabled by default for RIPv1 and RIPv2.

Automatic RIP route summary improves the flexibility and effectiveness of the network. If the summarized route exists, the sub-routes contained in the summarized route cannot be seen in the routing table, reducing the size of the routing table significantly.

Advertising the summarized route is more efficient than advertising individual routes in light of the following factors:

- The summarized route is always processed preferentially when you query the RIP database.
- Any sub-route is ignored when you query the RIP database, reducing the processing time.
- If you want to learn the specific sub-routes instead of the summarized route, disable the automatic route summary function. Only when RIPv2 is configured, the automatic route summary function can be disabled. For the RIPv1, the automatic route summary function is always enabled.

The range of the supernet route is wider than that of the classful network. Therefore, this command takes no effect on the supernet route.

**Configuration** The following example disables automatic route summary of RIPv2.

### Examples

```
Ruijie (config)# router rip
Ruijie (config-router)# version 2
Ruijie (config-router)# no auto-summary
```

Related Commands	Command	Description
	<b>version</b>	Defines the RIP software versions: v1 or v2. Both v1 and v2 are supported by default.

Platform N/A

Description

## 1.2 default-information originate

Use this command to generate a default route in the RIP process. Use the **no** form of this command to delete the generated default route.

**default-information originate** [**always**] [**metric** *metric-value*] [**route-map** *map-name*]

**no default-information originate** [**always**] [**metric**] [**route-map** *map-name*]

Parameter Description	Parameter	Description
	<b>always</b>	(Optional) Enables RIP to generate the default route, no matter whether the default route exists or not.
	<b>metric</b> <i>metric-value</i>	(Optional) The original metric value of the default route with the value range 1 to 15 of metric-value.
	<b>route-map</b> <i>map-name</i>	(Optional) Name of the associated route-map. Route-map is not associated by default.

**Defaults** No default route is generated by default.  
The default metric value is 1.

**Command**

**Mode** Routing process configuration mode

**Usage Guide** By default, RIP will not advertise the default route if the default route exists in the routing table of the router. In this case, use the **default-information originate** command to notify the neighbor of the default route.

With the parameter **always** configured, no matter whether the default route exists in the RIP routing process or not, the default route will be advertised to the neighbor but is not shown in the local routing table. You can use the **show ip rip database** command to view the RIP routing information database to confirm whether the default route is generated.

Use the parameter **route-map** to control more about the default route advertised to RIP. For example, use the **set metric** command to set the metric value of the default route.

The route-map set metric rule takes precedence over the parameter metric value configuration of the default route. If the parameter metric is not configured, the default metric value is used by the default route.

If the default route can be generated in the RIP process by using this command, RIP will not learn the



default route advertised from the neighbor.

For the default route generated by using the `ip default-network` command, the `default-information originate` command is required to add the default route to RIP.

**Configuration** The following example generates a default route to the RIP routing table.

**Examples**

```
Ruijie(config-router)# default-information originate always
```

**Related  
Commands**

Command	Description
<b>ip rip default-information</b>	Notifies the default route through an interface.
<b>redistribute</b>	Redistributes the routes from other protocols to RIP.

**Platform** N/A

**Description**

## 1.3 default-metric

Use this command to define the default RIP metric value. Use the **no** form of this command to restore the default setting.

**default-metric** *metric-value*

**no default-metric**

**Parameter  
Description**

Parameter	Description
<i>metric-value</i>	Indicates the default metric value with the range from 1 to 16. If the metric value is greater than or equal to 16, the RGNOS regards the route unreachable.

**Defaults** The default is 1.

**Command**

**Mode** Routing process configuration mode

**Usage Guide** This command needs to work with the command **redistribute**. When the routes are redistributed to the RIP routing process from a routing protocol process, the route metric value cannot be converted due to the incompatibility of the metric calculation mechanisms for different protocols. During the conversion, therefore, it is required to redefine the metric values of redistributed routes in the RIP routing domain. If there is no clear definition of the metric value in redistributing a routing protocol process, the RIP uses the metric value defined with **default-metric**. If the metric value is defined, this value overwrites the metric value defined with `default-metric`. If this command is not configured, the default value of `default-metric` is 1.

**Configuration** The following example enables the RIP routing protocol to redistribute the routes learned by the OSPF routing protocol, whose initial RIP metric value is set to 3.

**Examples**

```
Ruijie (config)# router rip
Ruijie (config-router)# default-metric 3
Ruijie (config-router)# redistribute ospf 100
```

**Related  
Commands**

Command	Description
<b>redistribute</b>	Redistributes the routes from one routing domain to another routing domain.

**Platform** N/A

**Description**

## 1.4 distance

Use this command to set the management distance of the RIP route. Use the **no** form of this command to restore the default setting.

**distance** *distance* [ *ip-address wildcard* ]

**no distance** [ *distance ip-address wildcard* ]

**Parameter  
Description**

Parameter	Description
<i>distance</i>	Sets the management distance of a RIP route, an integer in the range from 1 to 255.
<i>ip-address</i>	Indicates the prefix of the source IP address of the route.
<i>wildcard</i>	Defines the comparison bit of the IP address, where 0 means accurate matching and 1 means no comparison.

**Defaults** The default is 120.

**Command**

**Mode** Routing process configuration mode

**Usage Guide** Use this command to set the management distance of the RIP route. You can use this command to create several management distances with source address prefixes. When the source address of the RIP route is within the range specified by the prefixes, the corresponding management distance is applied; otherwise, the route uses the management distance configured by the RIP.

**Configuration** The following example sets the management distance of the RIP route to 160, and specifies the management distance of the route learned from 192.168.2.1 as 123.

**Examples**

```
Ruijie(config)# router rip
Ruijie(config-router)# distance 160
```

```
Ruijie(config-router)# distance 123 192.168.12.1 0.0.0.0
```

**Related  
Commands**

Command	Description
N/A	N/A

**Platform** N/A  
**Description**

## 1.5 distribute-list in

Use this command to control route update for route filtering. Use the **no** form of this command to restore the default setting.

```
distribute-list { [ access-list-number | name ] | prefix prefix-list-name [ gateway prefix-list-name ] |  
[ gateway prefix-list-name ] } in [ interface-type interface-number ]  
no distribute-list { [ access-list-number | name ] | prefix prefix-list-name [ gateway prefix-list-name ]  
| [ gateway prefix-list-name ] } in [ interface-type interface-number ]
```

**Parameter  
Description**

Parameter	Description
<i>access-list-number</i>   <i>name</i>	Specifies the ACL. Only the routes that are allowed by the ACL can be accepted.
<b>prefix</b> <i>prefix-list-name</i>	Uses the prefix list to filter the routes.
<b>gateway</b> <i>prefix-list-name</i>	Uses the prefix list to filter the source of the routes.
<i>interface-type</i> <i>interface-number</i>	(Optional) Applies the distribution list only to a specified interface.

**Defaults** The distribution list is not defined by default.

**Command Mode** Routing process configuration mode

**Usage Guide** To deny receiving some specified routes, you can process all the received route update packets by configuring the route distribute control list.  
Without any interface specified, the system will process the route update packets received on all the interfaces.

**Configuration Examples** The following example enables RIP to control the routes received from the Fastethernet 0/0, only permitting the routes starting with 172.16.

```
Ruijie (config)# router rip  
Ruijie (config-router)# network 200.168.23.0  
Ruijie (config-router)# distribute-list 10 in fastethernet 0/0  
Ruijie (config-router)# no auto-summary  
Ruijie (config-router)# access-list 10 permit 172.16.0.0 0.0.255.255
```

**Related  
Commands**

Command	Description
<b>access-list</b>	Defines the ACL rule.
<b>prefix-list</b>	Defines the prefix list.

**Platform** N/A**Description**

## 1.6 distribute-list out

Use this command to control route update advertisement for filtering routes. Use the **no** form of this command to restore the default setting.

**distribute-list** { [ *access-list-number* | *name* ] | **prefix** *prefix-list-name* } **out** [ *interface* | [ **connected** | **ospf** *process-id* | **rip** | **static** ] ]

**no distribute-list** { [ *access-list-number* | *name* ] | **prefix** *prefix-list-name* } **out** [ *interface* | **connected** | **ospf** *process-id* | **rip** | **static** ] ]

**Parameter  
Description**

Parameter	Description
<i>access-list-number</i>   <i>name</i>	Specifies the ACL.
<b>prefix</b> <i>prefix-list-name</i>	Uses the prefix list to filter routes.
<i>interface</i>	(Optional) Applies route update advertisement control to a specified interface in the distribution list.
<b>connected</b>	(Optional) Applies route update advertisement control to only connected routes in this distribution list.
<b>ospf</b> <i>process-id</i>	(Optional) Applies route update advertisement control to only routes introduced from OSPF in this distribution list. <i>process-id</i> specifies an OSPF instance.
<b>rip</b>	(Optional) Applies route update advertisement control to only RIP routes in this distribution list.
<b>static</b>	(Optional) Applies route update advertisement control to only static routes in this distribution list.

**Defaults** No route update advertisement is configured by default.**Command****Mode** Routing process configuration mode

**Usage Guide** If this command relates to none of optional parameters, route update advertisement control applies to all interfaces. If this command relates to interface options, route update advertisement control applies to only the specified interface. If this command relates to other route process parameters, route update advertisement control applies to only the specific route process.

**Configuration** The following example advertises only the 192.168.12.0/24 route.

**Examples**

```
Ruijie (config)# router rip
Ruijie (config-router)# network 200.4.4.0
Ruijie (config-router)# network 192.168.12.0
Ruijie (config-router)# distribute-list 10 out
Ruijie (config-router)# version 2
Ruijie (config-router)#access-list 10 permit 192.168.12.0 0.0.0.255
```

**Related  
Commands**

Command	Description
<b>access-list</b>	Defines the ACL rule.
<b>prefix-list</b>	Defines the prefix list.
<b>redistribute</b>	Configures route redistribution.

**Platform** N/A

**Description**

## 1.7 enable mib-binding

Use this command to bind a MIB with a specified RIP instance. Use the **no** form of this command to restore the default setting

**enable mib-binding**

**no enable mib-binding**

**Parameter  
Description**

Parameter	Description
N/A	N/A

**Defaults** N/A

**Command**

**Mode** Routing process configuration mode.

**Usage Guide** As RIP MIB does not have RIP instance information, you can only operate only one RIP instance using SNMP.

**Configuration**

**Examples** N/A

**Related  
Commands**

Command	Description
<b>show ip rip</b>	Displays the global configuration of RIP.

**Platform** N/A

**Description**

## 1.8 graceful-restart

Use this command to configure the RIP graceful restart (GR) function for a device. Use the **no** form of this command to restore the default configuration.

**graceful-restart** [ **grace-period** *grace-period* ]

**no graceful-restart** [ **grace-period** ]

**Parameter  
Description**

Parameter	Description
<b>graceful-restart</b>	Enables the GR function.
<b>grace-period</b>	(Optional) Configures the grace period.
<i>grace-period</i>	(Optional) Indicates the user-defined GR period. The default value is the smaller value between twice the update time and 60 seconds. The range is from 1 to 1,800. The unit is second.

**Defaults** This function is enabled by default.

**Command**

**Mode** Routing process configuration mode

**Usage Guide** The GR function is configured on the RIP instances. Different parameters can be configured for different RIP instances.

The GR period refers to the time from the startup to the end of RIP GR. During this period, the forwarding table remains unchanged and the RIP route is restored to the state before protocol restart. When the GR period expires, RIP exits the GR state and performs normal RIP operation.

The **graceful-restart grace-period** command enables users to modify GR period. Note: Make sure that GR is completed before the RIP route is validate and after an RIP route update cycle elapses. If an improper value is configured, non-stop data forwarding cannot be ensured during the GR process. For example, if the GR period is longer than the time when the neighbor's route is unavailable and GR is not completed before the route is validated, then the neighbor is not re-informed of the route and forwarding of the neighbor's route is terminated when it is validated, which results in data forwarding interruption. Therefore, unless otherwise specified, it is not recommended to adjust the GR period. If the period needs to be changed, determine that the grace period is longer than the route update cycle and shorter than the time when the route is unavailable in combination with the configuration of the **timers basic** command.



During the RIP GR period, the network must be stable.

**Configuration** The following example enables the RIP GR function and configures the GR period parameters of the

**Examples**

GR function.

```
Ruijie(config)# router rip
Ruijie(config-router)# graceful-restart grace-period 90
```

**Related  
Commands**

Command	Description
<b>timers basic</b>	Configures RIP timers.

**Platform**

N/A

**Description**

## 1.9 ip rip authentication key-chain

Use this command to enable RIP authentication and specify the keychain used for RIP authentication.

Use the **no** form of this command to restore the default setting.

**ip rip authentication key-chain** *name-of-keychain*

**no ip rip authentication key-chain**

**Parameter  
Description**

Parameter	Description
<i>name-of-keychain</i>	Indicates the name of the keychain, which specifies the keychain used for RIP authentication.

**Defaults**

The keychain is not associated by default.

**Command****Mode**

Interface configuration mode

**Usage Guide**

If the keychain is specified in the interface configuration, use the key chain global configuration command to define the keychain. Otherwise, RIP data packet authentication fails.

RIPv2 instead of RIPv1 supports authentication of the RIP data packet.

**Configuration**

The following example enables RIP authentication on the fastEthernet 0/1 with the associated keychain ripchain.

**Examples**

```
Ruijie (config)#interface fastEthernet 0/1
Ruijie (config-if-FastEthernet 0/1)#ip rip authentication key-chain ripchain
Meanwhile, use the key chain command to define this keychain in global configuration mode.
Ruijie(config)#key chain ripchain
Ruijie(config-keychain)#key 1
Ruijie(config-keychain-key)#key-string Hello
```

**Related  
Commands**

Command	Description
<b>ip rip authentication mode</b>	Defines the RIP authentication mode.

<b>ip rip authentication text-password</b>	Enables RIP authentication, and sets the password string of RIP plaintext authentication. RIP data packet authentication is supported only by RIPv2.
<b>ip rip receive version</b>	Defines the version of RIP packets received on the interface.
<b>ip rip send version</b>	Defines the version of RIP packets sent on the interface.
<b>key chain</b>	Defines the keychain and enters keychain configuration mode.

**Platform** N/A

**Description**

## 1.10 ip rip authentication mode

Use this command to define the RIP authentication mode. Use the **no** form of this command to restore the default setting.

**ip rip authentication mode { text | md5 }**

**no ip rip authentication mode**

Parameter Description	Parameter	Description
	<b>text</b>	Configures RIP authentication as plaintext authentication.
	<b>md5</b>	Configures RIP authentication as MD5 authentication.

**Defaults** It is plaintext authentication by default.

**Command**

**Mode** Interface configuration mode

**Usage Guide** During the RIP authentication configuration process, the RIP authentication modes of all devices requiring exchange of RIP routing information must be the same. Otherwise, RIP packet exchange will fail.

If the plaintext authentication mode is adopted, but the password string of the plaintext authentication or the associated keychain is not configured, no authentication occurs. In the same way, if the MD5 authentication mode is adopted, but the associated keychain is not configured, no authentication occurs.

RIPv2 instead of RIPv1 supports authentication of the RIP data packet.

**Configuration** The following example configures the RIP authentication mode on the fastEthernet 0/1 as MD5.

**Examples**

```
Ruijie (config)#interface fastEthernet 0/1
Ruijie (config-if-FastEthernet 0/1)# ip rip authentication mode md5
```



Related Commands	Command	Description
	<b>ip rip authentication key-chain</b>	Enables the RIP authentication mode and specifies the keychain used for RIP authentication. Only RIPv2 supports authentication of the RIP data packet.
	<b>ip rip authentication text-password</b>	Enables the RIP authentication mode, and sets the password string of RIP plaintext authentication. Only RIPv2 supports authentication of the RIP data packet.
	<b>key chain</b>	Defines the keychain and enters the keychain configuration mode

**Platform** N/A

**Description**

## 1.11 ip rip authentication text-password

Use this command to enable RIP authentication and set the password string of RIP plaintext authentication. Use the **no** form of this command to restore the default setting.

**ip rip authentication text-password** [ 0 | 7 ] *password-string*

**no ip rip authentication text-password**

Parameter Description	Parameter	Description
	<b>0</b>	Specifies that the key is displayed as plaintext.
	<b>7</b>	Specifies that the key is displayed as cipher text.
	<i>password-string</i>	Indicates the password string of the plaintext authentication, in the length of 1-16 bytes.

**Defaults** No password string of RIP plaintext authentication is configured by default.

**Command**

**Mode** Interface configuration mode

**Usage Guide** This command works only in plaintext authentication mode.

To enable the RIP plaintext authentication function, use this command to configure the corresponding password string, or use the associated key chain to obtain the password string. The latter takes the precedence over the former one.

RIPv1 does not support RIP authentication but RIPv2 does.

**Configuration Examples** The following example enables the RIP plaintext authentication on fastEthernet 0/1 and sets the password string to hello.

```
Ruijie(config)#interface fastEthernet 0/1
```

```
Ruijie(config-if-FastEthernet 0/1)# ip rip authentication text-password hello
```

**Related  
Commands**

Command	Description
<b>ip rip authentication mode</b>	Defines the RIP authentication mode.
<b>ip rip authentication key-chain</b>	Enables the RIP authentication mode and specifies the keychain used for RIP authentication. Only RIPv2 supports authentication.

**Platform** N/A**Description**

## 1.12 ip rip default-information

Use this command to advertise the default route through a RIP interface. Use the **no** form of this command to restore the default setting.

**ip rip default-information { only | originate } [metric *metric-value* ]**

**no ip rip default-information**

**Parameter  
Description**

Parameter	Description
<b>only</b>	Notifies the default route rather than other routes.
<b>originate</b>	Notifies the default route and other routes.
<b>metric <i>metric-value</i></b>	Specifies the metric value of the default route, in the range from 1 to 15.

**Defaults** No default route is configured by default. The default metric value is 1.

**Command**

**Mode** Interface configuration mode

**Usage Guide**

After you configure this command on a specified interface, a default route is generated and notified through the interface. If the **ip rip default-information** command of the interface and the **default-information originate** command of the RIP process are configured at the same time, only the default route of the interface is advertised.

RIP will no longer learn the default route notified by the neighbor if any interface is configured with the **ip rip default-information** command.

**Configuration** The following example creates a default route which is notified on ethernet0/1 only.

**Examples**

```
Ruijie(config)#interface ethernet 0/1
Ruijie(config-if-Ethernet 0/1)#ip rip default-information only
```

Related Commands	Command	Description
	<b>default-information originate</b>	Generates a default route in the RIP process.

**Platform** N/A

**Description**

## 1.13 ip rip receive enable

Use this command to enable RIP to receive the RIP data package on a specified interface. Use the **no** form of this command to restore the default setting.

**ip rip receive enable**

**no ip rip receive enable**

Parameter Description	Parameter	Description
	N/A	N/A

**Defaults** RIP packages can be received through the interface by default.

**Command**

**Mode** Interface configuration mode

**Usage Guide** To prevent an interface from receiving RIP packets, use the no form of this command in interface configuration mode. This command works on interfaces configured with this command. You can use the **default** form of this command to enable the interface to receive the RIP data package.

**Configuration** The following example prohibits receiving RIP data packages on fastEthernet 0/1.

**Examples**

```
Ruijie (config)# interface fastEthernet 0/1
Ruijie (config-if-FastEthernet 0/1)# no ip rip receive enable
```

Related Commands	Command	Description
	<b>ip rip send enable</b>	Enables or disables the interface to send RIP data packages.
	<b>passive-interface</b>	Configures a passive RIP interface.

**Platform** N/A

**Description**

## 1.14 ip rip receive version

Use this command to define the version of RIP packets received on an interface. Use the **no** form of this command to restore the default setting.

**ip rip receive version [ 1 ] [ 2 ]**

**no ip rip receive version**

### Parameter Description

Parameter	Description
<b>1</b>	(Optional) Receives only RIPv1 packets.
<b>2</b>	(Optional) Receives only RIPv2 packets.

### Defaults

The default behavior depends on the configuration with the version command.

### Command

#### Mode

Interface configuration mode

### Usage Guide

This command overwrites the default configuration of the **version** command. It affects only RIP packet receiving through the interface and allows RIPv1 and RIPv2 packets to be received on the interface at the same time. If the command is configured without parameters, data package receiving depends on the configuration of the version.

**Configuration** The following example enables receiving both RIPv1 and RIPv2 data packages.

### Examples

```
Ruijie (config)#interface fastEthernet 0/1
Ruijie (config-if-FastEthernet 0/1)# ip rip receive version 1 2
```

### Related Commands

Command	Description
<b>version</b>	Defines the default version of the RIP packets received/sent on the interface.

### Platform

N/A

### Description

## 1.15 ip rip send enable

Use this command to enable RIP to send a RIP data package on a specified interface. Use the **no** form of this command to restore the default setting.

**ip rip send enable**

**no ip rip send enable**

### Parameter Description

Parameter	Description
-----------	-------------

N/A	N/A
-----	-----

**Defaults** RIP packages can be sent through the interface by default.

**Command**

**Mode** Interface configuration mode

**Usage Guide** To prevent an interface from sending RIP packets, use the **no** form of this command in interface configuration mode. This command works on interfaces configured with this command. You can use the **default** form of this command to enable the interface to send the RIP data package.

**Configuration** The following example prohibits sending RIP data packages on fastEthernet 0/1.

**Examples**

```
Ruijie (config)# interface fastEthernet 0/1
Ruijie (config-if-FastEthernet 0/1)# no ip rip send enable
```

**Related  
Commands**

Command	Description
<b>ip rip receive enable</b>	Enables or disables receiving RIP packets on the interface.
<b>passive-interface</b>	Configures a passive RIP interface.

**Platform** N/A

**Description**

## 1.16 ip rip send supernet-routes

Use this command to enable RIP to send the supernet route on a specified interface. Use the **no** form of this command to disable this function.

**ip rip send supernet-routes**

**no ip rip send supernet-routes**

**Parameter  
Description**

Parameter	Description
N/A	N/A

**Defaults** This function is enabled by default.

**Command**

**Mode** Interface configuration mode

**Usage Guide** When the RIPv1 router monitors a RIPv2 router response packet and if the supernet routing information is monitored, incorrect route information is learned because the RIPv1 ignores the subnet mask of the routing information. In this case, you are advised to use the no form of this command on the RIPv2 router to disable advertising the supernet route on the corresponding interface. This

command works only on interfaces configured with this command.

This command is only valid upon sending the RIPv2 packets on the interface and it is used to control sending the supernet route.

**Configuration** The following example disables sending RIP supernet routes on the fastEthernet 0/1 interface.

**Examples**

```
Ruijie(config)# interface fastEthernet 0/1
Ruijie(config-if-FastEthernet 0/1)# no ip rip send supernet-routes
```

**Related  
Commands**

Command	Description
<b>version</b>	Defines the RIP version
<b>ip rip send enable</b>	Enables or disables sending the RIP package on the interface.

**Platform** N/A

**Description**

## 1.17 ip rip send version

Use this command to define the version of the RIP packets sent on the interface. Use the **no** form of this command to restore the default setting.

**ip rip send version [ 1 ] [ 2 ]**

**no ip rip send version**

**Parameter  
Description**

Parameter	Description
<b>1</b>	(Optional) Receives only RIPv1 packets.
<b>2</b>	(Optional) Receives only RIPv2 packets.

**Defaults** The default behavior depends on the configuration with the version command.

**Command****Mode**

Interface configuration mode

**Usage Guide**

This command overwrites the default configuration of the **version** command. It affects only RIP packet sending through the interface and allows RIPv1 and RIPv2 packages sent on the interface at the same time. If the command is configured without parameters, package receiving depends on the configuration of the version.

**Configuration Examples** The following example enables sending both RIPv1 and RIPv2 packages on the fastEthernet 0/1 interface.

```
Ruijie (config)# interface fastEthernet 0/1
Ruijie (config-if-FastEthernet 0/1)# ip rip send version 1 2
```

Related Commands	Command	Description
	<b>version</b>	Defines the default version of the RIP packets received/sent on the interfaces.

**Platform** N/A

**Description**

## 1.18 ip rip split-horizon

Use this command to enable split horizon. Use the **no** form of this command to disable this function.

**ip rip split-horizon [ poisoned-reverse ]**

**no ip rip split-horizon [ poisoned-reverse ]**

Parameter Description	Parameter	Description
	<b>poisoned-reverse</b>	(Optional) Enables split horizon with poisoned reverse.

**Defaults** This function is enabled by default.

**Command**

**Mode** Interface configuration mode

**Usage Guide** When multiple devices are connected to the IP broadcast network and run a distance vector routing protocol, the split horizon mechanism is required to prevent loop. The split horizon prevents the device from advertising routing information from the interface that learns that information, which optimizes routing information exchange between multiple devices.

For non-broadcast multi-path access networks (such as frame relay and X.25), split horizon may cause some devices to be unable to learn all routing information. Split horizon may need to be disabled in this case. If an interface is configured the secondary IP address, attentions shall be paid also for split horizon.

If the **poisoned-reverse** parameter is configured, split horizon with poisoned reverse is enabled. In this case, devices still advertise the route information through the interface from which the route information is learned. However, the metric value of the route information is set to unreachable.

The RIP routing protocol is a distance vector routing protocol, and the split horizon issue shall be cautioned in practical applications. If it is unsure whether split horizon is enabled on the interface, use the show ip rip command to judge. This function makes no influence on the neighbor defined with the **neighbor** command.

**Configuration** The following example disables the RIP split horizon function on the interface fastethernet 0/0.

**Examples**

```
Ruijie (config)# interface fastethernet 0/1
Ruijie (config-if)# no ip rip split-horizon
```

Related  
Commands

Command	Description
<b>neighbor (RIP)</b>	Defines the IP address of the neighbor of RIP.
<b>validate-update-source</b>	Enables the source address authentication of the RIP route update message.

Platform N/A  
Description

## 1.19 ip rip summary-address

Use this command to configure port-level convergence through an interface. Use the **no** form of this command to disable this function.

**ip rip summary-address** *ip-address ip-network-mask*

**no ip rip summary-address** *ip-address ip-network-mask*

Parameter  
Description

Parameter	Description
<i>ip-address</i>	Indicates the IP addresses to be converged.
<i>ip-network-mask</i>	Indicates the subnet mask of the specified IP address for route convergence.

**Defaults** The RIP routes are automatically converged to the classful network edge by default.

**Command**

**Mode** Interface configuration mode

**Usage Guide** The **ip rip summary-address** command converges an IP address or a subnet on a specified port. RIP routes are automatically converged to the classful network edge. The classful subnet can be configured through only port convergence.

The summary range configured by this command cannot be a super class network, that is, the configured mask length is greater than or equal to the natural mask length of the network.

**Configuration Examples** The following example disables the automatic route convergence function of RIPv2. Interface convergence is configured so that fastEthernet 0/1 advertises the converged route 172.16.0.0/16.

```
Ruijie (config)# interface fastEthernet 0/1
Ruijie (config-if-FastEthernet 0/1)# ip rip summary-address 172.16.0.0
255.255.0.0
Ruijie (config-if-FastEthernet 0/1)# ip address 172.16.1.1 255.255.255.0
Ruijie (config)# router rip
Ruijie (config-router)# network 172.16.0.0
Ruijie (config-router)# version 2
```



```
Ruijie (config-router)# no auto-summary
```

**Related  
Commands**

Command	Description
<b>auto-summary</b>	Enables the automatic convergence of RIP routes.

**Platform** N/A  
**Description**

## 1.20 ip rip triggered

Use this command to enable triggered RIP based on links. Use the **no** form of this command to restore the default setting.

**ip rip triggered**

**ip rip triggered retransmit-timer** *timer*

**ip rip triggered retransmit-count** *count*

**no ip rip triggered**

**no ip rip triggered retransmit-timer**

**no ip rip triggered retransmit-count**

**Parameter  
Description**

Parameter	Description
<b>retransmit-timer</b> <i>timer</i>	Configures the interval at which the Update Request and Update Response packets are retransmitted. The range is from 1 to 3,600. The unit is second. The default is five.
<b>retransmit-count</b> <i>count</i>	Configures the maximum times that the Update Request and Update Response packets are retransmitted. The range is from 1 to 3600. The default is 36.

**Defaults** This function is disabled by default.

**Command**

**Mode** Interface configuration mode


**Usage Guide** Triggered RIP (TRIP) is the extension of RIP on the wide area network (WAN), mainly used for demand-based links.


With the TRIP function enabled, RIP no longer sends route updates periodically and sends route updates to the WAN interface only if:


- Update Request packets are received.
- RIP routing information is changed.
- Interface state is changed.


- The router is started.


As periodical RIP update is disabled, the confirmation and retransmission mechanism is required to ensure that update packets are sent and received successfully over the WAN. The **retransmit-timer** and **retransmit-count** commands can be used to specify the retransmission interval and maximum retransmission times for request and update packets.

 The function can be enabled in the case of the following conditions: a) The interface has only one neighbor. b) There are multiple neighbors but they interact information using unicast packets. You are advised to enable the function for link layer protocols such as PPP, frame relay, and X.25.

 You are advised to enable split horizon with poison reverse on the interface enabled with the function; otherwise invalid routing information might be left.

 Make sure that the function is enabled on all routers on the same link; otherwise the function will be invalid and the routing information cannot be exchanged correctly.

 To enable the function, make sure that the RIP configuration is the same on both ends of the link, such as RIP authentication and the RIP version supported by the interface.

 If this function is enabled on this interface, the source address of packets on this interface will be checked no matter whether the source IP address verification function (validate-update-source) is enabled.

**Configuration Examples** The following example enables TRIP and sets the retransmission interval and maximum retransmission time to 10 seconds and 18 respectively for Update Request and Update Response packets.

```
Ruijie(config)# interface fastEthernet 0/1
Ruijie(config-if-FastEthernet 0/1)# ip rip triggered
Ruijie(config-if-FastEthernet 0/1)# ip rip triggered retransmit-timer 10
Ruijie(config-if-FastEthernet 0/1)# ip rip triggered retransmit-count 18
```

**Related  
Commands**

Command	Description
<b>show ip rip database</b>	Displays the summarized routing information of the RIP database.
<b>show ip rip interface</b>	Displays the RIP interface information.
<b>ip rip split-horizon</b>	Configures RIP split horizon.

**Platform** N/A  
**Description**

## 1.21 ip rip v2-broadcast

Use this command to send RIPv2 packets in broadcast rather than multicast mode. Use the **no** form

of this command to restore the default setting.

**ip rip v2-broadcast**

**no ip rip v2-broadcast**

**Parameter  
Description**

Parameter	Description
N/A	N/A

**Defaults**

The default behavior depends on the configuration of the version command.

**Command**

**Mode**

Interface configuration mode

**Usage Guide**

This command overwrites the default of the **version** command. This command affects only sending RIP packets on the interface. This command allows RIPv1 and RIPv2 packages sent on the interface simultaneously. If this command is configured without parameters, package receiving depends on the version setting.

**Configuration**

The following example sends RIPv2 packets in broadcast mode on the fastEthernet 0/1 interface.

**Examples**

```
Ruijie(config)# interface fastEthernet 0/1
Ruijie(config-if-FastEthernet 0/1)# no ip rip split-horizon
```

**Related  
Commands**

Command	Description
<b>version</b>	Defines the default version of the RIP packets received and sent on the interface.

**Platform**

N/A

**Description**

## 1.22 neighbor

Use this command to define the IP address of a RIP neighbor. Use the **no** form of this command to restore the default setting.

**neighbor** *ip-address*

**no neighbor** *ip-address*

**Parameter  
Description**

Parameter	Description
<i>ip-address</i>	Indicates the IP address of the neighbor. The IP address must be that of the network connected to the local device.

**Defaults**

The neighbor is not defined by default.

**Command****Mode** Routing process configuration mode

**Usage Guide** By default, RIPv1 uses the IP broadcast address (255.255.255.255) to advertise routing information, and RIPv2 uses the multicast address 224.0.0.9 to do so. If you do not want to allow all the devices on the broadcast network or non-broadcast multi-path access network to receive routing information, use the **passive-interface** command to configure related interfaces as passive interfaces and then define only some neighbors who can receive the routing information. This command has no impact on the receiving of RIP information. The passive interface is configured. No request packet is sent after the interface is enabled.

**Configuration** The following RIP advertises routing information to neighbor IP address 192.168.1.2 only.

**Examples**

```
Ruijie(config)# router rip
Ruijie(config-router)# passive-interface default
Ruijie(config-router)# neighbor 192.168.1.2
```

**Related  
Commands**

Command	Description
<b>passive-interface</b>	Configures the interface as a passive interface.

**Platform** N/A**Description**

## 1.23 network

Use this command to define the list of networks to be advertised in the RIP routing process. Use the **no** form of this command to delete the defined network.

**network** *network-number* [ *wildcard* ]

**no network** *network-number* [ *wildcard* ]

**Parameter  
Description**

Parameter	Description
<i>network-number</i>	Indicates the network number of the directly-connected network. The network number is a natural one. All interfaces whose IP addresses belong to that natural network can send/receive RIP packages.
<i>wildcard</i>	Defines the IP address comparing bit: 0 refers to accurate matching, and 1 refers to no comparison.

**Defaults** N/A**Command****Mode** Routing process configuration mode

**Usage Guide** The *network-number* and *wildcard* parameters can be configured simultaneously to enable the IP

address of the interface within the IP address range to join RIP running.

Without the *wildcard* parameter, RGOS make the interface IP address within the classful address range join the RIP running.

Only when the IP address of an interface is in the network list defined by RIP, RIP route update packets can be received and sent on the interface.

**Configuration Examples** The following example defines two network numbers associated with RIP and allows the interface IP address between 192.168.12.0/24 and 172.16.0.0/24 to join RIP running.

```
Ruijie (config)# router rip
Ruijie (config-router)# network 192.168.12.0
Ruijie (config-router)# network 172.16.0.0 0.0.0.255
```

**Related Commands**

Command	Description
N/A	N/A

**Platform** N/A  
**Description**

## 1.24 offset-list

Use this command to increase the metric value of received or sent RIP routes. Use the **no** form of this command to restore the default setting.

**offset-list** { access-list-number | name } { **in** | **out** } offset [ interface-type interface-number ]

**no offset-list** { access-list-number | name } { **in** | **out** } offset [ interface-type interface-number ]

**Parameter Description**

Parameter	Description
<i>access-list-number   name</i>	Specifies the ACL.
<b>in</b>	Modifies the metric of the received routes using the ACL.
<b>out</b>	Modifies the metric of the sent routes using the ACL.
<i>offset</i>	Indicates the offset of changed metric values. The value is in the range from 0 to16.
<i>interface-type</i>	Applies the ACL to a specified interface.
<i>interface-number</i>	Specifies the interface number.

**Defaults** No offset is specified by default.

**Command**

**Mode** Routing process configuration mode

**Usage Guide** If a RIP route matches against both the offset-list of the specified interface and the global offset-list, it will increase the metric value of the offset-list of the specified interface.

**Configuration** The following example increases the metric of the RIP routes by 7 in the range specified by ACL 7.

**Examples** Ruijie (config-router)# offset-list 7 out 7

The following example increases the metric of the RIP routes by 7 in the range specified by ACL 7 and learned by fastethernet 0/1.

Ruijie (config-router)# offset-list 8 in 7 fastethernet 0/1

**Related  
Commands**

Command	Description
N/A	N/A

**Platform** N/A  
**Description**

## 1.25 output-delay

Use this command to modify the delay to send RIP update packets. Use the **no** form of this command to restore the default setting.

**output-delay** *delay*

**no output-delay**

**Parameter  
Description**

Parameter	Description
<i>delay</i>	Sets the delay to send RIP update packets, in the range from 8 to 50 in the unit of milliseconds.

**Defaults** No sending delay is configured by default.

**Command**

**Mode** Routing process configuration mode

**Usage Guide** In normal cases, the size of a RIP update packet is 512 bytes including 25 routes. If the number of updated routes is greater than 25, update packets will be sent through multiple routes. Note that the update packets should be sent as fast as possible.

However, when a high-speed device sends a large number of packets to a low-speed device, the low-speed device may not process all the packets timely, resulting in packet loss. In this case, you can use this command to increase the delay to send packets on the high-speed device so that the low-speed device can process all the update packets.

**Configuration** The following example sets the delay to send RIP update packets to 30 milliseconds.

**Examples** Ruijie(config)# router rip

Ruijie(config-router)# output-delay 30

**Related  
Commands**

Command	Description
---------	-------------

N/A

N/A

**Platform** N/A**Description**

## 1.26 passive-interface

Use this command to disable the function of sending update packets on an interface. Use the **no** form of this command to restore the default setting.

**passive-interface** { **default** | *interface-type interface-num* }

**no passive-interface** { **default** | *interface-type interface-num* }

**Parameter  
Description**

Parameter	Description
<b>default</b>	Sets all interfaces to the passive interfaces.
<i>interface-type interface-num</i>	Indicates the interface type and number.

**Defaults** Interfaces are set to the non passive interfaces by default.

**Command**

**Mode** Routing process configuration mode

**Usage Guide** The **passive-interface default** command sets all interfaces to the passive interfaces. You can use **no passive-interface** *interface-type interface-num* command to set specified interfaces as non-passive interfaces.

After you set an interface to the passive interface, RIP route update packets will no longer be sent but can be received through the interface. In this case, route update packets can be sent to a specified neighbor through the interfaces by using the **neighbor** command. You can use the **ip rip send enable** and **ip rip receive enable** commands to control whether route update packets can be sent or received through the interface.

**Configuration Examples** The following example sets all interfaces to the passive interfaces and then sets ethernet0/1 to the non-passive interface.

```
Ruijie(config-router)# passive-interface default
Ruijie(config-router)# no passive-interface gigabitEthernet 0/1
```

**Related  
Commands**

Command	Description
<b>ip rip receive enable</b>	Enables or disables receiving RIP packets on the interface.
<b>ip rip send enable</b>	Enables or disables sending RIP packets on the interface.

**Platform** N/A  
**Description**

## 1.27 redistribute

Use this command to redistribute external routes in route configuration mode. Use the **no** form of this command to restore the default setting.

```
redistribute { connected | ospf process-id | static } [ match { internal | external [ 1|2 ] ] |  
nssa-external [ 1|2 ] } [ metric metric-value ] [ route-map route-map-name ]  
no redistribute { connected | ospf process-id | static } [ match { internal | external [ 1|2 ] ] |  
nssa-external [ 1|2 ] } [ metric metric-value ] [ route-map route-map-name ]
```

Parameter Description	Parameter	Description
	<b>connected</b>	Is redistributed from a connected route.
	<b>ospf</b> <i>process-id</i>	Is redistributed from OSPF and specifies an OSPF instance through process-id. The value is in the range from 1 to 65535.
	<b>static</b>	Is redistributed from static routes.
	<b>match</b>	Is used when OSPF route redistribution is configured and filters a route with a specific level for redistribution.
	<b>metric</b> <i>metric-value</i>	Sets the metric value of the redistributed route and specifies the metric value by using the metric-value parameter. The value is in the range from 1 to 16.
	<b>route-map</b> <i>route-map-name</i>	Sets the redistribution filtering rule.

**Defaults** By default:  
All the routes of the sub types of the instance are redistributed when you configure redistributing OSPF.  
All the routes of the protocol are redistributed for other routing protocols.  
The metric of the redistributed routes is 1 by default.  
The route-map is not associated.

### Command

**Mode** Routing process configuration mode

**Usage Guide** This command is executed to redistribute external routes to RIP.  
It is unnecessary to convert the metric of one routing protocol into that of another routing protocol for route redistribution, since different routing protocols use different metric measurement methods. For RIP, the metric value is calculated based on hop counts; for OSPF, the metric value is calculated based on bandwidths. Therefore, their metrics are not comparable. However, a symbolic metric value must be set for route redistribution. Otherwise, route redistribution will fail.  
When you configure redistribution of OSPF routes without the match parameter, the OSPF routes of all sub types are redistributed by default. Then the first configured match parameter is used as the original one. Only the routes matching the specific type can be redistributed. The no form of this



command restores the setting to the default value.

The rule of configuring the no form of the redistribute command is as follows:

1. If the no form of this command specifies certain parameters, the parameters must be restored to the default configuration.
2. If the **no** form of this command does not specify any parameter, the command must be deleted.



The redistribute command cannot redistribute the default route of other protocol to the RIP process. To this end, use the **default-information originate** command.

**Configuration** The following example redistributes static routes to RIP.

**Examples** Ruijie(config-router)# redistribute static

**Related  
Commands**

Command	Description
<b>default-metric</b> <i>metric</i>	Sets the default metric of the route to be redistributed.
<b>default-information originate</b>	Generates the default route in the RIP process.

**Platform** N/A

**Description**

## 1.28 router rip

Use this command to create the RIP routing process and enter the routing process configuration mode. Use the **no** form of this command to restore the default setting.

**router rip**

**no router rip**

**Parameter  
Description**

Parameter	Description
N/A	N/A

**Defaults** No RIP process is running by default.

**Command**

**Mode** Global configuration mode

**Usage Guide** One RIP routing process must be defined with one network number. If a dynamic routing protocol runs on asynchronous lines, configure the **async default routing** command on the asynchronous interface.

**Configuration Examples** The following example creates the RIP routing process and enters the routing process configuration mode.

```
Ruijie (config)# router rip
```

```
Ruijie(config-router)#
```

**Related  
Commands**

Command	Description
<b>network (RIP)</b>	Defines the network number of the RIP process.

**Platform** N/A  
**Description**

## 1.29 show ip rip

Use this command to display the RIP process information.

**show ip rip**

**Parameter  
Description**

Parameter	Description
N/A	N/A

**Defaults** N/A

**Command**

**Mode** Privileged EXEC mode/ Global configuration mode/ Routing process configuration mode

**Usage Guide** It is used to display the three timers, routing distribution status, routing re-distribution status, interface RIP version, RIP interface and network range, metric, and distance of the RIP process quickly.

**Configuration Examples** The following example displays the basic information of the RIP process such as the update time and management distance.

```
Ruijie#show ip rip
Routing Protocol is "rip"
  Sending updates every 10 seconds, next due in 4 seconds
  Invalid after 20 seconds, flushed after 10 seconds
  Outgoing update filter list for all interface is: not set
  Incoming update filter list for all interface is: not set
  Default redistribution metric is 2
  Redistributing: connected
  Default version control: send version 2, receive version 2
    Interface          Send  Recv
  FastEthernet 0/1      2     2
  FastEthernet 0/2      2     2
Routing for Networks:
  192.168.26.0 255.255.255.0
  192.168.64.0 255.255.255.0
```

```
Distance: (default is 50)
Graceful-restart enabled
Restart grace period 60 secs
Current Restart remaining time 16 secs
```

**Related  
Commands**

Command	Description
N/A	N/A

**Platform**

N/A

**Description**

## 1.30 show ip rip database

Use this command to display the route summary information in the RIP routing database.

**show ip rip database** [ *network-number network-mask* ] [ **count** ]

**Parameter  
Description**

Parameter	Description
<i>network-number</i>	( Optional ) Indicates the ID of the subnet on which route information is to be displayed.
<i>network-mask</i>	Indicates the subnet mask. It must be specified if the network number is specified.
<b>count</b>	( Optional ) Displays the abstract of the route statistics in the RIP database.

**Defaults**

N/A

**Command****Mode**

Privileged EXEC mode/ Global configuration mode/ Routing process configuration mode

**Usage Guide**

Only when the related sub-routes are converged, the converged address entries appear in the RIP routing database. When the last sub-route information in the converged address entries becomes invalid, the converged address information will be deleted from the database.

**Configuration**

The following example displays all converged address entries in the RIP routing database.

**Examples**

```
Ruijie# show ip rip database
192.168.1.0/24    auto-summary
192.168.1.0/30    directly connected, Loopback 3
192.168.1.8/30    directly connected, FastEthernet 0/1
192.168.121.0/24  auto-summary
```

```

192.168.121.0/24    redistributed
[1] via 192.168.2.22, FastEthernet 0/2
192.168.122.0/24    auto-summary
192.168.122.0/24
[1] via 192.168.4.22, Serial 0/1 00:28    permanent

```

The following example displays the converged address entries related with 192.168.121.0/24 in the RIP routing database.

```

Ruijie# show ip rip database 192.168.121.0 255.255.255.0
192.168.121.0/24    redistributed
[1] via 192.168.2.22, FastEthernet 0/1

```

The following example displays the statistical information summary of various routes in the RIP routing database.

```

Ruijie# show ip rip database count
           All      Valid   Invalid
database      5        5        0
auto-summary   5        5        0

connected      1        1        0
rip            4        4        0

```

#### Related Commands

Command	Description
<b>show ip rip</b>	Displays the information of the currently-running routing protocol process.

**Platform** N/A

**Description**

## 1.31 show ip rip external

Use this command to display the information of the external routes redistributed by the RIP protocol.

**show ip rip external [ connected | ospf process-id | static ]**

#### Parameter Description

Parameter	Description
<b>connected</b>	Displays redistributed directly-connected routes.
<b>ospf process-id</b>	Displays redistributed OSPF routes. The process-id parameter indicates OSPF process ID. The range is from 1 to 65535.
<b>static</b>	Displays redistributed static routes.

**Defaults** N/A

**Command** Privileged EXEC mode/ Global configuration mode/ Routing process configuration mode

**Mode****Usage Guide** N/A**Configuration** The following example displays direct routes redistributed by the RIP process.**Examples**

```
Ruijie# show ip rip external
Protocol connected route:
[connected] 192.100.3.0/24 metric=0
          nhop=0.0.0.0, if=2
[connected] 192.101.1.0/24 metric=0
          nhop=0.0.0.0, if=3
Protocol static route:
[static] 10.1.1.1/32 metric=0
          nhop=0.0.0.0, if=4096
[static] 10.1.2.1/32 metric=0
          nhop=0.0.0.0, if=4096
Protocol ospf 1 route:
[ospf] 1.1.1.1/32 metric=2
          nhop=192.100.3.2, if=2
[ospf] 90.1.1.1/32 metric=2
          nhop=192.100.3.2, if=2
```

**Related  
Commands**

Command	Description
<b>show ip rip</b>	Displays the information of the currently running routing protocol process.
<b>ip vrf</b>	Creates a VRF.

**Platform** N/A**Description**

## 1.32 show ip rip interface

Use this command to display the RIP interface information.

**show ip rip interface** [ *interface-type interface-number* ]

**Parameter  
Description**

Parameter	Description
<i>interface-type</i> <i>interface-number</i>	Displays the specified interface type and interface number (optional).

**Defaults** N/A**Command** Privileged EXEC mode/ Global configuration mode/ Routing process configuration mode

**Mode**

**Usage Guide** This command is used to display the information about RIP interfaces. If no RIP interface exists, no information is displayed.

**Configuration** The following example displays the RIP interface information.

**Examples**

```
Ruijie# show ip rip interface
FastEthernet 0/1 is up, line protocol is up
Routing Protocol: RIP
Receive RIPv2 packets only
Send RIPv2 packets only
Recv RIP packet total: 0
Send RIP packet total: 3
Passive interface: Disabled
Split Horizon with Poisoned Reverse: Enabled
Triggered RIP Enabled:
Retransmit-timer: 5, Retransmit-count: 36
V2 Broadcast: Disabled
Multicast registe: Registered
Interface Summary Rip:
Not Configured
Authentication mode: Text
Authentication key-chain: ripk1
Authentication text-password: ruijie
Default-information: only, metric 5
IP interface address:
192.168.64.100/24, next update due in 14 seconds
2.2.1.1/24, next update due in 24 seconds
    neighbor 2.2.1.6, next update due in 3 seconds
    neighbor 2.2.1.77, next update due in 13 seconds
2.2.2.57/24, next update due in 16 seconds
```

**Related  
Commands**

Command	Description
<b>show ip rip</b>	Displays the information of the currently running routing protocol process.

**Platform** N/A

**Description**

## 1.33 show ip rip peer

Use this command to show the RIP peer information. RIP records a summary for the RIP routing

information source learnt ( source addresses of RIP route update packets ) for the convenience of user monitoring. This routing information source is called RIP neighbor information.

**show ip rip peer** [ *ip-address* ]

Parameter Description	Parameter	Description
	<i>ip-address</i>	( Optional ) Displays the IP address of a specified RIP neighbor.

**Defaults** N/A

**Command**

**Mode** Privileged EXEC mode/ Global configuration mode/ Routing process configuration mode

**Usage Guide** This command is used to display the RIP neighbor information. If no RIP neighbor exists, no information will be displayed.

**Configuration** The following example displays the RIP neighbor information.

**Examples**

```
Ruijie# show ip rip peer
Peer 192.168.3.2:
  Local address: 192.168.3.1
  Input interface: GigabitEthernet 0/2
  Peer version: RIPv1
  Received bad packets: 3
  Received bad routes: 0
  BFD session state up
```



XS-S1960-H series switch does not support BFG. The configuration example is only for reference.

Related Commands	Command	Description
	<b>show ip rip</b>	Displays the information of the routing protocol process that is running.

**Platform** N/A

**Description**

## 1.34 timers basic

Use this command to adjust the RIP clock. Use the **no** form of this command to restore the default setting.

**timers basic** *update invalid flush*

**no timers basic**

Parameter Description	Parameter	Description
	<i>update</i>	Indicates the route update time in seconds. The update keyword defines the period at which the device sends route update packets. Each time an update packet is received, the "Invalid" and "Flush" clocks are reset. By default, a route update packet is sent every 30 seconds.
	<i>invalid</i>	Indicates the route invalid time in seconds, starting from the last valid update packet. The "invalid" defines the period when the route in the routing table becomes invalid due to no update. The invalid period of route shall be at least three times the route update period. If no update packet is received within the route invalid period, the related route becomes invalid and enters into the "invalid" state. If an update packet is received within the period, the clock resets. By default, the Invalid time is 180 seconds.
	<i>flush</i>	Indicates the route flushing time in seconds, starting when a RIP route enters into the invalid status. When the flush time is due, the routes in the invalid status will be cleared out of the routing table. The default Flush time is 120 seconds.

**Defaults** By default, the update time is 30 seconds, the invalid time is 180 seconds, and the flushing time is 120 seconds.

**Command**

**Mode** Routing process configuration mode

**Usage Guide** Adjusting the above clocks may speed up routing protocol convergence and fault recovery. Devices connected to the same network must have consistent RIP clock values. Adjustment of RIP clocks is not recommended unless otherwise specified.

To check the current RIP clock parameters, use the **show ip rip** command.



If you set the clock to a small value on low-speed links, some risks will be caused because numerous update packets may use up the bandwidth. In general, the clocks can be configured with smaller values on Ethernet or the lines of above 2 Mbit/s to reduce the convergence time of routes.

**Configuration Examples** The following example enables the RIP update packets that are sent every 10 seconds. If no update packet is received within 30 seconds, related routes become invalid and enter the invalid status. When another 90s elapses, they will be cleared.

```
Ruijie (config)# router rip
Ruijie (config-router)# timers basic 10 30 90
```

**Related  
Commands**

Command	Description
---------	-------------



N/A	N/A
-----	-----

**Platform** N/A

**Description**

## 1.35 validate-update-source

Use this command to validate the source address of the received RIP route update packet. Use the **no** form of the command to disable this function.

**validate-update-source**

**no validate-update-source**

Parameter Description	Parameter	Description
	N/A	N/A

**Defaults** This function is enabled by default.

**Command**

**Mode** Routing process configuration mode

**Usage Guide** You can validate the source address of the RIP route update packet. The validation aims to ensure that the RIP routing process receives only the route update packets from the same IP subnet neighbor.

Disabling split horizon on the interface causes the RIP routing process to enable update message source address validation, no matter whether it has been configured with the

**validate-update-source** command in routing process configuration mode.

In addition, for the ip unnumbered interface, the RIP routing process does not implement update message source address validation, no matter whether it has been configured with the command **validate-update-source**.

**Configuration** The following example disables verification of the source IP address of the update packet.

**Examples**

```
Ruijie (config)# router rip
Ruijie (config-router)# no validate-update-source
```

Related Commands	Command	Description
	<b>ip split-horizon</b>	Enables split horizon.
	<b>ip unnumbered</b>	Defines the IP unnumbered interface.
	<b>neighbor (RIP)</b>	Defines the IP address of a RIP neighbor.

**Platform** N/A

**Description**

## 1.36 version

Use this command to define the RIP version of a device. Use the **no** form of this command to restore the default setting.

**version { 1 | 2 }**

**no version**

### Parameter Description

Parameter	Description
1	Defines the RIP version 1.
2	Defines the RIP version 2.

### Defaults

The route update packets of RIPv1 and are received by default, but only the RIPv1 route update packets are sent.

### Command

**Mode** Routing process configuration mode

### Usage Guide

This command defines the RIP version running on the device. It is possible to redefine the messages of which RIP version are processed on every interface by using the **ip rip receive version** and **ip rip send version** commands.

**Configuration** The following example configures the RIP version as version 2.

### Examples

```
Ruijie (config)# router rip
Ruijie (config-router)# version 2
```

### Related Commands

Command	Description
<b>ip rip receive version</b>	Defines the version of RIP packets received on the interface.
<b>ip rip send version</b>	Defines the version of RIP packets sent on the interface.
<b>show ip rip</b>	Displays RIP information.

### Platform

N/A

### Description

## 2 RIPng Commands

### 2.1 clear ipv6 rip

Use this command to clear the RIPng routes.

**clear ipv6 rip**

Parameter Description	Parameter	Description
	N/A	N/A

**Defaults** None

**Command mode** Privileged EXEC mode

**Usage Guide** Running this command removes all RIPng routes and this operation may have great impact on the RIPng protocol. This command should be used with caution.

**Configuration** The following example clears the RIPng routes:

**Examples** Ruijie# clear ipv6 rip

Related Commands	Command	Description
	N/A	N/A

**Platform** N/A  
**Description**

### 2.2 default-metric

Use this command to configure the default metric for RIPng. Use the **no** form of this command to restore the default value.

**default-metric** *metric*

**no default-metric**

Parameter Description	Parameter	Description
	<i>metric</i>	Sets the default metric value. The valid range is from 1 to 16. The route is unreachable if the metric value is larger than or equal to 16.

**Defaults** The default value is 1.

**Command mode** Routing process configuration mode.

**Usage Guide** This command shall be used with the **redistribute** command. When redistributing the route from one route process to RIPng, due to the incompatibility of metric calculation mechanisms of different routing protocols, it fails to translate the routing metric values. To this end, the RIPng metric value shall be defined when translating the metric values. If there is no defined metric value, use the **default-metric** command to define one; and the defined metric value will overwrite the value of the **default-metric** command. By default, the **default-metric** value is 1.

**Configuration Examples** The following example shows how to set the RIPng metric value as 3 when redistributing OSPF process 100:

```
Ruijie(config-router)# default-metric 3
Ruijie(config-router)# redistribute ospf 100
```

**Related Commands**

Command	Description
<b>redistribute</b>	Redistributes the route from one route domain to another route domain.

**Platform Description** N/A

## 2.3 distance

Use this command to set the administrative distance of RIPng. Use the **no** form of this command to restore the default value.

**distance** *distance*

**no distance**

**Parameter Description**

Parameter	Description
<i>distance</i>	Sets the RIPng administrative distance. The range is from 1 to 254.

**Defaults** The default distance is 120

**Command mode** Routing process configuration mode.

**Usage Guide** N/A

**Configuration** The following example shows how to set the RIPng administrative distance as 160:

**Examples**

```
Ruijie(config)# ipv6 router rip
Ruijie(config-router)# distance 160
```

**Related  
Commands**

Command	Description
N/A	N/A

**Platform** N/A  
**Description**

## 2.4 distribute-list

Use this command to filter the in/out route in the prefix list. Use the **no** form of this command to remove route filtering.

**distribute-list prefix-list** *prefix-list-name* { **in** | **out** } [ *interface-type interface-name* ]

**no distribute-list prefix-list** *prefix-list-name* { **in** | **out** } [ *interface-type interface-name* ]

**Parameter  
Description**

Parameter	Description
<b>prefix-list</b> <i>prefix-list-name</i>	Name of the prefix list which is used to filter the route.
<b>in</b>   <b>out</b>	Filters the in or out route in the distribute list.
<i>interface-type</i> <i>interface-name</i>	(Optional) Applies the distribute list to the specified interface.

**Defaults** By default, no distribute list is defined.

**Command mode** Routing process configuration mode.

**Usage Guide** This command is used to configure the route distribution control list to filter all update routes for the purpose of refusing to receive or send the specified routes. If the interface is not specified, the update routes on all interfaces are filtered.

**Configuration Examples** The following example shows how to filter the received update route on the interface eth0 (only those update routes within the **prefix-list allowpre** prefix list range can be received)

```
Ruijie(config)# ipv6 router rip
Ruijie(config-router)# distribute-list prefix-list allowpre in eth0
```

**Related  
Commands**

Command	Description
<b>redistribute</b>	Sets route redistribution.

**Platform** N/A  
**Description**

## 2.5 graceful-restart

Use this command to configure the graceful restart (GR) function for the RIPng process.

**graceful-restart** [ **grace-period** *grace-period* ]

Use the **no** form of this command restore the default configurations.

**no graceful-restart** [ **grace-period** ]

Parameter Description	Parameter	Description
	<b>graceful-restart</b>	Enables the GR function.
	<b>grace-period</b>	Displays the configured grace period.
	<i>grace-period</i>	Indicates the configured GR period, ranging from 1 to 1800 seconds. The default value is the smaller between twice of the update time and 60s.

**Defaults** The GR function is enabled by default.

**Command Mode** Routing process configuration mode

**Default Level** 14

**Usage Guide** The GR function is configured based on RIPng instances. Different parameters can be configured for different RIPng instances as required.

The GR period indicates the maximum duration from RIPng restart to RIPng GR completion. In this time period, the forwarding table before restart is used and the RIPng route is restored to the status before restart. After the GR period expires, the RIPng process exits the GR status and the common RIPng operation is performed.

The **graceful-restart grace-period** command allows a user to modify the GR period in explicit mode. Note that GR is completed and the RIPng route is updated once before the RIPng route becomes invalid. If the GR period is improperly set, continuous data forwarding in the GR process cannot be ensured. A typical case is as follows:

If the GR period is greater than the invalid time of the neighbor route, GR is not completed before the route becomes invalid and the route is not advertised to the neighbor again. The neighbor route stops forwarding data after the route becomes invalid, resulting in data forwarding interruption. Therefore, unless otherwise specified, it is not recommended to adjust the GR period. If the GR period needs to be configured, check configuration of the **timers** command to ensure that the GR period value is greater than the route update time and smaller than the route invalid time.

When GR is performed for the RIPng process, ensure that the network environment is stable.

**Configuration Examples** The following example enables the GR function for the RIPng process and configures the GR period.

```
Ruijie(config)# ipv6 router rip
```

```
Ruijie(config-router)# graceful-restart grace-period 90
```

<b>Verification</b>	Run the <b>show ipv6 rip</b> command to check whether the GR function is configured and query the configured grace period.
<b>Prompts</b>	N/A
<b>Common Errors</b>	N/A
<b>Platform Description</b>	N/A

## 2.6 ipv6 rip default-information

Use this command to generate a default IPv6 route to the RIPng. Use the **no** form of this command to remove the default route.

**ipv6 rip default-information** { **only** | **originate** } [ **metric** *metric-value* ]

**no ipv6 rip default-information**

Parameter Description	Parameter	Description
	<b>only</b>	Advertises the IPv6 default route only.
	<b>originate</b>	Advertises both of the IPv6 default route and other routes.
	<b>metric</b> <i>metric-value</i>	Sets the metric value for the default route. The valid range is from 1 to 15. The default metric is 1.

**Defaults** By default, no default route is configured.

**Command mode** Interface configuration mode

**Usage Guide** With this command configured on an interface, the interface advertises an IPv6 default route and the route itself is not to join the device route forwarding table and the RIPng route database.  
To avoid the route loop, once this command has been configured on the interface, RIPng refuses to receive the default route update message advertised from the neighbor.

**Configuration Examples** The following example shows how to create a default route to the RIPng routing process on the interface ethernet0/0 and enable this interface to advertise the default route only:

```
Ruijie(config)# interface ethernet 0/0
Ruijie(config-if)# ipv6 rip default-information only
```

Related Commands	Command	Description

<b>show ipv6 rip</b>	Displays the RIPng process and statistics.
<b>show ipv6 rip database</b>	Displays the RIPng route.

**Platform** N/A

**Description**

## 2.7 ipv6 rip enable

Use this command to enable the RIPng on the interface. Use the **no** form of this command to disable RIPng on the interface.

**ipv6 rip enable**

**no ipv6 rip enable**

Parameter Description	Parameter	Description
	N/A	N/A

**Defaults** It is disabled by default.

**Command mode** Interface configuration mode.

**Usage Guide** This command is used to add the RIPng interface. Before this command is configured, if the RIPng is not enabled, use this command to enable the RIPng automatically.

**Configuration Examples** The following example shows how to enable the RIPng on the interface 0/0:

```
Ruijie(config)# interface ethernet 0/0
Ruijie(config-if)# ipv6 rip enable
```

Related Commands	Command	Description
	N/A	N/A

**Platform** N/A

**Description**

## 2.8 ipv6 rip metric-offset

Use this command to set the interface metric value. Use the **no** form of this command to remove the metric configurations.

**ipv6 rip metric-offset value**

**no ipv6 rip metric-offset**



<b>Parameter Description</b>	Parameter	Description
	<i>value</i>	Sets the interface metric value on the interface. The valid range is from 1 to 16.
<b>Defaults</b>	The default value is 1.	
<b>Command mode</b>	Interface configuration mode.	
<b>Usage Guide</b>	Before the route is added to the routing list, the interface metric value shall be upon the route metric. To this end, the interface metric value influences the route usage.	
<b>Configuration Examples</b>	The following example shows how to set the metric value of the interface Ethernet 0/1 as 5: <pre>Ruijie(config)# interface ethernet 0/1 Ruijie(config-if)# ipv6 rip metric-offset 5</pre>	
<b>Related Commands</b>	Command	Description
	N/A	N/A
<b>Platform Description</b>	N/A	

## 2.9 ipv6 router rip

Use this command to create the RIPng process and enter routing process configuration mode. Use the **no** form of this command to remove the RIPng process.

**ipv6 router rip**

**no ipv6 router rip**

<b>Parameter Description</b>	Parameter	Description
	N/A	N/A
<b>Defaults</b>	No RIPng process is configured by default.	
<b>Command mode</b>	Global configuration mode.	
<b>Usage Guide</b>	N/A.	

**Configuration** The following example shows how to create the RIPng process and enter routing process

**Examples** configuration mode:

```
Ruijie(config)# ipv6 router rip
```

**Related  
Commands**

Command	Description
<b>ipv6 rip enable</b>	Enables the RIPng on the specified interface.

**Platform** N/A

**Description**

## 2.10 passive-interface

Use this command to disable the interface to send update packets. Use the **no** form of this command to enable the interface to send update packets.

**passive-interface** { **default** | *interface-type interface-num* }

**no passive-interface** { **default** | *interface-type interface-num* }

**Parameter  
Description**

Parameter	Description
<b>default</b>	Enables the passive mode on all interfaces.
<i>interface-type interface-num</i>	Interface type and interface number.

**Defaults** No passive interface is configured by default.

**Command  
mode** Routing process configuration mode.

**Usage Guide** You can use the **passive-interface default** command to enable the passive mode on all interfaces. Then ,use the **no passive-interface** *interface-type interface-num* command to remove the specified interface from the passive mode.

**Configuration  
Examples** The following example shows how to enable the passive mode on all interfaces and remove interface ethernet 0/0 from the passive mode:

```
Ruijie(config-router)# passive-interface default
Ruijie(config-router)# no passive-interface ethernet 0/0
```

**Related  
Commands**

Command	Description
N/A	N/A

**Platform** N/A

**Description**

## 2.11 redistribute

Use this command to redistribute the route of other routing protocols to RIPng. Use the **no** form of this command to remove the redistribution configuration.

**redistribute** { **connected** | **ospf** *process-id* | **static** } [ **metric** *metric-value* | **route-map** *route-map-name* ]

**no redistribute** { **connected** | **ospf** *process-id* | **static** } [ **metric** *metric-value* | **route-map** *route-map-name* ]

### Parameter Description

Parameter	Description
<b>connected</b>	Redistributes the connected routes to RIPng.
<b>ospf</b> <i>process-id</i>	Redistributes the OSPF routes to RIPng. <i>process-id</i> indicates the OSPF process number, and the range is from 1 to 65,535.
<b>static</b>	Redistributes the static routes to RIPng.
<b>metric</b> <i>metric-value</i>	(Optional) Sets the metric value for the route redistributed to RIPng.
<b>route-map</b> <i>route-map-name</i>	(Optional) Sets the redistribution route filtering.

### Defaults

By default, the routes of other routing protocols are not redistributed.

If the **default-metric** command is not configured, the default metric value is 1;

By default, the **route-map** is not configured;

By default, all sub-type routes in the specified routing process are redistributed.

### Command mode

Routing process configuration mode.

### Usage Guide

This command is used to redistribute the external routes to RIPng.

It is unnecessary to transform the metric of one routing protocol into another routing protocol in the process of the route redistribution, for the metric calculation methods of the different routing protocols are different. The RIP and OSPF metric calculations are incomparable for the reason that the RIP metric calculation is hop-based while the OSPF one is bandwidth-based.

The instance, from where the routing information is redistributed to the RIPng, must be specified in the process of configuring the multi-instance protocol redistribution.

### Configuration Examples

The following example shows how to redistribute the static route, use the route map *mymap* to filter and set the metric value as 8:

```
Ruijie(config)# ipv6 router rip
Ruijie(config-router)# redistribute static route-map
mymap metric 8
```

### Related Commands

Command	Description
<b>default-metric</b>	Defines the default RIPng metric value when

	redistributing other routing protocols.
<b>distribute-list</b>	Filters the RIPng routing update packets.

**Platform** N/A

**Description**

## 2.12 show ipv6 rip

Use this command to show the parameters and each statistical information of the RIPng routing protocol process.

**show ipv6 rip**

Parameter	Parameter	Description
Description	N/A	N/A

**Defaults** N/A

**Command mode** Privileged EXEC mode or user mode.

**Usage Guide** N/A

**Configuration Examples**

```
Ruijie# show ipv6 rip
Routing Protocol is "RIPng"
Sending updates every 10 seconds with +/-50%, next due in 8 seconds
Timeout after 30 seconds, garbage collect after 60 seconds
Outgoing update filter list for all interface is:
distribute-list prefix aa out
Incoming update filter list for all interface is: not set
Default redistribution metric is 1
Default distance is 120
Redistribution:
Redistributing protocol connected route-map rm
Redistributing protocol static
Redistributing protocol ospf 1
Default version control: send version 1, receive version 1
Interface          Send  Recv
VLAN 1              1     1
Loopback 1          1     1
Routing Information Sources:
None
```

Related	Command	Description
---------	---------	-------------

Commands		
	<b>show ipv6 rip</b>	Displays the parameters and each statistical information of the RIPng process.

**Platform** N/A

**Description**

## 2.13 show ipv6 rip database

Use this command to display the RIPng route entries.

**show ipv6 rip database**


Parameter Description	Parameter	Description
	N/A	N/A

**Defaults** N/A

**Command mode** Privileged EXEC mode or user mode.

**Usage Guide** N/A

<b>Configuration</b>	Ruijie# show ipv6 rip database
<b>Examples</b>	<pre>Codes: R - RIPng,C - Connected,S - Static,O - OSPF,B - BGP sub-codes:n - normal,s - static,d - default,r - redistribute, i - interface, a/s - aggregated/suppressed S(r)  2001:db8:1::/64, metric 1, tag 0 Loopback 0/:: S(r)  2001:db8:2::/64, metric 1, tag 0 Loopback 0/:: C(r)  2001:db8:3::/64, metric 1, tag 0 VLAN 1/:: S(r)  2001:db8:4::/64, metric 1, tag 0 Null 0/:: C(i)  2001:db8:5::/64, metric 1, tag 0 Loopback 1/:: S(r)  2001:db8:6::/64, metric 1, tag 0 Null 0/::</pre>

 The XS-S1960-H series switch does not support BGP. The configuration example is only for reference.

Related	Command	Description

Commands		
	N/A	N/A

**Platform** N/A

**Description**

## 2.14 split-horizon

Use the **split-horizon** command to enable the RIPng split-horizon function in routing process configuration mode. Use the **no** form of this command to disable this function. Use the **split-horizon poisoned-reverse** command to enable the RIPng poisoned reverse horizontal split function in routing process configuration mode. Use the **no** form of this command to disable this function.

**split-horizon [ poisoned-reverse ]**

**no split-horizon [ poisoned-reverse ]**

Parameter Description	Parameter	Description
	<b>poisoned-reverse</b>	(Optional) Enables the poisoned-reverse horizontal split.

**Defaults** RIPng split horizon is enabled by default.

**Command mode** Routing process configuration mode.

**Usage Guide** In the process of packet updating, split-horizon function prevents some routing information from being advertised through the interface learning those routing information. The poisoned reverse horizontal split function advertises some routing information to the interface learning those routing information, and the metric value is set as 16. The RIPng routing protocol belongs to the distance vector routing protocol, so the horizontal split shall be noticed in the actual application. You can use the **show ipv6 rip** command to determine whether the RIPng split-horizon function is enabled or not.

**Configuration Examples** The following example shows how to disable the RIPng horizontal split:

```
Ruijie(config)# ipv6 router rip
Ruijie(config-router)# no split-horizon
```

Related Commands	Command	Description
	N/A	N/A

**Platform** N/A

**Description**

## 2.15 timers

Use this command to adjust the RIPng timer. Use the **no** form of this command to restore the default settings.

**timers** *update invalid flush*

**no timers**

### Parameter Description

Parameter	Description
<i>update</i>	Sets the routing update time, in seconds. The update parameter defines the period of sending the routing update packets by the device. The invalid and flush parameter reset once the update packets are received.
<i>invalid</i>	Sets the routing invalid time, in seconds, starting from receiving the last valid update packet. The invalid parameter defines the invalid time for the un-updated routing in the routing list. The routing invalid time shall be three times larger than the routing update time. The routing will be invalid if no update packets are received within the routing invalid time, and it will reset if the update packets are received within the invalid time.
<i>flush</i>	Sets the routing flush time, in seconds, starting from RIPng entering to invalid state. The invalid routing will be removed from the routing list if the flush time expires.

### Defaults

The default update time is 30 seconds; the default invalid time is 180 seconds; and the default flush time is 120 seconds.

### Command mode

Routing process configuration mode.

### Usage Guide

Adjusting the above time may speed up the RIPng convergence time and the troubleshooting time.

The RIPng time must be consistent for the devices connecting to the same network. You are not recommended to adjust the RIP time, except for the specific requirement.

Use the **show ipv6 rip** command to view the current RIPng time parameter setting.

In the low-speed link, with the short time configured, large amount of the update packets consumes a lot of bandwidth. Generally, the short time can be configured in the Ethernet or 2Mbps-higher line to shorten the convergence time of the network routing.

### Configuration Examples

The following example shows how to send the RIP update packets every 10 seconds. The routing will be invalid if no update packets are received within 30 seconds, and the routing will be removed after being invalid for 90 seconds.

```
Ruijie(config)# ipv6 router rip
Ruijie(config-router)# timers 10 30 90
```

Related Commands	Command	Description
	show ipv6 rip	Displays the parameters and the statistical information of the RIPng process.
	show ipv6 rip database	Displays the RIPng routes.

Platform  
Description

N/A



## 3 NSM Commands

### 3.1 clear ip route

Use this command to clear the route cache.

**clear ip route** { \* | *network* [ *netmask* ] | }

Parameter Description	Parameter	Description
	*	Clears all route cache.
	<i>network</i>	Specifies the route cache of the network or subnet.
	<i>netmask</i>	(Optional) Subnet mask. If no subnet mask is specified, the longest match principle is used when you match <i>network</i> with the route. The cache of the longest match is cleared.

#### Command

**Mode** Privileged EXEC mode

**Usage** Clearing route cache clears the corresponding routes and triggers the routing protocol relearning.

**Guide** Please note that clearing all route cache leads to temporary network disconnection.

#### Examples

The following example clears the cache of the route which is the longest match with IP address 192.168.12.0.

```
clear ip route 192.168.12.0
```

Related Commands	Command	Description
	N/A	N/A

#### Platform

**Description** N/A

### 3.2 ip default-gateway

Use this command to configure the default gateway IP address on 2-layer devices. Use the **no** or **default** form of this command to restore the default setting.

**ip default-gateway** *ip-address*

**no ip default-gateway**

**default ip default-gateway**

Parameter Description	Parameter	Description
	<i>ip-address</i>	IPv4 address of the default gateway

**Defaults** No gateway IP address is configured by default.

**Command**

**Mode** Global configuration mode

**Usage** When the device does not know the destination address of a packet, the device will forward the packet to the default gateway.

**Guide**

**Examples** The following example sets the IP address of default gateway to 192.168.1.1.

```
ip default-gateway 192.168.1.1
```

Related Commands	Command	Description
	N/A	N/A

**Platform**

**Description**

### 3.3 ip default-network

Use this command to configure the default network globally. Use the **no** or **default** form of this command to restore the default setting.

**ip default-network** *network*

**no ip default-network** *network*

**default ip default-network** *network*

Parameter Description	Parameter	Description
	<i>network</i>	Default network

**Defaults** The default is 0.0.0.0/0.

**Command**

**Mode** Global configuration mode

**Usage** The goal of this command is to generate the default route. The default network must be reachable in the routing table, but not the directly connected network.

**Guide** The default network always starts with an asterisk ("\*"), indicating that it is the candidate of the default route. If there is connected route and the route without the next hop in the default network, the default route must be a static route.

**Examples** The following example sets 192.168.100.0 as the default network. Since the static route to the network is configured, the device will automatically generate a default route.

```
ip route 192.168.100.0 255.255.255.0 serial 0/1
```

```
ip default-network 192.168.100.0
```

The following example sets 200.200.200.0 as the default network. The route becomes the default one only when it is available in the routing table.

```
ip default-network 200.200.200.0
```

Related Commands	Command	Description
	<b>show ip route</b>	Displays the routing table.

### 3.4 ip route

Use this command to configure a static route. Use the **no** or **default** form of this command to restore the default setting.

**ip route** *network net-mask* { *ip-address* | *interface* [ *ip-address* ] } [ *distance* ] [ **tag** *tag* ] [ **permanent** | **weight** *number* ] [ **description** *description-text* ] [ **disabled** | **enabled** ]

**no ip route** *network net-mask* { *ip-address* | *interface* [ *ip-address* ] } [ *distance* ]

**default ip route** *network net-mask* { *ip-address* | *interface* [ *ip-address* ] } [ *distance* ]

Parameter Description	Parameter	Description
	<i>network</i>	Network address of the destination
	<i>net-mask</i>	Mask of the destination
	<i>ip-address</i>	The next hop IP address of the static route
	<i>interface</i>	(Optional) The next hop egress of the static route
	<i>distance</i>	(Optional) The administrative distance of the static route
	<i>tag</i>	(Optional) The tag of the static route
	<b>permanent</b>	(Optional) Permanent route ID
	<b>weight</b> <i>number</i>	(Optional) Indicates the weight of the static route. The weight is 1 by default.
	<b>description</b> <i>description-text</i>	(Optional) Indicates the description of the static route. By default, no description is configured. <i>description-text</i> is a string of one to 60 characters.
	<b>disabled/enabled</b>	(Optional) Indicates the enable flag of the static route. The flag is enabled by default.

**Defaults** No static route is configured by default.

**Command Mode** Global configuration mode

**Usage Guide** The default administrative distance of the static route is 1. Setting the administrative distance allows the learnt dynamic route to overwrite the static route. Setting the administrative distance of the static route can enable route backup, which is called floating route in this case. For example, the administrative distance of the OSPF is 110. You can set its administrative distance to 125. Then the data can switch over to the static route when the route running OSPF fails.

The default weight of the static route is 1. To view the static route of non-default weight, execute the **show ip route weight** command. The parameter weight is used to enable WCMP. When there are load-balanced routes to the destination, the device assigns data flows by their weights. The higher the weight of a route is, the more data flow the route carries. WCMP limit is generally 32 for routers. However, WCMP limit varies by switch models for their chipsets support different weights. When the sum of the weights of load balanced routes is beyond this weight limit, the excessive ones will not take effect.

Enablement/disablement shows the state of the static route. Disablement means the static route is not used for forwarding. The forwarding table used the permanent route until administrator deletes it. When you configure the static route on an Ethernet interface, do not set the next hop as an interface, for example, `ip route 0.0.0.0 0.0.0.0 Fastethernet 0/0`. In this case, the switch may consider that all unknown destination networks are directly connected to the Fastethernet 0/0. So it sends an ARP request to every destination host, which occupies many CPU and memory resources. It is not recommended to set the static route to an Ethernet interface.

Association between a static route and a track object can be specified. When association between a static route and a specified track object is configured and the advertised track object status is inactive, the static route does not take effect. If the advertised track object status is active, the static route takes effect based on another status. With association between a static route and a track object, the third-party status concerned by the track object is mainly used to determine whether the static route takes effect. Association between a static route and a track object cannot be used for routes with the permanent attribute.

Association between a static route and an ARP object can be specified. When association between a static route and an ARP object is configured and the ARP object corresponding to the next hop and egress of the route does not exist, the static route does not take effect. When the ARP object corresponding to the next hop and egress of the route exists, the static route takes effect based on another status. Association between a static route and an ARP object cannot be used for routes with the permanent attribute.

Association between a static route and a track object cannot be used together with association between a static route and an ARP object.

The following example adds a static route to the destination network of 172.16.100.0/24 whose next hop is 192.168.12.1 and administrative distance is 15.

```
ip route 172.16.199.0 255.255.255.0 192.168.12.1 155
```

#### Examples

If the static route has not a specific interface, data flows may be sent through other interface in case of interface failure. The following example configures data flows to be sent through fastethernet 0/0 to the destination network of 172.16.100.0/24.

```
ip route 172.16.199.0 255.255.255.0 fastethernet 0/0 192.168.12.1
```

#### Related

**Commands**      N/A

## 3.5 ip routing

Use this command to enable IP routing in the global configuration mode. Use the **no** or **default** form of this

command to disable this function.

**ip routing**

**no ip routing**

**default ip routing**

**Defaults** This function is enabled by default.

**Command Mode** Global configuration mode

**Usage Guide**

IP routing is not necessary when the switch serves as bridge or VoIP gateway. When a device functions only as a bridge or VoIP gateway, the IP routing function of the RGOS software is not required. In this case, the IP routing function of the RGOS software can be disabled. After the IP routing function is disabled, the device functions as a common host. The device can send and receive packets but cannot forward packets. All route-related configurations will be deleted except the static route configuration. A large number of static routes may be configured. If a user runs the **no ip routing** command, the configuration of a large number of static routes may be lost. To prevent this situation, the static route configuration will be hidden temporarily when the **no ip routing** command is run. If the **ip routing** command is run again, the static route configuration can be restored.

Note that if the process or whole system restarts when the **no ip routing** command is run, the static route configuration will not be reserved.

**Examples** The following example disables IP routing.

```
Ruijie(config)# no ip routing
```

**Related Commands** N/A

**Platform Description** N/A

## 3.6 ip static route-limit

Use this command to set the upper threshold of the static route. Use the **no** or **default** form of this command to restore the default setting.

**ip static route-limit** *number*

**no ip static route-limit** *number*

**default ip static route-limit**

Parameter Description	Parameter	Description
	<i>number</i>	Upper threshold of static routes in the range from 1 to 10000

**Defaults** The default is 1024.

**Command Mode** Global configuration mode

**Usage Guide** The goal is to control the number of static routes. You can view the upper threshold of the configured non-default static routes with the **show running-config** command.

**Examples** The following example sets the upper threshold of the static routes to 900 and then restores the setting to the default value.

```
ip static route-limit 900
```

**Related Commands** N/A

**Platform Description** N/A

### 3.7 ipv6 default-gateway

Use this command to configure the default gateway IPv6 address on 2-layer devices. Use the **no** or **default** form of this command to restore the default setting.

**ipv6 default-gateway** *ipv6-address*

**no ipv6 default-gateway**

**default ipv6 default-gateway**

Parameter Description	Parameter	Description
	<i>ipv6-address</i>	Sets the default gateway IPv6 address.

**Defaults** No gateway IPv6 address is configured by default.

**Command Mode** Global configuration mode

**Usage Guide** When the device does not know the destination address of a packet, the device will forward the packet to the default gateway. Use the command **show ipv6 redirects** to display default gateway configuration.

**Examples** The following example sets the default gateway IPv6 address to 10::1.

```
Ruijie(config)# ipv6 default-gateway 10::1
```

**Platform Description** N/A

### 3.8 ipv6 route

Use this command to configure an ipv6 static route. Use the **no** or **default** form of this command to restore the default setting.

**ipv6 route** *ipv6-prefix / prefix-length* { *ipv6-address* | *interface* [ *ipv6-address* ] } [ *distance* ] [ **tag** *tag* ] [ **weight** *number* ] [ **description** *description-text* ]

**no ipv6 route** *ipv6-prefix / prefix-length* { *ipv6-address* | *interface* [ *ipv6-address* ] } [ *distance* ]

**default ipv6 route** *ipv6-prefix / prefix-length* { *ipv6-address* | *interface* [ *ipv6-address* ] } [ *distance* ]

Parameter	Description
<i>prefix-length</i>	Mask length of the destination
<i>ipv6-address</i>	The next hop IP address of the static route
<i>interface</i>	(Optional) The next hop egress of the static route
<i>distance</i>	(Optional) The administrative distance of the static route. The default is 1.
<i>tag</i>	(Optional) The tag value of the static route. The default is 0.
<b>weight</b> <i>number</i>	(Optional) Indicates the weight of the static route, which must be specified when you configure equal-cost routes. The weight ranges from 1 to 8. When the weights of all equal-cost routes of a route are summed up, the sum cannot exceed the maximum number of equal-cost routes that can be configured for the route. Weighting of equal-cost routes of a route indicates the traffic ratio of these routes. The weight is 1 by default.
<b>description</b> <i>description-text</i>	(Optional) Indicates the description of the static route. By default, no description is configured. <i>description-text</i> is a string of one to 60 characters.

**Defaults** No IPv6 static route is configured by default.

**Command Mode** Global configuration mode

**Usage Guide** N/A

The following example adds a static route to the destination network of 2001::/64 whose next hop is 2002::2 and administrative distance are 115.

```
ipv6 route 2001::/64 2002::2 115
```

**Examples** If the static route has not a specific interface, data flows may be sent through other interface in case of interface failure. The following example configures that data flows are sent through fastethernet 0/0 to the destination network of 2001::/64.

```
ipv6 route 2001::/64 fastethernet 0/0 2002::2
```

**Related**

Command	Description
---------	-------------

<b>Commands</b>	show ipv6 route	Displays IPv6 routing table.
-----------------	-----------------	------------------------------

**Platform****Description** N/A

### 3.9 ipv6 static route-limit

Use this command to set the upper threshold of the static route. Use the **no** or **default** form of this command to restore the default setting.

**ipv6 static route-limit** *number*

**no ipv6 static route-limit** *number*

**default ipv6 static route-limit**

Parameter	Description
<b>Description</b> <i>number</i>	Upper threshold of static routes in the range from 1 to 10000.

**Defaults** The default is 1000.

**Command Mode** Global configuration mode

**Usage Guide** The goal is to control the number of static routes. You can view the upper threshold of the configured non-default static routes with the show running config command.

The following example sets the upper threshold of the ipv6 static routes to 900 and then restores the setting to the default value.

**Examples**

```
Ruijie(config)# ipv6 static route-limit 900
Ruijie(config)# no ipv6 static route-limit
```

Related Commands	Command	Description
	ipv6 route	Configures the IPv6 static route.
	show ipv6 route	Displays the IPv6 routing table.

**Platform****Description** N/A

### 3.10 ipv6 unicast-routing

Use this command to enable the IPv6 route function of the RGOS. Use the **no** or **default** form of this



command to disable this function.

**ipv6 unicast-routing**

**no ipv6 unicast-routing**

**default ipv6 unicast-routing**

**Parameter**

N/A

**Description****Defaults**

This function is enabled by default.

**Command****Mode**

Global configuration mode

**Usage Guide**

This function can be disabled if the device is just used as the bridge-connection device or the VOIP gateway device.

**Examples**

The example disables the IPv6 route function of RGOS.

```
Ruijie# no ipv6 unicast-routing
```

**Related****Commands**

Command	Description
ipv6 route	Configure the IPv6 static route.
show ipv6 route	Displays the IPv6 routing table.

**Platform****Description**

N/A

## 3.11 maximum-paths

Use this command to specify the number of equivalent routes. Use the **no** or **default** form of this command is used to restore the default setting.

**maximum-paths** *number*

**no maximum-paths** *number*

**default maximum-paths**

**Parameter****Description**

Parameter	Description
<i>number</i>	Number of equivalent routes in the range from 1 to 64

**Defaults**

The default value varies with the device model.

**Command****Mode**

Global configuration mode

The number of equivalent routes is configured to control the number of equivalent routes. After the number of equivalent routes is configured by running the **maximum-paths** command, the number of load-sharing channels in load-sharing mode will not exceed the number of configured static routes.

**Usage Guide** You can run the **show running config** command to query the number of configured static routes. This command takes effect both to IPv4 and IPv6 addresses. After this command is configured, the maximum number of equivalent routes to an IPv4 or IPv6 destination is equal to the configured value.

The following example sets the number of equivalent routes to 10 and then restores the default setting.

**Examples**

```
maximum-paths 10
no maximum-paths
```

## 3.12 show ip redirects

Use this command to display the default gateway IP address.

**show ip redirects**

Use this command to display the default gateway IP address.

**show ip redirects**

Parameter	Parameter	Description
Description	N/A	N/A

**Defaults** N/A

**Command Mode** Privileged EXEC mode

**Usage Guide** Use this command to display the default gateway IP address. This command is supported on 2-layer devices or 3-layer devices with the **no ip routing** command executed.

The following example displays the default gateway.

```
Ruijie# show ip redirects
Default Gateway: 192.168.195.1
```

**Examples**

Field	Description
Default Gateway	IP address of the default gateway.

Related Commands	Command	Description
	N/A	N/A

**Platform Description** N/A

### 3.13 show ip route

Use the commands to display the configuration of the IP routing table.

**show ip route** *network* [ *mask* [**longer-prefix**] ] | **count** | *protocol* [ *process-id* ] | **weight** ] ]

**show ip route** [ **normal** | **ecmp** ] [ *network* [ *mask* ] ]

#### Parameter Description

Parameter	Description
<i>network</i>	(Optional) Displays the route information to the network.
<i>mask</i>	(Optional) Displays the route information to the network of this mask.
<b>longer-prefix</b>	(optional) Displays the routes that match the specified prefix.
<b>count</b>	(Optional) Displays the number of existent routes. (for the ECMP/WCMP route, displays one route)
<i>protocol</i>	(Optional) Displays the route information of specific protocol.
<i>process-id</i>	(Optional) Routing protocol process ID.
<b>weight</b>	(Optional) Displays the route information of non default weight.
<b>normal</b>	Displays normal routes and not equivalent routes or fast reroutes.
<b>ecmp</b>	Displays only equivalent routes.

**Defaults** All routes are displayed by default.

**Command Mode** Privileged EXEC mode/ Global configuration mode/Interface configuration mode/ Routing protocol configuration mode/ Route map configuration mode

**Usage Guide** This command can display route information flexibly.  
This command shows all routes. To show different attributes of routes, specify normal | ecmp | fast-reroute.

The following example displays the configuration of the IP routing table.

#### Examples

```
Ruijie# show ip route

Codes: C - Connected, L - Local, S - Static
       R - RIP, O - OSPF, B - BGP, I - IS-IS, V - Overflow route
       N1 - OSPF NSSA external type 1, N2 - OSPF NSSA external type 2
       E1 - OSPF external type 1, E2 - OSPF external type 2
       SU - IS-IS summary, L1 - IS-IS level-1, L2 - IS-IS level-2
       IA - Inter area, * - candidate default

Gateway of last resort is no set

S    20.0.0.0/8 is directly connected, VLAN 1
S    22.0.0.0/8 [1/0] via 20.0.0.1
O E2 30.0.0.0/8 [110/20] via 192.1.1.1, 00:00:06, VLAN 1
R    40.0.0.0/8 [120/20] via 192.1.1.2, 00:00:23, VLAN 1
B    50.0.0.0/8 [120/0] via 192.1.1.3, 00:00:41
C    192.1.1.0/24 is directly connected, VLAN 1
C    192.1.1.254/32 is local host.
```

```
Ruijie# show ip route 30.0.0.0
Routing entry for 30.0.0.0/8
Distance 110, metric 20
Routing Descriptor Blocks:
192.1.1.1, 00:01:11 ago, via VLAN 1, generated by OSPF, extern 2
```

```
Ruijie# show ip route count
----- route info -----
the num of active route: 9
```

```
Ruijie# show ip route weight
-----[distance/metric/weight]-----
S    23.0.0.0/8 [1/0/2] via 192.1.1.20
S    172.0.0.0/16 [1/0/4] via 192.0.0.1
```

```
Ruijie#show ip route normal

Codes: C - Connected, L - Local, S - Static
        R - RIP, O - OSPF, B - BGP, I - IS-IS, V - Overflow route
        N1 - OSPF NSSA external type 1, N2 - OSPF NSSA external type 2
        E1 - OSPF external type 1, E2 - OSPF external type 2
        SU - IS-IS summary, L1 - IS-IS level-1, L2 - IS-IS level-2
        IA - Inter area, * - candidate default
Gateway of last resort is no set
S    20.0.0.0/8 is directly connected, VLAN 1
S    22.0.0.0/8 [1/0] via 20.0.0.1
O E2 30.0.0.0/8 [110/20] via 192.1.1.1, 00:00:06, VLAN 1
R    40.0.0.0/8 [120/20] via 192.1.1.2, 00:00:23, VLAN 1
B    50.0.0.0/8 [120/0] via 192.1.1.3, 00:00:41
C    192.1.1.0/24 is directly connected, VLAN 1
C    192.1.1.254/32 is local host
```

```
Ruijie#show ip route ecmp

Codes: C - Connected, L - Local, S - Static
        R - RIP, O - OSPF, B - BGP, I - IS-IS, V - Overflow route
        N1 - OSPF NSSA external type 1, N2 - OSPF NSSA external type 2
        E1 - OSPF external type 1, E2 - OSPF external type 2
```

```

SU - IS-IS summary, L1 - IS-IS level-1, L2 - IS-IS level-2
IA - Inter area, * - candidate default
Gateway of last resort is 192.168.1.2 to network 0.0.0.0
S* 0.0.0.0/0 [1/0] via 192.168.1.2
    [1/0] via 192.168.2.2
O IA 192.168.10.0/24 [110/1] via 35.1.10.2, 00:38:26, VLAN 1
    [110/1] via 35.1.30.2, 00:38:26, VLAN 3

```

```
Ruijie#show ip route fast-reroute
```

```

Codes: C - Connected, L - Local, S - Static
       R - RIP, O - OSPF, B - BGP, I - IS-IS, V - Overflow route
       N1 - OSPF NSSA external type 1, N2 - OSPF NSSA external type 2
       E1 - OSPF external type 1, E2 - OSPF external type 2
       SU - IS-IS summary, L1 - IS-IS level-1, L2 - IS-IS level-2
       IA - Inter area, * - candidate default
Status codes: m - main entry, b - backup entry, a - active entry


Gateway of last resort is 192.168.1.2 to network 0.0.0.0
S* 0.0.0.0/0 [ma] via 192.168.1.2
    [b] via 192.168.2.2
O IA 192.168.10.0/24 [m] via 35.1.10.2, 00:38:26, VLAN 1
    [ba] via 35.1.30.2, 00:38:26, VLAN 3

```

```

Ruijie# show ip route fast-reroute 30.0.0.0
Routing entry for 30.0.0.0/8
Distance 110, metric 20
Routing Descriptor Blocks:
[m] 192.1.1.1, 00:01:11 ago, via VLAN 1, generated by OSPF, extern 2
[ba]192.1.1.1, 00:01:11 ago, via VLAN 1, generated by OSPF, extern 2

```

 XS-S1960-H series switch does not support ISIS or BGP. The configuration example is only for reference.

### 3.14 show ip route summary

Use this command to display the statistical information about one routing table.

#### **show ip route summary**

Use this command to display the statistical information about all routing tables.

#### **show ip route summary all**

Parameter	Parameter	Description
-----------	-----------	-------------

Description	N/A	N/A
Defaults	N/A	
Command Mode	Privileged EXEC mode	
Usage guideline	N/A	

The following example displays the statistics of the global routing table.

```
Ruijie# show ip route summary
Codes: NORMAL - Normal route ECMP - ECMP route FRR - Fast-Reroute route

Memory: 2000 bytes
Entries: 22,based on route prefixes
          NORMAL ECMP FRR TOTAL
Connected 3 0 0 3
Static 2 1 1 4
RIP 1 2 1 4
OSPF 2 1 1 4
ISIS 1 2 0 3
BGP 2 1 1 4
TOTAL 11 7 4 22
```

The following example displays the statistics of all routing tables.

```
Ruijie# show ip route summary all
Codes: NORMAL - Normal route ECMP - ECMP route FRR - Fast-Reroute route

IP routing table count:2
Total
Memory: 4000 bytes
Entries: 44,based on route prefixes
          NORMAL ECMP FRR TOTAL
Connected 6 0 0 6
Static 4 2 2 8
RIP 2 4 2 8
OSPF 4 2 2 8
ISIS 2 4 0 6
BGP 4 2 2 8
TOTAL 22 14 8 44


Global
Memory: 2000 bytes
Entries: 22,based on route prefixes
          NORMAL ECMP FRR TOTAL
Connected 3 0 0 3
Static 2 1 1 4
RIP 1 2 1 4
OSPF 2 1 1 4
ISIS 1 2 0 3
BGP 2 1 1 4
TOTAL 11 7 4 22
```

## Examples

```

VRF1
Memory: 2000 bytes
  Entries: 22, based on route prefixes
  Entries: 29, based on route nexthops
NORMAL
ECMP FRR TOTAL
  Connected 3 0 0 3
  Static 2 1 1 4
  RIP 1 2 1 4
  OSPF 2 1 1 4
  ISIS 1 2 0 3
  BGP 2 1 1 4
  TOTAL 11 7 4 22

```

 XS-S1960-H series switch does not support ISIS or BGP. The configuration example is only for reference.

Field	Description
NORMAL	Type of the table entries. Value: NORMAL: common routes (not ECMP or FRR); ECMP: equivalent route; FRR: fast reroute; TOTAL: total
Memory	Memory occupied by the table.
Entries	Number of entries (based on prefix, not next-hop)
Connected	Protocol type. Value: Connected: direct connection; Static: static; RIP: RIP; OSPF: OSPF; ISIS: ISIS; BGP: BGP; TOTAL: total

### 3.15 show ipv6 redirects

Use this command to display the IPv6 default gateway IP address.

**show ipv6 redirects**

Parameter	Parameter	Description
Description	N/A	N/A

**Defaults** N/A



**Command Mode** Privileged EXEC mode

**Usage Guide** N/A

The following example displays the default gateway IPv6 address.

```
Ruijie# show ipv6 redirects
Default Gateway: 10::1
```

**Examples**

Field	Description
Default Gateway	IPv6 address of the default gateway

**Related Commands**

Command	Description
N/A	N/A

**Platform**

**Description** N/A

## 3.16 show ipv6 route

Use the command to display the configuration of the IPv6 routing table.

**show ipv6 route** [[ *ipv6-prefix / prefix-length* [ **longer-prefixes** ] | *protocol* [ *process-id* ] | **weight** ] ]

**Parameter Description**

Parameter	Description
<i>ipv6-prefix/prefix-length</i>	(Optional) Specifies a prefix for route's IPv6 address.
<b>longer-prefixes</b>	(Optional) Displays the route with an IPv6 address prefix mostly matched.
<i>protocol</i>	((Optional) Displays the route information of specific protocol.
<i>process-id</i>	(Optional) Specifies a route process ID.
<b>weight</b>	(Optional) Displays the non-default-weight routes only.

**Defaults** All routes are displayed by default.

**Command Mode** Privileged EXEC mode

**Usage Guide** Use this command to display route information.

**Examples** N/A

**Related**

Command	Description
---------	-------------

<b>Commands</b>	<b>ipv6 route</b>	Configures the IPv6 static route.
-----------------	-------------------	-----------------------------------

**Platform****Description** N/A

## 3.17 show ipv6 route summary

Use this command to display the statistics of the IPv6 routing table of a specified VRF.

**show ipv6 route summary**

Use this command to display statistics of all IPv6 routing tables.

**show ipv6 route summary all**

<b>Parameter</b>	<b>Parameter</b>	<b>Description</b>
<b>Description</b>	N/A	N/A

**Command****Mode** Privileged EXEC mode**Usage Guide** N/A


The following example displays statistics of IPv6 routing table of the global VRF.

```
Ruijie#show ipv6 route summary
IPv6 routing table name is - Default(0) global scope - 5 entries
IPv6 routing table default maximum-paths is 32
Local                2
Connected            3
Static                0
PIP                  0
OSPF                  0
BGP                   0
-----
Total                 5
```

**Examples**

The following example displays t statistics of all IPv6 routing tables.

```
Ruijie#show ipv6 route summary
IPv6 routing table name is - Default(0) global scope - 5 entries
IPv6 routing table default maximum-paths is 32
Local                2
Connected            3
Static                0
PIP                  0
OSPF                  0
BGP                   0
-----
Total                 5
```

 XS-S1960-H series switch does not support ISIS or BGP. The configuration example is only for reference.

Field	Description
Memory	The memory size occupied by the current routing table.
Entries	The entries in the current routing table (based on the entry prefix instead of the next hop entry.)
Connected	Describes the protocol type of the entry. The field can be; Connected: Connected route entry. Static: Static route entry. RIP: RIP route entry. OSPF: OSPF route entry. ISIS: ISIS route entry. BGP: BGP route entry. TOTAL: Total number of all protocol entries.
IPv6 routing table count	The number of the routing tables.
Global	The name of the current routing table. The field can be: Global : Global (The default VRF) VRF1: VRF name. TOTAL: All VRF routing table summaries.

**Related  
Commands**

Command	Description
N/A	N/A

**Platform  
Description**

N/A

## 4 Protocol-independent Configuration Commands

### 4.1 accept-lifetime

Use this command in the encryption key configuration mode to specify the lifetime of an encryption key in its receiving direction. Use the no form of this command to restore the default value.

**accept-lifetime** *start-time* {**infinite** | *end-time* | **duration** *seconds*}

**no accept-lifetime**

Parameter	Parameter	Description
description	<i>start-time</i>	Start time of the lifetime. The syntax is as follows: <i>hh:mm:ss month date year</i> <i>hh:mm:ss date month year</i> <ul style="list-style-type: none"><li>● hh—hour</li><li>● mm—minute</li><li>● ss—second</li><li>● month—month</li><li>● date—day</li><li>● year—year</li></ul> The default start time is Jun 1, 1993, which is also the earliest start time available.
	<b>infinite</b>	Indicates that the encryption key is valid for ever.
	<i>end-time</i>	<i>End time of the encryption key. It must be later than the start time.</i>
	<b>duration</b> <i>seconds</i>	Duration of the encryption key after the start time. The value ranges from 1 to 2147483646.

**Default** infinite

**Command mode** Encryption key configuration mode

**Usage guideline** Use this command to specify the lifetime of an encryption key in its receiving direction.

**Examples** The following example configures the lifetime of key 1.

```
Ruijie(config)#key chain kc

Ruijie(config-keychain)#key 1

Ruijie(config-keychain-key)#key-string Hello

Ruijie(config-keychain-key)#accept-lifetime 16:30:00 Oct 1 2010 duration 43200
```

Related command	Command	Description
	-	-

Platform  
description

-

## 4.2 ip as-path access-list

Use this command to configure an autonomous system (AS) path filter using a regular expression. Use the **no** form of this command to remove the AS path filter using a regular expression.

**ip as-path access-list** *path-list-num* { **permit** | **deny** } *regular-expression*

**no ip as-path access-list** *path-list-num* [ { **permit** | **deny** } *regular-expression* ]

Parameter description	Parameter	Description
	<i>path-list-num</i>	Specifies the AS-path access-list number. The range is from 1 to 500.
	<b>permit</b>	Permits advertisement based on matching conditions.
	<b>deny</b>	Denies advertisement based on matching conditions.
	<i>regular-expression</i>	Regular expression that defines the AS-path filter. The expression length range is from 1 to 255 characters.

**Default** By default, no AS path filter using a regular expression is configured.

**Command mode** Global configuration mode

**Usage guideline** N/A

**Examples** The following example configures an AS path filter matching the path which contains AS number 123 only.

```
Ruijie(config)# ip as-path access-list 105 deny ^123$
```

Related command	Command	Description
	-	-

Platform  
description

-

## 4.3 ip community-list

Use this command to define a standard or expanded community list and control access to it. Use the **no** form of this command to remove the setting.

**ip community-list** { *community-list-number* | **standard** *community-list-name* } { **permit** | **deny** }  
[ { *community-list-number* | **internet** | **local-AS** } ]

**ip community-list** { *community-list-number* | **expanded** *community-list-name* } { **permit** | **deny** }  
[ *regular-expression* ]

**no ip community-list** { { **standard** | **expanded** } *community-list-name* | *community-list-number* }

Parameter	Description
<i>community-list-name</i>	Name of the community list.
standard	Indicates standard community list numbered in 1 to 99.
expanded	Indicates expanded community list numbered in 100 to 199.
permit	Permits access to the community list.
deny	Denies access to the community list.
<b>Parameter description</b>  <i>community-number</i>	Community number in the form of AA:NN(AS number/2-byte numerical) in the range of 1 to 255 characters. It may also be one of the following value:  Internet: Indicates the Internet community. All paths belong to this community.  no-export: Indicates that this path will not be advertised to any EBGp peers.  no-advertise: Indicates that this path will not be advertised to any BGP peers.  local-as: Indicates that this path will not be advertised to out of the AS. When AS confederation is configured, this path will not be advertised to other ASs or sub-ASs.
<b>internet</b>	Internet community,
<b>local-AS</b>	Local-AS community.

**Default configuration** None

**Command mode** Global configuration mode.

**Usage guidelines** Each community list contains up to 32 community values, including **internet** and **local-AS**.

### Examples

```
Ruijie(config)# ip community-list standard 1 deny 100.20.200.20
Ruijie(config)# ip community-list standard 1 permit internet
```

Related commands	Command	Description
	match community	Match the community list.
	set community-list delete	Remove the community value of the BGP path according to the community list.
	show ip community-list	Show the community list information.

## 4.4 ip extcommunity-list

Use this command to create an extcommunity list and add an entry to the list. Use the **no** form of this command to remove the setting.

**ip extcommunity-list** {*expanded-list* | **expanded** *list-name*} { **permit** | **deny** } [ *regular-expression* ]

**ip extcommunity-list** {*standard-list* | **standard** *list-name*} { **permit** | **deny** } [ **rt** *value* ] [ **soo** *value* ]

**no ip extcommunity-list** {*expanded-list* | **expanded** *list-name* | *standard-list* | **standard** *list-name*}

**ip extcommunity-list** {*expanded-list* | **expanded** *list-name* | *standard-list* | **standard** *list-name*}

**no ip extcommunity-list** {*expanded-list* | **expanded** *list-name* | *standard-list* | **standard** *list-name*}

Parameter description	Parameter	Description
	<i>expand-list</i>	Indicates an extended extcommunity list, ranging from 100 to 199. One extcommunity list may contain multiple rules.
	<i>standard-list</i>	Indicates a standard extcommunity list, ranging from 1 to 99. One extcommunity list may contain multiple rules.
	<b>expanded</b> <i>list-name</i>	Indicates the name of an extended extcommunity, comprising not more than 32 characters. When using this parameter, you enter the extcommunity list configuration mode.
	<b>standard</b> <i>list-name</i>	Indicates the name of a standard extcommunity list, comprising not more than 32 characters. When using this parameter, you enter the extcommunity list configuration mode.
	<b>permit</b>	Defines an extcommunity rule for permitting.
	<b>deny</b>	Defines an extcommunity rule for denying.
	<i>regular-expression</i>	(optional) Defines a matching template that is used to match an extcommunity.
	<i>sequence-number</i>	(Optional) Defines the sequence number of a rule, ranging from 1 to 2,147,483,647. If no sequence number is specified, the sequence number automatically increases by 10 when a rule is added by default. The initial number is 10.
	<b>rt</b>	(Optional) Sets the RT attribute value. This command can be used only for the standard extcommunity configuration, but not for the extended extcommunity configuration.
	<b>soo</b>	(Optional) Sets the SOO attribute value. This command can be used only for the standard extcommunity configuration, but not for the extended extcommunity configuration.
	<i>value</i>	Indicates the value of an extended community

	(extend_community_value).
<b>Default</b>	It is disabled by default.
<b>Command mode</b>	Global configuration mode and ip extcommunity-list configuration mode.
<b>Usage guidelines</b>	<p>This command is used to define the extcommunity list.</p> <p>1.The following example defines an ip extcommunity-list.</p> <pre>Ruijie(config)# ip extcommunity-list 1 permit rt 100 : 1 Ruijie(config)# ip extcommunity-list standard aaa permit rt 100 : 2 Ruijie(config)# ip extcommunity-list expanded ext1 permit 200 : [0~9][0~9]</pre>
<b>Examples</b>	<p>2. The following example displays how to use ip extcommunity.</p> <pre>Ruijie(config)# route-map rt_in_filter Ruijie(config-route-map)# match extcommunity 1 Ruijie(config-route-map)# match extcommunity ext1 Ruijie(config)# router bgp 100 Ruijie(config-router)# address-family vpn Ruijie(config-router-af)#neighbor 3.3.3.3 send-community extended Ruijie(config-router-af)#neighbor 3.3.3.3 route-map rt_in_filter in</pre>

## 4.5 ip prefix-list

Use this command to create a prefix list or add an entry to the prefix list. Use the **no** form of this command to remove the prefix list or an entry.

**ip prefix-list** *prefix-list-name* [ **seq** *seq-number* ] { **deny** | **permit** } *ip-prefix* [**ge** *minimum-prefix-length*][ **le** *maximum-prefix-length*]

**no ip prefix-list** *prefix-list-name* [ **seq** *seq-number* ] { **deny** | **permit** } *ip-prefix* [**ge** *minimum-prefix-length*][ **le** *maximum-prefix-length*]

Parameter	Description
<i>prefix-list-name</i>	Name of the prefix list
<i>seq-number</i>	Sequence number of an entry in the range of 1 to 2147483647. When you execute this command to add an entry without a sequence number, the system allocates a default sequence number for the entry. The default sequence number of the first entry is 5. Every subsequential entry without a sequence number uses the time of 5 larger than the previous sequence number as the default sequence number.



deny	Deny the route matching the prefix list.
permit	Permit the route matching the prefix list.
<i>ip-prefix</i>	Network address and mask. Network address can be any valid IP address and the mask length is in the range of 0 to 32.
<i>minimum-prefix-length</i>	(Optional) Minimum length of the prefix (the starting length) Note: “ge” indicates the operation of “larger than” and “equivalent to”.
<i>maximum-prefix-length</i>	(Optional) Maximum length of the prefix (the ending length) Note: “le” indicates the operation of “less than” and “equivalent to”.

**Default**

**configuration** None

**Command mode**

Global configuration mode.

**Usage guidelines**

The ip prefix-list command configures the prefix list, with the permit or deny keyword to determine the action in case of matching.

You can execute this command to define an exact match, or use “ge” or “le” to define a range match for a prefix for flexible configuration. “ge” indicates the range of minimum-prefix-length to 32; “le” indicates the range of the mask length of the IP prefix to maximum-prefix-length; “ge” and “le” indicates the range of minimum-prefix-length to maximum-prefix-length, namely, mask length of IP prefix < minimum-prefix-length < maximum-prefix-length <=32.

**Examples**

The following example filters the RIP routes the OSPF redistributes by the destination IP address following the rule defined in the associated IP prefix list, for example, redistribute the routes whose destination IP address is in the range 201.1.1.0/24.

```
Ruijie# configure terminal
Ruijie(config)# ip prefix-list pre1 permit 201.1.1.0/24
Ruijie(config)# router ospf
Ruijie(config-router)# distribute-list prefix pre1 out rip
Ruijie(config-router)# end
```

## 4.6 ip prefix-list description

Use this command to add the description of a prefix list. Use the **no** form of this command to delete the description.

**ip prefix-list** *prefix-list-name* **description** *description-text*

**no ip prefix-list** *prefix-list-name* **description**

**Parameter**

Parameter	Description
-----------	-------------

<b>description</b>	<i>prefix-list-name</i>	Name of the prefix list
	<i>description-text</i>	Description of the prefix list

**Default**

**configuration** No description is added for a prefix list, by default.

**Command**

**mode** Global configuration mode

The example below adds the description for the prefix list:

**Examples**

```
Ruijie# configure terminal
Ruijie(config)# ip prefix-list pre description Deny routes from Net-A
```

## 4.7 ip prefix-list sequence-number

Use this command to enable sort function for a prefix list. Use the **no** form of this command to disable the sort function.

**ip prefix-list sequence-number**

**no ip prefix-list sequence-number**

**Parameter**  
**description** Disabled

**Default**

**configuration** No sequence number is added for a prefix list, by default.

**Command**

**mode** Global configuration mode

The example below adds a sequence number for the prefix list:

**Examples**

```
Ruijie# configure terminal
Ruijie(config)# ip prefix-list pre description deny routes from Net-A
```

<b>Related</b> <b>commands</b>	<b>Command</b>	<b>Description</b>
	ip prefix-list	Configure the prefix list.

**Platform**

**description** N/A

## 4.8 ipv6 prefix-list

Use this command to create an IPv6 prefix list or add an entry in the prefix list. Use the **no** form of this command to delete an IPv6 prefix list or an entry in the prefix list.

**ipv6 prefix-list** *prefix-list-name* [**seq** *seq-number*] { **deny** | **permit** } *ipv6-prefix* [**ge** *minimum-prefix-length*][**le** *maximum-prefix-length*]

**no ipv6 prefix-list** *prefix-list-name* [**seq** *seq-number*] { **deny** | **permit** } *ipv6-prefix* [**ge** *minimum-prefix-length*][**le** *maximum-prefix-length*]

### Parameter description

Parameter	Description
<i>prefix-list-name</i>	Name of the prefix list
<i>seq-number</i>	Sequence number of an entry in the prefix list. Its range is 1 to 4294967294. If the sequence number is not specified in this command, the system will allocate a default one for the entry. The default sequence number of the first entry is 5, and that of each subsequent one is the product of adding 5 to the sequence number of the proceeding entry.
permit	Permit the access to the matching result.
deny	Deny the access to the matching result.
<i>ipv6-prefix</i>	Network address and its mask. The network address can be any valid IP address. The mask can be 0 to 32 characters.
<i>minimum-prefix-length</i>	(Optional) Minimum length of the prefix (the starting length) Note: "ge" indicates the operation of "larger than" and "equivalent to".
<i>maximum-prefix-length</i>	(Optional) Maximum length of the prefix (the ending length) Note: "le" indicates the operation of "less than" and "equivalent to".

### Default

**configuration** No prefix list is created.

### Command

**mode** Global configuration mode

### Usage guideline

The ipv6 prefix-list command configures the prefix list, with the permit or deny keyword to determine the action in case of matching.

You can execute this command to define an exact match, or use "ge" or "le" to define a range match for a prefix for flexible configuration. "ge" indicates the range of minimum-prefix-length to 128; "le" indicates the range of the mask length of the IP prefix to maximum-prefix-length; "ge" and "le" indicates the range of minimum-prefix-length to maximum-prefix-length, namely, ipv6-prefix mask length < minimum-prefix-length < maximum-prefix-length <= 128

### Examples

The following example filters the RIP routes the OSPF redistributes by the destination IP address following the rule defined in the associated IP prefix list, for example, redistribute the routes whose destination IP address is in the range 2222::/64.

```
Ruijie# configure terminal
```

```
Ruijie(config)# ipv6 prefix-list prel permit 2222::64
Ruijie(config)# ipv6 router ospf
Ruijie(config-router)# distribute-list prefix pre out rip
Ruijie(config-router)# end
```

## 4.9 ipv6 prefix-list description

Use this command to add the description of an IPv6 prefix list. Use the **no** form of this command to delete the description.

**ipv6 prefix-list** *prefix-lis-name* **description** *description-text*

**no ipv6 prefix-list** *prefix-lis-name* **description**

Parameter description	Parameter	Description
	<i>prefix-lis-name</i>	Name of the ipv6 prefix list
	<i>description-text</i>	Description of the ipv6 prefix list

### Default

**configuration** No description is added for an IPv6 prefix list, by default.

### Command

**mode** Global configuration mode

### Examples

The example below adds the description for the prefix list:

```
Ruijie# configure terminal
Ruijie(config)# ipv6 prefix-list pre description Deny routes from Net-A
```

Related commands	Command	Description
	ipv6 prefix-list	Configure the IPv6 prefix list.

## 4.10 ipv6 prefix-list sequence-number

Use this command to enable the sorting function for an IPv6 prefix list. Use the **no** form of this command to remove the settings.

**ipv6 prefix-list** **sequence-number**

**no ipv6 prefix-list** **sequence-number**

**Parameter description**

Disabled.

### Default

No sequence number is added for a prefix list, by default.

## configuration

### Command

**mode** Global configuration mode

### Examples

The example below adds a sequence number for the prefix list:

```
Ruijie# configure terminal
Ruijie(config)# ipv6 prefix-list pre description Deny routes from Net-A
```

Related  
commands

Command	Description
ipv6 prefix-list	Configure the IPv6 prefix list.

## 4.11 key

Use this command to define an encryption key and enter the encryption key chain configuration mode.

Use the no form of this command to delete it.

**key** *key-id*

**no key** *key-id*

Parameter  
description

Parameter	Description
<i>key-id</i>	Key ID, ranging from 0 to 2147483647.

**Default** No encryption key is configured.

**Command  
mode**

Encryption key chain configuration mode.

**Usage  
guideline**

Use this command to define an encryption key.

### Examples

The following example configures encryption key chain ripkeys and key 1.

```
Ruijie(config)# key chain ripkeys
Ruijie(config-keychain)# key 1
```

Related  
command

Command	Description
-	-

**Platform  
description**

-

## 4.12 key chain

Use this command to define a key chain and enter the key chain configuration mode. Use the no form of this command to delete it.

**key chain** *key-chain-name*

**no key chain** *key-chain-name*

Parameter	Parameter	Description
description	<i>key-chain-name</i>	Key chain name.

**Default** No key chain is configured.

**Command mode** Global configuration mode.

**Usage guideline**  For a key chain to take effect, you need to configure at least one key.

**Examples** The following example configures key chain ripkeys and enters the key chain configuration mode.

```
Ruijie(config)# key chain ripkeys
```

Related command	Command	Description
	-	-

**Platform description** -

## 4.13 key-string

Use this command to specify a key string. Use the no form of this command to delete it.

**key-string** [0|7] *text*

**no key-string**

Parameter	Parameter	Description
description	<b>0</b>	Use plaintext.
	<b>7</b>	Use encryption.
	<i>text</i>	Authentication string.

**Default** No key string is configured.

**Command mode** Encryption key configuration mode.

**Usage guideline** Use this command to specify a key string.

**Examples** The following example configures key chain ripkeys, key 1 and the key string abc:

```
Ruijie(config)# key chain ripkeys
Ruijie(config-keychain)# key 1
Ruijie(config-keychain-key)#key-string abc
```

Related command	Command	Description
	-	-

**Platform description** -

## 4.14 match community

Use this command to redistribute the routes matching the Community attribute permitted by the ACL in the route map configuration mode. Use the **no** form of this command to remove the setting.

**match community** { *community-list-number* | *community-list-name* } [**exact-match**]

[ { *community-list-number* | *community-list-name* } [**exact-match**] ...]

**no match community** { *community-list-number* | *community-list-name* } [**exact-match**]

[ { *community-list-number* | *community-list-name* } [**exact-match**] ...]

Parameter description	Parameter	Description
	<i>community-list-number</i>	Number of the standard community list in the range 1 to 99. Number of the extended community list in the range of 100 to 199
	<i>communitys-list-name</i>	Name of the community list in the range of less than 80 characters
	<b>exact-match</b>	Match the community list exactly.

**Default configuration** None.

**Command mode** Route map configuration mode.

The match community can be followed by more than one community list number or name, but the total of community lists and names should not be greater than 6.

**Usage guidelines** Each exact-match applies to only the previous list, not all the lists.

One or more match or set commands can be executed to configure one route map. If the match command is not used, all the routes will be matched. If the set command is not used, no operation will be performed.

**Examples**

```
Ruijie(config)# ip community-list 1 permit 100:2 100:30
```

```
Ruijie(config)# route-map set_lopref
Ruijie(config-route-map)# match community 1 exact-match
Ruijie(config-route-map)# set local-preference 20
```

#### Related commands

Command	Description
<b>match as-path</b>	Match the AS_PATH attribute.
<b>match metric</b>	Match the metric.
<b>match origin</b>	Match the source.
<b>set as-path prepend</b>	Set the AS_PATH attribute.
<b>set metric</b>	Set the metric.
<b>set metric-type</b>	Set the metric type.

## 4.15 match interface

Use **match interface** command to redistribute the routes whose next hop is the specified interface.

Use the **no** form of this command to remove the setting.

**match interface** *interface-type interface-number* [*...interface-type interface-number*]

**no match interface** [*interface-type interface-number* [*...interface-type interface-number*]]

#### Parameter description

Parameter	Description
<i>interface-type</i>	Interface type
<i>interface-number</i>	Interface number

#### Default

**configuration** None.

#### Command

**mode** Route map configuration mode.

This command can be followed by multiple interfaces.

You can redistribute the routes from one routing process to another routing process. For example, you can redistribute the route in the OSPF routing domain and then advertise it to the RIP routing domain, and vice versa. The mutual route redistribution can be implemented between all the IP routing protocols.

#### Usage

##### guidelines

For route redistribution, route maps are usually used to control the mutual route redistribution between two routing domains.

One or more match or set commands can be executed to configure a route map. If the match command is not used, all the routes will be matched. If the set command is not used, no operation will be performed.

#### Examples

The route map can be configured very flexibly for route redistribution and policy-based routing. No matter how the route map is used, the configuration principle is the same, except that different command sets are used. Even if it is used on the route redistribution, different routing protocols can



use different commands with the route map.

The following example redistributes the RIP route with the next hop of fastethernet 0/0 in the OSPF routing protocol.

```
router ospf
redistribute rip subnets route-map redrip
network 192.168.12.0 0.0.0.255 area 0

route-map redrip permit 10
match interface fastethernet 0/0
```

#### Related commands

Command	Description
<b>match ip address</b>	Match the address in the access list.
<b>match ip next-hop</b>	Match the next-hop IP address in the access list.
<b>match ip route-source</b>	Match the source IP address in the access list.
<b>match metric</b>	Match the metric.
<b>match route-type</b>	Match the route type.
<b>match tag</b>	Match the tag.
<b>set metric</b>	Set the metric.
<b>set metric-type</b>	Set the metric type.
<b>set tag</b>	Set the tag.

## 4.16 match ip address

Use **match ip address** command to redistribute the routes matching the IP address permitted by the ACL or the prefix list. Use the **no** form of this command to remove the setting.

**match ip address** {*access-list-number* [*access-list-number...* | *access-list-name...*] | *access-list-name* [*access-list-number...* | *access-list-name*] | **prefix-list** *prefix-list-name* [*prefix-list-name...*]}

**no match ip address** [*access-list-number* [*access-list-number...* | *access-list-name...*] | *access-list-name* [*access-list-number...* | *access-list-name*] | **prefix-list** *prefix-list-name* [*prefix-list-name...*]]

#### Parameter description

Parameter	Description
<i>access-list-number</i>	Number of the access list
<i>access-list-name</i>	Name of the access list
<i>prefix-list prefix-list-name</i>	Specify the prefix list to match.

**Default  
configuration** None.

**Command  
mode** Route map configuration mode.

**Usage** Multiple access list numbers or names may follow match ip address.

**guidelines**

You can redistribute the routes from one routing process to another routing process. For example, you can redistribute the route in the OSPF routing domain and then advertise it to the RIP routing domain, and vice versa. The mutual route redistribution can be implemented between all the IP routing protocols.

For route redistribution, route maps are usually used to control the mutual route redistribution between two routing domains.

One or more match or set commands can be executed to configure a route map. If the match command is not used, all the routes will be matched. If the set command is not used, no operation will be performed.

The route map can be configured very flexibly for route redistribution and policy-based routing. No matter how the route map is used, the configuration principle is the same, except that different command sets are used. Even if it is used on the route redistribution, different routing protocols can use different commands with the route map.

The following example enables the OSPF routing protocol to redistribute RIP routes that match access list 10, with the route type being type-1 external type and the default metric being 40.

**Examples**

```
router ospf
 redistribute rip subnets route-map redrip
 network 192.168.12.0 0.0.0.255 area 0

access-list 10 permit 200.168.23.0

route-map redrip permit 10
 match ip address 10
 set metric 40
 set metric-type type-1!
```

**Related commands**

Command	Description
<b>access-list</b>	Set the access list.
<b>match interface</b>	Match the next-hop interface of the route.
<b>match ip next-hop</b>	Match the next-hop address in the access list.
<b>match ip route-source</b>	Match the route source address in the access list.
<b>match metric</b>	Match the metric.
<b>match route-type</b>	Match the route type.
<b>match tag</b>	Match the tag.
<b>set metric</b>	Set the metric.
<b>set metric-type</b>	Set the metric type.
<b>set tag</b>	Set the tag.

## 4.17 match ip next-hop

Use **match ip next-hop** command to redistribute the routes whose next-hop IP address matches the access list or the prefix list. Use the **no** form of this command to remove the setting.

**match ip next-hop** {*access-list-number* [*access-list-number...* | *access-list-name...*] | *access-list-name* [*access-list-number...* | *access-list-name*]} | **prefix-list** *prefix-list-name* [*prefix-list-name...*]}  
**no match ip next-hop** [*access-list-number* [*access-list-number...* | *access-list-name...*] | *access-list-name* [*access-list-number...* | *access-list-name*]} | **prefix-list** *prefix-list-name* [*prefix-list-name...*]]

	Parameter	Description
Parameter description	<i>access-list-number</i>	Number of the access list
	<i>access-list-name</i>	Name of the access list
	<i>prefix-list prefix-list-name</i>	Specify the prefix list to match.

**Default configuration** None.

**Command mode** Route map configuration mode.

Multiple access list numbers or names may follow match ip next-hop.

You can redistribute the routes from one routing process to another routing process. For example, you can redistribute the route in the OSPF routing domain and then advertise it to the RIP routing domain, and vice versa. The mutual route redistribution can be implemented between all the IP routing protocols.

#### Usage

#### guidelines

For route redistribution, route maps are usually used to control the mutual route redistribution between two routing domains.

One or more match or set commands can be executed to configure a route map. If the match command is not used, all the routes will be matched. If the set command is not used, no operation will be performed.

In the example below, the OSPF routing protocol redistributes the RIP routes. As long as the next hop address of the RIP route matches the access list 10 or 20, the OSPF allows for redistribution.

#### Examples

```
Ruijie(config)# router ospf
Ruijie(config-router)# redistribute rip subnets route-map redrip
Ruijie(config-router)# network 192.168.12.0 0.0.0.255 area 0
Ruijie(config-router)# exit
Ruijie(config)# access-list 10 permit host 192.168.10.1
Ruijie(config)# access-list 20 permit host 172.16.20.1
Ruijie(config)# route-map redrip permit 10
Ruijie(config-route-map)# match ip next-hop 10 20
```

#### Related commands

Command	Description
<b>access-list</b>	Set the access list.
<b>match ip address</b>	Match the IP address in the access list.
<b>match interface</b>	Match the next-hop interface of the route.
<b>match ip route-source</b>	Match the route source address in the access list.

<b>match metric</b>	Match the metric.
<b>match route-type</b>	Match the route type.
<b>match tag</b>	Match the tag.
<b>set metric</b>	Set the metric.
<b>set metric-type</b>	Set the metric type.
<b>set tag</b>	Set the tag.

## 4.18 match ip route-source

Use **match ip route-source** command to redistribute the routes whose source IP address matches the access list. Use the **no** form of this command to remove the setting.

**match ip route-source** {*access-list-number* [*access-list-number...* | *access-list-name...*]  
 [*access-list-name* [*access-list-number...* | *access-list-name*] | **prefix-list** *prefix-list-name*  
 [*prefix-list-name...*]}]

**no match ip route-source** [*access-list-number* [*access-list-number...* | *access-list-name...*]  
 [*access-list-name* [*access-list-number...* | *access-list-name*] | **prefix-list** *prefix-list-name*  
 [*prefix-list-name...*]]]

Parameter description	Parameter	Description
	<i>access-list-number</i>	Number of the access list
	<i>access-list-name</i>	Name of the access list
	<i>prefix-list prefix-list-name</i>	Specify the prefix list to match.

**Default  
configuration** None.

**Command  
mode** Route map configuration mode.

**Usage  
guidelines** Multiple access list numbers may follow match ip route-source.  
 You can redistribute the routes from one routing process to another routing process. For example, you can redistribute the route in the OSPF routing domain and then advertise it to the RIP routing domain, and vice versa. The mutual route redistribution can be implemented between all the IP routing protocols.  
 For route redistribution, route maps are usually used to control the mutual route redistribution between two routing domains.  
 One or more match or set commands can be executed to configure a route map. If the match command is not used, all the routes will be matched. If the set command is not used, no operation will be performed.

**Examples** In the example below, the OSPF routing protocol redistributes the RIP routes. As long as the source IP address of the RIP route matches the access list 5, the OSPF allows for redistribution.

```

router ospf
 redistribute rip subnets route-map redrip
 network 192.168.12.0 0.0.0.255 area 0

access-list 5 permit 192.168.100.1

route-map redrip permit 10
 match ip route-source

```

#### Related commands

Command	Description
<b>access-list</b>	Set the access list.
<b>match ip address</b>	Match the IP address in the access list.
<b>match interface</b>	Match the next-hop interface of the route.
<b>match ip next-hop</b>	Match the next-hop IP address in the access list.
<b>match metric</b>	Match the metric.
<b>match route-type</b>	Match the route type.
<b>match tag</b>	Match the tag.
<b>set metric</b>	Set the metric.
<b>set metric-type</b>	Set the metric type.
<b>set tag</b>	Set the tag.

## 4.19 match ipv6 address

Use this command to redistribute the network routes permitted in the IPv6 access list or the IPv6 prefix list. Use the **no** form of this command to delete the setting.

**match ipv6 address** { *access-list-name* } / **prefix-list** *prefix-list-name* }

**no match ipv6 address**

#### Parameter description

Parameter	Description
<i>access-list-name</i>	Name of the access list.
<i>prefix-list prefix-list-name</i>	Specify the IPv6 prefix list to match.

#### Default

**configuration** None

#### Command

**mode** Route map configuration mode

#### Usage guideline

You can redistribute the routing information from one routing process to another routing process. For example, you can redistribute the route in the OSPF routing domain and then advertise it to the RIP routing domain, and vice versa. The mutual route redistribution can be implemented between all the IP routing protocols.

In the route redistribution, route maps are usually used to control the mutual route redistribution

between two routing domains.

In configuring one route map, one or more match or set commands can be executed. If the match command is not used, all the routes will be matched. If the set command is not used, no operation will be performed.

The route map can be configured very flexibly to be used for route redistribution and policy-based routing. No matter how the route map is used, the configuration principle is the same, except that different command sets are used. Even if it is used on the route redistribution, different routing protocols can use different commands with the route map.

The following example enables the OSPF routing protocol to redistribute RIP routes that match access list v6acl, with the default metric being 30.

#### Examples

```
ipv6 router ospf
 redistribute rip subnets route-map redrip
ipv6 access-list v6acl
10 permit ipv6 2620::64 any

route-map redrip permit 10
 match ipv6 address v6acl
 set metric 30
```

#### Related commands

Command	Description
<b>ipv6 access-list</b>	Set the IPV6 access list.
<b>match interface</b>	Match the next-hop interface of the route.
<b>match ipv6 next-hop</b>	Match the next-hop address in the IPv6 access list.
<b>match ipv6 route-source</b>	Match the route source address in the IPv6 access list.
<b>match metric</b>	Match the route metric.
<b>match route-type</b>	Match the route type.
<b>match tag</b>	Match the route tag.
<b>set metric</b>	Set the metric for route redistribution.
<b>set metric-type</b>	Set the type for route redistribution.
<b>set tag</b>	Set the tag for route redistribution.

## 4.20 match ipv6 next-hop

Use this command to redistribute the network routes whose next-hop IP address matches the IPv6 access list or the IPv6 prefix list. Use the **no** form of this command to delete the setting.

**match ipv6 next-hop** { *access-list-name* ] | *prefix-list prefix-list-name* }

**no match ipv6 next hop**

Parameter description	Parameter	Description
	<i>access-list-name</i>	Name of the IPv6 access list.
	prefix-list <i>prefix-list-name</i>	Specify the IPv6 prefix list to match.

**Default configuration**    None

**Command mode**        Route map configuration mode

**Usage guideline**

You can redistribute the routes from one routing process to another routing process. For example, you can redistribute the route in the OSPF routing domain and then advertise it to the RIP routing domain, and vice versa. The mutual route redistribution can be implemented between all the IP routing protocols.

For route redistribution, route maps are usually used to control the mutual route redistribution between two routing domains.

One or more match or set commands can be executed to configure a route map. If the match command is not used, all the routes will be matched. If the set command is not used, no operation will be performed.

The route map can be configured very flexibly to be used for route redistribution and policy-based routing. No matter how the route map is used, the configuration principle is the same, except that different command sets are used. Even if it is used on the route redistribution, different routing protocols can use different commands with the route map.

The following example enables the OSPF routing protocol to redistribute RIP routes that only match access list v6acl, with the default metric being 40.

**Examples**

```
ipv6 router ospf
redistribute rip subnets route-map redrip

ipv6 access-list v6acl
10 permit ipv6 2620::64 any

route-map redrip permit 10
match ipv6 address v6acl
set metric 40
```

Related commands	Command	Description
	<b>ipv6 access-list</b>	Set the IPV6 access list.
	<b>match interface</b>	Match the next-hop interface of the route.
	<b>match ipv6 address</b>	Match the IP address in the IPv6 access list.
	<b>match ipv6 route-source</b>	Match the route source address in the IPv6 access list.
	<b>match metric</b>	Match the route metric.
	<b>match route-type</b>	Match the route type.
	<b>match tag</b>	Match the route tag.

<b>set metric</b>	Set the metric for route redistribution.
<b>set metric-type</b>	Set the type for route redistribution.
<b>set tag</b>	Set the tag for route redistribution.

## 4.21 match ipv6 route-source

Use this command to redistribute the network routes whose next-hop IP address matches the IPv6 access list or the IPv6 prefix list. Use the **no** form of this command to delete the setting.

**match ipv6 route-source** { *access-list-name* } | **prefix-list** *prefix-list-name* }

**no match ipv6 route-source**

Parameter description	Parameter	Description
	<i>access-list-name</i>	Name of the IPv6 access list.
	<i>prefix-list prefix-list-name</i>	Specify the IPv6 prefix list to match.

**Default configuration**    None

**Command mode**        Route map configuration mode

**Usage guideline**

You can redistribute the routing information from one routing process to another routing process. For example, you can redistribute the route in the OSPF routing domain and then advertise it to the RIP routing domain, and vice versa. The mutual route redistribution can be implemented between all the IP routing protocols.

In the route redistribution, route maps are usually used to control the mutual route redistribution between two routing domains.

In configuring one route map, one or more match or set commands can be executed. If the match command is not used, all the routes will be matched. If the set command is not used, no operation will be performed.



The route map can be configured very flexibly to be used for route redistribution and policy-based routing. No matter how the route map is used, the configuration principle is the same, except that different command sets are used. Even if it is used on the route redistribution, different routing protocols can use different commands with the route map.

The following example enables the OSPF routing protocol to redistribute RIP routes that only match access list v6acl, with the default metric being 50.

**Examples**

```
ipv6 router ospf
 redistribute rip subnets route-map redrip

ipv6 access-list v6acl
 10 permit ipv6 5200::64 any

route-map redrip permit 10
 match ipv6 address v6acl
 set metric 50
```

**Related  
commands**

Command	Description
<b>ipv6 access-list</b>	Set the IPv6 access list.
<b>match interface</b>	Match the next-hop interface of the route.
<b>match ipv6 address</b>	Match the IP address in the IPv6 access list.
<b>match ipv6 next-hop</b>	Match the next hop in the IPv6 access list.
<b>match metric</b>	Match the route metric.
<b>match route-type</b>	Match the route type.
<b>match tag</b>	Match the route tag.
<b>set metric</b>	Set the metric for route redistribution.
<b>set metric-type</b>	Set the type for route redistribution.
<b>set tag</b>	Set the tag for route redistribution.

## 4.22 match metric

Use **match metric** command to redistribute the routes of the specified metric. Use the **no** form of this command to remove the setting.

**match metric** *metric*

**no match metric**

**Parameter  
description**

Parameter	Description
<i>metric</i>	Route metric, in the range 0 to 4294967295

**Default**

**configuration** None.

**Command**

Route map configuration mode.

**mode**

You can redistribute the routing information from one routing process to another routing process. For example, you can redistribute the route in the OSPF routing domain and then advertise it to the RIP routing domain, and vice versa. The mutual route redistribution can be implemented between all the IP routing protocols.

**Usage guidelines**

In the route redistribution, route maps are usually used to control the mutual route redistribution between two routing domains.

In configuring one route map, one or more match or set commands can be executed. If the match command is not used, all the routes will be matched. If the set command is not used, no operation will be performed.

In the example below, the OSPF routing protocol redistributes the RIP routes of metric 10.

**Examples**

```
router ospf 1
 redistribute rip subnets route-map redrip
 network 192.168.12.0 0.0.0.255 area 0

route-map redrip permit 10
 match metric 10
```

**Related commands**

Command	Description
<b>access-list</b>	Set the access list.
<b>match ip address</b>	Match the IP address.
<b>match interface</b>	Match the interface.
<b>match ip next-hop</b>	Match the next-hop IP address.
<b>match ip route-source</b>	Match the source IP address.
<b>match route-type</b>	Match the route type.
<b>match tag</b>	Match the tag.
<b>set metric</b>	Set the metric.
<b>set metric-type</b>	Set the metric type.
<b>set tag</b>	Set the tag.

## 4.23 match route-type

Use this command to redistribute the network routes of the specified type. Use the **no** form of this command to delete the setting.

**match route-type** { **static** | **connect** | **rip** | **local** | **internal** | **external** [ **type-1** | **type-2** ]

**no match route-type** [ **static** | **connect** | **rip** | **local** | **internal** | **external** [ **type-1** | **type-2** ]

**Parameter description**

Parameter	Description
<b>static</b>	Indicates the static route type.
<b>connect</b>	Indicates the directly connected route type.

<b>rip</b>	Indicates the RIP route type.
<b>internal</b>	Indicates the OSPF internal route type.
<b>external</b>	Indicates the OSPF external route type.
<b>type-1   type-2</b>	Indicates the OSPF type-1 or type-2 route type.

**Default****configuration** None**Command****mode** Route map configuration mode**Usage****guideline**

You can redistribute the routing information from one routing process to another routing process. For example, you can redistribute the route in the OSPF routing domain and then advertise it to the RIP routing domain, and vice versa. The mutual route redistribution can be implemented between all the IP routing protocols.

In the route redistribution, route maps are usually used to control the mutual route redistribution between two routing domains.

In configuring one route map, one or more match or set commands can be executed. If the match command is not used, all the routes will be matched. If the set command is not used, no operation will be performed.

In the example below, the RIP routing protocol redistributes only the internal routes in the OSPF routing domain.

**Examples**

```
router rip
redistribute ospf route-map redrip
network 192.168.12.0

route-map redrip permit 10
match route-type internal
!
```

**Related  
commands**

Command	Description
<b>access-list</b>	Set the access list.
<b>match ip address</b>	Match the IP address.
<b>match interface</b>	Match the interface.
<b>match ip next-hop</b>	Match the next-hop IP address.
<b>match ip route-source</b>	Match the source IP address.
<b>match metric</b>	Match the metric.
<b>match tag</b>	Match the tag.
<b>set metric</b>	Set the metric.
<b>set metric-type</b>	Set the access list.
<b>set tag</b>	Match the IP address.

## 4.24 match tag

Use this command to redistribute the network routes with the specified tag. Use the **no** form of this command to delete the setting.

**match tag** *tag* [...*tag*]

**no match tag** [*tag* [...*tag*]]

Parameter description	Parameter	Description
	<i>tag</i>	Route tag

**Default configuration**    None

**Command mode**            Route map configuration mode

**Usage guideline**

Multiple tags may follow the match tag command.

You can redistribute the routing information from one routing process to another routing process. For example, you can redistribute the route in the OSPF routing domain and then advertise it to the RIP routing domain, and vice versa. The mutual route redistribution can be implemented between all the IP routing protocols.

In the route redistribution, route maps are usually used to control the mutual route redistribution between two routing domains.

In configuring one route map, one or more match or set commands can be executed. If the match command is not used, all the routes will be matched. If the set command is not used, no operation will be performed.

In the example below, the RIP routing protocol redistributes only the routes with tag 50 and 80 in the OSPF routing domain.

### Examples

```
Ruijie(config)# router rip
Ruijie(config-router)# redistribute ospf 100 route-map redrip
Ruijie(config-router)# network 192.168.12.0
Ruijie(config-router)# exit
Ruijie(config)# route-map redrip permit 10
Ruijie(config-route-map)# match tag 50 80
```

### Related commands

Command	Description
<b>access-list</b>	Set the access list.
<b>match ip address</b>	Match the IP address.
<b>match interface</b>	Match the next-hop IP interface.
<b>match ip route-source</b>	Match the source IP address.
<b>match metric</b>	Match the metric.
<b>match ip next-hop</b>	Match the next-hop IP address.

<b>match route-type</b>	Match the route type.
<b>set metric</b>	Set the metric.
<b>set metric-type</b>	Set the metric type.
<b>set tag</b>	Set the tag.

## 4.25 memory-lack exit-policy

Use this command to configure a policy to preferentially exit a routing protocol when the memory reaches the lower limit. Use the **no** form of this command to restore the default policy, namely, exit the routing protocol which occupies the largest memory.

**memory-lack exit-policy { ospf | rip }**

**no memory-lack exit-policy**

Parameter description	Parameter	Description
	<b>ospf</b>	Preferentially exit OSPF when the memory is insufficient.
	<b>rip</b>	Preferentially exit RIP when the memory is insufficient.

**Default** By default, the routing protocol which occupies the largest memory exits preferentially.

**Command mode** Global configuration mode

**Usage guideline**

When the memory reaches the lower limit, you can disable a routing protocol to release the memory to ensure the normal running of other protocols.

When the system runs out of memory, disable a routing protocol which has the minimal impact on the system to ensure the operation of main services.

Configuring the policy to preferentially exit the routing protocols which are disabled cannot help the system release memory.

This command ensures the operation of main services to some extent when the memory is insufficient. If the memory is further consumed, all routing protocols will exit and stop running.

**Examples**

Related command	Command	Description
	-	-

**Platform description** -

## 4.26 route-map

Use **route-map** to enter the route map configuration mode and define a route map. Use the **no** form of this command to remove the setting.

**route-map** *route-map-name* [**permit** | **deny**] [*sequence-number*]

**no route-map** *route-map-name* [{**permit** | **deny**}*sequence-number*]

### Parameter description

Parameter	Description
<i>route-map-name</i>	Name of the route map. The redistribute command references the route map according to its name. Multiple routing policies can be defined in a route map, and each policy corresponds to one sequence number.
<b>permit</b>	(Optional) If the permit keyword is defined and the rule defined by match is met, The set command controls the redistributed routes. For policy-based routing, the set command controls the packet forwarding, and exits the route map operation.  If the permit keyword is defined but the rule defined by match is not met, the system performs the routing policy of the second route map till the set command is executed finally.
<b>deny</b>	(Optional) If the deny keyword is defined and the rule defined by match is met, no operation will be performed. Neither route redistribution nor policy-based routing is supported in the route map. The system exits the route map operation.  If the deny keyword is defined but the rule defined by match is not met, the system performs the routing policy of the second route map till the set command is executed finally.
<i>sequence-number</i>	Sequence number of the route map. The policy with a lower sequence number is preferred, so it's noted when setting the sequence number.

### Default

**configuration** None.

### Command mode

Global configuration mode.

### Usage guidelines

At present, the RGOS software primarily uses the route map for route redistribution and policy-based routing.

#### 1. Route redistribution control

You can redistribute the routes from one routing process to another routing process. For example, you can redistribute the route in the OSPF routing domain and then advertise it to the RIP routing domain, and vice versa. The mutual route redistribution can be implemented between all the IP routing protocols.

For route redistribution, route maps are usually used to control the mutual route redistribution between two routing domains.

One or more match or set commands can be executed to configure a route map. If the match command is not used, all the routes will be matched. If the set command is not used, no operation will be performed.

When configuring route maps, pay attention to the following when using the sequence number of a route map:

When you create the first route map policy, if *sequence-number* is not specified, it is 10 by default; If only one route map policy exists and *sequence-number* is not specified, no new route map policy will be created, and the existing route map policy will be accessed for configuration;

If more than one route map policy is available, the sequence number of each policy shall be specified; otherwise an error message will be displayed.

## 2. policy-based routing

Policy-based routing refers to a routing mechanism based on user defined policies. Compared with traditional destination IP address-based routing, policy-based routing offers a flexibility for routing based on source IP address, length and port of IP packets. Policy-based routing can apply to the IP packets received on an interface or the IP packets sent from the local device.

Policy-based routing utilizes route map to define routing and forwarding policy. The match command defines packet filtering rule and the set command defines the action for the packets matching the filtering rules. The match command used includes match ip address and match length; the set command includes set ip tos, set ip precedence, set ip dscp, set ip [default] nexthop, set ip next-hop verify-availability, set [default] interface.

The following example enables the OSPF routing protocol to redistribute the RIP routes with the hop count of 4. In the OSPF route domain, the route type is the external route type-1, the default metric is 40 and the tag is 40.

### Examples

```
!  
router ospf  
  redistribute rip subnets route-map redrip  
  network 192.168.12.0 0.0.0.255 area 0  
!  
!  
route-map redrip permit 10  
  match metric 4  
  set metric 40  
  set metric-type type-1  
  set tag 40
```

### Related commands

Command	Description
redistribute	Redistribute the routes.

## 4.27 send-lifetime

Use this command in the encryption key configuration mode to specify the lifetime of an encryption key in its send direction. Use the **no** form of this command to restore the default value.

**send-lifetime** *start-time* {**infinite** | *end-time* | **duration** *seconds*}

**no send-lifetime**

Parameter	Parameter	Description
description	<i>start-time</i>	Start time of the lifetime.
	<b>infinite</b>	Indicates that the encryption key is valid for ever.
	<i>end-time</i>	<i>End time of the encryption key. It must be later than the start time.</i>
	<b>duration</b> <i>seconds</i>	Duration of the encryption key after the start time. The value ranges from 1 to 2147483646.

**Default** infinite

**Command mode** Encryption key configuration mode

**Usage guideline** Use this command to specify the lifetime of an encryption key in its send direction.

**Examples** The following example configures the lifetime from 0:00 on September 9, 2000 to 0:00 on October 12, 2011

```
Ruijie(config)# key chain ripkeys
Ruijie(config-keychain)# key 1
Ruijie(config-keychain-key)# send-lifetime 00:00:00 Sep 9 2000 00:00:00 Dec 12 2011
```

Related command	Command	Description
	-	-

**Platform description** -

## 4.28 set ip default next-hop

Use this command to specify the default next-hop IP address for the packets that match the rule in the route map configuration mode. Use the **no** form of this command to remove the setting.

**set ip default next-hop** *ip-address* [ *weight* ] [ ...*ip-address* [ *weight* ] ]

**no set ip default next-hop** [ *ip-address* [ *weight* ] [ ...*ip-address* [ *weight* ] ] ]



Parameter description	Parameter	Description
	<i>ip-address</i>	IP address of the next hop.
	<i>weight</i>	Weight of the next hop.

**Default configuration**    None

**Command mode**        Route map configuration mode

This command supports two operation modes: WCMP load balancing mode and non-WCMP load balancing mode. In the former mode, the system implements WCMP load balancing according to the weight inputted.

Up to 32 IP addresses may follow the **set ip default next-hop** command.

If a weight follows ip address, up to 4 next hop IP addresses can be configured.

Note: If a weight follows any next-hop, the operation mode of this command will be automatically switched to the WCMP load balancing mode. In this mode, the weight of those next hop IP addresses whose weight is not configured is 1 by default.

Differences between set ip next-hop and set ip default next-hop: After the set ip next-hop command is configured, the policy-based routing takes precedence over the routing table; while after the set ip default next-hop command is configured, the routing table takes precedence over the policy-based routing.

Use this command to customize a default route for a specified user. If the software fails to find the forwarding route, the packet will be forwarded to the nexthop set with this command.

To use the policy-based routing, you must specify the route map for it and create the route map. A route map contains multiple policies, and each policy defines one or more match rules and the corresponding operations. After policy-based routing is applied to an interface, the packets received by the interface will be checked. The packets that do not match any policy in the route map will be forwarded through the usual route. The packets that match a policy in the route map will be processed according to the operation defined in the policy.

A route-map policy may contain multiple set operations.

The following example forwards the packets from two different nodes through different routes.

For the messages received on the synchronous interface 1 from 1.1.1.1, if the software cannot find the forwarding route, they are forwarded to device 6.6.6.6. For the messages received from 2.2.2.2, if the software cannot find the forwarding route, they are forwarded to device 7.7.7.7. The other messages will be discarded if the software cannot find the forwarding route.

#### Examples

```
Ruijie(config)#access-list 1 permit 1.1.1.1 0.0.0.0
Ruijie(config)#access-list 2 permit 2.2.2.2 0.0.0.0
Ruijie(config)#interface async 1
Ruijie(config-if)#ip policy route-map equal-access
Ruijie(config)#route-map equal-access permit 10
Ruijie(config- route-map)#match ip address 1
Ruijie(config-route-map)#set ip default next-hop 6.6.6.6
```

```
Ruijie(config)#route-map equal-access permit 20
Ruijie(config-route-map)#match ip address 2
Ruijie(config-route-map)#set ip default next-hop 7.7.7.7
Ruijie(config)#route-map equal-access permit 30
Ruijie(config-route-map)#set default interface null 0
```

**Related  
commands**

Command	Description
<b>route-map</b>	Define a route map.
<b>match ip address</b>	Match the IP address.
<b>set default interface</b>	Set the default outgoing interface.
<b>set interface</b>	Set the outgoing interface.
<b>set ip next-hop</b>	Set the next hop of the packets.
<b>set ip precedence</b>	Set the priority of the packets.

**Platform****description** N/A

## 4.29 set ip dscp

Use this command to specify the DSCP value for the packets that match the rule in the route map configuration mode. Use the **no** form of this command to remove the setting.

**set ip dscp** *dscp-value***no set ip dscp****Parameter  
description**

Parameter	Description
<i>dscp-value</i>	DSCP value

**Default****configuration** N/A**Command****mode** Route map configuration mode**Usage****guideline** N/A**Examples**

N/A

**Related  
commands**

Command	Description
<b>route-map</b>	Define a route map.
<b>match ip address</b>	Match the IP address.
<b>set default interface</b>	Set the default outgoing interface.

<b>set interface</b>	Set the outgoing interface.
<b>set ip next-hop</b>	Set the next hop of the packets.
<b>set ip precedence</b>	Set the priority of the packets.

## 4.30 set ip next-hop

Use this command to specify the next-hop IP address for the packets that meet the matching rule. Use the **no** form of this command to remove the setting. This command is only used to configure policy-based routing.

**set ip next-hop** *ip-address* [ *weight* ] [ ...*ip-address* [ *weight* ] ]

**no set ip next-hop** [ *ip-address* [ *weight* ] [ ...*ip-address* [ *weight* ] ] ]


Parameter description	Parameter	Description
	<i>ip-address</i>	Indicates the next-hop IP address.
	<i>weight</i>	Indicates the weight of this next hop.

**Default configuration**    None

**Command mode**        Route map configuration mode

This command supports two operation modes: WCMP load balancing mode and non-WCMP load balancing mode. In the former mode, the system implements WCMP load balancing according to the weight entered by the user.

Multiple IP addresses may follow set ip next-hop and the number of addresses should be less than 32.

 If weight follows any next-hop, the operation mode of this command will be automatically switched to the WCMP load balancing mode. In the WCMP load balancing mode, for the nexthop address without configuring the corresponding weight, the weight is 1 by default.

**Usage guideline**

If weight follows ip address, up to 4 next hop addresses can be configured.

This command can be used to set different routes for the traffic that meets different match rule. If multiple IP addresses are configured, they can be used in turn.

Policy-based routing is a packet forwarding mechanism more flexible than the routing based on the target network. After the policy-based routing is used, the device will decide how to process the packets that need be routed according to the route map, which decides the next-hop device of the packets.

To use the policy-based routing, you must specify the route map for it and create the route map. A route map contains multiple policies, and each policy defines one or more match rules and the corresponding operations. After policy-based routing is applied to an interface, the packets received by the interface will be checked. The packets that do not match any policy in the route map will be forwarded to the usual route. The packets that match a policy in the route map will be processed according to the operation defined in the policy.

A route-map policy may contain multiple set operations.

The following example enables policy-based routing on serial 1/0. When the interface receives the packets from 10.0.0.0/8, they will be sent to 192.168.100.1; when the interface receives the packets from 172.16.0.0/16, they will be sent to 172.16.100.1; all other packets will be discarded.

#### Examples

```
Ruijie(config)#interface serial 1/0
Ruijie(config-if)#ip policy route-map load-balance
Ruijie(config)#access-list 10 permit 10.0.0.0 0.255.255.255
Ruijie(config)#access-list 20 permit 172.16.0.0 0.0.255.255
Ruijie(config)#route-map load-balance permit 10
Ruijie(config-route-map)#match ip address 10
Ruijie(config-route-map)#set ip next-hop 192.168.100.1
Ruijie(config)#route-map load-balance permit 20
Ruijie(config-route-map)#match ip address 20
Ruijie(config-route-map)#set ip next-hop 172.16.100.1
Ruijie(config)#route-map load-balance permit 30
Ruijie(config-route-map)#set interface Null 0
```

#### Related commands

Command	Description
<b>route-map</b>	Define the route map.
<b>match ip address</b>	Match the IP address.
<b>set default interface</b>	Set the default outgoing interface.
<b>set interface</b>	Set the outgoing interface.
<b>set ip default next-hop</b>	Set the default next hop.
<b>set ip precedence</b>	Set the priority of the packets.

## 4.31 set ip precedence

Use this command to set the precedence of the IP head of the packet matching the rule in the route map configuration mode. Use the **no** form of this command to remove the configured precedence setting.

**set ip precedence** {<0-7> | *critical* | *flash* | *flash-override* | *immediate* | *internet* | *network* | *priority* | *routine* }

**no set ip precedence**

#### Parameter Description

Parameter	Description
<i>number</i>	Indicates the priority of the IP header with a number, ranging from 0 to 7. 7: critical 6: flash 5: flash-override 4: immediate

	3: internet 2: network 1: priority 0: routine
<b>critical   flash    flash-override   immediate    internet   network    priority   routine</b>	Priority of an IP header.

**Defaults** N/A

**Command mode** Route map configuration mode

**Usage guideline** With different precedence values for the IP packet head configured, the IP packets matching the PBR routing are sent according to the different precedence values.

Multiple set ip precedence commands can be executed in the route map configuration rule, but only the last one takes effect, and the precedence will be specified for the head of the IP packet matched the PBR.

The following example sets the precedence of the packet with the source IP address 192.168.217.68 received at the interface FastEthernet 0/0 as 4:

#### Examples

```
Ruijie(config)#access-list 1 permit 192.168.217.68 0.0.0.0
Ruijie(config)#route-map name
Ruijie(config-route-map)#match ip address 1
Ruijie(config-route-map)#set ip precedence 4
Ruijie(config)#interface FastEthernet 0/0
Ruijie(config-if)#ip policy route-map name
```

#### Related commands

Command	Description
<b>match interface</b>	Match the next-hop interface.
<b>match ip address</b>	Match the IP address in the ACL.
<b>match ip next-hop</b>	Match the next-hop IP address in the ACL.
<b>match ip route-source</b>	Match the route source IP address in the ACL.
<b>match metric</b>	Match the route metric value.
<b>match route-type</b>	Match the route type.
<b>match tag</b>	Match the route tag value.
<b>set metric-type</b>	Set the type of redistributed route.
<b>set tag</b>	Set the tag value of redistributed route.
<b>set ip tos</b>	Set the tos for the IP packet head.

## 4.32 set ip tos

Use this command to set the tos of the IP head of the packet matching the rule in the route map configuration mode. Use the **no** form of this command to remove the configured tos setting.

**set ip tos** {<0-15> | *max-reliability* | *max-throughput* | *min-delay* | *min-monetary-cost* | *normal* }

**no set ip tos**

### Parameter Description

Parameter	Description
<i>number</i>	Indicates the TOS value of an IP header with a number, ranging from 0 to 15. 2: <b>max-reliability</b> 4: <b>max-throughput</b> 8: <b>min-delay</b> 1: <b>min-monetary-cost</b> 0: <b>normal</b>
<b>max-reliability</b>   <b>max-throughput</b>   <b>min-delay</b>   <b>min-monetary-cost</b>   <b>normal</b>	Priority of an IP header.

### Defaults

N/A

### Command mode

Route map configuration mode

### Usage guideline

With different TOS values for the IP packet head configured, the IP packets matching the PBR routing are transmitted with different service qualities.

The TOS value will be specified for the head of the IP packet matched the PBR.

### Examples

The following example sets the TOS value of the packet with the source IP address 192.168.217.68 received at the interface FastEthernet 0/0 as 4:

```
Ruijie(config)#access-list 1 permit 192.168.217.68 0.0.0.0
Ruijie(config)#route-map name
Ruijie(config-route-map)#match ip address 1
Ruijie(config-route-map)#set ip tos 4
Ruijie(config)#interface FastEthernet 0/0
Ruijie(config-if)#ip policy route-map name
```

### Related commands

Command	Description
<b>match interface</b>	Match the next-hop interface.
<b>match ip address</b>	Match the IP address in the ACL.

<b>match ip next-hop</b>	Match the next-hop IP address in the ACL.
<b>match ip route-source</b>	Match the route source IP address in the ACL.
<b>match metric</b>	Match the route metric value.
<b>match route-type</b>	Match the route type.
<b>match tag</b>	Match the route tag value.
<b>set metric-type</b>	Set the type of redistributed route.
<b>set tag</b>	Set the tag value of redistributed route.
<b>set ip precedence</b>	Set the precedence for the IP packet head.

### 4.33 set ipv6 default next-hop

Use this command to specify the default next-hop IPv6 address for the IPv6 packets that match the rule in the route map configuration mode. Use the **no** form of this command to remove the setting. This command is only used to configure policy-based routing.

**set ipv6 default next-hop** *global-ipv6-address* [ *weight* ] [ *global-ipv6-address* [ *weight* ] ... ]

**no set ipv6 default next-hop** *global-ipv6-address* [ *weight* ] [ *global-ipv6-address* [ *weight* ] ...]

#### Parameter description

Parameter	Description
<i>global-ipv6-address</i>	Indicates the next-hop IPv6 address for packet forwarding. The next-hop router must be a neighbor router.
<i>weight</i>	Indicates the weight in the load balancing mode, ranging from 1 to 8. A larger value means larger packet traffic to be shared by the next hop.

**Default configuration** None

**Command mode** Route map configuration mode

With the policy-based routing applied to the interface, for the IPv6 packets matching the corresponding rules, if the usual route (that is the non-default route) with the destination of this packet is not in the routing table, this packet will be forwarded to the next hop specified by the set ipv6 default next-hop command. Otherwise it is forwarded through the usual route. Noted that the match rule should be the IPv6 corresponded.

**Usage guideline** Packets select the egress from the policy-based routing and routing table in following priority.

- set ipv6 next-hop;
- usual route (the non-default route)
- set ipv6 default next-hop
- default route.



For the switches, this function does not take effect if the mask length is beyond 64.

If this command and the set ipv6 next-hop verify-availability are both configured, the next hop set by the set ipv6 next-hop verify-availability command will take effect preferentially.

**Examples** N/A

**Related commands**

Command	Description
<b>match ipv6 address</b>	Set the matching rule of policy-based routing.
<b>ipv6 policy route-map</b>	Use the policy-based routing on the interface.
<b>set ipv6 next-hop</b>	Set the next hop of the policy-based routing.

**Platform description** N/A

## 4.34 set ipv6 next-hop

Use this command to specify the next-hop IPv6 address for the packets that meet the matching rule. Use the **no** form of this command to remove the setting. This command is only used to configure policy-based routing.

**set ipv6 next-hop** *global-ipv6-address* [*weight*] [...*global-ipv6-address* [*weight*]]

**no set ip next-hop** *global-ipv6-address* [*weight*] [...*global-ipv6-address* [*weight*]]

**Parameter description**

Parameter	Description
<i>global-ipv6-address</i>	IPv6 address of the next hop. The next hop router should be the neighbor router.
<i>weight</i>	Weight of the next hop in the load balancing mode, in the range of 1 to 8.

**Default configuration** None

**Command mode** Route map configuration mode

**Usage guideline**

This command supports two operation modes: WCMP load balancing mode and non-WCMP load balancing mode. In the former mode, the system implements WCMP load balancing according to the weight entered by the user.

Multiple IP addresses may follow set ip next-hop and the number of addresses should be less than 32.

If weight follows ip address, up to 4 next hop addresses can be configured.





If weight follows any next-hop, the operation mode of this command will be automatically switched to the WCMP load balancing mode. In the WCMP load balancing mode, for the nexthop address without configuring the corresponding weight, the weight is 1 by default.

When the packets select the egress from the policy-based routing and routing table, the priorities are as follows.

set ipv6 next-hop;

usual route (the non-default route)

set ipv6 default next-hop

Default route.

**Examples** N/A

Related commands	Command	Description
	<b>match ipv6 address</b>	Set the matching rule of policy-based routing.
	<b>ipv6 policy route-map</b>	Use the policy-based routing on the interface.
	<b>set ipv6 next-hop</b>	Set the next hop of the policy-based routing.

**Platform description** N/A

## 4.35 set ipv6 precedence

Use this command to set the precedence of the IPv6 head of the packet matching the rule in the route map configuration mode. Use the **no** form of this command to remove the configured precedence setting.

**set ipv6 precedence** {<0-7> | *critical* | *flash* | *flash-override* | *immediate* | *internet* | *network* | *priority* | *routine* }

**no set ipv6 precedence**

Parameter description	Parameter	Description
	<i>critical</i> , <i>flash</i> , <i>flash-override</i> , <i>immediate</i> , <i>internet</i> , <i>network</i> , <i>priority</i> , <i>routine</i>	The precedence type of the IPv6 head.
	0~7	The configurable precedence range.

**Default configuration** N/A

**Command mode** Route map configuration mode

**Usage**

**guideline****Examples**

The following example sets the precedence of IPv6 packet head as "immediate":

```
Ruijie(config-route-map)# set ipv6 precedence immediate
```

**Related  
commands**

Command	Description
<b>match ipv6 address</b>	Configure the ACL used for matching the packet in IPv6 PBR.
<b>route-map</b>	Use the route map of the policy-based routing.
<b>set default interface</b>	Set the default next-hop egress.
<b>set interface</b>	Set the next hop egress.
<b>set ipv6 default next-hop</b>	Set the default next-hop address for forwarding packets.
<b>set ipv6 next-hop</b>	Set the next-hop address for forwarding packet.
<b>show ipv6 policy</b>	Show the policy-based routing
<b>show route-map</b>	Show the route map configuration.

**Platform**

**description** N/A

## 4.36 set level

Use this command to set the level of the area where the routes matching the rule are redistributed in the route map configuration command. Use the **no** form of this command to remove the setting.

**set level { stub-area | backbone }**

**no set level**

**Parameter  
description**

Parameter	Description
<b>stub-area</b>	Redistributes the routes to the OSPF stub area
<b>backbone</b>	Redistributes the routes to the backbone area.

**Default**

**configuration** None

**Command**

**mode** Route map configuration mode

In the example below, the OSPF routing protocol redistributes the RIP protocol to the backbone area.

**Examples**

```
Ruijie(config)# router ospf
Ruijie(config-router)# redistribute rip subnets route-map redrip
Ruijie(config-router)# network 192.168.12.0 0.0.0.255 area 0
Ruijie(config-router)# exit
Ruijie(config)# route-map redrip permit 10
Ruijie(config-route-map)# set level backbone
```

**Related commands**

Command	Description
<b>match interface</b>	Match the interface.
<b>match ip address</b>	Match the IP address.
<b>match ip next-hop</b>	Match the next-hop IP address.
<b>match ip route-source</b>	Match the source IP address.
<b>match metric</b>	Match the metric.
<b>match route-type</b>	Match the route type.
<b>match tag</b>	Match the tag.
<b>set metric-type</b>	Set the metric type.
<b>set tag</b>	Set the tag.

## 4.37 set metric

Use **set metric** to set the metric for the routes to be redistributed. Use the **no** form of this command to remove the setting.

**set metric** [**+** *metric-value* | **-** *metric-value* | *metric-value*]

**no set metric**

**Parameter description**

Parameter	Description
<b>+</b>	Increase based on the metric of the original route
<b>-</b>	Decrease based on the metric of the original route
<i>metric-value</i>	Metric for the route to be redistributed

**Default**

**configuration** The default metric for route redistribution varies with the routing protocol.

**Command**

**mode** Route map configuration mode

**Usage  
guideline**

You should set the metric according to the actual network topology, because the routing depends on the metric of routes. Attentions should be paid to the upper and lower limits of the routing protocols when you execute the `set metric`, `+ metric` or `- metric` commands. When the RIP protocol redistributes the routes of other protocols, the range of the metric after increase or decrease is 1 to 16.

You can redistribute the routes from one routing process to another routing process. For example, you can redistribute the route in the OSPF routing domain and then advertise it to the RIP routing domain, and vice versa. The mutual route redistribution can be implemented between all the IP routing protocols.

For route redistribution, route maps are usually used to control the mutual route redistribution between two routing domains.

One or more `match` or `set` commands can be executed to configure a route map. If the `match` command is not used, all the routes will be matched. If the `set` command is not used, no operation will be performed.

The following example enables the OSPF routing protocol to redistribute the RIP routes and sets the default metric to 40.

**Examples**

```
Ruijie(config)# router ospf
Ruijie(config-router)# redistribute rip subnets route-map redrip
Ruijie(config-router)# network 192.168.12.0 0.0.0.255 area 0
Ruijie(config-router)# exit
Ruijie(config)# route-map redrip permit 10
Ruijie(config-route-map)# set metric 40
```

**Related  
commands**

Command	Description
<b>match interface</b>	Match the interface.
<b>match ip address</b>	Match the IP address.
<b>match ip next-hop</b>	Match the next-hop IP address.
<b>match ip route-source</b>	Match the source IP address.
<b>match metric</b>	Match the metric.
<b>match route-type</b>	Match the route type.
<b>match tag</b>	Match the tag.
<b>set metric-type</b>	Set the metric type.
<b>set tag</b>	Set the tag.

## 4.38 set metric-type

Use **set metric-type** to set the type of the routes to be redistributed. Use the **no** form of this command to remove the setting.

**set metric-type** *type*

**no set metric-type**

	Parameter	Description
<b>Parameter description</b>	<i>type</i>	Type of the routes to be redistributed. At present, you can set the type of the routes that the OSPF protocol redistributes. type-1: Type-1 external route; type-2: Type-2 external route.

**Default configuration**      Type-2

**Command mode**              Route map configuration mode

**Usage guideline**

You can redistribute the routing information from one routing process to another routing process. For example, you can redistribute the route in the OSPF routing domain and then advertise it to the RIP routing domain, and vice versa. The mutual route redistribution can be implemented between all the IP routing protocols.

In the route redistribution, route maps are usually used to control the mutual route redistribution between two routing domains.

In configuring one route map, one or more match or set commands can be executed. If the match command is not used, all the routes will be matched. If the set command is not used, no operation will be performed.

The following example enables the OSPF routing protocol to redistribute the RIP route and sets the type as type-1.

#### Examples

```
Ruijie(config)# router ospf
Ruijie(config-router)# redistribute rip subnets route-map redrip
Ruijie(config-router)# network 192.168.12.0 0.0.0.255 area 0
Ruijie(config-router)# exit
Ruijie(config)# route-map redrip permit 10
Ruijie(config-route-map)# set metric-type type-1
```

#### Related commands

Command	Description
<b>match interface</b>	Match the interface.
<b>match ip address</b>	Match the IP address.
<b>match ip next-hop</b>	Match the next-hop IP address.
<b>match ip route-source</b>	Match the source IP address.
<b>match metric</b>	Match the metric.
<b>match route-type</b>	Match the route type.
<b>match tag</b>	Match the tag.
<b>set metric</b>	Set the metric.
<b>set tag</b>	Set the tag.

## 4.39 set next-hop

Use this command to specify the next-hop IP address for the routes that match the rule. Use the **no** form of this command to remove the setting. This command is only used to configure routing policies.

**set next-hop** *ip-address*

**no set next-hop**

Parameter	Parameter	Description
description	<i>ip-address</i>	IP address of the next hop.

**Default configuration** None

**Command mode** Route map configuration mode

You can redistribute the routing information from one routing process to another routing process. For example, you can redistribute the route in the OSPF routing domain and then advertise it to the RIP routing domain, and vice versa. The mutual route redistribution can be implemented between all the IP routing protocols.

**Usage guideline**

In the route redistribution, route maps are usually used to control the mutual route redistribution between two routing domains.

In configuring one route map, one or more match or set commands can be executed. If the match command is not used, all the routes will be matched. If the set command is not used, no operation will be performed.

The following example enables the OSPF routing protocol to redistribute the RIP route and sets the next-hop to 192.168.1.2.

**Examples**

```
Ruijie(config)# route-map redrip permit 10
Ruijie(config-route-map)# match ip address 1
Ruijie(config-route-map)# set next-hop 192.168.1.2
```

Related commands	Command	Description
	<b>match interface</b>	Match the interface.
	<b>match ip address</b>	Match the IP address.
	<b>match ip next-hop</b>	Match the next-hop IP address.
	<b>match ip route-source</b>	Match the source IP address.
	<b>match metric</b>	Match the metric.
	<b>match route-type</b>	Match the route type.
	<b>match tag</b>	Match the tag.
	<b>set metric-type</b>	Set the metric type.
	<b>set tag</b>	Set the tag.

## 4.40 set tag

Use this command to set the tag for the routes to be redistributed. Use the **no** form of this command to remove the setting.

**set tag** *tag*

**no set tag**

Parameter	Parameter	Description
description	<i>tag</i>	Tag of the route to be redistributed

### Default

**configuration** The original routing tag remains unchanged.

### Command

**mode** Route map configuration mode

**Usage** This command can only be used for route redistribution. If this command is not configured, the default route tag is used.

**guideline**

The following example enables the OSPF routing protocol to redistribute the RIP route and sets the tag as 100.

### Examples

```
Ruijie(config)# router ospf
Ruijie(config-router)# redistribute rip subnets route-map redrip
Ruijie(config-router)# network 192.168.12.0 0.0.0.255 area 0
Ruijie(config-router)# exit
Ruijie(config)# route-map redrip permit 10
Ruijie(config-route-map)# set tag 100
```

### Related commands

Command	Description
<b>match interface</b>	Match the interface.
<b>match ip address</b>	Match the IP address.
<b>match ip next-hop</b>	Match the next-hop IP address.
<b>match ip route-source</b>	Match the source IP address.
<b>match metric</b>	Match the metric.
<b>match route-type</b>	Match the route type.
<b>match tag</b>	Match the tag.
<b>set metric</b>	Set the metric.
<b>set metric-type</b>	Set the metric type.

## 4.41 show ip as-path-access-list

Use this command to display the configuration of AS path access lists.

**show ip as-path-access-list [ *num* ]****Parameter  
description**

Parameter	Description
<i>num</i>	AS path access list number.

**Default**

N/A

**Command  
mode**

Privileged EXEC mode

**Usage  
guideline**

N/A

**Examples**

The following example displays the AS path access lists.

```
Ruijie# show ip as-path-access-list
AS path access list 30
permit ^30$
```

Field	Description
AS path access list	AS path access list number
permit	Permits advertisement based on matching conditions.
^30\$	Regular expression.

**Related  
command**

Command	Description
-	-

**Platform  
description**

-

## 4.42 show ip community-list

Use **show ip community-list** command to display the community list.

**show ip community-list** [*community-list-number* | *community-list-name*]

**Parameter  
description**

Parameter	Description
<i>community-list-number</i>	Number of the community list.
<i>community-list-name</i>	Name of the community list.

**Default****configuration**    None



**Command****mode** Privileged EXEC mode**Usage****guidelines** N/A**Examples**

```
Ruijie# show ip community-list
Community-list standard local
permit local-AS
Community-list standard Red-Giant
permit 0:10
deny 0:20
```

**Related  
commands**

Command	Description
match community	Match the route community.
set comm-list delete	Delete the community attribute in the BGP routes.

## 4.43 show ip extcommunity-list

Use this command to display the extcommunity list.

**show ip extcommunity-list** [ *extcommunity-list-num* | *extcommunity-list-name* ]

**Parameter  
description**

Parameter	Description
<i>extcommunity-list-num</i>	extcommunity-list number, ranging from 1 to 199.
<i>extcommunity-list-name</i>	extcommunity-list name.

**Default**

-

**Command  
mode**

Privileged EXEC mode, global configuration mode, interface configuration mode, routing protocol configuration mode and route map configuration mode.

**Usage  
guideline**

-

**Examples**

```
Ruijie # show ip extcommunity-list
Standard extended community-list 1
 10 permit RT:1:200
 20 permit RT:1:100
Standard extended community-list 2
 10 permit RT:1:200
Expanded extended community-list rt_filter
 13 permit 1:100
```

**Related**

Command	Description
---------	-------------

command	<b>ip extcommunity-list</b>	Create an extcommunity-list.
	<b>match extcommunity</b>	Match an extcommunity.
	<b>set extcommunity</b>	Set an extcommunity.

Platform -

description

## 4.44 show ip prefix-list

Use **show ip prefix-list** to display the prefix list or the entries.

**show ip prefix-list** [*prefix-name*]

Parameter	Parameter	Description
description	<i>prefix-name</i>	Name of the prefix list.

Default

**configuration** The configuration information of all the prefix lists is displayed by default.

**Command mode** Privileged EXEC mode, global configuration mode, interface configuration mode, routing protocol configuration mode, route map configuration mode.

**Usage guidelines** If no prefix list is specified, the configurations of all the prefix lists are displayed, otherwise only the configuration of the specified prefix list is displayed.

**Examples**

```
Ruijie# show ip prefix-list
seq pre: 2 entries
seq 5 permit 192.168.564.0/24
seq 10 permit 192.2.2.0/24
```

## 4.45 show ip protocols

Use this command to display information about the status of the currently running IPv4 routing protocol.

**show ip protocols { ospf | rip }**

Parameter	Parameter	Description
Description	<b>ospf</b>	Displays information about the status of the OSPF protocol.
	<b>rip</b>	Displays information about the status of the RIP protocol.
	-	Displays information about the status of all running routing protocols.

<b>Command Mode</b>	Privileged EXEC mode, global configuration mode, interface configuration mode, routing protocol configuration mode, and routing map configuration mode
<b>Default Level</b>	14
<b>Usage Guide</b>	Information about the status of only the currently running routing protocol is displayed, and the information about a routing protocol that is not running is not displayed.
<b>Examples</b>	N/A

## 4.46 show ipv6 prefix-list

Use this command to display the information about the IPv6 prefix list or its entries.

**show ipv6 prefix-list** [*prefix-name*]

Parameter	Parameter	Description
<b>description</b>	<i>prefix-name</i>	Name of the IPv6 prefix list.

**Default configuration** The configuration information of all the IPv6 prefix lists is displayed.

**Command mode** Privileged EXEC mode, global configuration mode, interface configuration mode, route protocol configuration mode, route map configuration mode

**Usage guideline** If no prefix list is specified, the configurations of all the prefix lists are displayed, otherwise only the configuration of the specified prefix list is displayed.

### Examples

```
Ruijie# show ipv6 prefix-list
ipv6 prefix-list p6: 2 entries
    seq 5 permit 13::/20
    seq 10 permit 14::/20
```

## 4.47 show key chain

Use this command to display the key chain configuration.

**show key chain** [*key-chain-name*]

Parameter	Parameter	Description
<b>description</b>	<i>key-chain-name</i>	(Optional) Display the configuration of the specified key chain.

**Default** The configuration information of all key chains is displayed.

**Command mode** Privileged EXEC mode, global configuration mode, interface configuration mode, routing protocol configuration mode, and key chain configuration mode.

**Usage guideline** If no key chain is specified, the configuration information of all key chains is displayed.

**Examples**

```
Ruijie# show key chain
route-map AAA, permit, sequence 10
Match clauses:
ip address 2
Set clauses:
metric 10
Ruijie(config)#show key chain
key chain kc
    key 1 -- text "ruijie"
        accept-lifetime (12:11:00 May  2 2001) - (infinite)
        send-lifetime (always valid) - (always valid) [valid now]
```

Field	Description
key chain	Key chain name.
key	Key ID.
accept-lifetime	Lifetime in the accept direction.
send-lifetime	Lifetime in the send direction.

Related command	Command	Description
	-	-

**Platform description** -

## 4.48 show route-map

Use the command to display the configuration of the route map.

**show route-map** [*route-map-name*]

Parameter description	Parameter	Description
	<i>route-map-name</i>	(Optional) Display the configuration information of the specified the route map.

**Default configuration** The configuration information of all the route maps is displayed.

**Command mode** Privileged EXEC mode, global configuration mode, interface configuration mode, routing protocol configuration mode, route map configuration mode.

**Usage guidelines** If no route map is specified, the configurations of all the route maps will be displayed, otherwise only the configuration of the specified route map is displayed.

```
Ruijie# show route-map
route-map AAA, permit, sequence 10
Match clauses:
ip address 2
Set clauses:
metric 10
```

**Examples**

Field	Description
route-map	Name of the route map.
Permit	The route map contains the permit keyword.
sequence 10	Sequence number of the route map.
Match clauses	Set the matching rule. Whether to perform the set operation depends on the permit or deny keyword in the route map.
Set clauses	Set the operation when the rule is matched.

## 5 OSPFv2 Commands

### 5.1 area

Use this command to configure the specified OSPF area. Use the **no** form of this command to restore the default setting.

**area** *area-id*

**no area** *area-id*

#### Parameter Description

Parameter	Description
<i>area-id</i>	ID of the OSPF area. The value can be a decimal integer or an IP address.

**Defaults** No OSPF area is configured by default.

#### Command

**Mode** Routing process configuration mode

**Usage Guide** Use the no form of this command to remove the specified OSPF area and its configuration, including the area-based **area authentication**, **area default-cost**, **area filter-list**, and **area nssa** commands.

- Do not remove the OSPF area configuration under the following conditions:
- Virtual links exist in the backbone area. The virtual links must be removed at first.
- The corresponding network area command exists in any area. All network segment commands added to an area must be removed at first.

**Configuration** The following example removes the configuration of OSPF area 2.

#### Examples

```
Ruijie(config)# router ospf 2
Ruijie(config-router)# no area 2
```

#### Related Commands

Command	Description
<b>network area</b>	Defines the interface where OSPF runs and the belonging area of the interface.

**Platform** N/A  
**Description**

## 5.2 area authentication

Use this command to enable OSPF area authentication. Use the **no** form of this command to restore the default setting.

**area** *area-id* **authentication** [ **message-digest** ]

**no area** *area-id* **authentication**

### Parameter Description

Parameter	Description
<i>area-id</i>	Specifies ID of the area enabled with OSPF. The value can be a decimal integer or an IP address.
<b>message-digest</b>	(Optional) Enables MD5 (message digest 5) authentication mode.

**Defaults** No authentication is enabled by default.

### Command

**Mode** Routing process configuration mode

**Usage Guide** The RGOS software supports three authentication types:

- 1) 0, no authentication. The authentication type in the OSPF packet is 0 when this command is not executed to enable OSPF authentication.
- 2) 1, plain text authentication mode. When this command is configured, the message-digest option is not used.
- 3) 2, MD5 authentication mode. When this command is configured, the message-digest option is used.

All devices in the same OSPF area must use the same authentication type. If authentication is enabled, the authentication password must be configured on an interface connecting neighbors. You can use the **ip ospf authentication-key** command to configure the plain text authentication password, and the **ip ospf message-digest-key** command to configure the MD5 authentication password in interface configuration mode.

**Configuration Examples** The following example uses MD5 authentication and the authentication password backbone in area 0 (backbone area) of the OSPF routing process.

```
Ruijie(config)# interface fastEthernet 0/1
Ruijie(config-if-FastEthernet 0/1)# ip address 192.168.12.1 255.255.255.0
Ruijie(config-if-FastEthernet 0/1)# ip ospf message-digest-key 1 md5 backbone
Ruijie(config)# router ospf 1
Ruijie(config-router)# network 192.168.12.0 0.0.0.255 area 0
Ruijie(config-router)# area 0 authentication message-digest
```

### Related Commands

Command	Description
<b>ip ospf authentication-key</b>	Defines the OSPF plain text authentication password.
<b>ip ospf message-digest-key</b>	Defines the OSPF MD5 authentication password.

<b>area virtual-link</b>	Defines a virtual link.
--------------------------	-------------------------

**Platform** N/A

**Description**

## 5.3 area default-cost

Use this command to define the cost ( OSPF metric ) of the default aggregate route advertised to the stub area or not-so-stubby area ( NSSA ) in routing process configuration mode. Use the **no** form of this command to restore the default setting.

**area** *area-id* **default-cost** *cost*

**no** **area** *area-id* **default-cost**

Parameter Description	Parameter	Description
	<i>area-id</i>	ID of the stub area or NSSA
	<i>cost</i>	Cost of the default aggregate route advertised to the stub area or NSSA. The range is from 0 to 16777215.

**Defaults** The default is 1.

**Command**

**Mode** Routing process configuration mode

**Usage Guide** This command takes effect only on the Area Border Router ( ABR ) of the stub area or the ABR/Autonomous System Border Router ( ASBR ) of the NSSA.

The ABR can advertise a Link State Advertisement ( LSA ) indicating the default route in the stub area. The ABR/ASBR can advertise an LSA indicating the default route in the NSSA. You can use the **area default-cost** command to modify the LSA cost.

**Configuration** The following example sets the cost of the default aggregate route to 50.

**Examples**

```
Ruijie(config)# router ospf 1
Ruijie(config-router)# network 172.16.0.0 0.0.255.255 area 0
Ruijie(config-router)#network 192.168.12.0 0.0.0.255 area 1
Ruijie(config-router)# area 1 stub
Ruijie(config-router)# area 1 default-cost 50
```

Related Commands	Command	Description
	<b>area stub</b>	Sets an OSPF area as a stub area.
	<b>area nssa</b>	Sets an OSPF area as an NSSA.

**Platform** N/A



**Description**

## 5.4 area filter-list

Use this command to filter the inter-area routes on the ABR. Use the **no** form of this command to restore the default setting.

**area** *area-id* **filter-list** { **access** *acl-name* | **prefix** *prefix-name* } { **in** | **out** }

**no area** *area-id* **filter-list** { **access** *acl-name* | **prefix** *prefix-name* } { **in** | **out** }

**Parameter  
Description**

Parameter	Description
<i>area-id</i>	Area ID
<i>acl-name</i>	Name of an Access Control List ( ACL )
<i>prefix-name</i>	Prefix-list name
<b>in</b>   <b>out</b>	Applies the ACL rule to the routes incoming/outgoing the area.

**Defaults** No filtering is configured by default.

**Command**

**Mode** Routing process configuration mode

**Usage Guide** This command can be configured only on an ABR.  
You can use this command when it is required to filter the inter-area routes on the ABR.

**Configuration** The following example sets area 1 to learn only the inter-area routes of 172.22.0.0/8.

**Examples**

```
Ruijie# configure terminal
Ruijie(config)# access-list 1 permit 172.22.0.0 0.255.255.255
Ruijie(config)# router ospf 100
Ruijie(config-router)# area 1 filter-list access 1 in
```

**Related  
Commands**

Command	Description
N/A	N/A

**Platform** N/A

**Description**

## 5.5 area nssa

Use this command to set an OSPF area as an NSSA in routing process configuration mode. Use the **no** form of this command to delete the NSSA or the NSSA configuration.

**area** *area-id* **nssa** [ **no-redistribution** ] [ **default-information-originate** [ **metric** *value* ]

[ **metric-type** *type* ] ] [ **no-summary** ] [ **translator** [ **stability-interval** *seconds* | **always** ] ]

```
no area area-id nssa [ no-redistribution ] [ default-information-originate [ metric value ]
[ metric-type type ] ] [ no-summary ] [ translator [ stability-interval | always ] ]
```

**Parameter  
Description**

Parameter	Description
<i>area-id</i>	NSSAID
<b>no-redistribution</b>	Imports the routing information to a common area other than the NSSA for the NSSA ABR.
<b>default-information originate</b>	Generates and imports the default Type 7 LSA to the NSSA. This option takes effect only on the NSSA ABR or ASBR.
<b>metric</b> <i>value</i>	Sets the metric of the generated default LSA. The range is from 0 to 16777214. The default value is 1.
<b>metric-type</b> <i>type</i>	Sets the type of the generated LSA to N-1 or N-2. The default value is N-2.
<b>no-summary</b>	Prevents the NSSA ABR from sending summary LSAs ( Type-3 LSA ).
<b>translator</b>	Configures the translator for the NSSA ABR.
<b>stability-interval</b> <i>seconds</i>	Configures the stability interval in seconds for the NSSA ABR that functions as a translator to change to a non-translator. The range is from 0 to 2147483647. The default value is 40.
<b>always</b>	Configures that an NSSA ABR always functions as a translator. The NSSA ABR is the backup translator by default.

**Defaults** No NSSA is defined by default.

**Command**

**Mode** Routing process configuration mode

**Usage Guide** The default-information-originate parameter is used to generate the default Type-7 LSA. However, on the NSSA ABR, the default Type-7 LSA will always be generated; On the ASBR (which is not an ABR at the same time), the default Type-7 LSA is generated only when the default route exists in the routing table.

The no-redistribution parameter prevents the OSPF from advertising the external routes imported with the redistribute command to the NSSA on the ASBR. This option is generally used when the NSSA device is both an ASBR and an ABR.

To reduce the number of LSAs sent to the NSSA, you can configure the no-summary parameter on the ABR to prevent it from advertising summary LSAs (Type-3 LSAs) to the NSSA. In addition, you can use the area default-cost command on the NSSA ABR to configure the cost of the default route advertised to the NSSA. By default, this cost is 1.

If an NSSA has multiple ABRs, the ABR with the greatest ID is selected as the Type-7 or Type-5 translator. To configure that an NSSA ABR always functions as a translator, you can use the translator always parameter. If the translator role of an ABR is taken away by another ABR, the ABR still possesses the conversion capability within stability-interval. If the ABR fails to take back its translator role when stability-interval expires, the LSA that changes from Type-7 to Type-5 will be

removed from the autonomous domain.

To avoid route loops, Type-5 LSAs generated from Type-7 convergence will be eliminated immediately after the current device stopped serving as a translator, with no need to wait until the stability-interval expires.

In a same NSSA, you are recommended to configure the **translator always** parameter on only one ABR.

**Configuration** The following example sets area 1 as an NSSA on all routers of the area.

**Examples**

```
Ruijie(config)#router ospf1
Ruijie(config-router)#network 172.16.0.0 0.0.255.255 area0
Ruijie (config-router)#network 192.168.12.0 0.0.0.255 area 1
Ruijie(config-router)# area1nssa
```

**Related  
Commands**

Command	Description
<b>area default-cost</b>	Defines the cost (OSPF metric) of the default aggregate route advertised to the NSSA.

**Platform** N/A

**Description**

## 5.6 area range

Use this command to configure inter-area route aggregation for OSPF. Use the **no** form of this command to delete route aggregation. Use the **no** form with the cost parameter to restore the default metric of the aggregate route, but not delete route aggregation.

**area area-id range ip-address net-mask [ advertise | not-advertise ] [ cost cost ]**

**no area area-id range ip-address net-mask [ cost ]**

**Parameter  
Description**

Parameter	Description
<i>area-id</i>	ID of the area where the aggregate route is injected into. The value can be a decimal integer or an IP address.
<i>ip address net-mask</i>	Network segment whose routes are to be aggregated
<b>advertise   not-advertise</b>	Whether to advertise the aggregate route
<b>cost cost</b>	Sets the priority of the interface. The range is from 0 to 16777215.

**Defaults**

No inter-area route aggregation is configured by default.

The configured aggregation range is advertised by default.

The default metric of the aggregate route depends on whether the device is compatible with RFC1583. If yes, the default metric is the smallest cost of the aggregate route. If no, the default metric is the largest cost of the aggregate route.

**Command****Mode** Routing process configuration mode

**Usage Guide** This command takes effect only on the ABR to aggregate multiple routes of an area into a route and advertise it to other areas. Route combination occurs only on the border of an area. The devices inside an area see the specific routing information, but the devices outside the area see only one aggregate route. The advertise and not-advertise options can set whether to advertise the aggregate route for filtering and masking. The aggregate route is advertised by default.

You can use the cost option to set the metric of the aggregate route.

You can define route aggregate in multiple areas to simplify the routes in the whole OSPF routing area. This improves the network forwarding performance, especially in large networks.

The area range of route aggregation is determined according to the longest match when multiple aggregate routes with direct inclusion relationships are configured.

**Configuration** The following example aggregate the routes of area 1 into a route 172.16.16.0/20.

**Examples**

```
Ruijie(config)#router ospf 1
Ruijie(config-router)#network 172.16.0.0 0.0.15.255area0
Ruijie((config-router)#network 172.16.17.0 0.0.15.255area1
Ruijie(config-router)#area-range 172.16.16.0 255.255.240.0
```

**Related  
Commands**

Command	Description
<b>discard-route</b>	Enables a discarded route to be added to a routing table.
<b>summary-address</b>	Configures the OSPF external route aggregation.

**Platform** N/A**Description**

## 5.7 area stub

Use this command to set an OSPF area as a stub area or full stub area. Use the **no** form of this command to restore the default setting.

**area** *area-id* **stub** [ **no-summary** ]

**no area** *area-id* **stub** [ **no-summary** ]

**Parameter  
Description**

Parameter	Description
<i>area-id</i>	Stub area ID
<b>no-summary</b>	(Optional) Prevents the ABR from advertising the network summary link to the stub area. Here the stub area is called the full stub area. Only the ABR needs this parameter.

**Defaults** No stub area is defined by default.

**Command**

**Mode** Routing process configuration mode

**Usage Guide** All devices in the OSPF stub area must be configured with the area stub command. The ABR only sends three types of link state advertisement (LSA) to the stub area: 1) type 1, device LSA; 2) type 2, network LSA; 3) type 3, network summary LSA. For the routing table, the devices in the stub area can learn only the routes inside the OSPF routing domain, including the internal default routes generated by the ABR.

To configure a full stub area, use the area stub command with the no-summary keyword on the ABR. The devices in the full stub area can learn only the routes in the local area and the internal default routes generated by the ABR.

Two commands can configure an OSPF area as a stub area: the area stub and area default-cost commands. All devices connected to the stub area must be configured with the area stub command, but the area default-cost command can be executed only on the ABR. The area default-cost command defines the initial cost (metric) of the internal default route.

**Configuration** The following example sets area 1 as the stub area on all devices in area 1.

**Examples**

```
Ruijie(config)# router ospf1
Ruijie(config-router)# network 172.16.0.0 0.0.255.255 area 0
Ruijie (config-router)# network 192.168.12.0 0.0.0.255 area 1
Ruijie(config-router)# area 1 stub
```

**Related  
Commands**

Command	Description
<b>area default-cost</b>	Defines the cost (OSPF metric value) of the default aggregate route advertised to the stub area.

**Platform** N/A

**Description**

## 5.8 area virtual-link

Use this command to define the OSPF virtual link in routing process configuration mode. Use the **no** form of this command to restore the default setting.

**area** *area-id* **virtual-link** *router-id* [ **authentication** [ **message-digest** | **null** ] ] [ **dead-interval** { *seconds* | **minimal** } ] [ **hello-multiplier** *multiplier* ] [ **hello-interval** *seconds* ] [ **retransmit-interval** *seconds* ] [ **transmit-delay** *seconds* ] [ [ **authentication-key** [ 0|7 ] *key* ] | [ **message-digest-key** *key-id* **md5** [ 0|7 ] *key* ] ]

**no area** *area-id* **virtual-link** *router-id* [ **authentication** ] [ **dead-interval** ] [ **hello-interval** ] [ **retransmit-interval** ] [ **transmit-delay** ] [ [ **authentication-key** ] | [ **message-digest-key** *key-id* ] ]

Parameter Description	Parameter	Description
	<i>area-id</i>	ID of the OSPF transition area. The value can be a decimal integer or an IP address.
	<i>router-id</i>	ID of the router neighboring to the virtual link. It can be viewed with the show ip ospf command.
	<b>dead-interval</b> <i>seconds</i>	(Optional) Defines the time to declare neighbor loss in seconds. The range is 0 to 2147483647. This value must be consistent with that of the neighbor.
	<b>minimal</b>	Enables the Fast Hello function and sets the death clock to 1 second.
	<b>hello-multiplier</b>	Multiplies dead-interval with hello-interval in the Fast-Hello function.
	<i>multiplier</i>	Specifies the number of Hello packets that are sent every second in the Fast Hello function. The range is from 3 to 20.
	<b>hello-interval</b> <i>seconds</i>	(Optional) Defines the interval at which the HELLO packet is sent by the OSPF to the virtual link in seconds. The range is from 1 to 65535. This value must be consistent with that of the neighbor.
	<b>retransmit-interval</b> <i>seconds</i>	(Optional) OSPF LSA retransmission interval in seconds. The range is from 0 to 65535. The parameter setting must consider the round-trip time of packets on the link.
	<b>transmit-delay</b> <i>seconds</i>	(Optional) OSPF LSA transmission delay in seconds. The range is from 0 to 65535. This value adds the LSA keep alive period. When the LSA keep alive period reaches a threshold, the LSA will be refreshed.
	<b>authentication-key</b> [0 7] <i>key</i>	(Optional) Defines the OSPF plain text authentication key. The plain text authentication key between neighbors must be the same. The service password-encryption command enables the key to be displayed in encrypted manner. 0 indicates that the key is displayed in plain text. 7 indicates that the key is displayed in cipher text.
	<b>message-digest-key</b> <i>key-id</i> <b>md5</b> [0 7] <i>key</i>	(Optional) Defines the OSPF MD5 authentication key and key ID. The MD5 authentication key ID and key between neighbors must be the same. The service password-encryption command enables the key to be displayed in encrypted manner. 0 indicates that the key is displayed in plain text. 7 indicates that the key is displayed in cipher text.
	<b>authentication</b>	Sets the authentication type to plain text.
	<b>message-digest</b>	Sets the authentication type to MD5.
	<b>null</b>	Sets the authentication type to no authentication.

**Defaults**

The following are the default values:

dead-interval: 40seconds

hello-interval: 10seconds

retransmit-interval: 5seconds

transmit-delay: 1second

authentication: null

The Fast Hello function is disabled by default.

The other parameters do not have default values.

## Command

**Mode** Routing process configuration mode

## Usage Guide

A virtual link can connect an area to the backbone area, or another non-backbone area. In the OSPF routing domain, all areas must connect to the backbone area. If an area disconnects from the backbone area, a virtual link to the backbone area is required. Otherwise, the network communication will become abnormal. The virtual link is created between two ABRs. The area that belongs to both ABRs is called the transition area, which can never be a stub area or NSSA.

The router-id parameter indicates the ID of OSPF neighbor router and can be displayed with the show ip ospf neighbor command. You can configure the loopback address as the router ID.

The area virtual-link command defines only the authentication key for a virtual link. You can use the area authentication command to enable the OSPF packet authentication in areas connected over the virtual link in routing process configuration mode.

OSPF supports the Fast Hello function.

If the Fast Hello function is enabled, the OSPF can discover neighbors and detects invalid neighbors quickly. You can enable the OSPF Fast Hello function by specifying the keywords minimal and hello-multiplier, and the multiplier parameter. You can set the death clock to 1 second in minimal and hello-multiplier to a value equal to or greater than 2. In this case, the Hello packet sending interval is less than 1 second.

The hello-interval field of a Hello packet received by a virtual link is omitted if the Fast Hello function is enabled on the virtual link and the hello-interval field is set to 0 for Hello packets advertised from the virtual link.

No matter the Fast Hello function is enabled or not, the values of dead-interval must be consistent on both ends of a virtual link. The values of hello-multiplier on both ends can be different if at least one Hello packet can be received within dead-interval. You can use the show ip ospf virtual-links command to monitor dead-interval and hello-interval configured for a virtual link.

For the Fast Hello function, you can only configure either the **dead-interval minimal hello-multiplier** parameter or the **hello-interval** parameter.

**Configuration** The following example sets area 1 as the transition area to establish virtual link with neighbor 2.2.2.2.

## Examples

```
Ruijie(config)# router ospf 1
Ruijie(config-router)# network 172.16.0.0 0.0.15.255 area0
Ruijie(config-router)# network 172.16.17.0 0.0.15.255 area1
Ruijie(config-router)# area1 virtual-link 2.2.2.2
```

The following example sets area 1 as the transition area to establish a virtual link with neighbor 1.1.1.1. This virtual link connects area 10 and the backbone area, and works with the OSPF packet authentication in MD5 mode.

```
Ruijie(config)# router ospf 1
Ruijie(config-router)# network 172.16.17.0 0.0.15.255 area1
```

```
Ruijie(config-router)# network 172.16.252.0 0.0.0.255 area 10
Ruijie(config-router)# area 0 authentication message-digest
Ruijie(config-router)# area 1 virtual-link 1.1.1.1 message-digest-key 1 md5 hello
```

The following example sets area 1 as the transition area to establish a virtual link with neighbor 1.1.1.1, enables the Fast Hello function on this virtual link, and sets the multiplier to 3.

```
Ruijie(config)# router ospf 1
Ruijie(config-router)# network 172.16.17.0 0.0.15.255 area 1
Ruijie(config-router)# network 172.16.252.0 0.0.0.255 area 10
Ruijie(config-router)# area 1 virtual-link 1.1.1.1 dead-interval minimal
hello-multiplier 3
```

#### Related Commands

Command	Description
<b>area authentication</b>	Enables the OSPF area packet authentication and define the authentication mode.
<b>show ip ospf</b>	Displays the OSPF process information, including the router ID.
<b>show ip ospf virtual-links</b>	Monitors information about a virtual link.

**Platform** N/A

**Description**

## 5.9 auto-cost

Use this command to enable the auto-cost function and set the reference bandwidth according to the reference bandwidth. Use the **no** form of this command to restore the default setting.

**auto-cost** [ **reference-bandwidth** *ref-bw* ]

**no auto-cost** [ **reference-bandwidth** ]

#### Parameter Description

Parameter	Description
<i>ref-bw</i>	Reference bandwidth, in the range from 1 to 4294967 Mbps.

**Defaults** The default is 100Mbps.

#### Command

**Mode** Routing process configuration mode

#### Usage Guide

By default, the cost of an OSPF interface is equal to the reference value of the auto cost divided by the interface bandwidth.

Run the **auto-cost** command to obtain the reference value of the auto cost. The default value is 100 Mbps.

Run the **bandwidth** command to set the interface bandwidth.

The costs of OSPF interfaces on several typical lines are as follows:



64Kbps serial line: The cost is 1562.

E1 line: The cost is 48.

10M Ethernet: The cost is 10.

100M Ethernet: The cost is 1.

If you run the **ip ospf cost** command to configure the cost of an interface, the configured cost will automatically overwrite the cost that is computed based on the auto cost.

**Configuration** The following example configures the reference bandwidth as 10 Mbps.

**Examples**

```
Ruijie(config)# routerospf1
Ruijie(config-router)# network172.16.10.0 0.0.0.255 area0
Ruijie(config-router)# auto-costreference-bandwidth10
```

**Related  
Commands**

Command	Description
<b>show ip ospf</b>	Displays the OSPF global configuration information
<b>ip ospf cost</b>	Sets the cost value of the OSPF interface.
<b>bandwidth</b>	Sets the interface bandwidth. This setting does not affect data transmission rate.

**Platform** N/A

**Description**

## 5.10 capability opaque

Use this command to enable Opaque LSA. Use the **no** form of this command to disable this function.

**capability opaque**

**no capability opaque**

**Parameter  
Description**

Parameter	Description
N/A	N/A

**Defaults** Opaque LSA is enabled by default.

**Command  
Mode** Routing process configuration mode.

**Usage Guide** N/A

**Configuration** The following example disables Opaque LSA capability.

**Examples**

```
Ruijie(config)# router ospf 1
Ruijie(config-router)# no capability opaque
```

Related Commands	Command	Description
	<b>show ip ospf</b>	Displays the global configuration of OSPF.

**Platform** N/A

**Description**

## 5.11 clear ip ospf process

Use this command to clear and restart the OSPF instance.

**clear ip ospf** (*process-id*) **process**

Parameter Description	Parameter	Description
	<i>process-id</i>	OSPF instance ID. When the ID is specified, the command clears data related to the specified instance and restarts the OSPF instance. When no ID is specified, the command clears data related to all running OSPF instances and restarts all the running OSPF instances.

**Defaults** The rule recommended in the RFC 1583 is used by default.

**Command**

**Mode** Privileged EXEC mode

**Usage Guide** Resetting the entire OSPF process causes that all neighbors are re-established and OSPF is greatly affected. Therefore, you are prompted to confirm the execution for deliberation.

**Configuration** The following example clears data of OSPF instance 1 and restarts OSPF instance 1.

**Examples**  
Ruijie#clearipospflprocess

Related Commands	Command	Description
	N/A	N/A

**Platform** N/A

**Description**

## 5.12 compatible rfc1583

Use this command to determine the RFC 1583 or RFC 2328 rule for selecting the optimal route among route table several routes to the same destination out of the Autonomous System (AS).

**compatible rfc1583**

**no compatible rfc1583****Parameter  
Description**

Parameter	Description
N/A	N/A

**Defaults**

The RFC 1583 rule is used by default.

**Command****Mode**

Routing process configuration mode

**Usage Guide**

N/A

**Configuration**

The following example determines the best route with the RFC 2328 rule.

**Examples**

```
Ruijie(config)# routerospf1
Ruijie(config-router)# nocompatibleRFC1583
```

**Related  
Commands**

Command	Description
<b>show ip ospf</b>	Displays the OSPF global configuration information

**Platform**

N/A

**Description**

## 5.13 default-information originate

Use this command to generate a default route to be injected into the OSPF routing domain in routing process configuration mode. Use the **no** form of this command to restore the default setting.

**default-information originate** [ **always** ] [ **metric** *metric* ] [ **metric-type** *type* ] [ **route-map** *map-name* ]

**no default-information originate** [ **always** ] [ **metric** ] [ **metric-type** ] [ **route-map** *map-name* ]

**Parameter  
Description**

Parameter	Description
<b>always</b>	(Optional) Generates the default route unconditionally, no matter whether the default route exists locally or not.
<b>metric</b> <i>metric</i>	(Optional) Initial metric of the default route in the range from 0 to 16777214
<b>metric-type</b> <i>type</i>	(Optional) Type of the default route. There are two type of OSPF external routes: type 1, different metrics on different devices; type 2, same metric on different devices. An external route of type 1 is more trustworthy than that of type 2.

<b>route-map</b> <i>map-name</i>	Associated route map name. No route map is associated by default.
----------------------------------	---

**Defaults**

No default route is generated by default.

The default value of metric is 1.

The default value of metric-type is 2.

**Command**

**Mode** Routing process configuration mode

**Usage Guide**

When the **redistribute** or **default-information** command is executed, the OSPF-enabled device automatically turns into the ASBR. The ASBR cannot generate the default route automatically or advertise it to all the devices in the OSPF routing domain. The ASBR can generate the default route with the **default-information originate** command in routing process configuration mode.


If the **always** parameter is used, the OSPF routing process advertises an external default route to neighbors, no matter the default route exists or not. However, the local device does not display the default route. To make sure whether the default route is generated, use the **show ip ospf database** command to display the OSPF link state database. The external link identified with 0.0.0.0 indicates the default route. You can use the **show ip route** command on the OSPF neighbor to display the default route.

The metric of the external default route can be defined only with the **default-information originate** command.

There are two types of OSPF external routes: type 1 external routes have changeable routing metrics, while type 2 external routes have constant routing metrics. For two parallel routes with the same route metric to the same destination network, the type 1 route takes precedence over the type 2 route. As a result, the **show ip route** command displays only the type 1 route.

This command generates a default route of Type-5 LSA, which will not be flooded to the NSSA area. To generate a default route in the NSSA area, use the **area nssa default-information originate** command.

The routers in the stub area cannot generate external default routes.

 The range of set metric is 0 to 16777214 for the associated route map. If the value exceeds the range, introducing a route fails.

**Configuration Examples**

The following example configures that OSPF generates an external default route and injects it to the OSPF routing domain. The default route is of type 1 and the metric 50.

```
Ruijie(config)#routerospf 1
Ruijie(config-router)#network 172.16.24.0 0.0.0.255 area 0
Ruijie(config-router)#default-information originate
always metric 50 metric-type 1
```

**Related Commands**

Command	Description
<b>show ip ospf database</b>	Displays OSPF link state database.
<b>show ip route</b>	Displays the IP route table.

<b>redistribute</b>	Redistributes routes of other routing processes.
---------------------	--

**Platform** N/A

**Description**

## 5.14 default-metric

Use this command to set the **default metric** of OSPF redistribution route. Use the **no** form of this command to restore the default setting.

**default-metric** *metric*

**no default-metric**

Parameter Description	Parameter	Description
	<i>metric</i>	Default metric of the OSPF redistribution route in the range from 1 to 16777214

**Defaults** The default metric is not configured by default.

**Command**

**Mode** Routing process configuration mode

**Usage Guide** The **default-metric** command must work with the **redistribute** command in routing process configuration mode to modify the initial metric of all redistributed routes.

The configuration result of the **default-metric** command does not take effect for the external routes injected into the OSPF routing domain with the **default-information originate** command.

**Configuration** The following example configures the default metric of the OSPF redistribution route as 50.

**Examples**

```
Switch(config)# router rip
Ruijie(config-router)# network 192.168.12.0
Switch(config-router)# version 2
Ruijie(config-router)# exit
Ruijie(config)# router ospf 1
Ruijie(config-router)# network 172.16.10.0 0.0.0.255 area 0
Switch(config-router)# default-metric 50
Ruijie(config-router)# redistribute rip subnets
```

**Related  
Commands**

Command	Description
<b>redistribute</b>	Redistributes the routes of other routing processes.
<b>show ip ospf</b>	Displays the OSPF global configuration information.

**Platform** N/A

**Description**

## 5.15 discard-route

Use this command to enable adding the discard-route into the core route table. Use the **no** form of this command to disable this function.

**discard-route** { **internal** | **external** }

**no discard-route** { **internal** | **external** }

**Parameter  
Description**

Parameter	Description
<b>internal</b>	Enables adding the discard-route generated with the area range command
<b>external</b>	Enables adding the discard-route generated with the summary-address command.

**Defaults** Adding the discard-route is enabled by default.

**Command**

**Mode** Routing process configuration mode

**Usage Guide** After route aggregation, the range may exceed the actual network range of the route table, and sending the data to the nonexistent network may cause loops or increase router loads. To prevent this situation, the discard-route is added to the route table on the ABR or the ASBR. The discard-route is generated automatically and will not be transmitted.

**Configuration** The following example disables adding the discard routes generated with the area range command.

**Examples**

```
Ruijie(config)# router ospf 1
Ruijie(config-router)# no discard-route internal
```

**Related  
Commands**

Command	Description
<b>area range</b>	Configures the route aggregation between OSPF areas.
<b>summary-address</b>	Configures the route aggregation out of the OSPF routing domain.

**Platform** N/A

**Description**

## 5.16 distance ospf

Use this command to set the Administration Distance (AD) of different types of OSPF routes. Use the **no** form of this command to restore the default setting.

**distance** { *distance* | **ospf** { [ **intra-area** *distance* ] [ **inter-area** *distance* ] [ **external** *distance* ] } }

**no distance** [ **ospf** ]

### Parameter Description

Parameter	Description
<i>distance</i>	Sets the route AD in the range from 1 to 255.
<b>intra-area</b> <i>distance</i>	Sets the AD of the intra-area route in the range from 1 to 255.
<b>inter-area</b> <i>distance</i>	Sets the AD of the inter-area route in the range from 1 to 255.
<b>External</b> <i>distance</i>	Sets the AD of the external route in the range from 1 to 255.

### Defaults

The default value is 110.

The default intra-area distance is 110.

The default inter-area distance is 110.

The default external distance is 110.

### Command

**Mode** OSPF Routing process configuration mode

**Usage Guide** This command is used to specify different ADs for different types of OSPF routes.

**Configuration** The following example sets the OSPF external route AD to 160.

### Examples

```
Ruijie(config)# routerospf1
Ruijie(config-router)# distance ospf external 160
```

### Related Commands

Command	Description
N/A	N/A

**Platform** N/A

### Description

## 5.17 distribute-list in

Use this command to configure LSA filtering. Use the **no** form of this command to restore the default setting.

**distribute-list** { [ *access-list-number* | *name* ] | *prefix* *prefix-list-name* [ **gateway** *prefix-list-name* ] |

**route-map** *route-map-name* } *in* [ *interface-type* *interface-number* ]

**no distribute-list** { [ *access-list-number* | *name* ] | *prefix* *prefix-list-name* [ **gateway** *prefix-list-name* ] |

*route-map* *route-map-name* } *in* [ *interface-type* *interface-number* ]

Parameter Description	Parameter	Description
	<i>access-list-number</i>   <b>name</b>	Uses the ACL filtering rule.
	<b>gateway</b> <i>prefix-list-name</i>	Uses the gateway filtering rule.
	<b>Prefix</b> <i>prefix-list-name</i>	Uses the prefix-list filtering rule.
	<b>route-map</b> <i>route-map-name</i>	Uses the route-map filtering rule.
	<i>interface-type</i> <i>interface-number</i>	Configures the LSA route filtering on the interface.

**Defaults** No filtering is configured by default.

**Command**

**Mode** Routing process configuration mode

**Usage Guide** This configuration filters the received LSAs, and only those matching the filtering conditions are involved in the Shortest Path First (SPF) calculation to generate the corresponding routes. It does not affect the link status database or the route table of the neighbors. It only affects the routing entries calculated by local OSPF. This function is used to control routes that enter the ABR or ASBR.

The following route-map rules will be supported if the route-map parameter is configured:

**match interface**

**match ip address**

**match ip address prefix-list**

**match ip next-hop**

**match ip next-hop prefix-list**

**match metric**

**match tag**

Filtering routes by using the **distribute-list in** command affects forwarding of local routes, but does not affect route computation based on LSAs. Therefore, if route filtering is configured on the ABR, Type 3 LSAs will still be generated and advertised to other areas because routes can still be computed based on LSAs. As a result, black-hole routes are generated. In this case, you can run the **area filter-list** or **area range** (containing the **not-advertise** parameter) command on the ABR to prevent generation of black-hole routes.

**Configuration** The following example configures LSA filtering.

**Examples**

```
Ruijie(config)# access-list3permit172.16.0.00.0.127.255
Ruijie(config)# router ospf 25
Ruijie(config-router)# distribute-list 3 in ethernet 0/1
```

Related Commands	Command	Description
	<b>distribute-list out</b>	Filters redistribution routes.

**Platform** N/A



## Description

## 5.18 distribute-list out

Use this command to configure filtering redistribution routes. The function is similar to that of the **redistribute** command. Use the **no** form of this command to restore the default setting.

**distribute-list** { [ *access-list-number* | *name* ] | **prefix** *prefix-list-name* } **out** [ **connected** | **ospf** *process-id* | **rip** | **static** ]

**no distribute-list** { [ *access-list-number* | *name* ] | **prefix** *prefix-list-name* } **out** [ **connected** | **ospf** *process-id* | **rip** | **static** ]

**Parameter  
Description**

Parameter	Description
<i>access-list-number</i>   <i>name</i>	Uses the ACL filtering rule.
<b>prefix</b> <i>prefix-list-name</i>	Uses the prefix-list filtering rule.
<b>connected</b>   <b>ospf</b> <i>process-id</i>   <b>rip</b>   <b>static</b>	Source of the routes to be filtered

**Defaults** No filtering is configured by default.

**Command**

**Mode** Routing process configuration mode

**Usage Guide** Similar to the redistribute route-map command, the distribute-list out command filters the routes that other protocols redistribute to the OSPF. However, the distribute-list out command does not redistribute routes by itself. It works with the redistribute command in most cases. The ACL filtering rule and the prefix-list filtering rule cannot coexist in the configuration, that is, the two rules cannot be configured at the same time for routes from the same source.

**Configuration** The following example filters the redistributed static routes.

**Examples**

```
Ruijie(config)# routerospf1
Ruijie(config)# redistribute static subnets
Ruijie(config-router)# distribute-list 22 outstatic
Ruijie(config-router)# distribute-list prefix jjj out static
% Access-list filter exists, please de-config first
```

**Related  
Commands**

Command	Description
<b>distribute-list in</b>	Configures LSA filtering.
<b>redistribute</b>	Redistributes routes of other routing processes.

**Platform** N/A  
**Description**

## 5.19 enable mib-binding

Use this command to bind the Management Information Base (MIB) with the specified OSPFv2 process. Use the **no** form of this command to restore the default setting.

**enable mib-binding**

**no enable mib-binding**

Parameter Description	Parameter	Description
	N/A	N/A

**Defaults** The MIB is bound with the OSPFv2 process with the smallest ID by default.

### Command

**Mode** Routing process configuration mode

**Usage Guide** OSPFv2 MIB has no OSPFv2 process information, so the user operates a sole OSPFv2 process by SNMP. By default, OSPFv2 MIB is bound with the OSPFv2 process with the smallest ID. User operations take effect for this process.

To operate the specified OSPF process over Simple Network Management Protocol(SNMP), use this command to bind the MIB to SNMP.

**Configuration** The following example operates OSPFv2 process 100 over SNMP:

### Examples

```
Ruijie(config)# routerospf100
Ruijie(config-router)# enable mib-binding
```

Related Commands	Command	Description
	<b>show ip ospf</b>	Displays the OSPF global configuration information.
	<b>enable traps</b>	Configures the OSPF TRAP function.

**Platform** N/A

**Description**

## 5.20 enable traps

The OSPFv2 process supports 16 kinds of TRAP packets, which are classified into four categories. Use this command to enable sending the specified TRAP messages. Use the **no** form of this command to restore the default setting.

**enable traps** [ **error** [ **IfAuthFailure** | **IfConfigError** | **IfRxBadPacket** | **VirtIfAuthFailure** | **VirtIfConfigError** | **VirtIfRxBadPacket** ] ] **lsa** [ **LsdbApproachOverflow** | **LsdbOverflow** | **MaxAgeLsa** | **OriginateLsa** ] ] **retransmit** [ **IfTxRetransmit** | **VirtIfTxRetransmit** ] ] **state-change**

[ IfStateChange | NbrRestartHelperStatusChange | NbrStateChange |  
 NssaTranslatorStatusChange | RestartStatusChange | VirtIfStateChange |  
 VirtNbrRestartHelperStatusChange | VirtNbrStateChange ] ]  
 no enable traps [ error [ IfAuthFailure | IfConfigError | IfRxBadPacket | VirtIfAuthFailure |  
 VirtIfConfigError | VirtIfRxBadPacket ] ] | Isa [ LsdbApproachOverflow | LsdbOverflow |  
 MaxAgeLsa | OriginateLsa ] | retransmit [ IfTxRetransmit | VirtIfTxRetransmit ] | state-change  
 [ IfStateChange | NbrRestartHelperStatusChange | NbrStateChange |  
 NssaTranslatorStatusChange | RestartStatusChange | VirtIfStateChange |  
 VirtNbrRestartHelperStatusChange | VirtNbrStateChange ] ]

**Parameter  
Description**

Parameter	Description												
<b>error</b>	<p>Configures all traps switches related to errors. Use this parameter to set the following specified error traps switches.</p> <table> <tr> <td><b>Ifauthfailure</b></td><td>Interface authentication error</td></tr> <tr> <td><b>Ifconfigerror</b></td><td>Interface parameter configuration error</td></tr> <tr> <td><b>Ifrxbadpacket</b></td><td>Error packets received on the interface</td></tr> <tr> <td><b>Virtifauthfailure</b></td><td>Authentication error on the virtual interface</td></tr> <tr> <td><b>Virtifconfigerror</b></td><td>Parameter configuration error on the virtual interface</td></tr> <tr> <td><b>Virtifrxbadpacket</b></td><td>Error packets received on the virtual interface</td></tr> </table>	<b>Ifauthfailure</b>	Interface authentication error	<b>Ifconfigerror</b>	Interface parameter configuration error	<b>Ifrxbadpacket</b>	Error packets received on the interface	<b>Virtifauthfailure</b>	Authentication error on the virtual interface	<b>Virtifconfigerror</b>	Parameter configuration error on the virtual interface	<b>Virtifrxbadpacket</b>	Error packets received on the virtual interface
<b>Ifauthfailure</b>	Interface authentication error												
<b>Ifconfigerror</b>	Interface parameter configuration error												
<b>Ifrxbadpacket</b>	Error packets received on the interface												
<b>Virtifauthfailure</b>	Authentication error on the virtual interface												
<b>Virtifconfigerror</b>	Parameter configuration error on the virtual interface												
<b>Virtifrxbadpacket</b>	Error packets received on the virtual interface												
<b>Isa</b>	<p>Configures all traps switches related to the LSA. Use this parameter to set the following specified LSA traps switches.</p> <table> <tr> <td><b>Lsdbapproachoverflow</b></td><td>External LSA count has reached the 90% of the upper limit.</td></tr> <tr> <td><b>Lsdboverflow</b></td><td>External LSA count has reached the upper limit.</td></tr> <tr> <td><b>Maxagelsa</b></td><td>LSA reaching the aging time</td></tr> <tr> <td><b>Originatelsa</b></td><td>Generates new LSA</td></tr> </table>	<b>Lsdbapproachoverflow</b>	External LSA count has reached the 90% of the upper limit.	<b>Lsdboverflow</b>	External LSA count has reached the upper limit.	<b>Maxagelsa</b>	LSA reaching the aging time	<b>Originatelsa</b>	Generates new LSA				
<b>Lsdbapproachoverflow</b>	External LSA count has reached the 90% of the upper limit.												
<b>Lsdboverflow</b>	External LSA count has reached the upper limit.												
<b>Maxagelsa</b>	LSA reaching the aging time												
<b>Originatelsa</b>	Generates new LSA												
<b>retransmit</b>	<p>Configures all traps switches related to the retransmission. Use this parameter to set the following specified retransmit traps switches.</p> <table> <tr> <td><b>Iftxretransmit</b></td><td>Packet retransmission on the interface</td></tr> <tr> <td><b>Virtiftxretransmit</b></td><td>Packet retransmission on the virtual interface</td></tr> </table>	<b>Iftxretransmit</b>	Packet retransmission on the interface	<b>Virtiftxretransmit</b>	Packet retransmission on the virtual interface								
<b>Iftxretransmit</b>	Packet retransmission on the interface												
<b>Virtiftxretransmit</b>	Packet retransmission on the virtual interface												
<b>state-change</b>	<p>Configures all traps switches related to the state change. Use this parameter to set the following specified state-change switches.</p> <table> <tr> <td><b>Ifstatechange</b></td><td>Interface state change</td></tr> <tr> <td><b>NbrRestartHelperStatusChange</b></td><td>State change during the neighbor GR process</td></tr> <tr> <td><b>Nbrstatechange</b></td><td>Neighbor state change</td></tr> <tr> <td><b>NssaTranslatorStatusChange</b></td><td>State change of the NSSA translator</td></tr> <tr> <td><b>RestartStatusChange</b></td><td>State change of the GR Restarter on the device</td></tr> </table>	<b>Ifstatechange</b>	Interface state change	<b>NbrRestartHelperStatusChange</b>	State change during the neighbor GR process	<b>Nbrstatechange</b>	Neighbor state change	<b>NssaTranslatorStatusChange</b>	State change of the NSSA translator	<b>RestartStatusChange</b>	State change of the GR Restarter on the device		
<b>Ifstatechange</b>	Interface state change												
<b>NbrRestartHelperStatusChange</b>	State change during the neighbor GR process												
<b>Nbrstatechange</b>	Neighbor state change												
<b>NssaTranslatorStatusChange</b>	State change of the NSSA translator												
<b>RestartStatusChange</b>	State change of the GR Restarter on the device												

	<b>Virtifstatechange</b>	State change on the virtual interface
	<b>VirtNbrRestartHelper StatusChange</b>	Status change of the virtual neighbor GR process
	<b>Virtnbrstatechange</b>	State change on the virtual neighbor

**Defaults** All TRAP switches are disabled by default.

#### Command

**Mode** Routing process configuration mode

**Usage Guide** The **snmp-server enable traps ospf** command must be configured before you configure this command, for it is limited by the **snmp-server** command.

This command is not limited by the binding of process and MIB, allowing to enable the TRAP switch for different processes simultaneously.

**Configuration** The following example enables all TRAP switches of OSPFv2 process 100.

**Examples**

```
Ruijie(config)# routerospf100
Ruijie(config-router)# enable traps
```

#### Related Commands

Command	Description
<b>show ip ospf</b>	Displays the OSPF global configuration information.
<b>enable mib-binding</b>	Binds the OSPFv2 process with MIB.
<b>snmp-server enable traps ospf</b>	Enables the OSPF TRAP notification function.

**Platform** N/A

#### Description

## 5.21 graceful-restart

Use this command to enable the graceful restart (GR) of OSPF on the device. Use the **graceful-restart grace-period** command to configure the grace period parameter and enable the OSPF GR function. Use the **no** form of this command to disable this function.

**graceful-restart** [ **grace-period** *grace-period* | **inconsistent-lsa-checking** ]  
**no graceful-restart** [ **graceful-period** ]

#### Parameter Description

Parameter	Description
<b>grace-period</b> <i>grace-period</i>	Indicates the grace period, which is the maximum time from occurrence of an OSPF failure to completion of the OSPF GR. The

	value of the graceperiod varies from 1s to 1800s. The default value is 120s.
<b>inconsistent-lsa-checking</b>	Enables topological change detection. If any topological change is detected, OSPF exits the GR process to complete convergence. After GR is enabled, topological change detection is enabled by default.

**Defaults** This function is enabled by default.

**Command**

**Mode** Routing process configuration mode

**Usage Guide** GR is configured based on the OSPF instance. Different instances could be configured with different parameters according to the actual situation.

The graceful restart interval is the longest time between the OSPF restart and the graceful restart. In this period, you can perform link status reconstruction to restore the OSPF status to the original. With the interval times out, the OSPF will exit GR and perform common OSPF operations.

The GR interval is 120 seconds set with the graceful-restart command, and the graceful-restart grace-period command allows you to change the interval explicitly.

GR is unavailable when the Fast Hello function is enabled.

**Configuration** The following example enables GR for the OSPF instance 1 and sets the restart interval for GR.

**Examples**

```
Ruijie(config)# router ospf 1
Ruijie(config-router)# graceful-restart
Ruijie(config-router)# graceful-restart grace-period 60
```

**Related  
Commands**

Command	Description
<b>graceful-restart helper</b>	Enables the OSPF graceful-restart helper.

**Platform** N/A

**Description**

## 5.22 graceful-restart helper

Use this command to enable the graceful restart helper function. Use the **no** form of this command to restore the default setting.

**graceful-restart helper disable**

**no graceful-restart helper disable**

**graceful-restart helper { strict-lsa-checking | internal-lsa-checking }**

**no graceful-restart helper {strict-lsa-checking | internal-lsa-checking }**

**Parameter  
Description**

Parameter	Description
<b>disable</b>	Prohibits a device from acting as a GR helper for another device.

<b>strict-lsa-checking</b>	Indicates that changes in Type 1 to Type 5 and Type 7 LSAs will be checked during the period that the device acts as a GR helper to determine whether the network changes. If the network changes, the device will stop acting as the GR helper.
<b>internal-lsa-checking</b>	Indicates that changes in Type 1 to Type 3 LSAs will be checked during the period that the device acts as a GR helper to determine whether the network changes. If the network changes, the device will stop acting as the GR helper.

**Defaults**

The GR helper is enabled by default.

The router enabled with the GR helper does not check the LSA change by default.

**Command****Mode**

Routing process configuration mode

**Usage Guide**

This command is used to configure the GR helper capability of a router. When a neighbor router implements GR, it sends a Grace-LSA to notify all neighbor routers. If the GR helper function is enabled on the local router, the local router becomes the GR helper on receiving the Grace-LSA, and helps the neighbor to complete GR. The **disable** option indicates that GR helper is not provided for any device that implements GR.

After a device becomes the GR helper, the network changes are not detected by default. If any change takes place on the network, the network topology converges after GR is completed. If you wish that network changes can be quickly detected during the GR process, you can configure **strict-lsa-checking** to check Type 1 to 5 and Type 7 LSAs that indicate the network information or **internal-lsa-checking** to check Type 1 to 3 LSAs that indicate internal routes of the AS domain. When the network scale is large, it is recommended that you disable the LSA checking options (**strict-lsa-checking** and **internal-lsa-checking**) because regional network changes may trigger termination of GR and consequently reduce the convergence of the entire network.

**Configuration**

The following example disables the GF helper and modifies the policy of checking network changes.

**Examples**

```
Ruijie(config)# router ospf1
Ruijie(config-router)# graceful-restart helper disable
Ruijie(config-router)# no graceful-restart helper disable
Ruijie(config-router)# graceful-restart helper
strict-lsa-checking
```

**Related  
Commands**

Command	Description
<b>graceful-restart</b>	Enables GR on the device.

**Platform**

N/A

**Description**

## 5.23 ip ospf authentication

Use this command to configure the authentication type. Use the **no** form of this command to restore the default setting.

**ip ospf authentication** [ **message-digest** | **null** ]

**no ip ospf authentication**

### Parameter Description

Parameter	Description
<b>message-digest</b>	Enables MD5 authentication on the interface.
<b>null</b>	Enables no authentication.

### Defaults

No authentication mode is configured and that of the local area is used on the interface by default.

### Command

#### Mode

Interface configuration mode

### Usage Guide

Plaintext authentication is applicable when **no** option is used with the command. Note that the **no** form of this command restores the default value. Whether authentication is used actually depends on authentication mode configured for the local area of the interface. If authentication mode is configured as **null**, no authentication is enabled. When both the interface and its area are configured with authentication, the one for the interface takes precedence.

### Configuration

The following example configures MD5 authentication for OSPF on fastEthernet 0/1.

### Examples

```
Ruijie (config)#interface fastEthernet0/1
Ruijie(config-if-FastEthernet 0/1)# ipaddress172.16.1.1
255.255.255.0
Ruijie(config-if-FastEthernet 0/1)# ip ospf authentication
message-digest
```

### Related Commands

Command	Description
<b>area authentication</b>	Enables authentication and defines authentication mode in the OSPF area.
<b>ip ospf authentication-key</b>	Configures the plain text authentication key.
<b>ip ospf message-digest-key</b>	Configures the MD5 authentication key.

### Platform

N/A

### Description

## 5.24 ip ospf authentication-key

Use this command to configure the OSPF plain text authentication key in interface configuration

mode. Use the **no** form of this command to restore the default setting.

**ip ospf authentication-key** [ 0 | 7 ] *key*

**no ip ospf authentication-key**

Parameter Description	Parameter	Description
	0	Displays the key in plain text.
	7	Displays the key in cipher text.
	<i>key</i>	Key containing at most eight characters.

**Defaults** It is disabled by default.

**Command**

**Mode** Interface configuration mode

**Usage Guide** The **ip ospf authentication-key** command configures the key that will be inserted in all OSPF packet headers. As a result, if the keys are inconsistent, the OSPF neighbor relationship cannot be established between two devices directly connected, and thus route information exchange is impossible.

The keys may vary by interface, but the devices that are connected to the same physical network segment must use the same key.

To enable the OSPF area authentication, execute the area authentication command in routing process configuration mode.

The authentication can be enabled separately on an interface by executing the ip ospf authentication command in interface configuration mode. When both the interface and the area are configured with authentication, the one for the interface takes precedence.

**Configuration** The following example configures the OSPF authentication key ospfauth for fast Ethernet 0/1.

**Examples**

```
Ruijie (config)#interfacefastEthernet0/1
Ruijie(config-if-FastEthernet 0/1)# ipaddress172.16.1.1
255.255.255.0
Ruijie(config-if-FastEthernet 0/1)# ip ospf authentication-key ospfauth
```

Related Commands	Command	Description
	<b>area authentication</b>	Enables OSPF area authentication and defines authentication mode
	<b>ip ospf authentication</b>	Enables authentication on the interface and defines authentication mode

**Platform** N/A

**Description**



## 5.25 ip ospf cost

Use this command to configure the cost (OSPF metric) of the OSPF interface for sending a packet in interface configuration mode. Use the **no** form of this command to restore the default setting.

**ip ospf cost** *cost*

**no ip ospf cost**

### Parameter Description

Parameter	Description
<i>cost</i>	OSPF interface cost in the range from 0 to 65535

### Defaults

The default interface cost is calculated as follows:

Reference bandwidth/Bandwidth

The reference bandwidth is 100 Mbps by default.

### Command

#### Mode

Interface configuration mode

### Usage Guide

By default, the OSPF interface cost is 100Mbps/Bandwidth, where Bandwidth is the interface bandwidth configured with the bandwidth command in interface configuration mode.

The default costs of different types of lines are as follows:

- 64K serial line: 1562
- E1 line: 48
- 10M Ethernet: 10
- 100M Ethernet: 1

The OSPF cost configured with the **ip ospf cost** command will overwrite the default configuration.

### Configuration

The following example configures the OSPF cost of fastEthernet 0/1 to 100.

### Examples

```
Ruijie(config)# interface fastEthernet 0/1
Ruijie(config-if-FastEthernet 0/1)# ip ospf cost 100
```

### Related Commands

Command	Description
<b>bandwidth</b>	Specifies the interface bandwidth. This setting does not affect the data transmission rate.
<b>show ip ospf</b>	Displays the OSPF global configuration information

### Platform

N/A

### Description

## 5.26 ip ospf database-filter all out

Use this command to stop advertising LSAs of an interface, that is, the LSA update packets are not sent on the interface. Use the **no** form of the command to restore the default setting.

**ip ospf database-filter all out**

**no ip ospf database-filter**

### Parameter Description

Parameter	Description
N/A	N/A

**Defaults** This function is disabled and all LSA update packets can be sent on the interface by default.

### Command

**Mode** Interface configuration mode

**Usage Guide** To stop sending LSA update packets on the interface, enable this function on the interface. Then, the device maintains the neighboring connections and accepts LSAs from neighbors, but stops sending LSAs to neighbors.

**Configuration** The following example stops sending LSA update packets of fastEthernet 0/1.

### Examples

```
Ruijie(config)# interface fastEthernet 0/1
Ruijie(config-if-FastEthernet 0/1)# ip address 172.16.10.1 255.255.255.0
Ruijie(config-if-FastEthernet 0/1)# ip ospf database-filter all out
```

### Related Commands

Command	Description
N/A	N/A

**Platform** N/A

**Description**

## 5.27 ip ospf dead-interval

Use this command to configure the interval for determining the death of an interface neighbor in interface configuration mode. Use the **no** form of this command to restore the default setting.

**ip ospf dead-interval** { *seconds* | **minimal hello-multiplier** *multiplier* }

**no ip ospf dead-interval**

### Parameter Description

Parameter	Description
<i>seconds</i>	Defines the interval for determining the neighbor death in seconds. The range is from 0 to 2,147,483,647.

<b>minimal</b>	Indicates that the Fast Hello function is enabled to set the dead interval to 1s.
<b>hello-multiplier</b> <i>multiplier</i>	Indicates the number of Hello packets sent per second in the Fast Hello function. The value ranges from 3 to 20.

**Defaults** The value of dead-interval is 4 times the interval configured with the **ip ospf hello-interval** command by default.

**Command**

**Mode** Interface configuration mode

**Usage Guide** The OSPF dead interval is contained in the Hello packet. If OSPF does not receive a Hello packet from a neighbor within the dead interval, it declares that the neighbor is invalid and deletes this neighbor record from the neighbor list. By default, the dead interval is four times the Hello interval. If the Hello interval is modified, the dead interval is modified automatically.

When using this command to manually modify the dead interval, pay attention to the following issues:

1. The dead interval cannot be shorter than the Hello interval.
2. The dead interval must be the same on all routers in the same network segment.

OSPF supports the Fast Hello function.

After the OSPF Fast Hello function is enabled, OSPF finds neighbors and detects neighbor failures faster. You can enable the OSPF Fast Hello function by specifying the **minimal** and **hello-multiplier** keywords and the **multiplier** parameter. The **minimal** keyword indicates that the death interval is set to 1s, and **hello-multiplier** indicates the number of Hello packets sent per second. In this way, the interval at which the Hello packet is sent decreases to less than 1s.

If the Fast Hello function is configured for a virtual link, the Hello interval field of the Hello packet advertised on the virtual link is set to 0, and the Hello interval field of the Hello packet received on this virtual link is ignored.

No matter whether the Fast Hello function is enabled, the death interval must be consistent and the **hello-multiplier** values can be inconsistent on routers at both ends of the virtual link. Ensure that at least one Hello packet can be received within the death interval.

Run the **show ip ospf virtual-links** command to monitor the death interval and Fast Hello interval configured for the virtual link.

The **dead-interval minimal hello-multiplier** and **hello-interval** parameters introduced for the Fast Hello function cannot be configured simultaneously.

**Configuration Examples** The following example configures the interval for determining the death of the OSPF neighbor on fastEthernet 0/1 to 30 seconds.

```
Ruijie(config)# interface fastEthernet 0/1
Ruijie(config-if-FastEthernet 0/1)# ip address 172.16.10.1 255.255.255.0
Ruijie(config-if-FastEthernet 0/1)# ip ospf dead-interval 30
```

The following example configures the value of hello-multiplier to 3.

```
Ruijie(config)# interface fastEthernet 0/1
Ruijie(config-if-FastEthernet 0/1)# ip address 172.16.10.1 255.255.255.0
Ruijie(config-if-FastEthernet 0/1)# ip ospf dead-interval minimal hello-multiplier 3
```

**Related  
Commands**

Command	Description
<b>ip ospf hello-interval</b>	Specifies the interval at which the OSPF sends Hello packets
<b>show ip ospf interface</b>	Displays OSPF interface information.

**Platform** N/A**Description**

## 5.28 ip ospf disable all

Use this command to prevent the specified interface from generating OSPF packets. Use the **no** form of this command to restore the default setting.

**ip ospf disable all****no ip ospf disable all****Parameter  
Description**

Parameter	Description
N/A	N/A

**Defaults** OSPF packets are generated on the specified interface by default.**Command****Mode** Interface configuration mode

**Usage Guide** The interface configured with this command will ignore whether the network areas are matched. After this command is configured, an interface will not generate OSPF packets even if the interface belongs to the network; therefore, the interface does not receive or send any OSPF packets or participate in OSPF calculation.

**Configuration** The following example prevents the specified interface from generating OSPF packets.

**Examples**

```
Ruijie(config)# interface fastEthernet 0/1
Ruijie(config-if-FastEthernet 0/1)# ip address 172.16.10.1 255.255.255.0
Ruijie(config-if-FastEthernet 0/1)# ip ospf disable all
```

**Related  
Commands**

Command	Description
N/A	N/A

**Platform** N/A

**Description**

## 5.29 ip ospf hello-interval

Use this command to set the interval for sending Hello packets in interface configuration mode. Use the **no** form of this command to restore the default setting.

**ip ospf hello-interval** *seconds*

**no ip ospf hello-interval**

**Parameter  
Description**

Parameter	Description
<i>seconds</i>	Interval for sending Hello packets in seconds. The range is from 1 to 65535.

**Defaults**

The defaults are as follows:

10seconds for Ethernet

10seconds for PPP or HDLC encapsulated interfaces

10seconds for frame relay PTP interfaces

30seconds for non-frame relay PTP sub-interface and X.25 interfaces

**Command****Mode**

Interface configuration mode

**Usage Guide**

The interval of sending the Hello packets is included in the Hello packet. A shorter interval means that OSPF detects the topological change faster, which will increase network traffic. The Hello packet sending intervals for all the devices in the same network segment must be the same. To manually modify the interval to determine neighbor death, ensure that the Hello packet sending interval cannot be greater than dead-interval of the neighbor.

**Configuration** The following example configures the interval of sending the Hello packets on fastEthernet 0/1 to 15.

**Examples**

```
Ruijie(config)# interface fastEthernet 0/1
Ruijie(config-if-FastEthernet 0/1)# ip address 172.16.10.1 255.255.255.0
Ruijie(config-if-FastEthernet 0/1)# ip ospf hello-interval 15
```

**Related  
Commands**

Command	Description
<b>ip ospf dead-interval</b>	Sets the interval for determining the death of the OSPF neighbor.

**Platform**

N/A

**Description**

## 5.30 ip ospf message-digest-key

Use this command to configure the MD5 authentication key in interface configuration mode. Use the **no** form of this command to restore the default setting.

**ip ospf message-digest-key** *key-id* **md5** [ **0** | **7** ] *key*

**no ip ospf message-digest-key** *key-id*

### Parameter Description

Parameter	Description
<i>key</i>	Key of up to 16 characters
<b>0</b>	Displays the key in plain text.
<b>7</b>	Displays the key in cipher text.
<i>key-id</i>	Key identifier in the range from 1 to 255

**Defaults** No MD5 key is configured by default.

### Command

**Mode** Interface configuration mode

**Usage Guide** The **ip ospf message-digest-key** command configures the key that will be inserted in all OSPF packet headers. As a result, if the keys are inconsistent, the OSPF neighboring relationship cannot be established between two devices directly connected, and thus route information exchange is impossible.

The keys can be different for different interfaces, but the devices that are connected to the same physical network segment must be configured with the same key. For neighbors, the same key identifier must correspond to the same key.

To enable OSPF area authentication, execute the **area authentication** command in routing process configuration mode. The authentication can be enabled separately on an interface by executing the **ip ospf authentication** command in interface configuration mode. When both the interface and the area are configured with authentication, the one for the interface takes precedence.

The RGOS software supports smooth modification of MD5 authentication keys, which shall be added before deleted. When an MD5 authentication key of the device is added, the device will regard other devices have not had new keys and thus send multiple OSPF packets by using different keys, till it confirms that the neighbors have been configured with new keys. When all devices have been configured with new keys, it is possible to delete the old key.

**Configuration Examples** The following example adds a new OSPF authentication key "hello5" with key ID 5 for fastEthernet 0/1.

```
Ruijie(config)# interface fastEthernet 0/1
Ruijie(config-if-FastEthernet 0/1)# ip address 172.16.24.2 255.255.255.0
Ruijie(config-if-FastEthernet 0/1)# ip ospf authentication message-digest
Ruijie(config-if-FastEthernet 0/1)# ip ospf message-digest-key 10 md5 hello10
Ruijie(config-if-FastEthernet 0/1)# ip ospf message-digest-key 5md5 hello5
```

When all neighbors are added with new keys, the old keys shall be deleted for all devices.

```
Ruijie(config)# interface fastEthernet 0/1
Ruijie(config-if-FastEthernet 0/1)# no ip ospf message-digest-key10md5
hello10
```

**Related  
Commands**

Command	Description
<b>area authentication</b>	Enables OSPF area authentication and defines authentication mode.
<b>ip ospf authentication</b>	Enables authentication on the interface and defines authentication mode.

**Platform** N/A**Description**

## 5.31 ip ospf mtu-ignore

Use this command to disable the MTU check when an interface receives the database description packet. Use the **no** form of this command to restore the default setting.

**ip ospf mtu-ignore****no ip ospf mtu-ignore****Parameter  
Description**

Parameter	Description
N/A	N/A

**Defaults** MTU check is disabled by default.**Command****Mode** Interface configuration mode

**Usage Guide** After receiving the database description packet, the device will check whether the MTU of the neighbor interface is the same as its own MTU. If the received database description packet indicates an MTU greater than the interface's MTU, the neighboring relationship cannot be established. This can be fixed by disabling the MTU check.

**Configuration** The following example disables the MTU check function on fastEthernet 0/1.

**Examples**

```
Ruijie(config)# interface fastEthernet 0/1
Ruijie(config-if-FastEthernet 0/1)# ip ospf mtu-ignore
```

**Related  
Commands**

Command	Description
N/A	N/A

**Platform** N/A

**Description**

## 5.32 ip ospf network

Use this command to configure the OSPF network type in interface configuration mode. Use the **no** form of this command to restore the default setting.

```
ip ospf network { broadcast | non-broadcast |  
point-to-multipoint [ non-broadcast ] | point-to-point }  
no ip ospf network
```

**Parameter  
Description**

Parameter	Description
<b>broadcast</b>	Sets the OSPF network type as the broadcast type.
<b>non-broadcast</b>	Sets the OSPF network type as the non-broadcast multi-path access type, i.e. NBMA network.
<b>point-to-multipoint</b> <b>[non-broadcast]</b>	Sets the OSPF network type as the point-to-multipoint type. The value is the point-to-multipoint broadcast type by default. The non-broadcast option means the point-to-multipoint non-broadcast type.
<b>point-to-point</b>	Sets the OSPF network type as the point-to-point type.

**Defaults**

The default configurations are as follows:

PTP network type: Point-to-Point Protocol(PPP), Serial Line Internet Protocol(SLIP), frame relay point-to-point (PTP) sub-interface, X.25 PTP sub-interface encapsulation

NBMA network type: frame relay (except for PTP sub-interface), X.25 encapsulation (except for PTP sub-interface)

Broadcast network type: Ethernet encapsulation

By default, the network type is the point-to-multipoint network type.

**Command****Mode**

Interface configuration mode

**Usage Guide**

The broadcast type requires that the interface must have the broadcast capability.

The P2P type requires that the interfaces are interconnected in one-to-one manner.

The NBMA type requires full-meshed connections, and all interconnected routers can directly communicate with each other.

The P2MP type does not raise any requirement.

**Configuration** The following example configures the frame relay interface network as the P2P type.

**Examples**

```
Ruijie(config)# interface Serial 1/0  
Ruijie(config-Serial 1/0)#ip address 172.16.24.4 255.255.255.0  
Ruijie(config-Serial 1/0)# encapsulation frame-relay  
Ruijie(config-Serial 1/0)# ip ospf network point-to-point
```

The following example configures the frame relay interface network as the NBMA type.



```
Ruijie(config)# interface Serial 1/0
Ruijie(config-Serial 1/0)# ip address 172.16.24.4 255.255.255.0
Ruijie(config-Serial 1/0)# encapsulation frame-relay
Ruijie(config-Serial 1/0)# ip ospf network non-broadcast
Ruijie(config-Serial 1/0)# exit
Ruijie(config)# router ospf 20
Ruijie(config-router)# neighbor 172.16.24.2 priority 1 poll-interval 150
```

**Related  
Commands**

Command	Description
<b>dialer map ip</b>	Defines the mapping between IP address and dialing number.
<b>frame-relay map</b>	Defines the mapping between IP address and frame DLCI.
<b>neighbor(OSPF)</b>	Defines the IP address of neighbor applicable to NBMA network type and point-to-multipoint non-broadcast type only.
<b>X25 map</b>	Defines the mapping between IP address and X.25 network address.

**Platform** N/A**Description**

## 5.33 ip ospf priority

Use this command to configure the OSPF priority in interface configuration mode. Use the **no** form of this command to restore the default setting.

**ip ospf priority** *priority*

**no ip ospf priority**

**Parameter  
Description**

Parameter	Description
<i>priority</i>	Sets the OSPF priority of the interface in the range from 0 to 255.

**Defaults** The default is 1.**Command****Mode** Interface configuration mode**Usage Guide**

The interface priority is included in the Hello packet. When DR/BDR election occurs in the OSPF broadcast type network, the device with higher priority will become the DR or BDR. If the devices have the same priority, the one with higher ID will become the DR or BDR. The device with priority 0 cannot become DR or BDR. This command is valid only for OSPF broadcast and non-broadcast network types.

**Configuration** The following example configures the priority of fastEthernet 0/1 as 0.

**Examples**

```
Switch(config)#interface fastEthernet 0/1
Ruijie(config-if-FastEthernet 0/1)# ip ospf priority 0
```

**Related  
Commands**

Command	Description
<b>ip ospf network</b>	Configures the network type of the interface.

**Platform** N/A

**Description**

## 5.34 ip ospf retransmit-interval

Use this command to define the interval for sending the link state update (LSU) packet on the interface in interface configuration mode. Use the **no** form of this command to restore the default setting.

**ip ospf retransmit-interval** *seconds*

**ip ospf retransmit-interval**

**Parameter  
Description**

Parameter	Description
<i>seconds</i>	Interval for sending the LSU packets in seconds. The range is from 1 to 65535. This interval must be greater than the round trip delay of packets between two neighbors.

**Defaults** The default is 5.

**Command**

**Mode** Interface configuration mode

**Usage Guide** After the device sends an LSU packet, the LSU packet stays in the transmission buffer queue. If no confirmation from the neighbor is obtained in the interval defined with the **ip ospf retransmit-interval** command, the LSU will be sent once again.

In serial lines or virtual links, the retransmission interval shall be slightly larger. The LSU packet retransmission interval of virtual links is defined with the area virtual-link command followed with the keyword retransmit-interval.

**Configuration** The following example configures the LSU packet retransmission interval on fastEthernet 0/1 as 10 seconds.

**Examples**

```
Ruijie(config)# interface fastEthernet 0/1
Ruijie(config-if-FastEthernet 0/1)# ip ospf retransmit-interval 10
```

**Related**

Command	Description
---------	-------------

Commands		
	<b>area virtual-link</b>	Defines an OSPF virtual link.

Platform N/A

Description

## 5.35 ip ospf source-check-ignore

Use this command to disable the source address check in the point-to-point link. Use the **no** form of this command to restore the default setting

**ip ospf source-check-ignore**

**no ip ospf source-check-ignore**

Parameter Description	Parameter	Description
	N/A	N/A

Defaults This function is enabled by default.

Command

Mode Interface configuration mode

**Usage Guide** For OSPF, the source address of the received packet is required to be in the same network segment with the receiving interface. However, in a point-to-point link, the addresses of two ends of the link are individually set, and they are not required to be in the same network segment. The peer address is informed during the process of point-to-point link negotiation; therefore, OSPF will check whether the source address of the packet is the informed one. If no, the OSPF regards this packet as illegal and drops it. In some applications, the addresses informed during the negotiation are shielded. You need to disable the source address check to ensure the normal establishment of OSPF neighbors. The source address check shall be never enabled, especially for the unnumbered interfaces.

**Configuration** The following example disables the source address check function in the point-to-point link.

**Examples**

```
Ruijie(config)# interface serial 1/0
Ruijie(config-if)# ip ospf source-check-ignore
```

Related Commands	Command	Description
	N/A	N/A

Platform N/A

Description

## 5.36 ip ospf transmit-delay

Use this command to define the LSU packet transmission delay in interface configuration mode. Use the **no** form of this command to restore the default setting.

**ip ospf transmit delay** *seconds*

**no ip ospf transmit delay**

Parameter Description	Parameter	Description
	<i>seconds</i>	LSU packet transmission delay in seconds in the range from 1 to 65535.

**Defaults** The default is 1.

### Command

**Mode** Interface configuration mode

**Usage Guide** Before the LSU packet is transmitted, the Age field in all the LSAs of the packet will be increased by the value defined with the **ip ospf transmit-delay** command in interface configuration mode. The configuration of this parameter shall consider the transmission and line transmission delay of the interface. For low-rate lines, the transmission delay of the interface shall be slightly larger. The LSU packet transmission delay of the virtual link is defined with the **area virtual-link** command followed with the keyword **retransmit-interval**.

The RGOS software will resend or request resending the LSA with Age up to 3600. If no update is obtained in time, the aged LSA will be cleared from the link state database.

**Configuration** The following example configures the transmission delay of fastEthernet 0/1 as 10.

**Examples**

```
Ruijie(config)# interface fastEthernet 0/1
Ruijie(config-if-FastEthernet 0/1)# ip ospf transmit-delay 10
```

Related Commands	Command	Description
	<b>area virtual-link</b>	Defines an OSPF virtual link.

**Platform** N/A

**Description**

## 5.37 log-adj-changes

Use this command to enable the logging of the neighbor state changes. Use the **no** form of the command to disable this function.

**log-adj-changes** [ **detail** ]

**no log-adj-changes** [ **detail** ]

<b>Parameter Description</b>	<b>Parameter</b>	<b>Description</b>
	<b>detail</b>	Records the detail of changes.
<b>Defaults</b>	This function is enabled by default. Without the detail parameter, the system records the logs that the neighbor enters or exits the full state.	
<b>Command</b>		
<b>Mode</b>	Routing process configuration mode	
<b>Usage Guide</b>	N/A	
<b>Configuration</b>	The following example logs the neighbor state changes.	
<b>Examples</b>	<pre>Ruijie(config)# router ospf 1 Ruijie(config-router)# log-adj-changes detail</pre>	
<b>Related Commands</b>	<b>Command</b>	<b>Description</b>
	<b>show ip ospf</b>	Displays the OSPF global configuration information.
<b>Platform</b>	N/A	
<b>Description</b>		

## 5.38 max-concurrent-dd

Use this command to specify the maximum number of DD packets that can be processed (initiated or accepted) at the same time. Use the **no** form of this command to restore the default setting.

**max-concurrent-dd** *number*

**no max-concurrent-dd**

<b>Parameter Description</b>	<b>Parameter</b>	<b>Description</b>
	<i>number</i>	Maximum number of DD packets in the range from 1 to 65535
<b>Defaults</b>	The default is 5.	
<b>Command</b>		
<b>Mode</b>	Routing process configuration mode	
<b>Usage Guide</b>	When a router is exchanging data with multiple neighbors, its performance will be affected. This command is configured to limit the maximum number of DD packets that each OSPF instance can have at the same time.	

**Configuration** The following example sets the maximum number of DD packets to 4.

**Examples** After the configuration, the device can initiate to interact with four neighbors and can concurrently accept the interaction. That is, the device can interact with a maximum of eight neighbors.

```
Ruijie(config)# routerospf10
Ruijie(config-router)# max-concurrent-dd4
```

**Related  
Commands**

Command	Description
<b>router ospf max-concurrent-dd</b>	Sets the maximum number of neighbors allowed in concurrent interaction for all OSPF routing processes.

**Platform** N/A

**Description**

## 5.39 max-metric

Use this command to set the maximum metric of the router-lsa, so that this routing device will not firstly be used as the transmission node by other devices in SPF computing. Use the **no** form of this command to restore the default setting.

**max-metric router-lsa** [**external-lsa** [ *max-metric-value* ]][ **include-stub** ][ **on-startup** [ *seconds* ]]  
[ **summary-lsa** [ *max-metric-value* ]]  
**no max-metric router-lsa** [**external-lsa** [ *max-metric-value* ]][ **include-stub** ][ **on-startup**  
[ *seconds* ]][ **summary-lsa** [ *max-metric-value* ]]

**Parameter  
Description**

Parameter	Description
<b>router-lsa</b>	Configures the maximum metric (0xFFFF) of non-stub links in the Router LSA.
<b>external-lsa</b>	Uses the maximum metric instead of the external-lsa metric (including the Type-5 and Type-7).
<i>max-metric-value</i>	Maximum metric of the LAS. The range is 1 to 16777215. The default value is 16711680.
<b>include-stub</b>	Configures the maximum metric of the stub links in the Router LSA.
<b>on-startup</b>	Advertises the maximum metric when the routing device starts up.
<i>seconds</i>	Interval of advertising the maximum metric. The range is 5 to 86400. The default value is 600 seconds.
<b>summary-lsa</b>	Uses the maximum metric to replace the summary LSA metric. (including Type-3 and Type-4)

**Defaults** The normal metric LSAs are used by default.

**Command****Mode** Routing process configuration mode**Usage Guide**

With the **max-metric router-lsa** command enabled, the maximum metric of non-stub links in the Router LSA generated by the routing device is set. The link's normal metric is restored after canceling this configuration or reaching the timer.

By default, with this command enabled, the normal metric of the stub links is still advertised, which is the output interface cost. If the **include-stub** parameter is configured, the maximum metric of the stub links will be advertised.

When the device acts as an ABR, if no interval flow transmission is expected, use the **summary-lsa** parameter to set the summary LSA as the maximum metric.

When the device acts as an ASBR device, if no external flow transmission is expected, use the **external lsa** parameter to set the external LSA as the maximum metric.

The **max-metric router-lsa** command is usually used in the following scenes:

The device is restarted, which generally makes the IGP protocol converge faster, so that other devices attempt forwarding the dataflow through the new started-up device. In this case, use the **on-startup** parameter to set certain delay, so that this device can serve as a transmission node after restarting.

The device is added into the network without being used for dataflow transmission. If the backup path exists, the current device is not used for the dataflow transmission. Otherwise, this device is still used to transmit the dataflow.

Remove the device from the network gracefully. With this command enabled, the current device advertises the maximum metric to all devices, as that the other devices in this network can choose the backup path to for the dataflow transmission before the current device is removed.



For the OSPF implementation in the earlier versions (RFC 1247 or earlier versions), the links with the maximum metric (0xFFFF) in the LSA will not participate in the SPF calculation, that is, no dataflow will be sent to the router that have generated these LSAs.

**Configuration** The following example configures the LSA maximum metric as 100 seconds after starting the device.

**Examples**

```
Ruijie(config)# router ospf 20
Ruijie(config-router)# max-metric router-lsa on-startup 100
```

**Related  
Commands**

Command	Description
<b>show ip ospf</b>	Displays the OSPF related configurations.

**Platform** N/A**Description**

## 5.40 neighbor

Use this command to define the OSPF neighbor in routing process configuration mode. Use the **no** form of this command to restore the default setting.

**Neighbor** *ip-address* [ **poll-interval** *seconds* ] [ **priority** *priority* ] [ **cost** *cost* ]

**no neighbor** *ip-address* [ [ **poll-interval** ] [ **priority** ] [ **cost** ] ]

**Parameter  
Description**

Parameter	Description
<i>ip address</i>	IP address of the neighbor
<b>poll-interval</b> <i>seconds</i>	(Optional) Specifies the interval of polling neighbors in seconds. The range is from 0 to 2147483647. Only the non-broadcast (NBMA) network type supports this option.
<b>priority</b> <i>priority</i>	(Optional) Configures the priority of non-broadcast network neighbors. The range is from 0 to 255. Only the non-broadcast (NBMA) network type supports this option.
<b>cost</b> <i>cost</i>	(Optional) Configures the cost to each neighbor in point-to-multipoint network, not defined by default, where the cost configured on the interface will be used. The range is from 0 to 65535. Only the point-to-multipoint [non-broadcast] network type supports this option.

**Defaults**

No neighbor is defined by default.

The default neighbor polling interval is 120 seconds.

The default NBMA neighbor priority is 0.

**Command**

**Mode**

Routing process configuration mode

**Usage Guide**

The RGOS software must explicitly configure the neighbor information for every non-broadcast network neighbor. The IP address of a neighbor must be the master IP address of that neighbor interface.

In the NBMA network, if the neighbor device becomes inactive, in other words, if the Hello packet is not received within the device dead-interval, the OSPF will send more Hello packets to the neighbor. The interval at which the Hello packets are sent is called the polling interval. When the OSPF starts to work for the first time, it sends Hello packets only to the neighbor whose priority is not 0, so that the neighbor whose priority is set as 0 will not participate in the DR/BDR election. When the DR/BDR is generated, the DR/BDR sends the Hello packets to all neighbors to establish the neighbor relationship.

Since the point-to-multipoint non-broadcast network has no broadcast capability, neighbors cannot be found dynamically. So, it is required to use this command to manually configure neighbor. In addition, it is possible to configure the cost to each neighbor through the cost option for the point-to-multipoint network type.

**Configuration**

The following example declares an OSPF non-broadcast network neighbor, with the IP address 172.16.24.2, priority 1 and polling interval 150 seconds.

**Examples**

```
Ruijie(config)# routerospf 20
Ruijie(config-router)# network 172.16.24.0 0.0.0.255 area 0
```



```
Ruijie(config-router)# neighbor 172.16.24.2 priority 1 poll-interval 150
```

**Related  
Commands**

Command	Description
<b>ip ospf priority</b>	Sets the interface priority.
<b>ip ospf network</b>	Sets the network type

**Platform** N/A**Description**

## 5.41 network area

Use this command to define which interfaces run OSPF and the OSPF areas they belong to in routing process configuration mode. Use the **no** form of this command to restore the default setting.

**network** *ip-address wildcard area area-id*

**no network** *ip-address wildcard area area-id*

**Parameter  
Description**

Parameter	Description
<i>ip-address</i>	IP address of the interface
<i>wildcard</i>	Defines the comparison bits in the IP address, with 0 for exact match and 1 for no comparison
<i>area-id</i>	OSPF area identifier. An OSPF area is always associated with an address range. For easy of management, a subnet can be used as the OSPF area identifier.

**Defaults** No OSPF area is configured by default.

**Command**

**Mode** Routing process configuration mode

**Usage Guide** The *ip-address* and *wildcard* parameters allow associating multiple interfaces with one OSPF area. To run OSPF on an interface, it is required to include the primary IP address and secondary IP address of the interface in the IP address range defined by the *network area* command. If only the secondary IP address is included, OSPF cannot be enabled on the interface.

You can determine the OSPF process that the interface takes part in by the means of the best match if the IP address of the interface matches the IP address ranges defined by the *network* command in multiple OSPF processes.

**Configuration** The following example defines:

**Examples** Three areas: 0, 1 and 172.16.16.0

The interfaces whose IP addresses fall into the 192.168.12.0/24 range to area 1

The interfaces whose IP addresses fall into the 172.16.16.0/20 range to area 2

The remaining interface being assigned to area 0.

```
Ruijie(config)# routerospf 20
Ruijie(config-router)# network172.16.16.0
0.0.15.255 area172.16.16.0
Ruijie(config-router)# network192.168.12.0
0.0.0.255 area 1
Ruijie(config-router)# network0.0.0.0 255.255.255.255 area0
```

**Related  
Commands**

Command	Description
<b>router ospf</b>	Creates the OSPF routing process.

**Platform** N/A**Description**

## 5.42 overflow database

Use this command to configure the maximum number of LSAs supported by the current OSPF instance. Use the **no** form of this command to restore the default setting.

**overflow database** *number* [ **hard** | **soft** ]

**no overflow database**

**Parameter  
Description**

Parameter	Description
<i>number</i>	Maximum number of LSAs. The range is from 1 to 4294967294.
<b>hard</b>   <b>soft</b>	hard: shuts down the OSPF instance when the number of LSAs exceeds that number. soft: issues an alarm when the number of LSAs exceeds that number.

**Defaults** The maximum number of LSAs supported by the current OSPF instance is not restricted by default.

**Command**

**Mode** Routing process configuration mode

**Usage Guide** To shut down the OSPF instance when the number of LSAs exceeds that number, use the hard parameter; otherwise, use the soft parameter.

**Configuration Examples** The following example configures that OSPF instance 10 will be shut down when there are more than 10 LSAs.

```
Ruijie(config)# router ospf 10
Ruijie(config-router)# overflow database 10 hard
```

**Related  
Commands**

Command	Description
N/A	N/A

Platform N/A

Description

## 5.43 overflow database external

Use this command to configure the maximum number of external LSAs and the waiting time from the overflow state to the normal state. Use the **no** form of this command to restore the default setting.

**overflow database external** *max-dbsize* *wait-time*

**no overflow database external**

Parameter  
Description

Parameter	Description
<i>max-dbsize</i>	Maximum number of external LSAs (the value shall be the same for all routing devices in the same AS). The range is from 0 to 2147483647.
<i>wait-time</i>	Waiting time of the routing device from the overflow status to normal status. The range is from 0 to 2147483647.

Defaults

The maximum number of external-LSAs is not restricted by default.

If the maximum number of external-LSAs is restricted, the normal status cannot be restored when the maximum number is exceeded.





Command

Mode

Routing process configuration mode

Usage Guide

When the number of external-LSAs exceeds the value of max-db size, the device enters the overflow state. Then no more external-LSA will be loaded and the external-LSAs generated locally will be cleared. After wait-time expires, the device restores to the normal state and external-LSAs are reloaded.

-  When using this function, ensure that all routers of the OSPF backbone area and common areas use the same max-db size value. Otherwise, the following situations occur:
-  The link status is inconsistent on the entire network and neighbors fail to achieve the Full state.
-  Incorrect routes occur, including loops.
-  AS-External-LSAs may be frequently retransmitted.

Configuration

Examples

The following example configures that the maximum number of external LSAs is 10, and it turns to the overflow status upon timeout, and the time interval attempting to restore from the overflow state to the normal state is 3 seconds.

```
Ruijie(config)# routerospf10
Ruijie(config-router)# overflow database external10 3
```

Related Commands	Command	Description
	N/A	N/A

**Platform** N/A  
**Description**

## 5.44 overflow memory-lack

Use this command to allow OSPF to enter the OVERFLOW state when the memory lacks. Use the **no** form of this command to disable this function.

**overflow memory-lack**

**no overflow memory-lack**

Parameter Description	Parameter	Description
	N/A	N/A

**Defaults** This function is enabled by default

**Command**

**Mode** Routing process configuration mode

**Usage Guide** The action of OSPF entering the OVERFLOW state is to discard the newly-learned external route and effectively prevent the memory from increasing.

It is possible that enabling this function causes the route loop in the whole network. To reduce that possibility, OSPF will generate a default route directing to the NULL port and this default route will exist in the OVERFLOW state.

Use the **clear ip ospf process** command to reset the OSPF and remove the OSPF OVERFLOW state.

Use the no form of this command to prevent the OSPF to enter the OVERFLOW state when the memory is insufficient, which may result in the constantly consumption of the memory resources. If the memory is exhausted to some degree, the OSPF instance will stop and all learned routes will be removed.

**Configuration Examples** The following example prevents the OSPF from entering the OVERFLOW state when the memory is insufficient.

```
Ruijie(config)# router ospf 1
Ruijie(config-router)# no overflow memory-lack
```

Related Commands	Command	Description
	<b>clear ip ospf process</b>	Resets the OSPF instances.
	<b>show ip protocols ospf</b>	Displays the OSPF information.

**Platform** N/A

**Description**

## 5.45 passive-interface

Use this command to configure the specified network interface or all interface as the passive interfaces. Use the **no** form of this command to restore the default setting.

**passive-interface** { **default** | *interface-type interface-number* | *interface-type interface-number ip-address* }

**no passive-interface** { **default** | *interface-type interface-number* | *interface-type interface-number ip-address* }

**Parameter Description**

Parameter	Description
<i>interface-type</i> <i>interface-number</i>	Interface to be set as a passive interface
<b>default</b>	Sets all the interfaces as passive interfaces
<i>interface-type</i> <i>interface-number</i> <i>ip-address</i>	Sets the address of the specified interface as a passive address.

**Defaults** No interface is configured as a passive interface by default. All interfaces are allowed to receive or send OSPF packets.

**Command**

**Mode** Routing process configuration mode

**Usage Guide** To prevent other devices in the network from dynamically learning the routing information of the device, set the specified network interface of this device as a passive interface or the IP address of the specified network interface as a passive address

**Configuration Examples** The following example configures fastEthernet 0/1 as a passive interface and the IP address of the interface 1.1.1.1 as the passive address.

```
Ruijie(config)# routerospf 30
Ruijie(config-router)# passive-interface fastEthernet 0/1
Ruijie(config-router)# passive-interface fastEthernet 0/1 1.1.1.1
```

**Related Commands**

Command	Description
<b>show ip ospf interface</b>	Displays the configuration information of the interface.

**Platform** N/A

## Description

## 5.46 redistribute

Use this command to redistribute the external routing information. Use the **no** form of this command to restore the default setting.

```
redistribute { connected | ospf process-id | rip | static } [ match { internal | external [ 1|2 ] | nssa-external [ 1|2 ] } ] [ metric metric-value ] [ metric-type { 1|2 } ] [ route-map route-map-name ] [ subnets ] [ tag tag-value ]
no redistribute { | connected | ospf process-id | rip | static } [ match { internal | external [ 1|2 ] | nssa-external [ 1|2 ] } ] [ metric metric-value ] [ metric-type { 1|2 } ] [ route-map route-map-name ] [ subnets ] [ tag tag-value ]
```

Parameter  
Description

Parameter	Description
<b>connected</b>	Redistribution from direct routes
<b>ospf</b> <i>process-id</i>	Redistribution from an ospf instance specified in process-id in the range from 1 to 65,535
<b>rip</b>	Redistribution from rip
<b>static</b>	Redistribution from static routes
<b>match</b>	Filters specified routes for configuring OSPF route redistribution. By default, all the OSPF routes are redistributed.
<b>metric</b> <i>metric-value</i>	Specifies the metric of an OSPF external LSA in the range from 0 to 16777214.
<b>metric-type</b> {1   2 }	Sets the external routing type as E-1 or E-2.
<b>route-map</b> <i>route-map-name</i>	Redistribution filter rule
<b>subnets</b>	Redistributes the routes of non standard networks.
<b>tag</b> <i>tag-value</i>	Sets the tag value of the routes redistributed to the OSPF in the range from 0 to 4294967295.

## Defaults

Redistribution configuration is not supported by default.

If you configure OSPF redistribution, all subtype routes of the instance are redistributed.

In other cases, all routings of this type are redistributed.

The default value of metric-type is E-2.

No route-map is associated by default.

## Command

## Mode

Route configuration mode

## Usage Guide

After the command is configured, the router will become an ASBR, and the related routing information is imported into the OSPF domain and broadcasted to other OSPF routers through type-5 LSAs.

When you configure OSPF router distribution without the match parameter, the OSPF routes of all sub types are redistributed by default. Then the first configured match parameter is used as the

original one. Only the routes matching the specific type can be redistributed. Use the **no** form of this command to restore the default configuration.

When you filter routes for redistribution by following the route-map rule, the match rule of the route-map rule is specific for the original redistribution parameters. The route-map rule works only when the redistributed OSPF routes follow the match rule.



The range of set metric is from 0 to 16777214 for the associated route-map. If the value exceeds the range, introducing a route fails.



The following are the rules for configuring the **no** form of the redistribute command: 1. If the **no** form specifies some parameters, restore their default values. 2. If the **no** form contains no parameter, delete the whole command..

### Configuration

**Examples** N/A

### Related Commands

Command	Description
<b>summary-address</b>	Configures the aggregate route for the external route of the OSPF route area.
<b>default-metric</b>	Sets the default metric of the OSPF redistribution route.

**Platform** N/A

**Description**

## 5.47 router ospf

Use this command to create the OSPF routing process in global configuration mode. Use the **no** form of this command to restore the default setting.

**router ospf**

**no router ospf** *process-id*

### Parameter Description

Parameter	Description
<i>process-id</i>	ID of an OSPF process. If the process ID is not configured, process 1 is configured.

**Defaults** No OSPF routing process exists by default.

### Command

**Mode** Global configuration mode

**Usage Guide** Based on the original implementation, the RGOS10.1 adds the routing process ID to multi-instance

OSPF. Different OSPF instances are mutually independent and can be approximately considered as two routing protocols that run independently.

**Configuration** N/A

**Examples**

**Related  
Commands**

Command	Description
<b>show ip protocols</b>	Displays the routing protocol information.
<b>show ip ospf</b>	Displays the OSPF information.

**Platform** N/A

**Description**

## 5.48 router ospf max-concurrent-dd

Use this command to specify the maximum number of DD packets that can be processed (initiated or accepted) at the same time. Use the **no** form of this command to restore the default setting.

**router ospf max-concurrent-dd** *number*

**no router ospf max-concurrent-dd**

**Parameter  
Description**

Parameter	Description
<i>number</i>	Maximum number of DD packets in the range from 1 to 65535.

**Defaults** The default is 10.

**Command**

**Mode** Global configuration mode

**Usage Guide** When a routing device is exchanging data with multiple neighbors, its performance will be affected. This command is configured to limit the maximum number of DD packets that each OSPF instance can have (initiated or accepted) at the same time.

**Configuration** The following example sets the maximum number of DD packets to 4.

**Examples** After the configuration, the device can initiate to interact with four neighbors and can concurrently accept the interaction. That is, the device can interact with a maximum of eight neighbors.

```
Ruijie(config)# router ospfmax-concurrent-dd4
```

**Related  
Commands**

Command	Description
<b>max-concurrent-dd</b>	Sets the maximum number of the neighbors that the OSPF routing process can concurrently interact with.



Platform N/A

Description

## 5.49 router-id

Use this command to set the router ID. Use the **no** form of this command to restore the default setting.

**router-id** *router-id*

**no router-id**

Parameter  
Description

Parameter	Description
<i>router-id</i>	Router ID in IP address form

Defaults

The OSPF routing process will select the maximal interface IP address as the router ID by default. If the loopback interface of an IP address is not configured, the OSPF routing process will select the maximum IP address among all its physical interfaces as the router ID.

Command

Mode

Routing process configuration mode

Usage Guide

You can configure any IP address as the router ID. However, the router ID should be unique. Note that once the router ID changes, the OSPF protocol will do a lot of processing. Therefore, it is not recommended to change the router ID. The device can be changed only when no LSA is generated.

Configuration

The following example modifies the router ID to 0.0.0.36.

Examples

```
Ruijie(config)# router ospf 20
Ruijie(config-router)# router-id 0.0.0.36
```

Related  
Commands

Command	Description
<b>show ip protocols</b>	Displays the routing protocol information.

Platform N/A

Description

## 5.50 show ip ospf

Use this command to display the OSPF information.

**show ip ospf** [*process-id*]

Parameter

Parameter	Description
-----------	-------------

Description		
	<i>process-id</i>	OSPF process ID

**Defaults** N/A

**Command**

**Mode** Privileged EXEC mode

**Usage Guide** This command displays the information of the OSPF routing process.

**Configuration** The following example displays the output of the **show ip ospf** command.

**Examples**

```
Ruijie# show ip ospf
Routing Process "ospf 1" with ID 1.1.1.1
Domain ID type 0x0105, value 0x010101010101
Process uptime is 4 minutes
Process bound to VRF default
Memory Overflow is enabled.
Router is not in overflow state now.
Conforms to RFC2328, and RFC1583Compatibility flag is enabled
Supports only single TOS(TOS0) routes
Enable two-way-maintain
Supports opaque LSA
Supports Graceful Restart
This router is an ASBR (injecting external routing information)
Originating router-LSAs with maximum metric
Condition: on startup for 100 seconds, State: inactive
Advertise stub links with maximum metric in router-LSAs
Advertise summary-LSAs with metric 16711680
Advertise external-LSAs with metric 16711680
Unset reason: timer expired, Originated for 100 seconds
Unset time: 00:02:02.080, Time elapsed: 00:23:54.656
SPF schedule delay 5 secs, Hold time between two SPFs 10 secs
Initial LSA throttle delay 0 msec
Minimum hold time for LSA throttle 5000 msec
Maximum wait time for LSA throttle 5000 msec
Lsa Transmit Pacing timer 40 msec, 10 LS-Upd
Minimum LSA arrival 1000 msec
Pacing lsa-group: 240 secs
Number of incoming current DD exchange neighbors 0/5
Number of outgoing current DD exchange neighbors 0/5
Number of external LSA 4. Checksum 0x0278E0
Number of opaque AS LSA 0. Checksum 0x000000
Number of non-default external LSA 4
External LSA database is unlimited.
```

```

Number of LSA originated 6
Number of LSA received 2
Log Neighbor Adjacency Changes :Enabled
Graceful-restart disabled
Graceful-restart helper support enabled
Number of areas attached to this router: 1
BFD enabled
Area 0 (BACKBONE)
Number of interfaces in this area is 1(1)
Number of fully adjacent neighbors in this area is 1
Area has no authentication
SPF algorithm last executed 00:01:26.640 ago
SPF algorithm executed 4 times
Number of LSA 3. Checksum 0x0204bf
Area 1 (NSSA)
Number of interfaces in this area is 1(1)
Number of fully adjacent neighbors in this area is 0
Number of fully adjacent virtual neighbors through this area is 0
Area has no authentication
SPF algorithm last executed 02:09:23.040 ago
SPF algorithm executed 4 times
Number of LSA 6. Checksum 0x028638
NSSA Translator State is disabled, Stability Interval expired in 00:00:03

```

Field	Description
Router ID	ID of a router.
Process uptime	Effective time of the current OSPF process (the process does not take effect when device-id is 0.0.0.0)
Bou to VRF	VRF of the current OSPF
Conforms to RFC2328	Same as the RFC2328
RFC1583Compatibilit flag	Whether the RFC1583 or RFC2328 is adopted for the calculation of external routes. This policy is used in the selection of best ASBR and in the route comparison.
Support Tos	Supports Only TOS0.
Supports opaque LSA	Supports opaque-LSA.
Graceful-restart	GR Restart capability described in the RFC3623 Graceful Restart

Graceful-restart helper	GR Help capability described in the RFC3623 Graceful Restart
Router Type	OSPF device type, including normal, ABR, and ASBR
SPF Delay	Delay before the SPF calculation is invoked after the topology change is received
SPF-holdtime	Minimum holdtime between two SPF calculations
LsaGroupPacing	Parameter used for LSA pacing, checksum calculation, and aging interval
Incomming current DD exchange neighbors	Number of neighbors under interaction. The incoming neighbors are those entering the exstart status for the first time.
Outgoing current DD exchange neighbors	Number of neighbors under interaction. The outgoing neighbors are those exiting from the higher status to the exstart status for re-interaction.
Number of external LSA	Number of external LSAs stored in the database
External LSA Checksum Sum	Checksum sum of external LSAs stored in the database
Number of opaque LSA	Number of external LSAs stored in the database
Opaque LSA Checksum Sum	Checksum sum of external LSAs stored in the database
Number of non-default external LSA	Number of external LSAs with non-default routes
External LSA database limit	Limit of external LSA number
Exit database overflow state interval	Time of exiting the overflow status
Database overflow state	Whether the current OSPF process is in the overflow status
Number of LSA originated	Number of LSAs generated
Number of LSA received	Number of LSAs received
Log Neighbor Adjency Changes	Whether the record switch for neighbor status change is enabled
Number of areas attached to this router	Total number of areas on the devices
Area type	Area type, including normal, stub, and nssa
Number of interfaces in this area	Number of interfaces in this area

Number of fully adjacent neighbors in this area	Number of Full neighbors of the area
Number of fully adjacent virtual neighbors through this area	Number of Full neighbors with virtual connections in the area. It is effective only in the non-backbone default-type areas.
Area authentication	Authentication mode of the area
SPF algorithm last executed	Time from the previous SPF calculation to the current time
SPF algorithm executed times	Times of SPF calculations
Number of LSA	Total number of LSAs in this area
Checksum Sum	Checksum sum of the LSAs in the area
NSSATranslatorState	Whether to convert the NSSA LSA to External LSA. It is effective on the ABR OSPF process in the NSSA.
BFD enabled	Enables BFD for OSPF.

 The XS-S1960-H series switch does not support BFD and VRF.

#### Related Commands

Command	Description
N/A	N/A

**Platform** N/A  
**Description**

## 5.51 show ip ospf border-routers

Use this command to display the OSPF internal routing table on the ABR/ASBR.

**show ip ospf [*process-id*] border-routers**

#### Parameter Description

Parameter	Description
<i>process-id</i>	OSPF process ID

**Defaults** N/A

**Command Mode** Privileged EXEC mode

**Usage Guide** This command displays the OSPF internal routes from the local routing device to the ABR or ASBR. The OSPF internal routing table is different from the one displayed with the `show ip route` command. The OSPF internal routing table has the destination address of the router ID instead of the destination network.

**Configuration** The following example displays the output of the **show ip ospf border-mrouters** command.

**Examples**

```
Ruijie# show ip ospf border-routers
OSPF internal Routing Table
Codes:i - Intra-area route, I - Inter-area route
i 1.1.1.1 [2] via 10.0.0.1, FastEthernet 0/1, ABR, ASBR, Area 0.0.0.1 select
The following table describes fields in the output.
```

Field	Description
Codes	Route type code, where “i” means intra-area routes, while “I” means inter-area routes.
I	Intra-area routes
1.1.1.1	Displays the OSPF ID of the border device.
[2]	Displays the cost to the border device.
via 10.0.0.1	Displays the next-hop gateway to the border device.
FastEthernet 0/1	Displays the interface to the border device.
ABR, ASBR	Displays the type of the border device, including ABR, ASBR, or both.
Area 0.0.0.1	Displays the area that learns the route.
select	Indicates the currently selected optimal path when there are multiple paths to the ASBR.

**Related Commands**

Command	Description
N/A	N/A

**Platform** N/A

**Description**

## 5.52 show ip ospf database

Use this command to display the OSPF link state database information. Use the **no** form of this command to restore the default setting. Different formats of the command will display different LSA information.

**show ip ospf** [ *process-id* [ *area-id* | *ip-address* ] ] **database** [ { **asbr-summary** | **external** | **network** | **nssa-external** | **opaque-area** | **opaque-as** | **opaque-link** | **router** | **summary** } ] [ { **adv-router** *ip-address* | **self-originate** } ] [ *link-state-id* | **brief** ] [ **database-summary** | **max-age** | **detail** ]

**Parameter Description**

Parameter	Description
-----------	-------------

<i>area-id</i>	(Optional) Displays the area ID.
<b>adv-device</b>	(Optional) Displays the LSA information generated by the specified advertising device.
<i>link-state-id</i>	(Optional) Displays the LSA information of the specified OSPF link state identifier.
<b>self-originate</b>	(Optional) Displays the LSA information generated by the device itself.
<b>Max-age</b>	(Optional) Displays the LSAs aged.
<b>router</b>	(Optional) Displays the OSPF device LSA information.
<b>network</b>	(Optional) Displays the OSPF network LSA information.
<b>summary</b>	(Optional) Displays the OSPF summary LSA information.
<b>asbr-summary</b>	(Optional) Displays the ASBR summary LSA information.
<b>external</b>	(Optional) Displays the OSPF external LSA information.
<b>nssa-external</b>	(Optional) Displays the category 7 OSPF external LSA information.
<b>opaque-area</b>	(Optional) Displays type 10 LSAs.
<b>opaque-as</b>	(Optional) Displays type 11 LSAs.
<b>opaque-link</b>	(Optional) Displays type 9 LSAs.
<b>database-summary</b>	(Optional) Displays the statistics of LSAs of the link state database.
<b>detail</b>	Displays detailed information of LSAs of the OSPF.
<b>brief</b>	Displays the brief information of the LSAs of the specified type.

**Defaults** N/A

#### Command

**Mode** Privileged EXEC mode

**Usage Guide** When the OSPF link state database is very large, you should display the information on the link state database by item. Proper use of commands may help OSPF troubleshooting.

**Configuration** The following example displays the output of the **show ip ospf database** command.

#### Examples

```
Ruijie# show ip ospf database
OSPF Device with ID (1.1.1.1) (Process ID 1)
Device Link States (Area 0.0.0.0)
Link ID      ADV Device    Age  Seq#      CkSum  Link count
1.1.1.1      1.1.1.1       2   0x80000011 0x6f39 2
3.3.3.3      3.3.3.3       120 0x80000002 0x26ac 1
Network Link States (Area 0.0.0.0)
Link ID      ADV Device    Age  Seq#      CkSum
192.88.88.27 1.1.1.1       120 0x80000001 0x5366
Summary Link States (Area 0.0.0.0)
Link ID      ADV Device    Age  Seq#      CkSum  Route
10.0.0.0     1.1.1.1       2   0x80000003 0x350d 10.0.0.0/24
100.0.0.0    1.1.1.1       2   0x8000000c 0x1ecb 100.0.0.0/16
Device Link States (Area 0.0.0.1 [NSSA])
```

```

Link ID      ADV Device      Age  Seq#      CkSum  Link count
1.1.1.1      1.1.1.1      2    0x80000001 0x91a2 1
    Summary Link States (Area 0.0.0.1 [NSSA])
Link ID      ADV Device      Age  Seq#      CkSum  Route
100.0.0.0    1.1.1.1      2    0x80000001 0x52a4 100.0.0.0/16
192.88.88.0  1.1.1.1      2    0x80000001 0xbb2d 192.88.88.0/24
NSSA-external Link States (Area 0.0.0.1 [NSSA])
Link ID      ADV Device      Age  Seq#      CkSum  Route      Tag
20.0.0.0     1.1.1.1      1    0x80000001 0x033c E2 20.0.0.0/24    0
100.0.0.0     1.1.1.1      1    0x80000001 0x9469 E2 100.0.0.0/28    0
AS External Link States
Link ID      ADV Device      Age  Seq#      CkSum  Route      Tag
20.0.0.0     1.1.1.1      380  0x8000000a 0x7627 E2 20.0.0.0/24    0
100.0.0.0     1.1.1.1      620  0x8000000a 0x0854 E2 100.0.0.0/28    0

```

The following table describes the fields in the output of the **show ip ospf database** command.

Field	Description
OSPF Device with ID	Displays the Router ID.
Device Link States	Displays the device LSA information.
Net Link States	Displays the network LSA information.
Summary Net Link States	Displays the summary network LSA information.
NSSA-external Link States	Displays the type 7 autonomous external LSA information.
AS External Link States	Displays the type 5 autonomous external LSA information.
Link ID	Displays the Link ID.
ADV Device	Displays the ID of the device that advertises the LSAs.
Age	Displays the keepalive period of the LSA.
Seq#	Displays the sequence number of the LSA, which is used to check aged or duplicate LSAs.
Cksum	Displays the checksum of LSAs.
Link-Count	Displays the number of links in the device LSA information.
Route	Displays the device information included in the LSA.
Tag	Displays the tag of the LSA.

The following example displays the output the **show ip ospf database asbr-summary** command.

```

Ruijie# show ip ospf database asbr-summary
    OSPF Device with ID (1.1.1.35) (Process ID 1)
        ASBR-Summary Link States (Area 0.0.0.1)
LS age: 47
Options: 0x2 (*|-|-|-|-|E|-)
LS Type: ASBR-summary-LSA

```



```

Link State ID: 3.3.3.3 (AS Boundary Device address)
Advertising Device: 1.1.1.1
LS Seq Number: 80000001
Checksum: 0xbe8c
Length: 28
Network Mask: /0
      TOS: 0 Metric: 1

```

The following table describes the fields in the output of the **show ip ospf database asbr-summary** command.

Field	Description
OSPF Device with ID	Displays the router ID.
AS Summary Link States	Displays the summary LSA information in the AS.
LS age	Displays the keepalive period of the LSA.
Options	Option
LS Type	Displays the type of the LSA.
Link State ID	Displays the link ID of the LSA.
AdvertisingRouter	Displays the device advertising the LSA.
LS Seq Number	Displays the sequence number of the LSA.
Checksum	Displays the checksum of the LSAs.
Length	Displays the length (in bytes) of the LSA.
Network Mask	Displays the network mask of the route corresponding to the LSA.
TOS	TOS value, which can be only 0 now.
Metric	Displays the metric of the route corresponding to the LSA.

The following example displays the output of the **show ip ospf database external** command.

```

Ruijie# show ip ospf database external
      OSPF Device with ID (1.1.1.35) (Process ID 1)
      AS External Link States
LS age: 752
Options: 0x2 (*|-|-|-|-|E|-)
LS Type: AS-external-LSA
Link State ID: 20.0.0.0 (External Network Number)
Advertising Device: 1.1.1.1
LS Seq Number: 8000000a
Checksum: 0x7627
Length: 36
Network Mask: /24
      Metric Type: 2 (Larger than any link state path)
      TOS: 0
      Metric: 20

```

Forward Address: 0.0.0.0

External Route Tag: 0

The following table describes the fields in the output of the **show ip ospf database external** command.

Field	Description
OSPF Device with ID	Displays the router ID.
Type-5 AS External Link States	Displays autonomous external LSA information.
LS age	Displays the keepalive period of the LSA.
Options	Option
LS Type	Displays the type of the LSA.
Link State ID	Displays the link ID of the LSA.
Advertising Router	Displays the device advertising the LSA
LS Seq Number	Displays the sequence number of the LSA.
Checksum	Displays the checksum of the LSAs.
Length	Displays the length (in bytes) of the LSA.
Network Mask	Displays the network mask of the route corresponding to the LSA.
Metric Type	Indicates the external link type.
TOS	TOS value, which can be 0 only now.
Metric	Displays the metric of the route corresponding to the LSA.
Forward Address	IP address through which traffic is forwarded to the destination network. If this address is 0.0.0.0, the data traffic will be forwarded to the device that generates the link state.
External Route Tag	External route tag. Each external route has a 32-byte route tag. The OSPF does not use the route tag by itself, but it will be used by other routing processes to redistribute OSPF routes.

The following example displays the output of the **show ip ospf database network** command:

```
Ruijie# show ip ospf database network
OSPF Router with ID (1.1.1.1) (Process ID 1)
Network Link States (Area 0.0.0.0)
LS age: 572
Options:0x2 (*|---|---|E|)
LS Type:network-LSA
Link State ID:192.88.88.27 (address of Designated Router)
Advertising Router:1.1.1.1
LS Seq Number: 80000001
Checksum:0x5366
Length: 32
Network Mask: /24
```

```
Attached Router:1.1.1.1
Attached Router:3.3.3.3
```

The following table describes the fields in the output of the **show ip ospf database network** command.

Field	Description
OSPF Router with ID	Displays the router ID corresponding to the follow-up information and the process ID corresponding to the OSPF.
Network LinStates	Displays the network LSA information.
LS age	Displays the keepalive period of the LSA.
Options	Option
LS Type	Displays the type of the LSA.
Link State ID	Displays the link ID of the LSA.
Advertising Device	Displays the device advertising the LSA.
LS Seq Number	Displays the sequence number of the LSA.
Checksum	Displays the checksum of LSAs.
Length	Displays the length (in bytes) of the LSA.
Network Mask	Displays the network mask of the network corresponding to the LSA.
Attached Router	Displays the device that is connected with the network.

The following example displays the output of the **show ip ospf database device** command:

```
Ruijie# show ip ospf database router
OSPF Router with ID (1.1.1.1) (Process ID 1)
Router Link States (Area 0.0.0.0)
LS age: 322
Options:0x2 (*|---|---|E|)
Flags:0x3 :ABR ASBR
LS Type:router-LSA
Link State ID:1.1.1.1
Advertising Router:1.1.1.1
LS Seq Number: 80000012
Checksum:0x6d3a
Length: 48
Number of Links: 2
Link connected to:Stub Network
(Link ID) Network/subnet number: 100.0.1.1
(Link Data) Network Mask: 255.255.255.255
Number of TOS metrics: 0
TOS 0 Metric: 0
```

The following table describes the fields in the output of the **show ip ospf database device** command.

Field	Description
-------	-------------

OSPF Device with ID	Displays the router ID.
Device Link States	Displays the device LSA information.
LS age	Displays the keepalive period of the LSA.
Options	Option
Flag	Flag
LS Type	Displays the type of the LSA.
Link State ID	Displays the link ID of the LSA.
Advertising Router	Displays the device advertising the LSA.
LS Seq Number	Displays the sequence number of the LSA.
Checksum	Displays the checksum of LSAs.
Length	Displays the length (in bytes) of the LSA.
Number of Links	Displays the number of links associated with the device.
Link connected to	Displays what the link is connected to and the network type.
(Link ID)	Link identifier
(Link Data)	Link data
Number of TOS metrics	TOS value, supporting TOS0 only
TOS 0 Metrics	TOS0 metric

The following example displays the output of the **show ip ospf database summary** command:

```
Ruijie# show ip ospf database summary
      OSPF Device with ID (1.1.1.1) (Process ID 1)
        Summary Link States (Area 0.0.0.0)
LS age: 499
Options: 0x2 (*|-|-|-|-|E|-)
LS Type: summary-LSA
Link State ID: 10.0.0.0 (summary Network Number)
Advertising Device: 1.1.1.1
LS Seq Number: 80000004
Checksum: 0x330e
Length: 28
Network Mask: /24
```

TOS: 0 Metric: 11

The following table describes the fields in the output of the **show ip ospf database summary** command.

Field	Description
OSPF Router with ID	Displays the router ID.
Summary Net Link States	Displays the summary network LSA information.
LS age	Displays the keepalive period of the LSA.
Options	Option
LS Type	Displays the type of the LSA.
Link State ID	Displays the link ID of the LSA.
Advertising Router	Displays the device advertising the LSA.
LS Seq Number	Displays the sequence number of the LSA.
Checksum	Displays the checksum of LSAs.
Length	Displays the length (in bytes) of the LSA.
Network Mask	Displays the network mask of the route corresponding to the LSA.
TOS	TOS value, supporting only 0 now
Metric	Displays the metric of the route corresponding to the LSA.

The following example displays the output of the **show ip ospf database nssa-external** command:

```
Ruijie# show ip ospf database nssa-external
      OSPF Device with ID (1.1.1.1) (Process ID 1)
NSSA-external Link States (Area 0.0.0.1 [NSSA])
LS age: 1
Options: 0x0 (*|-|-|-|-|-|-)
LS Type: AS-NSSA-LSA
Link State ID: 20.0.0.0 (External Network Number For NSSA)
Advertising Device: 1.1.1.1
LS Seq Number: 80000001
Checksum: 0x033c
Length: 36
Network Mask: /24
      Metric Type: 2 (Larger than any link state path)
```

```

TOS: 0
Metric: 20
NSSA: Forward Address: 100.0.2.1
External Route Tag: 0

```

The following table describes the fields in the output of the **show ip ospf database nssa-external** command.

Field	Description
OSPF Router with ID	Displays the router ID.
NSSA-external Link States	Displays the type 7 autonomous external LSA information.
LS age	Displays the keepalive period of the LSA.
Options	Option
LS Type	Displays the type of the LSA.
Link State ID	Displays the link ID of the LSA.
Advertising Router	Displays the device advertising the LSA.
LS Seq Number	Displays the sequential number of the LSA.
Checksum	Displays the checksum of the LSAs.
Length	Displays the length (in bytes) of the LSA.
Network Mask	Displays the network mask of the route corresponding to the LSA.
Metric Type	Displays the metric type.
TOS	TOS value, which can be 0 only now.
Metric	Displays the metric of the route corresponding to the LSA.
NSSA:Forward Address	IP address through which traffic is forwarded to the destination network. If this address is 0.0.0.0, the data traffic will be forwarded to the device that generates the link state.
External Route Tag	External route tag. Each external route has a 32-byte route tag. The OSPF does not use the route tag by itself, but it will be used in redistributing OSPF routes by other routing process.

The following example displays the output of the **show ip ospf database external** command:

```
Ruijie# show ip ospf database external
      OSPF Device with ID (1.1.1.1) (Process ID 1)
      AS External Link States
LS age: 1290
Options: 0x2 (*|-|-|-|-|E|-)
LS Type: AS-external-LSA
Link State ID: 20.0.0.0 (External Network Number)
Advertising Device: 1.1.1.1
LS Seq Number: 8000000a
Checksum: 0x7627
Length: 36
Network Mask: /24
      Metric Type: 2 (Larger than any link state path)
      TOS: 0
      Metric: 20
      Forward Address: 0.0.0.0
      External Route Tag: 0
```

The following table describes the fields in the output of the **show ip ospf database external** command.

Field	Description
OSPF Device with ID	Displays the router ID.
Type-7 AS External Link States	Displays the type 7 autonomous external LSA information.
LS age	Displays the keepalive period of the LSA.
Options	Option
LS Type	Displays the type of the LSA.
Link State ID	Displays the link ID of the LSA.
Advertising Router	Displays the device advertising the LSA.
LS Seq Number	Displays the sequence number of the LSA.
Checksum	Displays the checksum of the LSAs.
Length	Displays the length (in bytes) of the LSA.
Network Mask	Displays the network mask of the route corresponding to the LSA.
Metric Type	Displays the metric type.

TOS	TOS value, which can be 0 only now.
Metric	Displays the metric of the route corresponding to the LSA.
Forward Address	IP address through which traffic is forwarded to the destination network. If this address is 0.0.0.0, the data traffic will be forwarded to the device that generates the link state.
External Route Tag	External route tag. Each external route has a 32-byte route tag. The OSPF does not use the route tag by itself, but it will be used in redistributing OSPF routes by other routing process.

The following example displays the output of the **show ip ospf database database-summary** command:

```
Ruijie# show ip ospf database database-summary
OSPF process 1:
Device Link States      : 4
Network Link States     : 2
Summary Link States     : 4
ASBR-Summary Link States : 0
AS External Link States : 4
NSSA-external Link States: 2
```

The following table describes the fields in the output of the command **show ip ospf database database-summary**.

Field	Description
OSPF Process	OSPF process ID
Router Link	Number of device LSAs in the area
Network Link	Number of network LSAs in the area
Summary Link	Number of summary LSAs in the area
ASBR-Summary Link	Number of ASBR summary LSAs in the area
AS External Link	Number of NSSA LSAs in the area
NSSA-external Link	Number of NSSA LSAs in the area

#### Related Commands

Command	Description
N/A	N/A



Platform N/A

Description

## 5.53 show ip ospf interface

Use this command to display the OSPF-associated interface information.

**show ip ospf** [ *process-id* ] **interface** [ *interface-type interface-number* | **brief** ]

Parameter  
Description

Parameter	Description
<i>process-id</i>	OSPF process ID
<i>interface-type</i>	(Optional) type of the specified interface
<i>interface-number</i>	(Optional) number of the specified interface
brief	Displays the summary of the interface.

Defaults N/A

Command

Mode Privileged EXEC mode

Usage Guide This command displays the OSPF information on the interface.

Configuration The following example displays the output of the **show ip ospf interface fastEthernet 0/1** command:

Examples

```
Ruijie# show ip ospf interface fastEthernet0/1
FastEthernet 0/1 is up, line protocol is up
Internet Address 192.88.88.27/24, Ifindex 4, Area 0.0.0.0, MTU 1500
Matching network config: 192.88.88.0/24
Process ID 1, Router ID 1.1.1.1, Network Type BROADCAST, Cost: 1
Transmit Delay is 1 sec, State DR, Priority 1,BFD enabled
Designated Router (ID) 1.1.1.1, Interface Address 192.88.88.27
Backup Designated Router (ID) 3.3.3.3, Interface Address 192.88.88.72
Timer intervals configured,Hello 10,Dead 40,Wait 40,Retransmit 5
Hello due in 00:00:03
Neighbor Count is 1, Adjacent neighbor count is 1
Crypt Sequence Number is 70784
Hello received 1786 sent 1787, DD received 13 sent 8
LS-Req received 2 sent 2, LS-Upd received 29 sent 53
LS-Ack received 46 sent 23, Discarded 1
```

The following table describes the fields in the output of the **show ip ospf interface serial 1/0** command.

Field	Description
-------	-------------

FastEthernet 0/1 State	State of the network interface; UP means normal working and Down means faults.
Internet Address	Interface IP address
Area	OSPF area of the interface
MTU	Corresponding MTU
Matching network config	Network area configured for the corresponding OSPF
Process ID	Corresponding process ID
Router ID	OSPF router id
Network Type	OSPF network type
Cost	OSPF interface cost
Transmit Delay is	OSPF interface transmit delay
State	DR/BDR state ID
Priority	Priority of the interface
Designated Router(ID)	DR ID of the interface
DR's Interface address	Address of the DR of the interface
Backup designated device(ID)	Router ID of the BRD of the interface
BDR's Interface address	Address of the BDR of the interface
Time intervals configured	Hello, Dead, Wait, and Retransmit intervals of the interface
Hello due in	Time when the previous Hello is sent
Neighbor count	Total number of neighbors
Adjacent neighbor count	Number of Full neighbors
Crypt Sequence Number	The corresponding md5 authentication number of the interface
Hello received send	Statistics on the Hello packets sent and received
DD received send	Statistics on the DD packets sent and received
LS-Req received send	Statistics on the LS request packets sent and received
LS-Upd received send	Statistics on the LS update packets sent and received
LS-Ack received send	Statistics on the LS response packets sent and received
Discard	Statistics on the discarded OSPF packets

**Related  
Commands**

Command	Description
N/A	N/A

**Platform  
Description**

N/A

## 5.54 show ip ospf neighbor

Use this command to display the OSPF neighbor list.

```
show ip ospf [ process-id ] neighbor [ statistics | { [ interface-type interface-number ] | [ neighbor-id ] | [ detail] } ]
```

### Parameter Description

Parameter	Description
<i>process-id</i>	Displays ID of the process.
<b>detail</b>	(Optional) Displays the neighbor details.
<i>interface-type</i> <i>interface-number</i>	(Optional) Displays the neighbor information of the specified interface
<i>neighbor-id</i>	(Optional) Displays the information of the specified neighbor
<b>statistics</b>	(Optional) Displays the neighbor statistics.

**Defaults** N/A

### Command

**Mode** Privileged EXEC mode

**Usage Guide** This command displays neighbor information usually used to check whether the OSPF is running normally.

### Configuration

**Examples** N/A

### Related Commands

Command	Description
N/A	N/A

**Platform** N/A

**Description**

## 5.55 show ip ospf route

Use this command to display the OSPF routes.

```
show ip ospf [ process-id ] route [ count | ip-address mask ]
```

### Parameter Description

Parameter	Description
<i>process-id</i>	OSPF process ID. All OSPF routes will be displayed without an ID specified.
<b>count</b>	Statistics of various OSPF routes

<i>ip-address mask</i>	Statistics of routes which have a specified prefix and mask.
------------------------	--

**Defaults** N/A

**Command**

**Mode** Privileged mode

**Usage Guide** This command displays the OSPF routing information. The count option displays the OSPF routing statistics.

**Configuration** The following example displays the output of the **show ip ospf route** command.

**Examples**

```
OSPF process 1:
Codes: C - connected, D - Discard , O - OSPF,
IA - OSPF inter area N1 - OSPF NSSA external type 1, N2 - OSPF NSSA external
type 2
E1 - OSPF external type 1, E2 - OSPF external type 2
E2 100.0.0.0/24 [1/20] via 192.88.88.126, FastEthernet 0/1
C 192.88.88.0/24 [1] is directly connected, FastEthernet 0/1, Area 0.0.0.1
```

The following table describes the fields in the output of the **show ip ospf route** command.

Field	Description
codes	Route type and corresponding abbreviation and description
100.0.0.0/24	Route prefix
[1]	Route cost
via	Route next hop and interface

**Related  
Commands**

Command	Description
N/A	N/A

**Platform** N/A

**Description**

## 5.56 show ip ospf spf

Use this command to display the routing count in the OSPF area.

**show ip ospf [ *process-id* ] spf**

**Parameter  
Description**

Parameter	Description
<i>process-id</i>	OSPF process ID

**Defaults** N/A

**Command****Mode** Privileged EXEC mode**Usage Guide** This command displays the routing counts within the latest 30 minutes in the OSPF area and current routing total counts.**Configuration** The following example displays the output of the **show ip ospf [process-id] spf** command:**Examples**

```
Ruijie# show ip ospf 1 spf
```

```
OSPF process 1:
```

Area_id	30min_counts	Total_counts
0	32	1235
1	6	356

The following table describes the fields in the output of the **show ip ospf [process-id] spf** command.

Field	Description
Area_id	OSPF area ID
30min_counts	OSPF routing counts within the latest 30 minutes
Total_counts	Total counts of the OSPF routing till now

**Related  
Commands**

Command	Description
<b>show ip ospf</b>	Displays the OSPF summary.

**Platform** N/A**Description**

## 5.57 show ip ospf summary-address

Use this command to display the converged route of all redistributed routes.

**show ip ospf [process-id] summary-address****Parameter  
Description**

Parameter	Description
<i>process-id</i>	ID of the OSPF process. All OSPF routing processes will be displayed if this parameter is not configured.

**Defaults** N/A**Command****Mode** Privileged EXEC mode**Usage Guide** This command is valid only on the NSSA ABR, and displays only the routes with local aggregation operations.

**Configuration** The following example displays the output of the **show ip ospf summary-address** command:

**Examples**

```
Ruijie# show ip ospf summary-address
OSPF Process 1, Summary-address:
172.16.0.0/16, Metric 20, Type 2, Tag 0, Match count 3, advertise
```

Field	Description
Summary Address	IP address to be aggregated
Summary Mask	Mask to be aggregated
Advertise	Whether to advertise the aggregated route
Status	Whether the aggregation range takes effect
Aggregated subnets	Number of external routes included in the aggregation range

**Related  
Commands**

Command	Description
N/A	N/A

**Platform** N/A

**Description**

## 5.58 show ip ospf virtual-link

Use this command to display the OSPF virtual link information.

**show ip ospf** [ *process-id* ] **virtual-link** [ *ip-address* ]

**Parameter  
Description**

Parameter	Description
<i>process-id</i>	ID of the OSPF process. All OSPF routing processes will be displayed if this parameter is not configured.
<i>ip-address</i>	Associated ID of a virtual link neighbor

**Defaults** N/A

**Command**

**Mode** Privileged EXEC mode

**Usage Guide** If no virtual link is configured, the command displays the neighbor status and other related information. The show ip ospf neighbor command does not display the neighbor of the virtual link.

**Configuration** The following is the output of the **show ip ospf virtual-links** command:

**Examples**

```
Ruijie# show ip ospf virtual-links
Virtual Link VLINK0 to device 1.1.1.1 is up
Transit area 0.0.0.1 via interface FastEthernet 0/1
```

```

Local address 10.0.0.37/32
Remote address 10.0.0.27/32
Transmit Delay is 1 sec, State Point-To-Point,
Timer intervals configured, Hello 10, Dead 40, Wait 40, Retransmit 5
Hello due in 00:00:05
Adjacency state Full

```

The following table describes the fields in the output.

Field	Description
Virtual Link VLINK0 to router	Displays the virtual link neighbors and their status.
Virtual Link State	Displays the virtual link state.
Transit area	Displays the transit area of the virtual link.
via interface	Displays the associated interface of the virtual link.
Local address	Local interface address
Remote Address	Peer interface address
Transmit Delay	Displays the transmit delay of the virtual link.
State	Interface state
Time intervals configured	Hello, Dead, Wait, and Retransmit interval of the interface
Adjacency State	Neighbor state, where FULL means the stable state

#### Related Commands

Command	Description
N/A	N/A

#### Platform

N/A

#### Description

## 5.59 summary-address

Use this command to configure the aggregate route out of the OSPF routing domain. Use the **no** form of this command to remove the aggregate route.

**summary-address** *ip-address net-mask* [ **not-advertise** | **tag** *value* | **cost** *cost* ]

**no summary-address** *ip-address net-mask* [ **not-advertise** | **tag** | **cost** ]

#### Parameter Description

Parameter	Description
<i>ip address</i>	IP address of the aggregate route
<i>net-mask</i>	Network mask of the aggregate route
<b>not-advertise</b>	Does not advertise the aggregate route. If the parameter is not configured, the aggregate route is advertised.

<b>tag</b> <i>value</i>	Sets the tag value of an aggregate route. The range is from 0 to 4,294,967,295.
<b>cost</b> <i>cost</i>	Cost value of the aggregate route. The range is from 0 to 16,777,214.

**Defaults** No aggregate route is configured by default.

## Command

**Mode** Routing process configuration mode

**Usage Guide** When routes are redistributed by another routing process into the OSPF routing process, every route is advertised to the OSPF-enabled device separately in external LSAs. If the incoming routes are continuous addresses, the autonomous border device can advertise only one aggregate route, reducing the scale of routing table greatly.

Unlike the **area range** command, the **area range** command aggregates inter-OSPF-area routes, while the **summary-address** command aggregates external routes of the OSPF routing domain.

For the NSSA, the **summary-address** command is valid only on the NSSA ABR now, and aggregates only redistributed routes.

**Configuration** The following example generates an external aggregate route 100.100.0.0/16.

## Examples

```
Ruijie(config)# router ospf20
Ruijie(config-router)# summary-address 100.100.0.0 255.255.0.0
Ruijie(config-router)# redistribute static subnets
Ruijie(config-router)# network 200.2.2.0 0.0.0.255 area 1
Ruijie(config-router)# network 172.16.24.0 0.0.0.255 area 0
Ruijie(config-router)# area nssa
```

## Related Commands

Command	Description
<b>area-range</b>	Configures route convergence on the OSPF area border device.
<b>redistribute</b>	Redistributes routes of other routing processes.

**Platform** N/A

## Description

## 5.60 timers lsa arrival

Use this command to configure the time delay for the same LSA received. Use the **no** form of this command to restore the default setting.

**timers lsa arrival** *arrival-time*

**no timers lsa arrival**

## Parameter Description

Parameter	Description
-----------	-------------



<i>arrival-time</i>	Configures the time delay when receiving the same LSA. The range is from 0 to 600000 in the unit of milliseconds.
---------------------	---

**Defaults** The default is 1000.

**Command**

**Mode** Routing process configuration mode

**Usage Guide** No action is done when the same LSA is received within the specified time.

**Configuration** The following example configures the time delay for the same LSA as 2seconds.

**Examples**

```
Ruijie(config)# routerospf1
Ruijie(config-router)# timers arrival-time 2000
```

**Related  
Commands**

Command	Description
<b>show ip ospf</b>	Displays the OSPF information.

**Platform** N/A

**Description**

## 5.61 timers pacing lsa-group

Use this command to configure the LSA grouping and then refresh the whole groups as well as the update interval for the aged link state. Use the **no** form of this command to restore the default setting.

**timers pacing lsa-group seconds**

**no timers pacing lsa-group**

**Parameter  
Description**

Parameter	Description
<i>seconds</i>	Parameter used for LSA pacing, checksum calculation, and aging interval. The range is from 10 to 1800 in the unit of seconds.

**Defaults** The default is 30.

**Command**

**Mode** Routing process configuration mode

**Usage Guide** Each LSA has its own update and aging time (LSA age). If you update and age LSAs separately, many CPU resources will be consumed. To effectively use CPU resources, you can update LSAs of a device in batches.

You can use this command to modify the value of seconds, whose default value is 240 seconds. This parameter needs not to be adjusted often. The optimal group pacing interval is inversely proportional

to the number of LSAs that need to be calculated. For example, if you have approximately 10000 LSAs in the database, decreasing the pacing interval would be better. If the switch has a small database (40 to 100 LSAs), increasing the pacing interval to 10 to 20 minutes might be better.

**Configuration** The following example configures the pacing time as 120 seconds.

**Examples**

```
Ruijie(config)# deviceospf 20
Ruijie (config-router)# timers paing lsa-group 120
```

**Related  
Commands**

Command	Description
<b>show ip ospf</b>	Displays the OSPF information.

**Platform** N/A

**Description**

## 5.62 timers pacing lsa-transmit

Use this command to transmit the LSA grouping updating. Use the **no** form of this command to restore the default setting.

**timers pacing lsa-transmit** *transmit-time transmit-count*

**no timers pacing lsa-transmit**

**Parameter  
Description**

Parameter	Description
<i>transmit-time</i>	Configures the interval of sending the LSA grouping. The range is from 10 to 1000.
<i>transmit-count</i>	Configures the number of LS-UPD packets per group. The range is from 1 to 200.

**Defaults**

The default configurations are as follows:

Transmit-time: 40 milliseconds.

Transmit-count: 1

**Command****Mode**

Routing process configuration mode

**Usage Guide**

If there are a large number of LSAs and the load on the system is heavy, you can properly use the **transmit-time** and **transmit-count** to inhibit the flooding LS-UPD packet number in the network. If the CPU and network bandwidth loads are not too much, reduce **transimi-time** and increase **transimit-count** to quicken the environment convergence.

**Configuration Examples** The following example sets the interval of sending the LS-UPD packets as 50ms, the packets number as 20.

```
Ruijie(config)# routerospf1
```

```
Ruijie(config-router)# timers pacing lsa-transmit 50 20
```

**Related  
Commands**

Command	Description
<b>show ip ospf</b>	Displays the OSPF process information, including the router ID.

**Platform** N/A**Description**

## 5.63 timers spf

Use this command to configure the delay for SPF calculation after the OSPF receives the topology change as well as the interval between two SPF calculations. Use the **no** form of this command to restore the default setting.

**timers spf** *spf-delay* *spf-holdtime*

**no timers spf**

**Parameter  
Description**

Parameter	Description
<i>spf-delay</i>	Defines the SPF calculation waiting period in seconds. The range is from 0 to 2147483647. After receiving the topology change, the OSPF routing process must wait for the specified period to start the SPF calculation.
<i>spf-holdtime</i>	Defines the interval between two SPF calculations in seconds. The range is from 0 to 2147483647. When the waiting time is up but the interval between two calculations is still elapsing, the SPF calculation cannot start.

**Defaults**

For the RGOS not supporting the **timers throttle spf** command, the default values are as follows:

*spf-delay*: 5seconds;

*spf-holdtime*: 10 seconds.

For the RGOS supporting the **timers throttle spf** command, by default, the **timers spf** command takes no effect. *Spf-delay* depends on the default configuration of the **timers throttle spf** command.

**Command****Mode**

Routing process configuration mode

**Usage Guide**

Smaller values of *spf-delay* and *spf-holdtime* mean that OSPF adapts to the topology change faster, and the network convergence period is shorter, but this will occupy more CPU of the router.



The configurations of the **timers spf command** and the **timers throttle spf** command may overwrite each other.

**Configuration** The following example configures the delay and holdover period of the OSPF as 3 and 9 seconds respectively.

**Examples**

```
Ruijie(config)# deviceospf20
Ruijie(config-router)# timersspf 3 9
```

**Related  
Commands**

Command	Description
<b>show ip ospf</b>	Displays the configuration information of the ospf.
<b>timers throttle spf</b>	Configures the exponential back off delay for SPF calculation. The command is recommended to replace the timers spf command because it is more powerful.

**Platform** N/A

**Description**

## 5.64 timers throttle lsa all

Use this command to configure the exponential back off algorithm for the LSA. Use the **no** form of this command to restore the default setting.

**timers throttle lsa all** *delay-time hold-time max-wait-time*

**no timers throttle lsa all**

**Parameter  
Description**

Parameter	Description
<i>delay-time</i>	Configures the time delay of generating the LSA first. The range is from 1 to 600000.
<i>hold-time</i>	Configures the minimum interval of refreshing the LSA between the first time and second time. The range is from 1 to 600000.
<i>max-wait-time</i>	Configures the maximum interval of successive refreshing the LSA., which determines whether the LSA is refreshed successively. The range is from 1 to 600000

**Defaults** The default configurations are as follows:

**Delay-time:** 0 millisecond,

**Hold-time:** 5000 milliseconds,

**Max-wait-time:** 5000 milliseconds.

**Command**

**Mode** Routing process configuration mode

**Usage Guide** If high convergence performance is required for the link change, the value of delay-time can be relatively small. if you expect to reduce the CPU consumption, increase appropriately several values.



The value of hold-time cannot be smaller than that of delay-time, and the value of max-wait-time cannot be smaller than that of hold-time.

**Configuration Examples** The following example configures the first delay as 10ms, hold-time as 1second and the longest delay as 5seconds.

```
Ruijie(config)# routerospf1
Ruijie(config-router)# timers throttle lsa all 10 1000 5000
```

**Related  
Commands**

Command	Description
<b>show ip ospf</b>	Displays the configuration information of the ospf

**Platform** N/A

**Description**

## 5.65 timers throttle route

Use this command to configure the delay time of route calculation on receiving the ASBR summary LSA and the external summary LSA. Use the **no** form of this command to restore the default setting.

**timers throttle route** { **inter-area** *ia-delay* | **ase** *ase-delay* }

**no timers throttle route** { **inter-area** | **ase** }

**Parameter  
Description**

Parameter	Description
<b>inter-area</b>	Calculates the inter area routes.
<i>ia-delay</i>	Sets the delay time of the inter-area route calculation, in the range from 0 to 600,000 in the unit of milliseconds. On receiving the ASBR summary LSA, the router will not calculate the inter-area routes until the ia-delay time runs out.
<b>ase</b>	Calculates the external routes.
<i>ase-delay</i>	Defines the delay time of the external route calculation, in the range from 0 to 600,000 in the unit of milliseconds. On receiving the external summary LSA, the router will not calculate the external routes until the ase-delay time runs out.

**Defaults** The default values are as follows:

ia-delay: 0,

ase-delay: 0,

**Command**

**Mode** Routing process configuration mode

**Usage Guide** The default setting is recommended if the network needs to be fast converged. For the instable network where multiple inter-area and external routes exist, if you want to optimize the route calculation and save the CPU resources, increase the delay time.

**Configuration** The following example sets the .delay time of the inter-area route calculation to one second.

**Examples**

```
Ruijie(config)# router ospf 1
Ruijie(config-router)# timers throttle route inter-area 1000
```

**Related  
Commands**

Command	Description
N/A	N/A

**Platform** N/A  
**Description**

## 5.66 timers throttle spf

Use this command to configure the topology change information for OSPF, including the delay for SPF calculation as well as the interval between two SPF calculations in routing process configuration mode. Use the **no** form of this command to restore the default setting.

**timers throttle spf** *spf-delay* *spf-holdtime* *spf-max-waittime*

**no timers throttle spf**

**Parameter  
Description**

Parameter	Description
<i>spf-delay</i>	Defines the SPF calculation waiting period, in the unit of milliseconds, in the range from 1 to 600,000. After receiving the topology change, the OSPF routing process must wait for the specified period to start the SPF calculation.
<i>spf-holdtime</i>	Defines the interval between two SPF calculations in seconds in the range from 1 to 600,000.
<i>spf-max-waittime</i>	Defines the maximum interval between two SPF calculations, in milliseconds in the range from 1 to 60,0000.

**Defaults** The default configurations are as follows:

spf-delay: 1000ms;

spf-holdtime: 5000ms;

spf-max-waittime: 10000ms.

**Command**

**Mode** Routing process configuration mode

**Usage Guide** The spf-delay parameter indicates the delay time of the topology change to the SPF calculation.

The spf-holdtime parameter indicates the minimum interval between two SPF calculations. Then, the interval of the consecutive SPF calculations is at least twice as the last interval until it reaches to spf-max-waittime. If the interval between two SPF calculations has exceeded the required value, the SPF calculation will restart from spf-holdtime.

Smaller spf-delay and spf-holdtime values can make the topology converge faster. A greater spf-max-waittime value can reduce the system resource consumption of SPF calculation. Those configurations can be flexibly adjusted according to the actual stability of the network topology. Compared with the timers spf command, this command is more flexible. It speeds up the SPF calculation convergence, and reduces the system resource consumption of SPF calculation due to the topology change. To this end, the timers throttle spf command is recommended.



The value of spf-holdtime cannot be smaller than the value of spf-delay, or the value of spf-holdtime will be set to be equal to the value of spf-delay;

The value of spf-max-waittime cannot be smaller than the value of spf-holdtime, or the value of spf-max-waittime will be set to be equal to the value of spf-holdtime automatically;

The configurations of the timers spf command and the timers throttle spf command may overwrite each other.

If both the timers spf command and the timers throttle spf command are not configured, the default value of the timers throttle spf command is used.

**Configuration Examples** The following example configures the delay and holdtime and the maximum time interval of the OSPF as 5ms, 1000ms and 90000ms respectively. If the topology changes consecutively, the SPF calculation intervals are: 5ms, 1second, 3 seconds, 7 seconds, 15 seconds, 31 seconds, 63 seconds, 89 seconds, 179 seconds, 179+90seconds...

```
Ruijie(config)# routerospf20
Ruijie(config-router)# timersspf 5 1000 90000
```

**Related  
Commands**

Command	Description
<b>show ip ospf</b>	Displays the configuration information of OSPF
<b>timers spf</b>	Configures the SPF calculation delay. This command is supported in versions earlier than RGOS 10.4. It is recommended to replace the timers spf command with the timers throttle spf command.

**Platform** N/A

**Description**

## 5.67 two-way-maintain

Use this command to enable the OSPF two-way-maintain function. Use the **no** form of this command to disable this function.

**two-way-maintain**

**no two-way-maintain****Parameter  
Description**

Parameter	Description
N/A	N/A

**Defaults** This function is enabled by default.

**Command**

**Mode** Routing process configuration mode

**Usage Guide** In the large-scale network, partial packets delay or dropped may exist due to much CPU and memory are occupied caused by lots of packet transmission. If the Hello packets are handled over dead-interval, the corresponding adjacency will be disconnected. In this case, you can enable the two-way-maintain function for the packets such as DD, LSU, LSR and LSAck packets from a neighbor in the network (except for the Hello packets), avoiding the neighbor invalidation caused by delayed or dropped Hello packets.

**Configuration** The following example disables the OSPF two-way-maintain function.

**Examples**

```
Ruijie(config)# routerospf1
Ruijie(config-router)# notwo-way-maintain
```

**Related  
Commands**

Command	Description
<b>show ip ospf</b>	Displays the configuration information of the OSPF

**Platform** N/A

**Description**



## 6 OSPFv3 Commands

### 6.1 area authentication

Use this command to configure OSPFv3 area authentication. Use the **no** form of this command to restore the default setting.

**area** *area-id* **authentication ipsec spi** *spi* [**md5** | **sha1**] [**0** | **7**] *key*

**no area** *area-id* **authentication**

Parameter Description	Parameter	Description
	<i>area-id</i>	Specifies an area ID. It can be an integer or the prefix of an IPv4 address.
	<i>spi</i>	Specifies a security parameter index, in the range from 256 to 4294967295.
	<b>md5</b>	Specifies a message digest 5 (MD5) authentication mode.
	<b>sha1</b>	Specifies a secure hash algorithm 1 (SHA1) authentication mode.
	<b>0</b>	Indicates that a key is displayed in a plain-text format.
	<b>7</b>	Indicates that a key is displayed in a cipher-text format.
	<i>key</i>	Specifies an authentication key.

**Defaults** Authentication is not performed by default.

**Command** Routing process configuration mode  
**Mode**

**Usage Guide** RGOS supports three authentication modes:

- null authentication mode, which is configured when authentication is not needed
- MD5 authentication mode
- SHA1 authentication mode

If OSPFv3 area authentication is configured, the configuration takes effect on all interfaces ( except for those of virtual links ) in the area. Interface authentication configuration, however, takes precedence over area authentication configuration.

**Configuration Examples** The following example specifies MD5 authentication for area 1 where OSPFv3 routing processes reside, and sets the authentication password to aaaaaaaaaaaaaaaaaaaaaaaaaaaaaa.

```
Ruijie(config-router)# area 1 authentication ipsec spi 300 md5  
aaaaaaaaaaaaaaaaaaaaaaaaaaaaaaaa
```

Related Commands	Command	Description
	<b>ipv6 ospf authentication</b>	Specifies interface authentication.

<b>area virtual-link authentication</b>	Specifies virtual link authentication.
---	--

**Platform** N/A

**Description**

## 6.2 area default-cost

Use this command to set the cost of the default route for the ABR in the stub area. Use the **no** form of this command to restore the default setting.

**area** *area-id* **default-cost** *cost*

**no area** *area-id* **authentication**

Parameter Description	Parameter	Description
	<i>area-id</i>	Area ID of the stub area. It can be an integer or an IPv4 prefix.
	<i>cost</i>	Cost of the default route of the stub area in the range from 0 to 16777215.

**Defaults** The default cost is 1.

**Command Mode** Routing process configuration mode.

**Usage Guide** This command can only work in the ABR connected to the stub area.

**Configuration Examples** The following example sets the cost of the default route of stub area 50 to 100.

```
ipv6 router ospf 1
area 50 stub
area 50 default-cost 100
```

Related Commands	Command	Description
	<b>area stub</b>	Sets a stub area.

**Platform** N/A

**Description**

## 6.3 area encryption

Use this command to enable encryption authentication for an OSPFv3 area. Use the **no** form of this command to restore the default setting.

**area** *area-id* **encryption ipsec spi** *spi* **esp null** [ **md5** | **sha1** ] [ **0** | **7** ] *key*

**no area *area-id* encryption****Parameter  
Description**

Parameter	Description
<i>area-id</i>	Specifies an area ID. It can be an integer or the prefix of an IPv4 address.
<i>spi</i>	Specifies a security parameter index, in the range from 256 to 4294967295.
<b>null</b>	Specifies the null encryption mode.
<b>md5</b>	Specifies the MD5 authentication mode.
<b>sha1</b>	Specifies the SHA1 authentication mode.
<b>0</b>	Indicates that a key is displayed in the plain-text format.
<b>7</b>	Indicates that a key is displayed in the cipher-text format.
<i>Key</i>	Specifies an authentication key.

**Defaults** Encryption authentication is not performed by default.

**Command Mode** Routing process configuration mode

**Usage Guide** RGOS supports the null encryption mode and two authentication modes: MD5 and SHA1.  
If encryption authentication is configured for an OSPFv3 area, the configuration takes effect on all interfaces (except for those of virtual links) in the area. Encryption authentication configuration on interfaces, however, takes precedence over that of the OSPFv3 area.

**Configuration Examples** The following example specifies null encryption and MD5 authentication for area 1 where OSPFv3 routing processes reside, and sets the authentication password to  
aaaaaaaaaaaaaaaaaaaaaaaaaaaaa.

```
Ruijie(config-router)# area 1 encryption ipsec spi 300 esp null md5
aaaaaaaaaaaaaaaaaaaaaaaaaaaaa
```

**Related  
Commands**

Command	Description
<b>ipv6 ospf encryption</b>	Specifies interface encryption authentication.
<b>area virtual-link encryption</b>	Specifies virtual link encryption authentication.

**Platform** N/A  
**Description**

## 6.4 area-range

Use this command to set the range of the converged inter-area addresses. Use the **no** form of this command to restore the default setting.

**area** *area-id* **range** *ipv6-prefix/prefix-length* [ **advertise**|**not-advertise** ]

**no area** *area-id* **range** *ipv6-prefix/prefix-length*

**Parameter  
Description**

Parameter	Description
<i>area-id</i>	ID of the area in which the addresses are converged. It can be an integer or an IPv4 prefix.
<i>ipv6-prefix/prefix-length</i>	Range of the converged addresses.
<b>advertise</b>	Advertises the range of converged addresses.
<b>not-advertise</b>	The range of the converged addresses is not advertised. By default, the function is enabled.

**Defaults**

No converged inter-area address range is defined by default.

**Command  
Mode**

Routing process configuration mode

**Usage Guide**

This command applies only to ABR. Use this command to converge multiple routes of an area into one route and advertise it to other areas. This command applies only to ABR. Use this command to converge multiple routes of an area into one route and advertise it to other areas. The routing information combination only takes place on the area border. The specific routing information is seen on the intra-area routers, but only one converged route can be seen on the devices in other areas. By configuring the two options of advertise and not-advertise, you can decide whether to advertise the convergence range to enable blocking and filtering. By default, the range is advertised to the outside. The option cost can be used to set the metric value of convergence routing.

A number of route convergence commands can be defined. In this way, the number of the routes in the OSPF AS is reduced. Particularly for a large network, the forwarding performance will be improved.

When a number of routes are converged, and the containment relationship exists between items, the area range converged is determined by the longest match principle.

**Configuration**

The following example converges the routes in area 1.

**Examples**

```
ipv6 router ospf 1
area 1 range 2001:abcd:1:2::/64
```

**Related  
Commands**

Command	Description
<b>summary-prefix</b>	Sets the range of the external routes to be converged.

**Platform  
Description**

N/A

## 6.5 area stub

Use this command to create a stub area or set its attributes. Use the **no** form of this command to restore the default setting.

**area** *area-id* **stub** [ **no-summary** ]

**no area** *area-id* **stub** [ **no-summary** ]

### Parameter Description

Parameter	Description
<i>area-id</i>	ID of the stub area. It can be an integer or an IPv6 prefix.
<b>no-summary</b>	This option applies only to the ABR in the stub area, indicating that the ABR only advertises the type 3 LSA indicating the default route to the stub area, not other type 3 LSAs.

**Defaults** No stub area is defined by default.

### Command

**Mode** Routing process configuration mode

**Usage Guide** If an area is at the end of an entire network, it can be designed as the stub area, in which all the routers must execute the area stub command. If the area is designed as the stub area, it cannot learn the AS external routing information (type 5 LSAs). In practical application, the external routing information takes a large proportion of the link state database, so the devices in the stub area can only learn very little routing information, thus reducing the system resources required for the running of the OSPFv3 protocol.

By default, a type 3 LSA advertisement indicating default routing on the ABR in the stub area is generated, then the devices in the stub area can get to the outside of the AS.

If a totally stub area needs to be configured, just select the keyword **no-summary** when executing the **area stub** command on the ABR.

**Configuration** The following example enables the ABR in stub area 10 to advertise the default route to the stub area.

**Examples**

```
ipv6 router ospf 1
area 10 stub
area 10 stub no-summary
```

### Related Commands

Command	Description
<b>area default-cost</b>	Sets the cost of the default route in the stub area.



**Platform  
Description** N/A


## 6.6 area virtual-link

Use this command to create a virtual link or set its parameters. Use the **no** form of this command to restore the default setting.

```
area area-id virtual-link router-id [ hello-interval seconds ] [ dead-interval seconds ]
[ retransmit-interval seconds ] [ transmit-delay seconds ] [ instance instance-id ] [ authentication
ipsec spi spi [ md5 | sha1 ] [ 0 | 7 ] key ] [ encryption ipsec spi spi esp null [ md5 | sha1 ] [ 0 | 7 ]
key ]
no area area-id virtual-link router-id [ hello-interval ] [ dead-interval ] [ retransmit-interval ]
[ transmit-delay ] [ instance ] [ authentication ] [ encryption ]
```

### Parameter Description

Parameter	Description
<i>area-id</i>	ID of the area in which the virtual link is located. It can be an integer or an IPv6 prefix.
<i>Router-id</i>	Neighbor router ID of the virtual link.
<b>hello-interval</b> seconds	Sets the interval to send the hello message on the local virtual link interface in the range from 1 to 65535 in the unit of seconds.
<b>dead-interval</b> seconds	Interval for the local interface of the virtual link to wait before considering that the neighbor fails. It is in the range from 1 to 65535 in the unit of seconds.
<b>retransmit-interval</b> seconds	Interval for retransmitting LSA on the local interface of the virtual link . The range is from 1 to 65535 in the unit of seconds.
<b>transmit-delay</b> seconds	Delay on the local interface of the virtual link in sending LSA. The range is from 1 to 65535 in the unit of seconds.
<b>instnace</b> instance-id	Specifies the instance corresponding to the virtual link. No virtual link can be established between different instances. Range: 0.-255
<b>authentication ipsec spi</b> spi [ md5   sha1 ] [ 0   7 ] key	Specifies OSPFv3 authentication.  <div>  Authentication configuration on two neighboring devices must be consistent. The <b>service password-encryption</b> command enables a key to be displayed in the cipher-text format. </div> <i>spi</i> specifies a security parameter index, in the range from 256 to 4294967295. <b>md5</b> specifies the MD5 authentication mode. <b>sha1</b> specifies the SHA1 authentication mode. 0 indicates that a key is displayed in the plain-text format. 7 indicates that a key is displayed in the cipher-text format. <i>key</i> specifies an authentication key.
<b>encryption ipsec spi spi</b> <b>esp null</b> [ md5  sha1 ] [ 0 7 ] key	Specifies OSPFv3 encryption authentication.  <div>  Authentication configuration on two neighboring devices must be consistent. The <b>service password-encryption</b> command enables a key to be displayed in the cipher-text format. </div>

	<p><i>spi</i> specifies a security parameter index, in the range from 256 to 4294967295.</p> <p><b>null</b> specifies the null encryption mode.</p> <p><b>md5</b> specifies the MD5 authentication mode.</p> <p><b>sha1</b> specifies the SHA1 authentication mode.</p> <p>0 indicates that a key is displayed in the plain-text format.</p> <p>7 indicates that a key is displayed in the cipher-text format.</p> <p><i>key</i> specifies an authentication key.</p>
<p><b>authentication ipsec spi</b>  <i>spi</i> [ <b>md5</b>   <b>sha1</b> ] [ <b>0</b>   <b>7</b> ] <i>key</i></p>	<p>Specifies OSPFv3 authentication.</p> <hr/> <p> Authentication configuration on two neighboring devices must be consistent. The <b>service password-encryption</b> command enables a key to be displayed in the cipher-text format.</p> <hr/> <p><i>spi</i> specifies a security parameter index, in the range from 256 to 4294967295.</p> <p><b>md5</b> specifies the MD5 authentication mode.</p> <p><b>sha1</b> specifies the SHA1 authentication mode.</p> <p>0 indicates that a key is displayed in the plain-text format.</p> <p>7 indicates that a key is displayed in the cipher-text format.</p> <p><i>key</i> specifies an authentication key.</p>

**Defaults**

No virtual link is defined by default

hello-interval: 10 seconds;

dead-interval: four times of the hello-interval;

retransmit-interval: five seconds;

transmit-interval: one second.

Authentication and encryption are not performed by default.


**Command Mode**

Routing process configuration mode

**Usage Guide**

In the OSPFv3 AS, all the areas must be connected with the backbone area to ensure that they can learn the routes of the whole OSPFv3 AS. If an area cannot be directly connected with the backbone area, it can connect it through a virtual link.

 The virtual link shall not be in the stub area.

 configuration, **dead-interval** and **instance** shall be configured consistently on both sides of the virtual link neighbors, otherwise neighboring relationship cannot be set up between the virtual neighbors.

**Configuration**

The following example configures a virtual link.

**Examples**

```
Ruijie(config)# ipv6 router ospf 1
Ruijie(config-router)# area 1 virtual-link 192.1.1.1
```

Related Commands	Command	Description
	<b>show ipv6 ospf</b>	Displays the OSPFv3 routing process information.
	<b>show ipv6 ospf neighbor</b>	Displays the OSPFv3 neighbor information.
	<b>show ipv6 ospf virtual-links</b>	Displays the OSPFv3 virtual link information.

Platform N/A

Description

## 6.7 auto-cost

The metric of the OSPFv3 protocol is the interface-based bandwidth. Use this command to enable the bandwidth-based interface metric calculation or modify the reference bandwidth. Use the **no** form of this command to restore the default setting.

**auto-cost** [ **reference-bandwidth** *ref-bw* ]

**no auto-cost** [ **reference-bandwidth** ]

Parameter Description	Parameter	Description
	<b>reference-bandwidth</b> <i>ref-bw</i>	Reference bandwidth in the range from 1 to 4294967 Mbps.

**Defaults** The interface metric is calculated based on the reference bandwidth, which is 100Mbps.

**Command Mode** Routing process configuration mode

**Usage Guide** Use **no auto-cost reference-bandwidth** to restore it to the default reference bandwidth. You can use **ipv6 ospf cost** in the interface configuration mode to set the cost of the specified interface, and it takes precedence over the metric calculated based on the reference bandwidth.

**Configuration Examples** The following example changes the reference bandwidth to 10M.

```
ipv6 router ospf 1
auto-cost reference-bandwidth 5
```

Related Commands	Command	Description
	<b>ipv6 ospf cost</b>	Sets the cost of an interface.
	<b>show ipv6 ospf</b>	Displays the OSPFv3 routing process information.



Platform N/A

Description

## 6.8 clear ipv6 ospf process

Use this command to clear and restart the OSPF process.

**clear ipv6 ospf** { **process** | *process-id* }

Parameter Description	Parameter	Description
	<i>process-id</i>	OSPF process ID, in the range from 1 to 65535

Defaults N/A

Command  
Mode Privileged EXEC mode

**Usage Guide** In normal case, it is not necessary to use this command.  
Use the parameter *process-id* to clear only one specific OSPFv3 instance. If no *process-id* is specified, all the OSPFv3 instances will be cleared.

**Configuration** The following example restarts the OSPF process.

**Examples**

```
enable
clear ipv6 ospf process
```

Related Commands	Command	Description
	N/A	N/A

Platform N/A

Description

## 6.9 default-information originate

Use this command to generate a default route to the OSPFv3 routing domain in the routing process mode. Use the **no** form of this command to restore the default setting.

**default-information originate** [ **always** ] [ **metric** *metric* ] [ **metric-type** *type* ] [ **route-map** *map-name* ]

**no default-information originate** [ **always** ] [ **metric** ] [ **metric-type** ] [ **route-map** *map-name* ]

Parameter Description	Parameter	Description
	<b>always</b>	( Optional ) It makes OSPFv3 generate the default route

	unconditionally, no matter whether the default route exists locally or not.
<b>metric</b> <i>metric</i>	(Optional) Initial metric value of the default route, in the range from 0 to 16777214
<b>metric-type</b> <i>type</i>	(Optional) Type of the default route. There are two type of OSPF external routes: type 1, different metrics seen on different routers; type 2, the same metric seen on different routers.
<b>route-map</b> <i>map-name</i>	Associated route-map name, no associated route-map by default

**Defaults**

No default route is created;  
The initial metric value is 1;  
The default route type is type 2.

**Command Mode**

Routing process configuration mode

**Usage Guide**

When the **redistribute** or **default-information** command is executed, the OSPFv3-enabled router automatically turns into the autonomous system border router ( ASBR ). But the ASBR cannot generate the default route automatically or advertise it to all the routers in the OSPFv3 routing domain. The ASBR generates default routes by default. It is required to configure with the routing process configuration command **default-information originate**.

If the **always** parameter is used, the OSPF routing process advertises an external default route to the neighbors, no matter whether the default route in the core routing table exists or not. However, the local router does not display the default route. To make sure whether the default route is generated, execute **show ipv6 ospf database** to observe the OSPF link state database. The execution of the **show ipv6 route** command on the OSPF neighbor will display the default route.

The metric of the external default route can be defined only with the **default-information originate** command and cannot be set with the **default-metric** command.

There are two types of OSPFv3 external routes: type 1 external routes have changeable routing metrics, while type 2 external routes have constant routing metrics. For two parallel routes with the same route metric to the same destination network, type 1 takes precedence over type 2. As a result, the **show ipv6 route** command displays only the type 1 route.

**Configuration Examples**

The following example generates a default route.

```
default-information originate always
```

**Related Commands**

Command	Description
<b>redistribute</b>	Redistribute routes.
<b>show ipv6 ospf</b>	Displays the OSPFv3 routing process information.
<b>show ipv6 ospf database</b>	Displays the OSPFv3 link state database information.

Platform N/A

Description

## 6.10 default-metric

Use this command to set the default metric for the routes to be redistributed. Use the **no** form of this command to restore the default setting

**default-metric** *metric-value*

**no default-metric**

Parameter  
Description

Parameter	Description
<i>metric-value</i>	Default metric for the routes to be redistributed. Its range is from 1 to 16777214.

Defaults The default is 20.

Command

Mode The default route type is type 2.

Usage Guide This command can be used together with **redistribute** to set the default metric for the routes to be redistributed. But this command does not apply to two types of routes:

- The **default route generated** with default-information originate;
- The redistributed direct route, for which 20 is always the default metric value.

Configuration The following example sets the default metric for the routes to be redistributed to 10.

Examples

```
Ruijie(config)# ipv6 router ospf 1
Ruijie(config-router)# default-metric 10
```

Related  
Commands

Command	Description
<b>redistribute</b>	Redistributes the routes.
<b>show ipv6 ospf</b>	Displays the OSPFv3 routing process information.

Platform N/A

Description

## 6.11 distance

Use this command to set the management distance corresponding to different types of OSPFv3 routes. Use the **no** form of this command to restore the default setting.

**distance** { *distance* | **ospf** { **intra-area** *distance* | **inter-area** *distance* | **external** *distance* } }  
**no distance** [ **ospf** ]

#### Parameter Description

Parameter	Description
<i>distance</i>	Sets the management distance of the route, in the range from 1 to 255.
<b>intra-area</b> <i>distance</i>	Sets the management distance of the intra-area route, in the range from 1 to 255.
<b>inter-area</b> <i>distance</i>	Sets the management distance of the inter-area route, in the range from 1 to 255.
<b>external</b> <i>distance</i>	Sets the management distance of the external route, in the range from 1 to 255.

#### Defaults



The default value is 110.  
 Management distance of the intra-area route :110,  
 Management distance of the inter-area route :110  
 Management distance of the external-area route: 110.

#### Command Mode

Routing process configuration mode.

#### Usage Guide

This command is used to specify different management distances for different types of OSPFv3 routes. The management distance of the route is used for the comparison of routing priority, the smaller the management distance is, the higher the routing priority.

-  The priority of the route generated by different OSPFv3 processes must be compared using the management distance.
-  Setting the management distance as 255 indicates the routing entry is unreliable and will not for the packet forwarding.

#### Configuration

the following example sets the OSPFv3 external route management distance to 160.

#### Examples

```
Ruijie(config)# ipv6 router ospf 20
Ruijie(config-router)# distance ospf external 160
```

#### Related Commands

Command	Description
<b>ipv6 router ospf</b>	Enables the OSPFv3 routing process .

#### Platform Description

N/A

## 6.12 distribute-list in

Use this command to filter routes that are computed based on Link State Advertisement (LSA). Use the **no** form of this command to restore the default setting.

**distribute-list** { *name* | **prefix-list** *prefix-list-name* } **in** [ *interface-type* *interface-number* ]

**no distribute-list** { *name* | **prefix-list** *prefix-list-name* } **in** [ *interface-type* *interface-number* ]

### Parameter Description

Parameter	Description
<i>name</i>	Specifies an ACL filtering rule.
<b>prefix-list</b> <i>prefix-list-name</i>	Specifies a prefix list filtering rule.
<i>interface-type</i> <i>interface-number</i>	Specifies an interface on which LSA-based routes are filtered.

**Defaults** Routes are not filtered by default.

**Command Mode** Routing process configuration mode

**Usage Guide** Filter the routes computed based on LSA. Only the routes meeting filtering conditions can be forwarded. Route filtering does not affect the link state database and the routing tables of the neighbors. The ACL and prefix list filtering rules cannot be set at the same time. You can set only the ACL filtering rule or the prefix list filtering rule for a specific interface.

The routing filtering rules affect only forwarding of local routes but not route computation based on LSA. When route filtering is configured on an ABR, LSA can still compute routes and generate and send inter-area LSAs with prefixes to other areas. This will cause blackhole routes. To prevent the generation of blackhole routes, you can run the **area range** command with the **not-advertise** keyword.

**Configuration Examples** The following example filters routes that are computed based on Link State Advertisement (LSA).

```
Ruijie(config)# ipv6 prefix-list aaa seq 10 permit 2001::/64
Ruijie(config)# ipv6 router ospf 25
Ruijie(config-router)# redistribute rip metric 100
Ruijie(config-router)# distribute-list prefix-list aaa in ethernet 0/1
```

### Related Commands

Command	Description
<b>area range</b>	Configures route aggregation in an area.

**Platform Description** N/A

## 6.13 distribute-list out

Use this command to filter routes that are re-distributed. This command has the similar function as the **redistribute** command. Use the **no** form of this command to restore the default setting.

**distribute-list** { *name* | **prefix-list** *prefix-list-name* } **out** [ **connected** | **ospf** *process-id* | **rip** | **static** ]  
**no distribute-list** { *name* | **prefix-list** *prefix-list-name* } **out** [ **connected** | **ospf** *process-id* | **rip** | **static** ]

### Parameter Description

Parameter	Description
<i>name</i>	Specifies the ACL filtering rule.
<b>prefix-list</b> <i>prefix-list-name</i>	Specifies the prefix list filtering rule.
<b>connected</b>   <b>ospf</b> <i>process-id</i>   <b>rip</b>   <b>static</b>	Specifies the source from which the routes are filtered.

### Defaults

Routes are not filtered by default.

### Command Mode

Routing process configuration mode

### Usage Guide

The **distribute-list out** command has the similar function as the **redistribute route-map** command. It can be used to filter the routes that are re-distributed based on other protocols into an OSPFv3 area. It does not directly re-distribute routes but works with the **redistribute** command to re-distribute routes. The ACL and prefix list filtering rules cannot be configured at the same time. You can set only the ACL filtering rule or the prefix list filtering rule to filter the routes from a specific source.

**Configuration** The following example filters static routes that are re-distributed.

### Examples

```
Ruijie(config)# ipv6 router ospf 1
Ruijie(config-router)# redistribute static subnets
Ruijie(config-router)# distribute-list prefix-list jjj out static
```

### Related Commands

Command	Description
<b>redistribute</b>	Re-distributes routes that are carried by other routing processes.

### Platform

N/A

### Description

## 6.14 enable mib-binding

Use this command to bind MIB to a specific OSPFv3 process. Use the **no** form of this command to restore the default setting.

**enable mib-binding**  
**no enable mib-binding**

**Parameter  
Description**

Parameter	Description
N/A	N/A

**Defaults**

MIB is bound to an OSPFv3 process with the smallest process number by default.

**Command  
Mode**

Routing process configuration mode

**Usage Guide**

OSPFv3 MIB has no configuration information about OSFPv3 processes. You can operate only one OSPFv3 process through SNMP. OSPFv3 MIB is bound to the OSPFv3 process with the smallest process number by default. Users' operations take effect on this process.

To operate a specific OSPFv3 process through SNMP, you can bind OSPFv3 MIB to the process.

**Configuration  
Examples**

The following example enables users to operate the OSPFv3 process with the process number of 100 through SNMP.

```
Ruijie(config)# ipv6 router ospf 100
Ruijie(config-router)# enable mib-binding
```

**Related  
Commands**

Command	Description
<b>show ipv6 ospf</b>	Displays global OSPFv3 configuration information.
<b>enable traps</b>	Enables the OSPFv3 trap function.

**Platform  
Description**

N/A

## 6.15 enable traps

OSPFv3 processes support eight types of trap information, which are classified into two categories. Use this command to send specific trap information. Use the **no** form of this command to restore the default setting.

**enable traps** [ **error** [ **IfConfigError** | **IfRxBadPacket** | **VirtIfConfigError** | **VirtIfRxBadPacket** ] | **state-change** [ **IfStateChange** | **NbrStateChange** | **VirtIfStateChange** | **VirtNbrStateChange** ] ]  
**no enable traps** [ **error** [ **IfConfigError** | **IfRxBadPacket** | **VirtIfConfigError** | **VirtIfRxBadPacket** ] | **state-change** [ **IfStateChange** | **NbrStateChange** | **VirtIfStateChange** | **VirtNbrStateChange** ] ]

**Parameter  
Description**

Parameter	Description
<b>Error</b>	Configures all error-related trap types. This keyword can also

	specify the following types of error traps:	
	<b>IfConfigError</b>	Specifies an interface parameter error;
	<b>IfRxBadPacket</b>	Specifies incorrect packets received by an interface;
	<b>VirtIfConfigError</b>	Specifies a parameter error on a virtual interface;
<b>state-change</b>	<b>VirtIfRxBadPacket</b>	Specifies incorrect packets received by a virtual interface.
	Configures all traps related to state change. This keyword can also specify the following traps related to state change:	
	<b>IfStateChange</b>	Specifies state change of an interface;
	<b>NbrStateChange</b>	Specifies state change of a neighbor;
	<b>VirtIfStateChange</b>	Specifies state change of a virtual interface;
	<b>VirtNbrStateChange</b>	Specifies state change of a virtual neighbor.

**Defaults** All traps are disabled by default.

**Command Mode** Routing process configuration mode

**Usage Guide** Before configuring this command, you must run the **snmp-server enable traps ospf** command; otherwise, OSPFv3 trap information cannot be sent correctly. This is because the function of this command is restricted by the **snmp-server** command.

You can synchronously enable the trap function of different processes even if MIB is not bound to these processes.

**Configuration** The following example enables all traps of OSPFv3 process 100.

**Examples**

```
Ruijie(config)#ipv6 router ospf 100
Ruijie(config-router)# enable traps
```

**Related Commands**

Command	Description
<b>show ipv6 ospf</b>	Displays global OSPFv3 configuration information.
<b>enable mib-binding</b>	Binds MIB to an OSPFv3 process.
<b>snmp-server enable traps ospf</b>	Enables OSPFv3 to send trap information.

**Platform Description** N/A



## 6.16 graceful-restart

Use this command to enable the OSPFv3 graceful restart (GR) function and to set the GR period.

Use the **no** form of this command to restore the default setting.

**graceful-restart** [ **grace-period** *grace-period* | **inconsistent-lsa-checking** ]

**no graceful-restart** [ *graceful-period* ]

Parameter Description	Parameter	Description
	<b>grace-period</b> <i>grace-period</i>	Configures the GR period. The GR period is the longest interval that lasts from the moment when OSPFv3 fails to the moment when OSPFv3 gracefully restarts.  The GR period is in the range from 1 to 1800 in the unit of seconds. The default is 120.
	<b>inconsistent-lsa-checking</b>	Configures the topology change detection. Once the topology change is detected, the device will exit GR and finish the convergence, This function is enabled by default after GR is enabled.

**Defaults** This function is enabled by default.

**Command**

**Mode** Routing process configuration mode

**Usage Guide** GR is configured based on the OSPFv3 instance. Different instances could be configured with different parameters.

Use this command to configure the GR period. The GR period is the longest interval that lasts from the moment when OSPFv3 fails to the moment that OSPFv3 gracefully restarts. In this period, the device will perform link reconstruction to restore OSPFv3. When the GR period expires, OSPFv3 exits GR and finishes regular operation.

To enable the GR function and set the GR period to the 120 seconds, use the **graceful-restart** command. To modify the GR period, use the **graceful-restart grace-period** command. Topology stability is indispensable for uninterrupted forwarding. If topology changes, OSPFv3 finishes convergence instead of continuing GR to avoid long time interruption

- 1) Disabling the topology change detection: If the topology cannot converge in time in the hot backup process, the long term forwarding interruption may occur.
- 2) Enabling the topology change detection: Forwarding interruption may occur but the interruption time is much shorter than the time it takes to disable topology detection.

It is not recommended to disable the topology change detection. In some scenario where long term forwarding interruption does not occur, disabling the topology change detection minimizes the forwarding interruption time.

The GR function is unavailable when the Fast Hello function is enabled.

**Configuration** The following example enables GR for OSPFv3 instance 1 and sets the GR period to 60 seconds.

**Examples** Ruijie(config)# ipv6 router ospf 1

```
Ruijie(config-router)# graceful-restart
Ruijie(config-router)# graceful-restart grace-period 60
```

**Related  
Commands**

Command	Description
N/A	N/A

**Platform  
Description**

N/A

## 6.17 graceful-restart helper

Use this command to enable the OSPFv3 graceful restart helper function. Use the **no** form of this command to disable this function.

**graceful-restart helper disable**

**no graceful-restart helper disable**

Use this command configure the topology change detection method of OSPFv3 GR helper. Use the **no** form of this command to cancel the configuration.

**graceful-restart helper { strict-lsa-checking | internal-lsa-checking }**

**no graceful-restart helper {strict-lsa-checking | internal-lsa-checking }**

**Parameter  
Description**

Parameter	Description
<b>disable</b>	Disables the device to assist other devices in performing GR.
<b>strict-lsa-checking</b>	Checks the change of the LSA of types 1-5 and 7 to judge whether the network topology changes. If the topology changes, the GR helper function will be disabled.
<b>internal-lsa-checking</b>	Checks the change of the LSA of types 1–3 to judge whether the network topology changes. If the topology changes, the GR helper function will be disabled.

**Defaults**

The GR helper is enabled by default.

The device where the GR helper is enabled does not check the LSA change by default.

**Command****Mode**

Routing process configuration mode

**Usage Guide**

Use this command to enable the GR helper function. When one neighbor device performs graceful restart, the Grace-LSA is advertised to all neighbors. If the device enabled with the GR helper receives the Grace-LSA, it will become the GR Helper to help the neighbors perform GR. The **disable** option means that it is not allowed to perform the GR helper function for any device in GR.

The GR helper does not perform the network change detection by default. The convergence is not performed again until the GR is implemented even if the network changes. Use the

**strict-lsa-checking or internal-lsa-checking** command to enable the device to detect the change of

network topology during the GR. The former checks any LSA (types 1-5,7) that stands for the network information, the latter checks the LSA that stands for the AS inner-area route. In the large scale network, it is not recommended to enable the LSA check option because the partial network changes trigger the ending of the GR, decreasing the convergence speed of the entire network.

**Configuration Examples** The following example disables the GF helper function of the OSPFv3 instance 1 and modifies the topology change detection policy.

```
Ruijie(config)# ipv6 router ospf 1
Ruijie(config-router)# graceful-restart helper disable
Ruijie(config-router)# no graceful-restart helper disable
Ruijie(config-router)# graceful-restart helper strict-lsa-checking
```

**Related  
Commands**

Command	Description
N/A	N/A

**Platform  
Description**

N/A

## 6.18 ipv6 ospf area

Use this command to enable the interface to participate in the OSPFv3 routing process. Use the **no** form of this command to restore the default setting.

**ipv6 ospf** *process-id* **area** *area-id* [**instance** *instance-id*]

**no ipv6 ospf** *process-id* **area** [**instance** *instance-id*]

**Parameter  
Description**

Parameter	Description
<i>process-id</i>	OSPF process ID.
<b>area</b> <i>area-id</i>	OSPFv3 area in which the interface participates. It can be an integer or an IPv4 prefix.
<b>instance</b> <i>instance-id</i>	Configures the specific OSPFv3 instance on the interface.

**Defaults** This function is disabled by default.

**Command  
Mode** Interface configuration mode.

**Usage Guide** You can use this command to enable the OSPFv3 on an interface, and then configure the OSPFv3 process with **ipv6 router ospf**. It will be automatically started after this command is used., it will be automatically started after this command is used.

Use **no ipv6 ospf area** to disable the specified interface to participate in the OSPFv3 routing process.

Use **no ipv6 router ospf** to disable all the interfaces to participate in the OSPFv3 routing process.

The neighbor relationship can only be established between the routers with the same instance ID.

After this command is configured, all the prefix information on the interface will be used in the operation of the OSPFv3.

**Configuration Examples** The following example starts the OSPFv3 process on int fastethernet 0/0 for the specified area of the specified instance.

```
int fastethernet 0/0
ipv6 ospf 1 area 2 instance 2
```

**Related  
Commands**

Command	Description
<b>ipv6 router ospf</b>	Starts the OSPFv3 routing process.
<b>passive-interface</b>	Setsthe a passive interface.
<b>show ipv6 ospf interface</b>	Displays the OSPFv3 interface information.

**Platform** N/A

**Description**

## 6.19 ipv6 ospf authentication

Use this command to configure OSPFv3 interface authentication. Use the **no** form of this command to restore the default setting.

**ipv6 ospf authentication** [ **null** | **ipsec spi** *spi* [ **md5** | **sha1** ] [ **0** | **7** ] *key* ]

**no ipv6 ospf authentication**

**Parameter  
Description**

Parameter	Description
<b>null</b>	Indicates that authentication is not performed.
<i>spi</i>	Specifies a security parameter index, in the range from 256 to 4294967295.
<b>md5</b>	Specifies the MD5 authentication mode.
<b>sha1</b>	Specifies the SHA1 authentication mode.
<b>0</b>	Indicates that a key is displayed in the plain-text format.
<b>7</b>	Indicates that a key is displayed in the cipher-text format.
<i>key</i>	Specifies an authentication key.


**Defaults** Authentication is not performed by default.

**Command Mode** Interface configuration mode

**Usage Guide** RGOS supports three authentication modes:

- null authentication mode, which is configured when authentication is not needed
- MD5 authentication mode

- SHA1 authentication mode

 OSPFv3 authentication parameters configured on interconnected interfaces must be consistent.

**Configuration Examples** The following example specifies MD5 authentication in OSPFv3 interface configuration mode and sets the authentication password to aaaaaaaaaaaaaaaaaaaaaaaaaaaaaa.

```
Ruijie(config-if)# ipv6 ospf authentication ipsec spi 300 md5
aaaaaaaaaaaaaaaaaaaaaaaaaaaaa
```

#### Related Commands

Command	Description
<b>ipv6 ospf authentication</b>	Specifies interface authentication.
<b>area virtual-link authentication</b>	Specifies virtual link authentication.

**Platform** N/A  
**Description**

## 6.20 ipv6 ospf cost

Use this command to set the cost of the interface. Use the **no** form of this command to restore the default setting

**ipv6 ospf cost** *cost* [ **instance** *instance-id* ]

**no ipv6 ospf cost** [ **instance** *instance-id* ]

#### Parameter Description

Parameter	Description
<i>Cost</i>	Cost of interface, in the range from 0 to 65535.
<b>instance</b> <i>instance-id</i>	Configures the specific OSPFv3 instance on the interface, in the range from 0 to 255.

**Defaults** The default interface cost is the reference bandwidth/Bandwidth (100Mbps by default).

**Command Mode** Interface configuration mode.

**Usage Guide** By default, the cost of the OSPFv3 interface is 100Mbps/Bandwidth, in which the Bandwidth is the bandwidth of the interface and configured with the command **bandwidth** in the interface configuration mode.

The default costs of OSPFv3 interfaces for several typical lines are:

- 64K serial line: 1562;
- E1 line: 48
- 10M Ethernet: 10
- 100M Ethernet: 1

The OSPFv3 cost configured with the command **ipv6 ospf cost** will overwrite the default

configuration.

**Configuration** The following example sets the cost of the interface to 1:

**Examples**

```
Ruijie(config)# int fastethernet 0/0
Ruijie(config-if)# ipv6 ospf cost 1
```

**Related  
Commands**

Command	Description
<b>show ipv6 ospf interface</b>	Displays the OSPFv3 interface information.
<b>ipv6 ospf area</b>	Sets the interface to participate in the OSPFv3 routing process.

**Platform** N/A

**Description**

## 6.21 ipv6 ospf dead-interval

Use this command to set a dead interval of neighbors on an interface. If no hello packet is received from a neighbor within the interval, the neighboring relationship is considered to fail. Use the **no** form of this command to restore the default setting

**ipv6 ospf dead-interval** { *seconds* | **minimal hello-multiplier** *multiplier* } [ **instance** *instance-id* ]

**no ipv6 ospf dead-interval** [ **instance** *instance-id* ]

**Parameter  
Description**

Parameter	Description
<i>seconds</i>	Dead interval of neighbors. Its range is from 1 to 65535 in the unit of seconds.
<b>minimal hello-multiplier</b> <i>multiplier</i>	Enables the fast hello function, which takes 1s as the dead interval of neighbors. <i>Multiplier</i> specifies the number of hello packets sent in one second, in the range from 3 to 20.
<b>instance</b> <i>instance-id</i>	Configures the specific OSPFv3 instance on the interface, in the range from 0 to 255.

**Defaults** If the fast hello function is not enabled, the dead interval of neighbors is four times longer than the hello interval.



If the hello interval is changed, the dead interval of neighbors varies automatically.

**Command  
Mode**

Interface configuration mode

**Usage Guide**

The dead interval of neighbors must be longer than the hello interval.

The OSPFv3 fast hello function allows OSPFv3 to fast discovery neighbors and detect whether

neighboring relationships are valid. To enable the OSPFv3 fast hello function, you can specify the **minimal** and **hello-multiplier** keywords and the *multiplier* parameter in this command. **minimal** specifies the deal interval of neighbors to be 1s; **hello-multiplier** specifies the number of times that hello packets are sent in a second. Therefore, this configuration reduces the hello interval to be shorter than 1s.

If an interface is enabled with the fast hello function, the **hello-interval** field of hello packets to be advertised by this interface is set to 0, and that of hello packets received from this interface is omitted.

**i** **dead-interval**, **minimal**, and **hello-multiplier** that are introduced to enable the fast hello function cannot be configured together with **hello-interval**.

No matter whether the fast hello function is configured, the dead interval of neighbors on the interconnected interfaces of neighbors must be consistent. The values of **hello-multiplier** on the interconnected interfaces can be different but you must ensure that at least one hello packet is received within the dead interval of neighbors.

You can use the **show ipv6 ospf interface** command to monitor the dead interval of neighbors and the fast hello interval on an interface.

**Configuration** The following example sets the dead interval of neighbors to 60 seconds on an interface.

**Examples**

```
ipv6 ospf dead-interval 60
```

**Related  
Commands**

Command	Description
<b>ipv6 ospf hello-interval</b>	Sets the interval for sending the Hello message on an interface.
<b>show ipv6 ospf interface</b>	Displays the OSPFv3 interface information.
<b>ipv6 ospf area</b>	Sets the interface to participate in the OSPFv3 routing process

**Platform** N/A

**Description**

## 6.22 ipv6 ospf encryption

Use this command to enable OSPFv3 encryption authentication on an interface. Use the **no** form of this command to restore the default setting.

**ipv6 ospf encryption** [ **null** | **ipsec spi spi esp null** [ **md5** | **sha1** ] [ **0** | **7** ] *key* ]

**no ipv6 ospf encryption**

**Parameter  
Description**


Parameter	Description
<b>null</b>	Indicates that encryption authentication is not performed.
<i>spi</i>	Specifies a security parameter index, in the range from 256 to

	4294967295.
<b>null</b>	Specifies the null encryption mode.
<b>md5</b>	Specifies the MD5 authentication mode.
<b>sha1</b>	Specifies the SHA1 authentication mode.
<b>0</b>	Indicates that a key is displayed in the plain-text format.
<b>7</b>	Indicates that a key is displayed in the cipher-text format.
<i>key</i>	Specifies an authentication key.

**Defaults** Encryption authentication is not performed by default.

**Command Mode** Interface configuration mode

**Usage Guide** RGOS supports the null encryption mode and two authentication modes: MD5 and SHA1.

 OSPFv3 encryption authentication parameters configured on interconnected interfaces must be consistent.

**Configuration Examples** The following example specifies null encryption and MD5 authentication in OSPFv3 interface configuration mode and sets the authentication password to aaaaaaaaaaaaaaaaaaaaaaaaaaaaaa.

```
Ruijie(config-if)# ipv6 ospf encryption ipsec spi 300 esp null md5
aaaaaaaaaaaaaaaaaaaaaaaaaaaaaaaa
```

**Related Commands**

Command	Description
<b>area encryption</b>	Specifies area encryption authentication.
<b>area virtual-link encryption</b>	Specifies virtual link encryption authentication.

**Platform** N/A

**Description**

## 6.23 ipv6 ospf hello-interval

Use this command to set the interval for the interface to send the Hello message. Use the **no** form of this command to restore the default setting

**ipv6 ospf hello-interval** *seconds* [ **instance** *instance-id* ]

**no ipv6 ospf hello-interval** [ **instance** *instance-id* ]

**Parameter Description**

Parameter	Description
<i>seconds</i>	Interval for sending the Hello message. Its range is from 1 to 65535 in the unit of seconds.
<b>instance</b> <i>instance-id</i>	Configures the specific OSPFv3 instance on the interface.




**Defaults** The broadcast network and point-to-point network :10 seconds. The point-to-multipoint network and NBMA network :30 seconds.

### Command

**Mode** Interface configuration mode.

**Usage Guide** The same hello sending intervals must be set for the neighbors, otherwise the normal adjacency cannot be established.

 The dead-interval minimal hello-multiplier and hello-interval parameters for Fast Hello cannot be configured simultaneously.

**Configuration** The following example sets the interval for the interface to send the Hello message to 20 seconds.

### Examples

```
Ruijie(config)# int fastethernet 0/0
Ruijie(config-if)# ipv6 ospf hello-interval 20
```

### Related Commands

Command	Description
<b>ipv6 ospf dead-interval</b>	Sets the interval for the interface to consider that the neighbor fails.
<b>show ipv6 ospf interface</b>	Displays the OSPFv3 interface information.
<b>ipv6 ospf area</b>	Sets the interface to participate in the OSPFv3 routing process.

**Platform** N/A

### Description

## 6.24 ipv6 ospf mtu-ignore

Use this command to ignore the MTU check when an interface receives the database description message. Use the **no** form of this command to restore the default setting.

**ipv6 ospf mtu-ignore** [ **instance** *instance-id* ]

**no ipv6 ospf mtu-ignore** [ **instance** *instance-id* ]

### Parameter Description

Parameter	Description
<b>instance</b> <i>instance-id</i>	Configures the specific OSPFv3 instance on the interface, in the range from 0 to 255.

**Defaults** The MTU check is enabled by default.

### Command

**Mode** Interface configuration mode.

**Usage Guide** After receiving the database description message, the OSPFv3 device will check whether the MTU of neighbor interface is the same as its own MTU. If the received database description message indicates an MTU greater than its own interface's MTU, the neighbor relationship cannot be established. This can be fixed by disabling the MTU check.

**Configuration** The following example disables the MTU check function on the ethernet 1/0.

**Examples**

```
Ruijie(config)# interface ethernet 1/0
Ruijie(config-if)# ipv6 ospf mtu-ignore
```

**Related  
Commands**

Command	Description
<b>ipv6 router ospf</b>	Starts the OSPFv3 routing process.
<b>ipv6 mtu</b>	Sets the value of IPv6 MTU of the interface.

**Platform** N/A

**Description**

## 6.25 ipv6 ospf neighbor

Use this command to configure the OSPFv3 neighbor manually. Use the **no** form of this command to restore the default setting.

**ipv6 ospf neighbor** *ipv6-address* [ [ **cost** <1-65535> ] [ **poll-interval** <0-2147483647> | **priority** <0-255> ] ] [ **instance** *instance-id* ]

**no ipv6 ospf neighbor** *ipv6-address* [[**cost** <1-65535>] [**poll-interval** < 0-2147483647 > | **priority** < 0-255 > ] ] [ **instance** *instance-id* ]

**Parameter  
Description**

Parameter	Description
<b>cost</b> <i>cost</i>	(Optional) Configures the cost to each neighbor in point-to-multipoint network. It is not defined by default, where the cost configured on the interface will be used. It ranges from 1 to 65535. Only the networks of the point-to-multipoint type support this option.
<b>poll-interval</b> <i>seconds</i>	(Optional) Interval for polling the neighbors (in seconds), which ranges from 1 to 2147483647. Only the networks of the non-broadcast (NBMA) type support this option.
<b>priority</b> <i>priority</i>	(Optional) Configures the priority value of non-broadcast network neighbors, which ranges from 0 to 255. Only the non-broadcast (NBMA) type network supports this option.
<b>instance</b> <i>instance-id</i>	(Optional) Configures the specific OSPFv3 instance on the interface, which ranges from 0 to 255.

**Defaults**

No neighbor is defined;  
Neighbor polling interval: 120 seconds;

Priority value of non-broadcast network neighbor: 0.

#### Command

**Mode** Interface configuration mode.

**Usage Guide** You can set relevant parameters for the neighbors depending on the actual network type.

**Configuration** The following example shows how to configure the OSPFv3 neighbor as follows: IPv6 address:

**Examples** 2001:DB8:4::1, priority value: 1, polling interval: 150 seconds.

```
Ruijie(config)# interface fastEthernet 0/1
Ruijie(config-if)# ipv6 ospf neighbor 2001:DB8:4::1 priority 1 poll-interval
150
```

#### Related Commands

Command	Description
<b>ipv6 ospf priority</b>	Sets the priority value of an interface.
<b>ipv6 ospf network</b>	Sets the network type of an interface.

**Platform** N/A

#### Description

## 6.26 ipv6 ospf network

Use this command to set the network type of the interface. Use the **no** form of this command to restore the default setting.

**ipv6 ospf network** { **broadcast** | **non-broadcast** | **point-to-point** | **point-to-multipoint**

[ **non-broadcast** ] } [ **instance** *instance-id* ]

**no ipv6 ospf network** [ **broadcast** | **non-broadcast** | **point-to-point** | **point-to-multipoint**

[ **non-broadcast** ] } [ **instance** *instance-id* ]

#### Parameter Description

Parameter	Description
<b>broadcast</b>	Specifies the broadcast network type.
<b>non-broadcast</b>	Specifies the non-broadcast network type.
<b>point-to-point</b>	Specifies the point-to-point network type.
<b>point-to-multipoint</b>	Specifies the point-to-multipoint network type.
<b>point-to-multipoint non-broadcast</b>	Specifies the point-to-multipoint non-broadcast network type.
<b>instance instance-id</b>	Configures the specific OSPFv3 instance on the interface with the valid id range from 0 to 255.

#### Defaults

Point-to-point network type: PPP, SLIP, frame relay point-to-point sub-interface and X.25 point-to-point sub-interface encapsulation.

NBMA network type: frame relay(except for the point-to-point sub-interface) and X.25 encapsulation (except for the point-to-point sub-interface)

Broadcast network type: Ethernet encapsulation.

The point-to-multipoint network type is not the default type.

**Command Mode**

Interface configuration mode.

**Usage Guide**

You can set the network type of the interface according to the actual link type applied and the topology.

**Configuration Examples**

The following example sets the network type of the interface that participates in the OSPFv3 to point-to-point.

```
Ruijie(config)# interface ethernet 1/0
Ruijie(config-if)# ipv6 ospf network point-to-point
```

**Related Commands**

Command	Description
<b>ipv6 ospf priority</b>	Sets the interface priority.
<b>show ipv6 ospf interface</b>	Displays the OSPFv3 interface information.
<b>ipv6 ospf area</b>	Sets the interface to participate in the OSPFv3 routing process.

**Platform**

N/A

**Description**

## 6.27 ipv6 ospf priority

Use this command to set the interface priority. Use the **no** form of this command to restore the default setting.

**ipv6 ospf priority** *number-value* [ **instance** *instance-id* ]

**no ipv6 ospf priority** [ **instance** *instance-id* ]

**Parameter Description**

Parameter	Description
<i>number-value</i>	The priority of the interface. Its range is from 0 to 255.
<b>instance</b> <i>instance-id</i>	Configures the specific OSPFv3 instance on the interface. Its range is from 0 to 255.

**Defaults**

The default priority is 1.

**Command Mode**

Interface configuration mode.

**Usage Guide** In the broadcast network type, it is necessary to elect the DR/BDR. In electing the DR/BDR, the device of a higher priority is preferred. If several devices are of the same priority, the one with the largest router-ID is preferred.

The device with the priority level of 0 does not participate in the election of DR/BDR.

**Configuration** The following example disables the interface from being elected as the DR/BDR.

**Examples**

```
Ruijie(config)# interface ethernet 1/0
Ruijie(config-if)# ipv6 ospf priority 0
```

**Related  
Commands**

Command	Description
<b>ipv6 ospf network</b>	Sets the network type of an interface.
<b>router-id</b>	Sets the ID of a router.
<b>show ipv6 ospf interface</b>	Displays the OSPFv3 interface information.
<b>instance <i>instance-id</i></b>	Configures the specific OSPFv3 instance on the interface.

**Platform** N/A

**Description**

## 6.28 ipv6 ospf retransmit-interval

Use this command to set the interval for the interface to retransmit the LSA. Use the **no** form of this command to restore the default setting.

**ipv6 ospf retransmit-interval** *seconds* [ **instance** *instance-id* ]

**no ipv6 ospf retransmit-interval** [ **instance** *instance-id* ]

**Parameter  
Description**

Parameter	Description
<i>seconds</i>	Interval for retransmitting the LSA. Its range is from 1 to 65535 in the unit of seconds.
<b>instance</b> <i>instance-id</i>	Configures the specific OSPFv3 instance on the interface.

**Defaults** The default is five seconds.

**Command**

**Mode** Interface configuration mode.

**Usage Guide** To ensure the reliability of the routing information transmission, the LSA sent to the neighbor shall be acknowledged by the neighbor. You can use this command to set the interval for the acknowledgement by the neighbor. If no acknowledgement is received within the specified period, the LSA information will be retransmitted.

**Configuration** The following example sets the interval for retransmitting the LSA to 10 seconds.

**Examples**

```
Ruijie(config)# interface ethernet 1/0
Ruijie(config-if)# ipv6 ospf retransmit-interval 10
```

Related Commands	Command	Description
	<b>show ipv6 ospf interface</b>	Displays the OSPFv3 interface information.
	<b>ipv6 ospf area</b>	Sets the interface to participate in the OSPFv3 routing process.

**Platform** N/A

**Description**

## 6.29 ipv6 ospf transmit-delay

Use this command to set the delay on the interface in sending the LSA. Use the **no** form of this command to restore the default setting.

**ipv6 ospf transmit-delay** *seconds* [ **instance** *instance-id* ]

**no ipv6 ospf transmit-delay** [ **instance** *instance-id* ]

Parameter Description	Parameter	Description
	<i>seconds</i>	The delay in sending LSA. Its range is from 1 to 65535 in the unit of seconds.
	<b>instance</b> <i>instance-id</i>	Configures the ID of a specific OSPFv3 instance on the interface, in the range from 0 to 255.

**Defaults** The default is one.

**Command Mode** Interface configuration mode.

**Usage Guide** Use this command to set the delay on the interface in transmitting the LSA.

**Configuration** The following example sets the delay on the interface in transmitting the LSA.

**Examples**

```
Ruijie(config)# interface ethernet 1/0
Ruijie(config-if)# ipv6 ospf transmit-delay 2
```

Related Commands	Command	Description
	<b>show ipv6 ospf interface</b>	Displays the OSPFv3 interface information.

**Platform** N/A

**Description**

## 6.30 ipv6 router ospf

Use this command to start the OSPFv3 routing process. Use the **no** form of this command to restore the default setting.

**ipv6 router ospf** *process-id*

**no ipv6 router ospf** *process-id*

Parameter Description	Parameter	Description
	<i>process-id</i>	OSPFv3 process ID number. Without the process number configured, it indicates that process 1 is started.

**Defaults** No OSPFv3 routing process is started.

**Command**

**Mode** Global configuration mode.

**Usage Guide** After the OSPFv3 process is started, the routing process configuration mode is entered.  
At present, our products support up to 32 OSPFv3 processes.

**Configuration**

**Examples** N/A

Related Commands	Command	Description
	<b>ipv6 ospf area</b>	Configures an interface to participate in the OSPFv3 routing process.
	<b>show ipv6 ospf</b>	Displays the OSPFv3 routing process information.

**Platform** N/A

**Description**

## 6.31 ipv6 router ospf max-concurrent-dd

Use this command to set the maximum concurrent interacting neighbors allowed in all OSPFv3 routing processes. Use the **no** form of this command to restore the default setting.

**ipv6 router ospf max-concurrent-dd** *number*

**no ipv6 router ospf max-concurrent-dd**

Parameter Description	Parameter	Description

<i>number</i>	Maximum concurrent interacting neighbors, in the range from 1 to 65535.
---------------	---

**Defaults** The default is 5.

**Command Mode** Global configuration mode

**Usage Guide** When a router is exchanging data with multiple neighbors at the same time which affects its performance, by configuring this command, the maximum concurrent interacting neighbors allowed in all OSPFv3 routing processes can be restricted.

**Configuration Examples** The following example sets the maximum concurrent interacting neighbors allowed in all OSPFv3 routing processes to 4. The result is that in the interaction between a large number of neighbors, interactions with up to 4 neighbors are allowed to be initiated on this device concurrently, and interactions initiated by up to 4 neighbors are allowed to be received concurrently. That is, interaction with up to 8 neighbors is allowed on this device.

```
Ruijie(config)#ipv6 router ospf max-concurrent-dd 4
```

**Related Commands**

Command	Description
<b>max-concurrent-dd</b>	Sets the maximum concurrent interacting neighbors in the OSPFv3 processes

**Platform** N/A

**Description**

## 6.32 log-adj-changes

Use this command to enable the logging of adjacency changes. Use the **no** form of this command to restore the default setting.

**log-adj-changes**

**no log-adj-changes**

**Parameter Description**

Parameter	Description
<b>detail</b>	Displays details of adjacency changes

**Defaults** By default, the function is enabled.

**Command Mode** Routing process configuration mode

**Usage Guide** N/A



**Configuration** The following example turns on the log of adjacency state change.

**Examples**

```
Ruijie(config)# router ospf 1  
Ruijie(config)# log-adj-changes detail
```

**Related  
Commands**

Command	Description
<b>show ipv6 ospf</b>	Displays the OSPF global configuration information

**Platform** N/A

**Description**

## 6.33 max-concurrent-dd

Use this command to set the maximum number of DD packets that can be processed concurrently in the OSPFv3 routing process. Use the **no** form of this command to restore the default setting.

**max-concurrent-dd** *number*

**no max-concurrent-dd**

**Parameter  
Description**

Parameter	Description
<i>number</i>	Maximum number of DD packets that can be processed concurrently, in the range from 1 to 65535.

**Defaults** The default is 5.

**Command**

**Mode** Routing process configuration mode.

**Usage Guide** When a router is exchanging data with multiple neighbors at the same time which affects its performance, by configuring this command, the maximum concurrent interacting neighbors allowed in each OSPFv3 instance can be restricted.

**Configuration** The following example sets the maximum concurrent interacting neighbors allowed in the current

**Examples** OSPFv3 routing process to 4. The result is that in the interaction between a large number of neighbors, interactions with up to 4 neighbors are allowed to be initiated on this device concurrently, and interactions initiated by up to 4 neighbors are allowed to be received concurrently. That is, interaction with up to 8 neighbors is allowed on this device.

```
router ipv6 ospf 1  
max-concurrent-dd 4
```

**Related  
Commands**

Command	Description
---------	-------------

<b>ipv6 router ospf max-concurrent-dd</b>	Sets the maximum concurrent interacting neighbors allowed in the OSPFv3 processes.
---	--

**Platform** N/A

**Description**

## 6.34 passive-interface

Use this command to set the passive interface. Use the **no** form of this command to restore the default setting.

**passive-interface** { **default** | *interface-type interface-number* }

**no passive-interface** { **default** | *interface-type interface-number* }

**Parameter  
Description**

Parameter	Description
default	Sets all the interfaces to passive ones.
<i>interface-type interface-number</i>	Sets the specified interface to a passive one.

**Defaults** No passive interface is set by default.

**Command  
Mode** Routing process configuration mode

**Usage Guide** After an interface is set to a passive one, it no longer receives or sends the hello message.  
This command applies to the interfaces participating in the OSPFv3 but not to the virtual links.

**Configuration** The following example enables only the VLAN1 interface to participate in the OSPFv3 process.

**Examples**

```
Ruijie(config)# ipv6 router ospf 1
Ruijie(config-router)# passive-interface default
Ruijie(config-router)# no passive-interface vlan 1
```

**Related  
Commands**

Command	Description
<b>ipv6 ospf area</b>	Configures an interface to participate in the OSPFv3 routing process.
<b>show ipv6 ospf</b>	Displays the OSPFv3 routing process information.
<b>show ipv6 ospf neighbor</b>	Displays the OSPFv3 neighbor information.

**Platform** N/A

**Description**

## 6.35 redistribute

Use this command to start the route redistribution in order to import the routing information of other routing protocols to the OSPFv3 routing process. Use the **no** form of this command to restore the default setting.

**redistribute** { **connected** | **ospf** *process-id* | **rip** | **static** } **match** { **internal** | **external** [ **1** | **2** ] | **metric** *metric-value* | **metric-type** { **1** | **2** } | **route-map** *route-map-name* | **tag** *tag-value* ]  
**no redistribute** { **connected** | **ospf** *process-id* | **rip** | **static** } **match** { **internal** | **external** [ **1** | **2** ] | **metric** | **metric-type** { **1** | **2** } | **route-map** *route-map-name* | **tag** *tag-value* ]

### Parameter Description

Parameter	Description
<b>connected</b>	The directly connected route is redistributed.
<b>ospf</b> <i>process-id</i>	The ospf is redistributed. The process-id specifies a particular ospf instance within the range of 1-65535.
<b>rip</b>	The rip is redistributed.
<b>static</b>	The static route is redistributed.
<b>match</b>	It is used in the OSPFv3 route redistribution only and filters specific routes for redistribution; internal: inter-area and intra-area routes. external [1 2]: E1, E2 or all external routes.
<b>metric</b> <i>metric-value</i>	Specifies the metric for the OSPFv3 external 2 LSA with metric-value. Its range is 0 to 16777214.
<b>metric-type</b> { <b>1</b>   <b>2</b> }	Set the metric type for the external route to E-1 or E-2.
<b>route-map</b> <i>map-map-name</i>	Specifies the routing policy for route redistribution. The name of map-tag can be composed of up to 32 characters. No route-map is associated by default.
<b>tag</b> <i>tag-value</i>	Specifies the tag value redistributed to the OSPFv3 inner route, in the range of 0 to 4294967295.

### Defaults

The function is disabled by default;  
Metric-type: 2;  
OSPFv3 routes of all sub-types are redistributed in the OSPFv3 redistribution  
No route-map is associated

### Command

#### Mode

Routing process configuration mode

### Usage Guide

When a device supports multiple routing protocols, the coordination between these protocols becomes an important task. The device can run the protocols at the same time, so it should redistribute the protocols. This is applicable to all IP routing protocols.

When redistributing OSPFv3 routes, you can configure *match* to redistribute the routes of the corresponding sub-type among the redistributed OSPFv3 routes. All types of OSPFv3 routes are

redistributed by default.



The metric value of the route-map associated should be in the range of 0 to 16777214. If the metric value is not in this range, the route cannot be introduced.

The rules for the **no** form of the **redistribute** command are as follows:

If some parameters are specified in the **no** command, restore their default settings;

If no parameters are specified in the **no** command, delete the whole command.

**Configuration** The following example redistributes the direct route and associates route-map test :

#### Examples

```
ipv6 router ospf 1
redistribute connect metric 10 route-map test
```

The associated route-map is configured as follows:

```
route-map test permit 10
match metric 20
set metric 30
```

The effect of the above configuration is to set the metric value which is 20 of the redistributed routes to 30, and that of other routes to 10

#### Related Commands

Command	Description
<b>default-information originate</b>	Sets the default route to be redistributed.
<b>default-metric</b>	Sets the default metric for the route to be redistributed.
<b>summary-prefix</b>	Sets the converged address range of the external route.
<b>show ipv6 ospf</b>	Displays the OSPFv3 routing process information.
<b>show ipv6 ospf database</b>	Displays the OSPFv3 link state database information.

**Platform** N/A

**Description**

## 6.36 router-id

Use this command to set the router ID (device ID). Use the **no** form of this command to restore the default setting.

**router-id** *router-id*

**no router-id**

#### Parameter Description

Parameter	Description
<i>router-id</i>	ID of the device in the IPv4 address format.

**Defaults** The OSPFv3 routing process, the largest IPv4 address of all loopback interfaces is elected as the router ID; If there is no loopback interface with an IPv4 address, the OSPFv3 process will elect the largest IPv4 of all other interfaces as the router ID

**Command Mode** Routing process configuration mode

**Usage Guide** Each device that runs the OSPFv3 process shall be identified with a router ID. Router ID is in the format of IPv4 address.

Any IPv4 address can be set as the router ID, but the router ID of every routers in the AS must be unique. If multiple OSPFv3 processes are running on the same device, the router ID of every process must be unique. Note that the change of the router ID results in considerable processing work in the protocol. Therefore, it is not recommended to change any router ID without proper reason. A prompt will be given to ask whether you are sure to modify the router ID. It is recommended that you specify a router ID once an OSPFv3 process starts before configuring other parameters for the process

**Configuration** The following example sets the ID of the device that participates in the OSPFv3 process to 1.1.1.1.

**Examples**

```
Ruijie(config)# ipv6 router ospf 1
Ruijie(config-router)# router-id 1.1.1.1
```

**Related Commands**

Command	Description
<b>ipv6 ospf priority</b>	Sets the interface priority.
<b>show ipv6 ospf</b>	Displays the OSPFv3 routing process information.

**Platform** N/A

**Description**

## 6.37 show ipv6 ospf

Use this command to display the information of the OSPFv3 process.

**show ipv6 ospf** [ *process-id* ]

**Parameter Description**

Parameter	Description
<i>process-id</i>	OSPF process ID number.

**Defaults** N/A

**Command Mode** Privileged EXEC mode

**Usage Guide** N/A

**Configuration** The following example displays the information about the OSPFv3 process.

**Examples**

```
Ruijie# show ipv6 ospf
Routing Process "OSPFv3 (1)" with ID 1.1.1.1
Process uptime is 24 minutes
Enable two-way-maintain
SPF schedule delay 5 secs, Hold time between SPFs 10 secs
Initial LSA throttle delay 0 msec
Minimum hold time for LSA throttle 5000 msec
Maximum wait time for LSA throttle 5000 msec
Lsa Transmit Pacing timer 40 msec, 1 LS-Upd
LSA interval 5 secs, Minimum LSA arrival 1000 msec
Pacing lsa-group: 30 secs
Number of incoming current DD exchange neighbors 0/5
Number of outgoing current DD exchange neighbors 0/5
Number of external LSA 0. Checksum Sum 0x0000
Number of AS-Scoped Unknown LSA 0
Number of LSA originated 11
Number of LSA received 4
Log Neighbor Adjacency Changes : Enabled
Number of areas in this router is 2
Area BACKBONE(0)
Number of interfaces in this area is 1(1)
SPF algorithm executed 4 times
Number of LSA 3. Checksum Sum 0x1DDF1
Number of Unknown LSA 0
```

**Related  
Commands**

Command	Description
<b>ipv6 router ospf</b>	Starts the OSPFv3 routing process.
<b>default-information originate</b>	Sets the default route to be redistributed.
<b>default-metric</b>	Sets the default metric for the route to be redistributed.
<b>router-id</b>	Sets the OSPFv3 routing process ID
<b>timers spf</b>	Sets the delay and the minimum and maximum intervals for the OSPFv3 to perform SPF calculation after receiving the topology change information.

**Platform** N/A

**Description**

## 6.38 show ipv6 ospf database

Use this command to display the database information of the OSPFv3 process

**show ipv6 ospf** [ *process-id* ] **database** [ *lsa-type* [ **adv-router** *router-id* ] ]

Parameter Description	Parameter	Description
	<i>process-id</i>	OSPF process ID number
	<i>lsa-type</i>	The LSA types are as follows: AS-external-LSAs, Link-LSAs, Inter-Area-Prefix-LSAs, Inter-Area-Router-LSAs, Intra-Area-Prefix-LSAs, Network-LSAs, Router-LSAs If this parameter is not specified, all LSA information will be displayed.
	<b>adv-router</b> <i>router-id</i>	Displays the LSA information generated by the specified router.

**Defaults** N/A

**Command Mode** Privileged EXEC mode.

**Usage Guide** N/A

**Configuration** The following example displays the information about the OSPFv3 process database.

### Examples

```
Ruijie# show ipv6 ospf database
OSPFv3 Router with ID (1.1.1.1) (Process 1)
Link-LSA (Interface FastEthernet 1/0)
Link State ID    ADV Router    Age Seq#        CkSum Prefix
0.0.0.2          1.1.1.1       197 0x80000001 0x7cd8 0
0.0.0.5          2.2.2.2       206 0x80000001 0x8c86 0
Link-LSA (Interface Loopback 1)
Link State ID    ADV Router    Age Seq#        CkSum Prefix
0.0.64.1         1.1.1.1       82 0x80000001 0xb760 0
Router-LSA (Area 0.0.0.0)
Link State ID    ADV Router    Age Seq#        CkSum Link
0.0.0.0          1.1.1.1       17 0x80000006 0x62a1 1
0.0.0.0          2.2.2.2       156 0x80000003 0x8653 1
Network-LSA (Area 0.0.0.0)
Link State ID    ADV Router    Age Seq#        CkSum
0.0.0.5          2.2.2.2       157 0x80000001 0xf8f6
Router-LSA (Area 0.0.0.1)
Link State ID    ADV Router    Age Seq#        CkSum Link
0.0.0.0          1.1.1.1       17 0x80000002 0x0529 0
Inter-Area-Prefix-LSA (Area 0.0.0.1)
Link State ID    ADV Router    Age Seq#        CkSum
```

```
0.0.0.1      1.1.1.1      77 0x80000002 0x83b4
AS-external-LSA
Link State ID  ADV Router  Age  Seq#      CkSum
0.0.0.1      1.1.1.1      1  0x80000001 0x6035 E2
```

**Related  
Commands**

Command	Description
<b>ipv6 router ospf</b>	Starts the OSPFv3 routing process.

**Platform** N/A**Description**

## 6.39 show ipv6 ospf interface

Use this command to display the OSPFv3 interface information.

**show ipv6 ospf** [ *process-id* ] **interface** [ *interface-type interface-number* | **brief** ]

**Parameter  
Description**

Parameter	Description
<i>interface-type</i> <i>interface-number</i>	Specifies the interface type and interface number.
<i>process-id</i>	OSPFv3 process ID
<b>brief</b>	Displays the interface summary.

**Defaults** N/A**Command  
Mode** Privileged EXEC mode.**Usage Guide** N/A**Configuration** The following example displays the information about the OSPFv3 interface.**Examples**

```
Ruijie# show ipv6 ospf interface
FastEthernet 1/0 is up, line protocol is up
Interface ID 2
IPv6 Prefixes
fe80::2d0:22ff:fe22:2223/64 (Link-Local Address)
OSPFv3 Process (1), Area 0.0.0.0, Instance ID 0
Router ID 1.1.1.1, Network Type BROADCAST, Cost: 1
Transmit Delay is 1 sec, State BDR, Priority 1
Designated Router (ID) 2.2.2.2
Interface Address fe80::c800:eff:fe84:1c
Backup Designated Router (ID) 1.1.1.1
Interface Address fe80::2d0:22ff:fe22:2223
```



```

Timer interval configured, Hello 10, Dead 40, Wait 40, Retransmit 5
Hello due in 00:00:02
Neighbor Count is 1, Adjacent neighbor count is 1
Hello received 26 sent 26, DD received 5 sent 4
LS-Req received 1 sent 1, LS-Upd received 3 sent 6
LS-Ack received 6 sent 2, Discarded 0

```

If the BFD has been enabled for the neighbor on the interface, the content of “BFD enabled” is also displayed. For example:

```

Ruijie# show ipv6 ospf interface
FastEthernet 1/0 is up, line protocol is up
Interface ID 2
IPv6 Prefixes
fe80::2d0:22ff:fe22:2223/64 (Link-Local Address)
OSPFv3 Process (1), Area 0.0.0.0, Instance ID 0
Router ID 1.1.1.1, Network Type BROADCAST, Cost: 1
Transmit Delay is 1 sec, State BDR, Priority 1, BFD enabled
Designated Router (ID) 2.2.2.2
Interface Address fe80::c800:eff:fe84:1c
Backup Designated Router (ID) 1.1.1.1
Interface Address fe80::2d0:22ff:fe22:2223
Timer interval configured, Hello 10, Dead 40, Wait 40, Retransmit 5
Hello due in 00:00:02
Neighbor Count is 1, Adjacent neighbor count is 1
Hello received 26 sent 26, DD received 5 sent 4
LS-Req received 1 sent 1, LS-Upd received 3 sent 6
LS-Ack received 6 sent 2, Discarded 0

```

#### Related Commands

Command	Description
<b>ipv6 router ospf</b>	Starts the OSPFv3 routing process.
<b>ipv6 ospf area</b>	Enables the interface to participate in the OSPFv3 process.

**Platform** N/A

**Description**

## 6.40 show ipv6 ospf neighbor

Use this command to display the neighbor information of the OSPFv3 process.

```

show ipv6 ospf [ process-id ] neighbor [ interface-type interface-number [ detail ] ] neighbor-id
[detail ]

```

#### Parameter Description

Parameter	Description
-----------	-------------

<i>process-id</i>	OSPFv3 process ID number
<b>detail</b>	Displays details about the neighbor.
<i>interface-type</i> <i>interface-number</i>	Interface type and interface number
<i>neighbor-id</i>	Neighbor's router ID

**Defaults** N/A

**Command Mode** Privileged EXEC mode

**Usage Guide** N/A

**Configuration** The following command displays the brief information about the OSPFv3 neighbor.

**Examples**

```
Ruijie# show ipv6 ospf neighbor
OSPFv3 Process (1) , 1 Neighbors, 1 is Full:
Neighbor ID Pri State Dead Time Interface Instance ID
2.2.2.2 1 Full/DR 00:00:33 FastEthernet 1/0 0
Ruijie# show ipv6 ospf neighbor detail
Neighbor 2.2.2.2, interface address fe80::c800:eff:fe84:1c
In the area 0.0.0.0 via interface FastEthernet 1/0
Neighbor priority is 1, State is Full, 6 state changes
DR is 2.2.2.2 BDR is 1.1.1.1
Options is 0x000013 (-|R|-|-|E|V6)
Dead timer due in 00:00:36
Database Summary List 0
Link State Request List 0
Link State Retransmission List 0
BFD session state up
```

#### Related Commands

Command	Description
<b>ipv6 router ospf</b>	Starts the OSPFv3 routing process.
<b>ipv6 ospf area</b>	Enables the interface to participate in the OSPFv3 process.
<b>area virtual-link</b>	Configures the OSPFv3 virtual link.
<b>show ipv6 ospf interface</b>	Displays the OSPFv3 interface information.

**Platform** N/A

**Description**

## 6.41 show ipv6 ospf restart

Use this command to display the OSPFv3 graceful restart configuration.

**show ipv6 ospf [ *process-id* ] restart**

Parameter Description	Parameter	Description
	<i>process-id</i>	OSPFv3 process ID number.

**Defaults** N/A

**Command Mode** Privileged EXEC mode

**Usage Guide** N/A

**Configuration** The following example displays the restarter status.

**Examples**

```
Ruijie# show ipv6 ospf restart
Routing Process is ospf 1
Graceful-restart enabled
Restart grace period 120 secs
Current Restart status is plannedRestart
Current Restart remaining time 50 secs
Graceful-restart helper support enabled
```

The following example displays the helper status.

```
Ruijie# show ipv6 ospf restart
Routing Process is ospf 1
Neighbor 10.1.1.2, interface addr 10.1.1.2
In the area 0.0.0.0 via interface GigabitEthernet 6/0/0
Graceful-restart helper enabled
Current helper status is helping
Current helper remaining time 50 secs
```

Related Commands	Command	Description
	<b>ipv6 router ospf</b>	Starts the OSPFv3 routing process.

**Platform Description** N/A

## 6.42 show ipv6 ospf route

Use this command to display the OSPFv3 route information.

**show ipv6 ospf [ *process-id* ] route [ *count* ]**

Parameter	Parameter	Description
-----------	-----------	-------------

Description		
	<i>process- id</i>	OSPFv3 process ID number.
	<b>count</b>	Total number of OSPFv3 routes

**Defaults** N/A

**Command Mode** Privileged EXEC mode

**Usage Guide** N/A

**Configuration** The following example displays the information about OSPFv3 routes.

**Examples**

```
Ruijie# show ipv6 ospf route
OSPFv3 Process (1)
Codes: C - connected, D - Discard, O - OSPF, IA - OSPF inter area

        E1 - OSPF external type 1, E2 - OSPF external type 2Destination
Metric  Next-hop
E2 2001:DB8:1::/64  1/20    via fe80::c800:eff:fe84:1c, FastEthernet 1/0
O  2001:DB8:2::/64  11     via fe80::c800:eff:fe84:1c, FastEthernet 1/0,
Area 0.0.0.0
```

Related Commands	Command	Description
	<b>ipv6 router ospf</b>	Starts the OSPFv3 routing process.

**Platform** N/A

**Description**

## 6.43 show ipv6 ospf summary-prefix

Use this command to display the external route convergence information of OSPFv3

**show ipv6 ospf [ *process- id* ] summary-prefix**

Parameter Description	Parameter	Description
	<i>process- id</i>	OSPFv3 process ID number

**Defaults** N/A

**Command Mode** Privileged EXEC mode.

**Usage Guide** N/A

**Configuration** The following example displays the external route convergence information of OSPFv3.

**Examples**

```
Ruijie# show ipv6 ospf summary-prefix
OSPFv3 Process 1, Summary-prefix:
2001:db8::/64,Metric 16777215,Type0,Tag0,Match count0,advertise
```

**Related  
Commands**

Command	Description
<b>ipv6 router ospf</b>	Starts the OSPFv3 routing process.
<b>summary-prefix</b>	Configures the converge route outside the OSPFv3 routing domain.

**Platform** N/A

**Description**

## 6.44 show ipv6 ospf topology

Use this command to display the topology information about each area of OSPFv3.

**show ipv6 ospf [ *process-id* ] topology [ *area area-id* ]**

**Parameter  
Description**

Parameter	Description
<i>process-id</i>	OSPFv3 process ID number
<i>area-id</i>	Area ID

**Defaults** N/A

**Command  
Mode** Privileged EXEC mode

**Usage Guide** N/A

**Configuration** The following command displays the topology information about each area of OSPFv3.

**Examples**

```
Ruijie# show ipv6 ospf topology
OSPFv3 Process (1)
OSPFv3 paths to Area (0.0.0.0) routers
Router ID      Bits  Metric  Next-Hop
Interface
1.1.1.1        EB  --
2.2.2.2        E   1      2.2.2.2
FastEthernet 1/0

OSPFv3 paths to Area (0.0.0.1) routers
Router ID      Bits  Metric  Next-Hop
```

```
Interface
1.1.1.1          B    --
```

**Related  
Commands**

Command	Description
<b>ipv6 router ospf</b>	Starts the OSPFv3 routing process.
<b>area range</b>	Configures the address range of the OSPF area.

**Platform** N/A**Description**

## 6.45 show ipv6 ospf virtual-links

Use this command to display the virtual link information of the OSPFv3 process

**show ipv6 ospf** [ *process- id* ] **virtual-links**

**Parameter  
Description**

Parameter	Description
<i>process- id</i>	OSPFv3 process ID number

**Defaults** N/A**Command  
Mode** Privileged EXEC mode.**Usage Guide** N/A**Configuration** The following command displays the information about the OSPFv3 virtual link.**Examples**

```
Ruijie# show ipv6 ospf virtual-links
Virtual Link VLINK1 to router 2.2.2.2 is down
  Transit area 0.0.0.1 via interface FastEthernet 1/0, instance ID 0
  Local address *
  Remote address 3333::1/128
  Transmit Delay is 1 sec, State Down,
  Timer intervals configured, Hello 10, Dead 40, Wait 40, Retransmit 5
    Hello due in inactive
  Adjacency state Down
```

**Related  
Commands**

Command	Description
<b>ipv6 router ospf</b>	Starts the OSPFv3 routing process.
<b>area virtual-link</b>	Configures the OSPFv3 virtual link.

**show ipv6 ospf neighbor**

Displays the OSPFv3 neighbor information.

**Platform** N/A**Description**

## 6.46 summary-prefix

Use this command to configure the converged route outside the OSPFv3 routing domain in the routing process configuration mode. Use the **no** form of this command to restore the default setting.

**summary-prefix** *ipv6-prefix/prefix-length* [ **not-advertise** ] [ **tag** *number* ] [ **cost** *cost* ]

**no summary-prefix** *ipv6-prefix/prefix-length* [ **not-advertise** ] [ **tag** ] [ **cost** ]

**Parameter  
Description**

Parameter	Description
<i>ipv6-prefix/prefix-length</i>	Address range of the converged route
<b>not-advertise</b>	Does not advertise the converged route to neighbors. Absence of this parameter means to advertise.
<b>tag</b> <i>number</i>	Tag value redistributed to the OSPFv3 inner route, in the range from 0 to 4294967295.
<b>cost</b> <i>cost</i>	Range: 0-16777214

**Defaults** No converged route is configured by default.**Command** Routing process configuration mode.  
**Mode**

**Usage Guide** When routes are redistributed by another routing process into the OSPFv3 routing process, every route is advertised to the OSPFv3-enabled device separately in the form of external link state. If the incoming routes are continuous addresses, the autonomous system border device can advertise only one converged route, thus reducing the scale of routing table greatly.

It is different from the **area range** command. The area range involves the convergence of routes between OSPFv3 areas, while the **summary-prefix** involves the convergence of external routes of the OSPFv3 routing domain.

**Configuration Examples** The following example configures the external route within the 2001:DB8::/64 to the converged route 2001:DB8::/64 to advertise it.

```
Ruijie(config)# ipv6 router ospf 1
Ruijie(config-router)# summary-prefix 2001:DB8::/64
```

**Related  
Commands**

Command	Description
<b>area-range</b>	Configures route convergence between the OSPFv3 areas.

**redistribute**

Redistributes the routes in other routing process.

**Platform** N/A**Description**

## 6.47 timers lsa arrival

Use this command to configure a delay for receiving repeated LSAs. Use the **no** form of this command to restore the default setting.

**timers lsa arrival** *arrival-time***no timers lsa arrival****Parameter  
Description****Parameter****Description***arrival-time*

Specifies the delay for receiving repeated LSAs. The range is from 0 to 600000 in the unit of milliseconds.

**Defaults**

The default is 1000.

**Command  
Mode**

Routing process configuration mode

**Usage Guide**

Configure the device not to process repeated LSAs received within the specific delay.

**Configuration Examples** The following example sets the delay for receiving repeated LSAs to 2 seconds.

```
Ruijie(config)# ipv6 router ospf 1
Ruijie(config-router)# timers lsa arrival 2000
```

**Related  
Commands****Command****Description****show ipv6 ospf**

Displays OSPFv3 process information, including identifiers of routing devices.

**Platform** N/A**Description**

## 6.48 timers pacing lsa-group

Use this command to set an LSA group pace interval. Use the **no** form of this command to restore the default setting.

**timers pacing lsa-group** *seconds***no timers pacing lsa-group**



Parameter Description	Parameter	Description
	seconds	Specifies the LSA group pace interval. The range is from 10 to 1800 in the unit of seconds. The default value is 30.

**Defaults** The default is 30.

**Command Mode** Routing process configuration mode

**Usage Guide** Each LSA has its own lifetime, that is, LSA aging time. An LSA existing for 1800s will be refreshed so that the living time of the LSA will not exceed its aging time. This ensures that normal LSAs are not cleared due to timeout of aging time. If update and aging operations of each LSA are separately computed, a large number of CPU resources will be consumed.

To effectively utilize CPU resources, configure the device to group LSAs for uniform refreshment. The time for refreshing a group of LSAs is called an LSA group pace interval. Grouping refreshment is to put the LSAs to be refreshed within an LSA group pace interval into a group and refresh them uniformly.

When the number of LSAs is fixed, a longer LSA group pace interval will allow the CPU to process more LSAs when the timer expires for one time. To keep the stability of the CPU, you are recommended not to set an over long LSA group pace interval. This prevents the CPU from processing excessive LSAs when the timer expires each time. If the CPU processes a large number of LSAs each time, it is recommended to shorten the LSA group pace interval. For example, if the database has 10000 LSAs, you need to reduce the LSA group pace interval. If it has only 40 to 100 LSAs, you can adjust the group pace interval to 10 through 20 minutes.

**Configuration Examples** The following example sets the LSA group pace interval to 120 seconds.

```
Ruijie(config)# ipv6 router ospf 1
Ruijie(config-router)#timers pacing lsa-group 120
```

Related Commands	Command	Description
	<b>show ipv6 ospf</b>	Displays OSPFv3 configuration information.

**Platform** N/A

**Description**

## 6.49 timers pacing lsa-transmit

Use this command to set an interval for sending LSA groups. Use the **no** form of this command to restore the default setting.

**timers pacing lsa-transmit** *transmit-time transmit-count*

**no timers pacing lsa-transmit**

Parameter Description	Parameter	Description
	<i>transmit-time</i>	Specifies the interval for sending LSA groups. The range is from 10 to 1000 in the unit of milliseconds.
	<i>transmit-count</i>	Specifies the number of LS-UPD packets in an LSA group. The range is from 1 to 200.

**Defaults** The default transmit-time is 40 and the transmit-count is 1.

**Command Mode** Routing process configuration mode

**Usage Guide** There are usually a lot of LSAs on a network; therefore, the load of the device is very high. Setting proper **transmit-time** and **transmit-count** values can restrict flooding of LS-UPD packets on the network.

When the CPU load is not high and network bandwidth usage is not large, you can reduce the **transmit-time** value and increase the **transmit-count** value to accelerate route convergence.

**Configuration Examples** The following example sets the interval for sending LS-UPDs to 50 milliseconds and the specified 20 packets to be sent each time.

```
Ruijie(config)# ipv6 router ospf 1
Ruijie(config-router)# timers pacing lsa-transmit 50 20
```

Related Commands	Command	Description
	<b>show ipv6 ospf</b>	Displays OSPFv3 process information.

**Platform** N/A

**Description**

## 6.50 timers spf

Use this command to set the delay and interval for the OSPFv3 to calculate SPF after receiving the topology change. Use the **no** format of this command to restore the default setting.

**timers spf** *delay holdtime*

**no timers spf**

Parameter Description	Parameter	Description
	<i>spf-delay</i>	Defines the waiting time for the SPF calculation, which ranges from 0 to 2147483647 seconds. After receiving the topology change information, the OSPF routing process has to waiting for a given period before making the SPF calculation.

<i>spf-holdtime</i>	Defines the interval between two SPF calculations, which ranges from 0 to 2147483647 seconds. If the interval has not passed even if the waiting time has elapsed, no SPF calculation can be made yet.
---------------------	--

**Defaults** There are two default situations: 1. The versions earlier than RGOS 10.4 do not support the command **timers throttle spf**. The system default is **timers spf 5 10**. 2. The RGOS 10.4 and the later versions do support the command **timers throttle spf**, where **timer spf** takes no effect by default. The delay for SPF calculation is subject to the default setting of the command **timers throttle spf**. Refer to the description of the command.

**Command Mode** Routing process configuration mode

**Usage Guide** The smaller the *spf-delay* and *spf-holdtime*, the shorter time the OSPF takes to adapt to the topology change, but the more CPU time will be used of the router.

 The **timer spf** configuration and the **timers throttle spf** configuration will overwrite each other.

**Configuration Examples** The following example sets the delay and holdtime of the OSPFv3 to 3 seconds and 9 seconds respectively.

```
Ruijie(config)# ipv6 router ospf 20
Ruijie(config-router)# timers spf 3 9
```

**Related Commands**

Command	Description
<b>clear ipv6 ospf</b>	Restarts part of the function of the OSPFv3.
<b>show ipv6 ospf</b>	Displays the OSPFv3 routing process information.
<b>timers throttle spf</b>	Configures the exponential backoff delay of the SPF calculation

**Platform Description** N/A

## 6.51 timers throttle lsa all

Use this command to configure an exponential backoff algorithm for generating LSAs. Use the **no** form of this command to restore the default setting.

**timers throttle lsa all** *delay-time hold-time max-wait-time*

**no timers throttle lsa all**

**Parameter Description**


Parameter	Description
<i>delay-time</i>	Specifies a shortest LSA generation delay, in milliseconds (the first

	batch of LSAs is usually generated immediately). The range is from 0 to 600000 in the unit of milliseconds.
<i>hold-time</i>	Specifies a shortest interval between the first two times of LSA refreshment, in milliseconds. The range is from 1 to 600000 in the unit of milliseconds
<i>max-wait-time</i>	Specifies a longest interval for consecutive two times of LSA refreshment, in milliseconds. The value is used to determine whether LSAs are refreshed consecutively. The range is from 1 to 600000 in the unit of milliseconds.

**Defaults** The default *delay-time* is 0, *hold-time* is 5000 and *max-wait-time* is 5000.

**Command Mode** Routing process configuration mode

**Usage Guide** If high route convergence capability is needed when links are changed, set a small *delay-time* value. To reduce CPU consumption, you can properly increase the values of the parameters.

 The *hold-time* value cannot be smaller than the *delay-time* value and must be smaller than or equal to the *max-wait-time* value.

**Configuration Examples** The following example sets *delay-time* to 10 milliseconds, *hold-time* to one second, and *max-wait-time* to five seconds.

```
Ruijie(config)# ipv6 router ospf 1
Ruijie(config-router)# timers throttle lsa all 10 1000 5000
```

**Related Commands**

Command	Description
<b>show ipv6 ospf</b>	Displays OSPFv3 process information.

**Platform Description** N/A

## 6.52 timers throttle route

Use this command to configure the delay time of route calculation on receiving the ASBR summary LSA and the external summary LSA. Use the **no** form of this command to restore the default setting.

**timers throttle route { inter-area *ia-delay* | ase *ase-delay* }**

**no timers throttle route { inter-area | ase }**

**Parameter Description**

Parameter	Description
<b>inter-area</b>	Calculates the inter area routes.
<i>ia-delay</i>	Sets the delay time of the inter-area route calculation, in the range

	from 0 to 600000 in the unit of milliseconds. On receiving the ASBR summary LSA, the router will not calculate the inter-area routes until the <i>ia-delay</i> time runs out.
<b>ase</b>	Calculates the external routes.
<i>ase-delay</i>	Sets the delay time of the external route calculation, in the range from 0 to 600000 in the unit of milliseconds. On receiving the external summary LSA, the router will not calculate the external routes until the <i>ase-delay</i> time runs out.

**Defaults** The default *ia-delay* is 0 and *ase-delay* is 0.

#### Command

**Mode** Routing process configuration mode

**Usage Guide** The default setting is recommended if the network needs to be fast converged. For the instable network where multiple inter-area and external routes exist, if you want to optimize the route calculation and save the CPU resources, increase the delay time.

**Configuration** The following example sets the delay time of the inter-area route calculation to one second.

**Examples**

```
Ruijie(config)# ipv6 router ospf 1
Ruijie(config-router)# timers throttle route inter-area 1000
```

#### Related Commands

Command	Description
N/A	N/A

**Platform** N/A

#### Description

## 6.53 timers throttle spf

Use this command to configure, the delay for SPF calculation as well as the minimum and maximum intervals between two SPF calculations after receiving the topology change information for OSPFv3 in the routing process configuration mode. Use the **no** form of this command to restore the default setting.

**timers throttle spf** *spf-delay* *spf-holdtime* *spf-max-waittime*

**no timers throttle spf**

#### Parameter Description

Parameter	Description
<i>spf-delay</i>	Specifies an SPF calculation delay after the topology change information is received. The range is from 1 to 600000 in the unit of milliseconds.

<i>spf-holdtime</i>	Specifies a shortest interval between two SPF calculations. The range is from 1 to 600000 in the unit of milliseconds.
<i>spf-max-waittime</i>	Specifies a longest interval between two SPF calculations. The range is from 1 to 600000 in the unit of milliseconds.

**Defaults** The default *spf-delay* is 1000. *spf-holdtime* is 5000 and *spf-max-waittime* is 10000.





#### Command

**Mode** Routing process configuration mode.

**Usage Guide** *Spf-delay* refers to the delay from the topology change to the SPF calculation. *Spf-holdtime* refers to the minimum interval between the first and the second SPF calculations. Then, the interval of the consecutive SPF calculations is at least twice as the last interval till it reaches to *spf-max-waittime*. If the interval between two SPF calculations has exceeded the required minimum value, the interval of SPF calculation will re-start from *spf-holdtime*.

Smaller *spf-delay* and *spf-holdtime* value can make the topology convergence faster. Greater *spf-max-waittime* value can reduce the SPF calculations. Those configuration are flexible according to the actual stability of the network topology.

Compared with the timers *spf* command, this command is more flexible. It not only speeds up the SPF convergence calculation, but also reduces the system resources consumption of SPF calculation as the topology changes continuously. Therefore, the timers *throttle spf* command is recommended.

-  The *spf-holdtime* cannot be smaller than *spf-delay*, or the *spf-holdtime* will be set to be equal to *spf-delay*;
-  The *spf-max-waittime* cannot be smaller than *spf-holdtime*, or the *spf-max-waittime* will be set to be equal to *spf-holdtime* automatically;
-  The configuration of the timers *spf* command and of the timers *throttle spf* command are overwritten each other.
-  With neither timers *spf* command nor timers *throttle spf* command configured, the default value refers to the default of the timers *throttle spf* command

**Configuration Examples** The following example configures the delay and holdtime and the maximum time interval of the OSPFv3 as 5ms, 1000ms and 90000ms respectively. If the topology changes consecutively, the time for SPF calculation is: five milliseconds, one second, three seconds, seven seconds, 15 seconds, 31 seconds, 63 seconds, 89 seconds, 179 seconds, 179+90 seconds.....

```
Ruijie(config)# ipv6 router ospf 20
Ruijie(config-router)# timers spf 5 1000 90000
```

#### Related Commands

Command	Description
<b>clear ipv6 ospf</b>	Restarts part of the OSPFv3 function.
<b>show ipv6 ospf</b>	Displays the routing process information of the OSFPv3

<b>timers spf</b>	Configures the SPF calculation delay .
-------------------	--

**Platform** N/A

**Description**

## 6.54 two-way-maintain

Use this command to enable two-way OSPFv3 maintenance. Use the **no** form of this command to disable this function.

**two-way-maintain**

**no two-way-maintain**

Parameter Description	Parameter	Description
	N/A	N/A

**Defaults** Two-way OSPFv3 maintenance is enabled by default.

**Command Mode** Routing process configuration mode

**Usage Guide** Sometimes, there are a lot of sent and received packets on a network, occupying large CPU and memory resources. As a result, some packets cannot be processed immediately or are directly lost. If hello packets from a neighbor cannot be processed within the dead interval of neighbors, the connection with the neighbor will be interrupted due to connection timeout. If two-way OSPFv3 maintenance is enabled and a large number of packets exist on the network, besides hello packets, the two-way neighboring relationship between the device and the neighbor can also be maintained by DD, LSU, LSR, and LSAck packets from the neighbor. This prevents the neighboring relationship from failing due to receiving delay or discarding of hello packets.

**Configuration Examples** The following example disables two-way OSPFv3 maintenance.

```
Ruijie(config)# ipv6 router ospf 1
Ruijie(config-router)# no two-way-maintain
```

Related Commands	Command	Description
	<b>show ipv6 ospf</b>	Displays global OSPFv3 configuration information.

**Platform** N/A

**Description**



## Security Configuration Commands

---

- 1 AAA Commands
- 2 RADIUS Commands
- 3 TACACS+ Commands
- 4 802.1X Commands
- 5 SCC Commands
- 6 Global IP-MAC Binding Commands
- 7 Password-Policy Commands
- 8 Port Security Commands
- 9 Storm Control Commands
- 10 SSH Commands
- 11 GSN Commands
- 12 CPU Protection Commands
- 13 DHCP Snooping Commands
- 14 DHCPv6 Snooping Commands
- 15 ARP-Check Commands
- 16 DAI Commands
- 17 IP Source Guard Commands



18 IPv6 Source Guard Commands

19 Anti-ARP Spoofing Commands

20 NFPP Commands

21 DoS Protection Commands

# 1 AAA Commands

## 1.1 aaa accounting commands

Use this command to configure NAS command accounting.

Use the **no** form of this command to restore the default setting.

**aaa accounting commands** *level* { **default** | *list-name* } **start-stop** *method1* [ *method2...*]

**no aaa accounting commands** *level* { **default** | *list-name* }

Parameter	Parameter	Description
Description	<i>level</i>	The accounting command level, 0-15. The message shall be recorded before which command level is executed is determined.
	<b>default</b>	When this parameter is used, the following defined method list is used as the default method for command accounting.
	<i>list-name</i>	Name of the command accounting method list, which could be any character strings.
	<i>method</i>	It must be one of the keywords listed in the following table. One method list can contain up to four methods.
	<b>none</b>	Does not perform accounting.
	<b>group</b>	Uses the server group for accounting, the TACACS+ server group is supported.

**Defaults** This function is disabled by default.

**Command Mode** Global configuration mode

**Usage Guide** RGOS enables the accounting command function after enabling the login authentication. After enabling the accounting function, it sends the command information to the security service.  
The configured accounting command method must be applied to the terminal line that needs accounting command; otherwise it is ineffective.

**Configuration** The following example enables NAS command accounting.

**Examples** Ruijie(config)# aaa accounting commands 15 default start-stop group tacacs+

Related Commands	Command	Description
	<b>aaa new-model</b>	Enables the AAA security service.
	<b>aaa authentication</b>	Defines AAA authentication.
	<b>accounting commands</b>	Applies the accounting commands to the terminal line.

**Platform** N/A

**Description**

## 1.2 aaa accounting exec

Use this command to enable NAS access accounting.

Use the **no** form of this command to restore the default setting.

**aaa accounting exec** { **default** | *list-name* } **start-stop** *method1* [ *method2...* ]

**no aaa accounting exec** { **default** | *list-name* }

Parameter	Parameter	Description
Description	<b>default</b>	When this parameter is used, the following defined method list is used as the default method for Exec accounting.
	<i>list-name</i>	Name of the Exec accounting method list, which could be any character strings
	<i>method</i>	It must be one of the keywords: <b>none</b> and <b>group</b> . One method list can contain up to four methods.
	<b>none</b>	Does not perform accounting.
	<b>group</b>	Uses the server group for accounting, the RADIUS and TACACS+ server group is supported.

**Defaults** This function is disabled by default.

**Command** Global configuration mode  
**Mode**

**Usage Guide** RGOS enables the exec accounting function after enabling the login authentication. After enabling the accounting function, it sends the account start information to the security server when the users log in the NAS CLI, and sends the account stop information to the security server when the users log out. If it does not send the account start information to the security server when a user logs in, it does not send the account stop information to the security server when a user logs out, either.

The configured exec accounting method must be applied to the terminal line that needs accounting command; otherwise it is ineffective.

**Configuration** The following example enables NAS access accounting.

**Examples** Ruijie(config)# aaa accounting network start-stop group radius

Related	Command	Description
Commands	<b>aaa new-model</b>	Enables the AAA security service.
	<b>aaa authentication</b>	Defines AAA authentication.
	<b>accounting commands</b>	Applies the Exec accounting to the terminal line.

**Platform** N/A

**Description**

## 1.3 aaa accounting network

Use this command to enable network access accounting.

Use the **no** form of this command to restore the default setting.

**aaa accounting network { default | list-name } start-stop method1 [ method2..]**

**no aaa accounting network { default | list-name }**

Parameter	Parameter	Description
<b>Description</b>	<b>default</b>	When this parameter is used, the following defined method list is used as the default method for Network accounting.
	<i>list-name</i>	Name of the accounting method list
	<i>method</i>	Sends accounting messages at both the start time and the end time of access. Users are allowed to access the network, no matter whether the start accounting message enables the accounting successfully.
	<b>none</b>	Does not perform accounting.
	<b>group</b>	Uses the server group for accounting, the RADIUS and TACACS+ server group is supported.

**Defaults** This function is disabled by default.

**Command Mode** Global configuration mode

**Usage Guide** RGOS performs accounting of user activities by sending record attributes to the security server. Use the **start-stop** keyword to set the user accounting option.

**Configuration** The following example enables network access accounting.

**Examples** Ruijie(config)# aaa accounting network start-stop group radius

Related Commands	Command	Description
	<b>aaa new-model</b>	Enables the AAA security service.
	<b>aaa authorization network</b>	Defines a network authorization method list.
	<b>aaa authentication</b>	Defines AAA authentication.
	<b>username</b>	Defines a local user database.

**Platform** N/A

**Description**

## 1.4 aaa accounting update

Use this command to enable the accounting update function.

Use the **no** form of this command to restore the default setting.

**aaa accounting update**

**no aaa accounting update**

**Parameter**

N/A

**Description**

**Defaults**

This function is disabled by default.

**Command**

Global configuration mode

**Mode**

**Usage Guide**

If the AAA security service is not enabled, the accounting update function cannot be used. This command is used to set the accounting interval if the AAA security service has been enabled.

**Configuration**

The following example enables the accounting update function.

**Examples**

```
Ruijie(config)# aaa new-model
Ruijie(config)# aaa accounting update
```

**Related**

**Commands**

Command	Description
<b>aaa new-model</b>	Enables the AAA security service.
<b>aaa accounting network</b>	Defines a network accounting method list.

**Platform**

N/A

**Description**

## 1.5 aaa accounting update periodic

Use this command to set the interval of sending the accounting update message.

Use the **no** form of this command to restore the default setting.

**aaa accounting update periodic** *interval*

**no aaa accounting update periodic**

**Parameter**

**Description**

Parameter	Description
<i>interval</i>	Interval of sending the accounting update message, in the unit of minutes. The shortest interval is 1 minute.

**Defaults**

The default is 5 minutes.

**Command**

Global configuration mode

**Mode**

**Usage Guide** If the AAA security service is not enabled, the accounting update function cannot be used. This command is used to set the accounting interval if the AAA security service has been enabled.

**Configuration** The following example sets the interval of accounting update to 1 minute.

**Examples**

```
Ruijie(config)# aaa new-model
Ruijie(config)# aaa accounting update
Ruijie(config)# aaa accounting update periodic 1
```

**Related****Commands**

Command	Description
<b>aaa new-model</b>	Enables the AAA security service.
<b>aaa accounting network</b>	Defines a network accounting method list.

**Platform** N/A

**Description**

## 1.6 aaa authentication dot1x

Use this command to enable AAA authentication 802.1x and configure the 802.1x user authentication method list.

Use the **no** form of this command to delete the 802.1x user authentication method list.

**aaa authentication dot1x** { **default** | *list-name* } *method1* [ *method2...*]

**no aaa authentication dot1x** { **default** | *list-name* }

**Parameter****Description**

Parameter	Description
<b>default</b>	When this parameter is used, the following defined 802.1x user authentication method list is used as the default method for user authentication.
<i>list-name</i>	Name of the 802.1x user authentication method list, which could be any character string
<i>method</i>	It must be one of the keywords: <b>local</b> , <b>none</b> and <b>group</b> . One method list can contain up to four methods.
<b>local</b>	Uses the local user name database for authentication.
<b>none</b>	Does not perform authentication.
<b>group</b>	Uses the server group for authentication. At present, the RADIUS server group is supported.

**Defaults** N/A

**Command** Global configuration mode

**Mode**

**Usage Guide** If the AAA 802.1x security service is enabled on the device, users must use AAA for 802.1x user authentication negotiation. You must use the **aaa authentication dot1x** command to configure a default or optional method list for 802.1x user authentication.

The next method can be used for authentication only when the current method does not work.

**Configuration Examples** The following example defines an AAA authentication method list named **RDS\_D1X**. In the authentication method list, first the RADIUS security server is used for authentication. If the RADIUS security server does not respond, the local user database is used for authentication.

```
Ruijie(config)# aaa authentication dot1x rds_d1x group radius local
```

Related Commands	Command	Description
	<b>aaa new-model</b>	Enables the AAA security service.
	<b>dot1x authentication</b>	Associates a specific method list with the 802.1x user.
	<b>username</b>	Defines a local user database.

**Platform** N/A

**Description**

## 1.7 aaa authentication enable

Use this command to enable AAA Enable authentication and configure the Enable authentication method list.

Use the **no** form of this command to delete the user authentication method list.

**aaa authentication enable default** *method1* [*method2...*]

**no aaa authentication enable default**

Parameter Description	Parameter	Description
	<b>default</b>	When this parameter is used, the following defined authentication method list is used as the default method for Enable authentication.
	<i>method</i>	It must be one of the keywords: <b>local</b> , <b>none</b> and <b>group</b> . One method list can contain up to four methods.
	<b>local</b>	Uses the local user name database for authentication.
	<b>none</b>	Does not perform authentication.
	<b>group</b>	Uses the server group for authentication. At present, the RADIUS and TACACS+ server groups are supported.
	<b>enable</b>	Enables AAA Enable authentication.

**Defaults** N/A

**Command Mode** Global configuration mode

**Usage Guide** If the AAA Enable authentication service is enabled on the device, users must use AAA for Enable

authentication negotiation. You must use the **aaa authentication enable** command to configure a default or optional method list for Enable authentication.

The next method can be used for authentication only when the current method does not work.

The Enable authentication function automatically takes effect after configuring the Enable authentication method list.

**Configuration Examples** The following example defines an AAA Enable authentication method list. In the authentication method list, first the RADIUS security server is used for authentication. If the RADIUS security server does not respond, the local user database is used for authentication.

```
Ruijie(config)# aaa authentication enable default group radius local
```

Related Commands	Command	Description
	<b>aaa new-model</b>	Enables the AAA security service.
	<b>enable</b>	Switchover the user level.
	<b>username</b>	Defines a local user database.

**Platform** N/A

**Description**

## 1.8 aaa authentication login

Use this command to enable AAA Login authentication and configure the Login authentication method list.

Use the **no** form of this command to delete the authentication method list.

**aaa authentication login { default | list-name } method1 [ method2..]**

**no aaa authentication login { default | list-name }**

Parameter Description	Parameter	Description
	<b>default</b>	When this parameter is used, the following defined authentication method list is used as the default method for Login authentication.
	<b>list-name</b>	Name of the user authentication method list, which could be any character strings
	<b>method</b>	It must be one of the keywords: <b>local</b> , <b>none</b> , <b>group</b> and <b>subs</b> . One method list can contain up to four methods.
	<b>local</b>	Uses the local user name database for authentication.
	<b>none</b>	Does not perform authentication.
	<b>group</b>	Uses the server group for authentication. At present, the RADIUS and TACACS+ server groups are supported.
	<b>subs</b>	Uses the subs database for authentication.

**Defaults** N/A

**Command** Global configuration mode



**Mode**

**Usage Guide** If the AAA Login authentication security service is enabled on the device, users must use AAA for Login authentication negotiation. You must use the **aaa authentication login** command to configure a default or optional method list for Login authentication.

The next method can be used for authentication only when the current method does not work.

You need to apply the configured Login authentication method to the terminal line which needs Login authentication. Otherwise, the configured Login authentication method is invalid.

**Configuration Examples** The following example defines an AAA Login authentication method list named list-1. In the authentication method list, first the RADIUS security server is used for authentication. If the RADIUS security server does not respond, the local user database is used for authentication.

```
Ruijie(config)# aaa authentication login list-1 group radius local
```

**Related Commands**

Command	Description
<b>aaa new-model</b>	Enables the AAA security service.
<b>login authentication</b>	Applies the Login authentication method to the terminal lines.
<b>username</b>	Defines a local user database.

**Platform** N/A

**Description**

## 1.9 aaa authentication web-auth

Use this command to enable AAA second-generation Web authentication and configure the second-generation Web authentication method list in global configuration mode.

Use the **no** form of this command to delete the authentication method list.

**aaa authentication web-auth { default | list-name } method1 [ method2...]**

**no aaa authentication web-auth { default | list-name }**

**Parameter Description**

Parameter	Description
<b>default</b>	When this parameter is used, the following defined authentication method list is used as the default method for the second-generation Web authentication.
<i>list-name</i>	Name of second-generation Web authentication method list, which could be any character strings
<i>method</i>	It must be one of the keywords: <b>local</b> , <b>none</b> , <b>subs</b> and <b>group</b> . One method list can contain up to four methods.
<b>local</b>	Uses the local user name database for authentication.
<b>none</b>	Does not perform authentication.
<b>group</b>	Uses the server group for authentication. At present, the RADIUS server group is supported.
<b>subs</b>	Uses the subs database for authentication.

**Defaults** N/A

**Command Mode** Global configuration mode

**Usage Guide** If the AAA second-generation Web security service is enabled on the device, users must use AAA for the second-generation Web authentication negotiation. You must use the **aaa authentication web-auth** command to configure a default or optional method list for user authentication. The next method can be used for authentication only when the current method does not work.

**Configuration Examples** The following example defines an AAA authentication method list named **rds\_web**. In the authentication method list, the RADIUS security server is first used for authentication. If the RADIUS security server does not respond, the local user database is used for authentication.

```
Ruijie(config)# aaa authentication web-auth rds_web group radius none
```

**Related Commands**

Command	Description
N/A	N/A

**Platform Description** N/A

## 1.10 aaa authorization commands

Use this command to authorize the command executed by the user who has logged in the NAS CLI. Use the **no** form of this command to restore the default setting.

**aaa authorization commands** *level* { **default** | *list-name* } *method1* [ *method2...* ]

**no aaa authorization commands** *level* { **default** | *list-name* }

**Parameter Description**

Parameter	Description
<i>level</i>	Command level to be authorized in the range from 0 to 15
<b>default</b>	When this parameter is used, the following defined method list is used as the default method for command authorization.
<i>list-name</i>	Name of the user authorization method list, which could be any character strings
<i>method</i>	It must be one of the keywords: <b>none</b> and <b>group</b> . One method list can contain up to four methods.
<b>none</b>	Do not perform authorization.
<b>group</b>	Uses the server group for authorization. At present, the TACACS+ server group is supported.

**Defaults** This function is disabled by default.

**Command** Global configuration mode  
**Mode**

**Usage Guide** RGOS supports authorization of the commands executed by the users. When the users input and attempt to execute a command, AAA sends this command to the security server. This command is to be executed if the security server allows to. Otherwise, it will prompt command deny.

It is necessary to specify the command level when configuring the command authorization, and this specified command level is the default command level.

The configured command authorization method must be applied to terminal line which requires the command authorization. Otherwise, the configured command authorization method is ineffective.

**Configuration** The following example uses the TACACS+ server to authorize the level 15 command.

**Examples** Ruijie(config)# aaa authorization commands 15 default group tacacs+

Related Commands	Command	Description
	aaa new-model	Enables the AAA security service.
	authorization commands	Applies the command authorization for the terminal line.

**Platform** N/A  
**Description**

## 1.11 aaa authorization config-commands

Use this command to authorize the configuration commands (including in the global configuration mode and its sub-mode).

Use the **no** form of this command to restore the default setting.

**aaa authorization config-commands**

**no aaa authorization config-commands**

Parameter	Parameter	Description
Description	N/A	N/A

**Defaults** This function is disabled by default.

**Command** Global configuration mode  
**Mode**

**Usage Guide** If you only authorize the commands in the non-configuration mode (for example, privileged EXEC mode), you can use the **no** form of this command to disable the authorization function in the configuration mode, and execute the commands in the configuration mode and its sub-mode without command authorization.

**Configuration** The following example enables the configuration command authorization function.

**Examples** Ruijie(config)# aaa authorization config-commands

Related Commands	Command	Description
	<b>aaa new-model</b>	Enables the AAA security service.
	<b>aaa authorization commands</b>	Defines the AAA command authorization.

Platform N/A

Description

## 1.12 aaa authorization console

Use this command to authorize the commands of the users who have logged in the console.

Use the **no** form of this command to restore the default setting.

**aaa authorization console**

**no aaa authorization console**

Parameter	Parameter	Description
Description	N/A	N/A

Defaults This function is disabled by default.

Command  
Mode Global configuration mode

Usage Guide RGOS supports to identify the users logged in from the console and from other terminals, configure whether to authorize the users logged in from the console or not. If the command authorization function is disabled on the console, the authorization method list applied to the console line is ineffective.

Configuration The following example enables the aaa authorization console function.

Examples 

```
Ruijie(config)# aaa authorization console
```

Related Commands	Command	Description
	<b>aaa new-model</b>	Enables the AAA security service.
	<b>aaa authorization commands</b>	Defines the AAA command authorization.
	<b>authorization commands</b>	Applies the command authorization to the terminal line.

Platform N/A

Description

## 1.13 aaa authorization exec

Use this command to authorize the users logged in the NAS CLI and assign the authority level.

Use the **no** form of this command to restore the default setting.

```
aaa authorization exec { default | list-name } method1 [ method2...]
no aaa authorization exec { default | list-name }
```

**Parameter**  
**Description**

Parameter	Description
<b>default</b>	When this parameter is used, the following defined method list is used as the default method for Exec authorization.
<i>list-name</i>	Name of the user authorization method list, which could be any character strings
<i>method</i>	It must be one of the keywords listed in the following table. One method list can contain up to four methods.
<b>local</b>	Uses the local user name database for authorization.
<b>none</b>	Does not perform authorization.
<b>group</b>	Uses the server group for authorization. At present, the RADIUS server group is supported.

**Defaults** This function is disabled by default.

**Command** Global configuration mode  
**Mode**

**Usage Guide** RGOS supports authorization of users logged in the NAS CLI and assignment of CLI authority level (0-15). The **aaa authorization exec** function is effective on condition that Login authentication function has been enabled. It cannot enter the CLI if it fails to enable the **aaa authorization exec**. You must apply the exec authorization method to the terminal line; otherwise the configured method is ineffective.

**Configuration** The following example uses the RADIUS server to authorize Exec.

**Examples** Ruijie(config)# aaa authorization exec default group radius

**Related**  
**Commands**

Command	Description
<b>aaa new-model</b>	Enables the AAA security service.
<b>authorization exec</b>	Applies the command authorization to the terminal line.
<b>username</b>	Defines a local user database.

**Platform** N/A  
**Description**

## 1.14 aaa authorization network

Use this command to authorize the service requests (including such protocols as PPP and SLIP) from the users that access the network.

Use the **no** form of this command to restore the default setting.

```
aaa authorization network { default | list-name } method1 [ method2...]
```

**no aaa authorization network** { **default** | *list-name* }

Parameter Description	Parameter	Description
	<b>default</b>	When this parameter is used, the following defined method list is used as the default method for Network authorization.
	<i>method</i>	It must be one of the keywords: none and group. One method list can contain up to four methods.
	<b>none</b>	Does not perform authorization.
	<b>group</b>	Uses the server group for authorization. At present, the RADIUS server group is supported.

**Defaults** This function is disabled by default.

**Command Mode** Global configuration mode

**Usage Guide** RGOS supports authorization of all the service requests related to the network, such as PPP and SLIP. If authorization is configured, all the authenticated users or interfaces will be authorized automatically.

Three different authorization methods can be specified. Like authorization, the next method can be used for authorization only when the current authorization method does not work. If the current authorization method fails, other subsequent authorization method is not used.

The RADIUS server authorizes authenticated users by returning a series of attributes. Therefore, RADIUS authorization is based on RADIUS authorization. RADIUS authorization is performed only when the user passes the RADIUS authorization.

**Configuration** The following example uses the RADIUS server to authorize network services.

**Examples** Ruijie(config)# aaa authorization network default group radius

Related Commands	Command	Description
	<b>aaa new-model</b>	Enables the AAA security service.
	<b>aaa accounting</b>	Defines AAA accounting.
	<b>aaa authentication</b>	Defines AAA authentication.
	<b>username</b>	Defines a local user database.

**Platform** N/A

**Description**

## 1.15 aaa domain

Use this command to configure the domain attributes.

Use the **no** form of this command to restore the default setting.

**aaa domain** { **default** | *domain-name* }

**no aaa domain { default | domain-name }**

Parameter	Parameter	Description
Description	<b>default</b>	Uses this parameter to configure the default domain.
	<i>domain-name</i>	The name of the specified domain

**Defaults** No domain is configured by default.

**Command Mode** Global configuration mode

**Usage Guide** Use this command to configure the domain-name-based AAA service. The **default** is to configure the default domain. That is the method list used by the network device if the users are without domain information. The *domain-name* is the specified domain name, if the users are with this *domain name*, the method lists associated with this domain are used. At present, the system can configure up to 32 domains.

**Configuration** The following example configures the domain name.

**Examples**

```
Ruijie(config)# aaa domain ruijie.com
Ruijie(config-aaa-domain)#
```

Related	Command	Description
Commands	<b>aaa new-model</b>	Enables the AAA security service.
	<b>aaa domain enable</b>	Enables the domain-name-based AAA service.
	<b>show aaa domain</b>	Displays the domain configuration.

**Platform** N/A

**Description**

## 1.16 aaa domain enable

Use this command to enable domain-name-based AAA service.

Use the **no** form of this command to restore the default setting.

**aaa domain enable**

**no aaa domain enable**

Parameter	Parameter	Description
Description	N/A	N/A

**Defaults** This function is disabled by default.

**Command Mode** Global configuration mode

**Usage Guide** To perform the domain-name-based AAA service configuration, enable this service.

**Configuration** The following example enables the domain-name-based AAA service.

**Examples** Ruijie(config)# aaa domain enable

Related Commands	Command	Description
	aaa new-model	Enables the AAA security service.
	show aaa doamain	Displays the domain configuration.

**Platform** N/A

**Description**

## 1.17 aaa local authentication attempts

Use this command to set login attempt times.

**aaa local authentication attempts** *max-attempts*

Parameter	Parameter	Description
Description	<i>max-attempts</i>	In the range from 1 to 2,147,483,647

**Defaults** The default is 3.

**Command** Global configuration mode  
**Mode**

**Usage Guide** Use this command to configure login attempt times.

**Configuration** The following example sets login attempt times to 6.

**Examples** Ruijie #configure terminal  
Ruijie(config)#aaa local authentication attempts 6

Related Commands	Command	Description
	show running-config	Displays the current configuration of the switch.
	show aaa lockout	Displays the lockout configuration parameter of current login.

**Platform** N/A

**Description**

## 1.18 aaa local authentication lockout-time

Use this command to configure the lockout-time period when the login user has attempted for more than the limited times.



**aaa local authentication logout-time** *logout-time*

Parameter	Parameter	Description
Description	<i>logout-time</i>	In the range from 1 to 2,147,483,647 in the unit of minutes

**Defaults** The default is 15 minutes.

**Command Mode** Global configuration mode

**Usage Guide** Use this command to configure the length of logout-time when the login user has attempted for more than the limited times.

**Configuration Examples** The following example sets the logout-time period to 5 minutes.

```
Ruijie#configure terminal
Ruijie(config)#aaa local authentication logout-time 5
```

Related Commands	Command	Description
	<b>show running-config</b>	Displays the current configuration of the switch.
	<b>show aaa logout</b>	Displays the logout configuration parameter of current login.

**Platform** N/A

**Description**

## 1.19 aaa log enable

Use this command to enable the system to print the syslog informing AAA authentication success.

Use the **no** form of this command to restore the default setting.

**aaa log enable**

**no aaa log enable**

Parameter	Parameter	Description
Description	N/A	N/A

**Defaults** This function is disabled by default.

**Command Mode** Global configuration mode

**Usage Guide** Use this command to enable the system to print the syslog informing aaa authentication success.

**Configuration Examples** The following example disables the system to print the syslog informing aaa authentication success.

```
Ruijie(config)# no aaa log enable
```

Related Commands	Command	Description
	N/A	N/A

**Platform** N/A  
**Description**

## 1.20 aaa log rate-limit

Use this command to set the rate of printing the syslog informing AAA authentication success.

Use the **no** form of this command to restore the default printing rate.

**aaa log rate-limit** *num*

**no aaa log rate-limit**

Parameter Description	Parameter	Description
	<i>num</i>	The number of syslog entries printed per second. The range is from 0 to 65,535. 0 indicates the printing rate is not limited.

**Defaults** The default is 5.

**Command Mode** Global configuration mode

**Usage Guide** Too much printing may flood the screen or even reduce device performance. In this case, use this command to adjust the printing rate.

**Configuration Examples** The following example sets the rate of printing the syslog informing AAA authentication success to 10.

```
Ruijie(config)# aaa log rate-limit 10
```

Related Commands	Command	Description
	N/A	N/A

**Platform** N/A  
**Description**

## 1.21 aaa new-model

Use this command to enable the RGOS AAA security service.

Use the **no** form of this command to restore the default setting.

**aaa new-model**

**no aaa new-model**

Parameter	Parameter	Description
Description	N/A	N/A

**Defaults** This function is disabled by default.

**Command Mode** Global configuration mode

**Usage Guide** Use this command to enable AAA. If AAA is not enabled, none of the AAA commands can be configured.

**Configuration** The following example enables the AAA security service.

**Examples**  
`Ruijie(config)# aaa new-model`

Related Commands	Command	Description
	<b>aaa authentication</b>	Defines a user authentication method list.
	<b>aaa authorization</b>	Defines a user authorization method list.
	<b>aaa accounting</b>	Defines a user accounting method list.

**Platform** N/A  
**Description**

## 1.22 access-limit

Use this command to configure the number of users limit for the domain, which is only valid for the IEEE802.1 users.

Use the **no** form of this command to restore the default setting.

**access-limit** *num*

**no access-limit**

Parameter	Parameter	Description
Description	<i>num</i>	The number used for the user limitation is only valid for the IEEE802.1 users.

**Defaults** By default, no number of users is limited.

**Command Mode** Domain configuration mode

**Usage Guide** This command limits the number of users for the domain.

**Configuration** The following example sets the number of users to 20 for the domain named ruijie.com.

**Examples**  
`Ruijie(config)# aaa domain ruijie.com`

```
Ruijie(config-aaa-domain)# access-limit 2
```

**Related  
Commands**

Command	Description
<b>aaa new-model</b>	Enables the AAA security service.
<b>aaa domain enable</b>	Switchover the user level.
<b>show aaa domain</b>	Defines a local user database.

**Platform** N/A  
**Description**

## 1.23 accounting network

Use this command to configure the Network accounting list.

Use the **no** form of this command to restore the default setting.

**accounting network { default | list-name }**

**no accounting network**

**Parameter  
Description**

Parameter	Description
<b>default</b>	Uses this parameter to specify the default method list.
<i>list-name</i>	The name of the network accounting list

**Defaults** With no method list specified, if the user sends the request, the device will attempt to specify the default method list for the user.

**Command  
Mode** Domain configuration mode

**Usage Guide** Use this command to configure the Network accounting method list for the specified domain.

**Configuration** The following example sets the Network accounting method list for the specified domain.

**Examples**

```
Ruijie(config)# aaa domain ruijie.com  
Ruijie(config-aaa-domain)# accounting network default
```

**Related  
Commands**

Command	Description
<b>aaa new-model</b>	Enables the AAA security service.
<b>aaa domain enable</b>	Enables the domain-name-based AAA service.
<b>show aaa domain</b>	Displays the domain configuration.

**Platform** N/A  
**Description**

## 1.24 authentication dot1x

Use this command to configure the IEEE802.1x authentication list.

Use the **no** form of this command to restore the default setting.

**authentication dot1x** { **default** | *list-name* }

**no authentication dot1x**

Parameter	Parameter	Description
Description	<b>default</b>	Uses this parameter to specify the default method list
	<i>list-name</i>	The name of the specified method list

**Defaults** With no method list specified, if users send the request, the device will attempt to specify the default method list for users.

**Command Mode** Domain configuration mode

**Usage Guide** Specify an IEEE802.1x authentication method list for the domain.

**Configuration Examples** The following example sets an IEEE802.1x authentication method list for the specified domain.

```
Ruijie(config)# aaa domain ruijie.com
Ruijie(config-aaa-domain)# authentication dot1x default
```

Related Commands	Command	Description
	<b>aaa new-model</b>	Enables the AAA security service.
	<b>aaa domain enable</b>	Enables the domain-name-based AAA service.
	<b>show aaa domain</b>	Displays the domain configuration.

**Platform** N/A

**Description**

## 1.25 authorization network

Use this command to configure the Network authorization list.

Use the **no** form of this command to restore the default setting.

**authorization network** { **default** | *list-name* }

**no authorization network**

Parameter	Parameter	Description
Description	<b>default</b>	Uses this parameter to specify the default method list.
	<i>list-name</i>	The name of the specified method list

**Defaults** With no method list specified, if users send the request, the device will attempt to specify the default

method list for users.

**Command** Domain configuration mode

**Mode**

**Usage Guide** Specify an authorization method list for the domain.

**Configuration** The following example sets an authorization method list for the specified domain.

**Examples**

```
Ruijie(config)# aaa domain ruijie.com
Ruijie(config-aaa-domain)# authorization network default
```

Related Commands	Command	Description
	<b>aaa new-model</b>	Enables the AAA security service.
	<b>aaa domain enable</b>	Enables the domain-name-based AAA service.
	<b>show aaa domain</b>	Displays the domain configuration.

**Platform** N/A

**Description**

## 1.26 clear aaa local user logout

Use this command to clear the logout user list.

**clear aaa local user logout { all | user-name word }**

Parameter Description	Parameter	Description
	<b>all</b>	Indicates all locked users.
	<b>user-name word</b>	Indicates the ID of the locked User.

**Defaults** N/A

**Command** Privileged EXEC mode

**Mode**

**Usage Guide** Use this command to clear all the user lists or a specified user list.

**Configuration** The following example clears the logout user list.

**Examples**

```
Ruijie(config)# clear aaa local user logout all
```

Related Commands	Command	Description
	<b>show running-config</b>	Displays the current configuration of the switch.
	<b>show aaa logout</b>	Displays the logout configuration parameter of current login.

**Platform** N/A

**Description**

## 1.27 show aaa accounting update

Use this command to display the accounting update information.

**show aaa accounting update**

Parameter	Parameter	Description
Description	N/A	N/A

**Defaults** N/A

**Command Mode** Privileged EXEC mode/Global configuration mode/Interface configuration mode

**Usage Guide** Use this command to display the accounting update interval and whether the accounting update is enabled.

**Configuration Examples** The following example displays the accounting update information.

```
Ruijie# show aaa accounting update
```

Related Commands	Command	Description
	<b>aaa new-model</b>	Enables the AAA security service.
	<b>aaa domain enable</b>	Enables the domain-name-based AAA service.

**Platform Description** N/A

## 1.28 show aaa domain

Use this command to display all current domain information.

**show aaa domain [ default | domain-name ]**

Parameter	Parameter	Description
Description	<b>default</b>	Displays the default domain.
	<i>domain-name</i>	Displays the specified domain.

**Defaults** N/A

**Command Mode** Privileged EXEC mode/Global configuration mode/Interface configuration mode

**Usage Guide** If no domain-name is specified, all domain information will be displayed.

**Configuration** The following example displays the domain named domain.com.

**Examples**

```
Ruijie(config)# show aaa domain domain.com
=====Domain domain.com=====

State: Active
Username format: Without-domain
Access limit: No limit
802.1X Access statistic: 0

Selected method list:
authentication dot1x default
```

**Related  
Commands**

Command	Description
<b>aaa new-model</b>	Enables the AAA security service.
<b>aaa domain enable</b>	Enables the domain-name-based AAA service.

**Platform** N/A

**Description**

## 1.29 show aaa group

Use this command to display all the server groups configured for AAA.

**show aaa group**

**Parameter  
Description**

Parameter	Description
N/A	N/A

**Defaults** N/A

**Command  
Mode** Privileged EXEC mode/Global configuration mode/Interface configuration mode

**Usage Guide** N/A

**Configuration** The following command displays all the server groups.

**Examples**

```
Ruijie# show aaa group
Type      Reference  Name
-----
radius    1          radius
tacacs+    1          tacacs+
radius    1          dot1x_group
radius    1          login_group
radius    1          enable_group
```



Related Commands	Command	Description
	aaa group server	Configures the AAA server group.

Platform N/A

Description

## 1.30 show aaa logout

Use this command to display the logout configuration.

**show aaa logout**

Parameter Description	Parameter	Description
	N/A	N/A

Defaults N/A

**Command Mode** Privileged EXEC mode/Global configuration mode/Interface configuration mode

**Usage Guide** Use this command to display the logout configuration.

**Configuration** The following example displays the logout configuration.

**Examples**

```
Ruijie# show aaa logout
Lock tries:    3
Lock timeout: 15 minutes
```

Related Commands	Command	Description
	N/A	N/A

Platform N/A

Description

## 1.31 show aaa method-list

Use this command to display all AAA method lists.

**show aaa method-list**

Parameter Description	Parameter	Description
	N/A	N/A

Defaults N/A

**Command** Privileged EXEC mode/Global configuration mode/Interface configuration mode

**Mode**

**Usage Guide** Use this command to display all AAA method lists.

**Configuration** The following example displays the AAA method list.

**Examples**

```
Ruijie# show aaa method-list
Authentication method-list
aaa authentication login default group radius
aaa authentication ppp default group radius
aaa authentication dot1x default group radius
aaa authentication dot1x san-f local group angel group rain none
aaa authentication enable default group radius
Accounting method-list
aaa accounting network default start-stop group radius
Authorization method-list
aaa authorization network default group radius
```

**Related  
Commands**

Command	Description
<b>aaa authentication</b>	Defines a user authentication method list
<b>aaa authorization</b>	Defines a user authorization method list
<b>aaa accounting</b>	Defines a user accounting method list

**Platform** N/A

**Description**

## 1.32 show aaa user

Use this command to display AAA user information.

**show aaa user { all | lockout | by-id *session-id* | by-name *user-name* }**

**Parameter  
Description**

Parameter	Description
<b>all</b>	Displays all AAA user information.
<b>lockout</b>	Displays the locked AAA user information.
<b>by-id</b> <i>session-id</i>	Displays the information of the AAA user that with a specified session ID.
<b>by-name</b> <i>user-name</i>	Displays the information of the AAA user with a specified user name.

**Defaults** N/A

**Command Mode** Privileged EXEC mode/Global configuration mode/Interface configuration mode

**Usage Guide** Use this command to display AAA user information.

**Configuration** The following example displays AAA user information.

**Examples**

```
Ruijie#show aaa user all

-----
      Id ----- Name
2345687901      wwxy
-----

Ruijie# show aaa user by-id 2345687901

-----
      Id ----- Name
2345687901      wwxy

Ruijie# show aaa user by-name wwxy

-----
      Id ----- Name
2345687901      wwxy
-----

Ruijie# show aaa user logout

Name                               Tries      Lock      Timeout (min)
-----
Ruijie#
```

Related	Command	Description
Commands	N/A	N/A

**Platform** N/A  
**Description**

1.33 state

Use this command to set whether the configured domain is valid.  
Use the **no** form of this command to restore the default setting.

**state { block | active }**  
**no state**

Parameter	Parameter	Description
Description	block	The configured domain is invalid.

<b>active</b>	The configured domain is valid.
---------------	---------------------------------

**Defaults** The default is active.

**Command Mode** Domain configuration mode

**Usage Guide** Use this command to set whether the specified configured domain is valid.

**Configuration** The following example sets the configured domain to be invalid.

**Examples**

```
Ruijie(config)# aaa domain ruijie.com
Ruijie(config-aaa-domain)# state block
```

Related Commands	Command	Description
	<b>aaa new-model</b>	Enables the AAA security service.
	<b>aaa domain enable</b>	Enables the domain-name-based AAA service.
	<b>show aaa domain enable</b>	Displays the domain configuration.

**Platform** N/A

**Description**

## 1.34 username-format

Use this command to configure the user name whether to be with the domain information when the NAS interacts with the servers.

Use the **no** form of this command to restore the default setting.

**username-format { without-domain | with-domain }**

**no username-format**

Parameter Description	Parameter	Description
	<b>without-domain</b>	Sets the user name without the domain information.
	<b>with-domain</b>	Sets the user name with the domain information.

**Defaults** The default is without-domain.

**Command Mode** Domain configuration mode

**Usage Guide** Use this command to configure the user name whether to be with the domain information when the NAS interacts with the servers.

**Configuration** The following example sets the user name without the domain information.

**Examples**

```
Ruijie(config)# aaa domain ruijie.com
Ruijie(config-aaa-domain)# username-domain without-domain
```

Related Commands	Command	Description
	<b>aaa new-model</b>	Enables the AAA security service.
	<b>aaa domain enable</b>	Enables the domain-name-based AAA service.
	<b>show aaa domain</b>	Displays the domain configuration.

**Platform** N/A

**Description**

## 2 RADIUS Commands

### 2.1 aaa group server radius

Use this command to enter AAA server group configuration mode.

Use the **no** form of this command to restore the default setting.

**aaa group server radius** *name*

**no aaa group server radius** *name*

#### Parameter Description

Parameter	Description
<i>name</i>	Server group name. Keywords “radius” and “tacacs +” are excluded as they are the default RADIUS and TACACS+ server group names.

**Defaults** N/A

**Command Mode** Global configuration mode

**Usage Guide** This command is used to configure a RADIUS AAA server group.

**Configuration** The following example configures a RADIUS AAA server group named ss.

#### Examples

```
Ruijie(config)# aaa group server radius ss
Ruijie(config-gs-radius)# end
Ruijie# show aaa group
Type      Reference  Name
-----
radius    1          radius
tacacs+   1          tacacs+
radius    1          ss
```

#### Related Commands

Command	Description
N/A	N/A

**Platform** N/A  
**Description**

### 2.2 ip radius source-interface

Use this command to specify the source IP address for the RADIUS packet.

Use the **no** form of this command to delete the source IP address for the RADIUS packet.

**ip radius source-interface** *interface-name*

**no radius source-interface** *interface-name*

**Parameter  
Description**

Parameter	Description
<i>interface-name</i>	Interface that the source IP address of the RADIUS packet belongs to.

**Defaults**

The source IP address of the RADIUS packet is set by the network layer.

**Command  
mode**

Global configuration mode

**Usage Guide**

In order to reduce the NAS information to be maintained on the RADIUS server, use this command to set the source IP address of the RADIUS packet. This command uses the first IP address of the specified interface as the source IP address of the RADIUS packet. This command is used in the layer 3 devices.

**Configuration  
Examples**

The following example specifies that the RADIUS packet obtains an IP address from the fastEthernet 0/0 interface and uses it as the source IP address of the RADIUS packet.

```
Ruijie(config)# ip radius source-interface fastEthernet 0/0
```

**Related  
Commands**

Command	Description
<b>radius-server host</b>	Defines the RADIUS server.
<b>ip address</b>	Configures the IP address of the interface.

**Platform**

N/A

**Description**

## 2.3 radius attribute

Use this command to set the private attribute type value.

Use the **no** form of this command to restore the default setting.

**radius attribute** { *id* | **down-rate-limit** | **dscp** | **mac-limit** |

**up-rate-limit** } **vendor-type** *type*

**no radius attribute** { *id* | **down-rate-limit** | **dscp** | **mac-limit** |

**up-rate-limit** } **vendor-type**

**Parameter  
Description**

Parameter	Description
<i>id</i>	Function ID, in the range from 1 to 255
<i>type</i>	Private attribute type, in the range from 1

	to 255.
--	---------

**Defaults**

Only the default configuration of private attributes in Ruijie is recognized.

id	Function	typ
1	max down-rate	1
2	qos	2
3	user ip	3
4	vlan id	4
5	version to client	5
6	net ip	6
7	user name	7
8	password	8
9	file-directory	9
10	file-count	10
11	file-name-0	11
2	file-name-1	12
13	file-name-2	13
14	file-name-3	14
15	file-name-4	15
16	max up-rate	16
17	version to server	17
18	flux-max-high32	18
19	flux-max-low32	19
20	proxy-avoid	20
21	dailup-avoid	21
22	ip privilege	22
23	login privilege	42

Extended attributes:

id	Function	typ
1	max down-rate	76
2	qos	77
3	user ip	3
4	vlan id	4



5	version to client	5
6	net ip	6
7	user name	7
8	password	8
9	file-directory	9
10	file-count	10
11	file-name-0	11
12	file-name-1	12
13	file-name-2	13
14	file-name-3	14
15	file-name-4	15
16	max up-rate	75
17	version to server	17
18	flux-max-high32	18
19	flux-max-low32	19
20	proxy-avoid	20
21	dailup-avoid	21
22	ip privilege	22
23	login privilege	42
24	limit to user number	50

**Command** Global configuration mode  
**Mode**

**Usage Guide** This command is used to configure the private attribute type value.

**Configuration** The following example sets the type of max up-rate to 211.

**Examples** Ruijie(config)# radius attribute 16 vendor-type 211

**Related  
Commands**

Command	Description
<b>radius set qos cos</b>	Sets the qos value sent by the RADIUS server as the cos value of the interface.

**Platform** N/A  
**Description**

## 2.4 radius set qos cos

Use this command to set the QoS value sent by the RADIUS server as the CoS value of the interface.

Use the **no** form of this command to restore the default setting.

**radius set qos cos**

**no radius set qos cos**

### Parameter Description

Parameter	Description
N/A	N/A

### Defaults

Set the QoS value sent by the RADIUS server as the DSCP value.

### Command Mode

Global configuration mode.

### Usage Guide

This command is used to set the QoS value sent by the RADIUS server as the CoS value, and the DSCP value by default.

### Configuration Examples

The following example sets the QoS value sent by the RADIUS server as the CoS value of the interface:

```
Ruijie(config)# radius set qos cos
```

### Related Commands

Command	Description
<b>radius vendor-specific extend</b>	Extends RADIUS as not to differentiate the IDs of private vendors.

### Platform Description

N/A

## 2.5 radius support cui

Use this command to enable RADIUS to support the cui function.

Use the **no** form of this command to restore the default setting.

**radius support cui**

**no radius support cui**

### Parameter Description

Parameter	Description
N/A	N/A

### Defaults

This function is disabled by default.

**Command** Global configuration mode  
**Mode**

**Usage Guide** This command is used to enable RADIUS to support the cui function.

**Configuration** The following example enables RADIUS to support the cui function.

**Examples** Ruijie(config)# radius support cui

**Related  
Commands**

Command	Description
N/A	N/A

**Platform** N/A  
**Description**

## 2.6 radius vendor-specific extend

Use this command to extend RADIUS not to differentiate the IDs of private vendors.

Use the **no** form of this command to restore the default setting.

**radius vendor-specific extend**

**no radius vendor-specific extend**

**Parameter  
Description**

Parameter	Description
N/A	N/A

**Defaults** Only the private vendor IDs of Ruijie are recognized.

**Command** Global configuration mode  
**Mode**

**Usage Guide** This command is used to identify the attributes of all vendor IDs by type.

**Configuration** The following example extends RADIUS so as not to differentiate the IDs of private vendors:

**Examples** Ruijie(config)# radius vendor-specific extend

**Related  
Commands**

Command	Description
<b>radius attribute</b>	Configures vendor type.
<b>radius set qos cos</b>	Sets the QoS value sent by the RADIUS server as the cos value of the interface.

**Platform** N/A

**Description**

## 2.7 radius-server account attribute

Use this command to enable account-request packets to contain a specified RADIUS attribute.

Use the **no** or **default** form of this command to restore the default setting.

**radius-server account attribute** *type* **package**

**no radius-server account attribute** *type* **package**

**default radius-server account attribute** *type* **package**

Use this command to disable account-request packets to contain a specified RADIUS attribute.

Use the **no** or **default** form of this command to restore the default setting.

**radius-server account attribute** *type* **unpackage**

**no radius-server account attribute** *type* **unpackage**

**default radius-server account attribute** *type* **unpackage**

**Parameter  
Description**

Parameter	Description
<i>type</i>	RADIUS attribute in the range from 1 to 255

**Defaults**

RFC-compliant

**Command  
Mode**

Global configuration mode

**Usage Guide**

Use this command to enable or disable account-request packets to contain a specified RADIUS attribute.

**Configuration  
Examples**

The following example disables account-request packets to contain attribute NAS-PORT-ID.

```
Ruijie(config)# radius-server account attribute 87 unpackage
```

**Platform  
Description**

N/A

## 2.8 radius-server account update retransmit

Use this command to configure accounting update packet retransmission for the second generation Web authentication user.

Use the **no** form of this command to restore the default setting,

**radius-server account update retransmit**

**no radius-server account update retransmit**

**Parameter**

Parameter	Description
-----------	-------------

<b>Description</b>		
	N/A	N/A
<b>Defaults</b>	This function is disabled by default.	
<b>Command Mode</b>	Global configuration mode	
<b>Usage Guide</b>	This command is used to configure accounting update packet retransmission for the second generation Web authentication user exclusively.	
<b>Configuration Examples</b>	The following example configures accounting update packet retransmission for the second generation Web authentication user.	
	<pre>Ruijie(config)#radius-server account update retransmit</pre>	
<b>Related Commands</b>	<b>Command</b>	<b>Description</b>
	N/A	N/A
<b>Platform</b>	N/A	
<b>Description</b>		

## 2.9 radius-server account vendor

Use this command to enable account-request packets to contain vendor-specific RADIUS attributes.

Use the **no** or **default** form of this command to restore the default setting.

**radius-server account vendor** *vendor\_name* **package**

**no radius-server account vendor** *vendor\_name* **package**

**default radius-server account vendor** *vendor\_name* **package**

<b>Parameter Description</b>	<b>Parameter</b>	<b>Description</b>
	<i>vendor_name</i>	<b>cmcc/ microsoft/cisco</b>
<b>Defaults</b>	Account-request packets do not contain vendor- specific RADIUS attributes by default.	
<b>Command Mode</b>	Global configuration mode	
<b>Usage Guide</b>	Use this command to enable account-request packets to contain vendor-specific RADIUS attributes.	
<b>Configuration Examples</b>	The following example enables account-request packets to contain “cmcc”.	
	<pre>Ruijie(config)# radius-server account vendor cmcc package</pre>	
<b>Platform</b>	N/A	

**Description**

## 2.10 radius-server attribute class

Use this command to analyze the flow control value of the RADIUS CLASS attributes.

Use the **no** form of this command to restore the default setting.

**radius-server attribute class**

**no radius-server attribute class**

**Parameter  
Description**

Parameter	Description
N/A	N/A

**Defaults**

This function is disabled by default.

**Command Mode**

Global configuration mode

**Usage Guide**

This command is required if the server pushes the flow control through the CLASS attribute.

**Configuration  
Examples**

N/A

**Related Commands**

Command	Description
N/A	N/A

**Platform**

N/A

**Description**

## 2.11 radius-server attribute 31

Use this command to specify the MAC-based format of RADIUS Calling-Station-ID attribute.

Use the **no** form of this command to restore the default setting.

**radius-server attribute 31 mac format { ietf | normal | unformatted }**

**no radius-server attribute 31 mac format**

**Parameter  
Description**

Parameter	Description
<b>ietf</b>	The standard format specified by the IETF RFC3580. '-' is used as the separator, for example: 00-D0-F8-33-22-AC.
<b>normal</b>	Normal format representing the MAC address. ':' is used as the separator. For example: 00d0.f833.22ac.

<b>unformatted</b>	No format and separator. By default, unformatted is used. For example: 00d0f83322ac.
--------------------	--

**Defaults** The default format is unformatted.

**Command Mode** Global configuration mode

**Usage Guide** Some RADIUS security servers (mainly used to 802.1x authentication) may identify the IETF format only. In this case, the RADIUS Calling-Station-ID attribute shall be set as the IETF format type.

**Configuration Examples** The following example defines the RADIUS Calling-Station-ID attribute as IETF format.

```
Ruijie(config)# radius-server attribute 31 mac format ietf
```

Related Commands	Command	Description
	<b>radius-server host</b>	Defines the RADIUS server.

**Platform** N/A

**Description**

## 2.12 radius-server authentication attribute

Use this command to enable access-request packets to contain a specified RADIUS attribute.

Use the **no** or **default** form of this command to restore the default setting.

**radius-server authentication attribute *type* package**

**no radius-server authentication attribute *type* package**

**default radius-server authentication attribute *type* package**

Use this command to disable access-request packets to contain a specified RADIUS attribute.

Use the **no** or **default** form of this command to restore the default setting.

**radius-server authentication attribute *type* unpackage**

**no radius-server authentication attribute *type* unpackage**

**default radius-server authentication attribute *type* unpackage**

Parameter Description	Parameter	Description
	<i>type</i>	RADIUS attribute in the range from 1 to 255

**Defaults** RFC-compliant

**Command Mode** Global configuration mode

**Usage Guide** Use this command to enable access-request packets to contain a specified RADIUS attribute.

**Configuration** The following example disables access-request packets to contain attribute NAS-PORT-ID.

**Examples** Ruijie(config)# radius-server authentication attribute 87 unpackage

**Platform** N/A

**Description**

## 2.13 radius-server authentication vendor

Use this command to enable access-request packets to contain vendor-specific RADIUS attributes.

Use the **no** or **default** form of this command to restore the default setting.

**radius-server authentication vendor** *vendor\_name* **package**

**no radius-server authentication vendor** *vendor\_name* **package**

**default radius-server authentication vendor** *vendor\_name* **package**

**Parameter  
Description**

Parameter	Description
<i>vendor_name</i>	cmcc/ microsoft/cisco

**Defaults** Access-request packets do not contain vendor- specific RADIUS attributes by default.

**Command  
Mode** Global configuration mode

**Usage Guide** Use this command to enable access-request packets to contain vendor- specific RADIUS attributes.

**Configuration** The following example enables access-request packets to contain “cmcc”.

**Examples** Ruijie(config)# radius-server authentication vendor cmcc package

**Platform  
Description** N/A

## 2.14 radius-server dead-criteria

Use this command to configure criteria on a device to determine that the Radius server is unreachable.

Use the **no** form of this command to restore the default setting.

**radius-server dead-criteria** { **time** *seconds* [ **tries** *number* ] | **tries** *number* }

**no radius-server dead-criteria** { **time** *seconds* [ **tries** *number* ] | **tries** *number* }

**Parameter  
Description**

Parameter	Description
<b>time</b> <i>seconds</i>	Configures the timeout value. If the device does not receive a correct



	response packet from the Radius server within the specified time, the Radius server is considered to be unreachable. The value is in the range from 1 to 120 in the unit of seconds.
<b>tries</b> <i>number</i>	Configures the successive timeout times. When sending a request from the device to the Radius server times out for the specified times, the device considers that the Radius server is unreachable. The value is in the range from 1 to 100 in the unit of seconds.

**Defaults** The default **time** *seconds* is 60 and **tries** *number* is 10.

**Command Mode** Global configuration mode

**Usage Guide** If a Radius server meets the timeout and timeout times at the same time, it is considered to be unreachable. This command is used to adjust the parameter conditions of timeout and timeout times.

**Configuration** The following example sets the timeout to 120 seconds and timeout times to 20.

**Examples** Ruijie(config)# radius-server dead-criteria time 120 tries 20

**Related Commands**

Command	Description
<b>radius-server host</b>	Defines the RADIUS security server.
<b>radius-server deadtime</b>	Defines the duration when a device stops sending any requests to an unreachable Radius server.
<b>radius-server timeout</b>	Defines the timeout for the packet re-transmission.

**Platform** N/A

**Description**

## 2.15 radius-server deadtime

Use this command to configure the duration when a device stops sending any requests to an unreachable Radius server.

Use the **no** form of this command to restore the default setting.

**radius-server deadtime** *minutes*

**no radius-server deadtime**

**Parameter Description**

Parameter	Description
<i>minutes</i>	Defines the duration in minutes when the device stops sending any requests to the unreachable Radius server. The value is in the range from 1 to 1,440 in the unit of minutes.

**Defaults** The default value of minutes is 0, that is, the device keeps sending requests to the unreachable Radius server.

**Command Mode** Global configuration mode

**Usage Guide** If active Radius server detection is enabled on the device, the time parameter of this command does not take effect on the Radius server. Otherwise, the Radius server becomes reachable when the duration set by this command is shorter than the unreachable time.

**Configuration** The following example sets the duration when the device stops sending requests to 1 minute.

**Examples** Ruijie(config)# radius-server deadtime 1

**Related Commands**

Command	Description
<b>radius-server host</b>	Defines the RADIUS security server.
<b>radius-server dead-criteria</b>	Defines the criteria to determine that a Radius server is unreachable.

**Platform** N/A

**Description**

## 2.16 radius-server host

Use this command to specify a RADIUS security server host.

Use the **no** form of this command to restore the default setting.

**radius-server host** { *ipv4-address* | *ipv6-address* } [ **auth-port** *port-number* ] [ **acct-port** *port-number* ] [ **test username** *name* [ **idle-time** *time* ] [ **ignore-auth-port** ] [ **ignore-acct-port** ] ] [ **key** [ **0** | **7** ] *text-string* ]

**no radius-server host** { *ipv4-address* | *ipv6-address* }

**Parameter Description**

Parameter	Description
<i>ipv4-address</i>	IPv6 address of the RADIUS security server host.
<i>ipv6-address</i>	IPv4 address of the RADIUS security server host.
<i>auth-port</i>	UDP port used for RADIUS authentication.
<i>port-number</i>	Number of the UDP port used for RADIUS authentication. If it is set to 0, this host does not perform authentication.
<i>acct-port</i>	UDP port used for RADIUS accounting.
<i>port-number</i>	Number of the UDP port used for RADIUS accounting. If it is set to 0, this host does not perform accounting.
<b>test username</b> <i>name</i>	(Optional) Enables the active detection to the RADIUS security server

	and specify the username used by the active detection.
<b>idle-time</b> <i>time</i>	(Optional) Sets the interval of sending the test packets to the reachable RADIUS security server, which is 60 minutes by default and in the range of 1 to 1440 minutes (namely 24 hours).
<b>ignore-auth-port</b>	(Optional) Disables the detection to the authentication port on the RADIUS security server. It is enabled by default.
<b>ignore-acct-port</b>	(Optional) Disables the detection to the authentication port on the RADIUS security server. It is enabled by default.
<b>key</b> [ 0   7 ] <i>text-string</i>	Configure a shared key for the server. The type of encryption can be specified. 0 is no encryption and 7 is simple encryption. The default is 0.

**Defaults** No RADIUS host is specified by default.

**Command** Global configuration mode

**Mode**

**Usage Guide** In order to implement the AAA security service using RADIUS, you must define a RADIUS security server. You can define one or more RADIUS security servers using the **radius-server host** command.

**Configuration** The following example defines a RADIUS security server host:

**Examples** Ruijie(config)# radius-server host 192.168.12.1

The following example defines a RADIUS security server host in the IPv4 environment, enable the active detection with the detection interval 60 minutes and disable the accounting UDP port detection:

```
Ruijie(config)# radius-server host 192.168.100.1 test username viven idle-time
60 ignore-acct-port
```

The following example defines a RADIUS security server host in the IPv6 environment

```
Ruijie(config)# radius-server host 3000::100
```

**Related  
Commands**

Command	Description
<b>aaa authentication</b>	Defines the AAA authentication method list
<b>radius-server key</b>	Defines a shared password for the RADIUS security server.
<b>radius-server retransmit</b>	Defines the number of RADIUS packet retransmissions.

**Platform** N/A

**Description**

## 2.17 radius-server key

Use this command to define a shared password for the network access server (device) to communicate with the RADIUS security server.

Use the **no** form of this command to restore the default setting.

**radius-server key** [ 0 | 7 ] *text-string*

**no radius-server key**

### Parameter Description

Parameter	Description
<i>text-string</i>	Text of the shared password
0   7	Password encryption type. 0: no encryption; 7: Simply-encrypted.

**Defaults** No shared password is specified by default.

### Command

**Mode** Global configuration mode.

**Usage Guide** A shared password is the basis for communications between the device and the RADIUS security server. In order to allow the device to communicate with the RADIUS security server, you must define the same shared password on the device and the RADIUS security server.

**Configuration** The following example defines the shared password **aaa** for the RADIUS security server:

**Examples** Ruijie(config)# radius-server key aaa

### Related Commands

Command	Description
<b>radius-server host</b>	Defines the RADIUS security server.
<b>radius-server retransmit</b>	Defines the number of RADIUS packet retransmissions.
<b>radius-server timeout</b>	Defines the timeout for the RADIUS packet.

**Platform** N/A

### Description

## 2.18 radius-server retransmit

Use this command to configure the number of packet retransmissions before the device considers that the RADIUS security server does not respond.

Use the **no** form of this command to restore the default setting.

**radius-server retransmit** *retries*

**no radius-server retransmit****Parameter  
Description**

Parameter	Description
<i>retries</i>	Number of retransmissions in the range from 1 to 100

**Defaults**

The default is 3.

**Command  
Mode**

Global configuration mode.

**Usage Guide**

AAA uses the next method to authenticate users only when the current security server for authentication does not respond. When the device retransmits the RADIUS packet for the specified times and the interval between every two retries is timeout, the device considers that the security sever does not respond.

**Configuration**

The following example sets the number of retransmissions to 4.

**Examples**

```
Ruijie(config)# radius-server retransmit 4
```

**Related  
Commands**

Command	Description
<b>radius-server host</b>	Defines the RADIUS security server.
<b>radius-server key</b>	Defines a shared password for the RADIUS server.
<b>radius-server timeout</b>	Defines the timeout for the RADIUS packet.

**Platform**

N/A

**Description**

## 2.19 radius-server source-port

Use this command to configure the source port to send RADIUS packets.

Use the **no** form of this command to restore the default setting.

**radius-server source-port** *port*

**no radius-server source-port**

**Parameter  
Description**

Parameter	Description
<i>port</i>	The port ID, in the range from 0 to 65535.

**Defaults**

The default is a random number.

**Command  
Mode**

Global configuration mode

**Usage Guide** The source port is random by default. This command is used to specify a source port.

**Configuration** The following example configures source port 10000 to send RADIUS packets.

**Examples**

```
Ruijie(config)# radius-server source-port 10000
```

**Related  
Commands**

Command	Description
N/A	N/A

**Platform** N/A

**Description**

## 2.20 radius-server timeout

Use this command to set the time for the device to wait for a response from the security server after retransmitting the RADIUS packet.

Use the **no** form of this command to restore the default setting.

**radius-server timeout** *seconds*

**no radius-server timeout**

**Parameter  
Description**

Parameter	Description
<i>seconds</i>	Timeout in the range from 1 to 1,000 in the unit of seconds.

**Defaults** The default is 5 seconds.

**Command**

**Mode** Global configuration mode

**Usage Guide** This command is used to change the timeout of packet retransmission.

**Configuration** The following example sets the timeout to 10 seconds.

**Examples**

```
Ruijie(config)# radius-server timeout 10
```

**Related  
Commands**

Command	Description
<b>radius-server host</b>	Defines the RADIUS security server.
<b>radius-server retransmit</b>	Defines the number of the RADIUS packet retransmissions.
<b>radius-server key</b>	Defines a shared password for the RADIUS server.

**Platform** N/A

**Description**

## 2.21 server auth-port acct-port

Use this command to add the server of the AAA server group.

Use the **no** form of this command to restore the default setting.

**server** { *ipv4-addr* | *ipv6-addr* } [ **auth-port** *port1* ] [ **acct-port** *port2* ]

**no server** { *ipv4-addr* | *ipv6-addr* } [ **auth-port** *port1* ] [ **acct-port** *port2* ]

**Parameter  
Description**

Parameter	Description
<i>ip-addr</i>	Server IP address
<i>ipv6-addr</i>	Server IPv6 address
<i>port1</i>	Server authentication port
<i>port2</i>	Server accounting port

**Defaults** No server is configured by default.

**Command Mode** Server group configuration mode

**Usage Guide** N/A

**Configuration Examples** The following example adds server 192.168.4.12 to server group ss and sets the accounting port and authentication port to 5 and 6 respectively.

```
Ruijie(config)# aaa group server radius ss
Ruijie(config-gs-radius)# server 192.168.4.12 acct-port 5 auth-port 6
Ruijie(config-gs-radius)# end
Ruijie# show aaa group
Type      Reference  Name
-----
radius    1         radius
tacacs+   1         tacacs+
radius    1         ss
```

**Related  
Commands**

Command	Description
N/A	N/A

**Platform Description** N/A

## 2.22 show radius acct statistics

Use this command to display RADIUS accounting statistics.

**show radius acct statistics**

Parameter Description	Parameter	Description
	N/A	N/A

**Defaults** N/A

**Command Mode** Global configuration mode/Privileged EXEC mode/Interface configuration mode

**Usage Guide** N/A

**Configuration** The following example displays RADIUS accounting statistics.

**Examples**

```
Ruijie#show radius acct statistics
Accounting Servers:

Server Index..... 1
Server Address..... 192.168.1.1
Server Port..... 1813
Msg Round Trip Time..... 0 (msec)
First Requests..... 1
Retry Requests..... 1
Accounting Responses..... 0
Malformed Msgs..... 0
Bad Authenticator Msgs..... 0
Pending Requests.....
```

Related Commands	Command	Description
	N/A	N/A

**Platform Description** N/A

## 2.23 show radius attribute

Use this command to display standard Radius attributes.

**show radius attribute**

Parameter Description	Parameter	Description
	N/A	N/A



**Command** Global configuration mode/Privileged EXEC mode/Interface configuration mode  
**Mode**

**Usage Guide** N/A

**Configuration** The following example displays standard RADIUS attributes.

**Examples**

```
Ruijie#sh radius attribute
type          implicate
-----
1.....User-Name
2.....User-Password
3.....Chap-Password
4.....NAS-Ip-Addr
5.....Nas-Ip-Port
6.....Service-Type
7.....Framed-Protocol
8.....Frame-Ip-Address
9.....Framed-Ip-Mask
10.....Framed-Routing
11.....Filter-Id
12.....Framed-Mtu
13.....Framed-Compress
14.....Login-Ip-Host
15.....Login-Service
16.....Login-Tcp-Port
18.....Reply-Message
19.....Callback-Num
20.....Callback-Id
22.....Framed-Route
23.....Framed-IPX-Network
24.....State
25.....Class
26.....Vendor-Specific
27.....Session-Timeout
28.....Idle-Timeout
29.....Termination-Action
30.....Called-Station-Id
31.....Calling-Station-Id
32.....Nas-Id
33.....Proxy-State
34.....Login-LAT-Service
35.....Login-LAT-Node
36.....Login-LAT-Group
37.....Framed-AppleTalk-Link
```

```

38.....Framed-AppleTalk-Net
39.....Framed-AppleTalk-Zone
40.....Acct-Status-Type
41.....Acct-Delay-Time
42.....Acct-Input-Octets
43.....Acct-Output-Octets
44.....Acct-Session-Id
45.....Acct-Authentic
46.....Acct-Session-Time
47.....Acct-Input-Packet
48.....Acct-Output-Packet
49.....Acct-Terminate-Cause
50.....Acct-Multi-Session-ID
51.....Acct-Link-Count
52.....Acct-Input-Gigawords
53.....Acct-Output-Gigawords
60.....Chap-Challenge
61.....Nas-Port-Type
62.....Port-Limit
63.....Login-Lat-Port
64.....Tunnel-Type
65.....Tunnel-Medium-Type
66.....Tunnel-Client-EndPoint
67.....Tunnel-Service-EndPoint
79.....eap msg
80.....Message-Authenticator
81.....group id
85.....Acct-Interim-Interval
87.....Nas-Port-Id
89.....cui
95.....Nas-Ipv6-Addr
96.....Framed-Interface-Id
97.....Framed-Ipv6-Prefix
98.....Login-Ipv6-Host
99.....Framed-Ipv6-Route
100.....Framed-Ipv6-Pool
168.....Framed-Ipv6-Addr

```

**Platform**

N/A

**Description**

## 2.24 show radius auth statistics

Use this command to display RADIUS authentication statistics.

**show radius auth statistics****Parameter  
Description**

Parameter	Description
N/A	N/A

**Defaults**

N/A

**Command  
Mode**

Global configuration mode/Privileged EXEC mode/Interface configuration mode

**Usage Guide**

N/A

**Configuration** The following example displays RADIUS authentication statistics.**Examples**

```
Ruijie#show radius auth statistics
Authentication Servers:

Server Index..... 1
Server Address..... 192.168.1.1
Server Port..... 1812
Msg Round Trip Time..... 0 (msec)
First Requests..... 0
Retry Requests..... 0
Accept Responses..... 0
Reject Responses..... 0
Challenge Responses..... 0
Malformed Msgs..... 0
Bad Authenticator Msgs..... 0
Pending Requests..... 0
Timeout Requests..... 0
Unknowntype Msgs..... 0
Other Drops..... 0
```

**Related  
Commands**

Command	Description
N/A	N/A

**Platform**

N/A

**Description**

## 2.25 show radius group

Use this command to display RADIUS server group configuration.

**show radius group**

Parameter Description	Parameter	Description
	N/A	N/A

**Defaults** N/A

**Command Mode** Global configuration mode/Privileged EXEC mode/Interface configuration mode

**Usage Guide** N/A

**Configuration** The following example displays RADIUS server group configuration.

**Examples**

```
Ruijie#show radius group
=====Radius group radius=====
Vrf:not-set
Server:192.168.1.1
  Server key:ruijie
  Authentication port:1812
  Accounting port:1813
  State:Active
```

 XS-S1960-H series do not support the VRF parameter. The above example is for reference purpose. Please take the actual device as standard.

Related Commands	Command	Description
	N/A	N/A

**Platform** N/A  
**Description**

## 2.26 show radius parameter

Use this command to display global RADIUS server parameters.

**show radius parameter**

Parameter Description	Parameter	Description
	N/A	N/A

**Defaults** N/A

**Command** Global configuration mode/Privileged EXEC mode/Interface configuration mode  
**Mode**

**Usage Guide** N/A

**Configuration** The following example displays global RADIUS server parameters.

**Examples**

```
Ruijie# show radius parameter
Server Timeout: 5 Seconds
Server Deadtime: 0 Minutes
Server Retries: 3
Server Dead Criteria:
Time: 10 Seconds
Tries: 10
```

**Related  
Commands**

Command	Description
N/A	N/A

**Platform** N/A  
**Description**

## 2.27 show radius server

Use this command to display the configuration of the RADIUS server.

**show radius server**

**Parameter  
Description**

Parameter	Description
N/A	N/A

**Defaults** N/A

**Command** Privileged EXEC mode  
**Mode**

**Usage Guide** N/A

**Configuration** The following example displays the configuration of the RADIUS server.

**Examples**

```
Ruijie# show radius server
Server IP: 192.168.4.12
Accounting Port: 23
Authen Port: 77
Test Username: viven
Test Idle Time: 10 Minutes
```

```

Test Ports:      Authen
Server State:    Active
    Current duration 765s, previous duration 0s
Dead: total time 0s, count 0
Statistics:
Authen: request 15, timeouts 1
Author: request 0, timeouts 0
Account: request 0, timeouts 0

Server IP:      192.168.4.13
Accounting Port: 45
Authen Port:    74
Test Username:  <Not Configured>
Test Idle Time: 60 Minutes
Test Ports:     Authen and Accounting
Server State:    Active
    Current duration 765s, previous duration 0s
Dead: total time 0s, count 0
Statistics:
Authen: request 0, timeouts 0
Author: request 0, timeouts 0
Account: request 20, timeouts 0

```

#### Related Commands

Command	Description
<b>radius-server host</b>	Defines the RADIUS security server.
<b>radius-server retransmit</b>	Defines the number of RADIUS packet retransmissions.
<b>radius-server key</b>	Defines a shared password for the RADIUS server.
<b>radius-server timeout</b>	Defines the packet transmission timeout.

**Platform** N/A

**Description**

## 2.28 show radius vendor-specific

Use this command to display the configuration of the private vendors.

**show radius vendor-specific**

#### Parameter Description

Parameter	Description
N/A	N/A

**Defaults** N/A

**Command Mode** Privileged EXEC mode

**Usage Guide** N/A

**Configuration** The following example displays the configuration of the private vendors.

**Examples**

```
Ruijie#show radius vendor-specific
id      vendor-specific      type-value
-----
1       max-down-rate        1
2       port-priority        2
3       user-ip              3
4       vlan-id              4
5       last-supPLICANT-vers 5
        ion
6       net-ip               6
7       user-name            7
8       password             8
9       file-directory        9
10      file-count           10
11      file-name-0          11
12      file-name-1          12
13      file-name-2          13
14      file-name-3          14
15      file-name-4          15
16      max-up-rate          16
17      current-supPLICANT-version 17
18      flux-max-high32      18
19      flux-max-low32       19
20      proxy-avoid          20
21      dialup-avoid         21
22      ip-privilege         22
23      login-privilege      42
26      ipv6-multicast-addre 79
        ss
27      ipv4-multicast-addre 87
        ss
```

**Related  
Commands**

Command	Description
<b>radius-server host</b>	Defines the RADIUS security server.
<b>radius-server retransmit</b>	Defines the number of RADIUS packet

	retransmissions.
<b>radius-server key</b>	Defines a shared password for the RADIUS server.
<b>radius-server timeout</b>	Defines the packet transmission timeout.

**Platform** N/A

**Description**



## 3 TACACS+ Commands

### 3.1 aaa group server tacacs+

Use this command to configure different groups of TACACS+ server hosts.

Use the **no** form of this command to remove a specified TACACS server group.

**aaa group server tacacs+ group\_name**

**no aaa group server tacacs+ group\_name**

#### Parameter Description

Parameter	Description
<i>group_name</i>	TACACS+ server group name, which cannot be <b>radius</b> or <b>tacacs+</b> . The two names are the built-in group name.

**Defaults** No TACACS+ server group is configured.

**Command Mode** Global configuration mode

**Usage Guide** After you group different TACACS+ servers, the tasks of authentication, authorization and accounting can be implemented by different server groups.

**Configuration Examples** The following example configures a TACACS+ server group named tac1, and configures a TACACS+ server with IP address 1.1.1.1 in this group:

```
Ruijie(config)#aaa group server tacacs+ tac1
Ruijie(config-gs-tacacs+)# server 1.1.1.1
```

#### Related Commands

Command	Description
<b>server</b>	Configures server list of TACACS+ server group.

**Platform** N/A

**Description**

### 3.2 ip tacacs source-interface

Use this command to use the IP address of a specified interface for all outgoing TACACS+ packets.

Use the **no** form of this command to disable use of the specified interface IP address.

**ip tacacs source-interface interface-name**

**no ip tacacs source-interface interface-name**

<b>Parameter Description</b>	<b>Parameter</b>	<b>Description</b>
	<i>interface-name</i>	Interface for the outgoing TACACS+ packets
<b>Defaults</b>	The source IP address of TACACS+ packets is set on the network layer.	
<b>Command Mode</b>	Global configuration mode	
<b>Usage Guide</b>	<p>To decrease the work of maintaining massive NAS messages in TACACS+ server, use this command to use the IP address of a specified interface for all outgoing TACACS+ packets.</p> <p>This command specifies the primary IP address of the specified interface as the source address of TACACS+ packets on Layer 3 devices.</p>	
<b>Configuration Examples</b>	<p>The following example specifies the IP address of GigabitEthernet 0/0 for the outgoing TACACS+ packets.</p> <pre>Ruijie(config)# ip tacacs source-interface gigabitEthernet 0/0</pre>	
<b>Related Commands</b>	<b>Command</b>	<b>Description</b>
	<b>tacacs-server host</b>	Defines a TACACS+ server.
	<b>ip address</b>	Configures the IP address of an interface.
<b>Platform</b>	N/A	
<b>Description</b>		

### 3.3 server

Use this command to configure the IP address of the TACACS+ server for the group server.

Use the **no** form of this command to remove the TACACS+ server.

**server** { *ipv4-address* | *ipv6-address* }

**no server** { *ipv4-address* | *ipv6-address* }

<b>Parameter Description</b>	<b>Parameter</b>	<b>Description</b>
	<i>ipv4-address</i>	IPv4 address of the TACACS+ server
	<i>ipv6-address</i>	IPv6 address of the TACACS+ server
<b>Defaults</b>	No TACACS+ server is configured by default.	
<b>Command Mode</b>	TACACS+ server group configuration mode	

**Usage Guide** You must configure the **aaa group server tacacs+** command before configuring this command. To configure server address in TACACS+ group server, you must use the **tacacs-server host** command in global configuration mode. If there is no response from the first host entry, the next host entry is tried.

**Configuration Examples** The following example configures a TACACS+ server group named tac1 and a TACACS+ server address 1.1.1.1 in this group.

```
Ruijie(config)#aaa group server tacacs+ tac1
Ruijie(config-gs-tacacs+)# server 1.1.1.1
```

**Related Commands**

Command	Description
<b>aaa group server tacacs+</b>	Configures a TACACS+ server group.

**Platform** N/A  
**Description**

## 3.4 show tacacs

Use this command to display the TACACS+ server configuration.

**show tacacs**

**Parameter Description**

Parameter	Description
N/A	N/A

**Defaults** N/A

**Command Mode** Privileged EXEC mode/Global configuration/Interface configuration mode

**Usage Guide** N/A

**Configuration Examples** The following example displays the TACACS+ server configuration.

```
Ruijie# show tacacs
Tacacs+ Server : 172.19.192.80/49
Socket Opens: 0
Socket Closes: 0
Total Packets Sent: 0
Total Packets Recv: 0
Reference Count: 0
```

**Related**

Command	Description
---------	-------------

Commands		
	<b>tacacs-server host</b>	Defines a TACACS+ secure server host.

**Platform** N/A

**Description**

### 3.5 tacacs-server host

Use this command to configure a TACACS+ host.

Use the **no** form of this command to remove the TACACS+ host.

**tacacs-server host** { *ipv4-address* | *ipv6-address* } [ **port** *integer* ] [ **timeout** *integer* ] [ **key** [ **0** | **7** ] *text-string* ]

**no tacacs-server host** { *ip-address* | *ipv6-address* }

Parameter Description	Parameter	Description
	<i>ip-address</i>	IPv4 address of the TACACS+ host
	<i>ipv6-address</i>	IPv6 address of the TACACS+ host
	<b>port</b> <i>integer</i>	Port number of the server. The range is from 1 to 65,535. The default is 49.
	<b>timeout</b> <i>integer</i>	Timeout time of TACACS+ host. The range is from 1 to 1,000.
	<b>key</b> <i>string</i>	Configures an authentication and encryption key. The value can be 0 or 7.  0 indicates no encryption, while 7 indicates simple encryption. The default is 0.

**Defaults** No TACACS+ host is specified by default.

**Command Mode** Global configuration mode

**Usage Guide** The TACACS+ host must be configured to implement AAA security service. You can use this command to configure one or multiple TACACS+ hosts.

**Configuration Examples** The following example configures a TACACS+ host.

**Examples** Ruijie(config)# tacacs-server host 192.168.12.1

Related Commands	Command	Description
	N/A	N/A

**Platform** N/A

**Description**

### 3.6 tacacs-server key

Use this command to configure the authentication encryption key used for TACACS+ communications between the access server and the TACACS+ server.

Use the **no** form of this command to remove the authentication encryption key.

**tacacs-server key** [ 0 | 7 ] *string*

**no tacacs-server key**

**Parameter  
Description**

Parameter	Description
<i>string</i>	Key string
<b>0   7</b>	Encryption type of key 0 indicates no encryption; 7 indicate simple encryption.

**Defaults** No authentication encryption key is configured by default.

**Command  
Mode** Global configuration mode

**Usage Guide** Use command to configure a global authentication and encryption key for TACACS+ communication.  
Use the **key** parameter in the **tacacs-server host** command to configure a server-based key.

**Configuration** The following example defines the authentication encryption key of TACACS+ server as aaa:

**Examples** Ruijie(config)# tacacs-server key aaa

**Related  
Commands**

Command	Description
<b>tacacs-server host</b>	Defines a TACACS+ host.

**Platform  
Description** N/A

### 3.7 tacacs-server timeout

Use this command to set the interval for which the server waits for a server host to reply. Use the **no** form of this command to restore the default timeout interval.

**tacacs-server timeout** *seconds*

**no tacacs-server timeout**

<b>Parameter Description</b>	Parameter	Description
	<i>seconds</i>	Timeout interval in the range from 1 to 1,000 in the unit of seconds
<b>Defaults</b>	The default is 5 seconds.	
<b>Command Mode</b>	Global configuration mode	
<b>Usage Guide</b>	Use command to configure a global timeout interval. Use the <b>timeout</b> parameter in the <b>tacacs-server host</b> command to configure a server-based interval.	
<b>Configuration Examples</b>	The following example configures the timeout interval to 10 seconds.	
	<pre>Ruijie(config)# tacacs-server timeout 10</pre>	
<b>Related Commands</b>	Command	Description
	<b>tacacs-server host</b>	Defines a TACACS+ secure server host.
<b>Platform Description</b>	N/A	

## 4 802.1X Commands

### 4.1 aaa authorization ip-auth-mode

Use this command to set the IP authorization mode.

**aaa authorization ip-auth-mode { disable | supplicant | radius-server | dhcp-server | mixed }**

Parameter	Parameter	Description
Description	<b>disable</b>	Disables IP authorization mode.
	<b>supplicant</b>	Enables supplicant authorization mode.
	<b>radius-server</b>	Enables Radius server authorization mode.
	<b>dhcp-server</b>	Enables DHCP server authorization mode.
	<b>mixed</b>	Enables mixed authorization mode.

**Defaults** IP authorization mode is disabled by default.

**Command mode** Global configuration mode

#### Usage Guide

Supplicant authorization mode supports only Ruijie supplicant.

Radius-server authorization mode requires the server to allocate IP addresses by framed-ip.

DHCP-server authorization mode requires the server to enable DHCP snooping or DHCP relay.

Mixed authorization mode supports multiple authorization methods.

**Configuration** The following example enables supplicant authentication mode.

**Examples**

```
Ruijie(config)# aaa authorization ip-auth-mode supplicant
```

Related Commands	Command	Description
	<b>show running-config</b>	Displays the IP authentication mode.

**Platform** N/A

**Description**

### 4.2 clear dot1x user all

Use this command to clear all the 802.1X authentication users.

**clear dot1x user all**

Parameter	Parameter	Description
Description	N/A	N/A

**Defaults** N/A

**Command Mode** Privileged EXEC mode

**Usage Guide** Use this command to clear all the 802.1X authentication users.

**Configuration** The following example clears all the 802.1X authentication users.

**Examples** Ruijie#clear dot1x user all

Related	Command	Description
Commands	N/A	N/A

**Platform Description** N/A

### 4.3 clear dot1x user id

Use this command to clear 802.1X authentication users according to session IDs.

**clear dot1x user id** *session-id*

Parameter	Parameter	Description
Description	<i>session-id</i>	Session ID

**Defaults** N/A

**Command Mode** Privileged EXEC mode

**Usage Guide** Use this command to clear 802.1X authentication users according to session IDs.

**Configuration** The following example clears an 802.1X authentication user whose session ID is 12345678.

**Examples** Ruijie#clear dot1x user id 12345678

Related	Command	Description
Commands	N/A	N/A

**Platform Description** N/A



## 4.4 clear dot1x user mac

Use this command to clear 802.1X authentication users according to MAC addresses.

**clear dot1x user mac** *mac-addr*

Parameter	Parameter	Description
Description	<i>mac-addr</i>	MAC address

**Defaults** N/A

**Command Mode** Privileged EXEC mode

**Usage Guide** Use this command to clear 802.1X authentication users according to MAC addresses.

**Configuration Examples** The following example clears an 802.1X authentication user whose MAC address is 0012.3456.789A.

```
Ruijie#clear dot1x user mac 0012.3456.789A
```

Related Commands	Command	Description
	N/A	N/A

**Platform** N/A

**Description**

## 4.5 clear dot1x user name

Use this command to clear the 802.1 X authentication users according to the username.

**clear dot1x user name** *name-str*

Parameter	Parameter	Description
Description	<i>name-str</i>	The username of the 802.1X authentication user

**Defaults** N/A

**Command Mode** Privileged EXEC mode

**Usage Guide** Use this command to clear the 802.1 X authentication users according to the username.

**Configuration Examples** The following example clears the 802.1X authentication user named 802.1X-user.

```
Ruijie#clear dot1x user name dot1x-user
```

Related Commands	Command	Description
	N/A	N/A

**Platform** N/A

**Description**

## 4.6 dot1x accounting

Use this command to configure the accounting list.

**dot1x accounting** *list-name*

Parameter	Parameter	Description
Description	<i>list-name</i>	The name of the accounting list

**Defaults** N/A

**Command Mode** Privileged EXEC mode

**Usage Guide** If AAA does not adopts 802.1X accounting as the default accounting method. Use this command to configure the 802.1X accounting method.

**Configuration Examples** The following example configures the accounting list.

```
Ruijie(config)# dot1x accounting dot1x-acct
```

Related Commands	Command	Description
	N/A	N/A

**Platform** N/A

**Description**

## 4.7 dot1x auth-address-table address

Use this command to configure the authentication address table.

**dot1x auth-address-table address** *mac-addr* **interface** *interface*

Parameter	Parameter	Description
Description	<i>mac-addr</i>	The MAC address of the authentication host
	<i>interface</i>	The interface of the authentication host

**Defaults** N/A

**Command Mode** Global configuration mode

**Usage Guide** Only the specified interface with the specified MAC address is able to pass the 802.1x authentication.

**Configuration** The following example configures the authentication address table.

**Examples**

```
Ruijie(config)# dot1x auth-address-table 00d0.f800.0cb2 interface  
fastethernet 0/1
```

Related Commands	Command	Description
	N/A	N/A

**Platform** N/A

**Description**

## 4.8 dot1x authentication

Use this command to configure the authentication method list.

**dot1x authentication** *list-name*

Parameter Description	Parameter	Description
	<i>list-name</i>	Authentication method list

**Defaults** N/A

**Command  
Mode** Global configuration mode

**Usage Guide** If AAA does not adopt the default 802.1X authentication, use this command to configure the 802.1X authentication method.  
Configuration in WLAN security configuration mode is prior to that in global configuration mode.

**Configuration** The following example configures the authentication method list

**Examples**

```
Ruijie(config)# dot1x authentication dot1x-authen
```

Related Commands	Command	Description
	N/A	N/A

**Platform** N/A

**Description**

## 4.9 dot1x auth-fail max-attempt

Use this command to set the maximum auth-attempts.

Use the **no** form of this command to restore the default setting.

**dot1x auth-fail max-attempt** *value*  
**no dot1x auth-fail max-attempt**

Parameter	Parameter	Description
Description	<i>value</i>	The maximum auth-attempts

**Defaults** The default is 3.

**Command Mode** Global configuration mode

**Usage Guide** Use the **show dot1x** command to adjust the maximum authentication attempts for those failed users.

**Configuration** The following example sets the maximum auth-attempts to 2.

**Examples**  

```
Ruijie(config)# dot1x auth-fail max-attempt 2
```

Related Commands	Command	Description
	<b>show dot1x</b>	Displays the 802.1x configuration.

**Platform Description** N/A

## 4.10 dot1x auth-fail vlan

Use this command to enable the auth-fail VLAN.

Use the **no** form of this command to restore the default setting.

**dot1x auth-fail vlan** *vlan-id*  
**no dot1x auth-fail vlan**

Parameter	Parameter	Description
Description	<i>vlan-id</i>	Auth-fail VLAN ID

**Defaults** No auth-fail VLAN is enabled by default.

**Command Mode** Interface configuration mode

**Usage Guide** Use this command to allow auth-fail users to access network by joining in a VLAN.

**Configuration** The following example enables the auth-fail VLAN.

**Examples**  

```
Ruijie(config-if)# dot1x auth-fail vlan 30
```

Related Commands	Command	Description
	<b>show dot1x interface</b>	Displays the 802.1X configurations on the interface.

**Platform** N/A

**Description**

## 4.11 dot1x auth-mode

Use this command to specify the 802.1X authentication mode.

**dot1x auth-mode { eap | chap | pap }**

Parameter Description	Parameter	Description
	<b>eap</b>	Enables EAP-MD5 authentication mode.
	<b>chap</b>	Enables CHAP authentication mode.
	<b>pap</b>	Enables PAP authentication mode.

**Defaults** The default is EAP-MD5 authentication mode.

**Command Mode** Global configuration mode

**Usage Guide** The selection of authentication mode depends on the suppliant and portal server.

**Configuration Examples** The following example enables CHAP authentication mode.

```
Ruijie(config)# dot1x auth-mode chap
```

Related Commands	Command	Description
	<b>show dot1x</b>	Displays the 802.1X information.

**Platform** N/A

**Description**

## 4.12 dot1x auth-with-order

Use this command to set the order and precedence for authentication.

**dot1x auth-with-order**

Parameter Description	Parameter	Description
	N/A	N/A

**Defaults** N/A

**Command** Interface configuration mode

**Mode**

**Usage Guide** With this command executed, MAB authentication is initiated after 802.1X authentication fails. Meanwhile, MAB authentication takes precedence over 802.1X authentication.

**Configuration** The following example sets the order and precedence for authentication.

**Examples** Ruijie(config-if) # dot1x auth-with-order

Related	Command	Description
Commands	N/A	N/A

**Platform** N/A

**Description**

## 4.13 dot1x auto-req

Use this command to configure auto-request 802.1X authentication.

Use the **no** form of this command to restore the default setting.

**dot1x auto-req**

**no dot1x auto-req**

Parameter	Parameter	Description
Description	N/A	N/A

**Defaults** This function is disabled by default.

**Command** Global configuration mode  
**Mode**

**Usage Guide** Enable this function for MAB. If the authentication agent is already in the terminal system, enable it by clicking.

**Configuration** The following example enables auto-request 802.1X authentication.

**Examples** Ruijie(config) # dot1x auto-req

Related	Command	Description
Commands	show dot1x auto-req	Displays the automatic authentication request information.

**Platform** N/A

**Description**

## 4.14 dot1x auto-req packet-num

Use this command to set the number of auto-request authentication packets.

**dot1x auto-req packet-num** *num*

Parameter	Parameter	Description
Description	<i>num</i>	The number of auto-request authentication packets in the range from 0 to 1,000,000

**Defaults** The default is 0.

**Command Mode** N/A

**Usage Guide** N/A

**Configuration Examples** The following example sets the number of auto-request authentication packets to 100.

```
Ruijie(config)# dot1x auto-req packet-num 100
```

Related Commands	Command	Description
	<b>show dot1x auto-req</b>	Displays the authentication request information.

**Platform Description** N/A

## 4.15 dot1x auto-req req-interval

Use this command to set the auto-request authentication interval.

Use the **no** form of this command to restore the default setting.

**dot1x auto-req req-interval** *time*

**no dot1x auto-req req-interval**

Parameter	Parameter	Description
Description	<i>time</i>	The auto-request authentication interval, in the range from 10 to 3,600 in the unit of seconds

**Defaults** The default is 30 seconds.

**Command Mode** Global configuration mode

**Usage Guide** N/A

**Configuration** The following example sets the auto-request authentication interval to 50 seconds.

**Examples**

```
Ruijie(config)# dot1x auto-req req-interval 50
```

**Related****Commands**

Command	Description
<b>show dot1x auto-req</b>	Displays the authentication request information.

**Platform**

N/A

**Description**

## 4.16 dot1x auto-req user-detect

Use this command to enable online user detection for auto-request authentication.

Use the **no** form of this command to disable online user detection for auto-request authentication.

**dot1x auto-req user-detect**

**no dot1x auto-req user-detect**

**Parameter****Description**

Parameter	Description
N/A	N/A

**Defaults**

This function is enabled by default.

**Command**

Global configuration mode

**Mode****Usage Guide**

N/A

**Configuration**

The following example enables online user detection for auto-request authentication.

**Examples**

```
Ruijie(config)# dot1x auto-req user-detect
```

**Related****Commands**

Command	Description
<b>show dot1x auto-req</b>	Displays the authentication request information.

**Platform**

N/A

**Description**

## 4.17 dot1x client-probe enable

Use this command to enable online user probe function.

Use the **no** form of this command to restore the default setting.

**dot1x client-probe enable**

**no dot1x client-probe enable**



Parameter	Parameter	Description
Description	N/A	N/A
Defaults	This function is disabled by default.	
Command Mode	Global configuration mode	
Usage Guide	Use this command to enable online user probe function.	
Configuration Examples	The following example enables online user probe function. <pre>Ruijie(config)# dot1x client-probe enable</pre>	
Related Commands	Command	Description
	show dot1x	Displays 802.1X configuration.
Platform	N/A	
Description		

## 4.18 dot1x critical

Use this command to enable the server IAB (Inaccessible Authentication Bypass) on the port.

Use the **no** form of this command to restore the default setting.

**dot1x critical**

**no dot1x critical**

Parameter	Parameter	Description
Description	N/A	N/A
Defaults	This functions is disabled by default.	
Command Mode	Interface configuration mode	
Usage Guide	With the IAB function enabled on the port, if there is only RADIUS authentication method in the 802.1X authentication method list and all RADIUS servers in this method list take no effect, the switch will set the network accessing authority for users by the IAB method, and send the EAPOL-SUCCESS packets to the users.	
Configuration Examples	The following example enables the server IAB (Inaccessible Authentication Bypass) function on the port. <pre>Ruijie(config-if-GigabitEthernet 0/5)#dot1x critical</pre>	

Related Commands	Command	Description
	N/A	N/A

**Platform** N/A  
**Description**

## 4.19 dot1x critical recovery action reinitialize

Use this command to allow IAB users under the port to reinitialize authentication when the server has recovered.

Use the **no** form of this command to restore the default setting.

**dot1x critical recovery action reinitialize**

**no dot1x critical recovery action reinitialize**

Parameter Description	Parameter	Description
	N/A	N/A

**Defaults** This function is disabled by default.

**Command Mode** Interface configuration mode

**Usage Guide** After the port entering the inaccessible authentication bypass status, if the RADIUS server returns to normal, you need to reinitialize the authentication for all users that have accomplished the network access authorization through the inaccessible authentication bypass on ports in order to ensure the user legality.

**Configuration Examples** The following example allows IAB users under the port to reinitialize authentication when the server has recovered.

```
Ruijie(config-if-GigabitEthernet 0/5)#dot1x critical recovery action  
reinitialize
```

Related Commands	Command	Description
	N/A	N/A

**Platform** N/A  
**Description**

## 4.20 dot1x critical vlan

Use this command to configure the port in IAB status to jump to a specified auth-fail VLAN.

Use the **no** form of this command to disable this function.

**dot1x critical vlan**

**no dot1x critical vlan**

Parameter	Parameter	Description
Description	N/A	N/A

**Defaults** This function is disabled by default.

**Command Mode** Interface configuration mode

**Usage Guide** With this function enabled, if no user authentication is performed on the ports initially, after all RADIUS servers are invalidated, the user will initiate the authentication and the port will enter the IAB status and to be added to the VLAN configured. If this function is disabled, the VLAN of the port is not changed when the port is in the IAB status.

**Configuration Examples**

```
Ruijie(config-if-GigabitEthernet 0/5)#dot1x critical vlan 10
```

Related Commands	Command	Description
	N/A	N/A

**Platform Description** N/A

## 4.21 dot1x dbg-filter

Use this command to enable debug information print for a user with a specified MAC address.

Use the **no** form of this command to clear the debug information.

**dot1x dbg-filter H.H.H**

**no dot1x dbg-filter H.H.H**

Parameter	Parameter	Description
Description	H.H.H	The MAC address of a user

**Defaults** Debug information of all authentication users is printed by default.

**Command mode** Global configuration mode

**Usage Guide** Use this command to print the debug information of a specific user. If you want to locate the fault on the network where there are multiple users.

**Configuration Examples** The following example prints the debug information of the device with the specified MAC address.

```
Ruijie(config)# dot1x dbg-filter 00d0.f800.0001
```

Related	Command	Description
Commands	N/A	N/A

Platform N/A  
Description

## 4.22 dot1x default

Use this command to restore 802.1X configuration to the default setting.

**dot1x default**

Parameter	Parameter	Description
Description	N/A	N/A

Defaults N/A

Command Global configuration mode  
Mode

**Usage Guide** This command is used to restore 802.1X configuration for quick re-configuration.

**Configuration** The following example restores 802.1X configuration to the default setting.

**Examples**  

```
Ruijie(config)# dot1x default
```

Related	Command	Description
Commands	<b>show dot1x</b>	Displays the 802.1X information.

Platform N/A  
Description

## 4.23 dot1x default-user-limit

Use this command to set the maximum auth-user number on controlled interfaces.

Use the **no** form of this command to restore the default setting.

**dot1x default-user-limit** *num*

**no dot1x default-user-limit**

Parameter	Parameter	Description
Description	<i>num</i>	The maximum auth-user number allowed by a controlled interface, in the range from 1 to 1,000,000

**Defaults** By default, no limit is set for the auth-user number.

**Command mode** Interface configuration mode

**Usage Guide** This command is used to limit the number of users to be authenticated on a specific port.

**Configuration** The following example sets the maximum auth-user number on a controlled interface.

**Examples** Ruijie(config-if)# dot1x default-user-limit 10

Related Commands	Command	Description
	<b>show dot1x port-control interface fastEthernet 0/10</b>	Displays the number of users allowed by a specific 802.1X interface.
	<b>show dot1x port-control interface fastEthernet 0/10</b>	Displays the number of users allowed by a specific 802.1X interface.

**Platform** N/A

**Description**

## 4.24 dot1x dynamic-vlan enable

Use this command to enable dynamic VLAN.

Use the **no** form of this command to disable the function.

**dot1x dynamic-vlan enable**

**no dot1x dynamic-vlan enable**

Parameter	Parameter	Description
<b>Description</b>	N/A	N/A

**Defaults** Dynamic VLAN is disabled by default.

**Command Mode** Interface configuration mode

**Usage Guide** This command is used to assign VLANs to authenticated users dynamically.

**Configuration** The following example enables dynamic VLAN.

**Examples** Ruijie(config-if)# dot1x dynamic-vlan enable

Related Commands	Command	Description
	<b>show dot1x</b>	Displays the information about 802.1X.

**Platform** N/A  
**Description**

## 4.25 dot1x guest-vlan

Use this command to configure the guest VLAN for port-control.

Use the **no** form of the command to disable the function.

**dot1x guest-vlan**

**no dot1x guest-vlan**

Parameter	Parameter	Description
Description	N/A	N/A

**Defaults** The guest VLAN is not configured by default.

**Command Mode** Interface configuration mode

**Usage Guide** Before using guest VLAN, you need to execute **dot1x dynamic-vlan enable** command first, or the configured guest VLAN does not take effect.  
When configuring guest VLAN, it is recommended not to modify L2 attribute of the port, especially not to add the port to a VLAN manually.

**Configuration Examples** The following example configures VLAN 20 as 802.1X guest VLAN.

```
Ruijie(config-if)# dot1x guest-vlan 20
```

Related Commands	Command	Description
	<b>show running-config</b>	Displays the 802.1X configuration.

**Platform** N/A  
**Description**

## 4.26 dot1x mac-auth-bypass

Use this command to configure single MAB authentication.

Use the **no** form of this command to restore the default setting.

**dot1x mac-auth-bypass**

**no dot1x mac-auth-bypass**

Parameter	Parameter	Description
Description	N/A	N/A

**Defaults** This function is disabled by default.

**Command** Interface configuration mode  
**Mode**

**Usage Guide** Use this command on a single dumb terminal.

**Configuration** The following example configures single MAB authentication.

**Examples** Ruijie(config-if-GigabitEthernet 0/0)# dot1x mac-auth-bypass

Related Commands	Command	Description
	show dot1x port-control interface	Displays the information about 802.1X on the interface.

**Platform** N/A  
**Description**

## 4.27 dot1x mac-auth-bypass multi-user

Use this command to configure multiple MAB authentications.

Use the **no** form of this command to restore the default setting.

**dot1x mac-auth-bypass multi-user**

**no dot1x mac-auth-bypass multi-user**

Parameter	Parameter	Description
Description	N/A	N/A

**Defaults** This function is disabled by default.

**Command** Interface configuration mode  
**Mode**

**Usage Guide** Use this command when the interface is connected with multiple dumb terminals.

**Configuration** The following example configures multiple MAB authentications.

**Examples** Ruijie(config-if-GigabitEthernet 0/0)# dot1x mac-auth-bypass multi-user

Related Commands	Command	Description
	N/A	N/A

**Platform** N/A  
**Description**

## 4.28 dot1x mac-auth-bypass timeout-activity

Use this command to set the MAB authentication timeout interval.

**dot1x mac-auth-bypass timeout-activity** *time*

**no dot1x mac-auth-bypass timeout-activity**

Parameter	Parameter	Description
Description	<i>time</i>	The online time, in the range from 1 to 65,535 in the unit of seconds

**Defaults** The default is 0 second.

**Command Mode** Interface configuration mode

**Usage Guide** Use this command to set the MAB authentication timeout interval for dumb terminals.

**Configuration** The following example sets the MAB authentication timeout interval.

**Examples**

```
Ruijie(config-if-GigabitEthernet 0/0)# dot1x mac-auth-bypass  
timeout-activity 3600
```

Related Commands	Command	Description
	<b>show dot1x port-control interface</b>	Displays the 802.1X information.
	<b>show dot1x port-control interface</b>	Displays the 802.1X information.

**Platform** N/A

**Description**

## 4.29 dot1x mac-auth-bypass violation

Use this command to configure the MAB violation.

Use the **no** form of this command to restore the default setting.

**dot1x mac-auth-bypass violation**

**no dot1x mac-auth-bypass violation**

Parameter	Parameter	Description
Description	N/A	N/A

**Defaults** This function is disabled by default.

**Command Mode** Interface configuration mode



**Usage Guide** This command is used to configure the MAB violation on the port with only one dumb terminal in single MAB environment.

**Configuration** The following example configures the MAB violation.

**Examples**

```
Ruijie(config-if-GigabitEthernet 0/0)# dot1x mac-auth-bypass violation
```

Related Commands	Command	Description
	<b>show dot1x port-control interface</b>	Displays the 802.1X information.
Platform	N/A	
Description		

## 4.30 dot1x mac-auth-bypass vlan

Use this command to configure the MAB VLAN function.

Use the **no** form of this command to restore the default setting.

**dot1x mac-auth-bypass vlan** *vlan-list*

**no dot1x mac-auth-bypass vlan** *vlan-list*

Parameter	Parameter	Description
Description	<i>vlan-list</i>	Configures the MAB VLANs.

**Defaults** This function is disabled by default.

**Command Mode** Interface configuration mode

**Usage Guide** Use this command to allow users within specified VLANs on the port to perform MAB authentication.

**Configuration** The following example configures MAB VLANs.

**Examples**

```
Ruijie(config-if-GigabitEthernet 0/0)# dot1x mac-auth-bypass vlan 5, 8-20
```

Related Commands	Command	Description
	N/A	N/A

Platform N/A

Description

## 4.31 dot1x max-req

Use this command to set the maximum attempts of authentication requests.

**dot1x max-req** *num*

Parameter	Parameter	Description
Description	<i>num</i>	Maximum attempts

**Defaults** The default is 3.

**Command Mode** Global configuration mode

**Usage Guide** Use the **show dot1x** command to display the 802.1X configuration.

**Configuration Examples** The following example sets the maximum attempts of authentication requests to 2.

```
Ruijie(config)# dot1x max-req 2
```

Related Commands	Command	Description
	<b>show dot1x</b>	Displays the information about 802.1X.

**Platform Description** N/A

## 4.32 dot1x multi-account enable

Use this command to enable the user with one single MAC address to perform authentication with multiple accounts.

Use the **no** form of this command to restore the default setting.

**dot1x multi-account enable**

**no dot1x multi-account enable**

Parameter	Parameter	Description
Description	N/A	N/A

**Defaults** This function is disabled by default.

**Command Mode** Global configuration mode

**Usage Guide** Use the command to enable the multiple-account authentication if you want to switch the username in the authentication or re-authentication, especially in the windows domain authentication.

**Configuration** The following example enables the multiple-account authentication.

**Examples**

```
Ruijie(config)# dot1x multi-account enable
```

Related Commands	Command	Description
	N/A	N/A

**Platform** N/A

**Description**

## 4.33 dot1x multi-mab quiet-period

Use this command to set the quiet time after the multiple MAB authentication failure.

**dot1x multi-mab quiet-period** *time*

Parameter Description	Parameter	Description
	<i>time</i>	Sets the quiet period after the multiple MAB authentication failure, in the range from 0 to 65,535 in the unit of seconds.

**Defaults** The default is 0 second, indicating no quiet period.

**Command Mode** Global configuration mode

**Usage Guide** The default setting is recommended.

**Configuration Examples** The following example sets the quiet period after the multiple MAB authentication failure to 2 seconds.

```
Ruijie(config)# dot1x multi-mab quiet-period 2
```

Related Commands	Command	Description
	N/A	N/A

**Platform** N/A

**Description**

## 4.34 dot1x port-control auto

Use this command to configure the 802.1X authentication on the port.

Use the **no** form of this command to restore the default setting.

**dot1x port-control auto**

**no dot1x port-control**

Parameter	Parameter	Description

<b>Description</b>	N/A	N/A
--------------------	-----	-----

**Defaults** This function is disabled by default.

**Command Mode** Interface configuration mode

**Usage Guide** Use the **show dot1x** command to display the 802.1X configuration.

**Configuration** The following example configures the 802.1X authentication on the port.

**Examples** Ruijie(config-if-GigabitEthernet 0/0)# dot1x port-control auto

Related Commands	Command	Description
	<b>show dot1x</b>	Displays the 802.1X information.

**Platform Description** N/A

## 4.35 dot1x port-control-mode

By default, 802.1x adopts MAC address-based control mode. In this mode, only authenticated users have access to the network, while other users that connect to the same port cannot access the network. In the port-based control mode, however, if one user that connects to the port passes the authentication, this port becomes an authenticated port and all the users that connect to this port have access to the network. In the port-based single-user control mode, the port is authenticated when it allows only one authenticated user who is enabled to use the network normally. If you find other users on the port, you should clear all the users on the port and re-authenticate. The authentication mode can be configured using the following commands

**dot1x port-control-mode { mac-based | port-based | port-based single-host}**  
**no dot1x port-control-mode**

Parameter Description	Parameter	Description
	<b>mac-based</b>	Enable the MAC address-based control.
	<b>port-based</b>	Enable port-based control.
	<b>port-based single-host</b>	Enable single host-based control.

**Defaults** MAC address-based access control is used by default.

**Command Mode** Interface configuration mode.

**Usage Guide** Use the **show dot1x port-control** command to show the 802.1X configuration for the port. Single-host is port-based single-user 802.1x access control. Use **show dot1x port-control** to display port-based and use **show running-config** to display dot1x port-control-mode port-based single-host.

Since single-host only supports the single-user form, setting default-user-limit on the port manually does not take effect in single-host mode. If you set default-user-limit on the port after setting single-host, only one user can be permitted to use the network still.

**Configuration Examples** The following example sets the port to participate in authentication and enable port-based authentication.

```
Ruijie(config-if-GigabitEthernet 0/0)# dot1x port-control-mode port-based
```

Related Commands	Command	Description
	<b>show dot1x port-control</b>	Displays the port control mode.
	<b>show running-config</b>	Displays the configuration.

**Platform** N/A

**Description**

## 4.36 dot1x private-supPLICANT-only

Use this command to filter non-Ruijie clients.

Use the **no** form of this command to restore the default setting.

**dot1x private-supPLICANT-only**

**no dot1x private-supPLICANT-only**

Parameter	Parameter	Description
<b>Description</b>	N/A	N/A

**Defaults** This function disabled by default.

**Command Mode** Global configuration mode

**Usage Guide** This command is used for authentication supporting only Ruijie clients.

**Configuration Examples** The following example filters non-Ruijie clients.

```
Ruijie(config)# dot1x private-supPLICANT-only
```

Related Commands	Command	Description
	<b>show dot1x private-supPLICANT-only</b>	Displays the information about the private supplicant.

**Platform** N/A

**Description**

## 4.37 dot1x probe-timer alive

Use this command to set the Ruijie terminal alive interval.

**dot1x probe-timer alive** *time*

Parameter	Parameter	Description
Description	<i>time</i>	Terminal alive interval, in the range from 1 to 65,535 in the unit of seconds

**Defaults** The default is 250 seconds.

**Command Mode** Global configuration mode

**Usage Guide** If the device does not receive the probe packet from the terminal when the terminal alive interval expires, the device is considered offline. The default setting is recommended.

**Configuration Examples** The following example sets Ruijie terminal alive interval to 120 seconds.

```
Ruijie(config)# dot1x probe-timer alive 120
```

Related Commands	Command	Description
	N/A	N/A

**Platform Description** N/A

## 4.38 dot1x probe-timer interval

Use this command to set the Ruijie terminal detection interval.

**dot1x probe-timer interval** *time*

Parameter	Parameter	Description
Description	<i>time</i>	Terminal detection interval in the range from 1 to 65,535 in the unit of seconds

**Defaults** The default is 20 seconds.

**Command Mode** Global configuration mode

**Usage Guide** The default setting is recommended.

**Configuration** The following example sets Ruijie terminal detection interval to 30 seconds.

**Examples** Ruijie(config)# dot1x probe-timer interval 30

Related Commands	Command	Description
	N/A	N/A

**Platform** N/A

**Description**

## 4.39 dot1x pseudo source-mac

Use this command to use a virtual MAC address as the source MAC address of the 802.1X packets sent by the device.

Use the **no** form of this command to disable the usage of a virtual MAC address as the source MAC address of the 802.1X packets sent by the device..

**dot1x pseudo source-mac**

**no dot1x pseudo source-mac**

Parameter Description	Parameter	Description
	N/A	N/A

**Defaults** This function is enabled by default.

**Command Mode** Global configuration mode

**Usage Guide** By default, the device uses its own MAC address as the source MAC address of the EAP packets for the 802.1X authentication. Some versions of the Ruijie supplicant judge whether the access device is a Ruijie device based on the source MAC address of the EAP packets. If the access device is a Ruijie device, the supplicant device performs some private features. Configure this command if you want to enable these features.

**Configuration Examples** The following example uses the virtual MAC address as the source MAC address of the 802.1X packets sent by the device:

```
Ruijie(config)# dot1x pseudo source-mac
```

Related Commands	Command	Description
	N/A	N/A

**Platform** N/A

**Description**

## 4.40 dot1x re-authentication

Use this command to enable timed re-authentication function.

Use the **no** form of the command to restore the default setting.

**dot1x re-authentication**

**no dot1x re-authentication**

Parameter	Parameter	Description
Description	N/A	N/A

**Defaults** This function is disabled by default.

**Command Mode** Global configuration mode

**Usage Guide** This command will re-authenticate the supplicant periodically after he passes the authentication. Use the **show dot1x** command to display 802.1X configuration. The default setting is recommended.

**Configuration Examples** The following example enables timed re-authentication function.

```
Ruijie(config)# dot1x re-authentication
```

Related Commands	Command	Description
	<b>show dot1x</b>	Displays the 802.1X information.

**Platform Description** N/A

## 4.41 dot1x reauth-max

Use this command to set the maximum re-auth attempts.

Use the **no** form of this command to restore the default setting.

**dot1x reauth-max num**

**no dot1x reauth-max**

Parameter	Parameter	Description
Description	<i>num</i> ,	Maximum re-auth attempts. The range is from 1 to 10.

**Defaults** The default is 3.

**Command Mode** Global configuration mode



**Usage Guide** Use this command to specify the maximum number of supplicant re-authentications. Use the **show dot1x** command to display 802.1X configuration.

**Configuration** The following example sets the maximum re-auth attempts to 2.

**Examples**

```
Ruijie(config)# dot1x reauth-max 2
```

Related Commands	Command	Description
	show dot1x	Displays the 802.1X information.

**Platform** N/A

**Description**

## 4.42 dot1x redirect

Use this command to enable the second generation SU upgrade function.

Use the **no** form of this command to restore the default setting.

**dot1x redirect**

**no dot1x redirect**

Parameter	Parameter	Description
Description	N/A	N/A

**Defaults** This function is disabled by default.

**Command Mode** Global configuration mode

**Usage Guide** Redirect to the supplicant software download website through the browser. See *Web Authentication Configuration Guide* for details about parameters.

**Configuration** The following example enables the second generation SU upgrade function,

**Examples**

```
Ruijie(config)# dot1x redirect
```

Related Commands	Command	Description
	N/A	N/A

**Platform** N/A

**Description**

## 4.43 dot1x timeout re-authperiod

Use this command to set the re-authentication interval when re-authentication is enabled.

**dot1x timeout re-authperiod** *time*

Parameter	Parameter	Description
Description	<i>time</i>	Authentication interval, in the range from 0 to 65,535 in the unit of seconds.

**Defaults** The default is 3,600 seconds.

**Command Mode** Global configuration mode

**Usage Guide** Use the **show dot1x** command to display the 802.1X configuration.

**Configuration** The following example sets the re-authentication interval to 2,400 seconds.

**Examples**

```
Ruijie(config)# dot1x timeout re-authperiod 2400
```

Related Commands	Command	Description
	<b>show dot1x</b>	Displays the information about 802.1X.

**Platform Description** N/A

## 4.44 dot1x timeout server-timeout

Use this command to set the server timeout interval.

**dot1x timeout server-timeout** *time*

Parameter	Parameter	Description
Description	<i>time</i>	The server timeout interval, in the range from 1 to 65,535 in the unit of seconds

**Defaults** The default is 5 seconds.

**Command Mode** Global configuration mode

**Usage Guide** By default, the timeout of the 802.1X server is less than that of the Radius server. Use this command to raise the 802.1X timeout so as to exceed the Radius value. For details, see *Configuration Guide*.

**Configuration** The following example set the server timeout interval to 10 seconds.

**Examples**

```
Ruijie(config)# dot1x timeout server-timeout 10
```

Related	Command	Description
---------	---------	-------------

<b>Commands</b>	<b>show dot1x</b>	Displays the 802.1X information.
-----------------	-------------------	----------------------------------

**Platform** N/A

**Description**

## 4.45 dot1x timeout supp-timeout

Use this command to set the authentication timeout between the device and the supplicant.

Use the **no** form of this command to restore the default setting.

**dot1x timeout supp-timeout** *time*

**no dot1x timeout supp-timeout**

Parameter	Parameter	Description
<b>Description</b>	<i>time</i>	Authentication timeout between the device and the supplicant The range is from 1 to 65,535 seconds.

**Defaults** The default is 3 seconds.

**Command Mode** Global configuration mode

**Usage Guide** Use the **show dot1x** command to show display 802.1X configuration.

**Configuration Examples** The following example sets the authentication timeout between the device and the supplicant to 10s:

```
Ruijie(config)# dot1x timeout supp-timeout 10
```

Related Commands	Command	Description
	<b>show dot1x</b>	Displays the information about 802.1x.

**Platform** N/A

**Description**

## 4.46 dot1x timeout tx-period

Use this command to set the request/id packet re-transmission interval.

**dot1x timeout tx-period** *time*

Parameter	Parameter	Description
<b>Description</b>	<i>time</i>	The request/id packet re-transmission interval, in range from 1 to 65,535 in the unit of seconds

**Defaults** The default is 3 seconds.

**Command** Global configuration mode  
**Mode**

**Usage Guide** Use the **show dot1x** command to display 802.1X configuration.

**Configuration** The following example sets the request/id packet re-transmission interval to 5 seconds.

**Examples**  

```
Ruijie(config)# dot1x timeout tx-period 5
```

Related Commands	Command	Description
	<b>show dot1x</b>	Displays the information about 802.1X.

**Platform** N/A  
**Description**

## 4.47 dot1x user-name compatible

Use this command to configure the compatibility function for H3C 802.1X authentication clients and authentication servers.

Use the **no** form of this command to restore the default setting.

**dot1x user-name compatible**

**no dot1x user-name compatible**

Parameter Description	Parameter	Description
	N/A	N/A

**Defaults** This function is disabled by default.

**Command Mode** Global configuration mode

**Usage Guide** Enable this function when the H3C authentication client and authentication server are used for 802.1X authentication or the H3C authentication server is used for MAB authentication.

**Configuration** The following example configures the compatibility function for H3C 802.1X authentication clients and authentication servers.

**Examples**  

```
Ruijie(config)# dot1x user-name compatible
```

**Platform** N/A  
**Description**

## 4.48 dot1x valid-ip-acct enable

Use this command to enable IP address-triggered accounting.

Use the **no** form of this command to restore the default setting.

**dot1x valid-ip-acct enable**

**no dot1x valid-ip-acct enable**

Parameter	Parameter	Description
Description	N/A	N/A

**Defaults** This function is disabled by default.

**Command Mode** Global configuration mode

**Usage Guide** Use this command to enable accounting only when users obtain valid IP addresses.

**Configuration** The following example enables IP address-triggered accounting.

**Examples** Ruijie(config)#dot1x valid-ip-acct enable

**Platform** N/A

**Description**

## 4.49 dot1x valid-ip-acct timeout

Use this command to configure IP address-triggered accounting timeout.

Use the **no** form of this command to restore the default setting.

**dot1x valid-ip-acct timeout** *time*

**no dot1x valid-ip-acct timeout**

Parameter	Parameter	Description
Description	<i>time</i>	IP address-triggered accounting timeout in the unit of minutes

**Defaults** The default is 5 minutes.

**Command Mode** Global configuration mode

**Usage Guide** The SNMP server will not start accounting until users obtain IP addresses. In this case, use this command to configure the IP address-triggered accounting timeout.

**Configuration** The following example configures IP address-triggered accounting timeout.

**Examples** Ruijie(config)# dot1x valid-ip-acct timeout 10

**Platform**  
**Description** N/A

## 4.50 dot1x system disable

Use this command to disable global 802.1x. Use the **no** form of this command to restore the default settings.

**dot1x system disable**

**no dot1x system disable**

Parameter	Parameter	Description
Description	N/A	N/A

**Defaults** By default, global 802.1x is enabled.

**Command Mode** Global configuration mode

**Usage Guide** (Optional) When the server is unreachable, disable global 802.1x, so users can access the Internet without authentication. After the server resumes reachability, enable global 802.1x, and users have to pass authentication before accessing the Internet.

**Configuration** The following example disables global 802.1x.

**Examples** Ruijie(config)# dot1x system disable

Related	Command	Description
Commands	N/A	N/A

**Platform** This command is only supported on switches.  
**Description**

## 4.51 show dot1x

Use this command to display the 802.1X setting.

**show dot1x**

Parameter	Parameter	Description
Description	N/A	N/A

**Defaults** N/A

**Command****Mode** Privileged EXEC mode/Global configuration mode/Interface configuration mode**Usage Guide** N/A**Configuration** The following example displays the 802.1X setting.**Examples**

```

Ruijie#show dot1x

802.1X basic information:
 802.1X Status ..... enable
 Authentication Mode ..... eap
 Authorization mode ..... disable
 Total User Number ..... 0 (exclude dynamic user)
 Authenticated User Number ..... 0 (exclude dynamic user)
 Dynamic User Number ..... 0
 Re-authentication ..... disable
 Re-authentication Period ..... 3600 seconds
 Re-authentication max ..... 3 times
 Quiet Period ..... 10 seconds
 Tx Period ..... 30 seconds
 Supplicant Timeout ..... 3 seconds
 Server Timeout ..... 5 seconds
 Maximum Request ..... 3 times
 Client Online Probe ..... disable
 Eapol Tag ..... enable
 802.1x redirect ..... disable
 Private supplicant only ..... disable

```

**Related****Commands**

Command	Description
<b>dot1x auth-mode</b>	Sets the 802.1X authentication mode.
<b>dot1x max-req</b>	Sets the maximum number of authentication request re-transmissions.
<b>dot1x port-control auto</b>	Sets the port to participate in authentication.
<b>dot1x reauth-max</b>	Sets the maximum number of the supplicant re-authentications.
<b>dot1x re-authentication</b>	Sets the re-authentication attribute.
<b>dot1x timeout quiet-period</b>	Sets the time the device waits before re-authentication.
<b>dot1x timeout re-authperiod</b>	Sets the re-authentication period for the supplicant.
<b>dot1x timeout server-timeout</b>	Sets the authentication timeout between the device and authentication server.
<b>dot1x timeout supp-timeout</b>	Sets the authentication timeout between the device and the supplicant.
<b>dot1x timeout tx-period</b>	Sets the re-transmission interval.

**Platform** N/A

**Description**

## 4.52 show dot1x auth-address-table

Use this command to display 802.1X authentication address table.

**show dot1x auth-address-table** [ **address** *addr* | **interface** *interface* ]

Parameter	Parameter	Description
<b>Description</b>	<i>addr</i>	Physical IP address that can be authenticated
	<i>interface</i>	Interface number

**Defaults** N/A

**Command Mode** Privileged EXEC mode/Global configuration mode/Interface configuration mode

**Usage Guide** N/A

**Configuration** The following example displays the 802.1X authentication address table.

**Examples**

```
Ruijie #show dot1x auth-address-table
Interface      Address
-----
Fa0/1          00d0.f800.0c0e
Fa0/2          001a.c800.0102

Ruijie #show dot1x auth-address-table interface fastEthernet 0/1
Interface      Address
-----
Fa0/1          00d0.f800.0c0e

Ruijie #show dot1x auth-address-table address 00d0.f8.00.0c0e
Interface      Address
-----
Fa0/1          00d0.f800.0c0e
```

Related Commands	Command	Description
	<b>dot1x auth-mode</b>	Sets the 802.1x authentication mode.
	<b>dot1x max-req</b>	Sets the maximum number of authentication request re-transmissions.
	<b>dot1x port-control auto</b>	Sets the port to participate in authentication.
	<b>dot1x reauth-max</b>	Sets the maximum number of the supplicant re-authentications.
	<b>dot1x re-authentication</b>	Sets the re-authentication attribute.
	<b>dot1x timeout quiet-period</b>	Sets the time the device waits before re-authentication.



<b>dot1x timeout re-authperiod</b>	Sets the re-authentication period for the supplicant.
<b>dot1x timeout server-timeout</b>	Sets the authentication timeout between the device and authentication server.
<b>dot1x timeout supp-timeout</b>	Sets the authentication timeout between the device and the supplicant.
<b>dot1x timeout tx-period</b>	Sets the re-transmission interval.

**Platform** N/A

**Description**

## 4.53 show dot1x auto-req

Use this command to display the auto-request authentication information.

**show dot1x auto-req**

Parameter	Parameter	Description
Description	N/A	N/A

**Defaults** N/A

**Command Mode** Privileged EXEC mode/Global configuration mode/Interface configuration mode

**Usage Guide** N/A

**Configuration** The following example displays the auto-request authentication information.

### Examples

```
Ruijie# show dot1x auto-req
Auto-Req: Enabled
User-Detect : Enabled
Packet-Num : 0
Req-Interval: 30 Seconds
```

Related Commands	Command	Description
	<b>dot1x auth-mode</b>	Sets the 802.1X authentication mode.
	<b>dot1x max-req</b>	Sets the maximum number of authentication request re-transmissions.
	<b>dot1x port-control auto</b>	Sets the port to participate in authentication.
	<b>dot1x reauth-max</b>	Sets the maximum number of the supplicant re-authentications.
	<b>dot1x re-authentication</b>	Sets the re-authentication attribute.
	<b>dot1x timeout quiet-period</b>	Sets the time the device waits before re-authentication.
	<b>dot1x timeout re-authperiod</b>	Sets the re-authentication period for the supplicant.
	<b>dot1x timeout server-timeout</b>	Sets the authentication timeout between the device and

	authentication server.
<b>dot1x timeout supp-timeout</b>	Sets the authentication timeout between the device and the supplicant.
<b>dot1x timeout tx-period</b>	Sets the re-transmission interval.

**Platform** N/A

**Description**

## 4.54 show dot1x max-req

Use this command to display the maximum number of request/challenge packet transmission.

**show dot1x max-req**

Parameter	Parameter	Description
<b>Description</b>	N/A	N/A

**Defaults** N/A

**Command Mode** Privileged EXEC mode/Global configuration mode/Interface configuration mode

**Usage Guide** N/A

**Configuration** The following example displays the maximum number of request/challenge packet transmission.

**Examples**

```
Ruijie#show dot1x max-req
```

```
Max-Req: 3 Times
```

Related Commands	Command	Description
	<b>dot1x auth-mode</b>	Sets the 802.1X authentication mode.
	<b>dot1x max-req</b>	Sets the maximum number of authentication request re-transmissions.
	<b>dot1x port-control auto</b>	Sets the port to participate in authentication.
	<b>dot1x reauth-max</b>	Sets the maximum number of the supplicant re-authentications.
	<b>dot1x re-authentication</b>	Sets the re-authentication attribute.
	<b>dot1x timeout quiet-period</b>	Sets the time the device waits before re-authentication.
	<b>dot1x timeout re-authperiod</b>	Sets the re-authentication period for the supplicant.
	<b>dot1x timeout server-timeout</b>	Sets the authentication timeout between the device and authentication server.
	<b>dot1x timeout supp-timeout</b>	Sets the authentication timeout between the device and the supplicant.

<b>dot1x timeout tx-period</b>	Sets the re-transmission interval.
--------------------------------	------------------------------------

**Platform** N/A

**Description**

## 4.55 show dot1x port-control

Use this command to display the port-control information.

**show dot1x port-control** [ **interface** *interface-type interface-number* ]

Parameter	Parameter	Description
<b>Description</b>	<i>interface-type</i>	Interface type
	<i>interface-number</i>	Interface ID

**Defaults** N/A

**Command Mode** Privileged EXEC mode/Global configuration mode/Interface configuration mode

**Usage Guide** N/A

**Configuration** The following example displays the port-control information.

**Examples**

```
Ruijie#show dot1x port-control
Interface Mode      Dynamic-User Static-User Max-User Authened MAB
-----
Gi0/5      mac-based 0          0          unlimited no      disable
```

Related Commands	Command	Description
	<b>dot1x auth-mode</b>	Sets the 802.1X authentication mode.
	<b>dot1x max-req</b>	Sets the maximum number of authentication request re-transmissions.
	<b>dot1x port-control auto</b>	Sets the port to participate in authentication.
	<b>dot1x reauth-max</b>	Sets the maximum number of the supplicant re-authentications.
	<b>dot1x re-authentication</b>	Sets the re-authentication attribute.
	<b>dot1x timeout quiet-period</b>	Sets the time the device waits before re-authentication.
	<b>dot1x timeout re-authperiod</b>	Sets the re-authentication period for the supplicant.
	<b>dot1x timeout server-timeout</b>	Sets the authentication timeout between the device and authentication server.
	<b>dot1x timeout supp-timeout</b>	Sets the authentication timeout between the device and the supplicant.
	<b>dot1x timeout tx-period</b>	Sets the re-transmission interval.

**Platform** N/A

**Description**

## 4.56 show dot1x private-supPLICANT-only

Use this command to display the information about the private supplicant.

**show dot1x private-supPLICANT-only**

Parameter	Parameter	Description
Description	N/A	N/A

**Defaults** N/A

**Command Mode** Privileged EXEC mode/Global configuration mode/Interface configuration mode

**Usage Guide** N/A

**Configuration Examples** The following example displays the information about the private supplicant:

```
Ruijie#show dot1x private-supPLICANT-only
```

```
private-supPLICANT-only: Disabled
```

**Related Commands**

Command	Description
<b>dot1x auth-mode</b>	Sets the 802.1X authentication mode.
<b>dot1x max-req</b>	Sets the maximum number of authentication request re-transmissions.
<b>dot1x port-control auto</b>	Sets the port to participate in authentication.
<b>dot1x reauth-max</b>	Sets the maximum number of the supplicant re-authentications.
<b>dot1x re-authentication</b>	Sets the re-authentication attribute.
<b>dot1x timeout quiet-period</b>	Sets the time the device waits before re-authentication.
<b>dot1x timeout re-authperiod</b>	Sets the re-authentication period for the supplicant.
<b>dot1x timeout server-timeout</b>	Sets the authentication timeout between the device and authentication server.
<b>dot1x timeout supp-timeout</b>	Sets the authentication timeout between the device and the supplicant.
<b>dot1x timeout tx-period</b>	Sets the re-transmission interval.

**Platform** N/A

**Description**

## 4.57 show dot1x probe-timer

Use this command to display the configuration of online user probe.

**show dot1x probe-timer**

Parameter	Parameter	Description
Description	N/A	N/A

**Defaults** N/A

**Command Mode** Privileged EXEC mode/Global configuration mode/Interface configuration mode

**Usage Guide** N/A

**Configuration** The following example displays the configuration of online user probe.

**Examples**

```
Ruijie#show dot1x probe-timer
```

```
Hello Interval : 20
```

```
Hello Alive : 60
```

Field Description

Command	Description
Hello Interval	Sets the probe period.
Hello Alive	Sets the probe alive interval.

Related Commands	Command	Description
	N/A	N/A.

**Platform** N/A

**Description**

## 4.58 show dot1x re-authentication

Use this command to display re-authentication status.

**show dot1x re-authentication**

Parameter	Parameter	Description
Description	N/A	N/A

**Defaults** N/A

**Command Mode** Privileged EXEC mode/Global configuration mode/Interface configuration mode

**Usage Guide** N/A

**Configuration** The following example displays re-authentication status.

**Examples**

```
Ruijie#show dot1x re-authentication
```

```
Reauth-Enabled: Disabled
```

Command	Description
Reauth-Enabled	Whether to enable re-authentication.

**Related**

**Commands**

Command	Description
N/A	N/A

**Platform**

N/A

**Description**

## 4.59 show dot1x reauth-max

Use this command to display the maximum re-auth attempts.

**show dot1x reauth-max**

**Parameter**

**Description**

Parameter	Description
N/A	N/A

**Defaults**

N/A

**Command**

**Mode**

Privileged EXEC mode/Global configuration mode/Interface configuration mode

**Usage Guide**

N/A

**Configuration** The following example displays the maximum re-authentication attempts.

**Examples**

```
Ruijie#show dot1x reauth-max
```

```
Reauth-Max: 3 Times
```

Command	Description
Reauth-Enabled	Sets the maximum re-authentication attempts.

**Related**

**Commands**

Command	Description
N/A	N/A

**Platform**

N/A

**Description**

## 4.60 show dot1x summary

Use this command to display the 802.1X authentication summary.

**show dot1x summary**

Parameter	Parameter	Description
Description	N/A	N/A

**Defaults** N/A

**Command Mode** Privileged EXEC mode/Global configuration mode/Interface configuration mode

**Usage Guide** It is convenient to display the 802.1X authentication summary according to the MAC address or username.

**Configuration** The following example displays the summary of 802.1X authentication.

### Examples

```
Ruijie#show dot1x summary
ID      User      MAC      Interface VLAN INNER-VLAN Auth-State
Backend-State Port-Status User-Type Time
-----
-----
```

### Related Commands

Command	Description
<b>dot1x auth-mode</b>	Sets the 802.1X authentication mode.
<b>dot1x max-req</b>	Sets the maximum number of authentication request re-transmissions.
<b>dot1x port-control auto</b>	Sets the port to participate in authentication.
<b>dot1x reauth-max</b>	Sets the maximum number of the supplicant re-authentications.
<b>dot1x re-authentication</b>	Sets the re-authentication attribute.
<b>dot1x timeout quiet-period</b>	Sets the time the device waits before re-authentication.
<b>dot1x timeout re-authperiod</b>	Sets the re-authentication period for the supplicant.
<b>dot1x timeout server-timeout</b>	Sets the authentication timeout between the device and authentication server.
<b>dot1x timeout supp-timeout</b>	Sets the authentication timeout between the device and the supplicant.
<b>dot1x timeout tx-period</b>	Sets the re-transmission interval.

**Platform** N/A

**Description**

## 4.61 show dot1x timeout quiet-period

Use this command to display the time for the device to wait before re-authentication quiet period after the authentication failure.

**show dot1x timeout quiet-period**

Parameter	Parameter	Description
Description	N/A	N/A

**Defaults** N/A

**Command Mode** Privileged EXEC mode/Global configuration mode/Interface configuration mode

**Usage Guide** Use this command to display the time for the device to wait before re-authentication quiet period after the authentication failure.

**Configuration Examples** The following example shows how to displays the quiet period the time for the device to wait before re-authentication after the authentication failure.

```
Ruijie#show dot1x timeout quiet-period
```

```
Quiet-Period: 10 Seconds
```

Parameter Description:

Parameter	Description
Quiet-Period	The time for the device to wait before re-authentication after the authentication failure.

Related Commands	Command	Description
	N/A	N/A

**Platform Description** N/A

## 4.62 show dot1x timeout re-authperiod

Use this command to display the re-authentication interval.

**show dot1x timeout re-authperiod**

Parameter	Parameter	Description
Description	N/A	N/A

**Defaults** N/A



**Command Mode** Privileged EXEC mode/Global configuration mode/Interface configuration mode

**Usage Guide** Use this command to display the re-authentication interval.

**Configuration** The following example displays the re-authentication interval.:

**Examples** Ruijie#show dot1x timeout re-authperiod

```
Reauth-Period: 3600 Seconds
```

Parameter Description:

Parameter	Description
Reauth-Period	Re-authentication interval.

Related Commands	Command	Description
	N/A	N/A

**Platform** N/A  
**Description**

## 4.63 show dot1x timeout server-timeout

Use this command to display the authentication timeout period.

**show dot1x timeout server-timeout**

Parameter	Parameter	Description
Description	N/A	N/A

**Defaults** N/A

**Command Mode** Privileged EXEC mode/Global configuration mode/Interface configuration mode

**Usage Guide** Use this command to display the authentication timeout period.

**Configuration** Use this command to display the authentication timeout period:

**Examples** Ruijie#show dot1x timeout server-timeout

```
Server-Timeout: 5 Seconds
```

Parameter Description:

Parameter	Description
Server-Period	AuthenticationServer timeout periodinterval.

Related	Command	Description
---------	---------	-------------

<b>Commands</b>	N/A	N/A
-----------------	-----	-----

**Platform** N/A

**Description**

## 4.64 show dot1x timeout supp-timeout

Use this command to display the request/challenge packets re-transmission interval.

**show dot1x timeout supp-timeout**

<b>Parameter</b>	Parameter	Description
<b>Description</b>	N/A	N/A

**Defaults** N/A

**Command Mode** Privileged EXEC mode/Global configuration mode/Interface configuration mode

**Usage Guide** Use this command to display the request/challenge packets re-transmission interval.

**Configuration** Use this command to display the request/challenge packets re-transmission interval:

**Examples** Ruijie#show dot1x timeout supp-timeout

Supp-Timeout: 3 Seconds

Field Description:

Field	Description
Server-Period	The request/challenge packets re-transmission interval.

<b>Related Commands</b>	Command	Description
	N/A	N/A

**Platform** N/A

**Description**

## 4.65 show dot1x timeout tx-period

Use this command to display the request/id packets re-transmission interval.

**show dot1x timeout tx-period**

<b>Parameter</b>	Parameter	Description
<b>Description</b>	N/A	N/A

**Defaults** N/A

**Command Mode** Privileged EXEC mode/Global configuration mode/Interface configuration mode

**Usage Guide** Use this command to display the request/id packets re-transmission interval.

**Configuration** Use this command to display the request/ id packets re-transmission interval:

**Examples** Ruijie#show dot1x timeout tx-period

```
Tx-Period: 30 Seconds
```

Parameter Description:

Parameter	Description
Tx-Period	Request/id packets re-transmission interval.

Related Commands	Command	Description
	N/A	N/A

**Platform** N/A

**Description**

## 4.66 show dot1x user id

Use this command to display the information about 802.1X authentication users based on user IDs.

**show dot1x user id** *id*

Parameter	Parameter	Description
Description	<i>id</i>	User ID

**Defaults** N/A

**Command Mode** Privileged EXEC mode/Global configuration mode/Interface configuration mode

**Usage Guide** Use the **show dot1x summary** command to display 802.1X authentication summaries. And use this command to display detailed information of a specific user based on its ID.

**Configuration Examples** The following example displays the information about the 802.1X authentication user according to the user ID.

```
Ruijie#show dot1x user id 16777225
```

```
User name: ts-user
```

```
User id: 16777225
```

```
Type: static
```

```

Mac address is 0023.aeaa.4286
Vlan id is 2
Access from port Gi0/5
Time online: 0days 0h 0m17s
User ip address is 192.168.3.21
Max user number on this port is 0
Authorization session time is 1000 seconds
Supplicant is private
Start accounting
Permit proxy user
Permit dial user
IP privilege is 0
  user acl-name ts-user_6_0_0 :
Parameter Description:

```

Parameter	Description
User name	User name
User id	User ID
Type	User type
Mac address	User's MAC address
Vlan id	User VLAN ID
Access from port	The port that user accesses from
Time online	User online time
User ip address	User IP address
Max user number on this port	The maximum number of users on the port
Authorization session time	The authorized session time
Supplicant is private	Whether the terminal is a Ruijie device
Start accounting	The accounting is enabled
Permit proxy user	The user is allowed to use the proxy.
Permit dial user	The user is allowed to dial.
IP privilege	The IP privilege level
user acl-name	The ACL information

Related	Command	Description
Commands	N/A	N/A

Platform N/A

Description

## 4.67 show dot1x user mac

Use this command to display the information about 802.1X authentication users based on MAC addresses.

**show dot1x user mac** *mac-addr*

Parameter	Parameter	Description
Description	<i>mac-addr</i>	MAC address

**Defaults** N/A

**Command Mode** Privileged EXEC mode/Global configuration mode/Interface configuration mode

**Usage Guide** Use the **show dot1x summary** command to display 802.1X authentication summaries. And use this command to display detailed information of a specific user based on its MAC address.

**Configuration Examples** The following example displays the information about the 802.1X authentication user according to the user's MAC address.

```
Ruijie#show dot1x user mac 0023.aeaa.4286
```

```
User name: ts-user
```

```
User id: 16777225
```

```
Type: static
```

```
Mac address is 0023.aeaa.4286
```

```
Vlan id is 2
```

```
Access from port Gi0/5
```

```
Time online: 0days 0h 0m17s
```

```
User ip address is 192.168.3.21
```

```
Max user number on this port is 0
```

```
Authorization session time is 1000 seconds
```

```
Supplicant is private
```

```
Start accounting
```

```
Permit proxy user
```

```
Permit dial user
```

```
IP privilege is 0
```

```
user acl-name ts-user_6_0_0 :
```

Parameter Description:

Parameter	Description
User name	User name
User id	User ID
Type	User type
Mac address	User's MAC address
Vlan id	User VLAN ID
Access from port	The port that user access from
Time online	User online time
User ip address	User IP address
Max user number on this port	The maximum number of users on the port
Authorization session time	The authorized session time

Supplicant is private	Whether the terminal is a Ruijie device
Start accounting	The accounting is enabled.
Permit proxy user	The user is allowed to use the proxy.
Permit dial user	The user is allowed to dial.
IP privilege	The IP privilege level
user acl-name	The ACL information

Related	Command	Description
Commands	N/A	N/A

**Platform** N/A

**Description**

## 4.68 show dot1x user name

Use this command to display information about 802.1X authentication users based on usernames.

**show dot1x user name** *name*

Parameter	Parameter	Description
Description	<i>name</i>	User name

**Defaults** N/A

**Command Mode** Privileged EXEC mode/Global configuration mode/Interface configuration mode

**Usage Guide** Use the **show dot1x summary** command to display 802.1X authentication summaries. And use this command to display detailed information of a specific user based on its username.

**Configuration Examples** The following example displays the information about the 802.1X authentication user according to the user name.

```
Ruijie#show dot1x user name ts-user

User name: ts-user
User id: 16777225
Type: static
Mac address is 0023.aeaa.4286
Vlan id is 2
Access from port Gi0/5
Time online: 0days 0h 0m17s
User ip address is 192.168.3.21
Max user number on this port is 0
Authorization session time is 1000 seconds
```

```

Supplicant is private
Start accounting
Permit proxy user
Permit dial user
IP privilege is 0
user acl-name ts-user_6_0_0 :

```

## Parameter Description:

Parameter	Description
User name	User name
User id	User ID
Type	User type
Mac address	User's MAC address
Vlan id	User VLAN ID
Access from port	The port that user access from
Time online	User online time
User ip address	User IP address
Max user number on this port	The maximum number of users on the port
Authorization session time	The authorized session time
Supplicant is private	Whether the terminal is a Ruijie device.
Start accounting	The accounting is enabled.
Permit proxy user	The user is allowed to use the proxy.
Permit dial user	The user is allowed to dial.
IP privilege	The IP privilege level.
user acl-name	The ACL information.

**Related  
Commands**

Command	Description
N/A	N/A

**Platform  
Description**

N/A

## 5 SCC Commands

### 5.1 Identifier Description

The following is a list of command identifiers used in commands for reference:

Identifier	Description
vlanlist	Authentication-exemption VLAN list
interval	Authenticated-user online-status detection interval
threshold	The traffic threshold of authenticated-user online-status detection

### 5.2 direct-vlan

Use this command to configure authentication-exemption VLANs.

**direct-vlan** *vlanlist*

Use this command to delete the authentication-exemption VLAN configuration.

**no direct-vlan** *vlanlist*

Parameter Description	Parameter	Description
	<i>vlanlist</i>	VLAN list, which can be a VLAN or a group of VLANs.

**Defaults** By default, no authentication-exemption VLANs are configured.

**Command Mode** Global configuration mode

**Default Level** 14

**Usage Guide** You can use this command to configure authentication-exemption VLANs, so that users in specified VLANs can access the Internet without experiencing dot1x or Web authentication.

**Configuration Examples** The following example configures the VLAN2 as an authentication-exemption VLAN.

```
Ruijie(config)# direct-vlan 2
```

**Verification** Use the **show direct-vlan** command to display the authentication-exemption VLAN configuration.

**Prompt Messages** N/A



**Common Errors** N/A

**Platforms** N/A

## 5.3 nac-author-user maximum

Use this command to configure the limit on IPv4 user capacity on a port.

**nac-author-user maximum** *max-user-num*

Use this command to remove the limit on the IPv4 user capacity on a port.

**no nac-author-user maximum**

Parameter Description	Parameter	Description
	<i>max-user-num</i>	Defines the maximum number of IPv4 access users. The range is from 1 to 1,024.

**Defaults** By default, the number of IPv4 access users is not limited.

**Command Mode** Interface configuration mode

**Default Level** 14

**Usage Guide** Use this command to configure the maximum number of IPv4 access users on a port.

**Configuration Examples** The following example restricts the maximum number of IPv4 users to 100 on interface Gi 0/1.

```
Ruijie(config)#int gigabitEthernet 0/1
Ruijie(config-if-GigabitEthernet 0/1)#nac-author-user maximum 100
```

**Verification**

1. Use the **show nac-author-user** command to display the current and the maximum numbers of IPv4 access users on all ports.
2. Use the **show nac-author-user interface interface-name** command to display the current and the maximum numbers of IPv4 access users on the specified port.

**Prompt Messages** N/A

**Common Errors** N/A

**Platforms** N/A

## 5.4 offline-detect interval threshold

Use this command to configure user online-status detection, so that a user is disconnected when its traffic is lower than a specified threshold or is zero in a specified interval.

**offline-detect interval** *interval* **threshold** *threshold*

Use this command to restore the default user online-status detection configuration.

**default offline-detect**

Use this command to disable user online-status detection.

**no offline-detect**

Parameter Description	Parameter	Description
	<i>interval</i>	Indicates the interval of traffic detection (in minutes). The range is from 6 to 65,535 in minutes.
	<i>threshold</i>	Indicates the traffic threshold (in bytes). The range is from 0 to 4,294,967,294 in bytes. The value of 0 indicates that the user is disconnected when no traffic of the user is detected.

**Defaults** By default, the detection interval is 8 hours and the traffic threshold is 0.

**Command Mode** Global configuration mode

**Default Level** 14

**Usage Guide** You can use this command to configure user online-status detection to enable the device to disconnect the authenticated user whose traffic is lower than a specified value and end accounting process.

**Configuration Examples** The following example directly disconnects a user for the user's traffic is lower than 5 Kbytes within 5 minutes.

```
Ruijie(config)#offline-detect interval 5 threshold 5120
```

**Verification** Use the **show running** command to display the configuration of online-status detection for authenticated users.

**Prompt Messages** N/A

**Common Errors** N/A

**Platforms** N/A

## 5.5 show direct-vlan

Use this command to display the authentication-exemption VLAN configuration.

**show direct-vlan**

Parameter Description	Parameter	Description
	N/A	N/A

**Command Mode** Privileged EXEC mode

**Level** 14

**Usage Guide** N/A

**Configuration** The following example displays the authentication-exemption VLAN configuration.

**Examples**

```
Ruijie #show direct-vlan
direct-vlan 5,7,100
```

**Prompt Messages** N/A

**Platforms** This command is supported only on switches.

## 5.6 show nac-author-user interface

Use this command to display the capacity limit and current number of IPv4 users on all interfaces or a specified interface.

**show nac-author-user [ interface *interface-name* ]**

Parameter Description	Parameter	Description
	<i>interface-name</i>	Interface name

**Command Mode** Privileged EXEC mode

**Level** 14

**Usage Guide** N/A

**Configuration** The following example displays the current number and capacity limit of IPv4 users on interface Gi 0/1.

**Examples**

```
Ruijie#show nac-author-user interface gi 0/1
Port      Cur_num  Max_num
-----
Gi0/1     0        100
```

**Prompt**

N/A

**Messages****Platforms**

N/A

## 5.7 station-move permit

Use this command to enable authenticated-user migration.

**station-move permit**

Use this command to disable authenticated-user migration.

**no station-move permit**

**Parameter  
Description**

Parameter	Description
N/A	N/A

**Defaults**

Authenticated-user migration is not permitted by default.

**Command  
Mode**

Global configuration mode

**Level**

14

**Usage Guide**

You can enable the authenticated-user migration function to allow the online users to be authenticated again and get online from different physical locations (different ports or VLANs).

**Configuration**

The following examples enables authenticated-user migration.

**Examples**

```
Ruijie(config)#station-move permit
```

**Verification**

Use the **show running** command to check whether the authenticated-user migration function is enabled.

**Prompt**

N/A

**Messages****Common  
Errors**

N/A

**Platforms**      N/A

## 6 Global IP-MAC Binding Commands

### 6.1 address-bind

Use this command to configure global IP-MAC address binding. Use the **no** form of this command to restore the default setting.

**address-bind** { *ip-address* | *ipv6-address* } *mac-address*

**no address-bind** { *ip-address* | *ipv6-address* }

Parameter	Parameter	Description
Description	ip-address	IPv4 address to be bound
	ipv6-address	IPv6 address to be bound
	mac-address	MAC address to be bound

**Defaults** N/A

**Command Mode** Global configuration mode

**Usage Guide** N/A

**Configuration Examples**

The following example configures global IP-MAC address binding.

```
Ruijie#  
configure terminal  
Enter configuration commands, one per line. End with CNTL/Z.  
Ruijie(config)# address-bind 192.168.5.1 00d0.f800.0001
```

Related Commands	Command	Description
	<b>show address-bind</b>	Displays the IP address-MAC address binding table.

**Platform Description** N/A

### 6.2 address-bind binding-filter logging

Use this command to enable the logging filter. Use the **no** form of this command to restore the default setting.

**address-bind binding-filter logging** [ *rate-limit rate* ]

**no address-bind binding-filter logging**

Parameter	Parameter	Description
-----------	-----------	-------------

Description	<div><div>rate-limit <i>rate</i></div><div>Printing rate of the logging filter of global IPv4 MAC binding. By default, the rate is 10 logs per minute. The configurable range is from 1 to 120 logs per minute.</div></div>				
Defaults	Logging filter is disabled.				
Command Mode	Global configuration mode				
Usage Guide	<p>By default, the rate is 10 logs per minute.</p> <p>When a logging filter is configured, alert logs are printed if IP packets not containing matched IP address and MAC address are detected.</p> <p>When a logging filter is configured, the number of non-printed logs is prompted if the actual printing rate exceeds the set rate.</p> <p>The following example enables logging filter:</p>				
Configuration Examples	<pre>Ruijie# configure terminal Enter configuration commands, one per line. End with CNTL/Z. Ruijie(config)# address-bind binding-filter logging Ruijie(config)# end</pre>				
Related Commands	<table><tr><th>Command</th><th>Description</th></tr><tr><td>N/A</td><td>N/A</td></tr></table>	Command	Description	N/A	N/A
Command	Description				
N/A	N/A				
Platform	N/A				
Description					

## 6.3 address-bind install

Use this command to enable a binding policy globally. Use the **no** form of this command to restore the default setting.

**address-bind install**

**no address-bind install**

<b>Parameter</b>	<b>Parameter</b>	<b>Description</b>
<b>Description</b>	N/A	N/A
<b>Defaults</b>	N/A	
<b>Command Mode</b>	Global configuration mode	
<b>Usage Guide</b>	If you bind an IP address to a MAC address, run this command to make the installation policy take effect.	

**Configuration** The following example enables a binding policy.

**Examples**

```
Ruijie# configure terminal
Enter configuration commands, one per line. End with CNTL/Z.
Ruijie(config)# address-bind 3.3.3.3 00d0.f811.1112
Ruijie(config)# address-bind install
```

Related Commands	Command	Description
	N/A	N/A

**Platform** N/A  
**Description**

## 6.4 address-bind ipv6-mode

This command is used to set the IPv6 address binding mode. Use the **no** form of this command to restore the default setting.

This command is also used to set the compatible mode.

**address-bind ipv6-mode { compatible | loose | strict }**

**no address-bind ipv6-mode**

Parameter Description	Parameter	Description
	<b>compatible</b>	Compatible mode
	<b>loose</b>	Loose mode
	<b>strict</b>	Strict mode

**Defaults** The default is strict mode.

**Command** Global configuration mode.  
**Mode**

**Usage Guide** N/A

**Configuration** The following example configures the IPv6 address binding mode.

**Examples**

```
Ruijie# configure terminal
Enter configuration commands, one per line. End with CNTL/Z.
Ruijie(config)# address-bind ipv6-mode compatible
```

Related Commands	Command	Description
	<b>show address-bind uplink</b>	Displays the exceptional port of the address binding.

**Platform** N/A  
**Description**



## 6.5 address-bind uplink

This command is used to configure the exception port. Use the **no** form of this command to restore the default setting.

**address-bind uplink** *interface-id*

**no address-bind uplink** *interface-id*

Parameter	Parameter	Description
Description	<i>interface-id</i>	Switching port or layer 2 aggregate port.

**Defaults** All ports are non-exception ports by default.

**Command Mode** Global configuration mode.

**Usage Guide** If you have bound an IP address and a MAC address, the switch will discard the packets that have the same source IP address but different source MAC address.  
If the port is an exceptional port and is installed (see address-bind install), this binding policy does not take effect.

**Configuration Examples** The following example configures the exception port. Ruijie# configure terminal  
Enter configuration commands, one per line. End with CNTL/Z.  
Ruijie(config)# address-bind uplink GigabitEthernet 0/1

Related Commands	Command	Description
	<b>show address-bind uplink</b>	Displays the exceptional port of address binding.

**Platform Description** N/A

## 6.6 show address-bind

Use this command to display global IP address-MAC address binding.

**show address-bind**

Parameter	Parameter	Description
Description	N/A	N/A

**Defaults** N/A

**Command Mode** Privileged EXEC mode.

**Usage Guide** N/A

**Configuration** The following example displays global IPv4 address-MAC address binding.

**Examples**

```
Ruijie#show address-bind
Total Bind Addresses in System : 1
IP Address          Binding MAC Addr
-----
192.168.5.1        00d0.f800.0001
```

Field	Description
Total Bind Addresses in System	IPv4 address-MAC address binding count
IP Address	Bound IP address
Binding MAC Addr	Bound MAC address

Related Commands	Command	Description
	<b>address-bind</b>	Enables IP address-MAC address binding.

**Platform** N/A

**Description**

## 6.7 show address-bind uplink

Use this command to display the exception port.

**show address-bind uplink**

Parameter	Parameter	Description
<b>Description</b>	N/A	N/A

**Defaults** N/A

**Command mode** N/A

**Usage Guide** N/A

**Configuration** The following example displays the exception port.

**Examples**

```
Ruijie#show address-bind uplink
Port      State
-----
Gi0/1     Enabled
Default   Disabled
```

Field	Description
Port	Short for exception ports. All ports are non-exception ports by default.

State	Indicates whether the port is exception port. State Enabled indicates that it is an exception port while state Disabled indicates that it is not.
-------	--

**Related****Commands**

Command	Description
address-bind uplink	Sets the exception port.

**Platform**

N/A

**Description**

## 7 Password-Policy Commands

### 7.1 password policy life-cycle

Use this command to set the password lifecycle. Use the **no** form of this command to restore the default setting.

**password policy life-cycle days**

**no password policy life-cycle**

#### Parameter Description

Parameter	Description
<i>days</i>	Sets the password lifecycle, in the range from 1 to 65535 in the unit of days.

#### Defaults


No password lifecycle is set by default.

#### Command Mode

Global configuration mode

#### Usage Guide

This command is used to set the password lifecycle. After the password lifecycle expires, the system reminds you to change the password when you login next time.

 This function is valid for the global password (the **enable password** and the **enable secret** commands) and the local user password (the **username name password password** command) while not valid for the password in line mode.

#### Configuration

The following example sets the password lifecycle to 90 days.

#### Examples

```
Ruijie(config)# password policy life-cycle 90
```

#### Related Commands

Command	Description
N/A	N/A

#### Platform Description

N/A

### 7.2 password policy min-size

Use this command to set the minimum length of the password. Use the **no** form of this command to restore the default setting.

**password policy min-size length**


**no password policy min-size**

Parameter Description	Parameter	Description
	<i>length</i>	Sets the minimum length of the password, in the range from 1 to 31.

**Defaults** No minimum length of the password is set by default.

**Command Mode** Privileged EXEC mode

**Usage Guide** This command is used to set the minimum length of the password,

 This function is valid for the global password (the **enable password** and the **enable secret** commands) and the local user password (the **username name password password** command) while not valid for the password in line mode.

**Configuration** The following example sets the minimum length of the password to 8.

**Examples** Ruijie(config)# password policy min-size 8

Related Commands	Command	Description
	N/A	N/A

**Platform Description** N/A

## 7.3 password policy no-repeat-times

Use this command to ban the use of passwords used in the past several times. Use the no form of this command to restore the default setting.

**password policy no-repeat-times times**

**no password policy no-repeat-times**

Parameter Description	Parameter	Description
	<i>times</i>	The past several times when passwords are configured, in the range from 1 to 31.


**Defaults** This function is disabled by default.

**Command Mode** Global configuration mode

**Usage Guide** After this function is enabled, passwords used in the past several times are recorded. If the

new password has been used, the alarm message is displayed and password configuration fails.

This command is used to set the maximum number of password entries. When the actual number of password entries exceeds the configured number, the new password overwrites the oldest password.

 This function is valid for the global password (the **enable password** and the **enable secret** commands) and the local user password (the **username name password password** command) while not valid for the password in line mode.

#### Configuration

The following example bans the use of passwords used in the past five times.

#### Examples

```
Ruijie(config)# password policy no-repeat-times 5
```

#### Related Commands

Command	Description
N/A	N/A

## 7.4 password policy strong

Use this command to enable strong password check.

**password policy strong**

**no password policy strong**

#### Parameter Description

Parameter	Description
N/A	N/A

#### Defaults

This function is disabled by default.


#### Command Mode

Global configuration mode

#### Usage Guide

If the following two kinds of passwords are set not matching the strength policy, the alarm message is displayed.

1. The password the same as the username.
2. The simple password containing only characters or numbers.

 This function is valid for the global password (the **enable password** and the **enable secret** commands) and the local user password (the **username name password password** command) while not valid for the password in line mode.

#### Configuration

The following example configures the strong password check.

#### Examples

```
Ruijie(config)# password policy strong
```

Related Commands	Command	Description
	N/A	N/A

**Platform**  
**Description**

N/A

## 1.7 service password-encryption

Use this command to encrypt a password. Use the **no** form of this command to restore default setting.  
**service password-encryption**

Parameter Description	Parameter	Description
	N/A	N/A

**Defaults** This function is disabled by default.

**Command**  
**Mode**

Global configuration mode

**Usage Guide** This command is disabled by default. Various passwords are displayed in plain text, unless they are encrypted. After you run the **service password-encryption** and **show running** or **write** command to save your configuration, the password changes into cipher text. If you disable the command, the password in cipher text cannot be restored to plain text.

**Configuration** The following example encrypts the password:

**Examples** Ruijie(config)# service password-encryption

Related Commands	Command	Description
	<b>enable password</b>	Sets passwords of different privileges.

**Platform**  
**Description**

N/A

## 7.8 show password policy

Use this command to display the password security policy set by the user.  
**show password policy**

Parameter	Parameter	Description
-----------	-----------	-------------

<b>Description</b>		
	N/A	N/A

**Defaults** N/A

**Command Mode** Privileged EXEC mode

**Usage Guide** This command is used to display the password security policy set by the user.

**Configuration** The following example displays the password security policy set by the user.

<b>Examples</b>	Ruijie#show password policy	
	Global password policy configurations:	
	Password encryption:	Enabled
	Password strong-check:	Enabled
	Password min-size:	Enabled (6 characters)
	Password life-cycle:	Enabled (90 days)
	Password no-repeat-times:	Enabled (max history record: 5)
	Field	Description
	Password encryption	Whether to encrypt the password.
	Password strong-check	Whether to enable password strong-check.
	Password min-size	Whether to set the minimum length of the password.
	Password life-cycle	Whether to set the password lifecycle.
	Password no-repeat-times	

<b>Related Commands</b>	Command	Description
	N/A	N/A

**Platform Description** N/A



## 8 Port Security Commands

### 8.1 show port-security

Use this command to display the port security configuration and the secure address.

**show port-security** [ **address** [ **interface** *interface-id* ] | **binding** [ **interface** *interface-id* ] | **interface** *interface-id* | **all** ]

Parameter Description	Parameter	Description
	<b>address</b>	Displays all secure addresses, or the secure address of the specified port.
	<b>binding</b>	Displays all port security bindings, or the port security bindings of the specified port.
	<b>interface</b> <i>interface-id</i>	Displays the port security configuration of the specified port.
	<b>all</b>	Displays all valid secure addresses and valid port security bindings.

**Defaults** N/A

**Command Mode** Privileged EXEC mode

**Usage Guide** To display all port security configuration and violation management, execute the command without any parameter. To display the security configuration, the secure address, or the port security binding of the specified interface, execute the command with the corresponding parameter.

**Configuration Examples** The following example displays the port security statistics.

```
Ruijie#show port-security
NO.  SecurePort MaxSecureAddr CurrentAddr CurrentIpBind CurrentIpMacBind
SecurityAction
          (Count)      (Count)      (Count)      (Count)
-----
1   Gi0/1      128          2          2          1          protect
-----
Total secure addresses in System : 2
Total secure bindings in System : 3
```

Field	Description
NO.	Serial number.

Secure Port	Port name
MaxSecureAddr(count)	The maximum number of secure addresses on the port.
CurrentAddr(count)	The current number of secure addresses on the port.
CurrentIpBind (count)	The current number of IP addresses bindings on the port.
CurrentIpMacBind (count)	The current number of IP-MAC address bindings on the port.
Security Action	Violation management.
Total secure addresses in System	The total number of secure addresses on the device.
Total secure bindings in System	The total number of port security bindings on the device,

The following example displays the port security configuration on interface GigabitEthernet 0/1.

```
Ruijie#show port-security interface gigabitEthernet 0/1
Interface                : GigabitEthernet 0/1
Port status              : down
Port Security            : enabled
SecureStatic address aging : disabled
Sticky dynamic address   : disabled
Violation mode           : protect
Maximum MAC Addresses    : 128
Total MAC Addresses      : 2
Configured MAC Addresses : 2
Dynamic MAC Addresses    : 0
Sticky MAC Addresses     : 0
Total security binding   : 3
IPv4-ONLY Binding Addresses : 1
IPv6-ONLY Binding Addresses : 1
IPv4-MAC Binding Addresses : 1
IPv6-MAC Binding Addresses : 0
Aging time(min)         : 0
```

Field	Description
Interface	Port name.
Port status	Port status.
Port Security	Displays whether the port security is enabled.
SecureStatic address aging	Displays whether the static secure address aging is enabled.
Sticky dynamic address	Displays whether the dynamic secure address is converted to the sticky secure address,
Violation mode	Port violation management.

Maximum MAC Addresses	The maximum number of secure addresses on the port.
Total MAC Addresses	The number of valid secure addresses on the port.
Configured MAC Addresses	The number of static secure addresses.
Dynamic MAC Addresses	The number of dynamic secure addresses.
Sticky MAC Addresses	The number of sticky secure addresses.
Total security binding	The number of valid port security bindings.
IPv4-ONLY Binding Addresses	The number of IPv4 addresses bindings.
IPv6-ONLY Binding Addresses	The number of IPv6 addresses bindings.
IPv4-MAC Binding Addresses	The number of IPv4-MAC address bindings.
IPv6-MAC Binding Addresses	The number of IPv6-MAC address bindings.
Aging time(min)	The aging time of the secure address.

The following example displays all secure addresses on the device.

```
Ruijie#show port-security address
NO.  VLAN  MacAddress      PORT                      TYPE      RemainingAge (mins)
STATUS
-----
1    1      00d0.f800.073c  GigabitEthernet 0/1      Configured      --
active
2    1      00d0.f800.073d  GigabitEthernet 0/1      Configured      --
active
```

Field	Description
NO.	Serial number.
Vlan	VLAN ID.
Mac Address	MAC address.
Port	Port name.
Type	Secure address type.
Remaining Age(mins)	The aging time of the secure address.
STATUS	The secure address status.

The following example displays all port security bindings on the device.

```
Ruijie#show port-security binding
NO.  VLAN  MacAddress      PORT      IpAddress
FilterType FilterStatus
-----
1    1      00d0.f800.073c  Gi0/1      192.168.12.202      ipv4-mac
active
2    --      --             Gi0/1      192.168.0.1         ipv4-only
active
```

```
3      --      --      Gi0/1      ffaa:ddcc::1      ipv6-only
activ
```

Field	Description
NO.	Serial number.
Vlan	VLAN ID.
Mac Address	MAC address.
Port	Port name.
IpAddress	IP address.
FilterType	The filtering type of the port security binding.
FilterStatus	The status of the port security binding.

#### Related Commands

Command	Description
N/A	N/A

**Platform** N/A

#### Description

## 8.2 switchport port-security

Use this command to configure port security and the way to deal with violation.

Use the **no** form of this command to restore the default setting.

**switchport port-security** [ violation { protect | restrict | shutdown } ]

**no switchport port-security** [ violation ]

#### Parameter Description


Parameter	Description
<b>protect</b>	Discards the packets breaching security.
<b>restrict</b>	Discards the packets breaching security and sends the Trap message.
<b>shutdown</b>	Discards the packets breaching the security, sends the Trap message and disables the interface.

**Defaults** This function is disabled by default.

**Command Mode** Interface configuration mode

**Usage Guide** With port security, you can strictly control the input on a specific port by restricting access to the MAC address and IP address (optional) of the port on the switch. After you configure some secure addresses for the port security-enabled port, only the packets from these addresses can be forwarded. In addition, you can also restrict the maximum number of secure addresses on a port. If you set the maximum value to 1 and configure one secure address for this port, the workstation

(whose address is the configured secure Mac address) connected to this port will occupy all the bandwidth of this port exclusively.

 If the violation handling mode is changed after violation occurs, the new mode takes effect only after the violation mode is restarted.

**Configuration Examples** The following example enables port security on interface gigabitethernet 1/1, and the way to deal with violation is **shutdown**:

```
Ruijie(config)#interface gigabitethernet 1/1
Ruijie(config-if)# switchport port-security
Ruijie(config-if)# switchport port-security violation shutdown
```

**Related Commands**

Command	Description
<b>show port-security</b>	Displays port security settings.

**Platform** N/A  
**Description**

## 8.3 switchport port-security aging

Use this command to set the aging time for all secure addresses on an interface.

Use the **no** form of this command to restore the default setting.

**switchport port-security aging {static | time time }**

**no switchport port-security aging {static | time }**

**Parameter Description**


Parameter	Description
<b>static</b>	Applies the aging time to both manually configured secure addresses and automatically learned addresses. Otherwise, apply it to only the automatically learned secure addresses.
<b>time time</b>	Specifies the aging time for the secure address on this port. Its range is 0-1,440 in minutes. If you set it to 0, the aging function is disabled actually.

**Defaults** No secure address is aged by default.

**Command Mode** Interface configuration mode

**Usage Guide** In interface configuration mode, use the **no switchport port-security aging time** command to disable the aging for security addresses on the port. Use the **no switchport port-security aging static** command to apply the aging time to only the dynamically learned security address. Use the **show port-security** command to display configuration.

When both port security and 802.1X authentication functions are enabled, 802.1X clients must get re-authenticated for network access once the secure addresses are aged.

 To enable this function, you need to set the maximum number of secure addresses. In this way, you can make the switch automatically add or delete the secure addresses on the interface.

**Configuration Examples** The following example sets the aging time for all secure addresses on interface gigabitethernet 1/1 to eight minutes.

```
Ruijie# configure terminal
Ruijie(config)# interface gigabitethernet 1/1
Ruijie(config-if)# switchport port-security aging time 8
Ruijie(config-if)# switchport port-security aging static
Ruijie(config-if)# end
```

**Related Commands**

Command	Description
<b>show port-security</b>	Displays port security settings.

**Platform** N/A  
**Description**

## 8.4 switchport port-security binding

Use these commands to configure secure address binding manually in the interface configuration mode through performing the source IP address plus source MAC address binding or only the source IP address binding. With this binding configured, only the packets match the binding secure address could enter the switch, others will be discarded.

Use the **no** form of these commands to remove the binding addresses.

**switchport port-security binding** [ *mac-address* **vlan** *vlan\_id* ] { *ipv4-address* | *ipv6-address* }

**switchport port-security binding** { *ipv4-address* | *ipv6-address* }

**no switchport port-security binding** [ *mac-address* **vlan** *vlan\_id* ] { *ipv4-address* | *ipv6-address* }

**no switchport port-security binding** { *ipv4-address* | *ipv6-address* }

**Parameter Description**

Parameter	Description
<i>mac-address</i>	The source MAC addresses to be bound
<i>vlan_id</i>	VLAN ID of the binding source MAC address
<i>ipv4-address</i>	Binds IPv4 addresses.
<i>ipv6-address</i>	Binds IPv6 addresses.

**Defaults** N/A

**Command** Interface configuration mode

**Mode**

- Usage Guide**
1. For packets complying with IP/IP-MAC binding, they can be forwarded only if MAC addresses are secure addresses.
  2. For dynamic secure addresses, packets cannot be forwarded before bound even if their addresses comply with the binding list.
- Network is often accessible to static users with secure addresses without authorization. If authorization is configured, these users must comply with it.

**Configuration** The following example binds the IP address 192.168.1.100 on interface g 0/10:

**Examples**

```
Ruijie# configure terminal
Ruijie(config)#interface gigabitethernet 0/10
Ruijie(config-if)# switchport port-security binding 192.168.1.100
Ruijie(config-if)# end
```

The following example binds the IP address 192.168.1.100 and MAC address 00d0.f800.5555 with VLAN ID 1 on interface g 0/10.

```
Ruijie# configure terminal
Ruijie(config)#interface gigabitethernet 0/10
Ruijie(config-if)# switchport port-security binding 00d0.f800.5555 vlan 1
192.168.1.100
Ruijie(config-if)# end
```

**Related Commands**

Command	Description
<b>show port-security</b>	Displays port security settings.
<b>switchport port-security</b>	Enables the port-security.
<b>switchport port-security binding interface</b>	Configures the secure address binding in privileged EXEC mode.
<b>switchport port-security mac-address</b>	Sets the static secure address.
<b>switchport port-security aging</b>	Sets the aging time for secure address.

**Platform** N/A

**Description**

## 8.5 switchport port-security binding-filter logging

Use this command to enable binding filter logging.

Use the **no** form of these commands to restore the default setting.

**switchport port-security binding-filter logging [ rate-limit *rate* ]**

**no switchport port-security binding-filter logging**

**Parameter Description**

Parameter	Description
-----------	-------------

<b>rate-limit</b> <i>rate</i>	Indicates the printing rate of binding filter logging. The default rate is 10logs/minute. The configurable range is from 1 to 120 logs per minute.
-------------------------------	--

**Defaults** By default, binding filter logging is disabled.

**Command Mode** Global configuration mode

**Usage Guide**

1. If you run the **switchport port-security binding-filter logging** command without configuring the *rate* parameter, binding filter logging is enabled and the default printing rate, 10logs/minute, is adopted.
2. After binding filter logging is enabled, for packets that do not comply with IP/IP-MAC binding, warnings are printed.
3. After binding filter logging is enabled, if the printing rate exceeds the configured rate, the number of suppressed packets is displayed.

**Configuration Examples** The following example enables binding filter logging.

```
Ruijie# configure terminal
Ruijie(config)# switchport port-security binding-filter logging
Ruijie(config)# end
```

**Related Commands**

Command	Description
N/A	N/A

**Platform Description** N/A

## 8.6 switchport port-security interface binding

Use these commands to configure secure address binding manually in the privileged EXEC mode through performing the source IP address plus source MAC address binding or only the source IP address binding. With this binding configured, only the packets match the binding secure address could enter the switch, others will be discarded.

Use the **no** form of these commands to remove the binding addresses.

**switchport port-security interface** *interface-id* **binding** [ *mac-address* **vlan** *vlan\_id* ] { *ipv4-address* | *ipv6-address* }

**switchport port-security interface** *interface-id* **binding** { *ipv4-address* | *ipv6-address* }

**no switchport port-security interface** *interface-id* **binding** [ *mac-address* **vlan** *vlan\_id* ] { *ipv4-address* | *ipv6-address* }

**no switchport port-security interface** *interface-id* **binding** { *ipv4-address* | *ipv6-address* }

**Parameter**

Parameter	Description
-----------	-------------



<b>Description</b>		
	<i>interface-id</i>	Binds interface ID.
	<i>mac-address</i>	Binds source MAC address.
	<i>vlan_id</i>	VLAN ID of the binding source MAC address
	<i>ipv4-address</i>	Binds IPv4 address.
	<i>ipv6-address</i>	Binds IPv6 address .
<b>Defaults</b>	N/A	
<b>Command Mode</b>	Global configuration mode	
<b>Usage Guide</b>	<p>1. For packets complying with IP/IP-MAC binding, they can be forwarded only if MAC addresses are secure addresses.</p> <p>2. For dynamic secure addresses, packets cannot be forwarded before bound even if their addresses comply with the binding list.</p>	
<b>Configuration Examples</b>	<p>The following example binds the IP address 192.168.1.100 on the interface g 0/10.</p> <pre>Ruijie# configure terminal Ruijie(config)# switchport port-security binding interface g0/10 binding 192.168.1.100 Ruijie(config)# end</pre> <p>The following example binds the IP address 192.168.1.100 and MAC address 00d0.f800.5555 with VLAN ID 1 on the interface g 0/10.</p> <pre>Ruijie# configure terminal Ruijie(config)# switchport port-security binding interface g0/10 binding 00d0.f800.5555 vlan 1 192.168.1.100 Ruijie(config)# end</pre>	
<b>Related Commands</b>	<b>Command</b>	<b>Description</b>
	<b>show port-security</b>	Displays port security settings.
	<b>switchport port-security</b>	Enables the port-security.
	<b>switchport port-security binding</b>	Configures the secure address binding in interface configuration mode.
	<b>switchport port-security mac-address</b>	Sets the static secure address.
	<b>switchport port-security aging</b>	Sets the aging time for secure address.
<b>Platform Description</b>	N/A	

## 8.7 switchport port-security interface mac-address


Use this command to configure the static secure address.

Use the **no** form of this command to remove the configuration.

**switchport port-security interface** *interface-id* **mac-address** *mac-address* [**vlan** *vlan-id*]

**no switchport port-security interface** *interface-id* **mac-address** *mac-address* [**vlan** *vlan-id*]

### Parameter Description

Parameter	Description
<i>interface-id</i>	Interface ID
<i>mac-address</i>	Static secure address
<i>vlan-id</i>	VLAN ID of the MAC address <div>  The configuration of vlan-id is only supported on the TRUNK port. </div>

**Defaults** N/A

**Command Mode** Global configuration mode

**Usage Guide** N/A

**Configuration Examples** The following example sets the static secure address and VLAN ID of TRUNK port 10 to 00d0.f800.5555 and 2 respectively.

```
Ruijie# configure terminal
Ruijie(config)# switchport port-security interface g0/10 mac-address
00d0.f800.5555 vlan 2
Ruijie(config)# end
```

### Related Commands

Command	Description
<b>show port-security</b>	Displays port security settings.
<b>switchport port-security</b>	Enables the port-security.
<b>switchport port-security binding</b>	Configures the secure address binding.
<b>switchport port-security mac-address</b>	Sets the static secure address in interface configuration mode.
<b>switchport port-security aging</b>	Sets the aging time for the secure address.

**Platform Description** N/A

## 8.8 switchport port-security mac-address


Use this command to configure the static secure address.

Use the **no** form of this command to remove the configuration.

**switchport port-security mac-address** *mac-address* [ **vlan** *vlan-id* ]

**no switchport port-security mac-address** *mac-address* [ **vlan** *vlan-id* ]

### Parameter Description

Parameter	Description
<i>mac-address</i>	Static secure MAC address
<i>vlan-id</i>	VLAN ID of the MAC address
	 The configuration of <i>vlan-id</i> is only supported on the TRUNK port.

**Defaults** N/A

**Command Mode** Interface configuration mode

**Usage Guide** N/A

**Configuration Examples** The following example sets the static secure address and VLAN ID of TRUNK port 10 to 00d0.f800.5555 and 2 respectively.

```
Ruijie# configure terminal
Ruijie(config)#interface gigabitethernet 0/10
Ruijie(config-if)# switchport port-security mac-address 00d0.f800.5555 vlan
2
Ruijie(config-if)# end
```

### Related Commands

Command	Description
<b>show port-security</b>	Displays port security settings.
<b>switchport port-security</b>	Enables the port-security.
<b>switchport port-security binding</b>	Configures the secure address binding.
<b>switchport port-security mac-address interface</b>	Sets the static secure address in privileged EXEC mode.
<b>switchport port-security aging</b>	Sets the aging time for the secure address.

**Platform Description** N/A

## 8.9 switchport port-security mac-address sticky

Use this command to configure the Sticky MAC secure address.

Use the **no** form of this command to restore the default setting.

**switchport port-security mac-address sticky** *mac-address* [ **vlan** *vlan-id* ]

**no switchport port-security mac-address sticky** *mac-address* [ **vlan** *vlan-id* ]


Use the command without parameters to enable the Sticky MAC address learning.

Use the **no** form of this command to disable the Sticky MAC address learning.

**switchport port-security mac-address sticky**

**no switchport port-security mac-address sticky**

### Parameter Description

Parameter	Description
<i>mac-address</i>	Static secure address
<i>vlan-id</i>	Vlan ID of the MAC address
	 The configuration of <i>vlan-id</i> is only supported on the TRUNK port.

**Defaults** This function is disabled by default.

**Command Mode** Interface configuration mode

**Usage Guide** Sticky MAC addresses, either static or dynamic, are special addresses free from aging.

**Configuration Examples** The following example sets the MAC address and VLAN ID of TRUNK port 10 to 00d0.f800.5555 to 2 respectively.

```
Ruijie# configure terminal
Ruijie(config)#interface gigabitethernet 0/10
Ruijie(config-if)# switchport port-security mac-address 00d0.f800.5555 vlan
2
Ruijie(config-if)# end
```

The following example enables the Sticky MAC address learning on interface g0/10.

```
Ruijie# configure terminal
Ruijie(config)#interface gigabitethernet 0/10
Ruijie(config-if)# switchport port-security sticky mac-address
Ruijie(config-if)# end
```

### Related Commands

Command	Description
<b>show port-security</b>	Displays port security settings.
<b>switchport port-security</b>	Enables the port-security.
<b>switchport port-security binding</b>	Configures the secure address binding.

<b>switchport port-security mac-address interface</b>	Sets the static secure address in privileged EXEC mode.
<b>switchport port-security mac-address</b>	Sets the static secure address in interface configuration mode.
<b>switchport port-security aging</b>	Sets the aging time for the secure address.

**Platform** N/A

**Description**

## 8.10 switchport port-security maximum

Use this command to set the maximum number of port secure addresses.

Use the **no** form of this command to restore the default setting.

**switchport port-security maximum** *value*

**no switchport port-security maximum**

Parameter Description	Parameter	Description
	<i>value</i>	Maximum number of the secure address, in the range from 1 to 128.

**Defaults** The default is 128.

**Command Mode** Interface configuration mode

**Usage Guide** The number of the secure address contains the sum of static secure address and dynamically learnt secure address, 128 by default.

If the number of the secure address you set is less than current number, it will prompt this setting failure.

**Configuration Examples** The following example sets the maximum number of the secure address to 2 for interface g 0/10.

```
Ruijie# configure terminal
Ruijie(config)#interface gigabitethernet 0/10
Ruijie(config-if)# switchport port-security maximum 2
Ruijie(config-if)# end
```

Related Commands	Command	Description
	<b>show port-security</b>	Displays port security settings.
	<b>switchport port-security</b>	Enables the port-security.
	<b>switchport port-security binding</b>	Configures the secure address binding.
	<b>Switchport port-security mac-address</b>	Sets the static secure address in the interface configuration mode.

---

<b>switchport port-security aging</b>
---------------------------------------

Sets the aging time for the port secure address.
--

**Platform** N/A

**Description**

## 9 Storm Control Commands

### 9.1 show storm-control

Use this command to display storm suppression information.

**show storm-control** [ *interface-type interface-number* ]

Parameter Description	Parameter	Description
	<i>interface-type</i> <i>interface-number</i>	Specifies an interface.

**Defaults** N/A

**Command Mode** Privileged EXEC mode/Global configuration mode/Interface configuration mode

**Usage Guide** N/A

**Configuration** The following example displays storm control configuration on FastEthernet 0/1.

**Examples**

```
Ruijie# show storm-control fastEthernet 0/1
Interface          Broadcast Control Multicast Control Unicast Control
Action
-----
FastEthernet 0/1   1%          50%          1%      none
```

Related Commands	Command	Description
	<b>storm-control</b>	Enables storm suppression.

**Platform** N/A

**Description**

### 9.2 storm-control

Use this command to enable the storm suppression for unknown unicast packets.

Use the **no** or **default** form of this command to restore the default setting.

**storm-control unicast** [ { *level percent* | *pps packets* | *rate-bps* } ]

**no storm-control unicast**

**default storm-control unicast**

Use this command to enable the storm suppression for multicast packets.

Use the **no** or **default** form of this command to restore the default setting.

**storm-control multicast** [ { **level** *percent* | **pps** *packets* | *rate-bps* } ]

**no storm-control multicast**

**default storm-control multicast**

Use this command to enable the storm suppression for broadcast packets.

Use the **no** or **default** form of this command to restore the default setting.

**storm-control broadcast** [ { **level** *percent* | **pps** *packets* | *rate-bps* } ]

**no storm-control broadcast**

**default storm-control broadcast**

#### Parameter Description

Parameter	Description
<b>level</b> <i>percent</i>	Sets the bandwidth percentage, for example, 20 means 20%.
<b>pps</b> <i>packets</i>	Sets the pps, which means packets per second.
<i>rate-bps</i>	Rate allowed

**Defaults** This function is disabled by default.

**Command Mode** Interface configuration mode

**Usage Guide** Too many broadcast, multicast or unicast packets received on a port may cause storm and thus slow network and increase timeout. Protocol stack implementation errors or wrong network configuration may also lead to such storms.

A device can implement the storm suppression to a broadcast, a multicast, or a unicast storm respectively. When excessive broadcast, multicast or unknown unicast packets are received, the switch temporarily prohibits forwarding of relevant types of packets till data streams are recovered to the normal state (then packets will be forwarded normally).

**Configuration Examples** The following example enables the multicast storm suppression on FastEthernet 0/1 and sets the allowed rate to 4M.

```
Ruijie(config)# int fastEthernet 0/1
Ruijie(config-if-FastEthernet 0/1)# storm-control multicast 4096
```

#### Related Commands

Command	Description
<b>show storm-control</b>	Displays storm suppression information.

**Platform Description** N/A



## 10 SSH Commands

### 10.1 crypto key generate

Use this command to generate a public key to the SSH server.




**crypto key generate { rsa | dsa }**

Parameter	Parameter	Description
Description	<b>rsa</b>	Generates an RSA key.
	<b>dsa</b>	Generates a DSA key.

**Defaults** By default, the SSH server does not generate a public key.

**Command Mode** Global configuration mode

**Usage Guide** When you need to enable the SSH SERVER service, use this command to generate a public key on the SSH server and enable the SSH SERVER service by command **enable service ssh-server** at the same time. SSH 1 uses the RSA key; SSH 2 uses the RSA or DSA key. Therefore, if a RSA key has been generated, both SSH1 and SSH2 can use it. If only a DSA key is generated, only SSH2 can use it.

-  Only DSA/RSA authentication is available for one connection. Also, the key algorithm may differ in different client. Thus, it is recommended to generate both RSA and DSA keys so as to ensure connection with the portal server.
-  RSA has a minimum modulus of 512 bits and a maximum modulus of 2,048 bits; DSA has a minimum modulus of 360 bits and a maximum modulus of 2,048 bits. For some clients like SCP clients, a 768-bit or more key is required. Thus, it is recommended to generate the key of 768 bits or more.
-  A key can be deleted by using the **no crypto key generate** command. The **no crypto key zeroize** command is not available.

**Configuration** The following example generates an RSA key to the SSH server.

**Examples**

```
Ruijie# configure terminal
Ruijie(con fig)# crypto key generate rsa
```

Related Commands	Command	Description
	<b>show ip ssh</b>	Displays the current status of the SSH server.
	<b>crypto key zeroize { rsa   dsa }</b>	Deletes DSA and RSA keys and disables the SSH server function.

**Platform** N/A

**Description**

## 10.2 crypto key zeroize

Use this command to delete a public key to the SSH server.

**crypto key zeroize { rsa | dsa }**

Parameter	Parameter	Description
Description	rsa	Deletes the RSA key.
	dsa	Deletes the DSA key.

**Defaults** N/A

**Command Mode** Global configuration mode

**Usage Guide** This command deletes the public key to the SSH server. After the key is deleted, the SSH server state becomes DISABLE. If you want to disable the SSH server, run the **no enable service ssh-server** command.

**Configuration** The following example deletes a RSA key to the SSH server.

**Examples**

```
Ruijie# configure terminal
Ruijie(config)# crypto key zeroize rsa
```

Related	Command	Description
Commands	show ip ssh	Displays the current status of the SSH server.
	crypto key generate { rsa   dsa }	Generates DSA and RSA keys.

**Platform** N/A

**Description**

## 10.3 disconnect ssh

Use this command to disconnect the established SSH connection.

**disconnect ssh [ vty ] session-id**

Parameter	Parameter	Description
Description	vtty	Established VTY connection
	session-id	ID of the established SSH connection, in the range from 0 to 35

**Defaults** N/A

**Command** Privileged EXEC mode

**Mode**

**Usage Guide** You can disconnect a SSH connection by entering the ID of the SSH connection or disconnect a SSH connection by entering the specified VTY connection ID. Only connections of the SSH type can be disconnected.

**Configuration Examples** The following example disconnects the established SSH connection by specifying the SSH session ID.

```
Ruijie# disconnect ssh 1
```

The following example disconnects the established SSH connection by specifying the VTY session ID.

```
Ruijie# disconnect ssh vty 1
```

**Related Commands**

Command	Description
<b>show ssh</b>	Displays the information about the established SSH connection.
<b>clear line vty <i>line_number</i></b>	Disconnects the current VTY connection.

**Platform** N/A

**Description**

## 10.4 ip scp server enable

Use this command to enable the SCP server function on a network device.

Use the **no** form of this command to restore the default setting.

**ip scp server enable**

**no ip scp server enable**

**Parameter Description**

Parameter	Description
N/A	N/A

**Defaults** This function is disabled by default.

**Command Mode** Global configuration mode

**Usage Guide** Secure Copy (SCP) enables an authenticated user to transfer files to/from a remote device in an encrypted way, with high security and guarantee.

**Configuration Examples** The following example enables the SCP server function.

```
Ruijie# configure terminal
```

```
Ruijie(config)# ip scp server enable
```

**Related**

Command	Description
---------	-------------

Commands	<b>show ip ssh</b>	Displays the current status of the SSH server.
----------	--------------------	--

Platform N/A

Description

## 10.5 ip ssh authentication-retries

Use this command to set the authentication retry times of the SSH server.

Use the **no** form of this command to restore the default setting.

**ip ssh authentication-retries** *retry times*

**no ip ssh authentication-retries**

Parameter	Parameter	Description
Description	<i>retry times</i>	Authentication retry times, ranging from 0 to 5

Defaults The default is 3.

Command Global configuration mode  
Mode

Usage Guide User authentication is considered failed if authentication is not successful when the configured authentication retry times on the SSH server is exceeded. Use the **show ip ssh** command to display the configuration of the SSH server

Configuration The following example sets the authentication retry times to 2.

Examples  
Ruijie# configure terminal  
Ruijie(config)# ip ssh authentication-retries 2

Related	Command	Description
Commands	<b>show ip ssh</b>	Displays the current status of the SSH server.

Platform N/A

Description

## 10.6 ip ssh cipher-mode

Use this command to set the SSH server encryption mode.

Use the **no** form of this command to restore the default setting.

**ip ssh cipher-mode** { *ctr* | *others* }

**no ip ssh cipher-mode**

Parameter	Parameter	Description
Description	<b>ctr</b>	Encryption mode: CTR (Counter) Encryption algorithm: AES128-CTR, AES192-CTR, AES256-CTR

<b>others</b>	Encryption mode: Others Encryption algorithm: RC4
---------------	--

**Defaults** All encryption modes are supported by default.

**Command Mode** Global configuration mode

**Usage Guide** This command is used to set the SSH server encryption mode.  
For Ruijie Networks, the SSHv2 server supports AES128-CTR, AES192-CTR, AES256-CTR, and RC4. All these algorithms can be grouped into CTR and Other as shown above.  
It is recommended to enable the CTR mode to raise assurance for organizations and enterprises demanding high security.

**Configuration** The following example enables CTR encryption mode.

**Examples**

```
Ruijie# configure terminal
Ruijie(config)# ip ssh cipher-mode ctr
```

**Platform** N/A

**Description**

## 10.7 ip ssh hmac-algorithm

Use this command to set the algorithm for message authentication.

Use the **no** form of this command to restore the default setting.

**ip ssh hmac-algorithm { md5 | md5-96 | sha1 | sha1-96 | sha2-256 }**

**no ip ssh hmac-algorithm**

Parameter	Parameter	Description
<b>Description</b>	<b>md5</b>	MD5 algorithm
	<b>md5-96</b>	MD5-96 algorithm
	<b>sha1</b>	SHA1 algorithm
	<b>sha1-96</b>	SHA1-96 algorithm
	<b>sha2-256</b>	SHA2-256 algorithm

**Defaults** SSHv2: all the algorithms are supported.

**Command Mode** Global configuration mode

**Usage Guide** For Ruijie Networks, the SSHv2 server supports MD5, MD5-96, SHA1, SHA1-96, and SHA2-256 algorithms. Set the algorithm on your demand.

**Configuration** The following example sets the algorithm for message authentication to SHA1.

**Examples**

```
Ruijie# configure terminal
```

```
Ruijie(config)# ip ssh hmac-algorithm sha1
```

**Platform** N/A

**Description**

## 10.8 ip ssh peer

Use this command to associate the public key file and the user name on the client. During client login authentication, you can specify a public key file based on the user name.

Use the **no** form of this command to restore the default setting.

**ip ssh peer** *username* **public-key** { **rsa** | **dsa** } *filename*

**no ip ssh peer** *username* **public-key** { **rsa** | **dsa** } *filename*

Parameter	Parameter	Description
<b>Description</b>	<i>username</i>	User name
	<i>filename</i>	Name of a public key file
	<b>rsa</b>	The public key is a RSA key
	<b>dsa</b>	The public key is a DSA key

**Defaults** N/A

**Command Mode** Global configuration mode

**Usage Guide** N/A

**Configuration** The following example sets RSA and DSA key files associated with user **test**.

**Examples**

```
Ruijie# configure terminal
Ruijie(config)# ip ssh peer test public-key rsa flash:rsa.pub
Ruijie(config)# ip ssh peer test public-key dsa flash:dsa.pub
```

Related Commands	Command	Description
	<b>show ip ssh</b>	Displays the current status of the SSH server.

**Platform** N/A

**Description**

## 10.9 ip ssh time-out

Use this command to set the authentication timeout for the SSH server.

Use the **no** form of this command to restore the default setting.

**ip ssh time-out** *time*

**no ip ssh time-out**

Parameter	Parameter	Description
Description	time	Authentication timeout, in the range from 1 to 120 in the unit of seconds
Defaults	The default is 120 seconds.	
Command Mode	Global configuration mode	
Usage Guide	The authentication is considered timeout and failed if the authentication is not successful within 120 seconds starting from receiving a connection request. Use the <b>show ip ssh</b> command to display the configuration of the SSH server.	
Configuration Examples	The following example sets the timeout value to 100 seconds. <pre>Ruijie# configure terminal Ruijie(config)# ip ssh time-out 100</pre>	
Related Commands	Command	Description
	show ip ssh	Displays the current status of the SSH server.
Platform Description	N/A	

## 10.10 show crypto key mypubkey

Use this command to display the information about the public key part of the public key to the SSH server.

**show crypto key mypubkey { rsa | dsa }**

<b>Parameter</b>	<b>Parameter</b>	<b>Description</b>
<b>Description</b>	<b>rsa</b>	Displays the RSA key.
	<b>dsa</b>	Displays the DSA key.
<b>Defaults</b>	N/A	
<b>Command Mode</b>	Privileged EXEC mode/Global configuration mode	
<b>Usage Guide</b>	This command is used to show the information about the public key part of the generated public key on the SSH server, including key generation time, key name, contents in the public key part, etc.	
<b>Configuration Examples</b>	The following example displays the information about the public key part of the public key to the SSH server. <pre>Ruijie(config)#show crypto key mypubkey rsa</pre>	

```
% Key pair was generated at: 7:1:25 UTC Jan 16 2013
Key name: RSA1 private
Usage: SSH Purpose Key
Key is not exportable.
Key Data:
      AAAAAwEA AQAAAEAA 2m6H/J+2 xOMLW5MR 8tOmpW1I XU1QItVN mLdR+G7O
Q10kz+4/
      /IgYR0ge 1sZNg32u dFEifZ6D zfLySPqC MTWLfw==

% Key pair was generated at: 7:1:25 UTC Jan 16 2013
Key name: RSA private
Usage: SSH Purpose Key
Key is not exportable.
Key Data:
      AAAAAwEA AQAAAEAA 0E5w2H0k v744uTIR yZBd/7AM 8pLitnW3 XH3LhEEi
BbZGZvn3
      LEYYfQ9s pgYL0ZQf S0s/GY0X gJOMsc6z i80AkQ==
```

Related	Command	Description
Commands	<b>crypto key generate { rsa   dsa }</b>	Generates DSA and RSA keys.

**Platform** N/A

**Description**

## 10.11 show ip ssh

Use this command to display the information of the SSH server.

**show ip ssh**

Parameter	Parameter	Description
Description	N/A	N/A

**Defaults** N/A

**Command Mode** Privileged EXEC mode/Global configuration mode

**Usage Guide** This command is used to display the information of the SSH server, including version, enablement state, authentication timeout, and authentication retry times.

Note: If no key is generated for the SSH server, the SSH version is still unavailable even if this SSH version has been configured.

**Configuration** The following example displays the information of the SSH server.

**Examples** SSH and SCP disabled:



```

Ruijie(config)#show ip ssh
SSH Disable - version 1.99
please generate rsa and dsa key to enable SSH
Authentication timeout: 120 secs
Authentication retries: 3
SSH SCP Server: disabled

SSH and SCP enabled:
Ruijie(config)#show ip ssh
SSH Enable - version 1.99
Authentication timeout: 120 secs
Authentication retries: 3
SSH SCP Server: enabled

```

#### Related Commands

Command	Description
<b>ip ssh version {1   2}</b>	Configures the version for the SSH server.
<b>ip ssh time-out time</b>	Sets the authentication timeout for the SSH server.
<b>ip ssh authentication-retries</b>	Sets the authentication retry times for the SSH server.

**Platform** N/A

**Description**

## 10.12 show ssh

Use this command to display the information about the established SSH connection.

**show ssh**

Parameter	Parameter	Description
<b>Description</b>	N/A	N/A

**Defaults** N/A

**Command Mode** Privileged EXEC mode/Global configuration mode

**Usage Guide** This command is used to display the information about the established SSH connection, including VTY number of connection, SSH version, encryption algorithm, message authentication algorithm, connection status, and user name.

**Configuration Examples** The following example displays the information about the established SSH connection:

```

Ruijie#show ssh
Connection Version Encryption      Hmac      Compress  State
Username
      0      1.5 blowfish                zlib      Session started test

```

```
1      2.0 aes256-ctr      hmac-sha1      zlib      Session started test
```

## Field Description

Field	Description
Connection	VTY number
Version	SSH version
Encryption	Encryption algorithm
Hmac	Message authentication algorithm
Compress	Compress algorithm
State	Connection state
Username	Username

Related  
Commands

Command	Description
N/A	N/A

Platform  
Description

N/A

## 11 GSN Commands

### 11.1 security address-bind enable

Use this command to enable GSN address binding on an interface.

Use the **no** form of this command to disable this function.

**security address-bind enable**

**no security address-bind enable**

#### Parameter Description

Parameter	Description
N/A	N/A

#### Defaults

GSN address binding is disabled.

#### Command Mode

Interface configuration mode

#### Usage Guide

This command takes effect only when the global security network (GSN) function is enabled and the interface is authenticated.

802.1x IP authorization should be disabled when the GSN address binding policy is applied.

#### Configuration

The following example enables GSN address binding on GigabitEthernet 0/3.

#### Examples

```
Ruijie# configure terminal
Ruijie(config)# interface gigabitEthernet 0/3
Ruijie(config-if-GigabitEthernet 0/3)# security address-bind enable
Ruijie(config)# exit
```

#### Related Commands

Command	Description
N/A	N/A

#### Platform

N/A

#### Description

### 11.2 security community

Use this command to configure the security community to communicate with the SMP server.

Use the **no** form of this command to remove the security community setting.

**security { [ v1 | v2 ] community community | v3 user username }**

**no security { [ v1 | v2 ] community community | v3 user username }**

Parameter Description	Parameter	Description
	<i>community</i>	Community string containing up to 32 characters.
	<i>username</i>	V3 security community username, containing up to 32 characters.

**Defaults** No security community is configured by default.

**Command Mode** Global configuration mode

**Usage Guide** When you are configuring the communication between the device and the server, configure an appropriate authentication name of the appropriate protocol version according to the server settings if it is necessary. If you choose v3, use the **snmp-server** command to set the v3 username. For the detailed information, please refer to *SNMP command reference*.

**Configuration** The following example sets the v1 community:

**Examples** Ruijie(config)# security v1 community public

The following example sets the v3 username as start:

Ruijie(config)# security v3 user start

Related Commands	Command	Description
	N/A	N/A

**Platform Description** N/A

## 11.3 security event interval

Use this command to set the sending interval of security events.

Use the **no** form of this command to restore the default value.

**security event interval** *interval*

**no security event interval**

Parameter Description	Parameter	Description
	<i>interval</i>	Configures the security event interval. The range is from 1 to 65,535 seconds.

**Defaults** The default interval is 5 seconds.

**Command Mode** Global configuration mode

**Usage Guide** Take care to set the sending interval of security events properly. Too small value may cause the drop of security event messages, and too large value may cause that the security event messages cannot be received in a long period.

**Configuration** The following example configures the sending interval for security events to 10.

**Examples** Ruijie# security event interval 10

The following example restores the sending interval for security events to the default setting.

Ruijie(config)# no security event interval

**Related  
Commands**

Command	Description
show security event interval	Displays the interval of security event.

**Platform** N/A

**Description**

## 11.4 security gsn enable

Use this command to enable GSN.

Use the **no** form of this command to disable GSN.

**security gsn enable**

**no security gsn enable**

**Parameter  
Description**

Parameter	Description
N/A	N/A

**Defaults** GSN is disabled by default.

**Command  
Mode** Global configuration mode

**Usage Guide** Use this command to enable GSN on the device.

**Configuration** The following example enables GSN.

**Examples** Ruijie(config)# security gsn enable

The following example disables GSN.

Ruijie(config)# no security gsn enable

**Related  
Commands**

Command	Description
N/A	N/A

**Platform** N/A

**Description**

## 11.5 show security event interval

Use this command to display the sending interval of security events.

**show security event interval**

Parameter Description	Parameter	Description
	N/Ax	N/A

**Defaults** N/A

**Command Mode** Privileged EXEC mode/Global configuration mode/Interface configuration mode

**Usage Guide** N/A

**Configuration** The following example displays the sending interval of security events.

**Examples**

```
Ruijie# show security event interval
Event sending interval(seconds): 10
```

Related Commands	Command	Description
	<b>security event interval</b> <i>interval</i>	Configures the sending interval of security events.

**Platform** N/A

**Description**

## 11.6 show smp-server

Use this command to display the IP address of the SMP server.

**show smp-server**

Parameter Description	Parameter	Description
	N/A	N/A

**Defaults** N/A

**Command** Privileged EXEC mode/Global configuration mode/Interface configuration mode

**Mode****Usage Guide** N/A**Configuration** The following example displays the IP address of the SMP server.**Examples**

```
Ruijie# show smp-server  
smp-server IP: 192.168.30.9
```

**Related  
Commands**

Command	Description
<b>smp-server host</b>	Configures the IP address for the SMP server.

**Platform** N/A**Description**

## 11.7 smp-server host

Use this command to configure the IP address for the SMP server.

Use the **no** form of this command to remove the IP address of the SMP server.

**smp-server host** *ip-address*

**no smp-server host**

**Parameter  
Description**

Parameter	Description
<i>ip-address</i>	IP address of the SMP server.

**Defaults** No SMP server address is configured by default.**Command** Global configuration mode**Mode****Usage Guide** N/A**Configuration** The following example configures the IP address of the SMP server to 192.168.30.9.**Examples**

```
Ruijie(config)# smp-server host 192.168.30.9
```

The following example removes the IP address of the SMP server.

```
Ruijie(config)# smp-server host 192.168.30.9
```

**Related  
Commands**

Command	Description
<b>show smp-server</b>	Displays the SMP server configuration.

**Platform** N/A**Description**

## 12 CPU Protection Commands

### 12.1 clear cpu-protect-counters

Use this command to clear the CPP statistics.

**clear cpu-protect counters** [ **device** *device\_num* ] [ **slot** *slot\_num* ]

**Parameter  
Description**

Parameter	Description
<i>device_num</i>	As a single physical device, there is no device parameter; As a VSU, the device parameter indicates the chassis or the box-type device. If no device parameter is specified, that indicates this command takes effect to the master chassis or the master box-type device.
<i>slot_num</i>	To the box-type device, there is no slot parameter. To the chassis device, the slot parameter indicates the line card of the master chassis. If no slot parameter is specified, that means the command will clear all node statistics in the system. If you want to clear the statistics of a specific node, both the device parameter and the slot parameter will be required.

**Defaults** N/A

**Command  
Mode** Privileged EXEC mode

**Usage Guide** N/A

**Configuration** The following example clears the CPP statistics.

**Examples**

```
Ruijie(config)#show cpu-protect type bpdu
Packet Type      Traffic-class  Bandwidth(pps)  Rate(pps)  Drop(pps)
Total    Total Drop
-----
-----
bpdu          6          200          0          0          600          50
Ruijie#clear cpu-protect counters
Ruijie(config)#show cpu-protect type bpdu
Packet Type      Traffic-class  Bandwidth(pps)  Rate(pps)  Drop(pps)
Total    Total Drop
-----
-----
bpdu          6          200          0          0          0          0
```



Related Commands	Command	Description
	N/A	N/A

**Platform** N/A

**Description**

## 12.2 clear cpu-protect-counters mboard

Use this command to clear the CPP statistics on the supervisor module.

**clear cpu-protect counters mboard**

Parameter Description	Parameter	Description
	N/A	N/A

**Defaults** N/A

**Command Mode** Privileged EXEC mode

**Usage Guide** N/A

**Configuration** The following example clears the CPP statistics on the supervisor module.

**Examples**

```
Ruijie(config)#show cpu-protect type bpdu
Packet Type      Traffic-class  Bandwidth(pps)  Rate(pps)  Drop(pps)
Total    Total Drop
-----
-----
bpdu          6          200          0          0          600          50
Ruijie#clear cpu-protect counters mboard
Ruijie(config)#show cpu-protect type bpdu
Packet Type      Traffic-class  Bandwidth(pps)  Rate(pps)  Drop(pps)
Total    Total Drop
-----
-----
bpdu          6          200          0          0          0          0
```

Related Commands	Command	Description
	N/A	N/A

**Platform** N/A

**Description**

## 12.3 cpu-protect cpu bandwidth

Use this command to configure the bandwidth for the CPU port. Use the **no** form of this command to restore the default setting.

**cpu-protect cpu bandwidth** *bandwidth\_value*

**no cpu-protect cpu bandwidth**

### Parameter Description

Parameter	Description
<i>bandwidth_value</i>	An integer number ranges from 0 to 100000 (PPS). Indicates the bandwidth value of the CPU port.

**Defaults** The default CPU port bandwidth varies with products.

**Command  
Mode** Global configuration mode

**Usage Guide** N/A

**Configuration** The following example sets the CPU port bandwidth to 32000pps.

### Examples

```
Ruijie# configure terminal
Ruijie(config)# cpu-protect cpu bandwidth 32000
Ruijie#show cpu-protect cpu
%cpu port bandwidth: 32000(pps)
```

### Related Commands

Command	Description
N/A	N/A

**Platform  
Description** N/A

## 12.4 cpu-protect traffic-class bandwidth

Use this command to configure the bandwidth for each priority queue. Use the **no** form of this command to restore the default setting.

**cpu-protect traffic-class** *traffic-class-num* **bandwidth** *bandwidth\_value*

**no cpu-protect traffic-class** *traffic-class-num* **bandwidth**

### Parameter Description

Parameter	Description
<i>traffic-class-num</i>	A default integer that varies with products, indicating the queue priority

<i>bandwidth_value</i>	An integer number ranges from 0 to 100000 (pps). Indicates the bandwidth value of the CPU port.
------------------------	---

**Defaults** The default bandwidth of each priority queue varies with products.

**Command Mode** Global configuration mode

**Usage Guide** N/A

**Configuration Examples** The following example s sets the priority queue 5 to 3500 pps.

```
Ruijie# configure terminal
Ruijie(config)# cpu-protect traffic-class 5 bandwidth 3500
Ruijie#show cpu-protect traffic-class 5
```

Traffic-class	Bandwidth(pps)	Rate(pps)	Drop(pps)
5	3500	0	0

**Related Commands**

Command	Description
N/A	N/A

**Platform Description** N/A

## 12.5 cpu-protect type bandwidth

Use this command to configure the bandwidth of a specific packet.

Use the **no** form of this command to restore the default setting.

**cpu-protect type** *packet-type* **bandwidth** *bandwidth\_value*

**no cpu-protect type** *packet-type* **bandwidth**

**Parameter Description**

Parameter	Description
<i>packet-type</i>	Packet type, which varies with products
<i>bandwidth_value</i>	An integer number ranges from 0 to 32000 (pps). Indicates the bandwidth value of the CPU port.

**Defaults** The default CPU port bandwidth varies with products.

**Command Mode** Global configuration mode

**Usage Guide** N/A

**Configuration** The following example sets the BPDU bandwidth to 200 pps.

**Examples**

```
Ruijie# configure terminal
Ruijie(config)# cpu-protect type bpdu bandwidtdth 200
Ruijie(config)#show cpu-protect type bpdu
```

Packet Type	Traffic-class	Bandwidth(pps)	Rate(pps)	Drop(pps)
Total	Total Drop			
-----				
bpdu	6	200	0	0

**Related  
Commands**

Command	Description
N/A	N/A

**Platform** N/A

**Description**

## 12.6 cpu-protect type traffic-class

Use this command to set the priority queue (PQ) of the packet.

Use the **no** form of this command to restore the default setting.

**cpu-protect type** *packet-type* **traffic-class** *traffic-class-num*

**no cpu-protect type** *packet-type* **traffic-class**

**Parameter  
Description**

Parameter	Description
<i>packet-type</i>	Packet type, which varies with products
<i>traffic-class-num</i>	An integer number varying with products. Indicates the bandwidth value of the CPU port.

**Defaults** The default PQ varies with products.

**Command  
Mode** Global configuration mode

**Usage Guide** N/A

**Configuration** The following example sets the PQ of BPDU packets to 5.

**Examples**

```
Ruijie# configure terminal
Ruijie(config)# cpu-protect type bpdu traffic-class 5
Ruijie(config)#show cpu-protect type bpdu
```

Packet Type	Traffic-class	Bandwidth(pps)	Rate(pps)	Drop(pps)
Total	Total Drop			

-----						
-----						
bpdu	5	200	0	0	0	0

**Related  
Commands**

Command	Description
N/A	N/A

**Platform** N/A  
**Description**

## 12.7 show cpu-protect

Use this command to display all CPP configuration and statistics.

**show cpu-protect** [ **device** *device\_num* ] [ **slot** *slot\_num* ]

**Parameter  
Description**

Parameter	Description
<i>device_num</i>	As a single physical device, there is no device parameter; As a VSU, the device parameter indicates the chassis or the box-type device. If no device parameter is specified, that indicates this command takes effect to the master chassis or the master box-type device.
<i>slot_num</i>	To the box-type device, there is no slot parameter. To the chassis device, the slot parameter indicates the line card of the master chassis. If no slot parameter is specified, that means the command will clear all node statistics in the system. If you want to clear the statistics of a specific node, both the device parameter and the slot parameter will be required.

**Defaults** N/A

**Command  
Mode** All configuraiton mode

**Usage Guide** N/A

**Configuration  
Examples** N/A

**Related  
Commands**

Command	Description
N/A	N/A

**Platform** N/A

**Description**

## 12.8 show cpu-protect cpu

Use this command to display the configurations of the CPU port.

**show cpu-protect cpu**

Parameter Description	Parameter	Description
	N/A	N/A

**Defaults** N/A

**Command Mode** All configuration modes

**Usage Guide** N/A

**Configuration** The following example displays the configuration of the CPU port.

**Examples**

```
Ruijie#show cpu-protect cpu
%cpu port bandwidth: 32000(pps)
```

Related Commands	Command	Description
	N/A	N/A

**Platform Description** N/A

## 12.9 show cpu-protect mboard

Use this command to display the statistics of various packets of CPU protection on the management board.

**show cpu-protect mboard**

Parameter Description	Parameter	Description
	N/A	N/A

**Defaults** N/A

**Command Mode** All configuration modes

**Usage Guide** This command displays the statistics of the packets received by CPU on the management board.

**Configuration** N/A

**Examples**

Related Commands	Command	Description
	N/A	N/A

**Platform** N/A

**Description**

## 12.10 show cpu-protect summary

Use this command to display the CPP configuration and statistics of the master device.

**show cpu-protect summary**

Parameter Description	Parameter	Description
	N/A	N/A

**Defaults** N/A

**Command  
Mode** All configuration modes

**Usage Guide** N/A

**Configuration** N/A

**Examples**

Related Commands	Command	Description
	N/A	N/A

**Platform** N/A

**Description**

## 12.11 show cpu-protect traffic-class

Use this command to display the summarized configuration and statistics of priority queues.

**show cpu-protect traffic-class** {*traffic-class-num* | **all**} [**device** *device\_num*] [**slot** *slot\_num*]

Parameter Description	Parameter	Description
	<i>traffic-class-num</i>	A default integer that varies with products, indicating the queue priority.
	<i>all</i>	Displays configurations and statistics of all priority queues.
	<i>device_num</i>	As a single physical device, there is no device parameter; As a VSU, the device parameter indicates the chassis or the box-type device. If no device parameter is specified, that indicates this command takes effect to the master chassis or the master box-type device.
	<i>slot_num</i>	To the box-type device, there is no slot parameter. To the chassis device, the slot parameter indicates the line card of the master chassis. If no slot parameter is specified, that means the command will clear all node statistics in the system. If you want to clear the statistics of a specific node, both the device parameter and the slot parameter will be required.

**Defaults** N/A

**Command Mode** All configuration modes

**Usage Guide** N/A

**Configuration Examples** The following example displays the summarized configuration and statistics of priority queues.

#### Examples

```
Ruijie#show cpu-protect traffic-class all
```

Traffic-class	Bandwidth (pps)	Rate (pps)	Drop (pps)
-----	-----	-----	-----
0	8000	0	0
1	8000	0	0
2	8000	0	0
3	8000	0	0
4	8000	0	0
5	3200	0	0
6	8000	0	0
7	8000	0	0

#### Related Commands

Command	Description
N/A	N/A

**Platform Description** N/A



## 12.12 show cpu-protect type

Use this command to display the statistics of the specified type of packets

**show cpu-protect type** *packet-type* [ **device** *device\_num* ] [ **slot** *slot\_num* ]

Parameter Description	Parameter	Description
	<i>packt-type</i>	Packet type, which varies with products
	<i>all</i>	Displays the configurations and statistics of all packet types.
	<i>device_num</i>	As a single physical device, there is no device parameter; As a VSU, the device parameter indicates the chassis or the box-type device. If no device parameter is specified, that indicates this command takes effect to the master chassis or the master box-type device.
	<i>slot_num</i>	To the box-type device, there is no slot parameter. To the chassis device, the slot parameter indicates the line card of the master chassis. If no slot parameter is specified, that means the command will clear all node statistics in the system. If you want to clear the statistics of a specific node, both the device parameter and the slot parameter will be required.

**Defaults** N/A

**Command Mode** All configuration modes

**Usage Guide** N/A

**Configuration Examples** The following example displays the statistics of the ICMP packets.

```
Ruijie(config)#show cpu-protect type icmp
```

Packet Type	Traffic-class	Bandwidth (pps)	Rate (pps)	Drop (pps)
Total	Total Drop			
-----	-----	-----	-----	-----
icmp	5	1500	50	0
100				10000

Related Commands	Command	Description
	N/A	N/A

**Platform Description** N/A

## 13 DHCP Snooping Commands

### 13.1 clear ip dhcp snooping binding

Use this command to delete the dynamic user information from the DHCP Snooping binding database.

**clear ip dhcp snooping binding** [ *ip* ] [ *mac* ] [ **vlan** *vlan-id* ] [ **interface** *interface-id* ]

#### Parameter Description

Parameter	Description
<i>mac</i>	Specifies the user MAC address to be cleared.
<i>vlan-id</i>	Specifies the ID of the VLAN to be cleared.
<i>ip</i>	Specifies the IP address to be cleared.
<i>interface-id</i>	Specifies the ID of the interface to be cleared.

#### Defaults


N/A

#### Command Mode

Privileged EXEC mode

#### Usage Guide

Use this command to clear the current dynamic user information from the DHCP Snooping binding database.

 After this command is used, all the DHCP clients connecting interfaces with IP Source Guard function enabled should request IP addresses again, or they cannot access network.

**Configuration Examples** The following example clears the dynamic database information from the DHCP Snooping binding database.

```
Ruijie# clear ip dhcp snooping binding
Ruijie# show ip dhcp snooping binding
Total number of bindings: 0
MacAddress IpAddress Lease(sec) Type VLAN Interface
-----
```

#### Related Commands

Command	Description
<b>show ip dhcp snooping binding</b>	Displays the information of the DHCP Snooping binding database.

#### Platform Description

N/A

## 13.2 ip dhcp snooping

Use this command to enable the DHCP Snooping function globally.

Use the **no** form of this command to restore the default setting.

**ip dhcp snooping**

**no ip dhcp snooping**

### Parameter Description

Parameter	Description
N/A	N/A

### Defaults

This function is disabled by default.

### Command Mode

Global configuration mode

### Usage Guide

The **show ip dhcp snooping** command is used to display whether the DHCP Snooping function is enabled.

### Configuration

The following example enables the DHCP Snooping function.

### Examples

```
Ruijie# configure terminal
Ruijie(config)# ip dhcp snooping
Ruijie(config)# end
```

### Related Commands

Command	Description
<b>show ip dhcp snooping</b>	Displays the configuration information of DHCP Snooping.
<b>ip dhcp snooping vlan</b>	Configures DHCP Snooping enabled VLAN.

### Platform

N/A

### Description

## 13.3 ip dhcp snooping bootp-bind

Use this command to enable DHCP Snooping BOOTP-bind function.

Use the **no** form of this command to restore the default setting.

**ip dhcp snooping bootp-bind**

**no ip dhcp snooping bootp-bind**

### Parameter Description

Parameter	Description
N/A	N/A

**Defaults** This function is disabled by default.

**Command Mode** Global configuration mode

**Usage Guide** By default, the DHCP Snooping only forwards BOOTP packets. With this function enabled, it can Snoop BOOTP packets. After the BOOTP client requests an address successfully, the DHCP Snooping adds the BOOTP user to the static binding database.

**Configuration Examples** The following example enables the DHCP Snooping BOOTP-bind function.

```
Ruijie# configure terminal
Ruijie(config)# ip dhcp snooping bootp-bind
Ruijie(config)# end
```

**Related Commands**

Command	Description
<b>show ip dhcp snooping</b>	Displays the DHCP Snooping configuration.

**Platform Description** N/A

## 13.4 ip dhcp snooping check-giaddr

Use this command to enable DHCP Snooping to support the function of processing Relay requests. Use the **no** form of this command to restore the default setting.

**ip dhcp snooping check-giaddr**

**no ip dhcp snooping check-giaddr**

**Parameter Description**

Parameter	Description
N/A	N/A

**Defaults** This function is disabled by default.

**Command Mode** Global configuration mode

**Usage Guide** After the feature is enabled, services using DHCP Snooping binding entries generated based on Relay requests, such as IP Source Guard/802.1x authentication, cannot be deployed. Otherwise, users fail to access the Internet.

After the feature is enabled, the **ip dhcp snooping verify mac-address** command cannot be used. Otherwise, DHCP Relay requests will be discarded and as a result, users fail to obtain addresses.

**Configuration** The following example enables DHCP Snooping to support the function of processing Relay requests.

**Examples**

```
Ruijie# configure terminal
Ruijie(config)# ip dhcp snooping check-giaddr
Ruijie(config)# end
```

**Related  
Commands**

Command	Description
<b>show ip dhcp snooping</b>	Displays the configuration information of the DHCP Snooping.

**Platform** N/A

**Description**

## 13.5 ip dhcp snooping database write-delay

Use this command to configure the switch to write the dynamic user information of the DHCP Snooping binding database into the flash periodically.

Use the **no** form of this command to restore the default setting.

**ip dhcp snooping database write-delay** *time*

**no ip dhcp snooping database write-delay**

**Parameter  
Description**

Parameter	Description
<i>time</i>	The interval at which the system writes the dynamic user information of the DHCP Snooping database into the flash, in the range from 600 to 86,400 in the unit of seconds

**Defaults** This function is disabled by default.

**Command Mode** Global configuration mode

**Usage Guide** This function writes user information into flash in case of loss after restart. In that case, users need to obtain IP addresses again for normal communication.

 Too fast writing will reduce flash durability.

**Configuration Examples** The following example sets the interval at which the switch writes the user information into the flash to 3,600 seconds.

```
Ruijie# configure terminal
Ruijie(config)# ip dhcp snooping database write-delay 3600
```

```
Ruijie(config)# end
```

**Related  
Commands**

Command	Description
<b>show ip dhcp snooping</b>	Displays the configuration information of the DHCP Snooping.

**Platform** N/A  
**Description**

## 13.6 ip dhcp snooping database write-to-flash

Use this command to write the dynamic user information of the DHCP binding database into flash in real time.

**ip dhcp snooping database write-to-flash**

**Parameter  
Description**

Parameter	Description
N/A	N/A

**Defaults** N/A

**Command  
Mode** Global configuration mode

**Usage Guide** This command is used to write the dynamic user information of the DHCP binding database into flash in real time.

**Configuration  
Examples** The following example writes the dynamic user information of the DHCP binding database into flash.

```
Ruijie# configure terminal
Ruijie(config)# ip dhcp snooping database write-to-flash
Ruijie(config)# end
```

**Related  
Commands**

Command	Description
N/A	N/A

**Platform** N/A  
**Description**

## 13.7 ip dhcp snooping information option

Use this command to add option82 to the DHCP request message.

Use the **no** form of this command to restore the default setting.

**ip dhcp snooping information option [ standard-format ]**

**no ip dhcp snooping information option [ standard-format ]**

### Parameter Description

Parameter	Description
<b>standard-format</b>	The option82 uses the standard format.

### Defaults

This function is disabled by default,

### Command Mode

Global configuration mode

### Usage Guide

This command adds option82 to the DHCP request messages based on which the DHCP server assigns IP addresses.

By default, this function is in extended mode.



DHCP Relay function adds option82 by default. Therefore, it is unnecessary to enable functions of DHCP Snooping option82 and DHCP Relay at the same time.

### Configuration

The following example adds option82 to the DHCP request message.

### Examples

```
Ruijie# configure terminal
Ruijie(config)# ip dhcp snooping information option
Ruijie(config)# end
```

### Related Commands

Command	Description
<b>show ip dhcp snooping</b>	Displays the DHCP Snooping configuration.

### Platform Description

N/A

## 13.8 ip dhcp snooping information option format remote-id

Use this command to set the option82 sub-option remote-id as the customized character string.

Use the **no** form of this command to restore the default setting.

**ip dhcp snooping information option format remote-id { string *ascii-string* | hostname }**

**no ip dhcp snooping information option format remote-id { string *ascii-string* | hostname }**

### Parameter

Parameter	Description
-----------	-------------

<b>Description</b>		
	<b>string</b> <i>ascii-string</i>	The content of the option82 remote-id extension format is customized character string.
	<b>hostname</b>	The content of the option82 remote-id extension format hostname
<b>Defaults</b>	This function is disabled by default.	
<b>Command Mode</b>	Global configuration mode	
<b>Usage Guide</b>	This command sets the remote-id in the option82 to be added to the DHCP request message as the customized character string. The DHCP server will assign the IP address according to the option82 information.	
<b>Configuration Examples</b>	The following example adds the option82 into the DHCP request packets with the content of remote-id as hostname. <pre>Ruijie# configure terminal Ruijie(config)# ip dhcp snooping information option format remote-id hostname</pre>	
<b>Related Commands</b>	<b>Command</b>	<b>Description</b>
	N/A	N/A
<b>Platform Description</b>	N/A	

## 13.9 ip dhcp snooping information option strategy

Use this command to configure Option82 strategy.

Use the **no** form of this command to restore the default setting.

**ip dhcp snooping information option strategy {keep | drop | replace}**

**no ip dhcp snooping information option strategy**

<b>Parameter Description</b>	<b>Parameter</b>	<b>Description</b>
	<b>keep</b>	Indicates reception of request packets with Option82. Option82 is kept and the packets are forwarded.
	<b>drop</b>	Indicates reception of request packets with Option82. The packets are dropped.
	<b>replace</b>	Indicates reception of request packets with Option82. Option82 of the packets are replaced with Option82 configured latest. The packets are forwarded.



**Defaults** This function is disabled by default.

**Command Mode** Global configuration mode

**Usage Guide** This command only works for request packets with Option82.  
If strategy is “keep” or “drop”, trailing padding is not needed for request packets with Option82.  
If strategy is “replace”, trailing padding is needed for request packets with Option82.  
Request packets without Option82 are padded with trailing.

**Configuration** The following example sets “keep” as strategy.

**Examples**

```
Ruijie# configure terminal
Ruijie(config)# ip dhcp snooping information option strategy keep
```

Related Commands	Command	Description
	N/A	N/A

**Platform** N/A  
**Description**

## 13.10 ip dhcp snooping loose-forward

Use this command to enable DHCP Snooping loose forwarding.

Use the **no** form of this command to restore the default setting.

**ip dhcp snooping loose-forward**

**no ip dhcp snooping loose-forward**

Parameter Description	Parameter	Description
	N/A	N/A

**Defaults** This function is disabled by default.

**Command Mode** Global configuration mode

**Usage Guide** After this feature is enabled, when the capacity of DHCP Snooping binding entries is reached, DHCP packets of new users are forwarded and obtain addresses, but DHCP Snooping does not record binding entries of new users.

**Configuration** The following example enables DHCP Snooping loose forwarding.

**Examples**

```
Ruijie# configure terminal
Ruijie(config)# ip dhcp snooping loose-forward
```

```
Ruijie(config)# end
```

**Related  
Commands**

Command	Description
N/A	N/A

**Platform  
Description**

N/A

## 13.11 ip dhcp snooping suppression

Use this command to set the port to be the suppression status.

Use the **no** form of this command to restore the default setting.

**ip dhcp snooping suppression**

**no ip dhcp snooping suppression**

**Parameter  
Description**

Parameter	Description
N/A	N/A

**Defaults**

This function is disabled by default.

**Command  
Mode**

Interface configuration mode

**Usage Guide**

This command denies all DHCP request messages under the port, that is, all the users under the port are prohibited to request IP addresses through DHCP.

This command is only supported on Layer 2 switch interfaces and aggregate ports (APs).

**Configuration  
Examples**

The following example sets **fastEthernet** 0/2 to be in the suppression status.

```
Ruijie# configure terminal
Ruijie(config)# interface fastEthernet 0/2
Ruijie(config-if)# ip dhcp snooping suppression
Ruijie(config-if)# end
```

**Related  
Commands**

Command	Description
<b>show ip dhcp snooping</b>	Displays the DHCP Snooping configuration.

**Platform  
Description**

N/A

## 13.12 ip dhcp snooping trust

Use this command to set the trusted ports for DHCP Snooping.

Use the **no** form of this command to restore the default setting.

**ip dhcp snooping trust**

**no ip dhcp snooping trust**

### Parameter Description

Parameter	Description
N/A	N/A

### Defaults

All ports are untrusted by default.

### Command Mode

Interface configuration mode

### Usage Guide

Use this command to set a port as a trusted port. The DHCP response messages received under the trust port are forwarded normally, but the response messages received under the untrusted port will be discarded. This command is only supported on Layer 2 switch interfaces and aggregate ports (APs).

### Configuration

The following example sets fastEthernet 0/1 as a trusted port:

### Examples

```
Ruijie# configure terminal
Ruijie(config)# interface fastEthernet 0/1
Ruijie(config-if)# ip dhcp snooping trust
Ruijie(config-if)# end
```

### Related Commands

Command	Description
<b>show ip dhcp snooping</b>	Displays the DHCP Snooping configuration.

### Platform

N/A

### Description

## 13.13 ip dhcp snooping verify mac-address

Use this command to check whether the source MAC address of the DHCP request message matches against the **client addr** field of the DHCP message.

Use the **no** form of this command to restore the default setting.

**ip dhcp snooping verify mac-address**

**no ip dhcp snooping verify mac-address**

### Parameter

Parameter	Description
-----------	-------------

<b>Description</b>		
	N/A	N/A

**Defaults** This function is disabled by default.

**Command Mode** Global configuration mode

**Usage Guide** Use this command to check the source MAC address of the DHCP request message. If the MAC address in the link-layer header is different from the CHADDR (Client MAC Address), the check fails ,and the packets will be discarded.

**Configuration** The following example enables the check of the source MAC address of the DHCP request message.

**Examples**

```
Ruijie# configure terminal
Ruijie(config)# ip dhcp snooping verify mac-address
Ruijie(config)# end
```

<b>Related Commands</b>	Command	Description
	<b>show ip dhcp snooping</b>	Displays the DHCP Snooping configuration.

**Platform** N/A

**Description**

## 13.14 ip dhcp snooping vlan

Use this command to enable DHCP Snooping for the specific VLAN.

Use the **no** form of this command to restore the default setting.

**ip dhcp snooping vlan** {vlan-rng | { vlan-min [ vlan-max ] } }

**no ip dhcp snooping vlan** {vlan-rng | { vlan-min [ vlan-max ] } }

<b>Parameter Description</b>	Parameter	Description
	<i>vlan-rng</i>	VLAN range of effective DHCP Snooping
	<i>vlan-min</i>	Minimum VLAN of effective DHCP Snooping
	<i>vlan-max</i>	Maximum VLAN of effective DHCP Snooping

**Defaults** By default, once the DHCP Snooping is enabled globally, it takes effect for all VLANs.

**Command Mode** Global configuration mode

**Usage Guide** Use this command to enable DHCP Snooping for specified VLANs globally.

**Configuration** The following example enables the DHCP Snooping function in VLAN 1000.

**Examples**

```
Ruijie# configure terminal
Ruijie(config)# ip dhcp snooping vlan 1000
Ruijie(config)# end
```

**Related  
Commands**

Command	Description
<b>ip dhcp snooping</b>	Enables DHCP Snooping globally.

**Platform** N/A

**Description**

## 13.15 ip dhcp snooping vlan max-user

Use this command to set the maximum number of users bound with the VLAN.

Use the **no** form of this command to restore the default setting.

**ip dhcp snooping vlan** *vlan-word* **max-user** *user-number*

**no ip dhcp snooping vlan** *vlan-word* **max-user** *user-number*

**Parameter  
Description**

Parameter	Description
<i>vlan-word</i>	The VLAN range
<i>user-number</i>	The maximum number of users bound with the VLAN

**Defaults** This function is disabled by default.

**Command  
Mode** Interface configuration mode

**Usage Guide** Use this command to set the maximum number of users bound with the VLAN. This function combined with the corresponding topology can prevent illegal DHCP packet attacks.

**Configuration  
Examples** The following example sets the maximum number of users bound with VLAN 1 to 10 and VLAN 20 to 30 respectively.

```
Ruijie# configure terminal
Ruijie(config)# interface GigabitEthernet 0/1
Ruijie(config-if-GigabitEthernet 0/1)# ip dhcp snooping vlan 1-10,20 max-user 30
Ruijie(config-if-GigabitEthernet 0/1)# end
```

**Related  
Commands**

Command	Description
N/A	N/A

**Platform** N/A  
**Description**

## 13.16 ip dhcp snooping vlan information option change-vlan-to vlan

Use this command to enable the option82 sub-option circuit-id and change the VLAN in the circuit-id into the specified VLAN.

Use the **no** form of this command to restore the default setting.

**ip dhcp snooping vlan** *vlan-id* **information option change-vlan-to vlan** *vlan-id*

**no ip dhcp snooping vlan** *vlan-id* **information option change-vlan-to vlan** *vlan-id*

**Parameter**  
**Description**

Parameter	Description
<i>vlan-id</i>	The ID of the VLAN to be replaced

**Defaults** This function is disabled by default.

**Command** Interface configuration mode  
**Mode**

**Usage Guide** With this command configured, the option82 is added to the DHCP request packets, the circuit-id in the option82 information is the specified VLAN and the DHCP server will assign the addresses according to the option82 information.

**Configuration Examples** The following adds the option82 to the DHCP request packets and changes the VLAN 4094 in the option82 sub-option circuit-id to VLAN93:

```
Ruijie# configure terminal
Ruijie(config)# interface fastEthernet 0/1
Ruijie(config-if)# ip dhcp snooping vlan 4094 information option
change-vlan-to vlan 4093
Ruijie(config-if)# end
```

**Related**  
**Commands**

Command	Description
N/A	N/A

**Platform** N/A  
**Description**

## 13.17 ip dhcp snooping vlan information option format-type circuit-id string

Use this command to configure the option82 sub-option circuit-id as user-defined (the storage format is ASCII) and to perform the packet forwarding.

Use the **no** form of this command to restore the default setting.

**ip dhcp snooping vlan** *vlan-id* **information option format-type circuit-id string** *ascii-string*

**no ip dhcp snooping vlan** *vlan-id* **information option format-type circuit-id string** *ascii-string*

Parameter Description	Parameter	Description
	<i>vlan-id</i>	The VLAN where the DHCP request packets are
	<i>ascii-string</i>	The user-defined content to fill to the Circuit ID

**Defaults** This function is disabled by default.

**Command Mode** Interface configuration mode

**Usage Guide** This command is used to add the option82 to the DHCP request packets. The content of the sub-option circuit-id is customized with 3 to 63 bytes, and the DHCP server will assign the addresses according the option82 information.

**Configuration Examples** The following example adds the option82 to the DHCP request packets with the content of the sub-option circuit-id as *port-name*.

```
Ruijie# configure terminal
Ruijie(config)# interface fastEthernet 0/1
Ruijie(config-if)# ip dhcp snooping vlan 4094 information option format-type
circuit-id string port-name
Ruijie(config-if)# end
```

Related Commands	Command	Description
	N/A	N/A

**Platform Description** N/A

## 13.18 renew ip dhcp snooping database

Use this command to import the information in current flash to the DHCP Snooping binding database manually as needed.


**renew ip dhcp snooping database**

Parameter Description	Parameter	Description
	N/A	N/A

**Defaults** N/A

**Command Mode** Privileged EXEC mode

**Usage Guide** This command is used to import the flash file information to the DHCP Snooping database in real time.

 Records out of lease time and repeated will be neglected.

**Configuration** The following example imports the flash file information to the DHCP Snooping database.

**Examples** Ruijie# renew ip dhcp snooping database

Related Commands	Command	Description
	N/A	N/A

**Platform Description** N/A

## 13.19 show ip dhcp snooping

Use this command to display the DHCP Snooping configuration.

**show ip dhcp snooping**

Parameter Description	Parameter	Description
	N/A	N/A

**Defaults** N/A

**Command Mode** Privileged EXEC mode

**Usage Guide** N/A

**Configuration** The following example displays the DHCP Snooping configuration.

**Examples** Ruijie# show ip dhcp snooping



```

Switch DHCP snooping status :ENABLE
Verification of hwaddr field status :DISABLE
DHCP snooping database write-delay time: 0 seconds
DHCP snooping option 82 status: ENABLE
DHCP snooping Support Bootp bind status: ENABLE
Interface                                     Trusted                                     Rate
limit(pps)
-----
-----
GigabitEthernet 0/4                           YES                                     unlimited
Default                                         No

```

#### Related Commands

Command	Description
<b>ip dhcp snooping</b>	Enables the DHCP Snooping globally.
<b>ip dhcp snooping verify mac-address</b>	Enables the check of source MAC address of DHCP Snooping packets.
<b>ip dhcp snooping write-delay</b>	Sets the interval of writing user information to FLASH periodically.
<b>ip dhcp snooping information option</b>	Adds option82 to the DHCP request message.
<b>ip dhcp snooping bootp-bind</b>	Enables the DHCP Snooping bootp bind function.
<b>ip dhcp snooping trust</b>	Sets the port as a trust port.

**Platform** N/A

**Description**

## 13.20 show ip dhcp snooping binding

Use this command to display the information of the DHCP Snooping binding database.

**show ip dhcp snooping binding**

#### Parameter Description

Parameter	Description
N/A	N/A

**Defaults** N/A

**Command  
Mode** Privileged EXEC mode

**Usage Guide** This command is used to display all the information of the DHCP Snooping binding database.

**Configuration** 1: The following example displays the information of the DHCP Snooping binding database.

**Examples**

```
Ruijie# show ip dhcp snooping binding
```

```
Total number of bindings: 1
```

```
NO.      MACADDRESS      IPADDRESS      LEASE (SEC)    TYPE          VLAN
INTERFACE
-----
```

```
1        0000.0000.0001    1.1.1.1        78128          DHCP-Snooping 1
GigabitEthernet 0/1
```

Parameter	Description
Total number of bindings	The total number of bindings in the DHCP Snooping database.
NO.	The record order.
MacAddress	The MAC address of the user.
IpAddress	The IP address of the user.
Lease(sec)	The lease time of the record.
Type	The record type.
VLAN	The VLAN where the user belongs.
Interface	The user's connection interface. It can be a either a wired access interface or wireless access WLAN.

**Related Commands**

Command	Description
<b>ip dhcp snooping binding</b>	Adds the static user information to the DHCP Snooping database.
<b>clear ip dhcp snooping binding</b>	Clears the dynamic user information from the DHCP Snooping binding database.

**Platform** N/A

**Description**

## 14 DHCPv6 Snooping Commands

### 14.1 clear ipv6 dhcp snooping binding

Use this command to clear all the user information in the DHCPv6 Snooping binding database.

**clear ipv6 dhcp snooping binding** [ *mac* | **vlan** *vlan-id* | *ipv6-address* | **interface** *interface-id* ]

Parameter Description	Parameter	Description
	<i>mac</i>	Specifies the MAC address to be deleted.
	<i>vlan-id</i>	Specifies the ID of the VLAN to be cleared.
	<i>ipv6-address</i>	Specifies the IPv6 address to be cleared.
	<i>interface-id</i>	Specifies the interface to be cleared.

**Defaults** N/A

**Command Mode** Privileged EXEC mode

**Usage Guide** This command is used to clear the generated user information in the DHCPv6 Snooping binding database.

**Configuration Examples** The following example clears all the user information in the DHCPv6 Snooping binding database.

```
Ruijie# clear ipv6 dhcp snooping binding
Ruijie# show ipv6 dhcp snooping binding
NO.  MacAddress      IPv6 Address  Lease(sec)  VLAN  Interface
FilterType  FilterStatus
-----
-----
Total number of bindings: 0
```

Related Commands	Command	Description
	N/A	N/A

**Platform Description** N/A

### 14.2 clear ipv6 dhcp snooping prefix

Use this command to clear all the user information in the DHCPv6 Snooping prefix list.

**clear ipv6 dhcp snooping prefix** [ *mac* | **vlan** *vlan-id* | *ipv6-prefix* | **interface** *interface-id* ]

Parameter Description	Parameter	Description
	<i>mac</i>	Specifies the MAC address to be deleted.
	<i>vlan-id</i>	Specifies the ID of the VLAN to be cleared.
	<i>ipv6-address</i>	Specifies the IPv6 address to be cleared.
	<i>interface-id</i>	Specifies the interface to be cleared.

**Defaults** N/A

**Command Mode** Privileged EXEC mode

**Usage Guide** This command is used to clear the generated user information in the DHCPv6 Snooping prefix list.

**Configuration Examples** The following example clears all the user information in the DHCPv6 Snooping binding database

```
Ruijie# clear ipv6 dhcp snooping prefix
Ruijie# show ipv6 dhcp snooping prefix
NO.  MacAddress      IPv6 Prefix  Lease(sec)  VLAN  Interface
FilterType  FilterStatus
-----
-----
Total number of prefixes: 0
```

Related Commands	Command	Description
	N/A	N/A

**Platform Description** N/A

## 14.3 clear ipv6 dhcp snooping statistics

Use this command to clear the statistical information of the DHCPv6 packets.

**clear ipv6 dhcp snooping statistics**

Parameter Description	Parameter	Description
	N/A	N/A

**Defaults** N/A

**Command** Privileged EXEC mode

**Mode**

**Usage Guide** This command is used to clear the statistical information of the DHCPv6 packets.

**Configuration** The following example clears the statistical information of the DHCPv6 packets.

**Examples**

```
Ruijie# clear ipv6 dhcp snooping statistics
Ruijie# show ipv6 dhcp snooping statistics
Packets Processed by DHCPv6 Snooping = 0
Packets Dropped Because
Received on untrusted ports      = 0
Relay forward                    = 0
No binding entry                 = 0
Binding fail                     = 0
Unknown packet                  = 0
Unknown output interface        = 0
No enough memory                 = 0
Admin filter-dhcpv6-pkt         = 0
```

**Related  
Commands**

Command	Description
N/A	N/A

**Platform** N/A

**Description**

## 14.4 ipv6 dhcp snooping

Use this command to enable the DHCPv6 Snooping function globally.

Use the **no** form of this command to restore the default setting.

**ipv6 dhcp snooping**

**no ipv6 dhcp snooping**

**Parameter  
Description**

Parameter	Description
N/A	N/A

**Defaults** This function is disabled by default.

**Command** Global configuration mode

**Mode**

**Usage Guide** The **show ip dhcpv6 snooping** command is used to display whether the DHCPv6 Snooping function is enabled.

**Configuration** The following example enables the DHCPv6 Snooping function globally.

**Examples**

```
Ruijie# configure terminal
Ruijie(config)# ipv6 dhcp snooping
Ruijie(config)# end
```

**Related  
Commands**

Command	Description
<b>show ipv6 dhcp snooping</b>	Displays the DHCPv6 Snooping .

**Platform** N/A  
**Description**

## 14.5 ipv6 dhcp snooping binding-delay

Use this command to add the dynamic binding entry to the hardware filtering list after the delay.

Use the **no** form of this command to restore the default setting.

**ipv6 dhcp snooping binding-delay** *seconds*

**no ipv6 dhcp snooping binding-delay**

**Parameter  
Description**

Parameter	Description
<i>seconds</i>	Sets the binding delay time.

**Defaults** This function is disabled by default.

**Command  
Mode** Global configuration mode

**Usage Guide** By default, the dynamic binding entries are added to the hardware filtering list in real time. With this command configured, if no IPv6 address conflict is detected within the specified time, the dynamic binding entries are added to the hardware filtering list.

**Configuration** The following example sets the delay to 10 seconds.

**Examples**

```
Ruijie(config)# ipv6 dhcp snooping binding-delay 10
```

**Related  
Commands**

Command	Description
N/A	N/A

**Platform** N/A  
**Description**

## 14.6 ipv6 dhcp snooping database write-delay

Use this command to write the dynamic user information of the DHCPv6 Snooping binding database into the flash periodically.

Use the **no** form of this command to restore the default setting.

**ipv6 dhcp snooping database write-delay** *time*

**no ipv6 dhcp snooping database write-delay**

### Parameter Description

Parameter	Description
<i>time</i>	The interval ranging from 600 to 86,400 in the unit of seconds, at which the system writes the dynamic user information of the DHCP Snooping database into the flash.

### Defaults

This function is disabled by default.

### Command Mode

Global configuration mode

### Usage Guide

This function writes user information into flash and can avoid loss after restart. In that case, users need to obtain IP addresses again for normal communication.



Too fast writing will reduce flash durability.

### Configuration Examples

The following example sets the interval at which the switch writes the user information into the flash to 3,600 seconds.

```
Ruijie# configure terminal
Ruijie(config)# ip dhcp snooping database write-delay 3600
Ruijie(config)# end
```

### Related Commands

Command	Description
<b>show ipv6 dhcp snooping</b>	Displays the DHCPv6 Snooping configuration.

### Platform Description

N/A

## 14.7 ipv6 dhcp snooping database write-to-flash

Use this command to write the dynamic user information of the DHCPv6 binding database into flash in real time.

**ipv6 dhcp snooping database write-to-flash**

<b>Parameter Description</b>	Parameter	Description
	N/A	N/A
<b>Defaults</b>	N/A	
<b>Command Mode</b>	Global configuration mode	
<b>Usage Guide</b>	Use this command to write the dynamic user information of the DHCPv6 binding database into flash in real time.	
<b>Configuration Examples</b>	<p>The following example writes the dynamic user information of the DHCPv6 binding database into flash.</p> <pre>Ruijie# configure terminal Ruijie(config)# ipv6 dhcp snooping database write-to-flash Ruijie(config)# end</pre>	
<b>Related Commands</b>	Command	Description
	N/A	N/A
<b>Platform Description</b>	N/A	

## 14.8 ipv6 dhcp snooping filter-dhcp-pkt

Use this command to filter all received DHCPv6 request packets.

Use the **no** form of this command to restore the default setting.

**ipv6 dhcp snooping filter-dhcp-pkt**

**no ipv6 dhcp snooping filter-dhcp-pkt**

<b>Parameter Description</b>	Parameter	Description
	N/A	N/A
<b>Defaults</b>	This function is disabled by default.	
<b>Command Mode</b>	Interface configuration mode	
<b>Usage Guide</b>	<p>Use this command to filter all received DHCPv6 request packets, that is, to avoid all the DHCPv6 users on this interface to apply for the addresses.</p> <p>This command is valid only on 2-layer wired switch ports, aggregate ports and sub interfaces as well</p>	



as in air interfaces.

**Configuration** The following example filters all DHCPv6 request packets on interface FastEthernet 0/1 and WLAN 1.

**Examples**

```
Ruijie# configure terminal
Ruijie(config)# interface GigabitEthernet 0/2
Ruijie(config-if-GigabitEthernet 0/2)# ipv6 dhcp snooping filter-dhcp-pkt
Ruijie(config-if-GigabitEthernet 0/2)# end
```

**Related  
Commands**

Command	Description
N/A	N/A

**Platform** N/A  
**Description**

## 14.9 ipv6 dhcp snooping information option

Use this command to add option18/37 to the DHCPv6 request packets.

Use the **no** form of this command to restore the default setting.

**ipv6 dhcp snooping information option [ standard-format ]**

**no ipv6 dhcp snooping information option [ standard-format ]**


**Parameter  
Description**

Parameter	Description
<b>standard-format</b>	The Option18/37 uses the standard format.

**Defaults** This function is disabled by default.

**Command** Global configuration mode  
**Mode**

**Usage Guide** With this command configured, the option18/37 will be added to the DHCPv6 request packets and the DHCPv6 server will assign the addresses according to the option18/37 information. Use this command without parameter **standard-format** to enable the standard format.

 DHCPv6 Relay function adds option18/37 by default. Therefore, it is unnecessary to enable functions of DHCP Snooping option18/37 and DHCPv6 Relay at the same time.

**Configuration** The following example adds the option18/37 into the DHCPv6 packets.

**Examples**

```
Ruijie# configure terminal
Ruijie(config)# ipv6 dhcp snooping information option
Ruijie(config)# end
Ruijie# show ipv6 dhcp snooping
Switch DHCPv6 snooping status :ENABLE
```

```

DHCPv6 snooping vlan: 1-4094
DHCPv6 snooping database write-delay time: 0 seconds
DHCPv6 snooping option 18/37 status: ENABLE
DHCPv6 snooping link detection :DISABLE
Interface          Trusted    Filter DHCP
-----
FastEthernet0/10   yes      DISABLE

```

#### Related Commands

Command	Description
<b>show ipv6 dhcp snooping</b>	Displays the configuration information of the DHCPv6 Snooping.

**Platform** N/A

#### Description

## 14.10 ipv6 dhcp snooping information option format remote-id

Use this command to add option37 remote-id customized character string into the DHCPv6 request packets.

Use the **no** form of this command to restore the default setting.

**ipv6 dhcp snooping information option format remote-id [ string *ascii-string* | hostname ]**

**no ipv6 dhcp snooping information option format remote-id [ string *ascii-string* | hostname ]**

#### Parameter Description

Parameter	Description
<b>string</b> <i>ascii-string</i>	The content of Option37 remote-id extension format is customized character string.
<b>hostname</b>	The content of Option37 remote-id extension format is hostname.

**Defaults** This function is disabled by default.

**Command Mode** Global configuration mode

**Usage Guide** With this command configured, the option37 remote-id will be added to the DHCPv6 request packets with the content as the customized and the DHCPv6 server will assign the addresses according to the option37 information.

**Configuration Examples** The following example adds the option37 remote-id to the DHCPv6 request packets with the content being hostname.

```

Ruijie# configure terminal
Ruijie(config)# ipv6 dhcp snooping information option format remote-id
hostname

```

Related Commands	Command	Description
	N/A	N/A

**Platform** N/A  
**Description**

## 14.11 ipv6 dhcp snooping link-detection

Use this command to clear the dynamic binding entry on an interface when the interface links down.

Use the **no** form of this command to restore the default setting.

**ipv6 dhcp snooping link-detection**

**no ipv6 dhcp snooping link-detection**

Parameter Description	Parameter	Description
	N/A	N/A

**Defaults** This function is disabled by default.

**Command Mode** Global configuration mode

**Usage Guide** By default, the dynamic binding entries are not cleared on a wired interface when the interface links down. With this function enabled, the dynamic binding entries are auto-cleared on an interface when the interface is in the LINK DOWN status.

**Configuration Examples** The following example clears the dynamic binding entry on a wired interface when the interface is in the LINK DOWN status.

```
Ruijie# configure terminal
Ruijie(config)# ipv6 dhcp snooping link-detection
```

Related Commands	Command	Description
	<b>show ipv6 dhcp snooping</b>	Displays the configuration information of the DHCPv6 Snooping.

**Platform**  
**Description** N/A

## 14.12 ipv6 dhcp snooping trust

Use this command to set the specified DHCPv6 Snooping ports as the trusted ports.

Use the **no** form of this command to restore the default setting.

**ipv6 dhcp snooping trust**

**no ipv6 dhcp snooping trust**

Parameter Description	Parameter	Description
	N/A	N/A

**Defaults** All ports are untrusted ports by default.

**Command Mode** Interface configuration mode

**Usage Guide**

1. Use this command to set a port as a trusted port. The DHCPv6 Server response messages received under the trust port are forwarded normally, but the response messages received under the untrusted port will be discarded.
2. This command is valid only on Layer 2 wired switch ports and aggregate ports.

**Configuration** The following example sets **FastEthernet 0/1** as a trust port:

**Examples**

```
Ruijie# configure terminal
Ruijie(config)# interface GigabitEthernet 0/1
Ruijie(config-if)# ipv6 dhcp snooping trust
Ruijie(config-if)# end
```

Related Commands	Command	Description
	<b>show ipv6 dhcp snooping</b>	Displays the DHCPv6 Snooping configuration.

**Platform Description** N/A

## 14.13 ipv6 dhcp snooping vlan

Use this command to enable DHCPv6 Snooping for the specific VLAN.

Use the **no** form of this command to disable this function.

**ipv6 dhcp snooping vlan** { *vlan-rng* | { *vlan-min* [ *vlan-max* ] } }

**no ipv6 dhcp snooping vlan** { *vlan-rn* | { *vlan-min* [ *vlan-max* ] } }

Parameter Description	Parameter	Description

<i>vlan-rng</i>	Sets the valid VLAN range.
<i>vlan-min</i>	Minimum VLAN ID
<i>vlan-max</i>	Maximum VLAN ID

**Defaults** By default, once the DHCPv6 Snooping is enabled globally, it takes effect for all VLANs.

**Command Mode** Global configuration mode

**Usage Guide** With the global DHCPv6 snooping enabled, this function is enabled in all VLANs by default.

**Configuration** The following example enables the DHCPv6 Snooping function in VLAN 1000.

**Examples**

```
Ruijie# configure terminal
Ruijie(config)# ipv6 dhcp snooping vlan 1000
Ruijie(config)# end
```

The following example enables the DHCPv6 Snooping function in VLAN 1 to VLAN 10.

```
Ruijie# configure terminal
Ruijie(config)# ipv6 dhcp snooping vlan 1-10
Ruijie(config)# end
```

**Related Commands**

Command	Description
N/A	N/A

**Platform** N/A

**Description**

## 14.14 ipv6 dhcp snooping vlan information option change-vlan-to vlan

Use this command to enable the function of adding the option18 interface-id into the DHCP request packets and change the VLAN to the specified VLAN for the forwarding.

Use the **no** form of this command to restore the default setting.

**ipv6 dhcp snooping vlan *vlan-id* information option change-vlan-to vlan *vlan-id***

**no ipv6 dhcp snooping vlan *vlan-id* information option change-vlan-to vlan *vlan-id***

**Parameter Description**

Parameter	Description
<i>vlan-id</i>	Specifies the ID of the VLAN to be replaced.

**Defaults** This function is disabled by default.

**Command Mode** Interface configuration mode

**Usage Guide** With this command enabled, the option18 interface-id will be added into the DHCPv6 request packets and the VLAN will be changed to the specified one and the DHCP server will assign the addresses according to the optionq8 information.

**Configuration Examples** The following example adds the option18 interface-id into the DHCPv6 request packets and changes the VLAN4094 in the option to VLAN 4093.

```
Ruijie# configure terminal
Ruijie(config)# interface fastEthernet 0/1
Ruijie(config-if)# ipv6 dhcp snooping vlan 4094 information option
change-vlan-to vlan 4093
Ruijie(config-if)# end
```

**Related  
Commands**

Command	Description
N/A	N/A

**Platform** N/A  
**Description**

## 14.15 ipv6 dhcp snooping vlan information option format-type

### interface-id string

Use this command to enable the function of adding the option18 into the DHCP request packets and filling the option18 interface-id with the content being the user-defined (the storage format is ASCII) and performing the packet forwarding.

Use the **no** form of this command to restore the default setting.

**ipv6 dhcp snooping vlan** *vlan-id* **information option format-type interface-id string** *ascii-string*  
**no ipv6 dhcp snooping vlan** *vlan-id* **information option format-type interface-id string** *ascii-string*

**Parameter  
Description**

Parameter	Description
<i>vlan-id</i>	The VLAN where the DHCPv6 request packets are
<i>ascii-string</i>	User-defined content for filling the interface-id

**Defaults** This function is disabled by default.

**Command Mode** Interface configuration mode

**Usage Guide** With this command configured, the option18 interface-id will be added into the DHCPv6 request packets with the content being user-defined and the DHCPv6 server will assign the addresses according to the option18 information.

**Configuration** The following example adds the option18 interface-id to the DHCPv6 request packets with the content being *port-name*.

**Examples**

```
Ruijie# configure terminal
Ruijie(config)# interface fastEthernet 0/1
Ruijie(config-if)# ipv6 dhcp snooping vlan 4094 information option format-type
interface-id string port-name
Ruijie(config-if)# end
```

**Related  
Commands**

Command	Description
N/A	N/A

**Platform** N/A

**Description**

## 14.16 renew ipv6 dhcp snooping database

Use this command to import the information in current flash to the DHCPv6 Snooping binding database manually as needed.

**renew ipv6 dhcp snooping database**


**Parameter  
Description**

Parameter	Description
N/A	N/A

**Defaults** N/A

**Command  
Mode** Privileged EXEC mode

**Usage Guide** This command is used to import the flash file information to the DHCPv6 Snooping database in real time.

 Records out of lease time and repeated will be neglected.

**Configuration** The following example imports the flash file information to the DHCPv6 Snooping database.

**Examples**

```
Ruijie# renew ipv6 dhcp snooping database
```

**Related  
Commands**

Command	Description
N/A	N/A

**Platform** N/A

**Description**

## 14.17 show ipv6 dhcp snooping

Use this command to display the setting of the DHCPv6 Snooping.

**show ipv6 dhcp snooping**

Parameter Description	Parameter	Description
	N/A	N/A

**Defaults** N/A

**Command Mode** Privileged EXEC mode

**Usage Guide** N/A

**Configuration Examples** The following example displays the setting of the DHCPv6 Snooping.

```
Ruijie# show ipv6 dhcp snooping
Switch DHCPv6 snooping status :ENABLE
DHCPv6 snooping vlan: 1-4094
DHCPv6 snooping database write-delay time: 0 seconds
DHCPv6 snooping option 18/37 status: DISABLE
DHCPv6 snooping link detection :DISABLE
Interface           Trusted    Filter DHCP
-----
FastEthernet0/10    yes      DISABLE
```

Related Commands	Command	Description
	N/A	N/A

**Platform Description** N/A

## 14.18 show ipv6 dhcp snooping binding

Use this command to display the information of the DHCPv6 Snooping binding database.

**show ipv6 dhcp snooping binding** [ *mac* ] [ *vlan* *vlan-id* ] [ *ipv6-address* ] [ **interface** *interface-id* ]

Parameter Description	Parameter	Description
-----------------------	-----------	-------------



<i>ipv6-address</i>	Displays the IPv6 address binding entry.
<i>mac-address</i>	Displays the MAC address binding entry.
<i>vlan vlan_id</i>	Displays the VLAN binding entry.
<b>interface</b> <i>interface_name</i>	Displays the interface binding entry.

**Defaults** N/A

**Command Mode** Privileged EXEC mode

**Usage Guide** N/A

**Configuration** The following example displays the information of the DHCP Snooping binding database.

**Examples**

```
Ruijie# show ipv6 dhcp snooping binding
Total number of bindings: 1
NO.   MacAddress          IPv6 Address          Lease (sec)
VLAN  Interface
-----
1     00d0.f801.0101       2001::10              42368              2
GigabitEthernet 0/1
```

Related Commands	Command	Description
	N/A	N/A

**Platform** N/A

**Description**

## 14.19 show ipv6 dhcp snooping prefix

Use this command to display all user information in the DHCPv6 Snooping prefix list.

**show ipv6 dhcp snooping prefix** [*mac* | **vlan** *vlan-id* | *ipv6-prefix* | **interface** *interface-id*]

Parameter Description	Parameter	Description
	<i>ipv6-prefix</i>	Displays the IPv6 address prefix entry.
	<i>mac-address</i>	Displays the MAC address prefix entry.
	<b>vlan</b> <i>vlan_id</i>	Displays the VLAN prefix entry.
	<b>interface</b> <i>interface_name</i>	Displays the interface prefix entry.

**Defaults** N/A

**Command** Privileged EXEC mode  
**Mode**

**Usage Guide** N/A

**Configuration** The following example displays all user information in the DHCPv6 Snooping prefix list.

**Examples**

```
Ruijie# show ipv6 dhcp snooping prefix
Total number of prefix: 1

NO.   MacAddress      IPv6 Prefix      Lease(sec)
VLAN  Interface
-----
1     00d0.f801.0101     2001:2002::/64   42368
2     GigabitEthernet 0/1
```

**Related  
Commands**

Command	Description
N/A	N/A

**Platform** N/A  
**Description**

## 14.20 show ipv6 dhcp snooping statistics

Use this command to display the statistical information of the DHCPv6 packets.

**show ipv6 dhcp snooping statistics**

**Parameter  
Description**

Parameter	Description
N/A	N/A

**Defaults** N/A

**Command** Privileged EXEC mode  
**Mode**

**Usage Guide** N/A

**Configuration** The following example displays the statistical information of the DHCPv6 packets.

**Examples**

```
Ruijie# show ipv6 dhcp snooping statistics
Packets Processed by DHCPv6 Snooping = 0
Packets Dropped Because
Received on untrusted ports = 0
```

```
Relay forward          = 0
No binding entry       = 0
Binding fail           = 0
Unknown packet         = 0
Unknown output interface = 0
No enough memory       = 0
Admin filter-dhcpv6-pkt = 0
```

Field	Description
Received on untrusted ports	The discarded server response packets on the untrust port.
Relay forward	The packets that have been relayed once are discarded.
No binding entry	The binding entries of the release/decline packets are in-existent or error and the packets are discarded.
Binding fail	The entry binding fails and the packets are discarded due to a lack of the hardware resources.
Unknown packet	The unknown DHCP packets.
Unknown output interface	The packets on the unknown output interface. The MAC address for the interface is not found or the trust port is not configured.
No enough memory	There is no enough memory.
Admin filter-dhcpv6-pkt	The filtered DHCPv6 packets configured by the administrator. Use the <b>ipv6 dhcp snooping filter-dhcp-pkt</b> command to filter the packets.

#### Related Commands

Command	Description
N/A	N/A

#### Platform Description

N/A

## 14.21 show ipv6 dhcp snooping vlan

Use this command to display the VLAN with DHCPv6 Snooping function disabled.

**show ipv6 dhcp snooping vlan**

#### Parameter Description

Parameter	Description
N/A	N/A

**Defaults** N/A

**Command Mode** Privileged EXEC mode

**Usage Guide** This command is used to display the VLAN with DHCPv6 Snooping function disabled.

**Configuration** The following example displays the VLAN with DHCPv6 Snooping function disabled.

**Examples** Ruijie#show ipv6 dhcp snooping vlan

```
VLAN Name      Closed
-----
2    VLAN 2      YES
```

Field	Description
VLAN	VLAN ID
NAME	VLAN name
Close	Indicates whether DHCPv6 Snooping is disabled.

**Related Commands**

Command	Description
N/A	N/A

**Platform Description** N/A

## 15 ARP-Check Commands

### 15.1 arp-check

Use this command to enable the ARP check function on the Layer 2 interface.

Use the **no** form of this command to restore the default setting.

**arp-check**

**no arp-check**

Parameter Description	Parameter	Description
	N/A	N/A

**Defaults** This function is disabled by default.

**Command mode** Interface configuration mode

**Usage Guide** The ARP check function generates the ARP filtering information according to legal user information, implementing the illegal ARP packet filtering on the network.

**Configuration** This following example enables the APR check function on interface GigabitEthernet 0/1.

**Examples**

```
Ruijie# configure terminal
Ruijie(config)# interface GigabitEthernet 0/1
Ruijie(config-if-GigabitEthernet 0/1)# arp-check
Ruijie(config-if-GigabitEthernet 0/1)# end
```

Related Commands	Command	Description
	<b>show interfaces arp-check list</b>	Displays the ARP check entries.

**Platform** N/A

**Description**

### 15.2 show interface arp-check list

Use this command to display the ARP check entries on the Layer 2 interface.

**show { interface [ interface-type interface-number ] } arp-check list**

Parameter	Parameter	Description
-----------	-----------	-------------

Description		
	<i>interface-type</i>	Wired interface type
	<i>interface-number</i>	Wired interface number

**Command mode** Privileged EXEC mode

**Usage Guide** Use this command to display the ARP check entries.

**Configuration** The following example displays the ARP check entries.

**Examples** Ruijie(config)#show interface arp-check list

INTERFACE	SENDER MAC	SENDER IP	POLICY
SOURCE			
-----			
GigabitEthernet 0/1	00D0.F800.0003	192.168.1.3	address-bind
GigabitEthernet 0/1	00D0.F800.0001	192.168.1.1	port-security
GigabitEthernet 0/4		192.168.1.3	port-security
GigabitEthernet 0/5	00D0.F800.0003	192.168.1.3	address-bind
GigabitEthernet 0/7	00D0.F800.0006	192.168.1.6	AAA ip-auth-mode
GigabitEthernet 0/8	00D0.F800.0007	192.168.1.7	GSN

Field	Description
INTERFACE	Interface name
SENDER MAC	Source MAC address
SENDER IP	Source IP address
POLICY SOURCE	Source of the entry

Related Commands	Command	Description
	N/A	N/A

**Platform** N/A

**Description**

## 16 DAI Commands

### 16.1 ip arp inspection trust

Use this command to configure the L2 port to a trusted port.

Use the **no** form of this command to restore the L2 port to an untrusted port.

**ip arp inspection trust**

**no ip arp inspection trust**

Parameter Description	Parameter	Description
	N/A	N/A

**Defaults** The L2 port is untrusted.

**Command Mode** Interface configuration mode

**Usage Guide** If it is necessary to make the ARP message received by some interface pass the DAI inspection unconditionally, you can set the interface to a trusted port, indicating that you do not need to check whether the ARP message received by this interface is legal.

**Configuration Examples** The following example sets the gigabitEthernet 0/19 interface as the trusted port.

```
Ruijie# configure terminal
Ruijie(config)# interface gigabitEthernet 0/19
Ruijie(config-if-GigabitEthernet 0/19)# ip arp inspection trust
Ruijie(config-if-GigabitEthernet 0/19)# end
```

Related Commands	Command	Description
	<b>show ip arp inspection interface</b>	Displays related DAI information on the interface, including the trust state and rate limit of the interface.

**Platform Description** N/A

### 16.2 ip arp inspection vlan

Use this command to configure the DAI function on the VLAN.

Use the **no** form of this command to disable this function.

**ip arp inspection vlan** { *vlan-id* | *word* }

**no ip arp inspection vlan** { *vlan-id* | *word* }


**Parameter  
Description**

Parameter	Description
<i>vlan-id</i>	VLAN ID, ranging from 1 to 4094
<i>word</i>	String of the VLAN range, such as 1,3-5,7,9-11

**Defaults** The DAI function on all VLANs is disabled by default.

**Command  
Mode** Global configuration mode

**Usage Guide** To make this command take effect, you need to enable the ARP Check function first,

 Not all ports of the VLAN support the ARP packet detection function. For example, the DHCP Snooping Trust port does not support any security detection, including this function.

**Configuration** The following example detects the received ARP packets on the VLAN1 interfaces:

**Examples**

```
Ruijie# configure terminal
Ruijie(config)# ip arp inspection
Ruijie(config)# ip arp inspection vlan 1
Ruijie(config)# end
```

**Related  
Commands**

Command	Description
N/A	N/A

**Platform  
Description** N/A

## 16.3 show ip arp inspection interface

Use this command to verify whether the interface is a DAI trust interface.

**show ip arp inspection interface**

**Parameter  
Description**

Parameter	Description
N/A	N/A

**Defaults** N/A

**Command  
Mode** Privileged EXEC mode



**Usage Guide** Use this command to verify whether the interface is a DAI trust interface.

**Configuration** The following example verifies the DAI trust state of all :

**Examples**

```
Ruijie#show ip arp inspection interface
```

```
Interface          Trust State
-----
GigabitEthernet 0/1    Untrusted
Default              Untrusted
```

Parameter Description:

Parameter	Description
Interface	Interface name.
Trust State	DAI trust state.

**Related  
Commands**

Command	Description
N/A	N/A

**Platform** N/A  
**Description**

## 16.4 show ip arp inspection vlan

Use this command to verify whether the DAI function on the VLAN is enabled.

**show ip arp inspection vlan** [ *vlan-id* | *word* ]

**Parameter  
Description**

Parameter	Description
<i>vlan-id</i>	VLAN ID, ranging from 1 to 4094
<i>word</i>	String of the VLAN range, such as 1,3-5,7,9-11

**Defaults** N/A

**Command** Privileged EXEC mode  
**Mode**

**Usage Guide** Use this command to verify whether the DAI function on the VLAN is enabled.

**Configuration** The following example verifies whether the DAI function on the VLAN is enabled:

**Examples**

```
Ruijie# show ip arp inspection vlan
Vlan      Configuration
----      -
```

1	Active
---	--------

Parameter Description:

Parameter	Description
Vlan	VLAN number.
Configuration	DAI status (active / inactive)

**Related  
Commands**

Command	Description
N/A	N/A

**Platform  
Description**

N/A

## 17 IP Source Guard Commands

### 17.1 ip source binding

Use this command to add static user information to IP source address binding database.

Use the **no** form of this command to delete static user information from IP source address binding database.

**ip source binding** *mac-address* { **vlan** *vlan-id* } *ip-address* { **interface** *interface-id* | **ip-mac** | **ip-only** }

**no ip source binding** *mac-address* { **vlan** *vlan-id* } *ip-address* { **interface** *interface-id* | **ip-mac** | **ip-only** }


#### Parameter Description


Parameter	Description
<i>mac-address</i>	Adds user MAC address statically.
<i>vlan-id</i>	Adds user VLAN ID statically.
<i>ip-address</i>	Adds user IP address statically.
<i>interface-id</i>	Adds user interface ID statically.
<b>ip-mac</b>	The global binding type is IP+MAC
<b>ip-only</b>	The global binding type is IP only.

**Defaults** No static address is added by default.

**Command Mode** Global configuration mode

**Usage Guide** This command allows specific clients to go through IP source guard detection instead of DHCP. This command is supported on the wired L2 switching port, AP port and sub interface. This command enables global binding for IP source guard so that specific clients will get detected on all interfaces.

 A static IPv6 source binding is valid either on wired and WLAN interfaces or in global configuration mode.

 A new binding will overwrite the old one sharing the same configuration.

**Configuration Examples** The following example adds the interface Id of static users.

```
Ruijie# configure terminal
Ruijie(config)# ip source binding 0000.0000.0001 vlan 1 1.1.1.1 interface
GigabitEthernet 0/1
Ruijie(config)# end
```

The following example adds static user information based on IP-MAC binding.

```
Ruijie# configure terminal
Ruijie(config)# ip source binding 0000.0000.0001 vlan 1 1.1.1.1 ip-mac
Ruijie(config)# end
```

The following example adds static user information based on IP binding.

```
Ruijie# configure terminal
Ruijie(config)# ip source binding 0000.0000.0001 vlan 1 1.1.1.1 ip-only
Ruijie(config)# end
```

#### Related Commands

Command	Description
<b>show ip source binding</b>	Displays the binding information of IP source address and database.

**Platform** N/A  
**Description**

## 17.2 ip verify source

Use this command to enable IP Source Guard function on the interface.

Use the **no** form of this command to restore the default setting.

**ip verify source [ port-security ]**

**no ip verify source**

#### Parameter Description

Parameter	Description
<b>port-security</b>	Configures IP Source Guard to do IP+MAC-based detection.

**Defaults** This function is disabled by default.

**Command Mode** Interface configuration mode

**Usage Guide** This command enables IP Source Guard function on the interface to do IP-based or IP+MAC-based detection.

This command is supported on the wired L2 switching port, AP port and sub interface.

IP Source Guard takes effect only on DHCP Snooping untrusted port. In other words, IP Source Guard does not take effect when configuring it on Trust port or the port which is not controlled by DHCP Snooping.

**Configuration Examples** The following example enables IP-based IP Source Guard function.

```
Ruijie# configure terminal
Ruijie(config)# interface GigabitEthernet 0/1
```

```
Ruijie(config-if-GigabitEthernet 0/1)# ip verify source
Ruijie(config-if)# end
```

The following example enables IP+MAC-based IP Source Guard function.

```
Ruijie# configure terminal
Ruijie(config)# interface GigabitEthernet 0/2
Ruijie(config-if-GigabitEthernet 0/2)# ip verify source port-security
Ruijie(config-if)# end
```

#### Related Commands

Command	Description
<b>show ip verify source</b>	Displays user filtering entry of IP Source Guard.

**Platform** N/A  
**Description**

## 17.3 ip verify source exclude-vlan

Use this command to exclude a VLAN from the IP source guard configuration on the port.

Use the **no** form of this command to restore the function.

**ip verify source exclude-vlan** *vlan-id*

**no ip verify source exclude-vlan** *vlan-id*


#### Parameter Description

Parameter	Description
<i>vlan-id</i>	The ID of VLAN excluded from the IP source guard configuration.

**Defaults** This function is disabled by default.

**Command Mode** Interface configuration mode

#### Usage Guide

- ✓ This command is used to exclude a VLAN from the IP source guard configuration. IP packets in this VLAN are forwarded without being checked and filtered.
  - ✓ Once the IP source guard function is disabled, the excluded VLAN is cleared automatically.
  - ✓ This command is supported on the wired L2 switching port, AP port and sub interface.
- 
-  Only when the IP source guard configuration is enabled on the port can a VLAN be excluded.

**Configuration** The following example configuration configures the IP source guard configuration for the port and

**Examples**

excludes a VLAN.

```
Ruijie# configure terminal
Ruijie(config)# interface GigabitEthernet 0/1
Ruijie(config-if-GigabitEthernet 0/1)# ip verify source
Ruijie(config-if-GigabitEthernet 0/1)# ip verify exclude-vlan 1
Ruijie(config-if)# end
```

**Related  
Commands**

Command	Description
N/A	N/A

**Platform**

N/A

**Description**

## 17.4 show ip source binding

Use this command to display the binding information of IP source addresses and database.

**show ip source binding** [ *ip-address* ] [ *mac-address* ] [ **dhcp-snooping** ] [ **static** ] [ **vlan** *vlan-id* ]  
[ **interface** *interface-id* ]

**Parameter  
Description**

Parameter	Description
<i>ip-address</i>	Displays user binding information of corresponding IP.
<i>mac-address</i>	Displays user binding information of corresponding MAC.
<b>dhcp-snooping</b>	Displays binding information of dynamic user.
<b>static</b>	Displays binding information of static user.
<i>vlan-id</i>	Displays user binding information of corresponding VLAN.
<i>interface-id</i>	Displays user binding information of corresponding interface.

**Defaults**

N/A

**Command  
Mode**

Privileged EXEC mode

**Usage Guide**

N/A

**Configuration  
Examples**

The following example displays the binding information of IP source guard addresses and database.

```
Ruijie# show ip source binding static
Ruijie#show ip source binding static
Total number of bindings: 5
NO.      MACADDRESS      IPADDRESS      LEASE (SEC)    TYPE      VLAN    INTERFACE
-----
```

1	0001.0002.0001	1.2.3.2	Infinite	Static	1	Global
2	0001.0002.0002	1.2.3.3	Infinite	Static	1	GigabitEthernet
0/5						
3	0001.0002.0003	1.2.3.4	Infinite	Static	1	Global
4	0001.0002.0004	1.2.3.5	Infinite	Static	1	Global

#### Related Commands

Command	Description
<b>ip source binding</b>	Sets the binding static user.

**Platform** N/A

**Description**

## 17.5 show ip verify source

Use this command to display user filtering entry of IP Source Guard.

**show ip verify source** [ **interface** *interface-id* ]

#### Parameter Description

Parameter	Description
<i>interface-id</i>	Displays user filtering entry of corresponding interface.

**Defaults** N/A

**Command Mode** Privileged EXEC mode

**Usage Guide** If IP Source Guard is not enabled on the corresponding interface, the printing information will be shown on the terminal as: "IP source guard is not configured on the interface FastEthernet 0/10"

Now, IP Source Guard supports the following filtering modes:

**inactive-restrict-off:** the IP Source Guard is disabled on bound interfaces.

**inactive--not-apply:** the IP Source Guard cannot adds bound entries into filtering entries for system errors.

**active:** the IP Source Guard is active.

**Configuration Examples** The following example displays user filtering entry of IP Source Guard.

```
Ruijie # show ip verify source
Total number of bindings: 7
NO.    INTERFACE          FILTERTYPE  FILTERSTATUS          IPADDRESS
MACADDRESS  VLAN  TYPE
-----
1      Global              IP+MAC      Inactive-not-apply    192.168.0.127
```

```

0001.0002.0003 1 Static
2    GigabitEthernet 0/5 IP-ONLY    Active    1.2.3.4
0001.0002.0004 1 DHCP-Snooping
3    Global                IP-ONLY    Active    1.2.3.7
0001.0002.0007 1 Static
4    Global                IP+MAC    Active    1.2.3.6
0001.0002.0006 1 Static
5    GigabitEthernet 0/1 UNSET      Inactive-restrict-off 1.2.3.9
0001.0002.0009 1 DHCP-Snooping
6    GigabitEthernet 0/5 IP-ONLY    Active    Deny-All

```

**Related  
Commands**

Command	Description
<b>ip verify source</b>	Sets IP Source Guard on the interface.

**Platform  
Description**

N/A



## 18 IPv6 Source Guard Commands

### 18.1 ipv6 source binding

Use this command to configure a static IPv6 source binding.

Use the **no** form of this command to delete a static IPv6 source binding.

**ipv6 source binding** *mac-address* **vlan** *vlan-id* *ipv6-address* { **interface** *interface-id* | **ip-mac** | **ip-only** }

**no ipv6 source binding** *mac-address* **vlan** *vlan-id* *ipv6-address* { **interface** *interface-id* | **ip-mac** | **ip-only** }

#### Parameter Description


Parameter	Description
<i>mac-address</i>	MAC address
<i>vlan-id</i>	VLAN ID
<i>ipv6-address</i>	IPv6 address
<i>interface-id</i>	Wired interface ID
<b>ip-mac</b>	IPv6-MAC binding
<b>ip-only</b>	IPv6-only binding


**Defaults** No static IPv6 source binding is configured by default.

**Command Mode** Global configuration mode

**Usage Guide**

- Use this command to exempt trusted hosts from IPv6 source guard.
- This command is supported only on Layer 2 ports, aggregate ports and encapsulated sub interfaces.

 A static IPv6 source binding is valid either on wired interfaces or in global configuration mode.

 A new binding will overwrite the old one sharing the same configuration.

**Configuration Examples** The following example configures static IPv6 source bindings on GigabitEthernet 0/1.

```
Ruijie# configure terminal
Ruijie(config)# ipv6 source binding 0000.0000.0001 vlan 1 1::1 interface
GigabitEthernet 0/1
Ruijie(config)# end
```

The following example configures a static IPv6-MAC binding.

```
Ruijie# configure terminal
Ruijie(config)# ipv6 source binding 0000.0000.0001 vlan 1 1::1 ip-mac
Ruijie(config)# end
```

The following example configures a static IPv6-only binding.

```
Ruijie# configure terminal
```

```
Ruijie(config)# ipv6 source binding 0000.0000.0001 vlan 1 1::1 ip-only
Ruijie(config)# end
```

**Platform**  
**Description**

N/A

## 18.2 ipv6 verify source

Use this command to enable IPv6 source guard.

Use the **no** form of this command to restore the default setting.

**ipv6 verify source [ port-security ]**

**no ipv6 verify source**

**Parameter**  
**Description**

Parameter	Description
port-security	Enables source IPv6-MAC filtering.

**Defaults** IPv6 source guard is disabled by default.

**Command**  
**Mode**

Interface configuration mode

**Usage Guide** Use this command to enable IPv6 source guard with source IPv6 filtering or source IPv6-MAC filtering. This command is supported only on Layer 2 ports, aggregate ports and encapsulated sub interfaces.

 Currently, the IPv6 source guard feature of Ruijie devices filters traffic based on the DHCPv6 Snooping database or on manually configured IPv6 source bindings. A port with only IPv6 source guard enabled cannot realize normal network access for connected hosts.

**Configuration** The following example enables IPv6 source guard based on source IPv6 filtering.

**Examples**

```
Ruijie# configure terminal
Ruijie(config)# interface GigabitEthernet 0/1
Ruijie(config-if-GigabitEthernet 0/1)# ipv6 verify source
Ruijie(config-if)# end
```

The following example enables IPv6 source guard based on source IPv6-MAC filtering.

```
Ruijie# configure terminal
Ruijie(config)# interface GigabitEthernet 0/2
Ruijie(config-if-GigabitEthernet 0/2)# ipv6 verify source port-security
Ruijie(config-if)# end
```

**Platform**

N/A

**Description**

## 18.3 show ipv6 source binding

Use this command to display the IPv6 source binding database.

**show ipv6 source binding** [ *ipv6-address* ] [ *mac-address* ] [ **dhcp-snooping** ] [ **static** ] [ **vlan** *vlan-id* ]  
[ **interface** *interface-id* ]

**Parameter  
Description**

Parameter	Description
<i>ipv6-address</i>	Displays the source IPv6 address bindings.
<i>mac-address</i>	Displays the source MAC address bindings.
<b>dhcp-snooping</b>	Displays the DHCP snooping bindings.
<b>static</b>	Displays the static IPv6 source bindings.
<i>vlan-id</i>	Displays the VLAN bindings.
<i>interface-id</i>	Displays the interface bindings.

**Command Mode** Privileged EXEC mode

**Usage Guide** N/A

**Configuration** The following example displays the IPv6 source binding database.

**Examples**

```
Ruijie# show ipv6 source binding
Total number of bindings: 7
NO.      Filter Type  Filter Status      IPv6 Address
MACAddress  VLAN Type  Interface
-----
-----
1         IPv6+MAC      Inactive-system-error  2000::127
0001.0002.0003  1      Static      Global
2         IPv6-ONLY      Active          2008::4
0001.0002.0004  1      DHCPv6-Snooping  GigabitEthernet 0/5
3         IPv6-ONLY      Active          2008::7
0001.0002.0007  1      Static      Global
4         IPv6+MAC      Active          2008::1
0001.0002.0006  1      Static      Global
5         UNSET          Inactive-restrict-off  2008::9
0001.0002.0009  1      DHCPv6-Snooping  GigabitEthernet 0/1
6         IPv6-ONLY      Active          Deny-All
GigabitEthernet 0/5
```

Platform	N/A
Description	

## 19 Anti-ARP Spoofing Commands

### 19.1 anti-arp-spoofing ip

Use this command to enable anti-ARP spoofing.

Use the **no** form of this command to disable this function.

**anti-arp-spoofing ip** *ip-address*

**no anti-arp-spoofing ip** *ip-address*

Parameter Description	Parameter	Description
	<i>ip-address</i>	Gateway IP address

**Defaults** The anti-ARP spoofing function is disabled by default.

**Command Mode** Interface configuration mode

**Usage Guide** This command is used to enable anti-ARP spoofing on only L2 interfaces.  
Use the **show anti-arp-spoofing** command to display the configuration.

**Configuration Examples** The following example enables anti-ARP spoofing.

```
Ruijie(config)#interface fastEthernet 0/1
Ruijie(config-if)#anti-arp-spoofing ip 192.168.1.1
```

Related Commands	Command	Description
	<b>show anti-arp-spoofing</b>	Displays the anti-ARP spoofing configuration.

**Platform Description** N/A

### 19.2 show anti-arp-spoofing

Use this command to display the anti-ARP spoofing configuration on all interfaces.

**show anti-arp-spoofing**

Parameter Description	Parameter	Description
	N/A	N/A

**Defaults** N/A

**Command Mode** Global configuration mode

**Usage Guide** This command is used to display the anti-ARP spoofing configuration on all interfaces.

**Configuration** The following example displays the anti-ARP-spoofing configuration on all interfaces.

**Examples**

```
Ruijie#show anti-arp-spoofing
```

```
NO      PORT      IP              STATUS
-----
1       Gi0/1      192.168.1.1    active
```

Field Description

Field	Description
NO	Order number
PORT	Port number
IP	Gateway IP
STATUS	Anti-ARP spoofing status

**Related Commands**

Command	Description
<b>anti-arp-spoofing ip</b>	Configures anti-ARP spoofing.

**Platform Description** N/A

## 20 NFPP Commands

### 20.1 arp-guard attack-threshold

Use this command to set the global attack threshold. When the packet rate exceeds the attack threshold, the attack occurs.

Use the **no** or **default** form of this command to restore the default setting.

**arp-guard attack-threshold** { **per-src-ip** | **per-src-mac** | **per-port** } *pps*

**no arp-guard attack-threshold** { **per-src-ip** | **per-src-mac** | **per-port** }

**default arp-guard attack-threshold** { **per-src-ip** | **per-src-mac** | **per-port** }

Parameter Description	Parameter	Description
	<b>per-src-ip</b>	Sets the attack threshold for each source IP address.
	<b>per-src-mac</b>	Sets the attack threshold for each source MAC address.
	<b>per-port</b>	Sets the attack threshold for each port.
	<i>pps</i>	Sets the attack threshold, in the range from 1 to 19,999 in unit of pps.

**Defaults** The default value varies with products. For details, see the *Configuration Guide*.

**Command** NFPP configuration mode.

**Mode**

**Usage Guide** The attack threshold shall be equal to or greater than the rate-limit threshold.

**Configuration** The following example sets the global attack threshold.

**Examples**

```
Ruijie(config)# nfpp
Ruijie(config-nfpp)# arp-guard attack-threshold per-src-ip 2
Ruijie(config-nfpp)# arp-guard attack-threshold per-src-mac 3
Ruijie(config-nfpp)# arp-guard attack-threshold per-port 50
```

Related Commands	Command	Description
	<b>nfpp arp-guard policy</b>	Displays the rate-limit threshold and attack threshold.
	<b>show nfpp arp-guard summary</b>	Displays the configuration.
	<b>show nfpp arp-guard hosts</b>	Displays the monitored host.
	<b>clear nfpp arp-guard hosts</b>	Clears the isolated host.

**Platform** N/A

**Description**

## 20.2 arp-guard enable

Use this command to enable the anti-ARP guard function globally.

Use the **no** or **default** form of this command to restore the default setting.

**arp-guard enable**

**no arp-guard enable**

**default arp-guard enable**

Parameter Description	Parameter	Description
	N/A	N/A

**Defaults** This function is enabled by default.

**Command Mode** NFPP configuration mode.

**Usage Guide** N/A

**Configuration Examples** The following example enables the anti-ARP guard function globally.

```
Ruijie(config)# nfpp
Ruijie(config-nfpp)# arp-guard enable
```

Related Commands	Command	Description
	<b>nfpp arp-guard enable</b>	Enables the anti-ARP attack on the interface.
	<b>show nfpp arp-guard summary</b>	Displays the configuration.

**Platform Description** N/A

## 20.3 arp-guard isolate-period

Use this command to set the arp-guard isolate time globally.

Use the **no** or **default** form of this command to restore the default setting.

**arp-guard isolate-period { seconds | permanent }**

**no arp-guard isolate-period**

**default arp-guard isolate-period**

Parameter Description	Parameter	Description
	<i>seconds</i>	Sets the isolate time. The value is 0, or in the range from 30 to 86400 in the unit of seconds.



<b>permanent</b>	Permanent isolation.
------------------	----------------------

**Defaults** The default isolate time is 0, which means no isolation.

**Command Mode** NFPP configuration mode.

**Usage Guide** N/A

**Configuration** The following example sets the arp-guard isolate time globally to 180 seconds.

**Examples**

```
Ruijie(config)# nfpp
Ruijie(config-nfpp)# arp-guard isolate-period 180
```

**Related Commands**

Command	Description
<b>nfpp arp-guard isolate-period</b>	Sets the isolate time on the interface.
<b>show nfpp arp-guard summary</b>	Displays the configuration.

**Platform** N/A

**Description**

## 20.4 arp-guard isolate-forwarding enable

Use this command to enable packet forwarding through NFPP isolation.

Use the **no** form of this command to disable this function.

Use the **default** form of this command to restore the default setting.

**arp-guard isolate-forwarding enable**

**no arp-guard isolate-forwarding enable**

**default arp-guard isolate-forwarding enable**

**Parameter Description**

Parameter	Description
N/A	N/A

**Defaults** This function is enabled by default.

**Command Mode** NFPP configuration mode

**Usage Guide** N/A

**Configuration** The following example enables packet forwarding through NFPP isolation.

**Examples**

```
Ruijie(config)# nfpp
Ruijie(config-nfpp)# arp-guard isolate-forwarding enable
```

Related Commands	Command	Description
	N/A	N/A

**Platform** N/A  
**Description**

## 20.5 arp-guard monitored-host-limit

Use this command to set the maximum monitored host number.

Use the **no** or **default** form of this command to restore the default setting.

**arp-guard monitored-host-limit** *number*

**no arp-guard monitored-host-limit**

**default arp-guard monitored-host-limit**

Parameter Description	Parameter	Description
	<i>number</i>	The maximum monitored host number, in the range from 1 to 4,294,967,295.

**Defaults** The default is 20000.

**Command Mode** NFPP configuration mode

**Usage Guide** If the monitored host number has reached the default 20,000, the administrator shall set the max-number smaller than 20,000 and it will prompt the message that %ERROR: The value that you configured is smaller than current monitored hosts 20,000, please clear a part of monitored hosts to remind the administrator of the invalid configuration and removing the monitored hosts.

When the maximum monitored host number has been exceeded, it prompts the message that %NFPP\_ARP\_GUARD-4-SESSION\_LIMIT: Attempt to exceed limit of 20000 monitored hosts to remind the administrator.

**Configuration Examples** The following example sets the maximum monitored host number to 200.

```
Ruijie(config)# nfpp
Ruijie(config-nfpp)# arp-guard monitored-host-limit 200
```

Related Commands	Command	Description
	<b>show nfpp arp-guard summary</b>	Displays the configuration.

**Platform** N/A  
**Description**

## 20.6 arp-guard monitor-period

Use this command to configure the arp guard monitor time.

Use the **no** or **default** form of this command to restore the default setting.

**arp guard monitor-period** *seconds*

**no arp-guard monitor-period**

**default arp-guard monitor-period**

Parameter Description	Parameter	Description
	<i>seconds</i>	Sets the monitor time, in the range from 180 to 86,400 in the unit of seconds.

**Defaults** The default is 600.

**Command Mode** NFPP configuration mode

**Usage Guide** When the attacker is detected, if the isolate period is 0, the attacker will be monitored by the software and the timeout time will be the monitor period. During the software monitoring, if the isolate period is not 0, the software-monitored attacker will be auto-isolated by the hardware and the timeout time will be the isolate period. The monitor period is valid with the isolate period 0.

If the isolate period has changed to be 0, the attackers on the interface will be removed rather than being monitored by the software.

**Configuration Examples** The following example sets the arp guard monitor time to 180 seconds.

```
Ruijie(config)# nfpp
Ruijie(config-nfpp)# arp-guard monitor-period 180
```

Related Commands	Command	Description
	<b>show nfpp arp-guard summary</b>	Displays the configuration.
	<b>show nfpp arp-guard hosts</b>	Displays the monitored host list.
	<b>clear nfpp arp-guard hosts</b>	Clears the isolated host.

**Platform** N/A

**Description**

## 20.7 arp-guard rate-limit

Use this command to set the arp guard rate limit.

Use the **no** or **default** form of this command to restore the default setting.

**arp-guard rate-limit** { **per-src-ip** | **per-src-mac** | **per-port** } *pps*

**no arp-guard rate-limit { per-src-ip | per-src-mac | per-port }**  
**default arp-guard rate-limit { per-src-ip | per-src-mac | per-port }**

**Parameter  
Description**

Parameter	Description
<b>per-src-ip</b>	Sets the rate limit for each source IP address.
<b>per-src-mac</b>	Sets the rate limit for each source MAC address.
<b>per-port</b>	Sets the rate limit for each port.
<i>pps</i>	Sets the rate limit, in the range of 1 to 19,999.

**Defaults** The default value varies with products. For details, see the *Configuration Guide*.

**Command Mode** NFPP configuration mode

**Usage Guide** N/A

**Configuration** The following example sets the arp guard rate limit.

**Examples**

```
Ruijie(config)# nfpp
Ruijie(config-nfpp)# arp-guard rate-limit per-src-ip 2
Ruijie(config-nfpp)# arp-guard rate-limit per-src-mac 3
Ruijie(config-nfpp)# arp-guard rate-limit per-port 50
```

**Related  
Commands**

Command	Description
<b>nfpp arp-guard policy</b>	Sets the rate limit and the attack threshold.
<b>show nfpp arp-guard summary</b>	Displays the configuration.

**Platform** N/A  
**Description**

## 20.8 arp-guard ratelimit-forwarding enable

Use this command to set the port based arp guard rate limit.

Use the **no** form of this command to disable this function.

Use the **default** form of this command to restore the default setting.

**arp-guard ratelimit-forwarding enable**

**no arp-guard ratelimit-forwarding enable**

**default arp-guard ratelimit-forwarding enable**

**Parameter  
Description**

Parameter	Description
N/A	N/A

**Defaults** This function is enabled by default.

**Command Mode** NFPP configuration mode

**Usage Guide** N/A

**Configuration** The following example sets the port based arp guard rate limit.

**Examples**

```
Ruijie(config)# nfpp
Ruijie(config-nfpp)# arp-guard ratelimit-forwarding enable
```

**Related Commands**

Command	Description
N/A	N/A

**Platform** N/A

**Description**

## 20.9 arp-guard scan-threshold

Use this command to set the global scan threshold.

Use the **no** or **default** form of this command to restore the default setting.

**arp-guard scan-threshold** *pkt-cnt*

**no arp-guard scan-threshold**

**default arp-guard scan-threshold**

**Parameter Description**

Parameter	Description
<i>pkt-cnt</i>	Sets the scan threshold, in the range from 1 to 19,999 in the unit of seconds.

**Defaults** The default value varies with products. For details, see the *Configuration Guide*.

**Command Mode** NFPP configuration mode

**Usage Guide** The scanning may occur on the condition that:

- More than 15 packets are received within 10 seconds;
- The source MAC address for the link layer is constant while the source IP address is uncertain;
- The source MAC and IP address for the link layer is constant while the destination IP address is uncertain.

**Configuration** The following example sets the global scan threshold to 20pps.

**Examples**

```
Ruijie(config)# nfpp
Ruijie(config-nfpp)# arp-guard scan-threshold 20
```

**Related  
Commands**

Command	Description
<b>nfpp arp-guard scan-threshold</b>	Sets the scan threshold on the port.
<b>show nfpp arp-guard summary</b>	Displays the configuration.
<b>show nfpp arp-guard scan</b>	Displays the ARP guard scan table.
<b>clear nfpp arp-guard scan</b>	Clears the ARP guard scan table.

**Platform** N/A

**Description**

## 20.10 clear nfpp arp-guard hosts

Use this command to clear the monitored host isolation.

**clear nfpp arp-guard hosts** [ **vlan** *vid* ] [ **interface** *interface-id* ] [ *ip-address* | *mac-address* ]

**Parameter  
Description**

Parameter	Description
<i>vid</i>	Sets the VLAN ID.
<i>interface-id</i>	Sets the interface name and number.
<i>ip-address</i>	Sets the IP address.
<i>mac-address</i>	Sets the MAC address.

**Defaults** N/A

**Command  
Mode** Privileged EXEC mode

**Usage Guide** N/A

**Configuration** The following example clears the monitored host isolation.

**Examples**

```
Ruijie# clear nfpp arp-guard hosts vlan 1 interface g0/1
```

**Related  
Commands**

Command	Description
<b>arp-guard attack-threshold</b>	Sets the global attack threshold.
<b>nfpp arp-guard policy</b>	Sets the limit threshold and attack threshold.
<b>show nfpp arp-guard hosts</b>	Displays the monitored host.

**Platform** N/A

**Description**

## 20.11 clear nfpp arp-guard scan

Use this command to clear ARP scanning table.

**clear nfpp arp-guard scan**

**Parameter  
Description**

Parameter	Description
N/A	N/A

**Defaults** N/A

**Command  
Mode** Privileged EXEC mode

**Usage Guide** N/A

**Configuration** The following example clears ARP scanning table.

**Examples** Ruijie# clear nfpp arp-guard scan

**Related  
Commands**

Command	Description
<b>arp-guard attack-threshold</b>	Sets the global attack threshold.
<b>nfpp arp-guard policy</b>	Sets the attack threshold.
<b>show nfpp arp-guard scan</b>	Displays the ARP scanning table.

**Platform** N/A

**Description**

## 20.12 clear nfpp define *name* hosts

Use this command to clear the monitored hosts. If the host is isolated, you need to release it.

**clear nfpp define *name* hosts [ *vlan vid* ] [ *interface interface-id* ] [ *ip-address* ] [ *mac-address* ]**  
[ *ipv6-address* ]

**Parameter  
Description**

Parameter	Description
<i>name</i>	Defines guard name
<i>vid</i>	VLAN ID
<i>interface-id</i>	Interface name
<i>ip-address</i>	IP address
<i>ipv6-address</i>	IPv6 address

**Defaults** N/A

**Command Mode** Privileged EXEC mode

**Usage Guide** Use this command without the parameter to clear all monitored hosts in the self-defined range.

**Configuration** The following example clears the monitored hosts.

**Examples** Ruijie# clear nfpp define tcp hosts vlan 1 interface g 0/1

**Related Commands**

Command	Description
show nfpp define hosts	Displays the isolated hosts.

**Platform Description** N/A

## 20.13 clear nfpp dhcp-guard hosts

Use this command to clear the DHCP monitored hosts, that is, release them from isolation.

**clear nfpp dhcp-guard hosts** [ **vlan** *vid* ] [ **interface** *interface-id* ] [ *mac-address* ]

**Parameter Description**

Parameter	Description
<i>vid</i>	Sets the VLAN ID.
<i>interface-id</i>	Sets the interface name and number.
<i>mac-address</i>	Sets the MAC address.

**Defaults** N/A

**Command Mode** Privileged EXEC mode

**Usage Guide** Use this command without the parameter to clear all monitored hosts.

**Configuration** The following example clears the DHCP monitored hosts.

**Examples** Ruijie# clear nfpp dhcp-guard hosts vlan 1 interface g0/1

**Related Commands**

Command	Description
dhcp-guard attack-threshold	Sets the global attack threshold.
nfpp dhcp-guard policy	Sets the limit threshold and attack threshold.



<b>show nfpp dhcp-guard hosts</b>	Displays the monitored host.
-----------------------------------	------------------------------

**Platform** N/A

**Description**

## 20.14 clear nfpp dhcpv6-guard hosts

Use this command to clear the DHCPv6 monitored host isolation.

**clear nfpp dhcpv6-guard hosts** [ **vlan** *vid* ] [ **interface** *interface-id* ] [ *mac-address* ]

**Parameter  
Description**

Parameter	Description
<i>vid</i>	Sets the VLAN ID.
<i>interface-id</i>	Sets the interface name and number.
<i>mac-address</i>	Sets the MAC address.

**Defaults** N/A

**Command  
Mode** Privileged EXEC mode

**Usage Guide** Use this command without the parameter to clear all monitored hosts

**Configuration** The following example clears the DHCPv6 monitored hosts.

**Examples**  
Ruijie# clear nfpp dhcpv6-guard hosts vlan 1 interface g0/1

**Related  
Commands**

Command	Description
<b>dhcpv6-guard attack-threshold</b>	Sets the global attack threshold.
<b>nfpp dhcpv6-guard policy</b>	Sets the limit threshold and attack threshold.
<b>show nfpp dhcpv6-guard hosts</b>	Displays the monitored host.

**Platform** N/A

**Description**

## 20.15 clear nfpp icmp-guard hosts

Use this command to clear the ICMP monitored hosts.

**clear nfpp icmp-guard hosts** [ **vlan** *vid* ] [ **interface** *interface-id* ] [ *ip-address* ]

**Parameter  
Description**

Parameter	Description
<i>vid</i>	Sets the VLAN ID.

<i>interface-id</i>	Sets the interface name and number.
<i>ip-address</i>	Sets the IP address.

**Defaults** N/A

**Command Mode** Privileged EXEC mode

**Usage Guide** Use this command without the parameter to clear all monitored hosts.

**Configuration** The following example clears the ICMP monitored hosts.

**Examples** Ruijie# clear nfpp icmp-guard hosts vlan 1 interface g0/1

<b>Related Commands</b>	Command	Description
	<b>icmp-guard attack-threshold</b>	Sets the global attack threshold.
	<b>nfpp icmp-guard policy</b>	Sets the limit threshold and attack threshold.
	<b>show nfpp icmp-guard hosts</b>	Displays the monitored host.

**Platform** N/A

**Description**

## 20.16 clear nfpp ip-guard hosts

Use this command to clear the monitored host isolation.

**clear nfpp ip-guard hosts** [ **vlan** *vid* ] [ **interface** *interface-id* ] [ *ip-address* ]

<b>Parameter Description</b>	Parameter	Description
	<i>vid</i>	Sets the VLAN ID.
	<i>interface-id</i>	Sets the interface name and number.
	<i>ip-address</i>	Sets the IP address.

**Defaults** N/A.

**Command Mode** Privileged EXEC mode

**Usage Guide** Use this command without the parameter to clear all monitored hosts.

**Configuration** The following example clears the monitored host isolation.

**Examples** Ruijie# clear nfpp ip-guard hosts vlan 1 interface g0/1

Related Commands	Command	Description
	<b>ip-guard attack-threshold</b>	Sets the global attack threshold.
	<b>nfpp ip-guard policy</b>	Sets the limit threshold and attack threshold.
	<b>show nfpp ip-guard hosts</b>	Displays the monitored host.

**Platform** N/A

**Description**

## 20.17 clear nfpp nd-guard hosts

Use this command to remove the speed limit on the monitored host.

**clear nfpp nd-guard hosts** [**vlan** *vid*] [**interface** *interface-id*]

Parameter Description	Parameter	Description
	<i>vid</i>	Sets the VLAN ID.
	<i>interface-id</i>	Sets the interface name and number.

**Defaults** N/A

**Command  
Mode** Privileged EXEC mode

**Usage Guide** This command without any parameter is used to remove speed limit on all monitored hosts.

**Configuration** The following example removes speed limit on interface g0/1 in VLAN 1.

**Examples** Ruijie# clear nfpp nd-guard hosts vlan 1 interface g0/1

**Prompt  
Messages** N/A

**Platform  
Description** N/A

## 20.18 clear nfpp log

Use this command to clear the NFPP log buffer area.

**clear nfpp log**

Parameter Description	Parameter	Description

N/A	N/A
-----	-----

**Defaults** N/A

**Command Mode** Privileged EXEC mode

**Usage Guide** N/A

**Configuration** The following example clears the NFPP log buffer area.

**Examples** Ruijie# clear nfpp log

**Related Commands**

Command	Description
<b>show nfpp log</b>	Displays the NFPP log configuration or the log buffer area.

**Platform** N/A

**Description**

## 20.19 cpu-protect sub-interface { manage | protocol | route } percent

Use this command to configure the percent value of each type of packets occupied in the buffer area.

Use the **no** or **default** form of this command to restore the default setting.

**cpu-protect sub-interface { manage | protocol | route } percent** *percent\_value*

**no cpu-protect sub-interface { manage | protocol | route } percent**

**default cpu-protect sub-interface { manage | protocol | route } percent**

**Parameter Description**

Parameter	Description
<i>percent_value</i>	The percent value, in the range from 1 to 100.

**Defaults** The default percent values of each type of packets occupied in the buffer area are:

Manage packets: 30;

Route packets: 25;

Protocol packets: 45.

**Command Mode** Global configuration mode

**Usage Guide** N/A

**Configuration** The following example sets the percent value of management packets in the buffer area to 60.

**Examples** Ruijie(config)# cpu-protect sub-interface manage percent 60

Related Commands	Command	Description
	<b>cpu-protect sub-interface { manage   protocol   route } pps</b>	Configures the traffic bandwidth of each type of packets.

Platform N/A

Description

## 20.20 cpu-protect sub-interface { manage | protocol | route } pps

Use this command to configure the traffic bandwidth of each type of packets.

Use the **no** or **default** form of this command to restore the default setting.

**cpu-protect sub-interface { manage | protocol | route } pps pps\_value**

**no cpu-protect sub-interface { manage | protocol | route } pps**

**default cpu-protect sub-interface { manage | protocol | route } pps**

Parameter Description	Parameter	Description
	pps_value	The rate limit threshold, in the range from 1 to 100,000

**Defaults** The default value varies with products. For details, see the *Configuration Guide*.

**Command Mode** Global configuration mode

**Usage Guide** N/A

**Configuration Examples** The following example sets the traffic bandwidth of management packets to 2,000 pps.

```
Ruijie(config)# cpu-protect sub-interface manage pps 2000
```

Related Commands	Command	Description
	<b>cpu-protect sub-interface { manage   protocol   route } percent</b>	Configures the percent value of each type of packets occupied in the buffer area.

Platform N/A

Description

## 20.21 define

Use this command to define the anti-attack type.

Use the **no** or **default** form of this command to restore the default setting.

**define** *name*

**no define** *name*

**default define** *name*

Parameter Description	Parameter	Description
	<i>name</i>	Name of the user-defined anti-attack type

**Defaults** N/A

**Command Mode** NFPP configuration mode

**Usage Guide** Use this command to define the anti-attack type.

**Configuration Examples** The following example creates the user-defined anti-attack type.

```
Ruijie(config)# nfpp
Ruijie(config-nfpp)# define tcp
Ruijie(config-nfpp-define)#
```

Related Commands	Command	Description
	<b>show nfpp define summary</b>	Displays the defined anti-attack configuration.

**Platform Description** N/A

## 20.22 define *name* enable

Use this command to enable the user-defined anti-attack globally.

Use the **no** or **default** form of this command to restore the default setting.

**define** *name* **enable**

**no define** *name* **enable**

**default define** *name* **enable**

Parameter Description	Parameter	Description
	<i>name</i>	Defines guard name.

**Defaults** This function is disabled by default.

**Command Mode** NFPP configuration mode

**Usage Guide** This command takes effect only after the match, rate-limit and attack-threshold have been configured.

**Configuration** The following example enabled the user-defined anti-attack globally.

**Examples**

```
Ruijie(config)# nfpp
Ruijie(config-nfpp)#define tcp enable
```

**Related  
Commands**

Command	Description
<b>show nfpp define summary</b>	Displays the user-defined anti-attack configuration

**Platform** N/A

**Description**

## 20.23 dhcp-guard attack-threshold

Use this command to set the global attack threshold. When the packet rate exceeds the attack threshold, the attack occurs.

Use the **no** or **default** form of this command to restore the default setting.

**dhcp-guard attack-threshold { per-src-mac | per-port } pps**

**no dhcp-guard attack-threshold { per-src-mac | per-port }**

**default dhcp-guard attack-threshold { per-src-mac | per-port }**

**Parameter  
Description**

Parameter	Description
<b>per-src-mac</b>	Sets the attack threshold for each source MAC address.
<b>per-port</b>	Sets the attack threshold for each port.
<i>pps</i>	Sets the attack threshold, in pps. The valid range is 1 to 19,999.

**Defaults** The default value varies with products. For details, see the *Configuration Guide*.

**Command  
Mode** NFPP configuration mode

**Usage Guide** N/A

**Configuration** The following example sets the global attack threshold.

**Examples**

```
Ruijie(config)# nfpp
Ruijie(config-nfpp)# dhcp-guard attack-threshold per-src-mac 15
Ruijie(config-nfpp)# dhcp-guard attack-threshold per-port 200
```

**Related**

Command	Description
---------	-------------

Commands		
	<b>nfpp dhcp-guard policy</b>	Displays the rate-limit threshold and attack threshold.
	<b>show nfpp dhcp-guard summary</b>	Displays the configuration.
	<b>show nfpp dhcp-guard hosts</b>	Displays the monitored host list.
	<b>clear nfpp dhcp-guard hosts</b>	Clears the monitored host.

**Platform** N/A

**Description**

## 20.24 dhcp-guard enable

Use this command to enable the DHCP anti-attack function.

Use the **no** or **default** form of this command to restore the default setting.

**dhcp-guard enable**

**no dhcp-guard enable**

**default dhcp-guard enable**

Parameter Description	Parameter	Description
	N/A	N/A

**Defaults** This function is disabled by default.

**Command Mode** NFPP configuration mode

**Usage Guide** N/A

**Configuration Examples** The following example enables the DHCP anti-attack function.

```
Ruijie(config)# nfpp
Ruijie(config-nfpp)# dhcp-guard enable
```

Related Commands	Command	Description
	N/A	N/A

**Platform** N/A

**Description**

## 20.25 dhcp-guard isolate-period

Use this command to set the isolate time globally.



Use the **no** or **default** form of this command to restore the default setting.

**dhcp-guard isolate-period** { *seconds* | **permanent** }

**no dhcp-guard isolate-period**

**default dhcp-guard isolate-period**

**Parameter  
Description**

Parameter	Description
<i>seconds</i>	Sets the isolate time. The value is 0 or in the range from 30 to 86,400 in the unit of seconds.
<b>permanent</b>	Permanent isolation.

**Defaults** The default isolate time is 0, which means no isolation.

**Command  
Mode** NFPP configuration mode

**Usage Guide** The isolate period can be configured globally or based on the interface. For one interface, if the isolate period is not set based on the interface, the global value shall be adopted; or the interface-based isolate period shall be adopted.

**Configuration** The following example sets the isolate time globally to 180 seconds.

**Examples**

```
Ruijie(config)# nfpp
Ruijie(config-nfpp)# dhcp-guard isolate-period 180
```

**Related  
Commands**

Command	Description
<b>nfpp dhcp-guard isolate-period</b>	Sets the isolate time on the interface.
<b>show nfpp dhcp-guard summary</b>	Displays the configuration.

**Platform** N/A

**Description**

## 20.26 dhcp-guard monitored-host-limit

Use this command to set the maximum monitored host number.

Use the **no** or **default** form of this command to restore the default setting.

**dhcp-guard monitored-host-limit** *number*

**no dhcp-guard monitored-host-limit**

**default dhcp-guard monitored-host-limit**

**Parameter  
Description**

Parameter	Description
<i>number</i>	The maximum monitored host number, in the range from 1 to 4,294,967,295.

**Defaults** The default is 20,000.

**Command Mode** NFPP configuration mode

**Usage Guide** If the monitored host number has reached the default 20,000, the administrator shall set the max-number smaller than 20,000 and it will prompt the message that %ERROR: The value that you configured is smaller than current monitored hosts 20,000, please clear a part of monitored hosts to remind the administrator of the invalid configuration and removing the monitored hosts.

When the maximum monitored host number has been exceeded, it prompts the message that %NFPP\_ARP\_GUARD-4-SESSION\_LIMIT: Attempt to exceed limit of 20000 monitored hosts to remind the administrator.

**Configuration** The following example sets the maximum monitored host number to 200.

**Examples**

```
Ruijie(config)# nfpp
Ruijie(config-nfpp)# dhcp-guard monitored-host-limit 200
```

**Related Commands**

Command	Description
<b>show nfpp dhcp-guard summary</b>	Displays the configuration.

**Platform** N/A

**Description**

## 20.27 dhcp-guard monitor-period

Use this command to configure the monitor time.

Use the **no** or **default** form of this command to restore the default setting.

**dhcp-guard monitor-period** *seconds*

**no dhcp-guard monitor-period**

**default dhcp-guard monitor-period**

**Parameter Description**

Parameter	Description
<i>seconds</i>	Sets the monitor time, in the range from 180 to 86,400 in the unit of seconds.

**Defaults** The default is 600 seconds.

**Command Mode** NFPP configuration mode

**Usage Guide** When the attacker is detected, if the isolate period is 0, the attacker will be monitored by the software

and the timeout time will be the monitor period. During the software monitoring, if the isolate period is not 0, the software-monitored attacker will be auto-isolated by the hardware and the timeout time will be the isolate period. The monitor period is valid with the isolate period 0.

If the isolate period has changed to be 0, the attackers on the interface will be removed rather than being monitored by the software.

**Configuration** The following example sets the monitor time to 180 seconds.

**Examples**

```
Ruijie(config)# nfpp
Ruijie(config-nfpp)# dhcp-guard monitor-period 180
```

**Related  
Commands**

Command	Description
<b>show nfpp dhcp-guard summary</b>	Displays the configuration.
<b>show nfpp dhcp-guard hosts</b>	Displays the monitored host list.
<b>clear nfpp dhcp-guard hosts</b>	Clears the isolated host.

**Platform** N/A

**Description**

## 20.28 dhcp-guard rate-limit

Use this command to set the rate-limit threshold globally.

Use the **no** or **default** form of this command to restore the default setting.

**dhcp-guard rate-limit { per-src-mac | per-port } pps**

**no dhcp-guard rate-limit { per-src-mac | per-port }**

**default dhcp-guard rate-limit { per-src-mac | per-port }**

**Parameter  
Description**

Parameter	Description
<b>per-src-mac</b>	Sets the rate limit for each source MAC address.
<b>per-port</b>	Sets the rate limit for each port.
<i>pps</i>	Sets the rate limit, in the range of 1 to 19,999.

**Defaults** The default value varies with products. For details, see the *Configuration Guide*.

**Command Mode** NFPP configuration mode

**Usage Guide** N/A

**Configuration** The following example sets the rate-limit threshold globally.

**Examples**

```
Ruijie(config)# nfpp
Ruijie(config-nfpp)# dhcp-guard rate-limit per-src-mac 8
```

```
Ruijie(config-nfpp)# dhcp-guard rate-limit per-port 100
```

**Related  
Commands**

Command	Description
<b>nfpp dhcp-guard policy</b>	Sets the rate limit and the attack threshold.
<b>show nfpp dhcp-guard summary</b>	Displays the configuration.

**Platform** N/A**Description**

## 20.29 dhcpv6-guard attack-threshold

Use this command to set the global attack threshold. When the packet rate exceeds the attack threshold, the attack occurs.

Use the **no** or **default** form of this command to restore the default setting.

**dhcpv6-guard attack-threshold { per-src-mac | per-port } pps**

**no dhcpv6-guard attack-threshold {per-src-mac | per-port}**

**default dhcpv6-guard attack-threshold { per-src-mac | per-port}**

**Parameter  
Description**

Parameter	Description
<b>per-src-mac</b>	Sets the attack threshold for each source MAC address.
<b>per-port</b>	Sets the attack threshold for each port.
<i>pps</i>	Sets the attack threshold, in the range is from 1 to 19,999 pps.

**Defaults** The default value varies with products. For details, see the *Configuration Guide*.

**Command  
Mode** NFPP configuration mode

**Usage Guide** N/A.

**Configuration** The following example sets the global attack threshold.

**Examples**

```
Ruijie(config)# nfpp
Ruijie(config-nfpp)# dhcpv6-guard attack-threshold per-src-mac 15
Ruijie(config-nfpp)# dhcpv6-guard attack-threshold per-port 200
```

**Related  
Commands**

Command	Description
<b>nfpp dhcpv6-guard policy</b>	Displays the rate-limit threshold and attack threshold.
<b>show nfpp dhcpv6-guard summary</b>	Displays the configuration.

<b>show nfpp dhcpv6-guard hosts</b>	Displays the monitored host list.
<b>clear nfpp dhcpv6-guard hosts</b>	Clears the monitored host.

**Platform** N/A

**Description**

## 20.30 dhcpv6-guard enable

Use this command to enable the DHCPv6 anti-attack function.

Use the **no** or **default** form of this command to restore the default setting.

**dhcpv6-guard enable**

**no dhcpv6-guard enable**

**default dhcpv6-guard enable**

Parameter Description	Parameter	Description
	N/A	N/A

**Defaults** This function is disabled by default.

**Command** NFPP configuration mode  
**Mode**

**Usage Guide** N/A

**Configuration** The following example enables the DHCPv6 anti-attack function globally.

**Examples**

```
Ruijie(config)# nfpp
Ruijie(config-nfpp)# dhcpv6-guard enable
```

Related Commands	Command	Description
	N/A	N/A

**Platform** N/A

**Description**

## 20.31 dhcpv6-guard monitored-host-limit

Use this command to set the maximum monitored host number.

Use the **no** or **default** form of this command to restore the default setting.

**dhcpv6-guard monitored-host-limit** *number*

**no dhcpv6-guard monitored-host-limit**

**default dhcpv6-guard monitored-host-limit**

Parameter Description	Parameter	Description
	<i>number</i>	The maximum monitored host number, in the range from 1 to 4,294,967,295.

**Defaults** The default is 20,000.

**Command Mode** NFPP configuration mode

**Usage Guide** If the monitored host number has reached the default 20,000, the administrator shall set the max-number smaller than 20,000 and it will prompt the message that %ERROR: The value that you configured is smaller than current monitored hosts 20,000, please clear a part of monitored hosts to remind the administrator of the invalid configuration and removing the monitored hosts.

When the maximum monitored host number has been exceeded, it prompts the message that %NFPP\_DHCPV6\_GUARD-4-SESSION\_LIMIT: Attempt to exceed limit of 20000 monitored hosts to remind the administrator.

**Configuration** The following example sets the maximum monitored host number to 200.

**Examples**

```
Ruijie(config)# nfpp
Ruijie(config-nfpp)# dhcpv6-guard monitored-host-limit 200
```

Related Commands	Command	Description
	<b>show nfpp dhcpv6-guard summary</b>	Displays the configuration.

**Platform** N/A

**Description**

## 20.32 dhcpv6-guard monitor-period

Use this command to configure the monitor time.

Use the **no** or **default** form of this command to restore the default setting.

**dhcpv6-guard monitor-period** *seconds*

**no dhcpv6-guard monitor-period**

**default dhcpv6-guard monitor-period**

Parameter Description	Parameter	Description
	<i>seconds</i>	Sets the monitor time, in the range from 180 to 86,400 in the unit of seconds.

**Defaults** The default is 600 seconds.

**Command** NFPP configuration mode  
**Mode**

**Usage Guide** When the attacker is detected, if the isolate period is 0, the attacker will be monitored by the software and the timeout time will be the monitor period. During the software monitoring, if the isolate period is not 0, the software-monitored attacker will be auto-isolated by the hardware and the timeout time will be the isolate period. The monitor period is valid with the isolate period 0.  
If the isolate period has changed to be 0, the attackers on the interface will be removed rather than being monitored by the software.

**Configuration** The following example sets the monitor time to 180 seconds.

**Examples**

```
Ruijie(config)# nfpp
Ruijie(config-nfpp)# dhcpv6-guard monitor-period 180
```

**Related  
Commands**

Command	Description
<b>show nfpp dhcpv6-guard summary</b>	Displays the configuration.
<b>show nfpp dhcpv6-guard hosts</b>	Displays the monitored host list.
<b>clear nfpp dhcpv6-guard hosts</b>	Clears the isolated host.

**Platform** N/A  
**Description**

## 20.33 dhcpv6-guard rate-limit

Use this command to set the rate-limit threshold globally.

Use the **no** or **default** form of this command to restore the default setting.

**dhcpv6-guard rate-limit { per-src-mac | per-port } pps**

**no dhcpv6-guard rate-limit { per-src-mac | per-port }**

**default dhcpv6-guard rate-limit { per-src-mac | per-port }**

**Parameter  
Description**

Parameter	Description
<b>per-src-mac</b>	Sets the rate limit for each source MAC address.
<b>per-port</b>	Sets the rate limit for each port.
<i>pps</i>	Sets the rate limit, in the range from 1 to 19,999.

**Defaults** The default value varies with products. For details, see the *Configuration Guide*.

**Command** NFPP configuration mode  
**Mode**

**Usage Guide** N/A

**Configuration** The following example sets the rate-limit threshold globally.

**Examples**

```
Ruijie(config)# nfpp
Ruijie(config-nfpp)# dhcpv6-guard rate-limit per-src-mac 8
Ruijie(config-nfpp)# dhcpv6-guard rate-limit per-port 100
```

**Related  
Commands**

Command	Description
<b>nfpp dhcpv6-guard policy</b>	Sets the rate limit and the attack threshold.
<b>show nfpp dhcpv6-guard summary</b>	Displays the configuration.

**Platform** N/A

**Description**

## 20.34 global-policy

Use this command to set the rate-limit threshold and attack threshold based on the host or port.

Use the **no** or **default** form of this command to restore the default setting.

**global-policy { per-src-mac | per-src-ip | per-port } rate-limit-pps attack-threshold-pps**

**no global-policy { per-src-mac | per-src-ip | per-port }**

**default global-policy { per-src-mac | per-src-ip | per-port }**

**Parameter  
Description**

Parameter	Description
<b>per-src-ip</b>	Performs the rate statistics based on the source IP / VID and port.
<b>per-src-mac</b>	Performs the rate statistics based on the source MAC / VID and port.
<b>per-port</b>	Performs the rate statistics based on each physical port of receiving the packets.
<i>rate-limit-pps</i>	Sets the rate-limit threshold.
<i>attack-threshold-pps</i>	Sets the attack threshold.

**Defaults** By default, no rate-limit threshold and attack threshold is configured. To enable self-defined anti-attack, these two parameters must be set.

**Command** NFPP define configuration mode  
**Mode**

**Usage Guide** To create a user-defined anti-attack type, the classification rule for the rate statistics must be specified, that is, recognize the host based on the source IP address/ source MAC address for the user-defined packets rate statistics based on the user / port and specify the rate-limit threshold and attack threshold for each classification. The rate-limit threshold shall be equal to or greater than the attack threshold. If the rate is greater than the rate-limit threshold, the packets that meet this classification rule will be discarded. If the rate exceeds the attack threshold, the user will be regarded



as an attacker. The log will be printed and the trap will be sent.

**Configuration** The following example sets the rate-limit threshold and attack threshold based on the host or port.

**Examples**

```
Ruijie(config)# nfpp
Ruijie(config-nfpp)# nfpp define tcp
Ruijie(config-nfpp-define)# global-policy per-src-ip 10 20
Ruijie(config-nfpp-define)# global-policy per-port 100 200
```

**Related  
Commands**

Command	Description
<b>nfpp define</b> <i>name</i> <b>policy</b>	Sets the rate-limit threshold and attack threshold.
<b>show nfpp define summary</b>	Displays the user-defined anti-attack configuration

**Platform** N/A

**Description**

## 20.35 icmp-guard attack-threshold

Use this command to set the global attack threshold. When the packet rate exceeds the attack threshold, the attack occurs.

Use the **no** or **default** form of this command to restore the default setting.

**icmp-guard attack-threshold** { **per-src-ip** | **per-port** } *pps*

**no icmp-guard attack-threshold** { **per-src-ip** | **per-port** }

**default icmp-guard attack-threshold** { **per-src-ip** | **per-port** }

**Parameter  
Description**

Parameter	Description
<b>per-src-ip</b>	Sets the attack threshold for each source IP address.
<b>per-port</b>	Sets the attack threshold for each port.
<i>pps</i>	Sets the attack threshold, in the range from 1 to 19,999 in the unit of pps.

**Defaults** The default value varies with products. For details, see the *Configuration Guide*.

**Command  
Mode** NFPP configuration mode

**Usage Guide** N/A

**Configuration** The following example sets the global attack threshold.

**Examples**

```
Ruijie(config)# nfpp
```

```
Ruijie(config-nfpp)# icmp-guard attack-threshold per-src-ip 600
Ruijie(config-nfpp)# icmp-guard attack-threshold per-port 1200
```

**Related  
Commands**

Command	Description
<b>nfpp icmp-guard policy</b>	Displays the rate-limit threshold and attack threshold.
<b>show nfpp icmp-guard summary</b>	Displays the configuration.
<b>show nfpp icmp-guard hosts</b>	Displays the monitored host list.
<b>clear nfpp icmp-guard hosts</b>	Clears the monitored host.

**Platform** N/A**Description**

## 20.36 icmp-guard enable

Use this command to enable the ICMP anti-attack function.

Use the **no** or **default** form of this command to restore the default setting.

**icmp-guard enable**

**no icmp-guard enable**

**default icmp-guard enable**

**Parameter  
Description**

Parameter	Description
N/A	N/A

**Defaults** This function is enabled by default.**Command  
Mode** NFPP configuration mode**Usage Guide** N/A**Configuration** The following example enables the ICMP anti-attack function globally.**Examples**

```
Ruijie(config)# nfpp
Ruijie(config-nfpp)# icmp-guard enable
```

**Related  
Commands**

Command	Description
<b>nfpp icmp-guard enable</b>	Enables the ICMP anti-attack function on the interface.
<b>show nfpp icmp-guard summary</b>	Displays the configuration.

**Platform** N/A  
**Description**

## 20.37 icmp-guard isolate-period

Use this command to set the isolate time globally.

Use the **no** or **default** form of this command to restore the default setting.

**icmp-guard isolate-period** { *seconds* | **permanent** }

**no icmp-guard isolate-period**

**default icmp-guard isolate-period**

**Parameter**  
**Description**

Parameter	Description
<i>seconds</i>	Sets the isolate time. The value is in the range is 0 or from 30 to 86,400 in the unit of seconds.
<b>permanent</b>	Permanent isolation.

**Defaults** The default isolate time is 0, which means no isolation.

**Command** NFPP configuration mode  
**Mode**

**Usage Guide** The isolate period can be configured globally or based on the interface. For one interface, if the isolate period is not set based on the interface, the global value shall be adopted; or the interface-based isolate period shall be adopted.

**Configuration** The following example sets the isolate time globally to 180 seconds.

**Examples**

```
Ruijie(config)# nfpp
Ruijie(config-nfpp)# icmp-guard isolate-period 180
```

**Related**  
**Commands**

Command	Description
<b>nfpp icmp-guard isolate-period</b>	Sets the isolate time on the interface.
<b>show nfpp icmp-guard summary</b>	Displays the configuration.

**Platform** N/A  
**Description**

## 20.38 icmp-guard monitored-host-limit

Use this command to set the maximum monitored host number.

Use the **no** or **default** form of this command to restore the default setting.

**icmp-guard monitored-host-limit** *number*

**no icmp-guard monitored-host-limit**  
**default icmp-guard monitored-host-limit**

**Parameter  
Description**

Parameter	Description
<i>number</i>	The maximum monitored host number, in the range from 1 to 4,294,967,295.

**Defaults**

The default is 20,000.

**Command  
Mode**

NFPP configuration mode

**Usage Guide**

If the monitored host number has reached the default 20,000, the administrator shall set the max-number smaller than 20,000 and it will prompt the message that %ERROR: The value that you configured is smaller than current monitored hosts 20,000, please clear a part of monitored hosts to remind the administrator of the invalid configuration and removing the monitored hosts.

When the maximum monitored host number has been exceeded, it prompts the message that %NFPP\_ARP\_GUARD-4-SESSION\_LIMIT: Attempt to exceed limit of 20,000 monitored hosts to remind the administrator.

**Configuration**

The following example sets the maximum monitored host number to 200.

**Examples**

```
Ruijie(config)# nfpp
Ruijie(config-nfpp)# icmp-guard monitored-host-limit 200
```

**Related  
Commands**

Command	Description
<b>show nfpp icmp-guard summary</b>	Displays the configuration.

**Platform**

N/A

**Description**

## 20.39 icmp-guard monitor-period

Use this command to configure the monitor time.

Use the **no** or **default** form of this command to restore the default setting.

**icmp-guard monitor-period** *seconds*

**no icmp-guard monitor-period**

**default icmp-guard monitor-period**

**Parameter  
Description**

Parameter	Description
<i>seconds</i>	Sets the monitor time, in the range from 180 to 86,400 seconds.

**Defaults** The default is 600.

**Command Mode** NFPP configuration mode

**Usage Guide** When the attacker is detected, if the isolate period is 0, the attacker will be monitored by the software and the timeout time will be the monitor period. During the software monitoring, if the isolate period is not 0, the software-monitored attacker will be auto-isolated by the hardware and the timeout time will be the isolate period. The monitor period is valid with the isolate period 0.

If the isolate period has changed to be 0, the attackers on the interface will be removed rather than being monitored by the software.

**Configuration** The following example sets the monitor time to 180 seconds.

**Examples**

```
Ruijie(config)# nfpp
Ruijie(config-nfpp)# icmp-guard monitor-period 180
```

**Related Commands**

Command	Description
<b>show nfpp icmp-guard summary</b>	Displays the configuration.
<b>show nfpp icmp-guard hosts</b>	Displays the monitored host list.
<b>clear nfpp icmp-guard hosts</b>	Clears the isolated host.

**Platform** N/A

**Description**

## 20.40 icmp-guard rate-limit

Use this command to set the rate-limit threshold globally.

Use the **no** or **default** form of this command to restore the default setting.

**icmp-guard rate-limit { per-src-ip | per-port } pps**

**no icmp-guard rate-limit { per-src-ip | per-port }**

**default icmp-guard rate-limit { per-src-ip | per-port }**

**Parameter Description**

Parameter	Description
<b>per-src-ip</b>	Sets the rate limit for each source IP address.
<b>per-port</b>	Sets the rate limit for each port.
<i>pps</i>	Sets the rate limit, in the range from 1 to 19,999.

**Defaults** The default value varies with products. For details, see the *Configuration Guide*.

**Command Mode** NFPP configuration mode

**Usage Guide** N/A

**Configuration** The following example sets the rate-limit threshold globally.

**Examples**

```
Ruijie(config)# nfpp
Ruijie(config-nfpp)# icmp-guard rate-limit per-src-ip 500
Ruijie(config-nfpp)# icmp-guard rate-limit per-port 800
```

**Related  
Commands**

Command	Description
<b>nfpp icmp-guard policy</b>	Sets the rate limit and the attack threshold.
<b>show nfpp icmp-guard summary</b>	Displays the configuration.

**Platform** N/A

**Description**

## 20.41 icmp-guard trusted-host

Use this command to set the trusted hosts free from monitoring.

Use the **no** or **default** form of this command to restore the default setting.

**icmp-guard trusted-host** *ip mask*

**no icmp-guard trusted-host** { **all** | *ip mask* }

**default icmp-guard trusted-host**

**Parameter  
Description**

Parameter	Description
<i>ip</i>	Sets the IP address.
<i>mask</i>	Sets the IP mask.
<b>all</b>	Deletes the configuration of all trusted hosts.

**Defaults** No trusted host is configured by default.

**Command  
Mode** NFPP configuration mode

**Usage Guide** The administrator can use this command to set the trusted host free from monitoring. The ICMP packets are allowed to send to the trusted host CPU without any rate-limit and warning configuration. Configure the mask to set all hosts in one network segment free from monitoring. UP to 500 trusted hosts are supported.

**Configuration** The following example sets the trusted hosts free from monitoring.

**Examples**

```
Ruijie(config)# nfpp
Ruijie(config-nfpp)# icmp-guard trusted-host 1.1.1.0 255.255.255.0
```

Related Commands	Command	Description
	<b>show nfpp icmp-guard trusted-host</b>	Displays the configuration.

Platform N/A

Description

## 20.42 ip-guard attack-threshold

Use this command to set the global attack threshold. When the packet rate exceeds the attack threshold, the attack occurs.

Use the **no** or **default** form of this command to restore the default setting.

**ip-guard attack-threshold { per-src-ip | per-port } pps**

**no ip-guard attack-threshold { per-src-ip | per-port }**

**default ip-guard attack-threshold { per-src-ip | per-port }**

Parameter Description	Parameter	Description
	<b>per-src-ip</b>	Sets the attack threshold for each source IP address.
	<b>per-port</b>	Sets the attack threshold for each port.
	<i>pps</i>	Sets the attack threshold, in pps. The valid range is 1 to 19,999.

**Defaults** The default value varies with products. For details, see the *Configuration Guide*.

**Command Mode** NFPP configuration mode

**Usage Guide** The attack threshold shall be equal to or larger than the rate-limit threshold.

**Configuration Examples** The following example sets the global attack threshold.

```
Ruijie(config)# nfpp
Ruijie(config-nfpp)# ip-guard attack-threshold per-src-ip 2
Ruijie(config-nfpp)# ip-guard attack-threshold per-port 50
```

Related Commands	Command	Description
	<b>nfpp ip-guard policy</b>	Displays the rate-limit threshold and attack threshold.
	<b>show nfpp ip-guard summary</b>	Displays the configuration.
	<b>show nfpp ip-guard hosts</b>	Displays the monitored host list.
	<b>clear nfpp ip-guard hosts</b>	Clears the monitored host.

**Platform** N/A  
**Description**

## 20.43 ip-guard enable

Use this command to enable IP guard.

Use the **no** or **default** form of this command to restore the default setting.

**ip-guard enable**

**no ip-guard enable**

**default ip-guard enable**

Parameter Description	Parameter	Description
	N/A	N/A

**Defaults** This function is enabled by default.

**Command** NFPP configuration mode.  
**Mode**

**Usage Guide** This configuration aims at attacks whose destination IP address is not the local one. For those with the local address as the destination, CPP (CPU Protect Policy) will limit their rates.

**Configuration** The following example enables the IP guard globally.

**Examples**

```
Ruijie(config)# nfpp
Ruijie(config-nfpp)# ip-guard enable
```

Related Commands	Command	Description
	<b>nfpp ip-guard enable</b>	Enables the IP guard on the interface.

**Platform** N/A  
**Description**

## 20.44 ip-guard isolate-period

Use this command to set the isolate time globally.

Use the **no** or **default** form of this command to restore the default setting.

**ip-guard isolate-period { seconds | permanent }**

**no ip-guard isolate-period**

**default ip-guard isolate-period**

Parameter	Parameter	Description
-----------	-----------	-------------



<b>Description</b>		
	<i>seconds</i>	Sets the isolate time. The value is 0 or in the range from 30 to 86 ,400 in the unit of seconds.
	<b>permanent</b>	Permanent isolation

**Defaults** The default isolate time is 0 second, which means no isolation.

**Command Mode** NFPP configuration mode

**Usage Guide** N/A.

**Configuration** The following example sets the isolate time globally to 180 seconds.

**Examples**

```
Ruijie(config)# nfpp
Ruijie(config-nfpp)# ip-guard isolate-period 180
```

<b>Related Commands</b>	Command	Description
	<b>nfpp ip-guard isolate-period</b>	Sets the isolate time on the interface.
	<b>show nfpp ip-guard summary</b>	Displays the configuration.

**Platform** N/A

**Description**

## 20.45 ip-guard monitor-period

Use this command to configure the monitor time.

Use the **no** or **default** form of this command to restore the default setting.

**ip-guard monitor-period** *seconds*

**no ip-guard monitor-period**

**default ip-guard monitor-period**

<b>Parameter Description</b>	Parameter	Description
	<i>seconds</i>	Sets the monitor time, in the range from 180 to 86,400 in the unit of seconds.

**Defaults** The default is 600 seconds.

**Command Mode** NFPP configuration mode

**Usage Guide** When the attacker is detected, if the isolate period is 0, the attacker will be monitored by the software and the timeout time will be the monitor period. During the software monitoring, if the isolate period is

not 0, the software-monitored attacker will be auto-isolated by the hardware and the timeout time will be the isolate period. The monitor period is valid with the isolate period 0.

If the isolate period has changed to be 0, the attackers on the interface will be removed rather than being monitored by the software

**Configuration** The following example sets the monitor time to 180 seconds.

**Examples**

```
Ruijie(config)# nfpp
Ruijie(config-nfpp)# ip-guard monitor-period 180
```

**Related  
Commands**

Command	Description
<b>show nfpp ip-guard summary</b>	Displays the configuration.
<b>show nfpp ip-guard hosts</b>	Displays the monitored host list.
<b>clear nfpp ip-guard hosts</b>	Clears the isolated host.

**Platform** N/A

**Description**

## 20.46 ip-guard monitored-host-limit

Use this command to set the maximum monitored host number.

Use the **no** or **default** form of this command to restore the default setting.

**ip-guard monitored-host-limit** *number*

**no ip-guard monitored-host-limit**

**default ip-guard monitored-host-limit**

**Parameter  
Description**

Parameter	Description
<i>number</i>	The maximum monitored host number, in the range from 1 to 4,294,967,295.

**Defaults** The default is 20,000 seconds.

**Command  
Mode** NFPP configuration mode

**Usage Guide** If the monitored host number has reached the default 20,000, the administrator shall set the max-number smaller than 20,000 and it will prompt the message that %ERROR: The value that you configured is smaller than current monitored hosts 20,000, please clear a part of monitored hosts to remind the administrator of the invalid configuration and removing the monitored hosts.

When the maximum monitored host number has been exceeded, it prompts the message that %NFPP\_ARP\_GUARD-4-SESSION\_LIMIT: Attempt to exceed limit of 20,000 monitored hosts to remind the administrator.

**Configuration** The following example sets the maximum monitored host number to 200.

**Examples**

```
Ruijie(config)# nfpp
Ruijie(config-nfpp)# ip-guard monitored-host-limit 200
```

**Related  
Commands**

Command	Description
<b>show nfpp ip-guard summary</b>	Displays the configuration.

**Platform** N/A

**Description**

## 20.47 ip-guard rate-limit

Use this command to set the rate-limit threshold globally.

Use the **no** or **default** form of this command to restore the default setting.

**ip-guard rate-limit { per-src-ip | per-port } pps**

**no ip-guard rate-limit { per-src-ip | per-port }**

**default ip-guard rate-limit {per-src-ip | per-port }**

**Parameter  
Description**

Parameter	Description
<b>per-src-ip</b>	Sets the rate limit for each source IP address.
<b>per-port</b>	Sets the rate limit for each port.
<i>pps</i>	Sets the rate limit, in the range of 1 to 19,999.

**Defaults** The default value varies with products. For details, see the *Configuration Guide*.

**Command  
Mode** NFPP configuration mode

**Usage Guide** N/A

**Configuration** The following example sets the rate-limit threshold globally.

**Examples**

```
Ruijie(config)# nfpp
Ruijie(config-nfpp)# ip-guard rate-limit per-src-ip 2
Ruijie(config-nfpp)# ip-guard rate-limit per-port 50
```

**Related  
Commands**

Command	Description
<b>nfpp ip-guard policy</b>	Sets the rate limit and the attack threshold.
<b>show nfpp ip-guard summary</b>	Displays the configuration.

**Platform** N/A

**Description**

## 20.48 ip-guard scan-threshold

Use this command to set the global scan threshold.

Use the **no** or **default** form of this command to restore the default setting.

**ip-guard scan-threshold** *pkt-cnt*

**no ip-guard scan-threshold**

**default ip-guard scan-threshold**

Parameter Description	Parameter	Description
	<i>pkt-cnt</i>	Sets the scan threshold, in the range from 1 to 19,999.

**Defaults** The default value varies with products. For details, see the *Configuration Guide*.

**Command Mode** NFPP configuration mode.

**Usage Guide** N/A

**Configuration Examples** The following example sets the global scan threshold to 20 pps.

```
Ruijie(config)# nfpp
Ruijie(config-nfpp)# ip-guard scan-threshold 20
```

Related Commands	Command	Description
	<b>nfpp ip-guard scan-threshold</b>	Sets the scan threshold on the port.
	<b>show nfpp ip-guard summary</b>	Displays the configuration.

**Platform** N/A

**Description**

## 20.49 ip-guard trusted-host

Use this command to set the trusted hosts free form monitoring.

Use the **no** or **default** form of this command to restore the default setting.

**ip-guard trusted-host** *ip mask*

**no ip-guard trusted-host** { **all** | *ip mask* }

**default ip-guard trusted-host**

<b>Parameter Description</b>	Parameter	Description
	<i>ip</i>	Sets the IP address.
	<i>mask</i>	Sets the IP mask.
	<b>all</b>	Deletes the configuration of all trusted hosts.
<b>Defaults</b>	N/A	
<b>Command Mode</b>	NFPP configuration mode	
<b>Usage Guide</b>	<p>The administrator can use this command to set the trusted host free from monitoring. The ICMP packets are allowed to sent to the trusted host CPU without any rate-limit and warning configuration. Configure the mask to set all hosts in one network segment free from monitoring. UP to 500 trusted hosts are supported.</p>	
<b>Configuration Examples</b>	<p>The following example sets the trusted hosts free form monitoring.</p> <pre>Ruijie(config)# nfpp Ruijie(config-nfpp)# ip-guard trusted-host 1.1.1.0 255.255.255.0</pre>	
<b>Related Commands</b>	Command	Description
	<b>show nfpp ip-guard trusted-host</b>	Displays the configuration.
<b>Platform Description</b>	N/A	

## 20.50 log-buffer enable

Use this command to display logs on the screen.

Use the **no** or the **default** form of this command to restore the default setting.

**log-buffer enable**

**no log-buffer enable**

**default log-buffer enable**

<b>Parameter Description</b>	Parameter	Description
	N/A	N/A
<b>Defaults</b>	Logs are stored in the cache by default.	
<b>Command Mode</b>	NFPP configuration mode	

**Usage Guide** N/A

**Configuration** The following example displays logs on the screen.

**Examples**

```
Ruijie(config)# nfpp
Ruijie(config-nfpp)# log-buffer enable
```

**Related  
Commands**

Command	Description
N/A	N/A

**Platform** N/A

**Description**

## 20.51 log-buffer entries

Use this command to set the NFPP log buffer area size.

Use the **no** or **default** form of this command to restore the default setting.

**log-buffer entries** *number*

**no log-buffer entries**

**default log-buffer entries**

**Parameter  
Description**

Parameter	Description
<i>number</i>	The buffer area size, in the range from 0 to 1,024.

**Defaults** The default is 256.

**Command  
Mode** NFPP configuration mode

**Usage Guide** N/A

**Configuration** The following example sets the NFPP log buffer area size.

**Examples**

```
Ruijie(config)# nfpp
Ruijie(config-nfpp)# log-buffer entries 50
```

**Related  
Commands**

Command	Description
<b>log-buffer logs</b> <i>number_of_message</i> <b>interval</b> <i>length_in_seconds</i>	Displays the rate of the syslog generated from the NFPP buffer area.
<b>show nfpp log</b>	Displays the NFPP log configuration or the log buffer area.

**Platform** N/A

**Description**

## 20.52 log-buffer logs

Use this command to set the rate of syslog generated from the NFPP log buffer area.

Use the **no** or **default** form of this command to restore the default setting.

**log-buffer logs** *number\_of\_message* **interval** *length\_in\_seconds*

**no log-buffer logs**

**default log-buffer logs**

**Parameter  
Description**

Parameter	Description
<i>number_of_message</i>	The valid range is from 0 to 1024. 0 indicates that all logs are recorded in the specific buffer area and no syslogs are generated.
<i>length_in_seconds</i>	The valid range is from 0 to 86400(one day). 0 indicates not to write the log to the buffer area but generate the syslog immediately. With both the <i>number_of_message</i> and <i>length_in_seconds</i> values are 0, it indicates not to write the log to the buffer area but generate the syslog immediately. The parameter <i>number_of_message</i> / <i>length_in_second</i> indicates the rate of syslog generated from the NFPP log buffer area.

**Defaults** By default, *number\_of\_message* is 0 and *length\_in\_seconds* is 0.

**Command Mode** NFPP configuration mode

**Usage Guide** N/A

**Configuration Examples** The following example sets the rate of syslog generated from the NFPP log buffer area.

```
Ruijie(config)# nfpp
Ruijie(config-nfpp)# log-buffer logs 2 interval 12
```

**Related  
Commands**

Command	Description
<b>log-buffer entries</b> <i>number</i>	Sets the NFPP log buffer area size.
<b>show nfpp log summary</b>	Displays the NFPP log configuration or the log buffer area.

**Platform Description** N/A

## 20.53 logging

Use this command to set the VLAN or the interface log for NFPP.

Use the **no** or **default** form of this command to restore the default setting.

**logging vlan** *vlan-range*

**logging interface** *interface-id*

**no logging vlan** *vlan-range*

**no logging interface** *interface-id*

**default logging**

Parameter Description	Parameter	Description
	<i>vlan-range</i>	Sets the specified VLAN range, in the format such as "1-3, 5".
	<i>interface-id</i>	Sets the interface ID.

**Defaults** All logs are recorded by default.

**Command Mode** NFPP configuration mode

**Usage Guide** Use this command to filter the logs and records the logs within the specified VLAN range or the specified port

**Configuration Examples** The following example records the logs in VLAN 1, VLAN 2,VLAN 3 and VLAN 5 only.

```
Ruijie(config)# nfpp
Ruijie(config-nfpp)# logging vlan 1-3,5
```

The following example records the logs on the interface GigabitEthernet 0/1 only.

```
Ruijie(config)# nfpp
Ruijie(config-nfpp)# logging interface G 0/1
```

Related Commands	Command	Description
	<b>show nfpp log summary</b>	Displays the NFPP log configuration or the log buffer area.

**Platform Description** N/A

## 20.54 match

Use this command to specify the message matching filed for the user-defined anti-attack.

**match** [ *etype type* ] [ **src-mac** *smac* [ **src-mac-mask** *smac\_mask* ] ] [ **dst-mac** *dmac*



```
[ dst-mac-mask dst_mask ] [ protocol protocol ] [ src-ip sip [ src-ip-mask sip-mask ] ] [ src-ipv6
sip6 [ src-ipv6-masklen sip6-masklen ] ] [ dst-ip dip [ dst-ip-mask dip-mask ] ] [ dst-ipv6 dip6
[ dst-ipv6-masklen dip6-masklen ] ] [ src-port sport ] [ dst-port dport ]
```

**Parameter  
Description**

Parameter	Description
<i>type</i>	Ethernet link layer packet type
<i>smac</i>	Source MAC address
<i>smac_mask</i>	Source MAC address mask
<i>dmac</i>	Destination MAC address
<i>dmac_mask</i>	Destination MAC address mask
<i>protocol</i>	IPv4/v6 message protocol
<i>sip</i>	Source IPv4 address
<i>sip_mask</i>	Source IPv4 address mask
<i>sip6</i>	Source IPv6 address
<i>sip6_masklen</i>	Source IPv6 address mask
<i>dip</i>	Destination IPv4 address
<i>dip_mask</i>	Destination IPv4 address mask
<i>dip6</i>	Destination IPv6 address
<i>dip6_masklen</i>	Length of the destination IPv6 address mask.
<i>sport</i>	Source port
<i>dport</i>	Destination port

**Defaults** N/A

**Command  
Mode** NFPP configuration mode

**Usage Guide** Use this command to create a new user-defined anti-attack type and specify the message fields to be matched.

**Configuration Examples** The following example specifies the message matching filed for the user-defined anti-attack.

```
Ruijie(config)# nfpp
Ruijie(config-nfpp)# nfpp define tcp
Ruijie(config-nfpp-define)#match etype 0x0800 protocol 0x06
```

**Related  
Commands**

Command	Description
<b>show nfpp define summary</b>	Displays the user-defined anti-attack configuration

**Platform  
Description** N/A

## 20.55 monitored-host-limit

Use this command to set the maximum monitored host number.

Use the **no** or **default** form of this command to restore the default setting.

**monitored-host-limit** *number*

**no monitored-host-limit**

**default monitored-host-limit**

Parameter Description	Parameter	Description
	<i>number</i>	The maximum monitored host number, in the range from 1 to 4,294,967,295.

**Defaults** The default is 20,000.

**Command Mode** NFPP define configuration mode

**Usage Guide** If the monitored host number has reached the default 20,000, the administrator shall set the max-number smaller than 20,000 and it will prompt the message that %ERROR: The value that you configured is smaller than current monitored hosts 20,000, please clear a part of monitored hosts to remind the administrator of the invalid configuration and removing the monitored hosts.

When the maximum monitored host number has been exceeded, it prompts the message that % % NFPP\_DEFINE-4-SESSION\_LIMIT: Attempt to exceed limit of name's 20,000 monitored hosts. to remind the administrator

**Configuration** The following example sets the maximum monitored host number.

**Examples**

```
Ruijie(config)# nfpp
Ruijie(config-nfpp)# nfpp define tcp
Ruijie(config-nfpp-define)#monitored-host-limit 500
```

Related Commands	Command	Description
	<b>show nfpp define summary</b>	Displays the user-defined anti-attack configuration

**Platform** N/A

**Description**

## 20.56 monitor period

Use this command to set the monitoring time.

Use the **no** or **default** form of this command to restore the default setting.

**monitor-period** *seconds*  
**no monitor-period**  
**default monitor-period**

**Parameter**  
**Description**

Parameter	Description
<i>seconds</i>	Sets the monitor time, in the range from 180 to 86,400 in the unit of seconds.

**Defaults**

The default is 600 seconds.

**Command**  
**Mode**

NFPP define configuration mode

**Usage Guide**

When the attacker is detected, if the isolate period is 0, the attacker will be monitored by the software and the timeout time will be the monitor period. During the software monitoring, if the isolate period is not 0, the software-monitored attacker will be auto-isolated by the hardware and the timeout time will be the isolate period. The monitor period is valid with the isolate period 0.

If the isolate period has changed to be 0, the attackers on the interface will be removed rather than being monitored by the software.

**Configuration**

The following example sets the monitoring time to 1,000 seconds.

**Examples**

```
Ruijie(config)# nfpp
Ruijie(config-nfpp)# define tcp
Ruijie(config-nfpp-define)#monitor-period 1000
```

**Related**  
**Commands**

Command	Description
<b>show nfpp define summary</b>	Displays the user-defined anti-attack configuration.

**Platform**

N/A

**Description**

## 20.57 nd-guard attack-threshold

Use this command to set the global attack threshold. When the packet rate exceeds the attack threshold, the attack occurs.

Use the **no** or **default** form of this command to restore the default setting.

**nd-guard attack-threshold per-port { ns-na | rs | ra-redirect } pps**  
**no nd-guard attack-threshold per-port { ns-na | rs | ra-redirect }**  
**default nd-guard attack-threshold per-port { ns-na | rs | ra-redirect }**

**Parameter**

Parameter	Description
-----------	-------------

<b>Description</b>		
	<b>ns-na</b>	Sets the neighbor request and neighbor advertisement.
	<b>rs</b>	Sets the router request.
	<b>ra-redirect</b>	Sets the router advertisement and the redirect packets.
	<i>pps</i>	Sets the attack threshold, in the range from 1 to 19999 in the unit of seconds.

**Defaults** The default value varies with products. For details, see the *Configuration Guide*.

**Command** NFPP configuration mode.  
**Mode**

**Usage Guide** The attack threshold shall be equal to or larger than the rate-limit threshold.

**Configuration** The following example sets the global attack threshold.

**Examples**

```
Ruijie(config)# nfpp
Ruijie(config-nfpp)# nd-guard attack-threshold per-port ns-na 20
Ruijie(config-nfpp)# nd-guard attack-threshold per-port rs 10
Ruijie(config-nfpp)# nd-guard attack-threshold per-port ra-redirect 10
```

<b>Related Commands</b>	Command	Description
	<b>nfpp ip-guard policy</b>	Displays the rate-limit threshold and attack threshold.
	<b>show nfpp ip-guard summary</b>	Displays the configuration.

**Platform** N/A

**Description**

## 20.58 nd-guard enable

Use this command to enable the ND anti-attack function.

Use the **no** or **default** form of this command to restore the default setting.

**nd-guard enable**

**no nd-guard enable**

**default nd-guard enable**

<b>Parameter Description</b>	Parameter	Description
	N/A	N/A

**Defaults** This function is enabled by default.

**Command** NFPP configuration mode  
**Mode**

**Usage Guide** N/A

**Configuration** The following example enables the ND anti-attack function.

**Examples**

```
Ruijie(config)# nfpp
Ruijie(config-nfpp)# nd-guard enable
```

**Related  
Commands**

Command	Description
<b>nfpp nd-guard enable</b>	Enables the ND anti-attack function on the interface.
<b>show nfpp nd-guard summary</b>	Displays the configuration.

**Platform** N/A

**Description**

## 20.59 nd-guard rate-limit

Use this command to set the rate-limit threshold globally.

Use the **no** or **default** form of this command to restore the default setting.

**nd-guard rate-limit per-port { ns-na | rs | ra-redirect } pps**

**no nd-guard rate-limit per-port { ns-na | rs | ra-redirect }**

**default nd-guard rate-limit per-port { ns-na | rs | ra-redirect }**

**Parameter  
Description**

Parameter	Description
<b>ns-na</b>	Sets the neighbor request and neighbor advertisement.
<b>rs</b>	Sets the router request.
<b>ra-redirect</b>	Sets the router advertisement and the redirect packets.
<i>pps</i>	Sets the attack threshold, in the range is from 1 to 19,999 in the unit of pps.

**Defaults** The default value varies with products. For details, see the *Configuration Guide*.

**Command** NFPP configuration mode  
**Mode**

**Usage Guide** N/A

**Configuration** The following example sets the rate-limit threshold globally.

**Examples**

```
Ruijie(config)# nfpp
Ruijie(config-nfpp)# nd-guard rate-limit per-port ns-na 10
```

```
Ruijie(config-nfpp)# nd-guard rate-limit per-port rs 5
Ruijie(config-nfpp)# nd-guard rate-limit per-port ra-redirect 5
```

**Related  
Commands**

Command	Description
<b>nfpp nd-guard policy</b>	Sets the rate limit and the attack threshold.
<b>show nfpp nd-guard summary</b>	Displays the configuration.

**Platform** N/A**Description**

## 20.60 nd-guard ratelimit-forwarding enable

Use this command to enable the ND-guard ratelimit-forwarding on the interface.

**nd-guard ratelimit-forwarding enable**

Use this command to disable the ND-guard ratelimit-forwarding on the interface.

**no nd-guard ratelimit-forwarding enable**

Use this command to restore the default setting.

**default nd-guard ratelimit-forwarding enable**

**Parameter  
Description**

Parameter	Description
N/A	N/A

**Defaults** The function is enabled by default.**Command  
Mode** NFPP configuration mode**Usage Guide** N/A**Configuration** The following example enables the ND-guard ratelimit-forwarding on the interface.**Examples**

```
Ruijie(config)# nfpp
Ruijie(config-nfpp)# nd-guard ratelimit-forwarding enable
```

**Platform** N/A**Description**

## 20.61 nfpp

Use this command to enter NFPP configuration mode.

**nfpp****Parameter  
Description**

Parameter	Description
N/A	N/A

**Defaults**

N/A

**Command  
Mode**

Global configuration mode

**Usage Guide**

Use this command to enter NFPP configuration mode and make further configuration.

**Configuration  
Examples**

```
Ruijie(config)# nfpp
```

**Platform**

N/A

**Description**

## 20.62 nfpp arp-guard enable

Use this command to enable the anti-ARP attack function on the interface.

Use the **no** or **default** form of this command to restore the default setting.**nfpp arp-guard enable****no nfpp arp-guard enable****default nfpp arp-guard enable****Parameter  
Description**

Parameter	Description
N/A	N/A

**Defaults**

The anti-ARP attack function is not enabled on the interface.

**Command  
Mode**

Interface configuration mode

**Usage Guide**

The interface anti-ARP attack configuration is prior to the global configuration.

**Configuration  
Examples**

The following example enables the anti-ARP attack function on the interface.

```
Ruijie(config)# interface G0/1  
Ruijie(config-if)# nfpp arp-guard enable
```

**Related**

Command	Description
---------	-------------

Commands		
	<b>arp-guard enable</b>	Enables the anti-ARP attack function.
	<b>show nfpp arp-guard summary</b>	Displays the configuration.

Platform N/A

Description

## 20.63 nfpp arp-guard isolate-period

Use this command to set the isolate period in the interface configuration mode.

Use the **no** or **default** form of this command to restore the default setting.

**nfpp arp-guard isolate-period** { *seconds* | **permanent** }

**no nfpp arp-guard isolate-period**

**default nfpp arp-guard isolate-period**

Parameter Description	Parameter	Description
	<i>seconds</i>	Sets the isolate period. The value is 0, or in the range from 30 to 86,400 in the unit of seconds.
	<b>permanent</b>	Permanent isolation

**Defaults** By default, the isolate period is not configured.

**Command Mode** Interface configuration mode

**Usage Guide** N/A

**Configuration Examples** The following example sets the isolate period in the interface configuration mode.

```
Ruijie(config)# interface G0/1
Ruijie(config-if)# nfpp arp-guard isolate-period 180
```

Related Commands	Command	Description
	<b>arp-guard isolate-period</b>	Sets the global isolate period.
	<b>show nfpp arp-guard summary</b>	Displays the configuration.

Platform N/A

Description

## 20.64 nfpp arp-guard policy

Use this command to set the rate-limit threshold and the attack threshold.



Use the **no** or **default** form of this command to restore the default setting.

**nfpp arp-guard policy { per-src-ip | per-src-mac | per-port } rate-limit-pps attack-threshold-pps**

**no nfpp arp-guard policy { per-src-ip | per-src-mac | per-port }**

**default nfpp arp-guard policy { per-src-ip | per-src-mac | per-port }**

**Parameter  
Description**

Parameter	Description
<b>per-src-ip</b>	Sets the rate-limit threshold and the attack threshold for each source IP address.
<b>per-src-mac</b>	Sets the rate-limit threshold and the attack threshold for each source MAC address.
<b>per-port</b>	Sets the rate-limit threshold and the attack threshold for each port.
<i>rate-limit-pps</i>	Sets the rate-limit threshold, in the range from 1 to 19999.
<i>attack-threshold-pps</i>	Sets the attack threshold, in the range from 1 to 19999.

**Defaults** By default, the rate-limit threshold and the attack threshold are not configured.

**Command Mode** Interface configuration mode

**Usage Guide** The attack threshold value shall be equal to or greater than the rate-limit threshold.

**Configuration Examples** The following example sets the rate-limit threshold and the attack threshold.

```
Ruijie(config)# interface G 0/1
Ruijie(config-if)# nfpp arp-guard policy per-src-ip 2 10
Ruijie(config-if)# nfpp arp-guard policy per-src-mac 3 10
Ruijie(config-if)# nfpp arp-guard policy per-port 50 100
```

**Related  
Commands**

Command	Description
<b>arp-guard attack-threshold</b>	Sets the global attack threshold.
<b>arp-guard rate-limit</b>	Sets the global rate-limit threshold.
<b>show nfpp arp-guard summary</b>	Displays the configuration.
<b>show nfpp arp-guard hosts</b>	Displays the monitored host.
<b>clear nfpp arp-guard hosts</b>	Clears the isolated host.

**Platform Description** N/A

## 20.65 nfpp arp-guard scan-threshold

Use this command to set the scan threshold.

Use the **no** or **default** form of this command to restore the default setting.

**nfpp arp-guard scan-threshold** *pkt-cnt*  
**no nfpp arp-guard scan-threshold**  
**default nfpp arp-guard scan-threshold**

Parameter Description	Parameter	Description
	<i>pkt-cnt</i>	Sets the scan threshold, in the range from 1 to 19,999.

**Defaults** By default, the sport-based scan threshold is not configured.

**Command Mode** Interface configuration mode

**Usage Guide** N/A

**Configuration** The following example sets the scan threshold to 20 pps.

**Examples**

```
Ruijie(config)# interface G 0/1
Ruijie(config-if)# nfpp arp-guard scan-threshold 20
```

Related Commands	Command	Description
	<b>arp-guard attack-threshold</b>	Sets the global attack threshold.
	<b>show nfpp arp-guard summary</b>	Displays the configuration.
	<b>show nfpp arp-guard scan</b>	Displays the ARP scan table.
	<b>clear nfpp arp-guard scan</b>	Clears the ARP scan table.

**Platform** N/A  
**Description**

## 20.66 nfpp define *name* enable

Use this command to enable the user-defined anti-attack function on the interface.

Use the **no** or **default** form of this command to restore the default setting.

**nfpp define** *name* **enable**  
**no nfpp define** *name* **enable**  
**default nfpp define** *name* **enable**

Parameter Description	Parameter	Description
	<i>name</i>	Name of the user-defined anti-attack type

**Defaults** N/A

**Command** Interface configuration mode.

**Mode**

**Usage Guide** This command takes effect only after the name of the user-defined anti-attack and the match, rate-count, rate-limit and the attack-threshold have been configured.

**Configuration** The following example enables the user-defined anti-attack function on the interface.

**Examples**

```
Ruijie(config)# interface G0/1
Ruijie(config-if)# nfpp define tcp enable
```

Related Commands	Command	Description
	<b>show nfpp define summary</b>	Displays the user-defined anti-attack configuration.

**Platform** N/A

**Description**

## 20.67 nfpp define policy

Use this command to set the local rate-limit threshold and the attack threshold.

Use the **no** or **default** form of this command to restore the default setting.

**nfpp define** *name* **policy** { **per-src-ip** | **per-src-mac** | **per-port** } *rate-limit-pps* *attack-threshold-pps*

**no nfpp define** *name* **policy** { **per-src-ip** | **per-src-mac** | **per-port** }

**default nfpp define** *name* **policy** { **per-src-ip** | **per-src-mac** | **per-port** }

Parameter Description	Parameter	Description
	<b>per-src-ip</b>	Sets the attack threshold for each source IP address.
	<b>per-src-mac</b>	Sets the attack threshold for each source MAC address.
	<b>per-port</b>	Sets the attack threshold for each port.
	<i>rate-limit-pps</i>	Sets the rate-limit threshold, in the range from 1 to 19,999.
	<i>attack-threshold-pps</i>	Sets the attack threshold, in the range of from1 to 19,999.

**Defaults** By default, the rate-limit threshold and the attack threshold are not configured.

**Command** Interface configuration mode

**Mode**

**Usage Guide** The attack threshold value shall be equal to or greater than the rate-limit threshold.

**Configuration** The following example sets the local rate-limit threshold and the attack threshold.

**Examples**

```
Ruijie(config)# interface G 0/1
Ruijie(config-if)# nfpp define tcp policy per-src-ip 2 10
```

```
Ruijie(config-if)# nfpp define tcp policy per-port 50 100
```

**Related  
Commands**

Command	Description
<b>define-policy</b>	Sets the global rate-limit threshold and attack threshold.
<b>show nfpp define summary</b>	Displays the user-defined anti-attack configuration.

**Platform** N/A**Description**

## 20.68 nfpp dhcp-guard enable

Use this command to enable the DHCP anti-attack function on the interface.

Use the **no** or **default** form of this command to restore the default setting.

**nfpp dhcp-guard enable**

**no nfpp dhcp-guard enable**

**default nfpp dhcp-guard enable**

**Parameter  
Description**

Parameter	Description
N/A	N/A

**Defaults** The DHCP anti-attack function is not enabled on the interface.**Command  
Mode** Interface configuration mode**Usage Guide** The interface DHCP anti- attack configuration is prior to the global configuratio**Configuration** The following example enables the DHCP anti-attack function on the interface.**Examples**

```
Ruijie(config)# interface G0/1
Ruijie(config-if)# nfpp dhcp-guard enable
```

**Related  
Commands**

Command	Description
<b>dhcp-guard enable</b>	Enables the anti-ARP attack function.
<b>show nfpp dhcp-guard summary</b>	Displays the configuration.

**Platform** N/A**Description**

## 20.69 nfpp dhcp-guard policy

Use this command to set the rate-limit threshold and the attack threshold on the port.

Use the **no** or **default** form of this command to restore the default setting.

**nfpp dhcp-guard policy** { **per-src-mac** | **per-port** } *rate-limit-pps attack-threshold-pps*

**no nfpp dhcp-guard policy** { **per-src-mac** | **per-port** }

**default nfpp dhcp-guard policy** { **per-src-mac** | **per-port** }

Parameter Description	Parameter	Description
	<b>per-src-mac</b>	Sets the rate-limit threshold and the attack threshold for the designated source MAC address.
	<b>per-port</b>	Sets the rate-limit threshold and the attack threshold for the designated port.
	<i>rate-limit-pps</i>	Sets the rate-limit threshold, in the range from 1 to 19,999.
	<i>attack-threshold-pps</i>	Sets the attack threshold, in the range from 1 to 19,999.

**Defaults** The rate-limit threshold and the attack threshold are not configured by default. So the device adopts the rate-limit threshold and the attack threshold that are set in the global configuration mode.

**Command Mode** Interface configuration mode

**Usage Guide** The attack threshold value shall be equal to or greater than the rate-limit threshold.

**Configuration Examples** The following example sets the rate-limit threshold and the attack threshold on interface G0/1.

```
Ruijie(config)#interface G 0/1
Ruijie(config-if)# nfpp dhcpv6-guard policy per-src-mac 3 10
Ruijie(config-if)# nfpp dhcpv6-guard policy per-port 50 100
```

Related Commands	Command	Description
	N/A	N/A

**Platform Description** N/A

## 20.70 nfpp dhcpv6-guard enable

Use this command to enable the DHCPv6 anti-attack function on the interface.

Use the **no** or **default** form of this command to restore the default setting.

**nfpp dhcpv6-guard enable**

**no nfpp dhcpv6-guard enable**

**default nfpp dhcpv6-guard enable****Parameter  
Description**

Parameter	Description
N/A	N/A

**Defaults** The DHCPv6 anti-attack function is not enabled on the interface.

**Command Mode** Interface configuration mode

**Usage Guide** The interface DHCPv6 anti- attack configuration is prior to the global configuration.

**Configuration** The following example enables the DHCPv6 anti-attack function on interface G0/1.

**Examples**

```
Ruijie(config)# interface G0/1
Ruijie(config-if)# nfpp dhcpv6-guard enable
```

**Related  
Commands**

Command	Description
<b>dhcpv6-guard enable</b>	Enables the anti-ARP attack function.
<b>show nfpp dhcpv6-guard summary</b>	Displays the configuration.

**Platform** N/A

**Description**

## 20.71 nfpp dhcpv6-guard policy

Use this command to set the rate-limit threshold and the attack threshold.

Use the **no** or **default** form of this command to restore the default setting.

**nfpp dhcpv6-guard policy { per-src-mac | per-port } rate-limit-pps attack-threshold-pps**

**no nfpp dhcpv6-guard policy { per-src-mac | per-port }**

**default nfpp dhcpv6-guard policy { per-src-mac | per-port }**

**Parameter  
Description**

Parameter	Description
<b>per-src-mac</b>	Sets the rate-limit threshold and the attack threshold for each source MAC address.
<b>per-port</b>	Sets the rate-limit threshold and the attack threshold for each port.
<i>rate-limit-pps</i>	Sets the rate-limit threshold, in the range of from1 to 19,999.
<i>attack-threshold-pps</i>	Sets the attack threshold, in the range from1 to19,999.

**Defaults** By default, the rate-limit threshold and the attack threshold are not configured.

**Command** Interface configuration mode  
**Mode**

**Usage Guide** The attack threshold value shall be equal to or greater than the rate-limit threshold.

**Configuration** The following example sets the rate-limit threshold and the attack threshold.

**Examples**

```
Ruijie(config)# interface G 0/1
Ruijie(config-if)# nfpp dhcpv6-guard policy per-src-mac 3 10
Ruijie(config-if)# nfpp dhcpv6-guard policy per-port 50 100
```

**Related  
Commands**

Command	Description
<b>dhcpv6-guard attack-threshold</b>	Sets the global attack threshold.
<b>dhcpv6-guard rate-limit</b>	Sets the global rate-limit threshold.
<b>show nfpp dhcpv6-guard summary</b>	Displays the configuration.
<b>show nfpp dhcpv6-guard hosts</b>	Displays the monitored host.
<b>clear nfpp dhcpv6-guard hosts</b>	Clears the isolated host.

**Platform** N/A

**Description**

## 20.72 nfpp icmp-guard enable

Use this command to enable the ICMP anti-attack function on the interface.

Use the **no** or **default** form of this command to restore the default setting.

**nfpp icmp-guard enable**

**no nfpp icmp-guard enable**

**default nfpp icmp-guard enable**

**Parameter  
Description**

Parameter	Description
N/A	N/A

**Defaults** The ICMP anti-attack function is not enabled on the interface.

**Command** Interface configuration mode  
**Mode**

**Usage Guide** The interface ICMP anti- attack configuration is prior to the global configuration.

**Configuration** The following example enables the ICMP anti-attack function on the interface.

**Examples**

```
Ruijie(config)# interface G0/1
Ruijie(config-if)# nfpp icmp-guard enable
```

Related Commands	Command	Description
	<b>icmp-guard enable</b>	Enables the anti-ARP attack function.
	<b>show nfpp icmp-guard summary</b>	Displays the configuration.

**Platform** N/A

**Description**

## 20.73 nfpp icmp-guard isolate-period

Use this command to set the isolate period in the interface configuration mode.

Use the **no** or **default** form of this command to restore the default setting.

**nfpp icmp-guard isolate-period** { *seconds* | **permanent** }

**no nfpp icmp-guard isolate-period**

**default nfpp icmp-guard isolate-period**

Parameter Description	Parameter	Description
	<i>seconds</i>	Sets the isolate period. The value is 0 or in the range from 30 to 86,400 in the unit of seconds.
	<b>permanent</b>	Permanent isolation

**Defaults** By default, the isolate period is not configured.

**Command Mode** Interface configuration mode

**Usage Guide** N/A

**Configuration** The following example sets the isolate period in the interface configuration mode.

**Examples**

```
Ruijie(config)# interface G0/1
Ruijie(config-if)# nfpp icmp-guard isolate-period 180
```

Related Commands	Command	Description
	<b>icmp-guard isolate-period</b>	Sets the global isolate period.
	<b>show nfpp icmp-guard summary</b>	Displays the configuration.

**Platform** N/A

**Description**



## 20.74 nfpp icmp-guard policy

Use this command to set the rate-limit threshold and the attack threshold.

Use the **no** or **default** form of this command to restore the default setting.

**nfpp icmp-guard policy** { **per-src-ip** | **per-port** } *rate-limit-pps attack-threshold-pps*

**no nfpp icmp-guard policy** { **per-src-ip** | **per-port** }

**default nfpp icmp-guard policy** { **per-src-ip** | **per-port** }

### Parameter Description

Parameter	Description
<b>per-src-ip</b>	Sets the rate-limit threshold and the attack threshold for each source IP address.
<b>per-port</b>	Sets the rate-limit threshold and the attack threshold for each port.
<i>rate-limit-pps</i>	Sets the rate-limit threshold, in the range from 1 to 19,999.
<i>attack-threshold-pps</i>	Sets the attack threshold, in range from 1 to 19,999.

**Defaults** By default, the rate-limit threshold and the attack threshold are not configured.

**Command Mode** Interface configuration mode

**Usage Guide** The attack threshold value shall be equal to or greater than the rate-limit threshold.

**Configuration Examples** The following example sets the rate-limit threshold and the attack threshold.

```
Ruijie(config)# interface G 0/1
Ruijie(config-if)# nfpp icmp-guard policy per-src-ip 5 10
Ruijie(config-if)# nfpp icmp-guard policy per-port 100 200
```

### Related Commands

Command	Description
<b>icmp-guard attack-threshold</b>	Sets the global attack threshold.
<b>icmp-guard rate-limit</b>	Sets the global rate-limit threshold.
<b>show nfpp icmp-guard summary</b>	Displays the configuration.
<b>show nfpp icmp-guard hosts</b>	Displays the monitored host.
<b>clear nfpp icmp-guard hosts</b>	Clears the isolated host.

**Platform** N/A

**Description**

## 20.75 nfpp ip-guard enable

Use this command to enable the IP anti-attack function on the interface.

Use the **no** or **default** form of this command to restore the default setting.

**nfpp ip-guard enable**  
**no nfpp ip-guard enable**  
**default nfpp ip-guard enable**

**Parameter  
Description**

Parameter	Description
N/A	N/A

**Defaults** The IP anti-attack function is disabled on the interface.

**Command  
Mode** Interface configuration mode

**Usage Guide** The interface IP anti-attack configuration is prior to the global configuration.

**Configuration** The following example enables the IP anti-attack function on the interface.

**Examples**

```
Ruijie(config)# interface G0/1
Ruijie(config-if)# nfpp ip-guard enable
```

**Related  
Commands**

Command	Description
<b>ip-guard enable</b>	Enables the anti-ARP attack function.
<b>show nfpp ip-guard summary</b>	Displays the configuration.

**Platform  
Description** N/A

## 20.76 nfpp ip-guard isolate-period

Use this command to set the isolate period in the interface configuration mode.

Use the **no** or **default** form of this command to restore the default setting.

**nfpp ip-guard isolate-period { seconds | permanent }**  
**no nfpp ip-guard isolate-period**  
**default nfpp ip-guard isolate-period**

**Parameter  
Description**

Parameter	Description
<i>seconds</i>	Sets the isolate period, in the range from 30 to 86,400 in the unit of seconds.
<b>permanent</b>	Permanent isolation

**Defaults** By default, the isolate period is not configured.

**Command** Interface configuration mode

**Mode****Usage Guide** N/A**Configuration** The following example sets the isolate period in the interface configuration mode.**Examples**

```
Ruijie(config)# interface G0/1
Ruijie(config-if)# nfpp ip-guard isolate-period 180
```

**Related  
Commands**

Command	Description
<b>ip-guard isolate-period</b>	Sets the global isolate period.
<b>show nfpp ip-guard summary</b>	Displays the configuration.

**Platform** N/A**Description**

## 20.77 nfpp ip-guard policy

Use this command to set the rate-limit threshold and the attack threshold.

Use the **no** or **default** form of this command to restore the default setting.

**nfpp ip-guard policy { per-src-ip | per-port } rate-limit-pps attack-threshold-pps**

**no nfpp ip-guard policy { per-src-ip | per-port }**

**default nfpp ip-guard policy { per-src-ip | per-port }**

**Parameter  
Description**

Parameter	Description
<b>per-src-ip</b>	Sets the rate-limit threshold and the attack threshold for each source IP address.
<b>per-port</b>	Sets the rate-limit threshold and the attack threshold for each port.
<i>rate-limit-pps</i>	Sets the rate-limit threshold, in the range from 1 to 19,999.
<i>attack-threshold-pps</i>	Sets the attack threshold, in the range from 1 to 19,999.

**Defaults** By default, the rate-limit threshold and the attack threshold are not configured.**Command  
Mode** Interface configuration mode**Usage Guide** The attack threshold value shall be equal to or greater than the rate-limit threshold.**Configuration** The following example sets the rate-limit threshold and the attack threshold.**Examples**

```
Ruijie(config)# interface G 0/1
Ruijie(config-if)# nfpp ip-guard policy per-src-ip 2 10
Ruijie(config-if)# nfpp ip-guard policy per-port 50 100
```

Related Commands	Command	Description
	<b>ip-guard attack-threshold</b>	Sets the global attack threshold.
	<b>ip-guard rate-limit</b>	Sets the global rate-limit threshold.
	<b>show nfpp ip-guard summary</b>	Displays the configuration.
	<b>show nfpp ip-guard hosts</b>	Displays the monitored host.
	<b>clear nfpp ip-guard hosts</b>	Clears the isolated host.

**Platform** N/A

**Description**

## 20.78 nfpp ip-guard scan-threshold

Use this command to set the scan threshold.

Use the **no** or **default** form of this command to restore the default setting.

**nfpp ip-guard scan-threshold** *pkt-cnt*

**no nfpp ip-guard scan-threshold**

**default nfpp ip-guard scan-threshold**

Parameter Description	Parameter	Description
	<i>pkt-cnt</i>	Sets the scan threshold, in the range from 1 to 19,999.

**Defaults** By default, the sport-based scan threshold is not configured.

**Command** Interface configuration mode  
**Mode**

**Usage Guide** N/A

**Configuration** The following example sets the scan threshold to 20pps.

**Examples**

```
Ruijie(config)# interface G 0/1
Ruijie(config-if)# nfpp ip-guard scan-threshold 20
```

Related Commands	Command	Description
	<b>ip-guard attack-threshold</b>	Sets the global attack threshold.
	<b>show nfpp ip-guard summary</b>	Displays the configuration.

**Platform** N/A

**Description**

## 20.79 nfpp nd-guard enable

Use this command to enable the ND anti-attack function on the interface.

Use the **no** or **default** form of this command to restore the default setting.

**nfpp nd-guard enable**

**no nfpp nd-guard enable**

**default nfpp nd-guard enable**

Parameter Description	Parameter	Description
	N/A	N/A

**Defaults** The ND anti-attack function is disabled on the interface.

**Command Mode** Interface configuration mode

**Usage Guide** The interface ND anti-attack configuration is prior to the global configuration.

**Configuration Examples** The following example enables the ND anti-attack function on the interface.

```
Ruijie(config)# interface G0/1
Ruijie(config-if)# nfpp nd-guard enable
```

Related Commands	Command	Description
	<b>nd-guard enable</b>	Enables the ND anti-attack function.
	<b>show nfpp nd-guard summary</b>	Displays the configuration.

**Platform** N/A

**Description**

## 20.80 nfpp nd-guard policy

Use this command to set the rate-limit threshold and the attack threshold.

Use the **no** or **default** form of this command to restore the default setting.

**nfpp nd-guard policy per-port { ns-na | rs | ra-redirect } rate-limit-pps attack-threshold-pps**

**no nfpp nd-guard policy per-port { ns-na | rs | ra-redirect }**

**default nfpp nd-guard policy per-port { ns-na | rs | ra-redirect }**

Parameter Description	Parameter	Description
	<b>ns-na</b>	Sets the neighbor request and neighbor advertisement.
	<b>rs</b>	Sets the router request.

<b>ra-redirect</b>	Sets the router advertisement and the redirect packets.
<i>rate-limit-pps</i>	Sets the rate-limit threshold, in the range from 1 to 19,999.
<i>attack-threshold-pps</i>	Sets the attack threshold, in the range from 1 to 19,999.

**Defaults** By default, the rate-limit threshold and the attack threshold are not configured.

**Command** Interface configuration mode

**Mode**

**Usage Guide** The attack threshold value shall be equal to or greater than the rate-limit threshold.

**Configuration** The following example sets the rate-limit threshold and the attack threshold.

**Examples**

```
Ruijie(config)# interface G 0/1
Ruijie(config-if)# nfpp nd-guard policy per-port ns-na 50 100
Ruijie(config-if)# nfpp nd-guard policy per-port rs 10 20
Ruijie(config-if)# nfpp nd-guard policy per-port ra-redirect 10 20
```

**Related  
Commands**

Command	Description
<b>nd-guard attack-threshold</b>	Sets the global attack threshold.
<b>nd-guard rate-limit</b>	Sets the global rate-limit threshold.
<b>show nfpp nd-guard summary</b>	Displays the configuration.

**Platform** N/A

**Description**

## 20.81 show nfpp arp-guard hosts

Use this command to display the monitored host.

**show nfpp arp-guard hosts** [ **statistics** | [ [ **vlan** *vid* ] [ **interface** *interface-id* ] [ *ip-address* | *mac-address* ] ] ]

**Parameter  
Description**

Parameter	Description
<b>statistics</b>	Displays the statistical information of the monitored host.
<i>vid</i>	The VLAN ID
<i>interface-id</i>	The interface name
<i>ip-address</i>	The IP address
<i>mac-address</i>	The MAC address

**Defaults** N/A

**Command** Privileged EXEC mode

**Mode**

**Usage Guide** N/A

**Configuration** The following example displays the statistical information of the monitored host.

**Examples**

```
Ruijie# show nfpp arp-guard hosts statistics
success    fail    total
-----
100        20      120
```

The following example shows the monitored host.

```
Ruijie# show nfpp arp-guard hosts
If column 1 shows '*', it means "hardware do not isolate user" .
VLAN  interface IP address  MAC address  remain-time(s)
----  -
1     Gi0/1      1.1.1.1     -            110
2     Gi0/2      1.1.2.1     -            61
*3    Gi0/3      -           0000.0000.1111 110
4     Gi0/4      -           0000.0000.2222 61
Total:4 hosts
```

**Related  
Commands**

Command	Description
<b>clear nfpp arp-guard hosts</b>	Clears the monitored hosts.

**Platform** N/A

**Description**

## 20.82 show nfpp arp-guard scan

Use this command to display the ARP scan list.

**show nfpp arp-guard scan** [ **statistics** ] [ [ **vlan** *vid* ] [ **interface** *interface-id* ] [ *ip-address* ] [ *mac-address* ] ]

**Parameter  
Description**

Parameter	Description
<b>statistics</b>	Displays the statistical information of the ARP scan list.
<i>vid</i>	The VLAN ID
<i>interface-id</i>	The interface name
<i>ip-address</i>	The IP address
<i>mac-address</i>	The MAC address

**Defaults** N/A

**Command** Privileged EXEC mode

**Mode**

**Usage Guide** N/A

**Configuration** The following example displays the ARP scan list.

**Examples** Ruijie# show nfpp arp-guard scan statistics  
arp-guard table has 4 record(s).

The following example displays the ARP scan list.

```
Ruijie# show nfpp arp-guard scan
VLAN      interface  IP address  MAC address  timestamp
----      -
1         Gi0/1      -          0000.0000.0001  2008-01-23 16:23:10
2         Gi0/2      1.1.1.1    0000.0000.0002  2008-01-23 16:24:10
3         Gi0/3      -          0000.0000.0003  2008-01-23 16:25:10
4         Gi0/4      -          0000.0000.0004  2008-01-23 16:26:10
Total:4 record(s)
```

The following example displays the ARP scan list.

```
Ruijie# show nfpp arp-guard scan vlan 1 interface G 0/1 0000.0000.0001
VLAN      interface  IP address  MAC address  timestamp
----      -
1         Gi0/1      -          0000.0000.0001  2008-01-23 16:23:10
Total:1 record(s)
```

**Related  
Commands**

Command	Description
<b>arp-guard scan-threshold</b>	Sets the global scan threshold.
<b>nfpp arp-guard scan-threshold</b>	Sets the scan threshold.
<b>clear nfpp arp-guard scan</b>	Clears the ARP scan list.

**Platform** N/A

**Description**

## 20.83 show nfpp arp-guard summary

Use this command to display the configuration.

**show nfpp arp-guard summary**

**Parameter  
Description**

Parameter	Description
N/A	N/A

**Defaults** N/A



**Command** Privileged EXEC mode

**Mode**

**Usage Guide** N/A

**Configuration** The following example displays the configuration.

**Examples**

```
Ruijie# show nfpp arp-guard summary
(Format of column Rate-limit and Attack-threshold is
per-src-ip/per-src-mac/per-port.)
Interface  Status  Isolate-period Rate-limit Attack-threshold Scan-threshold
Global      Enable  300           4/5/60    8/10/100    15
Gi 0/1      Enable  180           5/-/-     8/-/-       -
Gi 0/2      Disable 200           4/5/60    8/10/100    20

Maximum count of monitored hosts: 1000
Monitor period:300s
```

Field	Description
Interface(Global)	Global configuration
Status	Enables/Disables the anti-attack function.
Rate-limit	In the format of the rate-limit threshold for the source IP address/ the rate-limit threshold for the source MAC address/ the rate-limit threshold for the port
Attack-threshold	In the same format as the rate-limit.
Scan-threshold	Scan threshold

**Related Commands**

Command	Description
<b>arp-guard attack-threshold</b>	Sets the global attack threshold.
<b>arp-guard enable</b>	Enables the anti-ARP attack function.
<b>arp-guard isolate-period</b>	Sets the global isolate time.
<b>arp-guard monitor-period</b>	Sets the monitor period.
<b>arp-guard monitored-host-limit</b>	Sets the maximum number of the monitored hosts.
<b>arp-guard rate-limit</b>	Sets the global rate-limit threshold.
<b>arp-guard scan-threshold</b>	Sets the global scan threshold.
<b>nfpp arp-guard enable</b>	Enables the anti-ARP attack function on the interface.
<b>nfpp arp-guard isolate-period</b>	Sets the isolate time.
<b>nfpp arp-guard policy</b>	Sets the rate-limit threshold and attack threshold.
<b>nfpp arp-guard scan-threshold</b>	Sets the scan threshold.

**Platform** N/A

**Description**

## 20.84 show nfpp define hosts

Use this command to display the monitored hosts.

**show nfpp define hosts** *name* [**statistics** | [[**vlan** *vid*] [**interface** *interface-id*] [*ip-address*] [*mac-address*] [*ipv6-address*]]]

**Parameter Description**

Parameter	Description
<i>name</i>	Name of the user-defined anti-attack type
<b>statistics</b>	Displays the statistics of monitored hosts.
<i>vid</i>	VLAN ID
<i>interface-id</i>	Interface name
<i>ip-address</i>	IP address
<i>mac-address</i>	MAC address
<i>ipv6-address</i>	IPv6 address

**Defaults** N/A

**Command Mode** Privileged EXEC mode

**Usage Guide** This command allows filtering the hosts with parameters specified

**Configuration** The following example displays the monitored hosts.

**Examples**

```
Ruijie#show nfpp define hosts abc
If col_filter 1 shows '*', it means "hardware do not isolate host".
  VLAN      interface    MAC address      remain-time(s)
  ----      -
*1          Gi4/2        00d0.f822.33e5   592
Total: 1 host
```

**Related Commands**

Command	Description
<b>clear nfpp define hosts</b>	Clears the monitored hosts of user-defined anti-attack type.

**Platform Description** N/A

## 20.85 show nfpp define summary

Use this command to display the configuration.

**show nfpp define summary** [ *name* ]

Parameter Description	Parameter	Description
	<i>name</i>	Name of the user-defined anti-attack type

**Defaults** N/A

**Command Mode** Privileged EXEC mode

**Usage Guide** This command can be used to display the configuration. Without the name specified, all user-defined anti-attack types will be displayed.

**Configuration** The following example displays the configuration.

### Examples

```
Ruijie#show nfpp define summary abc
Define abc summary:
match etype 0x800 src-ip 1.1.1.1 src-ip-mask 255.255.255.255
Maximum count of monitored hosts: 20000
Monitor period:600s
(Format of column Rate-limit and Attack-threshold is
per-src-ip/per-src-mac/per-port.)
Interface Status Rate-limit Attack-threshold
Global Disable -/10/- -/20/-
Gi4/1 Enable -/-/- -/-/-
```

Field	Description
Interface	If the interface field is displayed as Global, it means that is configured in the global configuration mode.
Status	Enables/ Disables the anti-attack function.
Rate-limit	In the format of the rate-limit threshold for the source IP address/ the rate-limit threshold for the source MAC address/ the rate-limit threshold for the port
Attack-threshold	In the same format as the rate-limit.

### Related Commands

Command	Description
<b>match</b>	Clears the monitored hosts of user-defined anti-attack type.
<b>policy</b>	Attack threshold and rate-limit threshold.
<b>isolate-period</b>	Isolates time

<b>monitored-period</b>	Monitored time
<b>monitored-host-limit</b>	Maximum monitored host number

**Platform** N/A

**Description**

## 20.86 show nfpp define trusted-host

Use this command to display the trusted host free from monitoring.

**show nfpp define trusted-host** *name*

Parameter Description	Parameter	Description
	<i>name</i>	Name of the user-defined anti-attack type

**Defaults** N/A.

**Command Mode** Privileged EXEC mode

**Usage Guide** N/A

**Configuration** The following example displays the trusted host configuration.

**Examples**

```
Ruijie# show nfpp define trusted-host tcp
Define tcp:
IP address      mask
-----
1.1.1.0         255.255.255.0
1.1.2.0         255.255.255.0
Total:2 record(s)
```

Related Commands	Command	Description
	<b>trusted-host</b>	Configures the trusted hosts.

**Platform** N/A

**Description**

## 20.87 show nfpp dhcp-guard hosts

Use this command to display the monitored host.

**show nfpp dhcp-guard hosts** [**statistics** | [[**vlan** *vid*] [**interface** *interface-id*] [*mac-address*]]]

Parameter Description	Parameter	Description
	<b>statistics</b>	Displays the statistical information of the monitored host.
	<i>vid</i>	VLAN ID
	<i>interface-id</i>	Interface name

**Defaults** N/A

**Command Mode** Privileged EXEC mode

**Usage Guide** N/A

**Configuration** The following example displays the monitored host.

**Examples**

```
Ruijie# show nfpp dhcp-guard hosts statistics
success    fail    total
-----    -
100         20      120
```

The following example displays the monitored host.

```
Ruijie# show nfpp dhcp-guard hosts
If column 1 shows '*', it means "hardware failed to isolate host".
VLAN  interface  MAC address    remain-time(seconds)
----  -
1     gi0/2        0000.0000.0001  10
*2    gi0/1        0000.0000.0002  20
Total:2 host(s)
```

Related Commands	Command	Description
	<b>clear nfpp dhcp-guard hosts</b>	Clears the monitored host.

**Platform Description** N/A

## 20.88 show nfpp dhcp-guard summary

Use this command to display the configuration.

**show nfpp dhcp-guard summary**

Parameter Description	Parameter	Description
	N/A	N/A

**Defaults** N/A

**Command** Privileged EXEC mode  
**Mode**

**Usage Guide** N/A

**Configuration** The following example displays the configuration.

**Examples**

```
Ruijie# show nfpp dhcp-guard summary
(Format of column Rate-limit and Attack-threshold is
per-src-ip/per-src-mac/per-port.)
Interface  Status  Isolate-period Rate-limit Attack-threshold
Global      Enable  300          -/5/150   -/10/300
Gi 0/1      Enable  180          -/6/-     -/8/-
Gi 0/2      Disable 200          -/5/30    -/10/50

Maximum count of monitored hosts: 1000
Monitor period:300s
```

Field	Description
Interface(Global)	Global configuration
Status	Enables/Disables the anti-attack function.
Isolate-period	Isolate period
Rate-limit	In the format of the rate-limit threshold for the source IP address/ the rate-limit threshold for the source MAC address/ the rate-limit threshold for the port
Attack-threshold	In the same format as the rate-limit.

**Related Commands**

Command	Description
<b>dhcp-guard attack-threshold</b>	Sets the global attack threshold.
<b>dhcp-guard enable</b>	Enables the DHCP anti-attack function.
<b>dhcp-guard isolate-period</b>	Sets the global isolate time.
<b>dhcp-guard monitor-period</b>	Sets the monitor period.
<b>dhcp-guard monitored-host-limit</b>	Sets the maximum number of the monitored hosts.
<b>dhcp-guard rate-limit</b>	Sets the global rate-limit threshold.
<b>nfpp dhcp-guard enable</b>	Enables the DHCP anti-attack function on the interface.
<b>nfpp dhcp-guard isolate-period</b>	Sets the isolate time.
<b>nfpp dhcp-guard policy</b>	Sets the rate-limit threshold and attack threshold.

**Platform** N/A  
**Description**

## 20.89 show nfpp dhcpv6-guard hosts

Use this command to display the monitored host.

**show nfpp dhcpv6-guard hosts** [**statistics** | [[**vlan** *vid*] [**interface** *interface-id*] [*mac-address*]]]

Parameter Description	Parameter	Description
	<b>statistics</b>	Displays the statistical information of the monitored host.
	<i>vid</i>	The VLAN ID
	<i>interface-id</i>	The interface name
	<i>mac-address</i>	The MAC address

**Defaults** N/A

**Command Mode** Privileged EXEC mode

**Usage Guide** N/A

**Configuration** The following example displays the monitored host.

**Examples**

```
Ruijie# show nfpp dhcpv6-guard hosts
If column 1 shows '*', it means "hardware failed to isolate host".
VLAN  interface  MAC address  remain-time(seconds)
----  -
*1    gi0/2      0000.0000.0001  10
*2    gi0/1      0000.0000.0002  20
Total:2 host(s)
```

Related Commands	Command	Description
	<b>clear nfpp dhcpv6-guard hosts</b>	Clears the monitored host.

**Platform** N/A

**Description**

## 20.90 show nfpp dhcpv6-guard summary

Use this command to display the configuration.

**show nfpp dhcpv6-guard summary**

Parameter Description	Parameter	Description
	N/A	N/A

**Defaults** N/A

**Command Mode** Privileged EXEC mode

**Usage Guide** N/A

**Configuration** The following example displays the configuration.

**Examples** Ruijie#show nfpp dhcpv6-guard summary

(Format of column Rate-limit and Attack-threshold is per-src-ip/per-src-mac/per-port.)

```
Interface Status Rate-limit Attack-threshold
Global Enable -/5/1200 -/10/1500
```

Maximum count of monitored hosts: 20000

Monitor period: 600s

Field	Description
Interface(Global)	Global configuration
Status	Enables/Disables the anti-attack function.
Rate-limit	In the format of the rate-limit threshold for the source IP address/ the rate-limit threshold for the source MAC address/ the rate-limit threshold for the port
Attack-threshold	In the same format as the rate-limit.

**Related Commands**

Command	Description
<b>dhcpv6-guard attack-threshold</b>	Sets the global attack threshold.
<b>dhcpv6-guard enable</b>	Enables the DHCPv6 anti-attack function.
<b>dhcpv6-guard monitor-period</b>	Sets the monitor period.
<b>dhcpv6-guard monitored-host-limit</b>	Sets the maximum number of the monitored hosts.
<b>dhcpv6-guard rate-limit</b>	Sets the global rate-limit threshold.
<b>nfpp dhcpv6-guard enable</b>	Enables the DHCPv6 anti-attack function on the interface.
<b>nfpp dhcpv6-guard policy</b>	Sets the rate-limit threshold and attack threshold.

**Platform** N/A

**Description**



## 20.91 show nfpp icmp-guard hosts

Use this command to display the monitored host.

**show nfpp icmp-guard hosts** [**statistics** | [[**vlan** *vid*] [**interface** *interface-id*] [*ip-address*]]]

Parameter Description	Parameter	Description
	<b>statistics</b>	Displays the statistical information of the monitored host.
	<i>vid</i>	The VLAN ID
	<i>interface-id</i>	The interface name
	<i>ip-address</i>	The IP address

**Defaults** N/A

**Command Mode** Privileged EXEC mode

**Usage Guide** N/A

**Configuration** The following example displays the monitored host.

**Examples**

```
Ruijie# show nfpp icmp-guard hosts statistics
success    fail    total
-----
100        20      120
```

The following example displays the monitored host.

```
Ruijie# show nfpp icmp-guard hosts
If column 1 shows '*', it means "hardware failed to isolate host".
VLAN  interface IP address      remain-time(s)
----  -
1     Gi0/1      1.1.1.1      110
2     Gi0/2      1.1.2.1      61
Total:2 host(s)
```

Related Commands	Command	Description
	<b>clear nfpp icmp-guard hosts</b>	Clears the monitored host.

**Platform Description** N/A

## 20.92 show nfpp icmp-guard summary

Use this command to display the configuration.

**show nfpp icmp-guard summary**

Parameter Description	Parameter	Description
	N/A	N/A

**Defaults** N/A

**Command Mode** Privileged EXEC mode

**Usage Guide** N/A

**Configuration** The following example displays the configuration.

### Examples

```
Ruijie# show nfpp icmp-guard summary
(Format of column Rate-limit and Attack-threshold is
per-src-ip/per-src-mac/per-port.)
Interface  Status  Isolate-period Rate-limit Attack-threshold
Global      Enable   300           4/-/60    8/-/100
Gi 0/1      Enable   180           5/-/-     8/-/-
Gi 0/2      Disable  200           4/-/60    8/-/100

Maximum count of monitored hosts: 1000
Monitor period:300s
```

Field	Description
Interface(Global)	Global configuration
Status	Enables/Disables the anti-attack function.
Isolate-period	Isolate period
Rate-limit	In the format of the rate-limit threshold for the source IP address/ the rate-limit threshold for the source MAC address/ the rate-limit threshold for the port
Attack-threshold	In the same format as the rate-limit.

### Related Commands

Command	Description
<b>icmp-guard attack-threshold</b>	Sets the global attack threshold.
<b>icmp-guard enable</b>	Enables the ICMP anti-attack function.
<b>icmp-guard isolate-period</b>	Sets the global isolate time.
<b>icmp-guard monitor-period</b>	Sets the monitor period.

<b>icmp-guard monitored-host-limit</b>	Sets the maximum number of the monitored hosts.
<b>icmp-guard rate-limit</b>	Sets the global rate-limit threshold.
<b>nfpp icmp-guard enable</b>	Enables the ICMP anti-attack function on the interface.
<b>nfpp icmp-guard isolate-period</b>	Sets the isolate time.
<b>nfpp icmp-guard policy</b>	Sets the rate-limit threshold and attack threshold.

**Platform** N/A

**Description**

## 20.93 show nfpp icmp-guard trusted-host

Use this command to display the trusted host free from being monitored.

**show nfpp icmp-guard trusted-host**

**Parameter  
Description**

Parameter	Description
N/A	N/A

**Defaults** N/A

**Command  
Mode** Privileged EXEC mode

**Usage Guide** N/A

**Configuration** The following example displays the trusted host free from being monitored.

**Examples**

```
Ruijie# show nfpp icmp-guard trusted-host
IP address      mask
-----
1.1.1.0         255.255.255.0
1.1.2.0         255.255.255.0
Total:2 record(s)
```

**Related  
Commands**

Command	Description
<b>icmp-guard trusted-host</b>	Sets the trusted host.

**Platform** N/A

**Description**

## 20.94 show nfpp ip-guard hosts

Use this command to display the monitored host.

**show nfpp ip-guard hosts** [**statistics** | [[**vlan** *vid*] [**interface** *interface-id*] [*ip-address*]]]

Parameter Description	Parameter	Description
	<b>statistics</b>	Displays the statistical information of the monitored host.
	<i>vid</i>	The VLAN ID.
	<i>interface-id</i>	The interface name.
	<i>mac-address</i>	The MAC address.

**Defaults** N/A

**Command Mode** Privileged EXEC mode

**Usage Guide** N/A

**Configuration** The following example displays the monitored host.

**Examples**

```
Ruijie# show nfpp ip-guard hosts statistics
success    fail    total
-----
100        20      120
```

The following example displays the monitored host.

```
Ruijie#show nfpp ip-guard hosts
If column 1 shows '*', it means "hardware do not isolate host" .
VLAN  interface IP address  Reason    remain-time(s)
----  -
1      Gi0/1      1.1.1.1    ATTACK    110
2      Gi0/2      1.1.2.1    SCAN      61
Total:2 host(s)
```

Related Commands	Command	Description
	<b>clear nfpp ip-guard hosts</b>	Clears the monitored host.

**Platform** N/A

**Description**

## 20.95 show nfpp ip-guard summary

Use this command to display the configuration.

**show nfpp ip-guard summary**

Parameter Description	Parameter	Description
	N/A	N/A

**Defaults** N/A

**Command Mode** Privileged EXEC mode

**Usage Guide** N/A

**Configuration** The following example displays the configuration.

**Examples**

```
Ruijie# show nfpp ip-guard summary
(Format of column Rate-limit and Attack-threshold is
per-src-ip/per-src-mac/per-port.)
Interface Status Isolate-period Rate-limit Attack-threshold Scan-threshold
Global      Enable  300          4/-/60      8/-/100     15
Gi 0/1      Enable  180          5/-/-       8/-/-       -
Gi 0/2      Disable 200          4/-/60      8/-/100     20

Maximum count of monitored hosts: 1000
Monitor period..300s
```

Field	Description
Interface(Global)	Global configuration
Status	Enables/Disables the anti-attack function.
Isolate-period	Isolate period
Rate-limit	In the format of the rate-limit threshold for the source IP address/ the rate-limit threshold for the source MAC address/ the rate-limit threshold for the port
Attack-threshold	In the same format as the rate-limit.
Scan-threshold	Scan threshold

**Related Commands**

Command	Description
<b>ip-guard attack-threshold</b>	Sets the global attack threshold.
<b>ip-guard enable</b>	Enables the IP anti-attack function.
<b>ip-guard isolate-period</b>	Sets the global isolate time.
<b>ip-guard monitor-period</b>	Sets the monitor period.
<b>ip-guard monitored-host-limit</b>	Sets the maximum number of the monitored hosts.
<b>ip-guard rate-limit</b>	Sets the global rate-limit threshold.

<b>nfpp ip-guard enable</b>	Enables the IP anti-attack function on the interface.
<b>nfpp ip-guard isolate-period</b>	Sets the isolate time.
<b>nfpp ip-guard policy</b>	Sets the rate-limit threshold and attack threshold.

**Platform** N/A

**Description**

## 20.96 show nfpp ip-guard trusted-host

Use this command to display the trusted host free from being monitored.

**show nfpp ip-guard trusted-host**

Parameter Description	Parameter	Description
	N/A	N/A

**Defaults** N/A

**Command Mode** Privileged EXEC mode

**Usage Guide** N/A

**Configuration** The following example displays the trusted host free from being monitored.

**Examples**

```
Ruijie# show nfpp ip-guard trusted-host
IP address      mask
-----
1.1.1.0         255.255.255.0
1.1.2.0         255.255.255.0
Total.2 record(s)
```

Related Commands	Command	Description
	<b>ip-guard trusted-host</b>	Sets the trusted host.

**Platform** N/A

**Description**

## 20.97 show nfpp log

Use this command to display the NFPP log configuration.

**show nfpp log summary**

Use this command to display the NFPP log buffer area content.

**show nfpp log buffer [ statistics ]**

Parameter Description	Parameter	Description
	<b>statistics</b>	Displays the statistical information of the NFPP log buffer area.

**Defaults** N/A

**Command Mode** Privileged EXEC mode

**Usage Guide** When the log buffer area is full, the subsequent logs are to be dropped, and an entry with all attributes "-" is displayed in the log buffer area. The administrator shall increase the capacity of the log buffer area or improve the rate of generating the syslog.

The generated syslog in the log buffer area carries with the timestamp, for example:

%NFPP\_ARP\_GUARD-4-DOS\_DETECTED:  
Host<IP=N/A,MAC=0000.0000.0004,port=Gi4/1,VLAN=1> was detected.(2009-07-01 13:00:00)

**Configuration Examples** The following example displays the NFPP log configuration.

```
Ruijie#show nfpp log summary
Total log buffer size : 10
Syslog rate : 1 entry per 2 seconds
Logging:
VLAN 1-3, 5
interface Gi 0/1
interface Gi 0/2
```

The following example displays the log number in the buffer area.

```
Ruijie#show nfpp log buffer statistics
There are 6 logs in buffer.
```

The following example shows the NFPP log buffer area:

```
Ruijie#show nfpp log buffer
Protocol VLAN  Interface IP address MAC address      Reason      Timestamp
-----
ARP      1      Gi0/1      1.1.1.1      -      DoS      2009-05-30
16:23:10
ARP      1      Gi0/1      1.1.1.1      -      ISOLATED  2009-05-30
16:23:10
ARP      1      Gi0/1      1.1.1.2      -      DoS      2009-05-30
16:23:15
ARP      1      Gi0/1      1.1.1.2      -      ISOLATE_FAILED 2009-05-30
16:23:15
ARP      1      Gi0/1      -      0000.0000.0001  SCAN      2009-05-30
```

```

16:30:10
ARP      -      Gi0/2      -      -      PORT_ATTACKED      2009-05-30
16:30:10

```

Field	Description
Protocol	ARP, IP, ICMP, DHCP,DHCPv6, NS-NA, RS, RA-REDIRECT
Reason	DoS, ISOLATED, ISOLATE_FAILE, SCAN, PORT_ATTACKED

#### Related Commands

Command	Description
<b>clear nfpp log</b>	Clears the NFPP log buffer area.

**Platform** N/A

**Description**

## 20.98 show nfpp nd-guard summary

Use this command to display the configuration.

**show nfpp nd-guard summary**

#### Parameter Description

Parameter	Description
N/A	N/A

**Defaults** N/A

**Command Mode** Privileged EXEC mode

**Usage Guide** N/A

**Configuration** The following example displays the configuration.

#### Examples

```

Ruijie# show nfpp nd-guard summary
(Format of column Rate-limit and Attack-threshold is NS-NA/RS/RA-REDIRECT.)
Interface Status Rate-limit Attack-threshold
Global      Enable  20/5/10    40/10/20
Gi 0/1      Enable  15/15/15   30/30/30
Gi 0/2      Disable -/5/30     -/10/50

```

Field	Description
Interface(Global)	Global configuration



Status	Enables/Disables the anti-attack function.
Rate-limit	In the format of the rate-limit threshold for the NS-NA/RS/RA-REDIRECT.
Attack-threshold	In the same format as the rate-limit.

#### Related Commands

Command	Description
<b>nd-guard attack-threshold</b>	Sets the global attack threshold.
<b>nd-guard enable</b>	Enables the ND anti-attack function.
<b>nd-guard rate-limit</b>	Sets the global rate-limit threshold.
<b>nfpp nd-guard enable</b>	Enables the ND anti-attack function on the interface.
<b>nfpp nd-guard policy</b>	Sets the rate-limit threshold and attack threshold.

**Platform** N/A

**Description**

## 20.99 show nfpp nd-guard hosts

Use this command to display the monitored host.

**show nfpp nd-guard hosts** [**statistics** | [[**vlan** *vid*] [**interface** *interface-id*]]]

#### Parameter Description

Parameter	Description
<b>statistics</b>	Displays the statistics of the monitored host.
<i>vid</i>	Sets the VLAN ID.
<i>interface-id</i>	Sets the interface name and number.

#### Command Mode

Privileged EXEC mode

#### Usage Guide

N/A

#### Configuration Examples

The following example displays the statistics of the host monitored by ND-guard.

```
Ruijie#show nfpp nd-guard hosts statistics
success    fail    total
-----
10         2      12
```

The following example displays the host monitored by ND-guard. The “remain-time(s)” refers to the remaining time of isolation.

```
Ruijie#show nfpp nd-guard hosts
If col_filter 1 shows '*', it means "hardware do not isolate host".
```

VLAN	interface	ND-guard	remain-time (s)
----	-----	-----	-----
-	Gi4/2	ns-na-guard	174
-	Gi4/2	rs-guard	98
-	Gi4/2	ra-redirect-guard	127
Total: 3 hosts			

**Platform** N/A

**Description**

## 20.100 trusted-host

Use this command to set the trusted hosts free form monitoring.

Use the **no** or **default** form of this command to restore the default setting,

**trusted-host** { *mac mac\_mask* | *ip mask* | *IPv6/prefixlen* }

**no trusted-host** { **all** | *mac mac\_mask* | *ip mask* | *IPv6/prefixlen* }

**default trusted-host**

**Parameter  
Description**

Parameter	Description
<i>ip</i>	Sets the IP address
<i>mac</i>	MAC address
<i>mac_mask</i>	MAC address mask
<i>IPv6/prefixlen</i>	IPv6 address and mask length
<i>mask</i>	IP mask
<b>all</b>	Deletes the configuration of all trusted hosts with the no form of this command.

**Defaults** N/A

**Command Mode** NFPP define configuration mode

**Usage Guide** The administrator can use this command to set the trusted host free from monitoring. The ICMP packets are allowed to be sent to the trusted host CPU without any rate-limit and warning configuration. Configure the mask to set all hosts in one network segment free from monitoring. UP to 500 trusted hosts are supported.

Before configuring the trusted-host, the match type must be configured. If the message type configured by the match is Ipv4, the Ipv6 trusted addresses are not allowed. In the same way, if the message type is IPv6, the IPv4 trusted addresses are not allowed.

**Configuration Examples** The following example sets the trusted hosts free form monitoring.

```
Ruijie(config)# nfpp
Ruijie(config-nfpp)# define tcp
```

```
Ruijie(config-nfpp-define)#trusted-host 1.1.1.1 255.255.255.255
```

**Related  
Commands**

Command	Description
<b>show nfpp define trusted-host</b>	Displays the trusted host configuration.

**Platform**

N/A

**Description**

## 20.101 no all-guard enable

Use this command to disable all NFPP guards (except guards self-defined and enabled in interface configuration mode).

**no all-guard enable**

Use this command to enable all NFPP guards.

**all-guard enable****Parameter  
Description**

Parameter	Description
N/A	N/A

**Command  
Mode**

NFPP configuration mode

**Usage Guide**

- By default, all basic NFPP guards are enabled.
- This global command supports basic NFPP guards including ARP-GUARD, IP-GUARD, ICMP-GUARD, DHCP-GUARD, DHCPv6-GUARD and ND-GUARD.
- The **no** form command will disable all guards, which is displayed guard-by-guard by using the **show running-config** command. The exception is guards self-defined and configured in interface configuration mode.

**Configuration  
Examples**

```
Ruijie(config)#show running-config | begin nfpp
nfpp
  log-buffer enable
  arp-guard rate-limit per-port 201
  arp-guard attack-threshold per-port 210
!
Ruijie(config)# nfpp
Ruijie(config-nfpp)#no all-guard enable
Ruijie(config-nfpp)#show running-config | begin nfpp
nfpp
  log-buffer enable
  no arp-guard enable
  arp-guard rate-limit per-port 201
```

```
arp-guard attack-threshold per-port 210
no icmp-guard enable
no ip-guard enable
no dhcp-guard enable
no dhcpv6-guard enable
no nd-guard enable
!
Ruijie(config-nfpp)#all-guard enable
Ruijie(config-nfpp)#show running-config | begin nfpp
nfpp
log-buffer enable
arp-guard rate-limit per-port 201
arp-guard attack-threshold per-port 210
!
no service password-encryption
!
```

**Platform** N/A

**Description**

## 21 DoS Protection Commands

### 21.1 ip deny invalid-l4port

Use this command to enable the anti-attack of the self-consumption.

Use the **no** form of this command to restore the default setting.

**ip deny invalid-l4port**

**no ip deny invalid-l4port**

Parameter Description	Parameter	Description
	N/A	N/A

**Defaults** This function is disabled by default.

**Command Mode** Global configuration mode

**Usage Guide** N/A

**Configuration** The following example enables the anti-attack of the self-consumption.

**Examples** Ruijie(config)# ip deny invalid-l4port

The following example disables the anti-attack of the self-consumption.

Ruijie(config)# no ip deny invalid-l4port

Related Commands	Command	Description
	<b>show ip deny invalid-l4port</b>	Displays the state of anti-attack of the self-consumption.

**Platform** N/A

**Description**

### 21.2 ip deny invalid-tcp

Use this command to enable the anti-attack of the invalid TCP packets.

Use the **no** form of this command to restore the default setting.

**ip deny invalid-tcp**

**no ip deny invalid-tcp**

Parameter	Parameter	Description
-----------	-----------	-------------

<b>Description</b>		
	N/A	N/A

**Defaults** The function is disabled by default.

**Command Mode** Global configuration mode

**Usage Guide** N/A

**Configuration** The following example enables the anti-attack of the invalid TCP packets:

**Examples** Ruijie(config)# ip deny invalid-tcp

The following example disables the anti-attack of the invalid TCP packets:

Ruijie(config)# no ip deny invalid-tcp

<b>Related Commands</b>	Command	Description
	<b>show ip deny invalid-tcp</b>	Displays the state of anti-attack of the invalid TCP packets.

**Platform** N/A

**Description**

## 21.3 ip deny land

Use this command to enable the anti-land-attack.

Use the **no** form of this command to restore the default setting.

**ip deny land**

**no ip deny land**

<b>Parameter Description</b>	Parameter	Description
	N/A	N/A

**Defaults** This function is disabled by default.

**Command Mode** Global configuration mode

**Usage Guide** N/A

**Configuration** The following example enables the anti-land-attack:

**Examples** Ruijie(config)# ip deny land

The following example disables the anti-land-attack:

```
Ruijie(config)# no ip deny land
```

**Related  
Commands**

Command	Description
show ip deny land	Displays the anti-land-attack state.

**Platform** N/A**Description**

## 21.4 show ip deny

Use this command to display the state of the anti-DOS-attack.

**show ip deny****Parameter  
Description**

Parameter	Description
N/A	N/A

**Defaults** N/A**Command  
Mode** Privileged EXEC mode**Usage Guide** N/A**Configuration** The following example displays the state of the anti-DOS-attack.**Examples**

```
ruijie#show ip deny
  Protect against Land attack          On
  Protect against invalid L4port attack Off
  Protect against invalid TCP attack   Off
```

**Related  
Commands**

Command	Description
N/A	N/A

**Platform** N/A**Description**

## 21.5 show ip deny invalid-l4port

Use this command to display the state of the anti-consumption-attack.

**show ip deny invalid-l4port**

<b>Parameter Description</b>	<table><tr><th>Parameter</th><th>Description</th></tr><tr><td>N/A</td><td>N/A</td></tr></table>	Parameter	Description	N/A	N/A
Parameter	Description				
N/A	N/A				
<b>Defaults</b>	N/A				
<b>Command Mode</b>	Privileged EXEC mode				
<b>Usage Guide</b>	N/A				
<b>Configuration Examples</b>	<p>The following example displays the state of the anti-consumption-attack.</p> <pre>Ruijie# show ip deny invalid-l4port DoS Protection Mode           State ----- protect against invalid l4port attack Off</pre>				
<b>Related Commands</b>	<table><tr><th>Command</th><th>Description</th></tr><tr><td>N/A</td><td>N/A</td></tr></table>	Command	Description	N/A	N/A
Command	Description				
N/A	N/A				
<b>Platform Description</b>	N/A				

## 21.6 show ip deny invalid-tcp

Use this command to display the state of the anti-attack of the invalid TCP packets.

**show ip deny invalid-tcp**

<b>Parameter Description</b>	<table><tr><th>Parameter</th><th>Description</th></tr><tr><td>N/A</td><td>N/A</td></tr></table>	Parameter	Description	N/A	N/A
Parameter	Description				
N/A	N/A				
<b>Defaults</b>	N/A				
<b>Command Mode</b>	Privileged EXEC mode				
<b>Usage Guide</b>	N/A				
<b>Configuration Examples</b>	<p>The following example displays the state of the anti-attack of the invalid TCP packets.</p> <pre>Ruijie# show ip deny invalid-tcp DoS Protection Mode           State -----</pre>				



```
protect against invalid tcp attack      On
```

**Related  
Commands**

Command	Description
<b>ip deny invalid-tcp</b>	Enables the anti-attack of the invalid TCP packets.

**Platform** N/A  
**Description**

## 21.7 show ip deny land

Use this command to display the anti-land-attack state.

**show ip deny land**

**Parameter  
Description**

Parameter	Description
N/A	N/A

**Defaults** N/A

**Command  
Mode** Privileged EXEC mode

**Usage Guide** N/A

**Configuration** The following example displays the anti-land-attack state.

**Examples**

```
Ruijie# show ip deny land
DoS Protection Mode      State
-----
protect against land attack      On
```

**Related  
Commands**

Command	Description
<b>no ip deny land</b>	Enables the anti-land-attack function.

**Platform** N/A  
**Description**



## ACL & QoS Configuration Commands

---

1. ACL Commands
2. QoS Commands

# 1 ACL Commands

## 1.1 command ID table

For IDs used in the following commands, refer to the command ID table below:

ID	Meaning
ID	Number of access list. Range: Standard IP ACL: 1 to 99, 1300 to 1999 Extended IP ACL: 100 to 199, 2000 to 2699 Extended MAC ACL: 700 to 799 Extended expert ACL: 2700 to 2899
name	ACL name
sn	ACL SN (products can be set according to the priority)
start-sn	Start sequence number
inc-sn	Sequence number increment
deny	If matched, access is denied.
permit	If matched, access is permitted.
port	Protocol number. For IPv6, this field can be IPv6, ICMP, TCP, UDP and numbers 0 to 255. For IPv4, it can be one of EIGRP, GRE, IPINIP, IGMP, NOS, OSPF, ICMP, UDP, TCP, AHP, ESP, PCP, PIM and IP, or it can be numbers 0 to 255 that represent the IP protocol. It is described when some important protocols, such as ICMP, TCP and UDP, are listed individually.
interface <i>idx</i>	Interface index
src	Packet source IP address (host address or network address)
src-wildcard	Source IP address wildcard. It can be discontinuous, for example, 0.255.0.32.
src-ipv6-prefix	Source IPv6 network address or network type
dst-ipv6-prefix	Destination IPv6 network address or network type
prefix-len	Prefix mask length
src-ipv6-addr	Source IPv6 address
dst-ipv6-addr	Destination IPv6 address
dscp	Differential service code point, and code point value. Range: 0 to 63
flow-label	Flow label in the range 0 to 1048575
dst	Packet destination IP address (host address or network address)
dst-wildcard	Destination IP address wildcard. It can be discontinuous, such as 0.255.0.32
fragment	Packet fragment filtering.

precedence	Packet precedence value (0 to 7)
range	The layer 4 port number range of the packet.
time-range <i>tm-rng-name</i>	Time range of packet filtering, named <i>tm-rng-name</i>
tos	Type of service (0 to 15)
cos	Class of service (0-7)
cos inner <i>cos</i>	COS of the packet tag
icmp-type	ICMP message type (0 to 255)
icmp-code	ICMP message type code (0 to 255)
icmp-message	ICMP message type name (0 to 255)
operator port[port]	Operator (lt-smaller, eq-equal, gt-greater, neq-unequal, range-range) <i>port</i> indicates the port number. Dyadic operation needs two port numbers, while other operators only need one port number
src-mac-addr	Physical address of the source host
dst-mac-addr	Physical address of the destination host
VID vid	VLAN ID
VID inner vid	VID of the tag
ethernet-type	Ethernet protocol type. 0x value can be entered.
match-all <i>tcpf</i>	Match all bits of the TCP flag.
established	Match the RST or ACK bit of the TCP flag.
<i>text</i>	Remark text
<i>in</i>	Filter the incoming packets of the interface
<i>out</i>	Filter the outgoing packets of the interface
{rule mask offset} <sup>+</sup>	rule: Hexadecimal value field; mask: Hexadecimal mask field offset: Refer to the offset table “+” sign indicates at least one group
log	Output the matching syslog when the packet matches the ACL rule.

Letter	Meaning	Offset	Letter	Meaning	Offset
A	Destination MAC	0	O	TTL field	34
B	Source MAC	6	P	Protocol number	35
C	Data frame length field	12	Q	IP check sum	36
D	VLAN tag field	14	R	Source IP address	38
E	DSAP (Destination Service Access Point) field	18	S	Destination IP address	42
F	SSAP (Source Service Access Point) field	19	T	TCP source port	46
G	Ctrl field	20	U	TCP destination port	48

H	Org Code field	21	V	Sequence number	50
I	Encapsulated data type	24	W	Confirmation field	54
J	IP version number	26	XY	IP header length and reserved bits	58
K	TOS field	27	Z	Reserved bits and flags bit	59
L	Length of IP packet	28	a	Windows size field	60
M	ID	30	b	Others	62
N	Flags field	32			

The offsets of fields in the above table are their offsets in 802.3 data frames of SNAP+tag.

## 1.2 access-list

Use this command to create an access list to filter data packets. Use the **no** form of this command to remove the specified access list.

- Standard IP access list (1 to 99, 1300 to 1999)

```
access-list id { deny | permit } { source source-wildcard | host source | any | interface idx }
[time-range tm-range-name] [ log ]
```

- Extended IP access list (100 to 199, 2000 to 2699)

```
access-list id {deny | permit} protocol {source source-wildcard | host source | any| interface idx }
{destination destination-wildcard | host destination | any} [precedence precedence] [tos tos]
[fragment] [range lower upper] [time-range time-range-name] [ log ]
```

- Extended MAC access list (700 to 799)

```
access-list id {deny | permit} {any | host source-mac-address | source-mac-address mask } {any |
host destination-mac-address | destination-mac-address mask } [ethernet-type][cos [out][inner in]]
```

- Extended expert access list (2700 to 2899)

```
access-list id {deny | permit} [protocol | [ethernet-type][cos [out][inner in]]] [VID [out][inner in]]
{source source-wildcard | host source | any} {host source-mac-address | any} {destination
destination-wildcard | host destination | any} {host destination-mac-address | any} [[precedence
precedence] [tos tos] [fragment] [time-range time-range-name]
```

- When you select the Ethernet-type field or cos field:

```
access-list id {deny | permit} [ethernet-type| cos [out][inner in]]] [VID [out][inner in]] {source
source-wildcard | host source | any} {host source-mac-address | any} {destination
destination-wildcard | host destination | any} {host destination-mac-address | any} [time-range
time-range-name]
```

- When you select the protocol field:

```
access-list id {deny | permit} protocol [VID [out][inner in]]] {source source-wildcard | host source |
any} {host source-mac-address | any} {destination destination-wildcard | host destination | any}
{host destination-mac-address | any} [precedence precedence] [tos tos] [fragment] [range lower
upper] [time-range time-range-name]
```

- Extended expert ACLs of some important protocols:

**Internet Control Message Protocol (ICMP)**

```
access-list id {deny | permit} icmp [VID [out][inner in]]] {source source-wildcard | host source | any}
{host source-mac-address | any} {destination destination-wildcard | host destination | any} {host
```

*destination-mac-address* | **any** } [ *icmp-type* ] [ [ *icmp-type* *icmp-code* ] ] [ [ *icmp-message* ] ]

[**precedence** *precedence*] [**tos** *tos*] [**fragment**] [**time-range** *time-range-name*]

#### Transmission Control Protocol (TCP)

**access-list** *id* {**deny** | **permit**} **tcp** [ **VID** [ *out* ][ *inner in* ] ] { **source** *source-wildcard* | **host** *Source* | **any** } { **host** *source-mac-address* | **any** } [ **operator** *port* [ *port* ] ] { **destination** *destination-wildcard* | **host** *destination* | **any** } { **host** *destination-mac-address* | **any** } [ **operator** *port* [ *port* ] ] [ **precedence** *precedence*] [**tos** *tos*] [**fragment**] [**range** *lower upper*] [**time-range** *time-range-name*] [ **match-all** *tcp-flag* | **established** ]

#### User Datagram Protocol (UDP)

**access-list** *id* {**deny** | **permit**} **udp** [ **VID** [ *out* ][ *inner in* ] ] { **source** *source-wildcard* | **host** *source* | **any** } { **host** *source-mac-address* | **any** } [ **operator** *port* [ *port* ] ] { **destination** *destination-wildcard* | **host** *destination* | **any** } { **host** *destination-mac-address* | **any** } [ **operator** *port* [ *port* ] ] [ **precedence** *precedence*] [**tos** *tos*] [**fragment**] [**range** *lower upper*] [**time-range** *time-range-name*]

#### Parameter Description

Parameter	Description
id	Access list number. The ranges available are 1 to 99, 100 to 199, 1300 to 1999, 2000 to 2699, 2700 to 2899, and 700 to 799.
deny	If not matched, access is denied.
permit	If matched, access is permitted.
source	Specify the source IP address (host address or network address).
source-wildcard	It can be discontinuous, for example, 0.255.0.32.
protocol	IP protocol number. It can be one of EIGRP, GRE, IPINIP, IGMP, NOS, OSPF, ICMP, UDP, TCP, and IP. It can also be a number representing the IP protocol between 0 and 255. The important protocols such as ICMP, TCP, and UDP are described separately.
destination	Specify the destination IP address (host address or network address).
destination-wildcard	Wildcard of the destination IP address. It can be discontinuous, for example, 0.255.0.32.
fragment	Packet fragment filtering
precedence	Specify the packet priority.
precedence	Packet precedence value (0 to 7)
range	Layer4 port number range of the packet.
lower	Lower limit of the layer4 port number.
upper	Upper limit of the layer4 port number.
time-range	Time range of packet filtering
time-range-name	Time range name of packet filtering
tos	Specify type of service.
tos	ToS value (0 to 15)
icmp-type	ICMP message type (0 to 255)
icmp-code	ICMP message type code (0 to 255)
icmp-message	ICMP message type name
operator	Operator (lt-smaller, eq-equal, gt-greater, neq-unequal, range-range)

port [ port ]	Port number; range needs two port numbers, while other operators only need one port number.
host source-mac-address	Source physical address
host destination-mac-address	Destination physical address
VID vid	Match the specified VID.
ethernet-type	Ethernet type
match-all	Match all the bits of the TCP flag.
tcp-flag	Match the TCP flag.
established	Match the RST or ACK bits, not other bits of the TCP flag.

**Defaults** N/A

**Command Mode** Global configuration mode.

**Usage Guide** To filter the data by using the access control list, you must first define a series of rule statements by using the access list. You can use ACLs of the appropriate types according to the security needs:

The standard IP ACL (1 to 99, 1300 to 1999) only controls the source IP addresses.

The extended IP ACL (100 to 199, 2000 to 2699) can enforce strict control over the source and destination IP addresses.

The extended MAC ACL (700 to 799) can match against the source/destination MAC addresses and Ethernet type.

The extended expert access list (2700 to 2899) is a combination of the above and can match and filter the VLAN ID.

For the layer-3 routing protocols including the unicast routing protocol and multicast routing protocol, the following parameters are not supported by the ACL: **precedence** *precedence/tos* **tos/fragments/range** *lower upper/time-range time-range-name*

The TCP Flag includes part or all of the following:

- urg
- ack
- psh
- rst
- syn
- fin

The packet precedence is as below:

- critical
- flash
- flash-override
- immediate
- internet
- network
- priority

- routine

The service types are as below:

- max-reliability
- max-throughput
- min-delay
- min-monetary-cost
- normal

The ICMP message types are as below:

- administratively-prohibited
- dod-host-prohibited
- dod-net-prohibited
- echo
- echo-reply
- fragment-time-exceeded
- general-parameter-problem
- host-isolated
- host-precedence-unreachable
- host-redirect
- host-tos-redirect
- host-tos-unreachable
- host-unknown
- host-unreachable
- information-reply
- information-request
- mask-reply
- mask-request
- mobile-redirect
- net-redirect
- net-tos-redirect
- net-tos-unreachable
- net-unreachable
- network-unknown
- no-room-for-option
- option-missing
- packet-too-big
- parameter-problem
- port-unreachable
- precedence-unreachable
- protocol-unreachable
- redirect
- device-advertisement
- device-solicitation



- source-quench
- source-route-failed
- time-exceeded
- timestamp-reply
- timestamp-request
- ttl-exceeded
- unreachable

The TCP ports are as follows. A port can be specified by port name and port number:

- bgp
- chargen
- cmd
- daytime
- discard
- domain
- echo
- exec
- finger
- ftp
- ftp-data
- gopher
- hostname
- ident
- irc
- klogin
- kshell
- ldp
- login
- nntp
- pim-auto-rp
- pop2
- pop3
- smtp
- sunrpc
- syslog
- tacacs
- talk
- telnet
- time
- uucp
- whois
- www

The UDP ports are as follows. A UDP port can be specified by port name and port number.

- biff
- bootpc
- bootps
- discard
- dnsmx
- domain
- echo
- isakmp
- mobile-ip
- nameserver
- netbios-dgm
- netbios-ns
- netbios-ss
- ntp
- pim-auto-rp
- rip
- snmp
- snmptrap
- sunrpc
- syslog
- tacacs
- talk
- tftp
- time
- who
- xdmcp

The Ethernet types are as below:

- aarp
- appletalk
- decnet-iv
- diagnostic
- etype-6000
- etype-8042
- lat
- lavc-sca
- mop-console
- mop-dump
- mumps
- netbios
- vines-echo
- xns-idp

**Configuration**    1. Example of the standard IP ACL

**Examples**

The following basic IP ACL allows the packets whose source IP addresses are 192.168.1.64 - 192.168.1.127 to pass:

```
Ruijie (config)#access-list 1 permit 192.168.1.64 0.0.0.63
```

2. Example of the extended IP ACL

The following extended IP ACL allows the DNS messages and ICMP messages to pass:

```
Ruijie(config)#access-list 102 permit tcp any any eq domain log
Ruijie(config)#access-list 102 permit udp any any eq domain log
Ruijie(config)#access-list 102 permit icmp any any echo log
Ruijie(config)#access-list 102 permit icmp any any echo-reply
```

3. Example of the extended MAC ACL

This example shows how to deny the host with the MAC address 00d0f8000c0c to provide service with the protocol type 100 on gigabit Ethernet port 1/1. The configuration procedure is as below:

```
Ruijie(config)#access-list 702 deny host 00d0f8000c0c any aarp
Ruijie(config)# interface gigabitethernet 1/1
Ruijie(config-if)# mac access-group 702 in
```

4. Example of the extended expert ACL

The following example shows how to create and display an extended expert ACL. This expert ACL denies all the TCP packets with the source IP address 192.168.12.3 and the source MAC address 00d0.f800.0044.

```
Ruijie(config)#access-list 2702 deny tcp host 192.168.12.3 mac 00d0.f800.0044
any any
Ruijie(config)# access-list 2702 permit any any any any
Ruijie(config)# show access-lists
expert access-list extended 2702
10 deny tcp host 192.168.12.3 mac 00d0.f800.0044 any any
10 permit any any any any
```

**Related Commands**

Command	Description
show access-lists	Show all the ACLs.
mac access-group	Apply the extended MAC ACL on the interface.

**Platform** N/A

**Description**

## 1.3 access-list list-remark

Use this command to write a helpful comment (remark) for an access list. Use the **no** form of this command to remove the remark.

**access-list** *id* **list-remark** *text*

**no access-list** *id* **list-remark**

**Parameter Description**

Parameter	Description
-----------	-------------

<i>id</i>	Access list number. Standard IP ACL: 1 to 99, 1300 to 1999. Extended IP ACL: 100 to 199. 2000 to 2699. Extended MAC ACL: 700 to 799. Extended Expert ACL: 2700 to 2899.
<i>text</i>	Comment that describes the access list.

**Defaults** The access lists have no remarks by default.

**Command** Global configuration mode  
**Mode**

**Usage Guide** You can use this command to write a helpful comment for a specified access list. If the specified access list does not exist, the command will create the access list, then add remarks for the access list.

**Configuration** The following example writes a comment of “this acl is to filter the host 192.168.4.12” for ACL100.

**Examples**

```
Ruijie(config)# ip access-list extended 100
Ruijie(config)# access-list 100 list-remark this acl is to filter the host
192.168.4.12
```

<b>Related Commands</b>	Command	Description
	show access- lists	Displays all access lists, including the remarks for the access lists.
	show access-lists <i>id</i>	Displays the access list of a specified number, including the remarks for the access list.
	show access-lists <i>name</i>	Displays the access list of a specified name, including the remarks for the access list.

**Platform**  
**Description**

## 1.4 access-list remark

Use this command to write a helpful comment (remark) for an entry in a numbered access list. Use the **no** form of this command to remove the remark.

**access-list** *id* **remark** *text*

**no access-list** *id* **remark** *text*

<b>Parameter Description</b>	Parameter	Description
	<i>id</i>	Access list number. Standard IP ACL: 1 to 99, 1300 to 1999.

	Extended IP ACL: 100 to 199. 2000 to 2699. Extended MAC ACL: 700 to 799. Extended Expert ACL: 2700 to 2899.
<i>text</i>	Comment that describes the access list entry.

**Defaults** The access list entries have no remarks by default.

**Command** Global configuration mode  
**Mode**

**Usage Guide** You can use this command to write a helpful comment for an entry in a specified access list. If the specified access list does not exist, the command will create the access list, then add remarks for the access entry.

**Configuration** The following example writes a comment for an entry in ACL102.

**Examples** Ruijie(config)# access-list 102 remark deny-host-10.1.1.1

**Related  
Commands**

Command	Description
show access-lists	Displays all access lists, including the remarks for the access list entries.
show access-lists <i>id</i>	Displays the access list of a specified number, including the remarks for the access list entry.
show access-lists <i>name</i>	Displays the access list of a specified name, including the remarks for the access list entry.

**Platform  
Description**

## 1.5 clear access-list counters

Use this command to clear counters of packets matching the deny entries in ACLs.

**clear access-list counters** [*id* | *name*]

**Parameter  
Description**

Parameter	Description
<i>id</i>	Access list number
<i>name</i>	Access list name

**Defaults**

**Command** Privileged EXEC mode

**Mode**

**Usage Guide** This command is used to clear the counters of packets matching the deny entries in ACLs.

**Configuration** The following example clears the packet matching counter of ACL No. 1:

**Examples** Before configuration:

```
Ruijie #show access-lists
ip access-list standard 1
    10 deny host 50.1.1.2 (10 matches)
    20 permit host 60.1.1.2 (15 matches)
    (10 packets filtered)
```

After configuration:

```
Ruijie# end
Ruijie# clear access-list counters
Ruijie# show access-lists
ip access-list standard 1
    10 deny host 50.1.1.2 (10 matches)
    20 permit host 60.1.1.2 (15 matches)
```

**Related  
Commands**

Command	Description
expert access-list	Defines an expert ACL.
deny	Defines a deny ACL entry.
permit	Defines a permits ACL entry.

**Platform** N/A

**Description**

## 1.6 clear counters access-list

Use this command to clear counters of packets matching ACLs.

**clear counters access-list** [ *id* | *name* ]

**Parameter  
Description**

Parameter	Description
<i>id</i>	Access list number
<i>name</i>	Access list name

**Defaults**

**Command** Privileged EXEC mode

**Mode**

**Usage Guide** This command is used to clear the counters of packets matching the specified or all ACLs.

**Configuration** The following example clears the packet matching counter of ACL No. 2700:

**Examples**

```
Ruijie #show access-lists 2700
expert access-list extended 2700
    10 permit ip VID 4 host 192.168.3.55 any host 192.168.99.6 any (88 matches)
    20 deny tcp any any eq login any any (33455 matches)
    30 permit tcp any any host 192.168.6.9 any (10 matches)

Ruijie# clear counters access-list 2700
Ruijie #show access-lists 2700
expert access-list extended 2700
    10 permit ip VID 4 host 192.168.3.55 any host 192.168.99.6 any
    20 deny tcp any any eq login any any
    30 permit tcp any any host 192.168.6.9 any
```

**Related  
Commands**

Command	Description
expert access-list	Defines an expert ACL.
deny	Defines a deny ACL entry.
permit	Defines a permits ACL entry.

**Platform** N/A

**Description**

## 1.7 deny

One or multiple **deny** conditions are used to determine whether to forward or discard the packet. In ACL configuration mode, you can modify the existent ACL or configure according to the protocol details.

## 5. Standard IP ACL

```
[sn] deny {source source-wildcard | host source | any} interface idx }[time-range tm-range-name]
[ log ]
```

## 6. Extended IP ACL

```
[sn] deny protocol source source-wildcard destination destination-wildcard [precedence
precedence] [tos tos] [fragment] [range lower upper] [time-range time-range-name] [ log ]
```

Extended IP ACLs of some important protocols:

- Internet Control Message Prot (ICMP)

```
[sn] deny icmp {source source-wildcard | host source | any} {destination destination-wildcard |
host destination | any} [icmp-type] [[icmp-type icmp-code]] | [icmp-message]] [precedence
precedence] [tos tos] [fragment] [time-range time-range-name]
```

- Transmission Control Protocol (TCP)

[sn] deny udp {source source –wildcard | host source | any} [operator port [port]] {destination destination-wildcard | host destination | any} [operator port [port]] [precedence precedence] [tos tos] [fragment] [range lower upper] [time-range time-range-name]

- User Datagram Protocol (UDP)

[sn] deny udp {source source –wildcard | host source | any} [operator port [port]] {destination destination-wildcard | host destination | any} [operator port [port]] [precedence precedence] [tos tos] [fragment] [range lower upper] [time-range time-range-name]

#### 7. Extended MAC ACL

[sn] deny {any | host source-mac-address} {any | host destination-mac-address} [ethernet-type] [cos [out] [inner in]]

#### 8. Extended expert ACL

[sn] deny[protocol] [ethernet-type] [cos [out] [inner in]] [[VID [out][inner in]]] {source source-wildcard | host source | any}{host source-mac-address | any} {destination destination-wildcard | host destination | any} {host destination-mac-address | any} [precedence precedence] [tos tos][fragment] [range lower upper] [time-range time-range-name]

- When you select the ethernet-type field or cos field:

[sn] deny {[ethernet-type][cos [out] [inner in]]} [[VID [out][inner in]]] {source source-wildcard | host source | any} {host source-mac-address | any} {destination destination-wildcard | host destination | any} {host destination-mac-address | any} [time-range time-range-name]

- When you select the protocol field:

[sn] deny protocol [[VID [out][inner in]]] {source source-wildcard | host source | any} {host source-mac-address | any} {destination destination-wildcard | host destination | any} {host destination-mac-address | any} [precedence precedence] [tos tos] [fragment] [range lower upper] [time-range time-range-name]

- Extended expert ACLs of some important protocols

#### Internet Control Message Protocol (ICMP)

[sn] deny icmp [[VID [out][inner in]]] {source source-wildcard | host source | any} {host source-mac-address | any} {destination destination-wildcard | host destination | any} {host destination-mac-address | any} [icmp-type] [[icmp-type [icmp-code]]] [icmp-message] [precedence precedence] [tos tos] [fragment] [time-range time-range-name]

#### Transmission Control Protocol (TCP)

[sn] deny tcp [[VID [out][inner in]]] {source source-wildcard | host source | any} {host source-mac-address | any} [operator port [port]] {destination destination-wildcard | host destination | any} {host destination-mac-address | any} [operator port [port]] [precedence precedence] [tos tos] [fragment] [range lower upper] [time-range time-range-name] [match-all tcp-flag | established]

#### User Datagram Protocol (UDP)

[sn] deny udp [[VID [out][inner in]]] {source source –wildcard | host source | any} {host source-mac-address | any} [operator port [port]] {destination destination-wildcard | host destination | any} {host destination-mac-address | any} [operator port [port]] [precedence precedence] [tos tos] [fragment] [range lower upper] [time-range time-range-name]

#### Address Resolution Protocol (ARP)

[sn] deny arp {vid vlan-id} [host source-mac-address | any] [host destination –mac-address | any] {sender-ip sender-ip-wildcard | host sender-ip | any} {sender-mac sender-mac-wildcard | host



*sender-mac* | **any** {*target-ip target-ip-wildcard* | **host** *target-ip* | **any**}

#### 5. Extended IPv6 ACL

[*sn*] **deny protocol** {*source-ipv6-prefix/prefix-length* | **any** | **host** *source-ipv6-address* }  
 {*destination-ipv6-prefix / prefix-length* | **any** | *hostdestination-ipv6-address*} [**dscp** *dscp*] [**flow-label**  
*flow-label*] [**fragment**] [**range** *lower upper*] [**time-range** *time-range-name*]

Extended ipv6 ACLs of some important protocols:

#### Internet Control Message Protocol (ICMP)

[*sn*]**deny icmp** {*source-ipv6-prefix / prefix-length* | *any* *source-ipv6-address* | **host**}  
 {*destination-ipv6-prefix / prefix-length* | **host** *destination-ipv6-address* | **any**} [*icmp-type*] [*icmp-type*  
*icmp-code*] | [*icmp-message*] [**dscp** *dscp*] [**flow-label** *flow-label*] [**fragment**] [**time-range**  
*time-range-name*]

#### Transmission Control Protocol (TCP)

[*sn*] **deny tcp** {*source-ipv6-prefix / prefix-length* | **host***source-ipv6-address* | **any**} [*operator* **port** [*port*]]  
 {*destination-ipv6-prefix / prefix-length* | **host** *destination-ipv6-address* | **any**} [*operator* **port** [*port*]]  
 [**dscp** *dscp*] [**flow-label** *flow-label*] [**fragment**] [**range** *lower upper*] [**time-range** *time-range-name*]  
 [**match-all** *tcp-flag* | **established**]

#### User Datagram Protocol (UDP)

[*sn*] **deny udp** {*source-ipv6-prefix/prefix-length* | **host** *source-ipv6-address* | **any**} [*operator* **port**  
 [*port*]] {*destination-ipv6-prefix / prefix-length* | **host** *destination-ipv6-address* | **any**} [*operator* **port**  
 [*port*]] [**dscp** *dscp*] [**flow-label** *flow-label*] [**fragment**] [**range** *lower upper*] [**time-range**  
*time-range-name*]

#### Parameter Description

Parameter	Description
<i>sn</i>	ACL entry sequence number
<i>source-ipv6-prefix</i>	Source IPv6 network address or network type
<i>destination-ipv6-prefix</i>	Destination IPv6 network address or network type
<i>prefix-length</i>	Prefix mask length
<i>source-ipv6-address</i>	Source IPv6 address
<i>destination-ipv6-address</i>	Destination IPv6 address
<i>dscp</i>	Differential Service Code Point
<i>dscp</i>	Code value, within the range of 0 to 63
<i>flow-label</i>	Flow label
<i>flow-label</i>	Flow label value, within the range of 0 to 1048575.
<i>protocol</i>	For the IPv6, the field can be <i>ipv6</i>   <i>icmp</i>   <i>tcp</i>   <i>udp</i> and number in the range 0 to 255
<i>time-range</i>	Time range of the packet filtering
<i>time-range-name</i>	Time range name of the packet filtering

**Defaults** No entry

**Command mode** ACL configuration mode.

**Usage Guide** Use this command to configure the filtering entry of ACLs in ACL configuration mode.

**Configuration Examples** The following example shows how to create and display an extended expert ACL. This expert ACL denies all the TCP packets with the source IP address 192.168.4.12 and the source MAC address 001300498272.

```
Ruijie(config)#expert access-list extended 2702
Ruijie(config-exp-nacl)#deny tcp host
192.168.4.12 host 0013.0049.8272 any any
Ruijie(config-exp-nacl)#permit any any any any
Ruijie(config-exp-nacl)#show access-lists
expert access-list extended 2702
10 deny tcp host 192.168.4.12 host 0013.0049.8272 any any
20 permit any any any any
Ruijie(config-exp-nacl)#
```

This example shows how to use the extended IP ACL. The purpose is to deny the host with the IP address 192.168.4.12 to provide services through the TCP port 100 and apply the ACL to Interface gigabitethernet 1/1. The configuration procedure is as below:

```
Ruijie(config)# ip access-list extended ip-ext-acl
Ruijie(config-ext-nacl)# deny tcp host 192.168.4.12 eq 100 any
Ruijie(config-ext-nacl)# show access-lists
ip access-list extended ip-ext-acl
10 deny tcp host 192.168.4.12 eq 100 any
Ruijie(config-ext-nacl)#exit
Ruijie(config)#interface gigabitethernet 1/1
Ruijie(config-if)#ip access-group ip-ext-acl in
Ruijie(config-if)#
```

This example shows how to use the extended MAC ACL. The purpose is to deny the host with the MAC address 0013.0049.8272 to send Ethernet frames of the type 100 and apply the rule to Interface gigabitethernet 1/1. The configuration procedure is as below:

```
Ruijie(config)#mac access-list extended mac1
Ruijie(config-mac-nacl)#deny host 0013.0049.8272 any arp
Ruijie(config-mac-nacl)# show access-lists
mac access-list extended mac1
10 deny host 0013.0049.8272 any arp
Ruijie(config-mac-nacl)#exit
Ruijie(config)# interface gigabitethernet 1/1
Ruijie(config-if)# mac access-group mac1 in
```

This example shows how to use the standard IP ACL. The purpose is to deny the host with the IP address 192.168.4.12 and apply the rule to Interface gigabitethernet 1/1. The configuration procedure is as below:

```
Ruijie(config)#ip access-list standard 34
Ruijie(config-ext-nacl)# deny host 192.168.4.12
Ruijie(config-ext-nacl)#show access-lists
ip access-list standard 34
```

```

10 deny host 192.168.4.12
Ruijie(config-ext-nacl)#exit
Ruijie(config)# interface gigabitethernet 1/1
Ruijie(config-if)# ip access-group 34 in

```

This example shows how to use the extended IPV6 ACL. The purpose is to deny the host with the IP address 192.168.4.12 and apply the rule to Interface gigabitethernet 1/1. The configuration procedure is as below:

```

Ruijie(config)#ipv6 access-list extended v6-acl
Ruijie(config-ipv6-nacl)#11 deny ipv6 host 192.168.4.12 any
Ruijie(config-ipv6-nacl)#show access-lists
ipv6 access-list extended v6-acl
11 deny ipv6 host 192.168.4.12 any
Ruijie(config-ipv6-nacl)# exit
Ruijie(config)# interface gigabitethernet 1/1
Ruijie(config-if)# ipv6 traffic-filter v6-acl in

```

#### Related Commands

Command	Description
show access-lists	Displays all ACLs.
ipv6 traffic-filter	Applies the extended IPv6 ACL on the interface.
ip access-group	Applies the IP ACL on the interface.
mac access-group	Applies the extended MAC ACL on the interface.
ip access-list	Defines an IP ACL.
mac access-list	Defines an extended MAC ACL.
expert access-list	Defines an extended expert ACL.
ipv6 access-list	Defines an extended IPv6 ACL.
permit	Permits the access.

Platform N/A

Description

## 1.8 expert access-group

Use this command to apply the specified expert access list globally or on the specified interface. Use the **no** form of the command to remove the application.

**expert access-group** { *id* | *name* } { **in** | **out** }

**no expert access-group** { *id* | *name* } { **in** | **out** }

#### Parameter Description

Parameter	Description
<i>id</i>	Expert access list number: 2700 to 2899

<i>name</i>	Name of the expert access list
in	Specifies filtering on inbound packets.
out	Specifies filtering on outbound packets.

**Defaults** No expert access list is applied globally or on the interface.

**Command mode** Global or interface configuration mode.

**Usage Guide** This command is used to apply the specified access list globally or on the interface to control the input and output data streams. Use the **show access-group** command to view the setting.

**Configuration Examples** The following example shows how to apply the **access-list accept\_00d0f8xxxxxx** only to Gigabit interface 0/1:

```
Ruijie(config)# interface GigaEthernet 0/1
Ruijie(config-if)# expert access-group
accept_00d0f8xxxxxx_only in
```

**Related Commands**

Command	Description
show access-group	Displays the ACL configuration.

**Platform Description** N/A

## 1.9 expert access-list counter

Use this command to enable the counter of packets matching the specified expert access list. Use the **no** form of this command to disable this function.

**expert access-list counter** { *id* | *name* }

**no expert access-list counter** { *id* | *name* }

**Parameter Description**

Parameter	Description
<i>id</i>	Expert access list number: 2700 to 2899.
<i>name</i>	Name of the access list.

**Defaults** The counter of the packets matching the expert access list is disabled.

**Command mode** Global configuration mode

**Usage Guide** Use this command to enable the counter of packets matching the specified expert access list, so that

you can analyze the counters to learn whether the network is attacked by the illegal packets.

**Configuration Examples** The following example enables the counter of packets matching the extended expert access list named exp-acl:

```
Ruijie(config)# expert access-list counter exp-acl
Ruijie(config)# show access-lists
expert access-list extended exp-acl
 10 permit ip VID 4 host 192.168.3.55 any host 192.168.99.6 any (16 matches)
 20 deny tcp any any eq login any any (78 matches)
```

The following example disables the counter of packets matching the extended expert access list named exp-acl.

```
Ruijie(config)#no expert access-list counter exp-acl
Ruijie(config)# show access-lists
expert access-list extended 2700
 10 permit ip VID 4 host 192.168.3.55 any host 192.168.99.6 any
 20 deny tcp any any eq login any any
```

**Related  
Commands**

Command	Description
show access-lists	Displays the extended expert ACL.

**Platform  
Description**

N/A

## 1.10 expert access-list extended

Use this command to create an extended expert access list. Use the **no** form of the command to remove the ACL.

**expert access-list extended** {*id* | *name*}

**no expert access-list extended** {*id* | *name*}

**Parameter  
Description**

Parameter	Description
<i>id</i>	Extended expert access list number: 2700 to 2899
<i>name</i>	Name of the extended expert access list

**Defaults**

N/A

**Command  
mode**

Global configuration mode.

**Usage Guide**

Use the **show access-lists** command to display the ACL configurations.

**Configuration** Create an extended expert ACL named exp-acl:

**Examples**

```
Ruijie(config)# expert access-list extended exp-acl
Ruijie(config-exp-nacl)# show access-lists expert access-list extended
exp-acl
Ruijie(config-exp-nacl)#
```

Create an extended expert ACL numbered 2704:

```
Ruijie(config)# expert access-list extended 2704
Ruijie(config-exp-nacl)# show access-lists access-list extended 2704
Ruijie(config-exp-nacl)#
```

**Related  
Commands**

Command	Description
<b>show access-lists</b>	Displays the extended expert ACLs

**Platform** N/A

**Description**

## 1.11 expert access-list new-fragment-mode

Use this command to switch the matching mode of fragmentation packets. Use the **no** form of this command to restore the default matching mode of fragmentation packets.

**expert access-list new-fragment-mode** { *id* | *name* }

**no expert access-list new-fragment-mode** { *id* | *name* }

**Parameter  
Description**

Parameter	Description
<i>id</i>	Expert access list number: 2700 to 2899.
<i>name</i>	Name of the expert access list.

**Defaults** Use the default matching mode of fragmentation packets. By default, if the access rule is tagged with fragment, it will match all packets except for the first fragmentation packet. If the access rule is not tagged with fragment, all packets including the first and all subsequent fragmentation packets will be matched.

**Command  
mode** Global configuration mode

**Usage Guide** Use this command to switch and control the matching mode of access rules to fragmentation packets.

**Configuration  
Examples** The following example switches the matching mode of fragmentation packets for the ACL 2700 from the default mode to a new matching mode:

```
Ruijie(config)#expert access-list new-fragment-mode 2700
```

**Related**

Command	Description
---------	-------------

## Commands

-	-

Platform N/A

## Description

## 1.12 expert access-list resequence

Use this command to resequence an expert access list. Use the no form of this command to restore the default order of access entries.

**expert access-list resequence** { *id* | *name* } *start-sn inc-sn*

**no expert access-list resequence** { *id* | *name* }

Parameter  
Description

Parameter	Description
<i>id</i>	Expert access list number: 2700 to 2899.
<i>name</i>	Name of the expert access list
<i>start-sn</i>	Start sequence number. Range: 1 to 2147483647
<i>inc-sn</i>	Increment of the sequence number. Range: 1 to 2147483647

## Defaults

*start-sn*: 10

*inc-sn*: 10

Command  
mode

Global configuration mode

## Usage Guide

Use this command to change the order of the access entries.

## Configuration

The following example resequences entries of expert access list “exp-acl”:

## Examples

Before the configuration:

```
Ruijie# show access-lists
expert access-list extended exp-acl
 10 permit ip any any any any
 20 deny ip any any any any
```

After the configuration:

```
Ruijie# config
Ruijie(config)# expert access-list resequence exp-acl 21 43
Ruijie(config)# exit
Ruijie# show access-lists
expert access-list extended exp-acl
 21 permit ip any any any any
 64 deny ip any any any any
```

Related Commands	Command	Description
	show access-lists	Displays all access lists..

Platform N/A

Description

## 1.13 global ip access-group

Use this command to apply the global IP-based access list on the interface. Use the **no** form of this command to remove the global IP-based access list from the interface.

**global ip access-group**

**no global ip access-group**

Parameter Description	Parameter	Description
	N/A	N/A

**Defaults** By default, the global IP-based access list is applied on the interface.

**Command mode** Interface configuration mode

**Usage Guide** N/A

**Configuration Examples** The following example applies the global IP-based access list on interface fastEthernet0/0.

```
Ruijie(config)# interface fastEthernet 0/0
Ruijie(config-if-GigabitEthernet 0/0)#global ip access-group
```

Related Commands	Command	Description
	N/A	N/A

Platform N/A

Description

## 1.14 ip access-group

Use this command to apply a specific access list globally or to an interface. Use the **no** form of this command to remove the access list from the interface.

**ip access-group** {*id* | *name*} {*in* | *out*}

**no ip access-group** { *id* | *name*} {*in* | *out*}



Parameter Description	Parameter	Description
	<i>id</i>	IP access list or extended IP access list number: 1 to 199, 1300 to 2699
	<i>name</i>	Name of the IP ACL
	in	Filters the incoming packets of the interface.
	out	Filters the outgoing packets of the interface.

**Defaults** No access list is applied globally or on the interface by default.

**Command mode** Global or interface configuration mode.

**Usage Guide** Use this command to control access to a specified interface, globally.

**Configuration Examples** The following example applies the ACL 120 on interface fastEthernet0/0 to filter the incoming packets:

```
Ruijie(config)# interface fastEthernet 0/0
Ruijie(config-if)# ip access-group 120 in
```

Related Commands	Command	Description
	access-list	Defines an ACL.
	show access-lists	Displays all ACLs.

**Platform** N/A

**Description**

## 1.15 ip access-list

Use this command to create a standard IP access list or extended IP access list. Use the **no** form of the command to remove the access list.

**ip access-list** {**extended** | **standard**} {*id* | *name*}

**no ip access-list** {**extended** | **standard**} {*id* | *name*}

Parameter Description	Parameter	Description
	<i>id</i>	Access list number: Standard: 1 to 99, 1300 to 1999; Extended: 100 to 199, 2000 to 2699.
	<i>name</i>	Name of the access list

**Defaults** N/A

**Command mode** Global configuration mode

**Usage Guide** Configure a standard access list if you need to filter on source address only. If you want to filter on anything other than source address, you need to create an extended access list.

Refer to **deny** or **permit** in the two modes. Use the **show access-lists** command to display the ACL configurations.

**Configuration** The following example creates a standard access list named std-acl.

**Examples**

```
Ruijie(config)# ip access-list standard std-acl
Ruijie(config-std-nacl)# show access-lists
ip access-list standard std-acl
Ruijie(config-std-nacl)#
```

The following example creates an extended ACL numbered 123:

```
Ruijie(config)# ip access-list extended 123
Ruijie(config-ext-nacl)# show access-lists
ip access-list extended 123
```

**Related Commands**

Command	Description
show access-lists	Displays all ACLs.

**Platform** N/A

**Description**

## 1.16 ip access-list counter

Use this command to enable the counter of packets matching the standard or extended IP access list.

Use the **no** form of this command to disable the counter.

**ip access-list counter** { *id* | *name* }

**no ip access-list counter** { *id* | *name* }

**Parameter Description**

Parameter	Description
<i>id</i>	IP access list number: Standard IP access list: 1 to 99, 1300 to 1999; Extended IP access list: 100 to 199, 2000 to 2699.
<i>name</i>	Name of the IP access list.

**Defaults** The counter of packets matching the standard or extended IP access list is disabled by default.

**Command** Global configuration mode  
**mode**

**Usage Guide** N/A

**Configuration** The following example enables the counter of packets matching the standard access list:

**Examples**

```
Ruijie(config)# ip access-list counter std-acl
Ruijie(config-std-nacl)# show access-lists
ip access-list standard std-acl
 10 permit 195.168.6.0 0.0.0.255 (999 matches)
 20 deny host 5.5.5.5 time-range tm (2000 matches)
```

The following example disables the counter of packets matching the standard access list:

```
Ruijie(config)#no ip access-list counter std-acl
Ruijie(config-std-nacl)# show access-lists
ip access-list standard std-acl
 10 permit 195.168.6.0 0.0.0.255
 20 deny host 5.5.5.5 time-range tm
```

**Related  
Commands**

Command	Description
show access-lists	Displays all access lists.

**Platform**  
**Description** N/A

## 1.17 ip access-list log-update interval

Use this command to configure the interval at which the IPv4 access list log is updated. Use the **no** form of this command to restore the default interval.

**ip access-list log-update interval** *time*

**no ip access-list log-update interval**

**Parameter  
Description**

Parameter	Description
<i>time</i>	For the access rule with the <b>log</b> option, a packet hit is output at the interval of ACL logging output. The interval ranges from 0 to 1440 minutes, and the default value is 5 minutes, indicating that the ACL matching log of a specified flow is output every 5 minutes. 0 indicates that no ACL logging is output.

**Defaults** The default interval at which the IPv4 access list log is updated is 5 minutes.

**Command** Global configuration mode

**mode**

**Usage Guide** Use this command to configure the interval at which the IPv4 access list log is updated.

**Configuration** The following example configures the interval for the IPv4 access list log update to 10 minutes:

**Examples**

```
Ruijie# configure terminal
Enter configuration commands, one per line. End with CNTL/Z.
Ruijie(config)# ip access-list log-update interval 10
```

**Related  
Commands**

Command	Description
ip access-list	Defines an IPv4 access list.
deny	Defines the <b>deny</b> access entries.
permit	Defines the <b>permit</b> access entries.
show running	Displays running configurations of the device.

**Platform**

N/A

**Description**

## 1.18 ip access-list new-fragment-mode

Use this command to switch the matching mode of fragmentation packets of standard or extended IP access list. Use the **no** form of this command to restore the default matching mode of fragmentation packets.

**ip access-list new-fragment-mode** { *id* | *name* }

**no ip access-list new-fragment-mode** { *id* | *name* }

**Parameter  
Description**

Parameter	Description
<i>id</i>	IP access list number: Standard IP access list: 1 to 99, 1300 to 1999; Extended IP access list: 100 to 199, 2000 to 2699.
<i>name</i>	Name of the standard or extended IP access list

**Defaults**

Use the default matching mode of fragmentation packets. By default, if the access rule is tagged with fragment, it will match all packets except for the first fragmentation packet. If the access rule is not tagged with fragment, all packets including the first and all subsequent fragmentation packets will be matched.

**Command  
mode**

Global configuration mode

**Usage Guide**

This command is used to switch and control the fragmentation packet matching mode of access rules.

**Configuration** The following example switches the fragmentation packet matching mode of the ACL 100 from the default mode to a new mode:

**Examples**

```
Ruijie(config)#ip access-list new-fragment-mode 100
```

**Related  
Commands**

Command	Description
N/A	N/A

**Platform** N/A

**Description**

## 1.19 ip access-list resequence

Use this command to resequence a standard or extended IP access list. Use the **no** form of this command to restore the default order of access entries.

**ip access-list resequence** { *id* | *name* } *start-sn* *inc-sn*

**no ip access-list resequence** { *id* | *name* }

**Parameter  
Description**

Parameter	Description
<i>id</i>	IP access list number: Standard IP access list: 1 to 99, 1300 to 1999; Extended IP access list: 100 to 199, 2000 to 2699.
<i>name</i>	Name of the standard or extended IP access list
<i>start-sn</i>	Start sequence number. Range: 1 to 2147483647
<i>inc-sn</i>	Increment of the sequence number. Range: 1 to 2147483647

**Defaults** *start-sn*: 10  
*inc-sn*: 10

**Command  
mode** Global configuration mode

**Usage Guide** Use this command to change the order of the access entries.

**Configuration** The following example resequences entries of ACL1:

**Examples**

Before the configuration:

```
Ruijie# show access-lists
ip access-list standard 1
10 permit host 192.168.4.12
20 deny any any
```

After the configuration:

```
Ruijie# config
Ruijie(config)# ip access-list resequence 1 21 43
Ruijie(config)# exit
Ruijie# show access-lists
ip access-list standard 1
21 permit host 192.168.4.12
64 deny any any
```

**Related  
Commands**

Command	Description
show access-lists	Displays all access lists..

**Platform** N/A  
**Description**

## 1.20 ipv6 access-list

Use this command to create an IPv6 access list and to place the device in IPv6 access list configuration mode. Use the **no** form of this command to remove the access list.

**ipv6 access-list** *name*

**no ipv6 access-list** *name*

**Parameter  
Description**

Parameter	Description
<i>name</i>	Name of the IPv6 access list.

**Defaults** N/A

**Command mode** Global configuration mode

**Usage Guide** To filter the IPv6 packets through the access list, you need to define an IPv6 access list by using the **ipv6 access-list** command.

**Configuration Examples** The following example creates an IPv6 access list named v6-acl:

```
Ruijie(config)# ipv6 access-list v6-acl
Ruijie(config-ipv6-nacl)# show access-lists
ipv6 access-list extended v6-acl
Ruijie(config-ipv6-nacl)#
```

**Related  
Commands**

Command	Description
show access-lists	Displays all access lists.

**Platform** N/A  
**Description**

## 1.21 ipv6 access-list counter

Use this command to enable the counter of packets matching the IPv6 access list. Use the **no** form of this command to disable the counter.

**ipv6 access-list counter** *name*

**no ipv6 access-list counter** *name*

Parameter Description	Parameter	Description
	<i>name</i>	Name of the IPv6 access list.

**Defaults** -

**Command mode** Global configuration mode

**Usage Guide** Use this command to enable the counter of packets matching the IPv6 access list to monitor the IPv6 packets matching and filtering.

**Configuration Examples** The following example enables the counter of packets matching the IPv6 access list named v6-acl:

```
Ruijie(config)# ipv6 access-list v6-acl
Ruijie(config-ipv6-nacl)# show access-lists
ipv6 access-list acl-v6
 10 permit icmp any any (7 matches)
 20 deny tcp any any (7 matches)
```

The following example disables the counter of packets matching the IPv6 access list named v6-acl:

```
Ruijie(config)#no ipv6 access-list v6-acl counter
Ruijie(config-ipv6-nacl)# show access-lists
ipv6 access-list acl-v6
 10 permit icmp any any
 20 deny tcp any any
```

Related Commands	Command	Description
	show access-lists	Displays all access lists.

**Platform** N/A  
**Description**

## 1.22 ipv6 access-list log-update interval

Use this command to configure the interval at which the IPv6 access list log is updated. Use the **no** form of this command to restore the default interval.

**ipv6 access-list log-update interval** *time*

**no ipv6 access-list log-update interval**

### Parameter Description

Parameter	Description
<i>time</i>	For the access rule with the <b>logging</b> option, a packet hit is output at the interval of ACL logging output. The interval ranges from 0 to 1440 minutes, and the default value is 5 minutes, indicating that the ACL matching log of a specific flow is output every 5 minutes. 0 indicates that no ACL logging is output.

**Defaults** By default, it is 5 minutes.

**Command mode** Global configuration mode

**Usage Guide** Use this command to configure the interval at which the IPv6 access list log is updated.

**Configuration Examples** The following example configures the interval for the IPv6 access list log update to 10 minutes:

```
Ruijie# configure terminal
Enter configuration commands, one per line. End with CNTL/Z.
Ruijie(config)# ipv6 access-list log-update interval 9
```

### Related Commands

Command	Description
ipv6 access-list	Defines an IPv6 access list.
deny	Defines the <b>deny</b> access entries.
permit	Defines the <b>permit</b> access entries.
show running	Displays the running configurations of the device.

**Platform** N/A  
**Description**

## 1.23 ipv6 access-list resequence

Use this command to resequence an IPv6 access list. Use the **no** form of this command to restore the default order of access entries.

**ipv6 access-list resequence** *name start-sn inc-sn*



**no ipv6 access-list resequence** *name***Parameter  
Description**

Parameter	Description
<i>name</i>	Name of the IPv6 access list
<i>start-sn</i>	Start sequence number. Range: 1 to 2147483647
<i>inc-sn</i>	Increment of the sequence number. Range: 1 to 2147483647

**Defaults***start-sn*: 10*inc-sn*: 10**Command  
mode**

Global configuration mode

**Usage Guide**

Use this command to change the order of the access entries.

**Configuration**

The following example resequences entries of IPv6 access list "v6-acl":

**Examples**

Before the configuration:

```
Ruijie# show access-lists
ipv6 access-list v6-acl
 10 permit ipv6 any any
 20 deny ipv6 any any
```

After the configuration:

```
Ruijie# config
Ruijie(config)# ipv6 access-list resequence v6-acl 21 43
Ruijie(config)# exit
Ruijie# show access-lists
ipv6 access-list v6-acl
 21 permit ipv6 any any
 64 deny ipv6 any any
```

**Related  
Commands**

Command	Description
show access-lists	Displays all access lists..

**Platform**

N/A

**Description**

## 1.24 ipv6 traffic-filter

Use this command to apply an IPV6 access list on the specified interface. Use the **no** form of the command to remove the IPV6 access list from the interface/VXLAN.

**ipv6 traffic-filter** *name* { **in** | **out** }

**no ipv6 traffic-filter** *name* { **in** | **out** }

**Parameter  
Description**

Parameter	Description
<i>name</i>	Name of IPv6 access list
<b>in</b>	Specifies filtering on inbound packets
<b>out</b>	Specifies filtering on outbound packets

**Defaults** By default, it is not disabled.

**Command mode** Interface configuration mode.

**Usage Guide** Use this command to apply the IPv6 access list to a specified interface to filter the inbound or outbound packets.

**Configuration Examples** The following example applies the IPv6 access list named **v6-acl** to interface GigabitEthernet 0/1:

```
Ruijie(config)# interface GigaEthernet 0/1
Ruijie(config-if)# ipv6 traffic-filter v6-acl in
```

**Related  
Commands**

Command	Description
show access-group	Displays ACL configurations on the interface.

**Platform** N/A  
**Description**

## 1.25 list-remark

Use this command to write a helpful comment (remark) for an access list. Use the **no** form of this command to remove the remark.

**list-remark** *text*

**no list-remark**

**Parameter  
Description**

Parameter	Description
<i>text</i>	Comment that describes the access list.

**Defaults** The access lists have no remarks by default.

**Command mode** ACL configuration mode

**Usage Guide** You can use this command to write a helpful comment for a specified access list.

**Configuration** The following example writes a comment of “this acl is to filter the host 192.168.4.12” for ACL102.

**Examples**

```
Ruijie(config)# ip access-list extended 102
Ruijie(config-ext-nacl)# list-remark this acl is to filter the host
192.168.4.12
Ruijie(config-ext-nacl)# show access-lists
ip access-list extended 102
deny ip host 192.168.4.12 any
1000 hits
this acl is to filter the host 192.168.4.12
Ruijie(config-ext-nacl)#
```

**Related  
Commands**

Command	Description
show access-lists	Displays all access lists.
ip access-list	Defines an IPv4 access list.
access-list list remark	Adds a helpful comment for an access list in global configuration mode.

**Platform** N/A

**Description**

## 1.26 mac access-group

Use this command to apply the specified MAC access list globally or on the specified interface. Use the **no** form of the command to remove the access list from the interface.

**mac access-group** { *id* | *name* } { **in** | **out** }

**no mac access-group** { *id* | *name* } { **in** | **out** }

**Parameter  
Description**

Parameter	Description
<i>id</i>	MAC access list number. The range is from 700 to 799.
<i>name</i>	Name of the MAC access list
<b>in</b>	Specifies filtering on the inbound packets.
<b>out</b>	Specifies filtering on the outbound packets.

**Defaults** No MAC access list is applied by default.

**Command mode** Global or interface configuration mode.

**Usage Guide** Use this command to apply the access list globally or to the interface to filter the inbound or outbound packets based on the MAC address.

**Configuration** The following example applies the MAC access-list **accept\_00d0f8xxxxxx\_only** to interface GigabitEthernet 1/1:

**Examples**

```
Ruijie(config)# interface GigaEthernet 1/1
Ruijie(config-if-GigabitEthernet 1/1)# mac access-group
accept_00d0f8xxxxxx_only in
```

**Related  
Commands**

Command	Description
show access-group	Displays the ACL configuration on the interface.

**Platform** N/A

**Description**

## 1.27 counter

Use this command to enable the counter of packet matching the extended MAC access list. Use the **no** form of this command to disable the counter.

**mac access-list counter** { *id* | *name* }

**no mac access-list counter** { *id* | *name* }

**Parameter  
Description**

Parameter	Description
<i>id</i>	Extended MAC access list number. The range is from 700 to 799.
<i>name</i>	Name of the extended MAC access list

**Defaults** The counter is disabled by default.

**Command mode** Global configuration mode

**Usage Guide** Use this command to enable the counter of packets matching the MAC access list to monitor the packets matching and filtering.

**Configuration Examples** The following example enables the counter of packet matching the extended MAC access list named mac-acl:

```
Ruijie(config)# mac access-list counter mac-acl
Ruijie(config)# show access-lists
mac access-list extended mac-acl
 10 permit host 0023.56ac.8965 any (170 matches)
 20 deny any any etype-any cos 6 (239 matches)
```

The following example disables the counter of packet matching the extended MAC access list named mac-acl:

```
Ruijie(config)#no mac access-list counter mac-acl
```

```
Ruijie(config)# show access-lists
mac access-list extended mac-acl
 10 permit host 0023.56ac.8965 any
 20 deny any any etype-any cos 6
```

**Related  
Commands**

Command	Description
show access-lists	Displays all access lists.

**Platform**

N/A

**Description**

## 1.28 mac access-list extended

Use this command to create an extended MAC access list. Use the **no** form of the command to remove the MAC access list.

**mac access-list extended** { *id* | *name* }

**no mac access-list extended** { *id* | *name* }

**Parameter  
Description**

Parameter	Description
<i>id</i>	Extended MAC access list number. The range is from 700 to 799.
<i>name</i>	Name of the extended MAC access list

**Defaults**

N/A

**Command  
mode**

Global configuration mode.

**Usage Guide**

To filter the packets based on the MAC address, you need to define a MAC access list by using the **mac access-list extended** command.

**Configuration** The following command creates an extended MAC access list named mac-acl:

**Examples**

```
Ruijie(config)# mac access-list extended mac-acl
Ruijie(config-mac-nacl)# show access-lists
mac access-list extended mac-acl
```

The following command creates an extended MAC access list numbered 704:

```
Ruijie(config)# mac access-list extended 704
Ruijie(config-mac-nacl)# show access-lists
mac access-list extended 704
```

**Related  
Commands**

Command	Description
---------	-------------

show access-lists	Displays all access lists.
-------------------	----------------------------

**Platform** N/A

**Description**

## 1.29 mac access-list resequence

Use this command to resequence an extended MAC access list. Use the **no** form of this command to restore the default order of access entries.

**mac access-list resequence** { *id* | *name* } *start-sn* *inc-sn*

**no mac access-list resequence** { *id* | *name* }

Parameter Description	Parameter	Description
	<i>id</i>	Extended MAC access list number: 700 to 799.
	<i>name</i>	Name of the extended MAC access list
	<i>start-sn</i>	Start sequence number. Range: 1 to 2147483647
	<i>inc-sn</i>	Increment of the sequence number. Range: 1 to 2147483647

**Defaults** *start-sn*: 10  
*inc-sn*: 10

**Command mode** Global configuration mode

**Usage Guide** Use this command to change the order of the access entries.

**Configuration Examples** The following example resequences entries of extended MAC access list “mac-acl”:

Before the configuration:

```
Ruijie# show access-lists
mac access-list extended mac-acl
 10 permit any any etype-any
 20 deny any any etype-any
```

After the configuration:

```
Ruijie# config
Ruijie(config)# mac access-list resequence exp-acl 21 43
Ruijie(config)# exit
Ruijie# show access-lists
mac access-list extended mac-acl
 21 permit any any etype-any
 64 deny any any etype-any
```

Related	Command	Description
---------	---------	-------------

Commands		
	show access-lists	Displays all access lists..

Platform N/A

Description

## 1.30 permit

One or multiple **permit** conditions are used to determine whether to forward or discard the packet. In ACL configuration mode, you can modify the existent ACL or configure according to the protocol details.

9. Standard IP ACL

```
[ sn ] permit {source source-wildcard | host source | any | interface idx } [ time-range tm-range-name ] [ log ]
```

10. Extended IP ACL

```
[ sn ] permit protocol source source-wildcard destination destination-wildcard [ precedence precedence ] [ tos tos ] [ fragment ] [ range lower upper ] [ time-range time-range-name ] [ log ]
```

Extended IP ACLs of some important protocols:

Internet Control Message Protocol (ICMP)

```
[ sn ] permit icmp {source source-wildcard | host source | any } { destination destination-wildcard | host destination | any } [ icmp-type ] [ [ icmp-type icmp-code ] ] [ icmp-message ] [ precedence precedence ] [ tos tos ] [ fragment ] [ time-range time-range-name ]
```

Transmission Control Protocol (TCP)

```
[ sn ] permit tcp { source source-wildcard | host source | any } [ operator port [ port ] ] { destination destination-wildcard | host destination | any } [ operator port [ port ] ] [ precedence precedence ] [ tos tos ] [ fragment ] [ range lower upper ] [ time-range time-range-name ] [ match-all tcp-flag | established ]
```

User Datagram Protocol (UDP)

```
[sn] permit udp {source source -wildcard|host source |any} [ operator port [port]] {destination destination-wildcard|host destination | any} [operator port [port]] [precedence precedence] [tos tos] [fragment] [range lower upper] [time-range time-range-name]
```

11. Extended MAC ACL

```
[sn] permit { any | host source-mac-address / source-mac-address mask } { any | host destination-mac-address / destination -mac-address mask } [ ethernet-type ] [ cos [ out ] [ inner in ] ]
```

12. Extended expert ACL

```
[sn] permit [protocol | [ethernet-type][ cos [out] [inner in]]] [VID [out][inner in]] {source source-wildcard | host source | any} {host source-mac-address | any } {destination destination-wildcard | host destination | any} {host destination-mac-address | any} [precedence precedence] [tos tos][fragment] [range lower upper] [time-range time-range-name]
```

When you select the Ethernet-type field or cos field:

```
[sn] permit {ethernet-type| cos [out] [inner in]} [VID [out][inner in]] {source source-wildcard | host source | any} {host source-mac-address | any } {destination destination-wildcard | host destination
```

| **any** } **host** *destination-mac-address* | **any** } **[time-range** *time-range-name*]

When you select the protocol field:

**[sn] permit protocol** **[VID** *[out][inner in]*] {*source source-wildcard* | **host** *Source* | **any** } {**host** *source-mac-address* | **any** } {*destination destination-wildcard* | **host** *destination* | **any** } {**host** *destination-mac-address* | **any** } **[precedence** *precedence*] **[tos** *tos*] **[fragment]** **[range** *lower upper*] **[time-range** *time-range-name*]

Extended expert ACLs of some important protocols:

Internet Control Message Protocol (ICMP)

**[sn] permit icmp** **[VID** *[out][inner in]*] {*source source-wildcard* | **host** *source* | **any** } {**host** *source-mac-address* | **any** } {*destination destination-wildcard* | **host** *destination* | **any** } {**host** *destination-mac-address* | **any** } **[icmp-type** *[[icmp-type icmp-code]]*] | **[icmp-message** *]]*] **[precedence** *precedence*] **[tos** *tos*] **[fragment]** **[time-range** *time-range-name*]

Transmission Control Protocol (TCP)

**[sn] permit tcp** **[VID** *[out][inner in]*] {*source source-wildcard* | **host** *Source* | **any** } {**host** *source-mac-address* | **any** } **[operator** **port** *[port]*] {*destination destination-wildcard* | **host** *destination* | **any** } {**host** *destination-mac-address* | **any** } **[operator** **port** *[port]*] **[precedence** *precedence*] **[tos** *tos*] **[fragment]** **[range** *lower upper*] **[time-range** *time-range-name*] **[match-all** *tcp-flag* | **established**]

User Datagram Protocol (UDP)

**[sn] permit udp** **[VID** *[out][inner in]*] {*source source-wildcard* | **host** *source* | **any** } {**host** *source-mac-address* | **any** } **[operator** **port** *[port]*] {*destination destination-wildcard* | **host** *destination* | **any** } {**host** *destination-mac-address* | **any** } **[operator** **port** *[port]*] **[precedence** *precedence*] **[tos** *tos*] **[fragment]** **[range** *lower upper*] **[time-range** *time-range-name*]

Address Resolution Protocol (ARP)

**[sn] permit arp** **[vid** *vlan-id*] **[host** *source-mac-address* | **any**] **[host** *destination-mac-address* | **any**] {*sender-ip sender-ip-wildcard* | **host** *sender-ip* | **any**} {*sender-mac sender-mac-wildcard* | **host** *sender-mac* | **any**} {*target-ip target-ip-wildcard* | **host** *target-ip* | **any**}

### 13. Extended IPv6 ACL

**[sn] permit protocol** {*source-ipv6-prefix / prefix-length* | **any** | **host** *source-ipv6-address*} {*destination-ipv6-prefix / prefix-length* | **any** | **host** *destination-ipv6-address*} **[dscp** *dscp*] **[flow-label** *flow-label*] **[fragment]** **[range** *lower upper*] **[time-range** *time-range-name*]

Extended IPv6 ACLs of some important protocols:

Internet Control Message Protocol (ICMP)

**[sn] permit icmp** {*source-ipv6-prefix / prefix-length* | **any** | **host** *source-ipv6-address* | **host**} {*destination-ipv6-prefix / prefix-length* | **host** *destination-ipv6-address* | **any**} **[icmp-type** *[[icmp-type icmp-code]]*] | **[icmp-message** *]]*] **[dscp** *dscp*] **[flow-label** *flow-label*] **[fragment]** **[time-range** *time-range-name*]

Transmission Control Protocol (TCP)

**[sn] permit tcp** {*source-ipv6-prefix / prefix-length* | **host** *source-ipv6-address* | **any**} **[operator** **port** *[port]*] {*destination-ipv6-prefix / prefix-length* | **host** *destination-ipv6-address* | **any**} **[operator** **port** *[port]*] **[dscp** *dscp*] **[flow-label** *flow-label*] **[fragment]** **[range** *lower upper*] **[time-range** *time-range-name*] **[match-all** *tcp-flag* | **established**]

User Datagram Protocol (UDP)

**[sn] permit udp** {*source-ipv6-prefix / prefix-length* | **host** *source-ipv6-address* | **any**} **[operator** **port** *[port]*] {*destination-ipv6-prefix / prefix-length* | **host** *destination-ipv6-address* | **any**} **[operator** **port** *[port]*]



[*port*] [**dscp** *dscp*] [**flow-label** *flow-label*] [**fragment**] [**range** *lower upper*] [**time-range** *time-range-name*]

**Parameter  
Description**

Parameter	Description
N/A	N/A

**Defaults** N/A

**Command mode** ACL configuration mode.

**Usage Guide** Use this command to configure the **permit** conditions for the ACL in ACL configuration mode.

**Configuration Examples** The following example shows how to create and display an Expert Extended ACL. This expert ACL permits all the TCP packets with the source IP address 192.168.4.12 and the source MAC address 001300498272.

```
Ruijie(config)#expert access-list extended exp-acl
Ruijie(config-exp-nacl)#permit tcp host 192.168.4.12 host 0013.0049.8272
any any
Ruijie(config-exp-nacl)#deny any any any any
Ruijie(config-exp-nacl)#show access-lists
expert access-list extended exp-acl
10 permit tcp host 192.168.4.12 host 0013.0049.8272 any any
20 deny any any any any
Ruijie(config-exp-nacl)#
```

This example shows how to use the extended IP ACL. The purpose is to permit the host with the IP address 192.168.4.12 to provide services through the TCP port 100 and apply the ACL to interface gigabitethernet 1/1. The configuration procedure is as below:

```
Ruijie(config)# ip access-list extended 102
Ruijie(config-ext-nacl)# permit tcp host 192.168.4.12 eq 100 any
Ruijie(config-ext-nacl)# show access-lists
ip access-list extended 102
10 permit tcp host 192.168.4.12 eq 100 any
Ruijie(config-ext-nacl)#exit
Ruijie(config)#interface gigabitethernet 1/1
Ruijie(config-if)#ip access-group 102 in
Ruijie(config-if)#
```

This example shows how to use the extended MAC ACL. The purpose is to permit the host with the MAC address 0013.0049.8272 to send Ethernet frames through the type 100 and apply the ACL to interface gigabitethernet 1/1. The configuration procedure is as below:

```
Ruijie(config)#mac access-list extended 702
Ruijie(config-mac-nacl)#permit host 0013.0049.8272 any aarp
Ruijie(config-mac-nacl)#show access-lists
```

```

mac access-list extended 702
10 permit host 0013.0049.8272 any aarp 702
Ruijie(config-mac-nacl)#exit
Ruijie(config)#interface gigabitethernet 1/1
Ruijie(config-if)#mac access-group 702 in

```

This example shows how to use the standard IP ACL. The purpose is to permit the host with the IP address 192.168.4.12 and apply the ACL to interface gigabitethernet 1/1. The configuration procedure is as below:

```

Ruijie(config)#ip access-list standard std-acl
Ruijie(config-std-nacl)#permit host 192.168.4.12
Ruijie(config-std-nacl)#show access-lists
ip access-list standard std-acl
  10 permit host 192.168.4.12
Ruijie(config-std-nacl)#exit
Ruijie(config)# interface gigabitethernet 1/1
Ruijie(config-if)# ip access-group std-acl in

```

This example shows how to use the extended IPV6 ACL. The purpose is to permit the host with the IP address 192.168.4.12 and apply the ACL to interface gigabitethernet 1/1. The configuration procedure is as below:

```

Ruijie(config)#ipv6 access-list extended v6-acl
Ruijie(config-ipv6-nacl)#11 permit ipv6 host ::192.168.4.12 any
Ruijie(config-ipv6-nacl)# show access-lists
ipv6 access-list extended v6-acl
11 permit ipv6 host ::192.168.4.12 any
Ruijie(config-ipv6-nacl)# exit
Ruijie(config)#interface gigabitethernet 1/1
Ruijie(config-if)#ipv6 traffic-filter v6-acl in

```

#### Related Commands

Command	Description
show access-lists	Displays all access lists.
ipv6 traffic-filter	Applies the extended IPv6 access list to the interface.
ip access-group	Applies the IP access list to the interface.
mac access-group	Applies the extended MAC access list to the interface.
ip access-list	Defines an IP access list.
mac access-list	Defines an extended MAC access list.
expert access-list	Define an extended expert access list.
ipv6 access-list	Defines an extended IPv6 access list.
deny	Defines the <b>deny</b> access entry.

#### Platform

N/A

#### Description

## 1.31 redirect destination interface

Use this command to redirect the traffic matching the access list to the specified interface. Use the **no** form of this command to remove the redirection.

**redirect destination interface** *interface-name* **acl** { *id* | *name* } **in**

**no redirect destination interface** *interface-name* **acl** { *id* | *name* } **in**

### Parameter Description

Parameter	Description
<i>interface-name</i>	Redirect interface
<i>id</i>	Access list number
<i>name</i>	Access list name

**Defaults** No redirection is configured.

**Command mode** Interface configuration mode

**Usage Guide** Use this command to configure access redirection, namely, to redirect the traffic matching the access list to the specified interface. You can monitor the operation of a specified access list by using this command.

**Configuration** The following example configures access redirection.

### Examples

```
Ruijie(config)# interface gigabitEthernet 0/3
Ruijie(config-if-GigabitEthernet 0/3)# redirect destination interface
gigabitEthernet 0/2 acl1 in
```

### Related Commands

Command	Description
N/A	N/A

**Platform** N/A  
**Description**

## 1.32 remark

Use this command to write a helpful comment (remark) for an entry in the access list. Use the **no** form of this command to remove the remark.

**remark** *text*

**no remark**

### Parameter

Parameter	Description
-----------	-------------

<b>Description</b>		
	<i>text</i>	Comment that describes the access entry.

**Defaults** The access entries have no remarks.

**Command mode** ACL configuration mode.

**Usage Guide** Use this command to write a helpful comment for an access entry.  
Up to 100 characters are allowed in the remark.  
Two identical access entry remarks in one access list is not allowed.  
Removing an access entry may delete the remark for it as well.

**Configuration** The following example writes remarks for the entry in extended IP access list 102.

**Examples**

```
Ruijie(config)# ip access-list extended 102
Ruijie(config-ext-nacl)# remark first_remark
Ruijie(config-ext-nacl)# permit tcp 1.1.1.1 0.0.0.0 2.2.2.2 0.0.0.0
Ruijie(config-ext-nacl)# remark second_remark
Ruijie(config-ext-nacl)# permit tcp 3.3.3.3 0.0.0.0 4.4.4.4 0.0.0.0
Ruijie(config-ext-nacl)# end
Ruijie#
```

<b>Related Commands</b>	Command	Description
	show access-lists	Displays all access lists.
	ip access-list	Defines an IP access list.

**Platform** N/A

**Description**

## 1.33 security access-group

Use this command to configure an interface secure channel.

**security access-group** { *id* | *name* }

**no security access-group**

<b>Parameter Description</b>	Parameter	Description
	<i>id</i>	Access list number.
	<i>name</i>	Name of the access list.

**Defaults** N/A

**Command** Interface configuration mode

**mode**

**Usage Guide** If a device is configured authentications such as 802.1x or Web authentication, the user cannot access the external network before passing the authentication. You can use this command to configure a secure channel for the users on the specified interface to access the external network without authentication.

**Configuration** The following example configures a secure channel on interface GigaEthernet 1/1:

**Examples**

```
Ruijie(config)# interface GigaEthernet 1/1
Ruijie(config-if-GigabitEthernet 1/1)# security access-group 1
```

**Related  
Commands**

Command	Description
show secu-acl	Displays the secure channel configuration.

**Platform** N/A

**Description**

## 1.34 security global access-group

Use this command to configure the global secure channel.

**security global access-group** { *id* | *name* }

**no security global access-group**

**Parameter  
Description**

Parameter	Description
<i>id</i>	Access list number.
<i>name</i>	Name of the access list.

**Defaults** -

**Command mode** Global configuration mode

**Usage Guide** If a device is configured authentications such as 802.1x or Web authentication, the user cannot access the external network before passing the authentication. You can use this command to configure a global secure channel for some users to access the external network without authentication.

**Configuration** The following example configures a global secure channel.

**Examples**

```
Ruijie(config)#security global access-group 1
```

**Related  
Commands**

Command	Description
show secu-acl	Displays the secure channel configuration..

**Platform** N/A

**Description**

## 1.35 security uplink enable

Use this command to configure an exceptional interface of the global secure channel.

**security uplink enable**

**no security uplink enable**

Parameter Description	Parameter	Description
	N/A	N/A

**Defaults** The global secure channel takes effect on all interfaces by default.

**Command mode** Interface configuration mode.

**Usage Guide** The global secure channel takes effect on all interfaces by default. To disable the secure channel function on some interfaces, you can use this command to configure the interface as exceptional.

**Configuration Examples** The following example configures interface GigaEthernet 1/1 as an exceptional interface of the secure channel.

```
Ruijie(config)# interface GigaEthernet 1/1
Ruijie(config-if-GigabitEthernet 1/1)# security uplink enable
```

Related Commands	Command	Description
	show secu-acl	Displays the secure channel configuration.

**Platform** N/A

**Description**

## 1.36 show access-group

Use this command to display the access list applied to the interface.

**show access-group [ interface *interface-name* ]**

Parameter Description	Parameter	Description
	<i>interface</i>	Interface name

**Command** Privileged EXEC mode

**Usage Guide** Use this command to display the access list configuration on the specified interface. If no interface is specified, access list configuration on all interfaces is displayed.

**Configuration Examples**

```
Ruijie# show access-group interface GigabitEthernet 0/3
ip access-list extended 101
Applied On interface GigabitEthernet 0/3 in.
```

**Related Commands**

Command	Description
ip access-group	Applies the IP access list to the interface.
mac access-group	Applies the MAC access list to the interface.
expert access-group	Applies the expert access list to the interface.
ipv6 traffic-filter	Applies the IPv6 access list to the interface.

**Platform** N/A

**Description**

## 1.37 show access-lists

Use this command to display all access lists or the specified access list.

**show access-lists** [ *id* | *name* ] [ **summary** ]

**Parameter Description**

Parameter	Description
<i>id</i>	Access list number
<i>name</i>	Name of the IP access list
summary	Access list summary

**Command** Global configuration mode

**Usage Guide** Use this command to display the specified access list. If no access list number or name is specified, all the access lists are displayed.

**Configuration Examples**

```
Ruijie# show access-lists n_acl
ip access-list standard n_acl
Ruijie# show access-lists 102
ip access-list extended 102

Ruijie# show access-lists
ip access-list standard n_acl
```

```
ip access-list extended 101
permit icmp host 192.168.1.1 any log (1080 matches)
  permit tcp host 1.1.1.1 any established
  deny ip any any (80021 matches)
mac access-list extended mac-acl
expert access-list extended exp-acl
ipv6 access-list extended v6-acl
petmit ipv6 ::192.168.4.12 any (100 matches)
deny any any (9 matches)
```

**Related  
Commands**

Command	Description
ip access-list	Defines an IP access list.
mac access-list	Defines an extended MAC access list.
expert access-list	Defines an extended expert access list.
ipv6 access-list	Defines an extended IPv6 access list.

**Platform** N/A**Description**

## 1.38 show expert access-group

Use this command to display the expert access list applied to the interface.

**show expert access-group [ interface *interface* ]**

**Parameter  
Description**

Parameter	Description
<i>interface</i>	Interface name
<i>wlan-id</i>	WLAN ID

**Command  
mode** Privileged EXEC mode**Usage Guide** Use this command to display the expert access list configured on the interface. If no interface is specified, the expert access lists on all interfaces are displayed.

**Configuration Examples**

```
Ruijie# show expert access-group interface gigabitethernet 0/2
expert access-group ee in
Applied On interface GigabitEthernet 0/2.
```

**Related  
Commands**

Command	Description
expert access-list	Defines an extended expert access list.



Platform N/A

Description

## 1.39 show ip access-group

Use this command to display the standard and extended IP access lists on the interface.

**show ip access-group** [ **interface** *interface* ]

Parameter  
Description

Parameter	Description
<i>interface</i>	Interface name

Command  
mode Privileged EXEC mode

**Usage Guide** Use this command to display the standard and extended IP access lists configured on the interface. If no interface is specified, the standard and extended IP access lists on all interfaces are displayed.

**Configuration** Ruijie# show ip access-group interface gigabitethernet 0/1

**Examples** ip access-group aaa in

Applied On interface GigabitEthernet 0/1.

Related  
Commands

Command	Description
ip access-list	Defines an IP access list.

Platform N/A

Description

## 1.40 show ipv6 traffic-filter

Use this command to display the IPv6 access list on the interface.

**show ipv6 traffic-filter** [ **interface** *interface* ]

Parameter  
Description

Parameter	Description
<i>interface</i>	Interface name

Defaults -

Command  
mode Privileged EXEC mode

**Usage Guide** Use this command to display the IPv6 access list configured on the interface. If no interface is specified, the IPv6 access lists on all interfaces are displayed.

**Configuration** Ruijie# show ipv6 traffic-filter interface gigabitethernet 0/4  
**Examples** ipv6 access-group v6 in  
Applied On interface GigabitEthernet 0/4.

**Related  
Commands**

Command	Description
ipv6 access-list	Defines an IPv6 access list.

**Platform** N/A  
**Description**

## 1.41 show mac access-group

Use this command to display the MAC access list on the interface.  
**show mac access-group [ interface *interface* ]**

**Parameter  
Description**

Parameter	Description
<i>interface</i>	Interface name

**Defaults** N/A

**Command  
mode** Privileged EXEC mode

**Usage Guide** Use this command to display the MAC access list configured on the interface. If no interface is specified, the MAC access lists on all interfaces are displayed.

**Configuration** Ruijie# show mac access-group interface gigabitethernet 0/3  
**Examples** mac access-group mm in  
Applied On interface GigabitEthernet 0/3.

**Related  
Commands**

Command	Description
mac access-list	Defines a MAC access list.

**Platform** N/A  
**Description**

## 1.42 show redirect interface

Use this command to display the access redirection configuration.

**show redirect** [ **interface** *interface-name* ]

Parameter Description	Parameter	Description
	<i>interface-name</i>	Interface name

**Defaults** N/A

**Command mode** Privileged EXEC mode

**Usage Guide** Use this command to display the access redirection configuration on the interface. If no interface is specified, the access redirection configuration on all interfaces is displayed.

**Configuration** The following example displays the access redirection configuration on interface GigabitEthernet 0/3.

**Examples**

```
Ruijie #show redirect interface gigabitEthernet 0/3
acl redirect configuration on interface gigabitEthernet 0/3
redirect destination interface gigabitEthernet 0/3 acl 1 in
```

Related Commands	Command	Description
	N/A	N/A

**Platform Description** N/A

## 1.43 svi router-acls enable

Use this command to enable the SVI filter only for the Layer3 packets. Use the **no** form of this command to disable this function.

**svi router-acls enable**  
**no svi router-acls enable**

Parameter Description	Parameter	Description
	N/A	N/A.

**Defaults** The SVI filter takes effect for both Layer2 and Layer3 packets by default.

**Command** Global configuration mode

**Usage Guide** Use this command to make the SVI filter take effect only for the Layer3 packets,

**Configuration** The following example enables the SVI filter only for the Layer3 packets.

**Examples** Ruijie(config)#svi router-acls enable

**Related  
Commands**

Command	Description
N/A	N/A

**Platform  
Description** N/A

## 2 QoS Commands

### 2.1 class

Use this command to add reference to an existing class map. Use the **no** form of this command to remove the class from the policy map.

**class** *class-map-name*

**no class** *class-map-name*

Parameter	Parameter	Description
Description	<i>class-map-name</i>	Reference to a class map.

**Defaults** The function is disabled by default.

**Command Mode** Policy configuration mode

**Usage Guide** N/A

**Configuration Examples** The following example adds reference to the class map named cmap1.

```
Ruijie(config)# class-map cmap1
Ruijie(config-cmap)# match ip dscp 5
Ruijie(config-cmap)# exit
Ruijie(config)# policy-map pmap1
Ruijie(config-pmap)# class cmap1
Ruijie(config-pmap-c)# end
```

Related Commands	Command	Description
	<b>show policy-map</b> [ <i>policy-map-name</i> [ <b>class</b> <i>class-map-name</i> ] ]	Displays the policy map.

**Platform** N/A

**Description**

### 2.2 class map

Use this command to create a class map and enter class-map configuration mode. Use the **no** or **default** form of this command to remove a class map.

**class-map** *class-map-name*  
**no class-map** *class-map-name*  
**default class-map** *class-map-name*

Parameter	Parameter	Description
Description	<i>class-map-name</i>	Class map name. The class map name can be a maximum of 31 characters.

**Defaults** None

**Command Mode** Global configuration mode

**Usage Guide** N/A

**Configuration Examples** The following example creates a class map named cm\_acl to match an access list named me.

```
Ruijie(config)# mac access-list extended me
Ruijie(config-ext-macl)# permit host 1111.2222.3333 any
Ruijie(config-ext-macl)# exit
Ruijie(config)# class-map cm_acl
Ruijie(config-cmap)# match access-group me
Ruijie(config-cmap)# exit
```

The following example creates a class map named cm\_dscp to match DHCP 8, 16 and 24.

```
Ruijie(config)# class-map cm_dscp
Ruijie(config-cmap)# match ip dscp 8 16 24
Ruijie(config-cmap)# exit
```

Related Commands	Command	Description
	<b>show class-map</b> [ <i>class-map-name</i> ]	Displays the class map.

**Platform Description** N/A

## 2.3 drr-queue bandwidth

Use this command to set the DRR queue weight ratio. Use the **no** or **default** form of this command to restore the default setting.

**drr-queue bandwidth** *weight1...weight8*

**no drr-queue bandwidth**  
**default drr-queue bandwidth**

Parameter	Parameter	Description
<b>Description</b>	<i>weight1...weight8</i>	8 queue weights. The default queue weight ratio is 1:1:1:1:1:1:1:1. For the products supporting the SP scheduling policy, the weight range is from 0 to 15. For the products not supporting the SP scheduling policy, the weight range is from 1 to 15.

**Defaults** The default queue weight ratio is 1:1:1:1:1:1:1:1.

**Command Mode** Global configuration mode or interface configuration mode

**Usage Guide** N/A

**Configuration Examples** The following example configures the DRR queue weight ratio to 1:1:1:2:2:4:6:8.

```
Ruijie(config)# drr-queue bandwidth 1:1:1:2:2:4:6:8
```

Related Commands	Command	Description
	<b>show mls qos queuing</b>	Displays information about the queue.

**Platform Description** N/A

## 2.4 match

Use this command to define a match criteria in class map configuration mode. Use the **no** form of this command to remove the match criteria.

**match** { **access-group** *access\_list* | **ip** { **dscp** *dscp-vlaue-list* | **precedence** *pre-vlaue-list* } }  
**no match** { **access-group** *access\_list* | **ip** { **dscp** *dscp-vlaue-list* | **precedence** *pre-vlaue-list* } }

Parameter	Parameter	Description
<b>Description</b>	<b>access-group</b> <i>access_list</i>	Identifies a numbered or named access list as the match criteria.
	<b>ip dscp</b> <i>dscp-vlaue-list</i>	Identifies DSCP values as the match criteria. Multiple DSCP can be configured. The range is from 0 to 63.
	<b>ip precedence</b> <i>pre-vlaue-list</i>	Identifies IP precedence values as the match criteria. Multiple IP precedence can be configured. The range is from 0 to 7.

**Defaults** None

**Command** Class map configuration mode

**Mode****Usage Guide** N/A**Configuration** The following example creates a class map named cmap1 to match DSCP 20, 22, 24 and 30.**Examples**

```
Ruijie(config)# class-map cmap1
Ruijie(config-cmap)# match ip dscp 20 22 24 30
```

**Related  
Commands**

Command	Description
<b>show class-map</b> [ <i>class-map-name</i> ]	Displays the class map.

**Platform** N/A**Description**

## 2.5 mls qos cos

Use this command to configure the CoS value of an interface. Use the **no** form of this command to restore the default setting.

**mls qos cos** *default-cos***no mls qos cos**

Parameter	Parameter	Description
<b>Description</b>	<i>default-cos</i>	CoS value of the interface. The range is from 0 to 7.

**Defaults** The default CoS value is 0.**Command  
Mode** Interface configuration mode.**Usage Guide** N/A**Configuration** The following example configures the default CoS value to 7.**Examples**

```
Ruijie(config)# interface gigabitethernet 1/1
Ruijie(config-if)# mls qos cos 7
```

Related Commands	Command	Description
	<b>show mls qos interface</b> <i>interface-id</i>	Displays information of the specified interface.

**Platform** N/A**Description**





0-7	8-15	16-23	24-31	32-39	40-47	48-55	56-63
CoS 0	CoS 1	CoS 2	CoS 3	CoS 4	CoS 5	CoS 6	CoS 7

**Command** Global configuration mode.  
**Mode**

**Usage Guide** N/A

**Configuration Examples**  

```
Ruijie(config)# mls qos map dscp-cos 8 10 16 18 to 0
```

Related Commands	Command	Description
	<b>show mls qos maps dscp-cos</b>	Displays the DSCP-CoS mapping.

**Platform** N/A  
**Description**

## 2.8 mls qos map ip-precedence-dscp

Use this command to map the IP precedence to the DSCP value. Use the **no** or **default** form of this command to restore the default IP-precedence to DSCP mapping.

**mls qos map ip-precedence-dscp** *dscp1 ... dscp8*

**no mls qos map ip-precedence-dscp**

**default mls qos map ip-precedence-dscp**

Parameter	Parameter	Description
<b>Description</b>	<i>dscp1...dscp8</i>	DSCP list. The range is from 0 to 63.

**Defaults** By default, the IP precedence 0, 1, 2, 3, 4, 5, 6, 7 is mapped to the DSCP 0, 8, 16, 24, 32, 40, 48, 56 respectively.

**Command** Global configuration mode.  
**Mode**

**Usage Guide** N/A

**Configuration Examples**  

```
Ruijie(config)# mls qo map ip-prec -dscp 8 10 16 18 24 26 32 34
```

Related Commands	Command	Description
	<b>show mls qos maps ip-pre-dscp</b>	Displays the IP-precedence to DSCP mapping.

Platform N/A

Description

## 2.9 mls qos scheduler

Use this command to configure the output queue scheduling. Use the **no** or **default** form of this command to restore the default scheduler.

**mls qos scheduler** [ **sp** | **rr** | **wrr** | **drr** | **wfq** ]

**no mls qos scheduler**

Parameter	Parameter	Description
Description	<b>sp</b>	Specifies the absolute priority scheduling.
	<b>rr</b>	Specifies the round-robin scheduling.
	<b>wrr</b>	Specifies the frame count weighted round-robin scheduling.
	<b>drr</b>	Specifies the frame length weighted round-robin scheduling.
	<b>wfq</b>	Specifies the weighted fair queuing.

**Defaults** The default queue scheduling is **wrr**.

**Command Mode** Global configuration mode.

**Usage Guide** N/A

**Configuration Examples** The following example specifies the sp scheduling.

```
Ruijie(config)# mls qos scheduler sp
```

```
Ruijie(config)# interface gigabitEthernet 0/1
```

```
Ruijie(config-if-GigabitEthernet 0/1)# mls qos scheduler drr
```

Related Commands	Command	Description
	<b>show mls qos scheduler</b>	Displays the output queue scheduling.

Platform N/A

Description

## 2.10 mls qos trust

Use this command to configure the trust mode on an interface. Use the **no** or **default** form of this command to restore the default setting.

**mls qos trust** { **cos** | **dscp** | **ip-precedence** }

**no mls qos trust**  
**default mls qos trust**

Parameter	Parameter	Description
Description	<b>cos</b>	Specifies the CoS trust mode.
	<b>dscp</b>	Specifies the DSCP trust mode.
	<b>ip-precedence</b>	Specifies the IP-PRE trust mode.

**Defaults** No trust mode is configured by default.

**Command Mode** Interface configuration mode.

**Usage Guide** N/A

**Configuration Examples** The following example configures the CoS trust mode.

```
Ruijie(config)# interface gigabitethernet 1/1
Ruijie(config-if)# mls qos trust cos
```

Related Commands	Command	Description
	<b>show mls qos interface</b> <i>interface-id</i>	Displays the specified interface configuration.
<b>Platform Description</b>	N/A	

## 2.11 police

Use this command to configure traffic policing for a class map in a policy map. Use the **no** form of this command to remove traffic policing for the class map.

**police** *rate-bps burst-byte* [ **exceed-action** { **drop** | **dscp** *new-dscp* | **cos** *new-cos* [ **none-tos** ] } ]  
**no police**

Parameter	Parameter	Description
Description	<i>rate-bps</i>	Bandwidth limit value per second (The unit is KBits). This value depends on the specific product.
	<i>burst-byte</i>	Burst traffic limit value (The unit is KBytes). This value depends on the specific product.
	<b>drop</b>	Drops the packet. This is available only when the packet exceeds the bandwidth limit.
	<b>dscp</b> <i>new-dscp</i>	Modifies the DSCP value of the packet. This is available only when the packet exceeds bandwidth limit. The DSCP value range is from 0 to 63.
	<b>cos</b> <i>new-cos</i>	Modifies the CoS value of the packet. This is available only when the

	packet exceeds bandwidth limit. The CoS value range is from 0 to 7.
<b>none-tos</b>	Modifies the CoS value only.

**Defaults** No traffic policing is configured for the class map by default.

**Command Mode** Policy map class configuration mode

**Usage Guide** N/A

**Configuration Examples** The following example configures traffic policing which modifies the DSCP value of the packet to 16 for class map "cm-acl" in policy map "pmap1".

```
Ruijie(config)# policy-map pmap1
Ruijie(config-pmap)# class cm-acl
Ruijie(config-pmap-c)# police 102400 4096 exceed-action dscp 16
```

**Related Commands**

Command	Description
<b>show policy-map</b> [ <i>policy-map-name</i> [ <b>class</b> <i>class-map-name</i> ] ]	Displays the policy map configuration.

**Platform Description** N/A

## 2.12 policy map

Use the following command to create a policy map and enter policy map configuration mode. Use the **no** or **default** form of this command to remove the specified policy map.

**policy-map** *policy-map-name*

**no policy-map** *policy-map-name*

**default policy-map** *policy-map-name*

**Parameter Description**

Parameter	Description
<i>policy-map-name</i>	Policy map name. The policy map name can be a maximum of 31 characters.

**Defaults** No policy map is configured by default.

**Command Mode** Global configuration mode.

**Usage Guide** N/A

**Configuration** The following example creates policy map “po”, and then adds a reference to class map “cmap1”.

**Examples** Sets the rate limit value to 10 Mbps, the burst traffic limit value to 256 Kbps, and discard packets which exceed the limit.

```
Ruijie(config)# policy-map po
Ruijie(config-pmap)# class cmap1
Ruijie(config-pmap-c)# police 10240 256
exceed-action drop
```

Related	Command	Description
Commands	<b>show policy-map</b> [ <i>policy-map-name</i> [ <b>class</b> <i>class-map-name</i> ] ]	Displays the policy map configuration.

**Platform** N/A

**Description**

## 2.13 priority-queue

Use this command to configure the output queue scheduling policy to SP. Use the **no** or **default** form of this command to restore the default queue scheduling policy.

**priority-queue**

**no priority-queue**

Parameter	Parameter	Description
Description	N/A	N/A

**Defaults** The default output queue scheduling policy is WRR.

**Command Mode** Global configuration mode.

**Usage Guide** This command shares the same configuration with the **mls qos scheduler sp**. The **show run** command displays this configuration in the **mls qos scheduler sp** item instead of **priority-queue**.

**Configuration** The following example configures the output queue scheduling policy to SP.

**Examples**

```
Ruijie(config)# priority-queue
```

Related	Command	Description
Commands	<b>show mls qos scheduler</b>	Displays the output queue scheduling policy.

**Platform** N/A

**Description**



	<p>queue bandwidth configuration.</p> <p>The <b>queue mcast</b> keyword indicates configuring the minimum or maximum of the interface bandwidth to the multicast queue on the device supporting the multicast queue bandwidth configuration.</p> <p>The <b>queue</b> keyword indicates configuring the minimum or maximum of the interface bandwidth to the queue on the device supporting both unicast and multicast queue bandwidth configuration.</p>
<i>queue-id</i>	Queue ID. The range is from 1 to 8.
<b>bandwidth</b> { <b>minimum</b>   <b>maximum</b> } <i>bandwidth</i>	Bandwidth value. The value range depends on the specific product.

**Defaults** No minimum or maximum of interface bandwidth to a queue is configured by default.

**Command Mode** Interface configuration mode

**Usage Guide** N/A

**Configuration Examples** The following example configures the minimum interface bandwidth of unicast queue 1 to 5 Mbps, and the maximum to 10 Mbps.

```
Ruijie(config)# interface gigabitEthernet 0/1
Ruijie(config-if-GigabitEthernet 0/1)# qos queue ucast 1 bandwidth maximum 10240
Ruijie(config-if-GigabitEthernet 0/1)# qos queue ucast 1 bandwidth minimum 5120
```

The following example configures the minimum interface bandwidth of unicast queue 2 to 2 Mbps.

```
Ruijie(config)# interface gigabitEthernet 0/1
Ruijie(config-if-GigabitEthernet 0/1)# qos queue ucast 2 bandwidth minimum 2048
```

The following example configures minimum interface bandwidth of multicast queue 1 to 1 Mbps, and the maximum to 5 Mbps.

```
Ruijie(config)# interface gigabitEthernet 0/1
Ruijie(config-if-GigabitEthernet 0/1)# qos queue mcast 1 bandwidth maximum 5120
Ruijie(config-if-GigabitEthernet 0/1)# qos queue mcast 1 bandwidth minimum 1024
```



Related Commands	Command	Description
	<b>show qos bandwidth</b> [ <b>interfaces</b> <i>interface-id</i> ]	Displays the interface bandwidth of the queue.

Platform N/A

Description

## 2.16 rate-limit

Use this command to configure rate limiting on the interface. Use the **no** or **default** form of this command to remove rate limiting from the interface.

**rate-limit** { **input** | **output** } *bps burst-size*

**no rate-limit** { **input** | **output** }

**default rate-limit** { **input** | **output** }

Parameter Description	Parameter	Description
	<b>input</b>	Configures input rate limiting.
	<b>output</b>	Configures output rate limiting.
	<i>bps</i>	Bandwidth limit value per second (The unit is KBits). This value depends on the specific product.
	<i>burst-size</i>	Burst traffic limit value (The unit is KBytes). This value depends on the specific product.

Defaults Rate limiting is not configured by default.

Command Interface configuration mode.

Mode

Usage Guide N/A

Configuration Examples The following example configures the rate limit value to 10 Mbps, and the burst traffic limit value to 256 Kbps.

```
Ruijie(config)# interface gigabitethernet 1/3
Ruijie(config-if-GigabitEthernet 1/3)# rate-limit input 10240 256
```

Related Commands	Command	Description
	<b>show mls qos rate-limit</b> [ <b>interface</b> <i>interface-id</i> ]	Displays the rate limiting configuration of the interface.

Platform N/A

Description

## 2.17 service-policy

Use this command to apply the policy map to the interface, the virtual group or globally. Use the **no** or **default** form of this command to remove the policy map.

**service-policy** { **input** | **output** } *policy-map-name*

**no service-policy** { **input** | **output** } *policy-map-name*

**default service-policy** { **input** | **output** } *policy-map-name*

Parameter	Parameter	Description
Description	<i>policy-map-name</i>	Policy map name
	<b>input</b>	Applies the policy map to the input direction.
	<b>output</b>	Applies the policy map to the output direction.

**Defaults** No policy map is configured on the interface or virtual group by default.

**Command Mode** Interface configuration mode, and virtual group configuration mode.

**Usage Guide** N/A

**Configuration Examples** The following example applies policy map “po” to the input direction of interface GigabitEthernet 1/3.

```
Ruijie(config)# interface gigabitethernet 1/3
Ruijie(config-if-GigabitEthernet 1/3)# service-policy input po
```

The following example applies policy map “po” to the output direction of virtual group 3.

```
Ruijie(config)# virtual-group 3
Ruijie(config-VirtualGroup)# service-policy output po
```

Related Commands	Command	Description
	<b>show mls qos interface policers</b>	Displays the policy map configuration on the interface.
	<b>show mls qos virtual-group policers</b>	Displays the policy map configuration on the virtual group.

**Platform Description** N/A

## 2.18 set

Use this command to configure the CoS, DSCP or VID value for the traffic. Use the **no** form of this command to remove the CoS, DSCP or VID value from the traffic.

**set** { **ip dscp** *new-dscp* | **cos** *new-cos* [ **none-tos** ] | **vid** *new-vid* }

**no set { ip dscp | cos | vid }**

Parameter	Parameter	Description
Description	<b>ip dscp</b> <i>new-dscp</i>	Configures the DSCP value for the traffic. The range is from 0 to 63.
	<b>cos</b> <i>new-cos</i>	Configures the CoS value for the traffic. The range is from 0 to 7.
	<b>none-tos</b>	Configures the CoS value only.
	<b>vid</b> <i>new-vid</i>	Configures the VID value for the traffic. The range is from 1 to 4094.

**Defaults** No CoS, DSCP or VID value is configured for the traffic in policy map class mode.

**Command Mode** Policy map class configuration mode

**Usage Guide** N/A

**Configuration Examples** The following example creates policy map “pmap1”, and adds a reference to class map “cmap1”.

```
Ruijie(config)# policy-map pmap1
Ruijie(config-pmap)# class cmap1
```

The following example modifies the CoS value of the traffic to 3.

```
Ruijie(config-pmap-c)# set cos 3
```

Related Commands	Command	Description
	<b>show</b> <b>policy-map</b> [ <i>policy-map-name</i> [ <b>class</b> <i>class-map-name</i> ] ]	Displays the policy map configuration on the interface.

**Platform Description** N/A

## 2.19 show class-map

Use this command to display the class map.

**show class-map** [ *class-map-name* ]

Parameter	Parameter	Description
Description	<i>class-map-name</i>	Class map name.

**Defaults** None

**Command Mode** Privileged EXEC mode, global configuration mode, interface configuration mode.

**Usage Guide** N/A

**Configuration** The following example displays all class maps.

**Examples**

```
Ruijie# show class-map

Class Map cmap1
  Match ip dscp 20 40

Class Map cmap2
  Match access-group 110
```

The fields in the output of this command are described in the following table.

Field	Description
Class Map	Indicates the class map name.
Match	Indicates the matched rule.

**Related  
Commands**

Command	Description
N/A	N/A

**Platform  
Description** N/A

## 2.20 show mls qos interface

Use this command to display the QoS configuration of the interface.

**show mls qos interface** [ *interface-id* ] [ **policers** ]

Parameter	Parameter	Description
<b>Description</b>	<i>interface-id</i>	Interface name
	<b>policers</b>	Displays the traffic policing configured on the interface.

**Defaults** None

**Command  
Mode** Privileged EXEC mode, global configuration mode, interface configuration mode.

**Usage Guide** N/A

**Configuration** The following example displays the QoS configuration of interface GigabitEthernet 1/3.

**Examples**

```
Ruijie# show mls qos interface gigabitethernet 1/3

Interface: GigabitEthernet 0/3
```

```
Ratelimit input: 10240 256
Ratelimit output: 51200 4096
Attached input policy-map: pmap1
Attached output policy-map:
Default trust: dscp
Default cos: 3
```

The fields in the output of this command are described in the following table.

Field	Description
Interface	Indicates the interface name.
Ratelimit input	Indicates the input rate limit value .
Ratelimit output	Indicates the output rate limit value .
Attached input policy-map	Indicates the input policy map .
Attached output policy-map	Indicates the output policy map.
Default trust	Indicates the trust mode of the interface.
Default cos	Indicates the default CoS value.

The following example displays the QoS configuration of all interfaces.

```
Ruijie# show mls qos interface policers
Interface: GigabitEthernet 0/1
Attached input policy-map: pmap1
Attached output policy-map: pmap1
Interface: GigabitEthernet 0/2
Attached input policy-map: p1
```

Related	Command	Description
Commands	N/A	N/A

Platform N/A  
Description

## 2.21 show mls qos maps

Use this command to display DSCP-CoS mapping, CoS-DSCP mapping and IP-PRE-DSCP mapping.

**show mls qos maps [ cos-dscp | dscp-cos | ip-prec-dscp ]**

Parameter	Parameter	Description
Description	cos-dscp	Displays the CoS-DSCP mapping.
	dscp-cos	Displays the DSCP-CoS mapping.

<b>ip-prec-dscp</b>	Displays the IP-PRE-DSCP mapping..
---------------------	------------------------------------

**Defaults**      None

**Command Mode**      Privileged EXEC mode, global configuration mode, interface configuration mode.

**Usage Guide**      N/A

**Configuration**      The following example displays the CoS-DSCP mapping.

**Examples**

```
Ruijie# show mls qos maps cos-dscp
cos dscp
--- ----
0    0
1    8
2   16
3   24
4   32
5   40
6   48
7   56
```

The fields in the output of this command are described in the following table.

Field	Description
cos	Indicates the CoS value.
dscp	Indicates the DSCP value mapped .

The following example displays the DSCP- CoS mapping.

```
Ruijie# show mls qos maps dscp-cos
dscp cos    dscp cos    dscp cos    dscp cos
---- ---    ---- ---    ---- ---    ---- ---
0    0       1    0       2    0       3    0
4    0       5    0       6    0       7    0
8    1       9    1      10    1      11    1
12   1      13    1      14    1      15    1
16   2      17    2      18    2      19    2
20   2      21    2      22    2      23    2
```

24	3	25	3	26	3	27	3
28	3	29	3	30	3	31	3
32	4	33	4	34	4	35	4
36	4	37	4	38	4	39	4
40	5	41	5	42	5	43	5
44	5	45	5	46	5	47	5
48	6	49	6	50	6	51	6
52	6	53	6	54	6	55	6
56	7	57	7	58	7	59	7
60	7	61	7	62	7	63	7

The fields in the output of this command are described in the following table.

Field	Description
dscp	Indicates the DSCP value.
cos	Indicates the CoS value mapped .

The following example displays the IP-PRE-DSCP mapping.

```
Ruijie# show mls qos maps ip-prec-dscp
ip-precedence dscp
-----
      0 0
      1 8
      2 16
      3 24
      4 32
      5 40
      6 48
      7 56
```

The fields in the output of this command are described in the following table.

Field	Description
ip-precedence	Indicates the IP-PRE value.
dscp	Indicates the DSCP value mapped .

#### Related Commands

Command	Description
N/A	N/A

Platform N/A

Description

2.22 show mls qos queuing

Use this command to display the QoS queuing configuration.

**show mls qos queueing [ interface *interface-id* ]**

Parameter	Parameter	Description
Description	<b>interface</b> <i>interface-id</i>	ID of interface.

Defaults N/A

Command Privileged EXEC mode, global configuration mode, interface configuration mode.

Mode

Usage Guide N/A

Configuration The following example displays the QoS queuing configuration.

Examples

```
Ruijie# show mls qos queueing

Cos-queue map:

cos qid
--- ---
0    1
1    2
2    3
3    4
4    5
5    6
6    7
7    8

wrr bandwidth weights:

qid weights
--- -----
1    1
2    2
3    3
```



4 4

5 5

6 6

7 7

8 8

drp bandwidth weights:

qid weights

--- -----

1 3

2 3

3 3

4 3

5 3

6 3

7 3

8 3

wfq bandwidth weights:

qid weights

--- -----

1 3

2 4

3 5

4 6

5 7

6 8

7 9

8 10

Interface: GigabitEthernet 0/1

Wrr queue bandwidth: 1 1 1 1 2 2 2 2

Drr queue bandwidth: 1 1 2 2 2 2 4 4

Wfq queue bandwidth: 1 1 2 2 4 4 4 4

The fields in the output of this command are described in the following table.

Field	Description
Cos-queue map	Indicates the mapping between the CoS value and the queue ID.
wrr bandwidth weights	Indicates the WRR queue weight.
drr bandwidth weights	Indicates the DRR queue weight.
wfq bandwidth weights	Indicates the WFQ queue weight.
cos	Indicates the CoS value.
qid	Indicates the queue ID.
weights	Indicates the weight value

```
Ruijie# show mls qos queueing interface gigabitEthernet 0/1
Interface: GigabitEthernet 0/1

Wrr queue bandwidth: 1 1 1 1 2 2 2 2
Drr queue bandwidth: 1 1 2 2 2 2 4 4
Wfq queue bandwidth: 1 1 2 2 4 4 4 4
```

Related Commands	Command	Description
	N/A	N/A

Platform N/A  
Description

## 2.23 show mls qos rate-limit

Use this command to display the rate limiting configuration of the interface.

**show mls qos rate-limit** [ **interface** *interface-id* ]

Parameter Description	Parameter	Description
	<i>interface-id</i>	Interface name

Defaults N/A

Command Privileged EXEC mode, global configuration mode, interface configuration mode.  
Mode

Usage Guide N/A

Configuration The following example displays the rate limiting configuration of all interfaces.

Examples

```
Ruijie# show mls qos rate-limit
Interface: GigabitEthernet 0/1
```

```
rate limit input Kbps = 10240 burst = 256

Interface: GigabitEthernet 0/3

rate limit output Kbps = 102400 burst = 4096
```

The fields in the output of this command are described in the following table.

Field	Description
Interface	Indicates the interface name.
rate limit input Kbps = x burst = y	Indicates the input rate limit value, and the input burst traffic limit value.
rate limit output Kbps = x burst = y	Indicates the output rate limit value, and the output burst traffic limit value.

Related Commands	Command	Description
	N/A	N/A

**Platform** N/A  
**Description**

## 2.24 show mls qos scheduler

Use this command to display the queue scheduling policy.

**show mls qos scheduler** [ **interface** *interface-id* ]

Parameter	Parameter	Description
<b>Description</b>	<b>interface</b> <i>interface-id</i>	ID of the interface.

**Defaults** None

**Command Mode** Privileged EXEC mode, global configuration mode, interface configuration mode.

**Usage Guide** N/A

**Configuration Examples** The following example displays the queue scheduling policy.

```
Ruijie# show mls qos scheduler

Global Multi-Layer Switching scheduling

Weighted Round Robin
```

The fields in the output of this command are described in the following table.

Field	Description
Weighted Round Robin	Indicates that the queue scheduling policy is

	WRR. The other queue scheduling policies are listed as follows: SP: Strict Priority RR: Round Robin DRR: Deficit Round Robin WFQ: Weighted Fair Queue
--	--

Related	Command	Description
Commands	N/A	N/A

Platform N/A

Description

## 2.25 show mls qos virtual-group

Use this command to display the policy map configuration on the virtual group.

**show mls qos virtual-group** [ *virtual-group-number* | **policers** ]

Parameter	Parameter	Description
Description	<i>virtual-group-number</i>	Virtual group number. The range is from 1 to 128.
	<b>policers</b>	Displays the policy map configuration on all virtual groups.

Defaults None

**Command Mode** Privileged EXEC mode, global configuration mode, interface configuration mode.

**Usage Guide** N/A

**Configuration** The following example displays the policy map configuration on all virtual groups.

### Examples

```
Ruijie# show mls qos virtual-group policers

Virtual-group: 1
Attached input policy-map: pmap1

Virtual-group: 20
Attached output policy-map: pmap2
```

The fields in the output of this command are described in the following table.

Field	Description
Virtual-group	Indicates the virtual group number.

Attached input policy-map	Indicates the policy map applied on the input virtual group.
Attached output policy-map	Indicates the policy map applied on the output virtual group.

Related Commands	Command	Description
	N/A	N/A

**Platform** N/A  
**Description**

## 2.26 show policy-map

Use this command to display policy maps.

**show policy-map** [ *policy-map-name* [ **class** *class-map-name* ] ]

Parameter	Parameter	Description
<b>Description</b>	<i>policy-map-name</i>	Policy map name
	<i>class-map-name</i>	Class map name

**Defaults** None

**Command Mode** Privileged EXEC mode, global configuration mode, interface configuration mode.

**Usage Guide** N/A

**Configuration Examples** The following example displays configuration of policy map "pmap1".

```
Ruijie# show policy-map pmap1

Policy Map pmap1
  Class cmap1
    set ip dscp 16
  Class cmap2
    police 10240 256 exceed-action dscp 8
  Class cmap3
    police 512000 4096 exceed-action drop
```

The fields in the output of this command are described in the following table.

Field	Description
Policy Map	Indicates the policy map name.
Class	Indicates the class map name.
set	Indicates that the DSCP value is modified in this example.
police	Indicates bandwidth limit configuration and the action policy for the violated packets.

The following example displays the action policy for the traffic of class map “cmap1” in policy map “pmap1” .

```
Ruijie#show policy-map pmap1 class cmap1
Class cmap1
set ip dscp 16
```

Related	Command	Description
Commands	N/A	N/A

Platform N/A

Description

## 2.27 show qos bandwidth

Use this command to display the bandwidth configuration.

**show qos bandwidth [ interfaces *interface-id* ]**

Parameter	Parameter	Description
Description	<i>interface-id</i>	Interface name

Defaults None

Command Privileged EXEC mode, global configuration mode, interface configuration mode.

Mode

Usage Guide N/A

**Configuration Examples** The following example displays the bandwidth configuration of interface GigabitEthernet 0/1. (Taking the device supporting the bandwidth configuration of the unicast queue or the multicast queue for example. )

```
Ruijie# show qos bandwidth interface gigabitEthernet 0/1
```

```

Interface: GigabitEthernet 0/1

-----
uc-queue-id | minimum-bandwidth | maximum-bandwidth
-----
          1             5120             10240
          2              0              0
          3              0              0
          4              0              0
          5              0              0
          6              0              0
          7              0              0
          8              0              0
-----

Total ucast-queue minimum-bandwidth:          5120
Total ucast-queue maximum-bandwidth:         10240

Interface: GigabitEthernet 0/1

-----
mc-queue-id | minimum-bandwidth | maximum-bandwidth
-----
          1             1024             5120
          2              0              0
          3              0              0
          4              0             2048
-----

Total mcast-queue minimum-bandwidth:          1024
Total mcast-queue maximum-bandwidth:         5120

```

The fields in the output of this command are described in the following table.

Field	Description
Interface	Indicates the interface name.
queue-id	Indicates the queue ID.
uc-queue-id	Indicates the unicast queue ID.
mc-queue-id	Indicates the multicast queue ID.
minimum-bandwidth	Indicates the minimum bandwidth configuration. The unit is Kbps.

maximum-bandwidth	Indicates the maximum bandwidth configuration. The unit is Kbps.
Total queue minimum-bandwidth Total queue maximum-bandwidth	Indicates the total bandwidth of minimum and maximum when both unicast and multicast queues are displayed.
Total ucast-queue minimum-bandwidth Total ucast-queue maximum-bandwidth	Indicates the total bandwidth of minimum and maximum when only unicast queue is displayed.
Total mcast-queue minimum-bandwidth Total mcast-queue maximum-bandwidth	Indicates the total bandwidth of minimum and maximum when only multicast queue is displayed.

Related	Command	Description
Commands	N/A	N/A

<b>Platform</b>	N/A
-----------------	-----

### Description

## 2.28 show virtual-group

Use this command to display the member port in the virtual group.

**show virtual-group** [ *virtual-group-number* / **summary** ]

Parameter	Parameter	Description
Description	<i>virtual-group-number</i>	Virtual group number. The range is from 1 to 128.
	<b>summary</b>	Displays the member port in all virtual groups.

Defaults	N/A
----------	-----

<b>Command</b>	Privileged EXEC mode, global configuration mode, interface configuration mode.
<b>Mode</b>	

<b>Usage Guide</b>	N/A
--------------------	-----

**Configuration** The following example displays the member port in all virtual groups.

## Examples

```
Ruijie# show virtual-group summary
```

```
virtual-group      member
```

-----

```
1          Gi0/1 Gi0/2
```

2 Gi0/0



The fields in the output of this command are described in the following table.

Field	Description
virtual-group	Indicates the virtual group number.
member	Indicates the member port in the virtual group.

Related Commands	Command	Description
	N/A	N/A

Platform N/A  
Description

## 2.29 virtual-group

Use this command to create a virtual group in global configuration mode.

Use this command to configure add an interface to a virtual group in interface configuration mode.

Use the **no** or **default** form of this command to remove a virtual group in global configuration mode.

Use the **no** or **default** form of this command to remove an interface from a virtual group in interface configuration mode.

**virtual-group** *virtual-group-number*

**no virtual-group** *virtual-group-number*

**default virtual-group** *virtual-group-number*

Parameter Description	Parameter	Description
	<i>virtual-group-number</i>	Virtual group number. The range is from 1 to 128.

**Defaults** No virtual group is configured, or no interface is added to a virtual group, by default.

**Command Mode** Interface configuration mode, global configuration mode.

**Usage Guide** The member port added to the virtual group must be a physical port or an aggregate port member.

**Configuration Examples** The following example sets the interface gigabitEthernet 1/3 as the member of virtual group 3:

```
Ruijie(config)# interface gigabitEthernet 1/3
Ruijie(config-if)# virtual-group 3
```

Related Commands	Command	Description
	<b>show virtual-group</b> [ <i>virtual-group-number</i>   <b>summary</b> ]	Displays the virtual group configuration.

Platform N/A

Description

## 2.30 wfq-queue bandwidth

Use this command to configure the WFQ queue weight ratio. Use the **no** or **default** form of this command to restore the default setting.

**wfq-queue bandwidth** *weight1 ... weight8*

**no wfq-queue bandwidth**

**default wfq-queue bandwidth**

Parameter  
Description

Parameter	Description
<i>weight1...weight8</i>	8 queue weights. The default queue weight ratio is 1:1:1:1:1:1:1:1. For the products supporting the SP scheduling policy, the weight range is from 0 to 15. For the products not supporting the SP scheduling policy, the weight range is from 1 to 15.

**Defaults** The default queue weight ratio is 1:1:1:1:1:1:1:1.

**Command** Global configuration mode.

**Mode**

**Usage Guide** If the weight value is 0, the SP scheduling policy is applied.

**Configuration** The following example configures the WFQ queue weight ratio to 1:1:2:4:4:4:6:8.

**Examples**

```
Ruijie(config)# wfq-queue bandwidth 1 1 2 4 4 4 6 8
```

Related  
Commands

Command	Description
<b>show mls qos queueing</b>	Displays the QoS queuing configuration.

Platform N/A

Description

## 2.31 wrr-queue bandwidth

Use this command to set the WRR weight ratio. Use the **no** or **default** form of this command to restore the default setting.

**wrr-queue bandwidth** *weight1 ... weight8*

**no wrr-queue bandwidth**

**default wrr-queue bandwidth**

Parameter	Parameter	Description
Description	<i>weight1...weight8</i>	8 queue weights. The default queue weight ratio is 1:1:1:1:1:1:1:1. For the products supporting the SP scheduling policy, the weight range is from 0 to 15. For the products not supporting the SP scheduling policy, the weight range is from 1 to 15.

**Defaults** The default queue weight ratio is 1:1:1:1:1:1:1:1.

**Command Mode** Global configuration mode

**Usage Guide** If the weight value is 0, the SP scheduling policy is applied.

**Configuration Examples** The following example configures the WRR queue weight ratio to 1:1:1:1:2:2:4:8.

```
Ruijie(config)# wrr-queue bandwidth 1 1 1 1 2 2 4 8
```

```
Ruijie(config)# interface gigabitEthernet 0/1
```

```
Ruijie(config-if-GigabitEthernet 0/1)# wrr-queue bandwidth 1 1 2 2 2 2 4 4
```

Related Commands	Command	Description
	<b>show mls qos queuing</b>	Displays the QoS queuing configuration.

**Platform Description** N/A



## Reliability Configuration Commands

---

1. REUP Commands
2. RLDP Commands
3. DLDP Commands
4. IP Event Dampening Commands
5. VSU Commands
6. VRRP Commands
7. VRRP Plus Commands

# 1 REUP Commands

## 1.1 link state group

Use this command to add the port into the specified link state track group. The **no** form of this command is used to delete a port from the specified link state track group.

**link state group** *num* { **upstream** | **downstream** }

**no link state group**

### Parameter Description

Parameter	Description
<i>num</i>	ID of the link state track group.
<b>upstream</b>	Configures the port to be an upstream port in the link state track group.
<b>downstream</b>	Configures the port to be a downstream port in the link state track group.

**Defaults** The port is not added into any link state track group.

**Command Mode** Interface configuration mode.

**Usage Guide** First create a link state track group and then add a port into the specified link state track group.

**Configuration Examples** The following example shows how to add the port fa0/2 into the link state track group:

```
Ruijie(config)# link state track 1
Ruijie(config)# interface fa 0/2
Ruijie(config-if)# link state group 1 upstream
```

### Related Commands

Command	Description
<b>link state track</b>	Enables a link state track group.

**Platform Description** N/A.

## 1.2 link state track

Use this command to enable the link state track group. The **no** form of this command is used to disable a link state track group

**link state track** [ *num* ]

**no link state track** [ *num* ]

**Parameter  
Description**

Parameter	Description
<i>num</i>	Interface ID of the link aggregation group.

**Defaults** N/A.

**Command  
Mode** Global configuration mode.

**Usage Guide** First create a link state track group and then add a port into the specified link state track group.

**Configuration** The following example shows how to create a link state track group:

**Examples** Ruijie(config)# link state track 1

**Related  
Commands**

Command	Description
<b>link state group</b>	Adds the port to the specified link state track group.

**Platform  
Description** N/A.

### 1.3 mac-address-table move update max-update-rate

Use this command to configure the maximum number of MAC address update packets sent per second.

**mac-address-table move update max-update-rate** *pkts-per-second*

**no mac-address-table move update max-update-rate**

**Parameter  
Description**

Parameter	Description
<i>pkts-per-second</i>	The maximum number of MAC address update packets sent per second. It ranges from 0 to 32000, and the default value is 150.

**Defaults** A maximum of 150 MAC address update packets are sent per second.

**Command  
Mode** Global configuration mode.

**Usage Guide** When a link is switched, REUP sends a certain number of MAC address update packets to an uplink device in every second to recover downlink data transmission of the uplink device.

**Configuration** The following example shows how to configure the maximum number of MAC address update packets sent per second:

**Examples**

```
Ruijie(config)# mac-address-table move update max-update-rate 20
```

**Related  
Commands**

Command	Description
N/A.	N/A.

**Platform** N/A.

**Description**

## 1.4 mac-address-table move update receive

Use this command to enable REUP to receive the mac-address-table update messages.

**mac-address-table move update receive**

**no mac-address-table move update receive**

**Parameter  
Description**

Parameter	Description
N/A.	N/A.

**Defaults** Disabled.

**Command  
Mode** Global configuration mode.

**Usage Guide** The dual link backup switchover will lead to the loss of downstream data flow, for the MAC address for the uplink switch has not been updated in time. Therefore, it is necessary to update the MAC address table of the uplink switch, to reduce the loss of L2 data flow. You need to enable the switch of receiving the MAC address update messages on the uplink switch.

**Configuration** Ruijie(config)# mac-address-table move update receive

**Examples****Related  
Commands**

Command	Description
<b>mac-address-table move update transit</b>	Enables REUP to transmit the mac-address-table update messages.

**Platform** N/A.

**Description**

## 1.5 mac-address-table move update receive vlan

Use this command to configure the VLANs processing MAC address update packets.

**mac-address-table move update receive vlan** *vlan-range*

**no mac-address-table move update receive vlan** *vlan-range*

Parameter Description	Parameter	Description
	<i>vlan-range</i>	Range of the VLANs processing MAC address update packets.

**Defaults** All VLANs process MAC address update packets.

**Command  
Mode** Global configuration mode.

**Usage Guide** This command can be used to disable some VLANs from processing MAC address update packets. VLANs disabled from processing MAC address update packets can still recover downlink data transmission of the uplink device using MAC address update packets, but the capability to provide convergence on link failure will be degraded.

**Configuration** The following example configures VLANs processing MAC address update packets:

**Examples** Ruijie(config)# no mac-address-table move update receive vlan 20

Related Commands	Command	Description
	<b>mac-address-table move update receive</b>	Enables REUP to receive MAC address update packets.

**Platform** N/A.  
**Description**

## 1.6 mac-address-table move update transit

Use this command to enable REUP to transmit the mac-address-table update messages.

**mac-address-table move update transit**

**no mac-address-table move update transit**

Parameter Description	Parameter	Description
	N/A.	N/A.

**Defaults** Disabled.



**Command** Global configuration mode.  
**Mode**

**Usage Guide** In order to reduce the link switchover and the loss of the downstream data flow, it is necessary to enable the switch of receiving the MAC address update messages on the uplink switch.

**Configuration Examples** Ruijie(config)# mac-address-table move update transit

**Related Commands**

Command	Description
<b>mac-address-table move update transit vlan</b>	Enables REUP to transmit the mac-address-table update messages.

**Platform** N/A.

**Description**

## 1.7 mac-address-table move update transit vlan

Use this command to enable REUP to transmit the mac-address update messages.

**mac-address-table move update transit vlan** *vid*

**no mac-address-table move update transit vlan**

**Parameter Description**

Parameter	Description
<i>vid</i>	ID of the VLAN transmitting MAC address update packets.

**Defaults** Transmit the MAC-address update messages in the default VLAN on the port.

**Command** Interface configuration mode.  
**Mode**

**Usage Guide** When a link is switched, the VLAN enabled to transmit MAC address update packets will send MAC address update packets to its uplink device.

**Configuration Examples** The following example configures VLANs transmitting MAC address update packets:

**Examples** Ruijie(config)# mac-address-table move update transit

**Related Commands**

Command	Description
<b>mac-address-table move update transit</b>	Enables REUP to receive the mac-address-table update messages.

**Platform** N/A.

## Description

## 1.8 mac-address-table update group

Use this command to set the mac-address-table update group.

**mac-address-table update group** [ *group-num* ]

**no mac-address-table update group**

**Parameter  
Description**

Parameter	Description
<i>group-num</i>	The mac-address-table update group ID.

**Defaults**

By default, no mac-address-table update group is configured.

**Command  
Mode**

Interface configuration mode.

**Usage Guide**

In order to reduce the flood due to the MAC address update and the influence on the normal data transmission of the switch, Ruijie products add a configuration of MAC address update group. Only if all the interfaces are added to a MAC address update group, the downstream data transmission be restored rapidly.

**Configuration**

```
Ruijie(config-if)# mac-address-table update group 2
```

**Examples****Related  
Commands**

Command	Description
<b>show mac-address-table update group detail</b>	Displays the mac-address-table update group information.

**Platform**

N/A.

**Description**

## 1.9 show interfaces switchport backup

Use this command to display the dual link backup information on the interfaces.

**show interfaces** [ *interface-id* ] **switchport backup** [ *detail* ]

**Parameter  
Description**

Parameter	Description
<i>interface-id</i>	The interface id of the dual link backup.
<b>detail</b>	Displays the detailed information about the dual link backup.

**Defaults** Show the dual link backup information on all interfaces.

**Command Mode** Privileged EXEC mode.

**Usage Guide** N/A.

**Configuration** Ruijie # show interfaces switchport backup detail

**Examples** Switch Backup Interface Pairs:

```
Active Interface      Backup Interface      State
-----
Gi0/23                Gi0/24                Active Up/Backup Standby
Interface Pair : Gi0/23, Gi0/24
Preemption Mode : Off
Preemption Delay : 35 seconds
Bandwidth : Gi0/23(1000 Mbits), Gi0/24(1000 Mbits)
```

**Related Commands**

Command	Description
N/A.	N/A.

**Platform** N/A.

**Description**

## 1.10 show link state group

Use this command to display the information of a link state track group.

**show link state group**

**Parameter Description**

Parameter	Description
N/A.	N/A.

**Defaults** N/A.

**Command Mode** Privileged EXEC mode.

**Usage Guide** N/A.

**Configuration** The following example displays the link state track group:

**Examples** Ruijie # show link state group

```
Link State Group:1 Status: Enabled, UP
Upstream Interfaces :Gi0/1(Up)
```

```
Downstream Interfaces :Gi0/3(Dwn), Gi0/4(Dwn)
Link State Group:2  Status: Disabled, Down
Upstream Interfaces :
Downstream Interfaces :
(Up):Interface up (Dwn):Interface Down (Dis):Interface disabled
```

**Related  
Commands**

Command	Description
N/A.	N/A.

**Platform**

N/A.

**Description**

## 1.11 show mac-address-table move update

Use this command to display the statistics about the MAC address updates tranceived on the interface.

**show mac-address-table move update****Parameter  
Description**

Parameter	Description
N/A	N/A

**Defaults**

N/A

**Command  
Mode**

Privileged EXEC mode.

**Usage Guide**

N/A.

**Configuration  
Examples**

```
Ruijie#show mac-address-table move update
Mac address table move update status:
Transit:disable
Receive:disable
Max-update-rate:150
Receive vlan:1-4094

Pair: Ag1,Ag2
Members          Status    Transit Count    Transit VLAN    Last Transit
Time
-----
Ag1              Down      0
Ag2              Down      0
```

```
Pair: Ag3,Gi0/6
Members          Status    Transit Count    Transit VLAN    Last Transit
Time
-----
Ag3              Down      0
Gi0/6           Down      0
Pair: Gi0/1,Gi0/2
Members          Status    Transit Count    Transit VLAN    Last Transit
Time
-----
Gi0/1           Up        0
Gi0/2          Standby   0
```

**Related  
Commands**

Command	Description
N/A.	N/A.

**Platform  
Description**

N/A.

## 1.12 show mac-address-table update group

Use this command to display the mac-address-table update group information.

**show mac-address-table update group detail**

**Parameter  
Description**

Parameter	Description
<b>detail</b>	Displays the detailed information about the mac-address-table update group.

**Defaults**

N/A

**Command  
Mode**

Privileged EXEC mode.

**Usage Guide**

N/A.

**Configuration**

```
Ruijie # configure terminal
```

**Examples**

```
Ruijie (config)# mac-address-table move update receive
Ruijie (config)# interface range gigabitEthernet 0/3-4
Ruijie (config-if-range)# mac-address-table update group
```

```
Ruijie (config-if-range)# end
Ruijie # show mac-address-table update group detail
Mac-address-table Update Group:1
Received mac-address-table update message count:7
Group member  Receive Count  Last Receive Switch-ID  Receive Time
-----
GigabitEthernet 0/3  0                0000.0000.0000
GigabitEthernet 0/4  0                0000.0000.0000
```

**Related  
Commands**

Command	Description
N/A.	N/A.

**Platform**

N/A.

**Description**

## 1.13 switchport backup interface

Use this command to configure the REUP dual link backup interface.

**switchport backup interface** *interface-id*

**no switchport backup**

**Parameter  
Description**

Parameter	Description
<i>interface-id</i>	Interface ID of the backup link.

**Defaults**

N/A.

**Command  
Mode**

Interface configuration mode.

**Usage Guide**

Enter the primary interface configuration mode, the interface-id in the parameter is for the backup interface. When the active link fails, the backup link transmission is restored rapidly

**Configuration  
Examples**

The following example shows how to set the dual link backup, with fa 0/1 and fa 0/2 as primary interface and backup interface:

```
Ruijie(config)# interface fa 0/1
Ruijie(config-if)# switchport backup interface fa 0/2
```

**Related  
Commands**

Command	Description
<b>show interface switchport backup</b>	Displays the dual link backup configuration on the switch.

**Platform** N/A.  
**Description**

## 1.14 switchport backup interface preemption

Use this command to configure the REUP link preemption function.

**switchport backup interface** *interface-id* **preemption mode** { **forced** | **bandwidth** | **off** }

**switchport backup interface** *interface-id* **preemption delay**

**no switchport backup interface** *interface-id* **preemption delay**

**Parameter**  
**Description**

Parameter	Description
<i>interface-id</i>	The interface id of the backup link.
<i>delay-time</i>	The preemption delay time.

**Defaults** The default preemption delay time is 35s.

**Command** Interface configuration mode.  
**Mode**

**Usage Guide** The preemption mode includes **forced**, **bandwidth** and **off**. In the **bandwidth** preemption mode, the interface with high bandwidth has priority over other interfaces to transmit the data. In the **forced** preemption mode, the primary has priority over backup interfaces to transmit the data. No preemption event occurs in the **off** preemption mode. By default, the preemption mode is off.

The preemption delay refers to the delay time of the link switchover after the restoration of the link failure.

**Configuration Examples** The following example shows how to set the dual link backup, with fa 0/1 and fa 0/2 as the primary interface and backup interface, set the bandwidth preemption mode and 40s preemption delay:

```
Ruijie(config)# interface fa 0/1
Ruijie(config-if)# switchport backup interface fa 0/2
preemption mode bandwidth
Ruijie(config-if)# switchport backup interface fa 0/2
preemption delay 40
```

**Related**  
**Commands**

Command	Description
<b>show interface switchport backup</b>	Displays the dual link backup configuration.

**Platform** N/A.  
**Description**

## 1.15 switchport backup interface prefer

Use this command to configure VLAN load balancing on a link. The **no** form of this command is used to delete the configured VLAN load strategy.

**switchport backup interface** *interface-id* **prefer instance** *instance-range*

**no switchport backup interface** *interface-id* **prefer**

### Parameter Description

Parameter	Description
<i>interface-id</i>	Interface ID of the backup link.
<i>instance-range</i>	Instance range of loading on the backup interface.

**Defaults** No VLAN load on the backup interface.

**Command  
Mode** Interface configuration mode.

**Usage Guide** MSTP instance mapping can be used to modify the mapping between an instance and a VLAN.

**Configuration** The following example configures VLAN load balancing on dual links.

**Examples**

```
Ruijie(config-if)# switchport backup interface gigabitEthernet 0/2 prefer  
instance 1
```

### Related Commands

Command	Description
<b>show interface switchport backup</b>	Displays the configuration of dual-link backup on the switch.
<b>spanning-tree mst configuration</b>	Configures MSTP instances.

**Platform  
Description** N/A.



## 2 RLDP Commands

### 2.1 rldp detect-interval

Use this command to configure the interval at which the RLDP sends the detection message on the port. Use the **no** form of this command to restore the default value.

**rldp detect-interval** *interval*

**no rldp detect-interval**

Parameter Description	Parameter	Description
	<i>interval</i>	Detection interval in the range 2 to 15 seconds

**Defaults** 3 seconds.

**Command Mode** Global configuration mode.

**Usage Guide** In the environment where STP is enabled, it is recommended that the product of interval multiplying the maximum number of detections is less than the topology convergence time of STP.

**Configuration Examples** The following example shows how to set the detection interval as 5s:

```
Ruijie(config)# rldp detect-interval 5
```

Related Commands	Command	Description
	<b>rldp detect-max</b>	Sets the maximum number of detections.

**Platform Description** N/A.

### 2.2 rldp detect-max

Use this command to set the maximum number of sending detection packets on the port. If the neighboring port does not respond when this detection number is exceeded, the link is considered faulty. Use the **no** form of this command to restore it to the default value.

**rldp detect-max** *num*

**no rldp detect-max**

Parameter Description	Parameter	Description

<i>num</i>	Maximum number of detections in the range 2 to 10
------------	---

**Defaults** 2.

**Command Mode** Global configuration mode.

**Usage Guide** This command is used together with the detection interval to specify the maximum number of detections.

**Configuration** The following example shows how to set the maximum number of detections as 5:

**Examples** Ruijie(config)# rldp detect-max 5

**Related Commands**

Command	Description
<b>rldp detect-interval</b>	Sets the detection interval.

**Platform Description** N/A.

## 2.3 rldp enable

Use this command to enable RLDP globally. Use the **no** form of this command to disable the function.

**rldp enable**

**no rldp enable**

**Parameter Description**

Parameter	Description
N/A.	N/A.

**Defaults** Disabled.

**Command Mode** Global configuration mode.

**Usage Guide** You can enable RLDP on the interface only when the global RLDP is enabled.

**Configuration** The following example shows how to enable RLDP:

**Examples** Ruijie(config)# rldp enable

**Related Commands**

Command	Description
<b>rldp port</b>	Enables the RLDP function on the port.

**Platform** N/A.

**Description**

## 2.4 rldp neighbor-negotiation

Use this command to enable RLDP neighbor negotiation. Use the **no** form or **default** form of this command to restore the default setting.

**rldp neighbor-negotiation**

**no rldp neighbor-negotiation**

**default rldp neighbor-negotiation**

**Parameter  
Description**

Parameter	Description
N/A.	N/A.

**Defaults** RLDP neighbor negotiation is disabled by default.

**Command  
Mode** Global configuration mode.

**Usage Guide** With neighbor negotiation enabled, RLDP unidirectional-/bidirectional-link detection starts only after the neighbor negotiation is successful. (Receiving the Prob message from the neighbor indicates the neighbor negotiation is successful.)

**Configuration** The following example shows how to enable RLDP neighbor negotiation:

**Examples**

```
Ruijie#config
Ruijie(config)#rldp neighbor-negotiation
```

**Related  
Commands**

Command	Description
<b>rldp port</b>	Enables the RLDP function on the port.

**Platform** N/A.

**Description**

## 2.5 rldp port

Use this command to enable RLDP on the port and specify detection type and troubleshooting method. Use the **no** form of this command to disable the function.

**rldp port { unidirection-detect | bidirection-detect | loop-detect } { warning | shutdown-svi | shutdown-port | block }**

**no rldp port { unidirection-detect | bidirection-detect | loop-detect }**

Parameter Description	Parameter	Description
	<b>unidirection-detect</b>	Sets unidirectional link detection.
	<b>bidirection-detect</b>	Sets bidirectional link detection.
	<b>loop-detect</b>	Sets loop detection type.
	<b>warning</b>	Warns the user.
	<b>shutdown-svi</b>	Shutowns the SVI the port belongs to.
	<b>shutdown-port</b>	Shutowns the port.

**Defaults** N/A

**Command Mode** Interface configuration mode.

**Usage Guide** The RLDP detection on the port takes effect only when the global RLDP is enabled.

**Configuration Examples** The following example shows how to configure RLDP detection on fas 0/1, specify the detection type as loop detection, and troubleshooting method as block.

```
Ruijie(config)# interface fas 0/1
Ruijie(config-if)# rldp port loop-detect block
```

Related Commands	Command	Description
	<b>rldp enable</b>	Enables RLDP globally.

**Platform Description** N/A.

## 2.6 rldp reset

Use this command to make all the ports that have been handled using rldp shutdown or disable to perform RLDP detection again.

**rldp reset**

Parameter Description	Parameter	Description
	N/A.	N/A.

**Defaults** N/A.

**Command Mode** Privileged EXEC mode.

**Usage Guide** N/A.

**Configuration** The example below demonstrates how to use this command:

**Examples** Ruijie# rldp reset

Related Commands	Command	Description
	rldp enable	Enables RLDP globally.

**Platform** N/A.

**Description**

## 2.7 show rldp

Use this command to display the RLDP information.

**show rldp [ interface *interface-id* ]**

Parameter Description	Parameter	Description
	<i>interface-id</i>	Interface ID

**Defaults** N/A.

**Command Mode** Privileged EXEC mode.

**Usage Guide** N/A.

**Configuration** N/A.

**Examples**

Related Commands	Command	Description
	N/A.	N/A.

**Platform** N/A.

**Description**

## 3 DLDP Commands

### 3.1 clear dldp

Use this command to clear statistics about the times that DLDP is down or up at a specified monitoring point for renewing statistics.

**clear dldp** [ **interface** *interface-name* [ *ip-address* ] ]

Parameter	Parameter	Description
Description	<i>interface-name</i>	Name of an Layer 3 interface
	<i>ip-address</i>	IP address of a peer device

**Defaults** N/A

**Command Mode** Privileged EXEC mode

**Usage Guide** DLDP records statistics about the times that DLDP is down or up. You can use this command to clear statistics about the times that DLDP is down or up at a specified monitoring point and renew statistics. If an L3 interface or a device IP address is specified, statistics about the times that DLDP is down or up on the interface at one or all monitoring points will be cleared. If no L3 interface or IP address is specified, statistics about the times that DLDP is down or up at all monitoring points on all interfaces will be cleared.

**Configuration Examples** The following example clears statistics about the times that DLDP is down or up at all monitoring points on all interfaces.

```
Ruijie#clear dldp
```

The following example clears statistics about the times that DLDP is down or up at all monitoring points on the interface *vlan 1*.

```
Ruijie#clear dldp interface vlan 1
```

The following example clears statistics about the times that DLDP is down or up about the peer device 10.83.132.1 on the interface *vlan 1*.

```
Ruijie# clear dldp interface vlan 1 10.83.132.1
```

Related Commands	Command	Description
	N/A	N/A

**Platform Description** N/A

## 3.2 dldp

Use this command to configure DLDP detection.

Use the **no** form of this command to disable this function .

**dldp** *ip-address* [ *next-hop-ip* ] [**mac-address** *mac-addr*] [ **interval** *tick* | **retry** *retry-num* | **resume** *resume-num* ]

**no dldp** *ip-address*

Parameter	Parameter	Description
Description	<i>ip-address</i>	IP address of the peer device to be detected
	<i>next-hop-ip</i>	Next-hop IP address specified when the device to be detected belongs to another different network
	<b>mac-address</b> <i>mac-addr</i>	The bound MAC address. If a next hop exists, its MAC address is configured.
	<b>interval</b> <i>tick</i>	Detection interval. The value range is from 1 to 6,000 in the unit of ticks, where 1 tick is equal to 10 milliseconds. The value must be an integral multiple of five.
	<b>retry</b> <i>retry-num</i>	Number of retry times. The value range is from 1 to 3,600.
	<b>resume</b> <i>resume-num</i>	Number of recovery times of the link to the peer device to be detected, indicating the number of consecutive packets received before a down link turns up. The value range is from 1 to 200.

**Defaults** By default, *tick* is 100, indicating that the detection interval is 1 second.  
The values of *retry-num* and *resume-num* are both 3.

**Command Mode** Interface configuration mode

**Usage Guide** You can use this command to enable DLDP detection to quickly detect Ethernet link faults.  
DLDP detection detects multiple IP addresses on Layer 3 ports. If they respond no ICMP packets, they are considered down; if one of them recovers response, they are considered up.

**Configuration Examples** The following example enables DLDP detection for the device 10.83.132.10.

```
Ruijie#config
Ruijie(config)#interface vlan 1
Ruijie(config-if-VLAN 1)#ip address 10.83.132.1 255.255.255.0
Ruijie(config-if-VLAN 1)#dldp 10.83.132.10
```

The following example enables DLDP detection for the device 10.83.132.10 in another different network segment.

```
Ruijie#config
Ruijie(config)#interface vlan 1
Ruijie(config-if-VLAN 1)#ip address 10.83.132.1 255.255.255.0
Ruijie(config-if-VLAN 1)#dldp 10.83.131.10 10.83.132.2
```

The following example disables DLDP detection for the device 10.83.132.10.

```
Ruijie#config
Ruijie(config)#interface vlan 1
Ruijie(config-if-VLAN 1)#no dldp 10.83.132.10
```

Related Commands	Command	Description
	N/A	N/A

Platform  
Description

N/A

### 3.3 dldp interval

Use this command to set the DLDP detection interval.

Use the **no** form of this command to restore the default setting.

**dldp interval** *tick*

**no dldp interval**

Parameter Description	Parameter	Description
	<i>tick</i>	Detection interval (in ticks), in the range from 5 to 6,000. The value must be a multiple of 5. (1tick = 10 milliseconds)

Defaults      The default is 10 ticks (100 ms).

Command  
Mode      Global configuration mode

**Usage Guide**      This command is used to set the DLDP detection interval.

If a device does not receive the reply packets from the peer device within the specific period (the time of this period is equal to that of the *detection packet retransmission interval* multiplied by the *retry count*), the device takes the L3 port as DOWN (though the physical link is up). Once the device receives the reply packets from the peer device, the device takes the L3 port as UP.

**Configuration Examples**      The following example sets the DLDP detection interval to 20 ticks.

```
Ruijie#config
Ruijie(config)#dldp interval 20
```

Related Commands	Command	Description
	N/A	N/A

Platform  
Description

N/A



### 3.4 dldp passive

Use this command to set DLDP to the passive mode.

Use the **no** form of this command to restore the default setting.

**dldp passive**

**no dldp passive**

Parameter	Parameter	Description
Description	N/A	N/A

**Defaults** The default is the active mode.

**Command Mode** Interface configuration mode

**Usage Guide** If DLDP is enabled on devices at both ends of a link on a network and ICMP Echo packets are sent to each other for link detection, excessive packets exist between the two devices. If only one device sends ICMP Echo packets to the peer device on which the same detection parameters are configured, the peer device can detect whether the packets arrive in time and whether the link between them is normal. This method saves bandwidth and CPU resources.

You can set DLDP to the active mode for one device to initiate ICMP Echo packets, and set DLDP to the passive mode for the other device to passively receive the packets.

The following example sets DLDP to the passive mode.

**Configuration Examples**

```
Ruijie#config
Ruijie(config)#interface vlan 1
Ruijie(config-if-VLAN 1)#ip address 10.83.132.1 255.255.255.0 //Set an IP
address for vlan1.
Ruijie(config-if-VLAN 1)#dldp passive
```

Related Commands	Command	Description
	N/A	N/A

**Platform Description** N/A

### 3.5 ldp resume

Use this command to set the DLDP recovery count.

Use the **no** form of this command to restore the default setting.

**dldp resume** *resume-num*

**no dldp resume**

Parameter	Parameter	Description
Description	<i>resume-num</i>	Recovery count of the peer device link, in the range from 1 to 200.  The parameter indicates the number of DLDP detection packets received consecutively from the peer device before the link status goes from DOWN to UP.
Defaults	The default is 3.	
Command Mode	Global configuration mode	
Usage Guide	This command is used to set the DLDP recovery count.	
Configuration Examples	The following example sets the DLDP recovery count to 4.	
	<pre>Ruijie#config Ruijie(config)#dldp resume 4</pre>	
Related Commands	Command	Description
	N/A	N/A
Platform Description	N/A	

### 3.6 dldp retry

Use this command to set the DLDP retry count.

Use the **no** form of this command to restore the default setting.

**dldp retry** *retry-num*

**no dldp retry**

<b>Parameter</b>	<b>Parameter</b>	<b>Description</b>
<b>Description</b>	<i>retry-num</i>	Retry count, in the range from 1 to 3,600
<b>Defaults</b>	The default is 3.	
<b>Command Mode</b>	Global configuration mode	
<b>Usage Guide</b>	This command is used to set the DLDP retry count.	
<b>Configuration Examples</b>	The following example sets the DLDP retry count to 4.	
	<pre>Ruijie#config Ruijie(config)#dldp retry 4</pre>	

Related	Command	Description
Commands	N/A	N/A

Platform  
Description

N/A

### 3.7 show dldp

Use this command to display DLDP configuration information or statistics at various monitoring points.

**show dldp** [ **interface** *interface-name* ] [ **statistic** ]

Parameter	Parameter	Description
Description	<i>interface-name</i>	Name of an L3 interface
	<b>statistic</b>	Statistics

Defaults

N/A

Command  
Mode

Privileged EXEC mode

**Usage Guide** You can use this command with the keyword **statistics** to display statistics at all monitoring points on all interfaces or a specific Layer 3 interface. If a Layer 3 interface is specified, this command displays DLDP configuration and statistics at all monitoring points on the Layer 3 interface.

**Configuration Examples** The following example displays DLDP configuration information at all monitoring points on all interfaces.

```
Ruijie#show dldp
Interface  Type      Ip      Next-hop  Interval  Retry  Resume  State
-----
V12       Passive  192.168.6.3  192.168.2.2  10      5      3      Up
V13       Passive  192.168.7.3      10      5      3      Up
V14       Passive  192.168.3.3  192.168.4.2  10      5      3      Up
```

The following example displays DLDP configuration information at all monitoring points on the Layer 3 interface *vlan 2*.

```
Ruijie#show dldp interface vlan2
Interface  Type      Ip      Next-hop  Interval  Retry  Resume  State
-----
V12       Passive  192.168.6.3  192.168.2.2  10      5      3      Up
```

The following example displays DLDP statistics at all monitoring points on all interfaces.

```
Ruijie#show dldp statistic
```

Interface	Type	Ip	record-time	Up-count	Down-count
Vl2	Passive	192.168.6.3	2h34m5s	10	9
Vl4	Passive	192.168.3.3	1d2h3m52s	10	9

The following example displays DLDP statistics at all monitoring points on the Layer 3 interface *vlan 2*.

```
Ruijie#show dldp statistic interface vlan 2
```

Interface	Type	Ip	record-time	Up-count	Down-count
Vl2	Passive	192.168.6.3	2h34m5s	10	9

Field	Description
record-time	Time length for recording the number of times that DLDP is up or down. The time is displayed in *y***d**h**m**s format: y: year d: day h: hour m: minute s: second  Using the <i>Up-count</i> and <i>Down-count</i> parameters, you can check statistics about the number of times that DLDP is up or down within this time length.
Up-count	Number of times that DLDP is up at the specific monitoring point
Down-count	Number times that DLDP is down at the specific monitoring point

**Related  
Commands**

Command	Description
N/A	N/A

**Platform  
Description**

N/A

## 4 IP Event Dampening Commands

### 4.1 dampening

Use this command to enable the IP event dampening function on the interface. Use the **no** or **default** form of this command to disable this function.

**dampening** [ *half-life-period* [ *reuse-threshold* *suppress-threshold* *max-suppress* [ **restart** [ *restart-penalty* ] ] ] ]

**no dampening**

**default dampening**

Parameter Description	Parameter	Description
	<i>half-life-period</i>	Configures the half-life period of suppression penalty. The range is from 1 to 30. The unit is seconds. The default value is 5 seconds.
	<i>reuse-threshold</i>	Configures the penalty threshold to unsuppress the interface. The range is from 1 to 20,000. The default value is 1,000.
	<i>suppress-threshold</i>	Configures the penalty threshold to suppress the interface. The range is from 1 to 20,000. The default value is 2,000.
	<i>max-suppress</i>	Configures the maximum suppress time. The range is from 1 to 255. The default value is 4 times of the <i>half-life-period</i> .
	<b>restart-penalty</b>	Configures the initial penalty value on the interface. The range is from 1 to 20,000. The default value is 2,000.

**Defaults** IP event dampening is disabled by default.

**Command mode** Interface configuration mode.

**Usage Guide** This function will influence the modules of the directly-connected/host route, static route, dynamic route and VRRP. If one interface meets the configuration condition of this command, which is in the suppression status, the above influenced modules consider the status of this interface as DOWN, so as to delete the corresponding route and not transceive the data packets on this interface.

Re-configuring the dampening command on the interface that has been configured this command makes all dampening information on this interface cleared. However, the interface flapping times will be remained unless use the clear counters command to clear the statistical information of the interface.

**Configuration** The following example configures the IP event dampening function.

**Examples**

```
Ruijie(config)#interface gigabitEthernet 0/1
Ruijie(config-if-GigabitEthernet 0/1)# no switchport
Ruijie(config-if-GigabitEthernet 0/1)# dampening 30 1500 10000 100
```

Related Commands	Command	Description
	<b>clear counters</b>	Clears the interface counters.
	<b>show dampening interface</b>	Displays the statistics of the dampening interface.
	<b>show interface dampening</b>	Displays details of the dampening interface.

**Platform** When a Layer-3 port on a switch is converted to a Layer-2 port (for example, from a routed port to a switch port), the IP Event Dampening configuration on the port will be deleted.

**Description**

## 4.2 show dampening interface

Use this command to show the statistics of the dampening interface.

**show dampening interface**

Parameter Description	Parameter	Description
	N/A	N/A

**Defaults** N/A

**Command mode** Privileged EXEC mode/ global configuration mode/ interface configuration mode

**Usage Guide** N/A

**Configuration** The following example displays the statistics of the dampening interface.

**Examples**

```
Ruijie# show dampening interface
3 interfaces are configured with dampening.
No interface is being suppressed.
```

Related Commands	Command	Description
	<b>dampening</b>	Enables the IP event dampening function on the interface.
	<b>clear counters</b>	Clears the interface counters.
	<b>show interface dampening</b>	Displays details of IP event dampening configuration.

**Platform** N/A

**Description**

## 4.3 show interface dampening

Use this command to display the details of IP event dampening configuration.

**show interface** [ *interface-id* ] **dampening**

Parameter Description	Parameter	Description
	<i>interface-id</i>	Interface name

**Defaults** N/A

**Command mode** Privileged EXEC mode/ global configuration mode/ interface configuration mode

**Usage Guide** If the interface-id is specified, only the dampening information of this specified interface is displayed.

**Configuration** The following example shows the details of IP event dampening configuration.

**Examples**

```
Ruijie# show interface dampening Ethernet1/0
Flaps   Penalty  Supp  ReuseTm  HalfL  ReuseV  SuppV  MaxSTm  MaxP  Restart
0       0        FALSE 0        5     1000   2000   20     16000  0
```

Domain	Description
Flaps	Interface flapping times.
Penalty	The current penalty value on the interface.
Supp	Suppressed or not.
ReuseTm	Time to unsuppress the interface, in seconds.
HalfL	Half-life period, in seconds.
ReuseV	Unsuppressed threshold.
SuppV	Start suppression threshold.
MaxSTm	Maximum suppression time.
MaxP	Maximum penalty value.
Restart	The initial penalty value on the interface.

Related Commands	Command	Description
	<b>dampening</b>	Enables the IP event dampening function.
	<b>clear counters</b>	Clears the interface counters.
	<b>show dampening interface</b>	Displays statistics of the dampening interface.

**Platform** N/A  
**Description**

## 5 VSU Commands

### 5.1 dad relay enable

Use this command to enable the Dual-Active Detection (DAD) relay function.

Use the **no** form of this command to restore the default setting.

**dad relay enable**

**no dad relay enable**

Parameter	Parameter	Description
Description	N/A	N/A

**Defaults** This function is disabled by default.

**Command Mode** Interface configuration mode

**Usage Guide** This command is only supported on the aggregate port (AP).

**Configuration** The following example enables the AP-based DAD relay function.

**Examples**

```
Ruijie(config)#interface aggregateport 1
Ruijie(config-if-AggregatePort 1)#dad relay enable
```

The following example disables the AP-based DAD relay function.

```
Ruijie(config)#interface aggregateport 1
Ruijie(config-if-AggregatePort 1)#no dad relay enable
Ruijie(config-if-AggregatePort 1)#exit
```

Related Commands	Command	Description
	<b>dual-active detection</b>	Configures DAD.
	<b>dual-active pair interface</b>	Configures a pair of Bidirectional Forwarding Detection (BFD)-based DAD interfaces.
	<b>dual-active exclude interface</b>	Configures an exclude interface of DAD.
	<b>show switch virtual dual-active</b>	Displays the configuration and status of DAD.

**Platform** N/A

**Description**

### 5.2 dual-active bfd interface

Use this command to configure a BFD port.

Use the **no** form of this command to remove the setting.



**dual-active bfd interface** *interface-name*  
**no dual-active bfd interface** *interface-name*

Parameter	<table><tr><th>Parameter</th><th>Description</th></tr><tr><td><i>interface-name</i></td><td>Interface name</td></tr></table>	Parameter	Description	<i>interface-name</i>	Interface name
Parameter	Description				
<i>interface-name</i>	Interface name				
Description					
Defaults	N/A				
Command Mode	config-vs-domain configuration mode				
Usage Guide	The BFD port must be a routing port on the peer end.				
Configuration Examples	<p>The following examples configures interface Gi 1/1/1 as a BFD port.</p> <pre>Ruijie(config)# interface GigabitEthernet 1/1/1 Ruijie(config-if- GigabitEthernet 1/1/1)# no switchport Ruijie(config)# interface GigabitEthernet 2/1/1 Ruijie(config-if- GigabitEthernet 2/1/1)# no switchport Ruijie(config)# switch virtual domain 1 Ruijie(config-vs-domain)# dual-active bfd interface GigabitEthernet 1/1/1 Ruijie(config-vs-domain)# dual-active bfd interface GigabitEthernet 2/1/1</pre>				
Related Commands	<table><tr><th>Command</th><th>Description</th></tr><tr><td>N/A</td><td>N/A</td></tr></table>	Command	Description	N/A	N/A
Command	Description				
N/A	N/A				
Platform	N/A				
Description					

## 5.3 dual-active detection

Use this command to enable DAD.

Use the **no** form of this command to restore the default setting.

**dual-active detection { bfd | aggregateport }**  
**no dual-active detection { bfd | aggregateport }**

Parameter	<table><tr><th>Parameter</th><th>Description</th></tr><tr><td><b>bfd</b></td><td>BFD-based DAD</td></tr><tr><td><b>aggregateport</b></td><td>AP-based DAD</td></tr></table>	Parameter	Description	<b>bfd</b>	BFD-based DAD	<b>aggregateport</b>	AP-based DAD
Parameter	Description						
<b>bfd</b>	BFD-based DAD						
<b>aggregateport</b>	AP-based DAD						
Description							
Defaults	This function is disabled by default.						
Command Mode	config-vs-domain configuration mode						
Usage Guide	Configure this command only in virtual switch unit (VSU) mode.						

**Configuration** The following example enables BFD-based DAD.

**Examples**

```
Ruijie(config)# switch virtual domain 1
Ruijie(config-vs-domain)# dual-active detection bfd
```

The following example disables BFD-based DAD.

```
Ruijie(config)# switch virtual domain 1
Ruijie(config-vs-domain)# no dual-active detection bfd
```

The following example enables AP-based DAD.

```
Ruijie(config)# switch virtual domain 1
Ruijie(config-vs-domain)# dual-active detection aggregateport
```

The following example disables AP-based DAD.

```
Ruijie(config)# switch virtual domain 1
Ruijie(config-vs-domain)#no dual-active detection aggregateport
```

**Related  
Commands**

Command	Description
<b>dual-active pair interface</b>	Configures a DAD interface.
<b>dual-active exclude interface</b>	Configures an exclude interface of DAD.
<b>show switch virtual dual-active</b>	Displays the configuration and status of DAD.

**Platform** N/A  
**Description**

## 5.4 dual-active exclude interface

Use this command to configure an exclude interface of DAD.

Use the **no** form of this command to remove the exclude interface setting.

**dual-active exclude interface** *interface-name*

**no dual-active exclude interface** *interface-name*

Parameter	Parameter	Description
<b>Description</b>	<i>interface-name</i>	Interface name

**Defaults** N/A

**Command Mode** config-vs-domain configuration mode

**Usage Guide** Configure this command only in VSU mode.  
An exclude interface must be a routing interface instead of a virtual switch link (VSL) interface.  
Multiple exclude interfaces are supported.

**Configuration** The following example configures interface Gi 1/1/3 as an exclude interface of DAD.

**Examples**

```
Ruijie(config)# interface GigabitEthernet 1/0/3
Ruijie(config-if- GigabitEthernet 1/0/3)# no switchport
Ruijie(config)# switch virtual domain 1
Ruijie(config-vs-domain)# dual-active exclude interface GigabitEthernet
1/0/3
```

**Related  
Commands**

Command	Description
<b>dual-active detection</b>	Configures DAD.
<b>dual-active pair interface</b>	Configures a DAD interface.
<b>show switch virtual dual-active</b>	Displays the configuration and status of DAD.

**Platform**

N/A

**Description**

## 5.5 dual-active interface

Use this command to configure an AP-based DAD interface.

Use the **no** form of this command to remove the setting.

**dual-active interface** *interface-name*

**no dual-active interface**

**Parameter  
Description**

Parameter	Description
<i>interface-name</i>	Interface type and interface number. An AP-based DAD interface must be specified.

**Defaults**

N/A

**Command Mode**

config-vs-domain configuration mode

**Usage Guide**

Only one AP-based detection interface can be configured. Create an AP-based interface before setting it to a detection interface. The previous detection interface will be overwritten by the current detection interface.

**Configuration  
Examples**

The following example configures AP 1 as the AP-based detection interface.

```
Ruijie(config)# interface aggregateport 1
Ruijie(config-if-AggregatePort 1)#exit
Ruijie(config)# switch virtual domain 1
Ruijie(config-vs-domain)# dual-active interface aggregateport 1
```

**Related  
Commands**

Command	Description
<b>dual-active detection</b>	Configures BFD-/AP-based DAD.
<b>show switch virtual dual-active</b>	Displays the configuration and status of DAD.

**Platform** N/A

**Description**

## 5.6 port-member interface

Use this command to add a VSL-AP member interface.

Use the **no** form of this command to delete a VSL-AP member interface.

**port-member interface** *interface-name* [ **copper** | **fiber** ]


**no port-member interface** *interface-name*


Parameter	Parameter	Description
Description	<i>interface-name</i>	Interface name, for example, GigabitEthernet 0/1 and GigabitEthernet 0/3.
	<b>copper</b>	Copper port
	<b>fiber</b>	Fiber port

**Defaults** N/A


**Command Mode** config-vsl-port configuration mode


**Usage Guide** Configure this command in VSU mode or in standalone mode.

 The VSL interface can be the 10 Gigabit interface or Gigabit interface. (The Gigabit interface can be an optical-copper combo interface. If the media type is not specified, the Gigabit copper interface is adopted by default.) For an optical-copper combo interface, you must specify its optical or copper interface attribute.

 For chassis devices, VSL interfaces must be optical interfaces of 10 Gigabit or higher; for box devices, VSL interfaces can be optical and copper interfaces of Gigabit or higher.

 Modules on chassis devices must be modules of 10 Gigabit or higher.

 40G one-to-four interfaces cannot be configured as VSL interfaces.

 If an interface has been configured as an NLB reflex interface, this interface can be shifted to a VSL member interface only after the NLB reflex interface configuration is deleted.

**Configuration Examples** The following example adds and deletes a VSL-AP member port in standalone mode.

```
Ruijie(config)# vsl-port
Ruijie(config-vsl-port)# port-member interface GigabitEthernet 0/1
Ruijie(config-vsl-port)# no port-member interface GigabitEthernet 0/2
```

The following example adds and deletes a VSL-AP member port in VSU mode.

```
Ruijie(config)# vsl-port
Ruijie(config-vsl-port)# port-member interface GigabitEthernet 1/0/1
Ruijie(config-vsl-port)# no port-member interface GigabitEthernet 1/0/1
```

Related Commands	Command	Description
	N/A	N/A

Platform  
Description

N/A

## 5.7 show switch id

Use this command to display the device ID.

**show switch id**

Parameter Description	Parameter	Description
	N/A	N/A

Defaults

N/A

Command Mode

Privileged EXEC mode

Usage Guide

N/A

Configuration  
Examples

The following example displays the device ID in the standalone mode.

```
Ruijie#show switch id
Switch ID is 2
```

The following example displays the device ID in the VSU device.

```
Ruijie#show switch id
Switch ID is 1
```

Related Commands	Command	Description
	<b>show switch virtual</b>	Displays the domain ID as well as the ID and role of each chassis.

Platform  
Description

N/A

## 5.8 show switch virtual

Use this command to display the domain ID as well as the ID, status and role of the device.

**show switch virtual**

Parameter Description	Parameter	Description
	N/A	N/A

**Defaults** N/A

**Command Mode** Privileged EXEC mode

**Usage Guide** N/A

**Configuration Examples** The following example displays the domain ID as well as the ID, status and role of the device in standalone mode.

```
Ruijie# show switch virtual
Current system is running in "STANDALONE" mode.
```

The following example displays the domain ID as well as the ID, status and role of each device in VSU mode.

```
Ruijie#show switch virtual
Switch_id      Domain_id      Priority      Status      Role      Description
-----
--
1 (1)          1 (1)          100 (100)    OK          ACTIVE    switch-1
2 (2)          1 (1)          100 (100)    OK          CANDIDATE switch-2
3 (3)          1 (1)          100 (100)    OK          STANDBY   switch-3
```

**Related Commands**

Command	Description
<b>switch</b>	Modifies the device ID in standalone mode.
<b>switch priority</b>	Configures the device priority.
<b>switch renumber</b>	Modifies the device ID in VSU mode.
<b>switch domain</b>	Modifies the domain ID of a device in VSU mode.
<b>switch virtual domain</b>	Modifies the domain ID of a device in standalone mode.

**Platform Description** N/A

## 5.9 show switch virtual balance

Use this command to display the load balance configuration in VSU mode.

**show switch virtual balance**

Parameter	Parameter	Description
<b>Description</b>	N/A	N/A

**Defaults** N/A

**Command Mode** Privileged EXEC mode

**Usage Guide** N/A

**Configuration** The following example displays the load balance configuration of the device in VSU mode.

**Examples**

```
Ruijie#show switch virtual balance
Aggregate port LFF: enable
```

**Related  
Commands**

Command	Description
<b>show switch virtual</b>	Displays the domain ID as well as the ID and role of the device.

Platform  
Description N/A

## 5.10 show switch virtual config

Use this command to display the VSU configuration of the device in standalone or VSU mode.

**show switch virtual config** [ *switch\_id* ]

**Parameter  
Description**

Parameter	Description
<i>switch_id</i>	Displays the VSU configuration of the specified device.

**Defaults** N/A

**Command Mode** Privileged EXEC mode

**Usage Guide** N/A

**Configuration** The following example displays the VSU configuration of the device in standalone mode.

**Examples**

```
Ruijie#show switch virtual config
mac: 00d0.f810.3323
!
switch virtual domain 1
!
switch 1
switch 1 priority 200
!
vsl-port
port-member interface GigabitEthernet 0/1
port-member interface GigabitEthernet 0/2
!
switch convert mode standalone
!
```

The following example displays the VSU configuration of the device in VSU mode.

```
Ruijie#show switch virtual config
switch id: 1 (mac: 00d0.f810.1111)
!
switch virtual domain 1
!
switch 1
switch 1 priority 200
switch 1 description switch1
!
vsl-port
port-member interface GigabitEthernet 0/1
port-member interface GigabitEthernet 0/2
!
Switch convert mode virtual
!

switch_id: 2 (mac: 00d0.f810.2222)
!
switch virtual domain 1
!
switch 2
switch 2 priority 100
!
vsl-port
port-member interface GigabitEthernet Ethernet 0/1
port-member interface GigabitEthernet 0/2
!
Switch convert mode virtual
!
```

The following example displays the VSU configuration of the device 1 in VSU mode.

```
Ruijie#show switch virtual config 1
switch_id: 1 (mac: 00d0.f810.1111)
!
switch virtual domain 1
!
switch 1
switch 1 priority 200
switch 1 description switch1
!
vsl-port
port-member interface GigabitEthernet 0/1
port-member interface GigabitEthernet 0/2
```



```
!
```

**Related  
Commands**

Command	Description
<b>show switch virtual</b>	Displays the domain ID as well as the ID and role of each chassis.

**Platform  
Description**

N/A

## 5.11 show switch virtual dual-active

Use this command to display the configuration of DAD.

**show switch virtual dual-active { bfd | aggregateport | summary }**

**Parameter  
Description**

Parameter	Description
<b>bfd</b>	Configuration of BFD-based DAD
<b>aggregateport</b>	Configuration of AP-based DAD
<b>summary</b>	Configuration and status of DAD

**Defaults**

N/A

**Command Mode**

Privileged EXEC mode

**Usage Guide**

N/A

**Configuration**

The following example displays the configuration and status of DAD.

**Examples**

```
Ruijie# show switch virtual dual-active summary
BFD dual-active detection enabled: Yes
Aggregateport dual-active detection enabled: No
Interfaces excluded from shutdown in recovery mode:
GigabitEthernet 1/0/3
GigabitEthernet 1/0/4
In dual-active recovery mode: No
```

The following example displays the configuration of BFD-based DAD.

```
Ruijie# show switch virtual dual-active bfd
BFD dual-active detection enabled: Yes
BFD dual-active interface configured:
  GigabitEthernet 1/0/1: UP
  GigabitEthernet 2/0/2: UP
```

The following example displays the status of AP-based DAD.

```
Ruijie# show switch virtual dual-active aggregateport
Aggregateport dual-active detection enabled: Yes
Aggregateport dual-active interface configured:
```

```
AggregatePort 1:  UP
    GigabitEthernet 1/0/1:  UP
    GigabitEthernet 2/0/1:  UP
    GigabitEthernet 1/0/2:  UP
    GigabitEthernet 2/0/2:  UP
DAD relay enable AP list:
    AggregatePort 1
```

**Related  
Commands**

Command	Description
<b>dual-active detection</b>	Enables DAD.
<b>dual-active pair interface</b>	Configures a DAD interface.
<b>dual-active exclude interface</b>	Configures an exclude interface.

**Platform**

N/A

**Description**

## 5.12 show switch virtual link

Use this command to display the status of a virtual switch link (VSL).

**show switch virtual link [ port ]**

**Parameter  
Description**

Parameter	Description
<b>port</b>	Displays the port status of a VSL.

**Defaults**

N/A

**Command Mode**

Privileged EXEC mode

**Usage Guide**

N/A

**Configuration**

The following example displays VSL link information.

**Examples**

```
Ruijie# show switch virtual link
VSL-AP  State  Peer-VSL      Rx      Tx      Uptime
-----
1/1      UP      2/1           100000  100000  1d,4h,29m
2/1      UP      1/1           100000  100000  1d,4h,29m
```

The following example displays VSL port information.

```
Ruijie# show switch virtual link port

switch 1:
Port              AP  State      Peer-port      Rx      Tx
Uptime
```

```

-----
-----
GigabitEthernet 1/0/1  1  OK   GigabitEthernet 2/0/1  9000 9000
      0d,0h,20m
GigabitEthernet 1/0/2  2  OK   GigabitEthernet 2/0/2  9000 9000
      0d,0h,20m

Switch 2:
Port                AP  State    Peer-port                Rx    Tx
      Uptime
-----
-----
GigabitEthernet 2/0/1  1  OK   GigabitEthernet 1/0/1  9000 9000
      0d,0h,20m
GigabitEthernet 2/0/2  2  OK   GigabitEthernet 1/0/2  9000 9000
      0d,0h,20m

```

#### Related Commands

Command	Description
<b>show switch virtual</b>	Displays information about the VSU system.
<b>show switch virtual role</b>	Displays the ID, role, and priority of each device.

#### Platform Description

N/A

## 5.13 show switch virtual role

Use this command to display the ID, role, and priority of each chassis.

#### show switch virtual role

#### Parameter Description

Parameter	Description
N/A	N/A

#### Defaults

N/A

#### Command Mode

Privileged EXEC mode

#### Usage Guide

N/A

#### Configuration Examples

The following example displays the domain ID as well as the ID, status and role of the device in standalone mode.

```

Ruijie# show switch virtual
Current system is running in "STANDALONE" mode.

```

The following example displays the domain ID as well as the ID, status and role of each device in

VSU mode.

```
Ruijie#show switch virtual
Switch_id      Domain_id      Priority      Status      Role      Description
-----
--
1 (1)          1 (1)          100 (100)    OK          ACTIVE    switch-1
2 (2)          1 (1)          100 (100)    OK          CANDIDATE switch-2
3 (3)          1 (1)          100 (100)    OK          STANDBY   switch-3
```

**Related  
Commands**

Command	Description
<b>switch priority</b>	Configures the priority of a device in the VSU system.
<b>switch virtual domain</b>	Modifies the domain ID of a device in standalone mode.
<b>show switch virtual link</b>	Displays VSL information.

**Platform**

N/A

**Description**

## 5.14 show switch virtual topology

Use this command to display the VSU topology connection status.

**show switch virtual topology**

**Parameter  
Description**

Parameter	Description
N/A	N/A

**Defaults**

N/A

**Command Mode**

Privileged EXEC mode

**Usage Guide**

N/A

**Configuration**

The following example displays the topology status.

**Examples**

```
Ruijie# show switch virtual topology
Introduction: '[num]' means switch num, '(num/num)' means vsl-aggregateport
num.

Chain Topology:
[1] (1/2) --- (2/1) [2]

Switch[1]: ACTIVE, MAC: 00d0.f822.33d6, Description: Switch1
Switch[2]: STANDBY, MAC: 1234.5678.9003, Description: Switch2
```

Field Description

Field	Description
Ring Topology	Topology type.

Switch[-]	Device description.
-----------	---------------------

**Related  
Commands**

Command	Description
N/A	N/A

**Platform  
Description**

N/A

## 5.15 switch


Use this command to specify the ID of a device in the VSU system.

Use the **no** form of this command to restore the default setting.

**switch** *switch\_id*

**no switch**

**Parameter  
Description**

Parameter	Description
<i>switch_id</i>	ID of a device in the VSU system
	 The range depends on products.

**Defaults**

The default is 1.

**Command Mode**

config-vs-domain configuration mode

**Usage Guide**

The device ID identifies each virtual device member. In VSU mode, the interface name format changes to "switch/slot/port" from "slot/port", in which "switch" is the device ID.

If either chassis are active or if the role of the just started chassis is uncertain and both have the same priority, the chassis with a smaller ID is elected as the active one.

This command can be only used to modify the device ID in standalone mode. In VSU mode, run the **switch renumber** command to modify the device ID. The modified device ID takes effect only after you restart the device, regardless of in standalone mode or in VSU mode.

**Configuration  
Examples**

The following example sets the ID of the device whose domain ID is 1 to 2 in the VSU system.

```
Ruijie(config)# switch virtual domain 1
Ruijie(config-vs-domain)# switch 2
Ruijie(config-vs-domain)# exit
```

**Related  
Commands**

Command	Description
<b>switch virtual domain</b>	Modifies the domain ID of a device in standalone mode.
<b>switch priority</b>	Configures the priority of a device in the VSU system.
<b>show switch virtual</b>	Displays the domain ID as well as the ID and role of each chassis.

**Platform**

N/A

## Description

## 5.16 switch convert mode

Use this command to perform conversion between the standalone mode and the VSU mode.

**switch convert mode** { **virtual** | **standalone** } [ *switch\_id* ]

Parameter	Parameter	Description
Description	<b>virtual</b>	VSU mode
	<b>standalone</b>	Standalone mode
	<i>switch_id</i>	Device ID

**Defaults** The device is in standalone mode by default.

**Command Mode** Privileged EXEC mode

**Usage Guide** After you run the **switch convert mode virtual** command, the software automatically backs up the configuration file in standalone mode, saves it as a **standalone.text** file, and then deletes the **config.text** file. The software also prompts you whether to use the **virtual\_switch.text** file to overwrite the **config.text** file, write the VSU-related configurations to the **config\_vsu\_dat** file, and then restart the device.

After you run the **switch convert mode standalone** command, the active chassis automatically backs up the configuration file in VSU mode, saves it as a **virtual\_switch.text** file, and then deletes the **config.text** file. The active chassis also prompts you whether to use the **standalone.text** file to overwrite the **config.text** file and restart the device.

The **switch convert mode** command can be used in standalone mode or in VSU mode. In standalone mode, this command is used to switch the mode of the current chassis. In VSU mode, this command is used to switch the mode of the device specified by **switch\_id** if **switch\_id** is available and to switch the mode of the active device if **switch\_id** is not available.

You are advised to first switch the mode of the standby device and then the mode of the active mode.

**Configuration** The following example converts the device mode from the standalone mode into the VSU mode.

**Examples** Ruijie# switch convert mode virtual

The following example switches the modes of the standby device (**switch\_id** set to **2**) and the active device (**switch\_id** set to **1**) from the VSU mode to the standalone mode.

```
Ruijie# switch convert mode standalone 2
Ruijie# switch convert mode standalone 1
```

Related Commands	Command	Description
	<b>switch</b>	Modify the device ID in standalone mode.
	<b>switch virtual domain</b>	Modify the domain ID of a device in standalone mode.
	<b>switch priority</b>	Configure the priority of a device in the VSU system.

<b>show switch virtual</b>	Display the domain ID as well as the ID and role of each chassis.
----------------------------	---

**Platform**  
**Description**

N/A

## 5.17 switch crc

Use this command to configure parameters for frame error detection.

Use the **no** form of this command to restore the default setting.

**switch crc errors** *error\_num* **times** *time\_num*

**no switch crc**

Parameter	Parameter	Description
<b>Description</b>	<i>error_num</i>	Limits the number of error frames increasing from that in the last detection. If the increased number is greater than <i>error_num</i> , it is taken as an error.
	<i>time_num</i>	When the error count exceeds the <i>time_num</i> , the device will take actions (prompting a message or disabling the port).

**Defaults**

The default *error\_num* is 3.  
The default *time\_num* is 10.

**Command Mode** config-vs-domain configuration mode

**Usage Guide** N/A

**Configuration Examples** The following example sets the *error\_time* and *time\_num* parameters to 10 and 5 respectively.

```
Ruijie(config)# switch virtual domain 1
Ruijie(config-vs-domain)#
Ruijie(config-vs-domain)#switch crc errors 10 times 5
```

Related Commands	Command	Description
	N/A	N/A

**Platform**  
**Description**

N/A

## 5.18 switch description

Use this command to configure the description for a VSU switch.

Use the **no** form of this command to remove the setting.

**switch** *switch\_id* **description** *dev-name*

**no switch** *switch\_id* **description**

Parameter Description	<b>Parameter</b>	<b>Description</b>
	<i>switch_id</i>	Device ID
	<i>dev_name</i>	Device description, no greater than 32 characters.
Defaults	N/A	
Command Mode	config-vs-domain configuration mode	
Usage Guide	This command is configured on a device in whether standalone or VSU mode and takes effect immediately after configuration,	
Configuration Examples	The following example configures the description for a VSU switch. <pre>Ruijie(config)# switch virtual domain 1 Ruijie(config-vs-domain)# switch 1 description buildingA Ruijie(config-vs-domain)# exit</pre>	
Related Commands	<b>Command</b>	<b>Description</b>
	N/A	N/A
Platform Description	N/A	


## 5.19 switch domain

Use this command to modify the domain ID of a device in VSU mode.

Use the **no** form of this command to restore the default setting.

**switch** *switch\_id* **domain** *new\_domain\_id*

**no switch** *switch\_id* **domain**

Parameter Description	<b>Parameter</b>	<b>Description</b>
	<i>switch_id</i>	ID of the running device in VSU mode.   The range depends on products. For details, see the <i>Configuration Guide</i> .
	<i>new_domain_id</i>	New domain ID, in the range from 1 to 255.

Defaults	The default <i>new_domain_id</i> is 100 by default.	
Command Mode	config-vs-domain configuration mode	
Usage Guide	Use this command only in VSU mode. In addition, the setting can take effect only after the device is restarted.	



**Configuration** The following example sets the domain ID of device 1 to 10 in VSU mode.

**Examples**

```
Ruijie(config)# switch virtual domain 1
Ruijie(config-vs-domain)# switch 1 domain 10
```

The following example sets the domain ID of device 2 to 10 in VSU mode.

```
Ruijie(config)# switch virtual domain 1
Ruijie(config-vs-domain)# switch 2 domain 10
```

The following example sets the domain ID of device 2 to the default value in VSU mode.

```
Ruijie(config)# switch virtual domain 1
Ruijie(config-vs-domain)# no switch 2 domain
```

**Related  
Commands**

Command	Description
<b>switch virtual domain</b>	Modifies the domain ID in standalone mode.
<b>show switch virtual</b>	Displays the domain ID as well as the ID and role of each chassis.

**Platform  
Description**

N/A

## 5.20 switch priority


Use this command to configure the priority of a device in the VSU system.

Use the **no** form of this command to restore the default setting.

**switch** *switch\_id* **priority** *priority\_num*

**no switch** *switch\_id* **priority**

**Parameter  
Description**

Parameter	Description
<i>switch_id</i>	ID of a device in the VSU system.   The range depends on products. For details, see the <i>Configuration Guide</i> .
<i>priority_num</i>	Priority of a device in the VSU system, ranging from 1 to 255.

**Defaults**

The default *priority\_num* is 100.

**Command Mode**

config-vs-domain configuration mode

**Usage Guide**

A larger value means a higher priority. The chassis with a higher priority is elected as the active chassis.

You can use this command in standalone mode or in VSU mode. The modified priority takes effect only after you restart the device.

In VSU mode, **switch\_id** indicates the ID of the running device. If the ID does not exist, the configuration does not effect.

**Configuration** The following example sets the priority of device 1 to **200**.

**Examples**

```
Ruijie(config)# switch virtual domain 1
Ruijie(config-vs-domain)# switch 1 priority 200
Ruijie(config-vs-domain)# exit
```

The following example sets the priority of device 1 to **200** and restores the priority of device 2 to the default value in VSU mode.

```
Ruijie(config)# switch virtual domain 1
Ruijie(config-vs-domain)# switch 1 priority 200
Ruijie(config-vs-domain)# no switch 2 priority
Ruijie(config-vs-domain)# exit
```

**Related  
Commands**

Command	Description
<b>switch</b>	Modifies the device ID in standalone mode.
<b>show switch virtual</b>	Displays the domain ID as well as the ID and role of each chassis.

**Platform  
Description** N/A

## 5.21 switch renumber



Use this command to modify the ID of any device in VSU mode.

Use the **no** form of this command to restore the default setting.

**switch** *switch\_id* **renumber** *new\_switch\_id*

**no switch** *switch\_id*

**Parameter  
Description**

Parameter	Description
<i>switch_id</i>	ID of the running device in VSU mode   The range depends on products. For details, see the <i>Configuration Guide</i> .
<i>new_switch_id</i>	ID of the new switch   The range depends on products. For details, see the <i>Configuration Guide</i> .

**Defaults** N/A

**Command Mode** config-vs-domain configuration mode

**Usage Guide** This command is configured in VSU mode. In addition and takes affect after device restart.  
The **no** form of this command will restore the switch ID to 1.

**Configuration** The following example modifies the ID of device 1 that is running to 2 in VSU mode.

**Examples**

```
Ruijie(config)# switch virtual domain 1
Ruijie(config-vs-domain)# switch 1 renumber 2
```

The following example restores the ID of device 2 that is running to the default value in VSU mode.

```
Ruijie(config)# switch virtual domain 1
Ruijie(config-vs-domain)# no switch 2
```

**Related  
Commands**

Command	Description
<b>switch</b>	Modifies the device ID in standalone mode.
<b>show switch virtual</b>	Displays the domain ID as well as the ID and role of each chassis.

**Platform  
Description**

N/A

## 5.22 switch virtual aggregateport lff enable

Use this command to enable the locally-preferred forwarding function on the AP in VSU mode.

Use the **no** form of this command to disable this function.

**switch virtual aggregateport lff enable**

**no switch virtual aggregateport lff enable**

**Parameter  
Description**

Parameter	Description
N/A	N/A

**Defaults**

This function is enabled by default.

**Command Mode**

config-vs-domain configuration mode

**Usage Guide**

N/A

**Configuration**

The following example enables the locally-preferred forwarding function on the AP in VSU mode.

**Examples**

```
Ruijie(config)# switch virtual domain 1
Ruijie(config-vs-domain)# switch virtual aggregateport lff enable
```

**Related  
Commands**

Command	Description
<b>show switch virtual balance</b>	Displays the current traffic balancing mode.

**Platform  
Description**

N/A

## 5.23 switch virtual domain

Use this command to modify the domain ID of a device in standalone mode, or enter config-vs-domain configuration mode in VSU mode.

Use the **no** form of this command to restore the default setting.

**switch virtual domain** *domain\_id*

**no switch virtual domain**

Parameter	Parameter	Description
Description	<i>domain_id</i>	Domain ID of the VSU, in the range from 1 to 255.

**Defaults** The default is 100.

**Command Mode** config-vs-domain configuration mode

**Usage Guide** Only two devices with the same domain ID can form a virtual device. The domain ID must be unique within the local area network (LAN).

**Configuration Examples** The following example sets the domain ID of the VSU to 1 in standalone mode.

```
Ruijie(config)# switch virtual domain 1
Ruijie(config-vs-domain)#
```

Related	Command	Description
Commands	<b>show switch virtual</b>	Displays the domain ID as well as the ID and role of each chassis.
	<b>switch domain</b>	Modifies the domain ID in VSU mode.

**Platform** N/A  
**Description**

## 5.24 switch virtual ecmp lff enable

Use this command to enable the locally-preferred forwarding function on the ECMP interface in VSU mode.

Use the **no** form of this command to disable this function.

**switch virtual ecmp lff enable**

**no switch virtual ecmp lff enable**

Parameter	Parameter	Description
Description	N/A	N/A

**Defaults** This function is enabled by default.

**Command Mode** config-vs-domain configuration mode

**Usage Guide** N/A

**Configuration Examples** The following example enables the locally-preferred forwarding function on the ECMP interface in VSU mode.

```
Ruijie(config)# switch virtual domain 1
Ruijie(config-vs-domain)#switch virtual ecmp lff enable
```

**Related Commands**

Command	Description
<b>show switch virtual balance</b>	Displays the current load balance mode.

**Platform Description** N/A

## 5.25 vsl-port

Use this command to enter VSL-PORT mode

**vsl-port**

**Parameter Description**

Parameter	Description
N/A	N/A

**Defaults** N/A

**Command Mode** Global configuration mode

**Usage Guide** This command is configured on a device in whether standalone mode or VSU mode.

**Configuration Examples** The following example enters VSL-AP configuration mode on a device in standalone mode.

```
Ruijie(config)# vsl-port
Ruijie(config-vsl-port)#
```

The following example enters VSL-APPORT configuration mode on a device in VSU mode.

```
Ruijie(config)# vsl-port
Ruijie(config-vsl-port)#
```

**Related Commands**

Command	Description
N/A	N/A

**Platform Description** N/A

## 6 VRRP Commands

### 6.1 show vrrp

Use this command to display the VRRP information.

**show** [ **ipv6** ] **vrrp** [ **brief** | *group* ]

Parameter	Parameter	Description
Description	<b>ipv6</b>	(Optional) Applies to IPv6 VRRP.
	<b>brief</b>	(Optional) Displays the brief of the VRRP group.
	<i>group</i>	Number of the VRRP group to be displayed

**Defaults** N/A

**Command Mode** Privileged EXEC mode/Global configuration mode/Interface configuration mode

**Usage Guide** If no optional parameter is used, the information of all VRRP groups is displayed.

**Configuration Examples** The following example displays the information of all VRRP groups.

```
Ruijie# show vrrp
FastEthernet 0/0 - Group 1
State is Backup
Virtual IP address is 192.168.201.1 configured
Virtual MAC address is 0000.5e00.0101
Advertisement interval is 3 sec
Preemption is enabled
min delay is 0 sec
Priority is 100
Master Device is 192.168.201.213 , pritority is 120
Master Advertisement interval is 3 sec
Master Down interval is 9 sec
FastEthernet 0/0 - Group 2
State is Master
Virtual IP address is 192.168.201.2 configured
Virtual MAC address is 0000.5e00.0102
Advertisement interval is 3 sec
Preemption is enabled
min delay is 0 sec
Priority is 120
Master Device is 192.168.201.217 (local), priority is 120
Master Advertisement interval is 3 sec
```

```
Master Down interval is 9 sec
Ruijie#
```

The following example displays the brief information of the VRRP group.

```
Ruijie# show vrrp brief
Interface  Grp Pri timer  Own Pre State  Master addr  Group addr
Gi 0/0    1 100 10.82   -   P Backup  192.168.201.213 192.168.201.1
Gi 0/0    2 120 10.59   -   P Master  192.168.201.217 192.168.201.2
Ruijie#show ipv6 vrrp brief
Interface      Grp Pri timer  Own Pre State Master addr  Group addr
G10/13        1 100 3.60   -   P Master  FE80::1      FE80::2
```

Related Commands	Command	Description
	<b>vrrp group ip</b> <i>ipaddress</i> [ <b>secondary</b> ]	Enables the VRRP function and set the IP address for the virtual device.

**Platform** N/A

**Description**

## 6.2 show vrrp interface

Use this command to display the information of the VRRP on the interface.

**show** [ **ipv6** ] **vrrp interface** *type number* [ **brief** ]

Parameter Description	Parameter	Description
	<b>ipv6</b>	(Optional) Applies to IPv6 VRRP.
	<i>type</i>	Interface type
	<i>number</i>	Interface number
	<b>brief</b>	(Optional) Displays the brief of the VRRP group on the interface.

**Defaults** N/A

**Command Mode** Privileged EXEC mode/Global configuration mode/Interface configuration mode

**Usage Guide** N/A

**Configuration Examples** The following example displays the VRRP information on Ethernet interface E1/0.

```
Ruijie# show vrrp interface fastethernet 0/0
FastEthernet 0/0 - Group 1
State is Backup
Virtual IP address is 192.168.201.1 configured
Virtual MAC address is 0000.5e00.0101
Advertisement interval is 3 sec
```

```

Preemption is enabled
min delay is 0 sec
Priority is 100
Master Device is 192.168.201.213 , pritority is 120
Master Advertisement interval is 3 sec
Master Down interval is 9 sec
FastEthernet 0/0 - Group 2
State is Master
Virtual IP address is 192.168.201.2 configured
Virtual MAC address is 0000.5e00.0102
Advertisement interval is 3 sec
Preemption is enabled
min delay is 0 sec
Priority is 120
Master Device is 192.168.201.217 (local), priority is 120
Master Advertisement interval is 3 sec
Master Down interval is 9 sec

```

**Related  
Commands**

Command	Description
<b>vrrp group ip</b> <i>ip address</i> [ <b>secondary</b> ]	Enables the VRRP function and set the IP address for the virtual device

**Platform  
Description**

N/A

## 6.3 show vrrp packet statistics

Use this command to display the statistics of the VRRP packet transmission.

**show vrrp packet statistics** [ *interface-type interface-number* ]

**Parameter  
Description**

Parameter	Description
<i>interface-type</i>	Interface type and number
<i>interface-number</i>	

**Defaults**

N/A

**Command  
Mode**

Privileged EXEC mode/Global configuration mode/Interface configuration mode

**Usage Guide**

N/A

**Configuration**

The following example displays the statistics of VRRP packet transmission on all interfaces.

**Examples**

```
Ruijie# show vrrp packet statistics
```



```
Total
  InReceives: 966043 packets, InOctets: 38641824, InErrors: 38826
  OutTransmits: 306079, OutOctets: 7798564
GigabitEthernet 3/0/1
  InReceives: 799665 packets, InOctets: 31986600, InErrors: 19657
  OutTransmits: 272931, OutOctets: 6675320
GigabitEthernet 3/0/2
  InReceives: 0 packets, InOctets: 0, InErrors: 0
  OutTransmits: 681, OutOctets: 16344
```

The following example displays the statistics of VRRP packets on the interface gigabitEthernet 3/0/1.

```
Ruijie#show vrrp packet statistics gigabitEthernet 3/0/1
GigabitEthernet 3/0/1
  InReceives: 799911 packets, InOctets: 31996440, InErrors: 19657
  OutTransmits: 273053, OutOctets: 6677760
```

Related Commands	Command	Description
	N/A	N/A

**Platform** N/A  
**Description**

## 6.4 vrrp accept\_mode

Use this command to enable the packet accepting function on the IPv6 VRRP virtual router.

Use the **no** form of this command to disable this function.

**vrrp ipv6 group accept\_mode**

**no vrrp ipv6 group accept\_mode**

Parameter Description	Parameter	Description
	group	VRRP group number

**Defaults** The master IPv6 VRRP is not allowed to accept packets whose destination IPv6 address is the IPv6 address of a virtual router. However, the NA and NS packets should be accepted regardless of the configuration of Accept\_Mode. Also, the master IPv6 VRRP virtual router in the owner state will accept and process any packets whose destination IPv6 address is the IPv6 address of a virtual router, regardless of the configuration of Accept\_Mode.

**Command Mode** Interface configuration mode

**Usage Guide** Configuration of the network interface is effective for the master virtual router.



Only IPv6 VRRP has this configuration mode.

**Configuration** The following example enables the accept mode on the group 1.

**Examples**

```
Ruijie#configure terminal
Ruijie(config)#interface GigabitEthernet 0/0
Ruijie(config-if-GigabitEthernet 0/0)#no switchport //used on the switch.
Ruijie(config-if-GigabitEthernet 0/0)#ipv6 enable
Ruijie(config-if-GigabitEthernet 0/0)#ipv6 address 2001::2/64
Ruijie(config-if-GigabitEthernet 0/0)#vrrp 1 ipv6 FE80::1
Ruijie(config-if-GigabitEthernet 0/0)#vrrp 1 ipv6 2001::1
Ruijie(config-if-GigabitEthernet 0/0)# vrrp ipv6 1 accept_mode
```

**Platform** N/A

**Description**

## 6.5 vrrp authentication

Use this command to enable VRRP authentication.

Use the **no** form of this command to disable this function.

**vrrp group authentication string**

**no vrrp group authentication**

Parameter	Parameter	Description
Description	<i>group</i>	VRRP group number
	<i>string</i>	String for the VRRP group authentication (within 8 bytes, plaintext password)

**Defaults** This function is disabled by default. Even if the VRRP function is enabled, no authentication password is configured by default.

**Command Mode** Interface configuration mode

**Usage Guide** The devices in the same VRRP group must have the same authentication password configured. The plaintext authentication password cannot provide security. It aims only to prevent/prompt the incorrect VRRP configuration. This command is only applied to the VRRPv2 packets.

**Configuration** The following example sets the authentication password for VRRP group 1.

**Examples**

```
Ruijie#configure terminal
Ruijie(config)#interface GigabitEthernet 0/0
Ruijie(config-if-GigabitEthernet 0/0)#no switchport //used on the switch.
```

```
Ruijie(config-if-GigabitEthernet 0/0)#ip address 10.0.1.1 255.255.255.0
Ruijie(config-if-GigabitEthernet 0/0)#vrrp 1 ip 10.0.1.20
Ruijie(config-if-GigabitEthernet 0/0)# vrrp 1 authentication x30dn78k
```

**Platform** N/A

**Description**

## 6.6 vrrp delay

Use this command to set the reload latency of the VRRP group on the interface.

Use the **no** form of this command to restore the default setting.

**vrrp delay** { **minimum** *min-seconds* | **reload** *reload-seconds* }

**no vrrp delay**

Parameter	Parameter	Description
Description	<b>minimum</b> <i>min-seconds</i>	When the interface is up, VRRP group shall be reloaded after at least min-seconds.
	<b>reload</b> <i>reload-seconds</i>	The reload latency of the VRRP group. If the configured <i>min-seconds</i> is more than <i>reload-seconds</i> , the actual reload latency of the VRRP group will be min-seconds.

**Defaults** This function is disabled by default.

**Command Mode** Interface configuration mode

**Usage Guide** Use this command to set the reload latency of the VRRP group on the interface, when it is required that the VRRP group shall not be reloaded immediately after the system reloads or the interface is up. The reload latency range is 0 to 60 seconds.

**Configuration Examples** The following example sets the VRRP reload latency on E0 to 10 seconds. When E0 is up, VRRP group 1 shall be reloaded in 10 seconds.

```
Ruijie#configure terminal
Ruijie(config)#interface GigabitEthernet 0/0
Ruijie(config-if-GigabitEthernet 0/0)#no switchport //used on the switch.
Ruijie(config-if-GigabitEthernet 0/0)#vrrp delay minimum 10 reload 10
Ruijie(config-if-GigabitEthernet 0/0)#ip address 10.0.1.1 255.255.255.0
Ruijie(config-if-GigabitEthernet 0/0)#vrrp 1 ip 10.0.1.20
```

Related Commands	Command	Description
	N/A	N/A

**Platform** N/A

**Description**

## 6.7 vrrp description

Use this command to specify a descriptor for the VRRP.

Use the **no** form of this command to restore the default setting.

**vrrp [ ipv6 ] group description text**

**no vrrp [ ipv6 ] group description**

Parameter	Parameter	Description
Description	<b>ipv6</b>	Applies to IPv6 VRRP.
	<i>group</i>	VRRP group number
	<i>text</i>	VRRP group descriptor

**Defaults** This function is disabled by default. Even if the VRRP function is enabled, no VRRP group descriptor is configured by default.

**Command Mode** Interface configuration mode

**Usage Guide** This command will set the descriptor for the VRRP group to facilitate the identification of the VRRP group.

**Configuration Examples** The following example labels the VRRP group 1 on Ethernet interface E0 as Building A – Marketing and Administration.

```
Ruijie#configure terminal
Ruijie(config)#interface GigabitEthernet 0/0
Ruijie(config-if-GigabitEthernet 0/0)#ip address 10.0.1.1 255.255.255.0
Ruijie(config-if-GigabitEthernet 0/0)#vrrp 1 ip 10.0.1.20
Ruijie(config-if-GigabitEthernet 0/0)#vrrp 1 description "Building A -
Marketing and Administration"
Ruijie(config-if-GigabitEthernet 0/0)#vrrp 1 ipv6 fe80::1
Ruijie(config-if-GigabitEthernet 0/0)#vrrp ipv6 1 description "Building B -
Marketing and Administration"
```

Related Commands	Command	Description
	<b>vrrp group ip ip-address [ secondary ]</b>	Enables the VRRP function and set the IP address for the virtual device

**Platform** N/A

**Description**

## 6.8 vrrp ip

Use this command to enable VRRP on the interface and specify the related virtual IP address.

Use the **no** form of this command to restore the default setting.

**vrrp group ip** *ipaddress* [ **secondary** ]

**no vrrp group ip** *ipaddress* [ **secondary** ]

Parameter	Parameter	Description
Description	<i>group</i>	VRRP group number of the virtual device
	<i>ipaddress</i>	IP address of the virtual device
	<b>secondary</b>	Specifies the secondary IP address of the virtual device.

**Defaults** This function is disabled by default.

**Command Mode** Interface configuration mode

**Usage Guide** If the **secondary** parameter is not used, the IP address set here will become the master IP address of the virtual device.

**Configuration Examples** The following example enables the VRRP function on Ethernet interface 0. The VRRP group number is 1, primary IP address of the virtual device is 10.0.1.20 and secondary IP address is 10.0.2.20.

```
Ruijie#configure terminal
Ruijie(config)#interface GigabitEthernet 0/0
Ruijie(config-if-GigabitEthernet 0/0)#no switchport //used on the switch.
Ruijie(config-if-GigabitEthernet 0/0)#ip address 10.0.1.1 255.255.255.0
Ruijie(config-if-GigabitEthernet 0/0)#ip address 10.0.2.1 255.255.255.0
secondary
Ruijie(config-if-GigabitEthernet 0/0)#vrrp 1 ip 10.0.1.20
Ruijie(config-if-GigabitEthernet 0/0)#vrrp 1 ip 10.0.2.20 secondary
```

Related Commands	Command	Description
	<b>show vrrp</b> [ <b>brief</b>   <b>group</b> ]	Displays the VRRP configuration.

**Platform Description** N/A

## 6.9 vrrp ipv6

Use this command to enable IPv6 VRRP on the interface and specify the related virtual IPv6 address.

Use the **no** form of the command to restore the default setting.

**vrrp group ipv6** *ipv6-address*

**no vrrp group ip** *ipv6-address*

Parameter	Parameter	Description
Description	<i>group</i>	VRRP group number of the virtual device
	<i>ipv6-address</i>	IPv6 address of the virtual device

**Defaults** This function is disabled by default.

**Command Mode** Interface configuration mode

**Usage Guide** IPv6 VRRP and IPv4 VRRP share group numbers ranging from 1 to 255. One VRRP group number of an interface is applicable to both IPv4 VRRP and IPv6 VRRP at the same time. The first configured address should be the link's local address, which cannot be deleted until the other virtual addresses are deleted.

**Configuration Examples** The following example enables the IPv6 VRRP function on Ethernet interface FastEthernet 0/0 with VRRP group number 1 and virtual IPv6 address FE80::1 and 2001::1.

```
Ruijie#configure terminal
Ruijie(config)#interface GigabitEthernet 0/0
Ruijie(config-if-GigabitEthernet 0/0)#no switchport //used on the switch.
Ruijie(config-if-GigabitEthernet 0/0)#ipv6 enable
Ruijie(config-if-GigabitEthernet 0/0)#ipv6 address 2001::2/64
Ruijie(config-if-GigabitEthernet 0/0)#vrrp 1 ipv6 FE80::1
Ruijie(config-if-GigabitEthernet 0/0)#vrrp 1 ipv6 2001::1
```

Related Commands	Command	Description
	<b>show ipv6 vrrp [ brief   group ]</b>	Displays the IPv6 VRRP configuration.

**Platform Description** N/A

## 6.10 vrrp preempt

Use this command to set the preemption mode of the VRRP group.

Use the **no** form of this command to restore the default setting.

**vrrp [ ipv6 ] group preempt [ delay seconds ]**

**no vrrp [ ipv6 ] group preempt [ delay ]**

Parameter	Parameter	Description
Description	<b>ipv6</b>	Applies to IPv6 VRRP.
	<i>group</i>	VRRP group number
	<b>delay seconds</b>	(Optional) Specifies the delay before a device declares itself master. The default value is 0.

**Defaults** This function is disabled by default. Once the VRRP function is enabled, the VRRP group will work in the preemption mode by default.

**Command Mode** Interface configuration mode

**Usage Guide** If the VRRP group is working in the preemption mode, once a device finds its priority is higher than the priority of the master, it will become the master device of the VRRP group. If the VRRP group is not working in the preemption mode, even if a device finds its priority is higher than the master's priority, it will not become the master device of the VRRP group. In case the VRRP group is using the Ethernet interface IP address, the setting of the preemption mode does not make sense, because that VRRP group has the highest priority and thus automatically becomes the master device in the VRRP group.

**Configuration Examples** The following example enables IPv4 VRRP on interface GigabitEthernet 0/0. When VRRP group 1 finds its priority (200) is higher than that of the current master device, it will declare its preemption of master after a delay of 15 seconds.

```
Ruijie#configure terminal
Ruijie(config)#interface GigabitEthernet 0/0
Ruijie(config-if-GigabitEthernet 0/0)#no switchport //used on the switch.
Ruijie(config-if-GigabitEthernet 0/0)#ip address 10.0.1.1 255.255.255.0
Ruijie(config-if-GigabitEthernet 0/0)#vrrp 1 ip 10.0.1.20
Ruijie(config-if-GigabitEthernet 0/0)#vrrp 1 preempt delay 15
Ruijie(config-if-GigabitEthernet 0/0)#vrrp 1 priority 200
```

The following example enables IPv4 VRRP on interface GigabitEthernet 0/0. When VRRP group 1 finds its priority (200) is higher than that of the current master device, it will declare its preemption of master after a delay of 15 seconds.

```
Ruijie#configure terminal
Ruijie(config)#interface GigabitEthernet 0/0
Ruijie(config-if-GigabitEthernet 0/0)#no switchport //used on the switch.
Ruijie(config-if-GigabitEthernet 0/0)#ipv6 enable
Ruijie(config-if-GigabitEthernet 0/0)#ipv6 address 2001::2/64
Ruijie(config-if-GigabitEthernet 0/0)#vrrp 1 ipv6 FE80::1
Ruijie(config-if-GigabitEthernet 0/0)#vrrp 1 ipv6 2001::1
Ruijie(config-if-GigabitEthernet 0/0)#vrrp ipv6 1 preempt delay 15
Ruijie(config-if-GigabitEthernet 0/0)#vrrp ipv6 1 priority 200
```

Related Commands	Command	Description
	<b>vrrp group ip</b> <i>ipaddress</i> [ <b>secondary</b> ]	Enables the VRRP function and set the IP address for the virtual device.
	<b>vrrp group priority</b> <i>level</i>	Sets the VRRP group priority.

**Platform** N/A

## Description

## 6.11 vrrp priority

Use this command to specify the priority of the VRRP group.

Use the **no** form of this command to restore the default setting.

**vrrp** [ **ipv6** ] *group* **priority** *level*

**no vrrp** [ **ipv6** ] *group* **priority**

Parameter	Parameter	Description
Description	<b>ipv6</b>	Specifies the priority of the IPv6 VRRP group.
	<i>group</i>	VRRP group number
	<i>level</i>	VRRP group priority

**Defaults** This function is disabled by default. Once the VRRP function is enabled, the default priority of the VRRP group is 100.

**Command Mode** Interface configuration mode

**Usage Guide** N/A

**Configuration Examples** The following example sets the priority of IPv4 VRRP group 1 as 254.

```
Ruijie#configure terminal
Ruijie(config)#interface GigabitEthernet 0/0
Ruijie(config-if-GigabitEthernet 0/0)#no switchport //used on the switch.
Ruijie(config-if-GigabitEthernet 0/0)#ip address 10.0.1.1 255.255.255.0
Ruijie(config-if-GigabitEthernet 0/0)#vrrp 1 ip 10.0.1.20
Ruijie(config-if-GigabitEthernet 0/0)#vrrp 1 priority 254
```

The following example sets the priority of IPv6 VRRP group 1 as 254.

```
Ruijie#configure terminal
Ruijie(config)#interface GigabitEthernet 0/0
Ruijie(config-if-GigabitEthernet 0/0)#no switchport //used on the switch.
Ruijie(config-if-GigabitEthernet 0/0)#ipv6 enable
Ruijie(config-if-GigabitEthernet 0/0)#ipv6 address 2001::2/64
Ruijie(config-if-GigabitEthernet 0/0)#vrrp 1 ipv6 FE80::1
Ruijie(config-if-GigabitEthernet 0/0)#vrrp 1 ipv6 2001::1
Ruijie(config-if-GigabitEthernet 0/0)#vrrp ipv6 1 priority 254
```

Related Commands	Command	Description
	<b>vrrp</b> <i>group</i> <b>ip</b> <i>ipaddress</i> [ <b>secondary</b> ]	Enables the VRRP function and set the IP address for the virtual device.
	<b>vrrp</b> <i>group</i> <b>preempt</b> [ <b>delay</b> <i>seconds</i> ]	Sets the VRRP in the preemption mode.



**Platform** N/A  
**Description**

## 6.12 vrrp timers advertise

Use this command to specify the interval for the master device to send the VRRP advertisement.

Use the **no** form of this command to restore the default setting.

**vrrp [ ipv6 ] group timers advertise { advertise-interval | csec centisecond-interval }**

**no vrrp [ ipv6 ] group timers advertise**

Parameter	Parameter	Description
Description	<b>ipv6</b>	Applies to IPv6 VRRP.
	<i>group</i>	VRRP group number
	<i>advertise-interval</i>	Sets the interval time in seconds between sending VRRP advertisement.
	<b>csec centisecond-interval</b>	Sets the interval time in milliseconds between sending advertisement frames from the master VRRP router in the backup group. The range is from 50 to 99. This value is not set by default. This parameter takes effect only for VRRPv3.

**Defaults** This function is disabled by default. Once the VRRP function is enabled, the default advertisement interval of the master device is one second.

**Command Mode** Interface configuration mode

**Usage Guide** If the current device becomes the master device in the VRRP group, it will notify its VRRP status, priority and other information by sending the VRRP advertisement in the set interval.  
Based on the RFC specification, the maximum advertisement interval of the IPv4/IPv6 VRRPv3 group is 40 seconds. The advertisement interval can be configured larger than 40 seconds, but the effective advertisement interval is 40 seconds.

**Configuration Examples** The following example sets the IPv4 VRRP advertisement interval as 4 seconds.

```
Ruijie#configure terminal
Ruijie(config)#interface GigabitEthernet 0/0
Ruijie(config-if-GigabitEthernet 0/0)#no switchport //used on the switch.
Ruijie(config-if-GigabitEthernet 0/0)#ip address 10.0.1.1 255.255.255.0
Ruijie(config-if-GigabitEthernet 0/0)#vrrp 1 ip 10.0.1.20
Ruijie(config-if-GigabitEthernet 0/0)#vrrp 1 timers advertise 4
```

The following example sets the IPv6 VRRP advertisement interval as 4 seconds.

```
Ruijie#configure terminal
Ruijie(config)#interface GigabitEthernet 0/0
Ruijie(config-if-GigabitEthernet 0/0)#no switchport //used on the switch.
```

```
Ruijie(config-if-GigabitEthernet 0/0)#ipv6 enable
Ruijie(config-if-GigabitEthernet 0/0)#ipv6 address 2001::2/64
Ruijie(config-if-GigabitEthernet 0/0)#vrrp 1 ipv6 FE80::1
Ruijie(config-if-GigabitEthernet 0/0)#vrrp 1 ipv6 2001::1
Ruijie(config-if-GigabitEthernet 0/0)#vrrp ipv6 1 timers advertise 4
```

The following example sets the IPv4 VRRP advertisement interval as 50 centi-seconds.

```
Ruijie#configure terminal
Ruijie(config)#interface GigabitEthernet 0/0
Ruijie(config-if-GigabitEthernet 0/0)#no switchport //used on the switch.
Ruijie(config-if-GigabitEthernet 0/0)#ip address 10.0.1.1 255.255.255.0
Ruijie(config-if-GigabitEthernet 0/0)#vrrp 1 ip 10.0.1.20
Ruijie(config-if-GigabitEthernet 0/0)#vrrp 1 timers advertise csec 50
```

The following example sets the IPv6 VRRP advertisement interval as 50 centi-seconds.

```
Ruijie#configure terminal
Ruijie(config)#interface GigabitEthernet 0/0
Ruijie(config-if-GigabitEthernet 0/0)#no switchport //used on the switch.
Ruijie(config-if-GigabitEthernet 0/0)#ipv6 enable
Ruijie(config-if-GigabitEthernet 0/0)#ipv6 address 2001::2/64
Ruijie(config-if-GigabitEthernet 0/0)#vrrp 1 ipv6 FE80::1
Ruijie(config-if-GigabitEthernet 0/0)#vrrp 1 ipv6 2001::1
Ruijie(config-if-GigabitEthernet 0/0)#vrrp ipv6 1 timers advertise csec 50
```

#### Related Commands

Command	Description
<b>vrrp group ip</b> <i>ipaddress</i> [ <b>secondary</b> ]	Enables the VRRP function and set the IP address for the virtual device.
<b>vrrp group timers learn</b>	Enables the timer learning function.

#### Platform Description

N/A

## 6.13 vrrp timers learn

Use this command to enable the timer learning function.

Use the **no** form of this command to restore the default setting.

**vrrp [ ipv6 ] group timers learn**

**no vrrp [ ipv6 ] group timers learn**

#### Parameter Description

Parameter	Description
<b>ipv6</b>	Applies to IPv6 VRRP.
<i>group</i>	VRRP group number

#### Defaults

This function is disabled by default. Even if the VRRP function is enabled, the timer learning function is disabled by default.

**Command** Interface configuration mode

**Mode**

**Usage Guide** Once the timer learning function is enabled, if the current device is a VRRP backup device, it will learn the VRRP advertisement interval from the VRRP advertisement of the master device, with which it calculates the master device's failure interval instead of the VRRP advertisement interval configured locally. This command may synchronize the VRRP advertisement timer with the master device.

**Configuration** The following example enables the timer learning function on the IPv4 VRRP group 1.

**Examples**

```
Ruijie#configure terminal
Ruijie(config)#interface GigabitEthernet 0/0
Ruijie(config-if-GigabitEthernet 0/0)#no switchport //used on the switch.
Ruijie(config-if-GigabitEthernet 0/0)#ip address 10.0.1.1 255.255.255.0
Ruijie(config-if-GigabitEthernet 0/0)#vrrp 1 ip 10.0.1.20
Ruijie(config-if-GigabitEthernet 0/0)#vrrp 1 timers learn
```

The following example to enables the timer learning function on the IPv6 VRRP group 1.

```
vrrp ipv6 1 timers learn
Ruijie#configure terminal
Ruijie(config)#interface GigabitEthernet 0/0
Ruijie(config-if-GigabitEthernet 0/0)#no switchport //used on the switch.
Ruijie(config-if-GigabitEthernet 0/0)#ipv6 enable
Ruijie(config-if-GigabitEthernet 0/0)#ipv6 address 2001::2/64
Ruijie(config-if-GigabitEthernet 0/0)#vrrp 1 ipv6 FE80::1
Ruijie(config-if-GigabitEthernet 0/0)#vrrp 1 ipv6 2001::1
Ruijie(config-if-GigabitEthernet 0/0)#vrrp ipv6 1 timers learn
```

**Related  
Commands**

Command	Description
<b>vrrp group ip</b> <i>ipaddress</i> [ <b>secondary</b> ]	Enables the VRRP function and set the IP address for the virtual device.
<b>vrrp group ipv6</b> <i>ipaddress</i>	Enables the VRRP function and set the IPv6 address for the virtual device.
<b>vrrp group timers advertise</b> <i>interval</i>	Sets the IPv4 VRRP advertising interval.
<b>vrrp ipv6 group timers advertise</b> <i>interval</i>	Sets the IPv6 VRRP advertising interval.

**Platform** N/A

**Description**

## 6.14 vrrp track

Use these commands to enable the IPv4/IPv6 VRRP track in the interface configuration mode. Use the no form of these commands to restore the default setting.

```
vrrp group track { interface-type interface-number } [ priority ]
vrrp ipv6 group track interface-type interface-number [ priority ]
```

**no vrrp [ ipv6 ] group track interface-type interface-number**

Use these commands to enable VRRP IPv4/IPv6 address track. Use the **no** form of these commands to restore the default setting.

**vrrp group track ipv4-address [ interval interval-value ] [ timeout timeout-value ] [ retry retry-value ] [ priority ]**

**vrrp ipv6 group track { ipv6-global-address | ipv6-linklocal-address interface-type interface-number } [ interval interval-value ] [ timeout timeout-value ] [ retry retry-value ] [ priority ]**

**no vrrp group track ipv4-address**



**no vrrp ipv6 group track { ipv6-global-address | ipv6-linklocal-address interface-type interface-number }**



Parameter	Parameter	Description
Description	<i>group</i>	VRRP group number
	<i>interface-type</i> <i>interface-number</i>	Type of monitored interface
	<i>priority</i>	VRRP priority change range when the interface or ip address reachability status changes. If this parameter is not selected, the default value is 10.
	<b>ipv6</b>	Applies to IPv6 VRRP.
	<i>ipv4-address</i>	Monitored IPv4 address. With BFD configured, it refers to the neighbor IP address.
	<b>interval</b> <i>interval-value</i>	The interval of time to probe whether the monitored ip address is reachable or not. If this parameter is not selected, the default value is 3 seconds.
	<b>timeout</b> <i>timeout-value</i>	The timeout time of the unreachable monitored ip address. If this parameter is not selected, the default value is 1 seconds.
	<b>retry</b> <i>retry-value</i>	Track retries. If the value is reached, the link is thought unreachable. If this parameter is not configured, the default value is 3.
	<i>ipv6-global-address</i> <i>ipv6-linklocal-address</i>	Global unicast IPv6 address Local link IPv6 address

**Defaults** This function is disabled by default. Even if the VRRP function is enabled, no interface or IP address is specified.

**Command Mode** Interface configuration mode

**Usage Guide**

-  This command can be used to monitor the outlet links. Note that layer-3 routable logical interfaces can be monitored (such as Routed Port, SVI, Loopback and Tunnel).
-  If a host is monitored, specify the IPv4 address for the IPv4 VRRP router or the IPv6 address for the IPv6 VRRP router.

-  If the host IP address is link-local, an interface must be specified.
-  If a VRRP router owns the IP address of the physical interface, the priority is 255. Keep the priority when the monitored IP address or interface is set.

**Configuration Examples** The following example enables the VRRP group 1 to monitor the routed port Fa1/1. If the Fa1/1 link is disconnected, the priority of the VRRP group decreases by 30. When the Fa1/1 link recovers, the priority of VRRP group 1 is restored.

```
Ruijie#configure terminal
Ruijie(config)#interface GigabitEthernet 0/0
Ruijie(config-if-GigabitEthernet 0/0)#no switchport //used on the switch.
Ruijie(config-if-GigabitEthernet 0/0)#ip address 10.0.1.1 255.255.255.0
Ruijie(config-if-GigabitEthernet 0/0)#vrrp 1 ip 10.0.1.20
Ruijie(config-if-GigabitEthernet 0/0)#vrrp 1 priority 254
Ruijie(config-if-GigabitEthernet 0/0)#vrrp 1 track GigabitEthernet 1/1 30
```

**Related  
Commands**

Command	Description
<b>vrrp group ip</b> <i>ipaddress</i> [ <b>secondary</b> ]	Enables the VRRP function and set the IP address for the virtual device.
<b>vrrp group priority</b> <i>level</i>	Sets the VRRP group priority.

**Platform** N/A  
**Description**

## 6.15 vrrp version

Use this command to configure the version of sending the IPv4 VRRP multicast packets.

For the IPv4 VRRP, there are two versions: VRRPv2 and VRRPv3.

Use the **no** form of this command to restore the default setting.

**vrrp group version** { **2** | **3** }

**no vrrp group version**

**Parameter  
Description**

Parameter	Description
<b>2</b>	Uses the VRRPv2 version to send the packets.
<b>3</b>	Uses the VRRPv3 version to send the packets.

**Defaults** The default is VRRPv2.

**Command Mode** Interface configuration mode

**Usage Guide** Considering the compatibility of VRRPv2 and VRRPv3 for the IPv4 VRRP, you can choose the

version of VRRP packets based on the actual network environment. VRRPv2 is based on RFC3768 and VRRPv3 is based on RFC 5798.

 This command is applicable to IPv4 VRRP only.

**Configuration Examples** The following example configures the version of sending the IPv4 VRRP packets on the interface gi0/0.

```
Ruijie#configure terminal
Ruijie(config)#interface GigabitEthernet 0/0
Ruijie(config-if-GigabitEthernet 0/0)#no switchport //used on the switch.
Ruijie(config-if-GigabitEthernet 0/0)#ip address 10.0.1.1 255.255.255.0
Ruijie(config-if-GigabitEthernet 0/0)#vrrp 1 ip 10.0.1.20
Ruijie(config-if-GigabitEthernet 0/0)# vrrp 1 version 3
```

**Related  
Commands**

Command	Description
<b>vrrp group ip</b> <i>ipaddress</i> [ <b>secondary</b> ]	Enables the VRRP function and set the IP address for the virtual device.
<b>vrrp group timers advertise</b> <i>interval</i>	Sets the interval of sending the VRRP advertisement.

**Platform  
Description** N/A

## 7 VRRP Plus Commands

### 7.1 show vrrp balance

Use this command to display the VRRP Plus brief or details.

**show vrrp balance** [ **brief** | **group** ]

Parameter Description	Parameter	Description
	<b>brief</b>	(Optional) Displays the VRRP Plus brief.
	<b>group</b>	(Optional) Displays the VRRP Plus details.

**Defaults** N/A

**Command Mode** Privileged EXEC mode/Global configuration mode/Interface configuration mode

**Usage Guide** If no optional parameter is used, the details of all VRRP Plus group are displayed.

**Configuration Examples** The following example displays the details of all VRRP Plus groups.

```
Ruijie#show vrrp balance
VLAN 1 - Group 1
  State is BVG
  Virtual IP address is 192.168.1.54
  Hello time 1 sec, hold time 3 sec
  Load balancing: host-dependent
  Redirect time 300 sec, forwarder time-out 14400 sec
  Weighting 90 (configured 100), thresholds: lower 1, upper 100
    Track object 1, state: down, decrement weight: 10
  There are 2 forwarders
  Forwarder 1 (local)
    MAC address:
      0000.5e00.0101
    Owner ID is 00d0.f822.33ab
  Forwarder 2
    MAC address:
      001a.a916.0201
  Owner ID is 00d0.f822.8800
```

The following example shows the brief of the VRRP Plus group.

```
Ruijie# show vrrp balance brief
Interface Grp  State      Group Addr      MAC addr
VLAN 1      1    BVG      192.168.1.1    0000.5e00.0101
```

Related Commands	Command	Description
	<b>vrrp group balance</b>	Enables the VRRP Plus function.
	<b>vrrp group load-balancing</b> { <b>host-dependent</b>   <b>round-robin</b>   <b>weighted</b> }	Sets the load balancing policy of the VRRP Plus.
	<b>show vrrp balance interface</b> <i>type number</i> [ <b>brief</b> ]	Displays the VRRP Plus running status of the specified interface.

**Platform** N/A

**Description**

## 7.2 show vrrp balance interface

Use this command to display the actions of the VRRP Plus group on the specified interface.

**show vrrp balance interface** *type number* [ **brief** ]

Parameter Description	Parameter	Description
	<b>interface</b> <i>type number</i>	Specifies the interface type and number.
	<b>brief</b>	(Optional) Displays the brief information.

**Defaults** N/A

**Command Mode** Privileged EXEC mode/Global configuration mode/Interface configuration mode

**Usage Guide** N/A

**Configuration** The following example displays the actions of the VRRP Plus on FastEthernet 0/0.

**Examples**

```
Ruijie# show vrrp balance interface FastEthernet 0/0
FastEthernet 0/0 - Group 1
  State is BVG
  Virtual IP address is 192.168.1.54
  Hello time 1 sec, hold time 3 sec
  Load balancing: host-dependent
  Redirect time 300 sec, forwarder time-out 14400 sec
  Weighting 90 (configured 100), thresholds: lower 1, upper 100
    Track object 1, state: down, decrement weight: 10
  There are 2 forwarders
  Forwarder 1 (local)
    MAC address:
      0000.5e00.0101
    Owner ID is 00d0.f822.33ab
```



```
Forwarder 2
MAC address:
    001a.a916.0201
Owner ID is 00d0.f822.8800
```

**Related  
Commands**

Command	Description
<b>vrrp group balance</b>	Enables the VRRP Plus function.
<b>vrrp group load-balancing { host-dependent   round-robin   weighted }</b>	Sets the load balancing policy of the VRRP Plus.
<b>show vrrp balance interface type number [ brief ]</b>	Displays the VRRP Plus running status of the specified interface.

**Platform** N/A  
**Description**

## 7.3 vrrp balance

Use this command to enable the VRRP Plus function.  
Use the **no** form of this command to disable this function.

**vrrp group balance**  
**no vrrp group balance**

**Parameter  
Description**

Parameter	Description
<i>group</i>	Enables the VRRP Plus function on the VRRP of specified group ID.

**Defaults** VRRP Plus is disabled by default.

**Command Mode** Interface configuration mode

**Usage Guide** To enable VRRP Plus, you must configure the VRRP group first.

**Configuration Examples** The following example enables the VRRP Plus function on the Layer 3 interface GigabitEthernet0/0.

```
Ruijie#config
Ruijie(config)#interface GigabitEthernet 0/0
Ruijie(config-if-GigabitEthernet 0/0)#vrrp 1 ip 192.168.1.1
Ruijie(config-if-GigabitEthernet 0/0)#vrrp 1 balance
```

**Related  
Commands**

Command	Description
<b>vrrp load-balancing</b>	Sets the load balancing policy of the VRRP Plus.

<b>show vrrp balance</b>	Displays the VRRP Plus running status.
<b>show vrrp balance interface</b>	Displays the VRRP Plus running status of the specified interface.

**Platform** N/A

**Description**

## 7.4 vrrp forwarder preempt

Use this command to enable the forwarding preemption on the VRRP Plus backup group.

Use the **no** form of this command to disable this function.

**vrrp group forwarder preempt**

**no vrrp group forwarder preempt**

Parameter Description	Parameter	Description
	<i>group</i>	VRRP group number. The range is from 1 to 255.

**Defaults** By default, forwarding preemption is enabled.

**Command Mode** Interface configuration mode

**Usage Guide** N/A

**Configuration Examples** The following example enables the forwarding preemption function of the VRRP Plus backup group on the Layer3 interface GigabitEthernet 0/0.

```
Ruijie#config
Ruijie(config)#interface GigabitEthernet 0/0
Ruijie(config-if-GigabitEthernet 0/0)#vrrp 1 ip 192.168.1.1
Ruijie(config-if-GigabitEthernet 0/0)#vrrp 1 balance
Ruijie(config-if-GigabitEthernet 0/0)#vrrp 1 forwarder preempt
```

Related Commands	Command	Description
	<b>vrrp group balance</b>	Enables the VRRP Plus function.
	<b>show vrrp balance [ brief   group ]</b>	Displays the VRRP Plus running status.
	<b>show vrrp balance interface <i>type number</i> [ brief ]</b>	Displays the VRRP Plus running status of the specified interface.

**Platform** N/A

**Description**

## 7.5 vrrp load-balancing

Use this command to set the VRRP Plus load balancing policy.

Use the **no** form of this command to restore the default setting.

**vrrp group load-balancing** { **host-dependent** | **round-robin** | **weighted** }

**no vrrp group load-balancing** { **host-dependent** | **round-robin** | **weighted** }

Parameter Description	Parameter	Description
	<i>group</i>	Specifies the VRRP group ID.
	<b>host-dependent</b>	Sets the host-dependent load balancing policy, so as to use the different virtual MACs to reply the host's ARP request based on different hosts.
	<b>round-robin</b>	Sets the round-robin balancing policy, so as to use the different virtual MACs to reply the host's ARP request in turn, which is the default setting.
	<b>weighted</b>	Sets the weight balancing policy, so as to perform the ARP reply based on the device weight of the backup group.

**Defaults** The default is round-robin.

**Command Mode** Interface configuration mode

**Usage Guide** N/A

**Configuration Examples** The following example sets the load balancing policy of the VRRP Plus group1 on Layer 3 interface GigabitEthernet0/0 as host-dependent.

```
Ruijie# config t
Ruijie(config)# interface GigabitEthernet 0/0
Ruijie(config-if-GigabitEthernet 0/0)# vrrp 1 ip 192.168.1.1
Ruijie(config-if-GigabitEthernet 0/0)# vrrp 1 balance
Ruijie(config-if-GigabitEthernet 0/0)# vrrp 1 load-balancing host-dependent
```

Related Commands	Command	Description
	<b>vrrp group balance</b>	Enables the VRRP Plus function.
	<b>show vrrp balance</b> [ <b>brief</b>   <i>group</i> ]	Displays the VRRP Plus running status.
	<b>show vrrp balance interface</b> <i>type number</i> [ <b>brief</b> ]	Displays the VRRP Plus running status o the specified interface.

**Platform Description** N/A

## 7.6 vrrp timers redirect

Use this command to set the redirection interval and timeout of the proxy virtual MAC address for the VRRP Plus backup group.

Use the **no** form of this command to restore the default value.

**vrrp group timers redirect** *redirect timeout*

**no vrrp group timers redirect**

### Parameter Description

Parameter	Description
<i>group</i>	VRRP Plus backup group ID, in the range of 1 to 255.
<i>redirect</i>	The redirection time, 300 seconds (namely 5 minutes) by default, in the range of 0 to 3,600.
<i>timeout</i>	The timeout, 14,400 seconds (namely 4 hours) by default, in the range of (redirect+600) to 64,800.

### Defaults

The default redirection interval is 300 seconds and redirection timeout is 14,400 seconds.

### Command Mode

Interface configuration mode

### Usage Guide

The VRRP Plus function should be enabled before setting the redirection interval and timeout of the proxy virtual MAC address for the VRRP Plus backup group.

### Configuration Examples

The following example sets the redirection interval and timeout of the proxy virtual MAC address for the VRRP Plus backup group.

```
Ruijie#config
Ruijie(config)#interface GigabitEthernet 0/0
Ruijie(config-if-GigabitEthernet 0/0)# vrrp 1 ip 192.168.1.1
Ruijie(config-if-GigabitEthernet 0/0)# vrrp 1 balance
Ruijie(config-if-GigabitEthernet 0/0)# vrrp 1 timers redirect 300 6000
```

### Related Commands

Command	Description
<b>vrrp group balance</b>	Enables the VRRP Plus function.
<b>show vrrp balance [ brief   group ]</b>	Displays the VRRP Plus running status.
<b>show vrrp balance interface</b> <i>type number</i> [ <b>brief</b> ]	Displays the VRRP Plus running status o the specified interface.

### Platform Description

N/A

## 7.7 vrrp weighting

Use this command to set the weight and threshold of the VRRP Plus backup group.

Use the **no** form of this command to restore the default setting.

**vrrp group weighting** *maximum* [ **lower** *lower* ] [ **upper** *upper* ]

**no vrrp group weighting**

### Parameter Description

Parameter	Description
<i>group</i>	VRRP Plus backup group ID, in the range of 1 to 255.
<i>maximum</i>	Weight, 100 by default, in the range of 2 to 254.
<i>lower</i>	Weight lower, 1 by default, in the range of 1 to (maximum-1)
<i>upper</i>	Weight upper, 100 by default, in the range of lower to maximum.

### Defaults

VRRP Plus backup group weight: 100

Weight lower: 1

Weight upper: 100

### Command Mode

Interface configuration mode

### Usage Guide

The VRRP Plus function should be enabled before setting the weight and threshold of the VRRP Plus backup group

### Configuration

The following example sets the weight and threshold of the VRRP Plus group1.

### Examples

```
Ruijie#config t
Ruijie(config)#interface GigabitEthernet 0/0
Ruijie(config-if-GigabitEthernet 0/0)# vrrp 1 ip 192.168.1.1
Ruijie(config-if-GigabitEthernet 0/0)# vrrp 1 balance
Ruijie(config-if-GigabitEthernet 0/0)# vrrp 1 weighting 50 lower 30 upper 50
```

### Related Commands

Command	Description
<b>vrrp group balance</b>	Enables the VRRP Plus function.
<b>show vrrp balance</b> [ <b>brief</b>   <i>group</i> ]	Displays the VRRP Plus running status.
<b>show vrrp balance interface</b> <i>type number</i> [ <b>brief</b> ]	Displays the VRRP Plus running status of the specified interface.

### Platform Description

N/A



## Network Management & Monitoring Commands

---

1. SNMP Commands
2. RMON Commands
3. NTP Commands
4. SNTP Commands
5. SPAN-RSPAN Commands
6. ERSPAN Commands
7. sFlow Commands

# 1 SNMP Commands

## 1.1 no snmp-server

Use this command to disable the SNMP agent function.

**no snmp-server**

### Parameter Description

Parameter	Description
N/A	N/A

### Defaults

SNMP agent is enabled by default.

### Command mode

Global configuration mode.

### Usage Guide

This command disables the SNMP agent services of all versions supported on the device.

### Configuration

The following example disables the SNMP agent.

### Examples

```
Ruijie(config)# no snmp-server
```

### Related Commands

Command	Description
N/A	N/A

### Platform

N/A

### Description

## 1.2 show snmp

Use this command to display the SNMP configuration.

**show snmp [ mib | user | view | group | host | locked-ip | process-mib-time ]**

### Parameter Description

Parameter	Description
<b>mib</b>	Displays the SNMP MIBs supported.
<b>user</b>	Displays the SNMP user information.
<b>view</b>	Displays the SNMP view information.
<b>group</b>	Displays the SNMP user group information.
<b>host</b>	Displays the explicit host configuration.
<b>locked-ip</b>	Displays the source IP addresses locked after continuous SNMP

	authentication failures.
<b>process-mib-time</b>	Displays the MIB node requiring the longest processing time.

**Defaults** N/A

**Command mode** Privileged EXEC mode.

**Usage Guide** N/A

**Configuration** The example below displays the SNMP configuration:

**Examples**

```
Ruijie# show snmp
Chassis: 60FF60
0 SNMP packets input
    0 Bad SNMP version errors
    0 Unknown community name
    0 Illegal operation for community name supplied
    0 Encoding errors
    0 Number of requested variables
    0 Number of altered variables
    0 Get-request PDUs
    0 Get-next PDUs
    0 Set-request PDUs
0 SNMP packets output
    0 Too big errors (Maximum packet size 1472)
    0 No such name errors
    0 Bad values errors
    0 General errors
    0 Response PDUs
    0 Trap PDUs
SNMP global trap: disabled
SNMP logging: disabled
SNMP agent: enabled
```

**Related Commands**

Command	Description
<b>snmp-server chassis-id</b>	Specifies the SNMP system sequence number.

**Platform** N/A

**Description**

## 1.3 snmp trap link-status

Use this command to enable the interface to send link traps. Use the **no** form of this command to



disable the interface to send link traps.

**snmp trap link-status**

**no snmp trap link-status**

**Parameter  
Description**

Parameter	Description
N/A	N/A

**Defaults**

Sending link traps on the interface is enabled by default. If the interface link status changes, SNMP link traps will be sent.

**Command  
mode**

Interface configuration mode

**Usage Guide**

This command can be configured on the Ethernet interface, aggregate ports and SVI interfaces.

**Configuration**

The following example disables the interface to send link traps.

**Examples**

```
Ruijie(config)# interface gigabitEthernet 1/1
Ruijie(config-if-GigabitEthernet 1/1)# no snmp trap link-status
```

The following example enables the interface to send link traps.

```
Ruijie(config)# interface gigabitEthernet 1/1
Ruijie(config-if-GigabitEthernet 1/1)# snmp trap link-status
```

**Related  
Commands**

Command	Description
N/A	N/A

**Platform**

N/A

**Description**

## 1.4 snmp-server chassis-id

Use this command to specify the SNMP chassis ID. Use the **no** form of this command to restore the default chassis ID.

**snmp-server chassis-id text**

**no snmp-server chassis-id**

**Parameter  
Description**

Parameter	Description
<i>text</i>	SNMP chassis ID: numerals or characters.

**Defaults**

The default is 60FF60.

**Command**      Global configuration mode.  
**mode**

**Usage Guide**    The SNMP chassis ID is generally the serial number of the device to facilitate identification. The SNMP chassis ID can be displayed through the **show snmp** command.

**Configuration**   The following example specifies the SNMP chassis ID as 123456:

**Examples**        Ruijie(config)# **snmp-server chassis-id** 123456

**Related  
Commands**

Command	Description
<b>show snmp</b>	Displays the SNMP configuration.

**Platform**        N/A

**Description**

## 1.5 snmp-server community

Use this command to specify the SNMP community access string. Use the **no** form of this command to remove the SNMP community access string.

**snmp-server community** [ 0 | 7 ] *string* [ **view** *view-name* ] [ [ **ro** | **rw** ] [ **host** *ipaddr* ] [ **ipv6** *ipv6-aclname* ] [ *aclnum* ] [ *aclname* ]  
**no snmp-server community** [ 0 | 7 ] *string*

**Parameter  
Description**

Parameter	Description
0	Indicates that the community string is in plaintext.
7	Indicates that the community string is in ciphertext.
<i>string</i>	Community string, which is the communication password between the NMS and the SNMP agent
<i>view-name</i>	View name
<b>ro</b>	Indicates that the NMS can only read the variables of the MIB.
<b>rw</b>	Indicates that the NMS can read and write the variables of the MIB.
<i>aclnum</i>	Access list number (1 to 199, and 1300 to 2699), which specifies the IPV4 addresses that are permitted to access the MIB.
<i>aclname</i>	Access list name, which specifies the IPV4 addresses that are permitted to access the MIB.
<i>ipv6-aclname</i>	IPv6 access list name, which specifies the IPv6 addresses that are permitted to access the MIB.
<i>ipaddr</i>	Specifies the IP address of the NMS to access the MIB.

**Defaults**        All communities are read only by default.

**Command** Global configuration mode.

**Usage Guide** This command is an essential command to enable the SNMP agent function, such as specifying the community attribute and IP addresses of NMS to access the MIB.

To disable the SNMP agent function, use the **no snmp-server** command.

**Configuration Examples** The following example defines a SNMP community access string named public, which can be read-only.

```
Ruijie(config)# snmp-server community public ro
```

**Related Commands**

Command	Description
<b>access-list</b>	Defines an access list.

**Platform** N/A

**Description**

## 1.6 snmp-server contact

Use this command to specify the system contact string. Use the **no** form of this command to remove the system contact string.

**snmp-server contact text**

**no snmp-server contact**

**Parameter Description**

Parameter	Description
<i>text</i>	Defines a system contact string.

**Defaults** No system contact string is set by default.

**Command** Global configuration mode.

**Usage Guide** N/A

**Configuration Examples** The following example specifies the SNMP system contract i-net800@i-net.com.cn:

```
Ruijie(config)# snmp-server contact i-net800@i-net.com.cn
```

**Related Commands**

Command	Description
<b>show snmp-server</b>	Displays the SNMP configuration.
<b>no snmp-server</b>	Disables the SNMP agent function.

**Platform** N/A

## Description

## 1.7 snmp-server enable traps

Use this command to enable the SNMP agent to send the SNMP trap message to NMS. Use the **no** form of this command to disable the SNMP agent to send the SNMP trap message to NMS.

**snmp-server enable traps** [ *notification-type* ]

**no snmp-server enable traps**

**Parameter  
Description**

Parameter	Description
<i>notification-type</i>	Specifies the type of trap messages. snmp: SNMP trap message bridge: Bridge trap message. mac-notification: MAC trap message. ospf: OSPF trap message. vrrp: VRRP trap message. web-auth: Web authentication trap message.

**Defaults**

Sending trap message to the NMS is disabled by default.

**Command  
mode**

Global configuration mode.

**Usage Guide**

This command must be used together with the **snmp-server host** command to send the trap message. Specifying no trap type indicates all trap messages are sent.

**Configuration**

The following example enables the SNMP agent to send the SNMP trap message.

**Examples**

```
Ruijie(config)# snmp-server enable traps snmp
Ruijie(config)# snmp-server host 192.168.12.219 public snmp
```

**Related  
Commands**

Command	Description
<b>snmp-server host</b>	Specifies the SNMP host to send the SNMP trap message.

**Platform**

N/A

**Description**

## 1.8 snmp-server flow-control

Use this command to configure the SNMP flow control. Use the **no** form of this command to restore the default setting.

**snmp-server flow-control pps** [ *count* ]  
**no snmp-server flow-control pps**

**Parameter  
Description**

Parameter	Description
<i>count</i>	Indicates the number of SNMP requests processed per second, ranging from 50 to 65,535.

**Defaults**

The default count is 300.

**Command  
mode**

Global configuration mode.

**Usage Guide**

N/A

**Configuration**

The following example configures the number of SNMP requests processed per second to 200.

**Examples**

```
Ruijie(config)# snmp-server flow-control pps 200
```

**Related  
Commands**

Command	Description
N/A	N/A

**Platform**

N/A

**Description**

## 1.9 snmp-server group

Use this command to configure a new SNMP group. Use the **no** form of this command to remove a specified SNMP group.

**snmp-server group** *groupname* { **v1** | **v2c** | **v3** { **auth** | **noauth** | **priv** } } [ **read** *readview* ] [ **write** *writeview* ] [ **access** { [ **ipv6** *ipv6\_aclname* | *aclnum* | *aclname* } ]  
**no snmp-server group** *groupname* { **v1** | **v2c** | **v3** { **auth** | **noauth** | **priv** } }

**Parameter  
Description**

Parameter	Description
<b>v1</b>   <b>v2c</b>   <b>v3</b>	Specifies the SNMP version
<b>auth</b>	Specifies authentication of a packet without encrypting it. This applies to SNMPv3 only.
<b>noauth</b>	Specifies no authentication a packet. This applies to SNMPv3 only.
<b>priv</b>	Specifies authentication of a packet with encryption. This applies to SNMPv3 only.
<i>readview</i>	Specifies a read-only view for the SNMP group. This view enables you to view only the contents of the agent.

<i>writeview</i>	Specifies a write view for the SNMP group. This view enables you to enter data and configure the contents of the agent.
<i>aclnum</i>	Access list number, which specifies the IPv4 addresses that are permitted to access the MIB.
<i>aclname</i>	Name of the access list, which specifies the IPv4 addresses that are permitted to access the MIB.
<i>ipv6_aclname</i>	Name of the IPv6 access list, which specifies the IPv6 addresses that are permitted to access the MIB.

**Defaults** No SNMP groups are configured by default.

**Command mode** Global configuration mode.

**Usage Guide** N/A

**Configuration** The following example configures a new SNMP group.

**Examples** Ruijie(config)# snmp-server group mib2user v3 priv read mib2

Related Commands	Command	Description
	<b>show snmp group</b>	Displays the SNMP group configuration.

**Platform** N/A

**Description**

## 1.10 snmp-server host

Use this command to specify the SNMP host (NMS) to send the trap message. Use the **no** form of this command to remove the specified SNMP host.

**snmp-server host** { *host-addr* | **ipv6** *ipv6-addr* } [ **traps** | **informs** ] [ **version** { **1** | **2c** | **3** [ **auth** | **noauth** | **priv** ] ] *community-string* [ **udp-port** *port-num* ] [ *notification-type* ]

**no snmp-server host** { *host-addr* | **ipv6** *ipv6-addr* } [ **traps** | **informs** ] [ **version** { **1** | **2c** | **3** { **auth** | **noauth** | **priv** } ] *community-string* [ **udp-port** *port-num* ]

Parameter Description	Parameter	Description
	<i>host-addr</i>	SNMP host address
	<i>ipv6-addr</i>	SNMP host address(ipv6)
	<b>trap</b>   <b>informs</b>	Enables the host to send the SNMP notification as traps or informs.
	<b>version</b>	SNMP version: V1, V2C or V3
	<b>auth</b>   <b>noauth</b>   <b>priv</b>	Security level of SNMPv3 users
	<i>community-string</i>	Community string or username (SNMPv3 version)

<i>port-num</i>	Port of the SNMP host
<i>notification-type</i>	The type of the SNMP trap message, such as <b>snmp</b> . If no type of the SNMP trap message is specified, all types of the SNMP trap message will be included.

**Defaults** No SNMP host is specified by default.

**Command mode** Global configuration mode.

**Usage Guide** This command must be used together with the **snmp-server enable traps** command to send the SNMP trap messages to NMS.

Multiple SNMP hosts can be configured to receive the SNMP trap messages. One host can use different combinations of the types of the SNMP trap message, but the last configuration for the same host will overwrite the previous configurations. In other words, to send different SNMP trap messages to the same host, different combination of SNMP trap messages can be configured.

**Configuration** The following example specifies an SNMP host to receive the SNMP event trap:

**Examples** Ruijie(config) # **snmp-server host 192.168.12.219 public snmp**

<b>Related Commands</b>	Command	Description
	<b>snmp-server enable traps</b>	Enables the SNMP agent to send the SNMP trap message.

**Platform** N/A

**Description**

## 1.11 snmp-server inform

Use this command to configure the resend times for inform requests and the inform request timeout.

Use the **no** form of this command to restore the default settings.

**snmp-server inform** [ **retries** *retry-time* | **timeout** *time* ]

**no snmp-server inform**

<b>Parameter Description</b>	Parameter	Description
	<i>retry-num</i>	Specifies the resend times for inform requests, ranging from 0 to 255.
	<i>time</i>	Specifies the inform request timeout, ranging from 0 to 21,474,836.

**Defaults** The default *retry-num* is 3, and the default **timeout** *time* is 15 seconds.

**Command mode** Global configuration mode.

**Usage Guide** N/A

**Configuration** The following example configures the resend times of inform requests to 5.

**Examples**

```
Ruijie(config)# snmp-server inform retries 5
```

The following example configures the inform request timeout to 20 seconds.

```
Ruijie(config)# snmp-server inform timeout 20
```

**Related  
Commands**

Command	Description
N/A	N/A

**Platform** N/A

**Description**

## 1.12 snmp-server location

Use this command to set the system location string. Use the **no** form of this command to remove the system location string.

**snmp-server location** *text*

**no snmp-server location**

**Parameter  
Description**

Parameter	Description
<i>text</i>	String that describes the system location information.

**Defaults** No system location string is set by default.

**Command  
mode** Global configuration mode.

**Usage Guide** N/A

**Configuration** The following example sets the system location information:

**Examples**

```
Ruijie(config)# snmp-server location start-technology-city 4F of A Buliding
```

**Related  
Commands**

Command	Description
<b>snmp-server contact</b>	Sets the system contact information.

**Platform** N/A

**Description**



## 1.13 snmp-server net-id

Use this command to configure the network element coding information of the device. Use the **no** form of this command to remove the network element coding information.

**snmp-server net-id** *text*

**no snmp-server net-id**

Parameter Description	Parameter	Description
	<i>text</i>	Configures the network element coding information of the device. The text length ranges from 1 to 255. The text is case-sensitive, and may contain spaces.

**Defaults** No network element coding information is configured by default.

**Command mode** Global configuration mode.

**Usage Guide** N/A

**Configuration Examples** The following example configures the network element coding text to FZ\_CDMA\_MSC1.

```
Ruijie(config)# snmp-server net-id FZ_CDMA_MSC1
```

Related Commands	Command	Description
	N/A	N/A

**Platform** N/A  
**Description**

## 1.14 snmp-server packetsize

Use this command to specify the largest size of the SNMP packet. Use the **no** form of this command to restore the default value.

**snmp-server packetsize** *byte-count*

**no snmp-server packetsize**

Parameter Description	Parameter	Description
	<i>byte-count</i>	Packet size. The range is from 484 to 17,876 bytes

**Defaults** The default is 1,472 bytes.

**Command** Global configuration mode.

**Usage Guide** The following example specifies the largest size of SNMP packet as 1,492 bytes:

```
Ruijie(config)# snmp-server packetsize 1492
```

**Configuration** N/A

**Examples**

Related Commands	Command	Description
	<b>snmp-server queue-length</b>	Specifies the length of the message queue for each SNMP trap host.

**Platform** N/A

**Description**

## 1.15 snmp-server queue-length

Use this command to specify the length of the message queue for each SNMP trap host. Use the **no** form of this command to restore the default value.

**snmp-server queue-length** *length*

**no snmp-server queue-length**

Parameter Description	Parameter	Description
	<i>length</i>	Queue length. The range is from 1 to 1000.

**Defaults** The default is 10.

**Command** Global configuration mode.

**Usage Guide** Use this command to adjust the length of message queue for each SNMP trap host for the purposes of controlling the speed of sending the SNMP trap messages.

**Configuration** The following example specifies the length of message queue as 100.

**Examples** Ruijie(config)# snmp-server queue-length 100

Related Commands	Command	Description
	<b>snmp-server packetsize</b>	Specifies the largest size of the SNMP packet.

**Platform** N/A

## Description

## 1.16 snmp-server system-shutdown

Use this command to enable the SNMP message reload function. Use the **no** form of this command to disable the SNMP message reload function.

**snmp-server system-shutdown**

**no snmp-server system-shutdown**

**Parameter  
Description**

Parameter	Description
N/A	N/A

**Defaults**

The SNMP message reload function is disabled by default.

**Command  
mode**

Global configuration mode.

**Usage Guide**

Use this command to enable the SNMP message reload function which may enable the system to send the device reload traps to the NMS before the device is reloaded or rebooted.

**Configuration**

The following example enables the SNMP message reload function:

**Examples**

```
Ruijie(config)# snmp-server system-shutdown
```

**Related  
Commands**

Command	Description
N/A	N/A

**Platform**

N/A

**Description**

## 1.17 snmp-server trap-format private

Use this command to configure the SNMP traps with private fields. Use the **no** form of this command to restore the default trap format.

**snmp-server trap-format private**

**no snmp-server trap-format private**

**Parameter  
Description**

Parameter	Description
N/A	N/A

**Defaults**

The private field is not carried in the SNMP trap by default.

**Command mode** Global configuration mode.

**Usage Guide** Use this command to configure the SNMP trap format with the private field. Currently, the supported data in the private field is alarm occurrence time. For the specific data type and range of each field, refer to RUIJIE-TRAP-FORMAT-MIB.mib file.

This command does not work if the traps are sent with SNMPv1.

**Configuration Examples** The following example configures the SNMP trap format with the private field.

```
Ruijie(config)# snmp-server trap-format private
```

**Related Commands**

Command	Description
N/A	N/A

**Platform Description** N/A

## 1.18 snmp-server trap-source

Use this command to specify the source interface of the SNMP trap message. Use the **no** form of this command to restore the default value.

**snmp-server trap-source** *interface*

**no snmp-server trap-source**

**Parameter Description**

Parameter	Description
<i>interface</i>	Specifies the source interface of the SNMP trap messages.

**Defaults** By default, the IP address of the interface from which the SNMP packet is sent is just the source address.

**Command mode** Global configuration mode.

**Usage Guide** For easy management and identification, you can use this command to fix a local IP address as the SNMP source address.

**Configuration Examples** The following example specifies the IP address of Ethernet interface 0/1 as the source address of the SNMP trap message:

```
Ruijie(config)# snmp-server trap-source fastethernet 0/1
```

Related Commands	Command	Description
	<b>snmp-server enable traps</b>	Enables the SNMP agent to send the SNMP trap message to NMS.
	<b>snmp-server host</b>	Specifies the NMS host to send the SNMP trap message.

Platform N/A

Description

## 1.19 snmp-server trap-timeout

Use this command to define the retransmission timeout time of the SNMP trap message. Use the **no** form of this command to restore the default value.

**snmp-server trap-timeout** *seconds*

**no snmp-server trap-timeout**

Parameter Description	Parameter	Description
	<i>seconds</i>	Timeout ( in seconds) of retransmit the SNMP trap message. The range is from 1 to 1,000.

Defaults The default is 30 seconds.

Command mode Global configuration mode.

Usage Guide N/A

Configuration The following example specifies the timeout period as 60 seconds.

Examples 

```
Ruijie(config)# snmp-server trap-timeout 60
```

Related Commands	Command	Description
	<b>snmp-server queue-length</b>	Specifies the length of message queue for the SNMP trap host.
	<b>snmp-server host</b>	Specifies the NMS host to send the SNMP trap message.
	<b>snmp-server trap-source</b>	Specifies the source address of the SNMP trap message.

Platform N/A

**Description**

## 1.20 snmp-server udp-port

Use this command to specify a port to receive SNMP packets. Use the **no** form of this command to restore the default setting.

**snmp-server udp port** *port-number*

**no snmp-server udp port**

**Parameter  
Description**

Parameter	Description
<i>port-number</i>	Specifies a port to receive the SNMP packets.

**Defaults**

The default is 161.

**Command  
mode**

Global configuration mode.

**Usage Guide**

N/A

**Configuration**

The following example specifies port 15000 to receive the SNMP packets.

**Examples**

```
Ruijie(config)# snmp-server udp-port 15000
```

**Related  
Commands**

Command	Description
N/A	N/A

**Platform**

N/A

**Description**

## 1.21 snmp-server user

Use this command to configure a new user to an SNMP group. Use the **no** form of this command to

remove a user from an SNMP group.

```
snmp-server user username groupname { v1 | v2c | v3 [ encrypted ] [ auth { md5 | sha }
auth-password ] [ priv des56 priv-password ] } [ access { [ ipv6 ipv6_aclname ] [ aclnum |
aclname ] } ] ]
no snmp-server user username groupname { v1 | v2c | v3 }
```

**Parameter  
Description**

Parameter	Description
<i>username</i>	Name of the user on the host that connects to the agent.
<i>groupname</i>	Name of the group to which the user belongs.
<b>v1</b>   <b>v2c</b>   <b>v3</b>	Specifies the SNMP version. But only SNMPv3 supports the following security parameters.
<b>encrypted</b>	Specifies whether the password appears in cipher text. In cipher text format, you need to enter continuous hexadecimal numeric characters. Note that the authentication password of MD5 has a length of 16 bytes, while that of SHA has a length of 20 bytes. Two characters make a byte. The encrypted key can be used only by the local SNMP engine on the switch.
<b>auth</b>	Specifies which authentication level should be used.
<i>auth-password</i>	Password string (no more than 32 characters) used by the authentication protocol. The system will change the password to the corresponding authentication key.
<b>priv</b>	Encryption mode. <b>des56</b> refers to 56-bit DES encryption protocol. <i>priv-password</i> : password string (no more than 32 characters) used for encryption. The system will change the password to the corresponding encryption key.
<b>md5</b>	Enables the MD5 authentication protocol. While the <b>sha</b> enables the SHA authentication protocol.
<i>aclnumber</i>	Access list number, which specifies the IPV4 addresses that are permitted to access the MIB.
<i>aclname</i>	Name of the access list, which specifies the IPV4 addresses that are permitted to access the MIB.
<i>ipv6_aclname</i>	Name of the IPv6 access list, which specifies the IPv6 addresses that are permitted to access the MIB.

**Defaults** N/A

**Command mode** Global configuration mode.

**Usage Guide** N/A

**Configuration Examples** The following example configures an SNMPv3 user with MD5 authentication and DES encryption:

```
Ruijie(config)# snmp-server user user-2 mib2user v3 auth md5 authpassstr priv
```

```
des56 despassstr
```

**Related  
Commands**

Command	Description
<b>show snmp user</b>	Displays the SNMP user configuration.

**Platform** N/A**Description**

## 1.22 snmp-server view

Use this command to configure an SNMP view. Use the **no** form of this command to remove an SNMP view.

**snmp-server view** *view-name oid-tree* { **include** | **exclude** }

**no snmp-server view** *view-name* [ *oid-tree* ]

**Parameter  
Description**

Parameter	Description
<i>view-name</i>	View name
<i>oid-tree</i>	Specifies the MIB object to associate with the view.
<b>include</b>	Includes the sub trees of the MIB object in the view.
<b>exclude</b>	Excludes the sub trees of the MIB object from the view.

**Defaults** By default, a view is set to access all MIB objects.**Command  
mode** Global configuration mode.**Usage Guide** N/A**Configuration** The following example sets a view that includes all MIB-2 sub-trees (oid is 1.3.6.1).**Examples**

```
Ruijie(config)# snmp-server view mib2 1.3.6.1 include
```

**Related  
Commands**

Command	Description
<b>show snmp view</b>	Displays the SNMP view configuration.

**Platform** N/A**Description**



## 2 RMON Commands

### 2.1 rmon alarm

Use this command to monitor a MIB variable. Use the **no** form of this command to remove the alarm entry.

**rmon alarm** *number variable interval {absolute | delta} rising-threshold value [event-number] falling-threshold value [event-number] [owner ownername]*  
**no rmon alarm** *number*

#### Parameter description

Parameter	Description
<i>number</i>	Alarm number. The value ranges from 1-65,535.
<i>variable</i>	Alarm variable. The value is a character string consisting of 1 to 255 characters in OID dotted format (the format is entry.integer.instance or a leaf node named .instance, for example. 1.3.6.1.2.1.2.1.10.1).
<i>interval</i>	Sampling interval. The value ranges from 1 to 2,147,483,647 in the unit of second.
<b>absolute</b>	Absolute sampling. In this mode, when the sampling time arrives, the system directly invokes the variable value.
<b>delta</b>	Delta sampling. In this mode, when the sampling time arrives, the system invokes the delta value of the variable within the sampling interval.
<b>rising-threshold value</b>	Rising threshold and the corresponding event number when the threshold is reached. The threshold ranges from -2,147,483,648 to +2,147,483,647.
<i>event-number</i>	The event number ranges from 1 to 65,535.
<b>falling-threshold value</b>	Falling threshold and the corresponding event number when the threshold is reached. The threshold ranges from -2,147,483,648 to +2,147,483,647.
<b>owner ownername</b>	Owner of an entry. The value is a character string consisting of 1 to 63 characters that are case sensitive.

**Default** N/A.

**Command mode** Global configuration mode.

#### Usage guidelines

The RGOS allows you to modify the configured history information of the Ethernet network, including variable, absolute/delta, owner, rising-threshold/falling-threshold, and the corresponding events. However, the modification does not take effect immediately until the system triggers the monitoring event at the next time.

#### Examples

The example below monitors the MIB variable instance ifInNUcastPkts.6.

```
Ruijie(config)# rmon alarm 10 1.3.6.1.2.1.2.2.1.12.6 30 delta
```

```
rising-threshold 20 1 falling-threshold 10 1 owner zhangsan
```

**Related  
commands**

Command	Description
<b>rmon event</b> <i>number</i> [ <b>log</b> ] [ <b>trap</b> <i>community</i> ] <b>description</b> <i>string</i> [ <b>owner</b> <i>owner-string</i> ]	Adds an event definition.

## 2.2 rmon collection history

Use this command to enable history statistics on the Ethernet interface. Use the **no** form of this command to remove the history entry.

**rmon collection history** *index* [**owner** *ownername*] [**buckets** *bucket-number*] [**interval** *seconds*]

**no rmon collection history** *index*

**Parameter  
description**

Parameter	Description
<i>index</i>	Index of a history entry. The value ranges from 1 to 65,535.
<b>owner</b> <i>ownername</i>	Owner of an entry. The value is a character string consisting of 1 to 63 characters that are case sensitive.
<b>buckets</b> <i>bucket-number</i>	Capacity of a history entry (that is, the maximum number of history entries). The value ranges from 1 to 65,535. The default value is 10.
<b>interval</b> <i>seconds</i>	Statistics period. The unit is second. The value ranges from 1 to 3,600. The default value is 1,800 seconds.

**Default** N/A.

**Command mode** Interface configuration mode.

**Usage guidelines** The configured history control entry parameters cannot be modified. And the history entry cannot be removed from the interface where the entry configured.

**Examples**

The example below enables log statistics on interface GigabitEthernet 0/1.

```
Ruijie# configure terminal
Enter configuration commands, one per line. End with CNTL/Z.
Ruijie(config)#interface gigabitEthernet 0/1
Ruijie(config-GigabitEthernet0/1)#rmon collection history 1 owner UserA
buckets 5 interval 60
```

**Related commands**

Command	Description
<b>rmon collection stats</b> <i>index</i> [ <b>owner</b> <i>owner-name</i> ]	Adds a statistical entry on the Ethernet interface.

## 2.3 rmon collection stats

Use this command to monitor an Ethernet interface. Use the **no** form of this command to remove the configuration.

**rmon collection stats** *index* [**owner** *owner-string*]

**no rmon collection stats** *index*

### Parameter description

Parameter	Description
<i>index</i>	Index of the statistic table. The value ranges from 1 to 65,535.
<b>owner</b> <i>ownername</i>	Owner of an entry. The value is a character string consisting of 1 to 63 characters that are case sensitive and do not contain spaces.

### Default

N/A.

### Command mode

Interface configuration mode.

### Usage guidelines

The configured history control entry parameters cannot be modified. And the history entry cannot be removed from the interface where the entry configured.

### Examples

The example below enables monitoring the statistics of interface GigabitEthernet 0/1.

```
Ruijie# configure terminal
Enter configuration commands, one per line. End with CNTL/Z.
Ruijie(config)#interface gigabitEthernet 0/1
Ruijie(config-GigabitEthernet0/1)# rmon collection stats 1 owner UserA
```

### Related commands

Command	Description
<b>rmon collection history</b> <i>index</i> [ <b>owner</b> <i>owner-name</i> ] <b>[buckets</b> <i>bucket-number</i> ] [ <b>interval</b> <i>seconds</i> ]	Adds a history control entry.

## 2.4 rmon event

Use this command to define an event. Use the **no** form of this command to remove the event entry.

**rmon event** *number* [**log**] [**trap** *community*] [*description-string*] [**description** *description-string*] [**owner** *owner-name*]

**no rmon event** *number*

### Parameter description

Parameter	Description
<i>number</i>	Event number. The value ranges from 1 to 65,535.
<b>log</b>	(Optional) Log event. When a log event is triggered, the system records a log.

<b>trap</b> <i>community</i>	(Optional) Trap event. When a trap event is triggered, the system sends trap with the group named “community”.
<b>description</b> <i>description-string</i>	(Optional) Description of the event. The value is a character string consisting of 1 to 127 characters.
<b>owner</b> <i>owner-name</i>	(Optional) Owner of an entry. The value is a character string consisting of 1 to 63 characters that are case sensitive.

**Default** N/A.

**Command mode** Global configuration mode.

**Usage guidelines** The RGOS allows you to modify the configured history information of the Ethernet network, including variable, absolute/delta, owner, rising-threshold/falling-threshold, and the corresponding events. However, the modification does not take effect immediately until the system triggers the monitoring event at the next time.

**Examples** The example below defines the event actions: log event and send trap message.

```
Ruijie#configure terminal
Enter configuration commands, one per line. End with CNTL/Z.
Ruijie(config)#rmon event 1 log trap public description "ifInNUcastPkts
is abnormal" owner UserA
```

Related commands	Command	Description
	<b>rmon alarm</b> <i>number variable interval {absolute   delta } rising-threshold value [event-number] falling-threshold value [event-number] [owner ownername]</i>	Adds an alarm entry.

## 2.5 show rmon

**Default** Use this command to display the RMON configuration.

**show rmo**

**Default** N/A.

**Command mode** Privileged EXEC mode.

**Usage guidelines** N/A.

**Examples** The example below displays the RMON configuration.

```
Ruijie#show rmon
ether statistic table:
        index = 1
```

```
interface = GigabitEthernet 0/1
owner = admin
status = 0
dropEvents = 61
octets = 170647461
pkts = 580375
broadcastPkts = 2135
multiPkts = 3615
crcAlignErrors = 0
underSizePkts = 0
overSizePkts = 0
fragments = 0
jabbers = 0
collisions = 0
packets64Octets = 3254668
packets65To127Octets = 1833370
packets128To255Octets = 2098146
packets256To511Octets = 126716
packets512To1023Octets = 363621
packets1024To1518Octets = 1077865
```

rmon history control table:

```
index = 1
interface = GigabitEthernet 0/1
bucketsRequested = 5
bucketsGranted = 5
interval = 60
owner = UserA
stats = 1
```

rmon history table:

```
index = 1
sampleIndex = 2485
intervalStart = 7d:22h:56m:38s
dropEvents = 0
octets = 5840
pkts = 27
broadcastPkts = 0
multiPkts = 0
crcAlignErrors = 0
underSizePkts = 0
overSizePkts = 0
fragments = 0
jabbers = 0
```

```
        collisions = 0
        utilization = 0
rmon alarm table:
        index: 1
        interval: 60
        oid = 1.3.6.1.2.1.2.2.1.12.6
        sampleType: 2
        alarmValue: 0
        startupAlarm: 3
        risingThreshold: 20
        fallingThreshold: 10
        risingEventIndex: 1
        fallingEventIndex: 1
        owner: UserA
        status: 1

rmon event table:
        index = 1
        description = ifInNUcastPkts is abnormal
        type = 4
        community = public
        lastTimeSent = 0d:0h:0m:0s
        owner =UserA
        status = 1

rmon log table:
        eventIndex = 1
        index = 1
        logTime = 6 d:19 h:21 m:48 s
        logDescription = ifInNUcastPkts is abnormal
```

**Related  
commands**

Command	Description
N/A	N/A

## 2.6 show rmon alarm

**Default** Use this command to display the RMON alarm table.

**show rmon alarm**

**Default** N/A.

**Command mode** Privileged EXEC mode.

**Usage guidelines** N/A.

The example below displays the RMON alarm table.

```
Ruijie#show rmon alarm
rmon alarm table:
      index: 1
      interval: 60
      oid = 1.3.6.1.2.1.2.2.1.12.6
      sampleType: 2
      alarmValue: 0
      startupAlarm: 3
      risingThreshold: 20
      fallingThreshold: 10
      risingEventIndex: 1
      fallingEventIndex: 1
      owner: UserA
      status: 1
```

#### Examples

#### Related commands

Command	Description
<b>rmon alarm</b> <i>number variable</i> <i>interval {absolute   delta }</i> <b>rising-threshold</b> <i>value</i> <i>[event-number]</i> <b>falling-threshold</b> <i>value</i> <i>[event-number]</i> <b>owner</b> <i>ownername</i>	Adds an alarm entry.

## 2.7 show rmon event

Use this command to display the event configuration.

**show rmon event**

**Default** N/A.

**Command mode** Privileged EXEC mode.

**Usage guidelines** N/A.

The example below displays the event configuration.

```
Ruijie#show rmon event
rmon event table:
      index = 1
      description = ifInNUcastPkts is abnormal
      type = 4
```

#### Examples

```
community = public
lastTimeSent = 0d:0h:0m:0s
owner =UserA
status = 1

rmon log table:
    eventIndex = 1
    index = 1
    logTime = 6d:19h:21m:48s
    logDescription = ifInNUcastPkts is abnormal
```

**Related  
commands**

Command	Description
<b>rmon event</b> <i>number</i> [ <b>log</b> ] [ <b>trap</b> <i>community</i> ] [ <b>description</b> <i>description-string</i> ] [ <b>owner</b> <i>ownername</i> ]	Adds an event entry.

## 2.8 show rmon history

Use this command to display the history information.

**show rmon history**

**Default**

N/A.

**Command mode**

Privileged EXEC mode.

**Usage guidelines**

N/A.

The example below displays the history information.

```
Ruijie#show rmon history
rmon history control table:
    index = 1
    interface = GigabitEthernet 0/1
    bucketsRequested = 5
    bucketsGranted = 5
    interval = 60
    owner = UserA
    stats = 1

rmon history table:
    index = 1
    sampleIndex = 2485
    intervalStart = 7d:22h:56m:38s
    dropEvents = 0
    octets = 5840
```

**Examples**



```
pkts = 27
broadcastPkts = 0
multiPkts = 0
crcAlignErrors = 0
underSizePkts = 0
overSizePkts = 0
fragments = 0
jabbers = 0
collisions = 0
utilization = 0
```

**Related  
commands**

Command	Description
<b>rmon collection history</b> <i>index</i> [owner <i>ownername</i> ] [ <b>buckets</b> <i>bucket-number</i> ] [ <b>interval</b> <i>seconds</i> ]	Adds a history control entry.

## 2.9 show rmon statistics

Use this command to display the RMON statistics.

**show rmon statistics**

**Default**

N/A.

**Command mode**

Privileged EXEC mode.

**Usage guidelines**

N/A.

The example below displays the RMON statistics.

**Examples**

```
Ruijie#show rmon statistics
ether statistic table:
    index = 1
    interface = GigabitEthernet 0/1
    owner = admin
    status = 0
    dropEvents = 61
    octets = 170647461
    pkts = 580375
    broadcastPkts = 2135
    multiPkts = 3615
    crcAlignErrors = 0
    underSizePkts = 0
    overSizePkts = 0
```

```
fragments = 0
jabbers = 0
collisions = 0
packets64Octets = 3254668
packets65To127Octets = 1833370
packets128To255Octets = 2098146
packets256To511Octets = 126716
packets512To1023Octets = 363621
packets1024To1518Octets = 1077865
```

**Related  
commands**

Command	Description
<b>rmon collection stats</b> <i>index</i> [ <b>owner</b> <i>owner-string</i> ]	Adds a statistical entry.

## 3 NTP Commands

### 3.1 no ntp

Use this command to disable Network Time Protocol (NTP), and clear all NTP configuration.

**no ntp**

Parameter Description	Parameter	Description
	N/A	N/A

**Defaults** NTP is disabled by default.

**Command mode** Global configuration mode.

**Usage Guide** By default, NTP is disabled. However, once the NTP server or the NTP authentication is configured, the NTP service will be enabled.

**Configuration** The following example disables NTP.

**Examples** Ruijie(config)#**no ntp**

Related Commands	Command	Description
	<b>ntp server</b>	Specifies an NTP server.

**Platform** N/A

**Description**

### 3.2 ntp access-group

Use this command to configure an access group to control NTP access. Use the **no** form of this command to remove the peer access group.

**ntp access-group** { **peer** | **serve** | **serve-only** | **query-only** } *access-list-number* | *access-list-name*

**no ntp access-group** { **peer** | **serve** | **serve-only** | **query-only** } *access-list-number* | *access-list-name*


Parameter Description	Parameter	Description
	<b>peer</b>	Allows the device to receive time requests and NTP control queries to synchronize itself to the servers specified in the access list.

<b>serve</b>	Allows the device to receive time requests and NTP control queries from the servers specified in the access list but not to synchronize itself to the specified servers.
<b>serve-only</b>	Allows the device to receive only time requests from the servers specified in the access list.
<b>query-only</b>	Allows the device to receive only NTP control queries from servers specified in the access list.
<i>access-list-number</i>	Access control list number, ranging from 1 to 99 and 1300 to 1999.
<i>access-list-name</i>	Access control list name.

**Defaults** No access rule to control NTP access is configured by default, namely, NTP access is granted to all devices.

**Command mode** Global configuration mode.

**Usage Guide** Use this command to configure an access group to control NTP access, providing a minimal security measures (more secure way is to use the NTP authentication mechanism).  
The NTP service enables the access group options to be scanned in the following order, from least restrictive to most restrictive: **peer**, **serve**, **serve-only**, **query-only**.  
If you do not configure any access groups, NTP access is granted to all devices. However, once you configure the access rule, NTP access is granted only to the devices specified in the access list.

 NTP control query is not supported in the current system. Although it matches with the order in accordance with the above rules, the related requests about the control and query are not supported.

**Configuration Examples** The following example shows how to allow the device to only receive time requests from the device of 192.168.1.1.

```
Ruijie(config)# access-list 1 permit 192.168.1.1
Ruijie(config)# ntp access-group serve-only 1
```

**Related Commands**

Command	Description
<b>ip access-list</b>	Creates an IP access control list.

**Platform** N/A  
**Description**

### 3.3 ntp authenticate

Use this command to enable NTP authentication. Use the **no** form of this command to disable NTP

authentication.

**ntp authenticate**

**no ntp authenticate**

**Parameter  
Description**

Parameter	Description
N/A	N/A

**Defaults**

Disabled.

**Command  
mode**

Global configuration mode.

**Usage Guide**

If NTP authentication is disabled, the synchronization communication is not encrypted. To enable encrypted communication on the server, enable the NTP authentication and configure other keys globally.

NTP authentication is implemented through the trusted key specified by the **ntp authentication-key** and **ntp trusted-key** commands.

**Configuration  
Examples**

After an authentication key is configured and specified as the global trusted key, enable NTP authentication.

```
Ruijie(config)#ntp authentication-key 6 md5 woooooop
Ruijie(config)#ntp trusted-key 6
Ruijie(config)#ntp authenticate
```

**Related  
Commands**

Command	Description
<b>ntp authentication-key</b>	Sets the global authentication key.
<b>ntp trusted-key</b>	Configures the global trusted key.

**Platform**

N/A

**Description**

## 3.4 ntp authentication-key

Use this command to configure an NTP authentication key. Use the **no** form of this command to remove the NTP authentication key.

**ntp authentication-key** *key-id* **md5** *key-string* [*enc-type*]

**no ntp authentication-key** *key-id*

**Parameter  
Description**

Parameter	Description
<i>key-id</i>	Key ID, ranging from 1 to 4294967295.
<i>key-string</i>	Key string

<i>enc-type</i>	(Optional) Whether this key is encrypted, where, 0 indicates the key is not encrypted, 7 indicates the key is encrypted simply. The key is not encrypted by default.
-----------------	--

**Defaults** NTP authentication key is not configured by default.

**Command mode** Global configuration mode.

**Usage Guide** Use this command to configure an NTP authentication key and enables the **md5** algorithm for authentication. Each key presents a unique key ID, which can be configured as a trusted key using the **ntp trusted-key** command..

You can configure up to 1024 NTP authentication keys. However, each server can support only one key.

**Configuration** The following example configures an NTP authentication key.

**Examples**

```
Ruijie(config)#ntp authentication-key 6 md5 woooooop
```

<b>Related Commands</b>	Command	Description
	<b>ntp authenticate</b>	Enables NTP authentication.
	<b>ntp trusted-key</b>	Configures an NTP trusted key.
	<b>ntp server</b>	Specifies an NTP server.

**Platform** N/A

**Description**

### 3.5 ntp disable

Use this command to disable the device to receive NTP packets on the specified interface.

**ntp disable**

<b>Parameter Description</b>	Parameter	Description
	N/A	N/A

**Defaults** All NTP packets can be received by default.

**Command mode** Interface configuration mode.

**Usage Guide** The NTP message received on any interface can be provided to the client to carry out the clock adjustment. The function can be set to shield the NTP message received from the corresponding interface.

By default, the device receives NTP packets on all interfaces, and adjust clock for the client. You can use this command to disable the device to receive NTP packets on the specified interface.

 This command is configured only the interface that can receive and send IP packets.

**Configuration** The following example disables the device to receive the NTP packets.

**Examples** Ruijie(config-if)# no ntp disable

**Related  
Commands**

Command	Description
N/A	N/A

**Platform** N/A

**Description**

## 3.6 ntp master

Use this command to configure the device to act as an authoritative NTP server, synchronizing time to other devices. Use the **no** form of this command to remove the device as an authoritative NTP server.

**ntp master** [ *stratum* ]

**no ntp master**


**Parameter  
Description**


Parameter	Description
<i>stratum</i>	Stratum level. The range is from 1 to 15. The default is 8.

**Defaults** N/A

**Command  
mode** Global configuration mode.

**Usage Guide** In general, the local device synchronizes time from the external time source directly or indirectly. However, if the time synchronization fails due to network connection trouble, you can use this command to configure the local device to act as an authoritative NTP server to synchronize time to other devices. Once configured, the device will not perform time synchronization with the time source which is of a higher stratum.

 Configuring the device to act as an authoritative NTP server (in particular, specify a lower stratum level), may be likely to overwrite the effective time. If multiple devices in the same network are configured with this command, the time synchronization may be instable due to the time difference between the devices.

 Before configuring this command, you need to manually correct the system clock to avoid too much bias if the device has never performed time synchronization with the external clock

source.

**Configuration** The following example configures the device to act as an authoritative NTP server, and sets the stratum level to 12:

**Examples**

```
Ruijie(config)# ntp master 12
```

**Related  
Commands**

Command	Description
N/A	N/A

**Platform** N/A  
**Description**

## 3.7 ntp server

Use this command to specify a NTP server for the NTP client. Use the **no** form of this command to delete the specified NTP server.

**ntp server** { *ip-addr* | *domain* | **ip** *domain* | **ipv6** *domain* } [ **version** *version* ] [ **source** *if-name* ] [ **key** *keyid* ] [ **prefer** ]

**no ntp server** *ip-addr*

**Parameter  
Description**

Parameter	Description
<i>ip-addr</i>	Sets the IP address of the NTP server. The address can be in IPv4 or IPv6 format.
<i>domain</i>	Sets the domain name of the NTP server, supporting IPv4 and IPv6.
<i>version</i>	(Optional) Specifies the NTP version (1-3). The default is NTPv3.
<i>if-name</i>	(Optional) Specifies the source interface from which the NTP message is sent (L3 interface).
<i>keyid</i>	(Optional) Specifies the encryption key adopted when communication with the corresponding server. The key ID range is from 1 to 4,294,967,295.
<b>prefer</b>	(Optional) Specifies the given NTP server as the preferred one.

**Defaults** No NTP server is configured by default.

**Command mode** Global configuration mode.

**Usage Guide** At present, RGOS system only supports clients other than servers. Up to 20 servers can be synchronized.

To carry out the encrypted communication with the server, set the global encryption key and global trusted key firstly, and then specify the corresponding key as the trusted key of the server to launch



the encrypted communication of the server. It requires the server presents identical global encryption key and global trust key to complete the encrypted communication with the server.

In the same condition (for instance, precision), the prefer clock is used for synchronization.



The source interface of NTP packets must be configured with the IP address and can be communicated with the peer.

**Configuration** The following example configures an NTP server.

**Examples** For IPv4: `Ruijie(config)# ntp server 192.168.210.222`

For IPv6: `Ruijie(config)# ntp server 10::2`

**Related  
Commands**

Command	Description
<code>no ntp</code>	Disables NTP.

**Platform** N/A

**Description**

## 3.8 ntp trusted-key

Use this command to set a global trusted key. Use the **no** form of this command to remove the global trusted key.

**ntp trusted-key** *key-id*

**no ntp trusted-key** *key-id*

**Parameter  
Description**

Parameter	Description
<i>key-id</i>	Global trusted key ID, ranging from 1 to 4294967295.

**Defaults** N/A

**Command  
mode** Global configuration mode.

**Usage Guide** The NTP communication parties must use the same trusted key. The key is identified by ID and is not transmitted to improve security.

**Configuration** The following example configures an authentication key and sets it as a trusted key.

**Examples**

```
Ruijie(config)#ntp authentication-key 6 md5 woooooop
Ruijie(config)#ntp trusted-key 6
Ruijie(config)#ntp server 192.168.210.222 key 6
```

**Related  
Commands**

Command	Description
---------	-------------

<b>ntp authenticate</b>	Enables NTP authentication.
<b>ntp authentication-key</b>	Configures an NTP authentication key.
<b>ntp server</b>	Configures an NTP server.

**Platform** N/A

**Description**

### 3.9 ntp update-calendar

Use this command to enable the NTP client to periodically update the device clock with the time synchronized from the external source clock. Use the **no** form of this command to remove this function.

**ntp update-calendar**

**no ntp update-calendar**

Parameter Description	Parameter	Description
	N/A	N/A

**Defaults** By default, update the calendar periodically is not configured.

**Command mode** Global configuration mode.

**Usage Guide** By default, the NTP update-calendar is not configured. After configuration, the NTP client updates the calendar at the same time when the time synchronization of external time source is successful. It is recommended to enable this function for keeping the accurate calendar.

**Configuration** The following example configures the NTP update calendar periodically.

**Examples**  

```
Ruijie(config)# ntp update-calendar
```

Related Commands	Command	Description
	N/A	N/A

**Platform** N/A

**Description**

### 3.10 show ntp server

Use this command to display the NTP server configuration.

**show ntp server**

---

Parameter Description	Parameter	Description
	N/A	N/A

**Defaults** N/A

**Command mode** Privileged EXEC mode, global configuration mode, interface configuration mode, VLAN configuration mode

**Usage Guide** N/A

**Configuration** The following example displays the NTP server.

**Examples**

```
Ruijie# show ntp server
ntp-server          source      keyid      prefer  version
-----
10::2              None      None      FALSE   3
192.168.210.222    None      None      FALSE   3
```

Related Commands	Command	Description
	N/A	N/A

**Platform** N/A

**Description**

## 3.11 show ntp status

Use this command to display the NTP configuration.

**show ntp status**

Parameter Description	Parameter	Description
	N/A	N/A

**Defaults** N/A

**Command mode** Privileged EXEC mode, global configuration mode, interface configuration mode, VLAN configuration mode

**Usage Guide** Use this command to display the NTP configuration. No configuration is displayed before the synchronization server is configured for the first time.

**Configuration** The following example displays the NTP configuration.

**Examples**

```
Ruijie# show ntp status
Clock is synchronized, stratum 8, reference is 127.127.1.1
nominal freq is 250.0000 Hz, actual freq is 250.0000 Hz, precision is 2**24
reference time is D4BD819B.433892EE (01:27:55.000 UTC )
clock offset is 0.00000 sec, root delay is 0.00000 sec
root dispersion is 0.00002 msec, peer dispersion is 0.00002 msec
```

**Related  
Commands**

Command	Description
N/A	N/A

**Platform  
Description**

N/A

## 4 SNTP Commands

### 4.1 show sntp

Use this command to display the SNTP configuration.

**show sntp**

**Parameter  
Description**

Parameter	Description
N/A	N/A

**Defaults**

**Command mode** Privileged EXEC mode, global configuration mode, interface configuration mode.

**Usage Guide** N/A

**Configuration Examples** The following example displays the SNTP configuration.

```
Ruijie# show sntp
SNTP state      : Enable
SNTP server     : 192.168.4.12
SNTP sync interval : 60
Time zone      : +8
```

**Related  
Commands**

Command	Description
<b>sntp enable</b>	Enables SNTP.

**Platform  
Description** N/A

### 4.2 sntp enable

Use this command to enable the SNTP function. Use the **no** form of this command to restore the default value.

**sntp enable**

**no sntp enable**

**Parameter  
Description**

Parameter	Description
N/A	N/A

**Defaults** SNTP is disabled by default.

**Command mode** Global configuration mode.

**Usage Guide** N/A

**Configuration** The following example enables SNTP.

**Examples** Ruijie(config)# **sntp enable**

**Related Commands**

Command	Description
<b>show sntp</b>	Displays the SNTP configuration.

**Platform Description** N/A

## 4.3 sntp interval

Use this command to set the interval for the SNTP client to synchronize its clock with the NTP/SNTP server. Use the **no** form of this command to restore the default synchronization interval.

**sntp interval** *seconds*

**no sntp interval**

**Parameter Description**

Parameter	Description
<i>seconds</i>	Synchronization interval. The unit is second, and the range is from 60 to 65,535.

**Defaults** The default synchronization interval is 1,800 seconds.

**Command mode** Global configuration mode.

**Usage Guide** To make the synchronization interval configuration effective, run the **sntp enable** command.

**Configuration** The following example configures the synchronization interval to 3,600 seconds.

**Examples** Ruijie(config)# **sntp interval 3600**

**Related Commands**

Command	Description
<b>sntp enable</b>	Enables SNTP.
<b>show sntp</b>	Displays the SNTP configuration.

**Platform** N/A  
**Description**

## 4.4 sntp server

Use this command to specify an SNTP server. Use the **no** form of this command to remove the SNTP server.

**sntp server** { *ip-address* | *domain* } [ **source** *source-ip-address* ]

**no sntp server**

Parameter Description	Parameter	Description
	<i>ip-address</i>	IP address of the SNTP server.
	<i>domain</i>	Specifies the domain name of the SNTP server.
	<i>source-ip-address</i>	(Optional) Indicates the specified source IP address.

**Defaults** No SNTP server is configured by default.

**Command mode** Global configuration mode.

**Usage Guide** As SNTP is fully compatible with NTP, the SNTP server can be used as an NTP server in Internet.

**Configuration** The following example specifies an SNTP server in Internet.

**Examples**  
Ruijie(config)# sntp server 192.168.4.12

Related Commands	Command	Description
	<b>show sntp</b>	Displays the SNTP configuration.
	<b>sntp enable</b>	Enables SNTP.

**Platform** N/A  
**Description**

## 5 SPAN-RSPAN Commands

### 5.1 mac-loopback

Use this command to enable MAC loopback. Use the **no** form of this command to disable MAC loopback.

**mac-loopback**

**no mac-loopback**

Parameter Description	Parameter	Description
	N/A	N/A

**Defaults** MAC loopback is disabled by default.

**Command mode** Interface configuration mode.

**Usage Guide** The MAC loopback feature must be enabled on the interfaces for purposes of local one-to-many mirroring. (Please enable the MAC loopback feature on the down interface, and do not add other configurations to the interface.)

**Configuration Examples** The following example configures a remote VLAN.

```
Ruijie(config)#vlan 100
Ruijie(config-vlan)#remote-span
Ruijie(config-vlan)#exit
```

The following example configures a session and specifies the mirrored port.

```
Ruijie(config)#monitor session 1 remote-source
Ruijie(config)#monitor session 1 source interface gigabitEthernet 4/1 both
```

The following example configures the mirroring port, and enables MAC loopback on the port.

```
Ruijie(config)#monitor session 1 destination remote vlan 100 interface
gigabitEthernet 4/2 switch
Ruijie(config)#interface gigabitEthernet 4/2
Ruijie(config-if-GigabitEthernet 4/2)#switchport access vlan 100
Ruijie(config-if-GigabitEthernet 4/2)#mac-loopback
```

The following example adds interfaces GigabitEthernet 4/3-4 to the remote VLAN.

```
Ruijie(config)#interface range gigabitEthernet 4/3-4
Ruijie(config-if-range)#switchport access vlan 100
```



Related Commands	Command	Description
	N/A	N/A

**Platform** N/A

**Description**

## 5.2 monitor session

Use this command to configure the SPAN session and specify the source port (monitored port).

**monitor session** *session-num* **source interface** *interface-id* [ **both** | **rx** | **tx** ]

Use this command to configure the SPAN session mirroring only the traffic permitted by the access list

**monitor session** *session-num* **source interface** *interface-id* **rx acl** *acl-name*

Use this command to configure the SPAN session and specify the destination port (monitoring port).

**monitor session** *session-num* **destination interface** *interface-id* [**switch** ]

Use this command to configure the remote SPAN session ID on the source device..

**monitor session** *session-num* **remote-source**

Use this command to configure the remote SPAN session ID on the destination device.

**monitor session** *session-num* **remote-destination**

Use this command to configure the remote SPAN session and specify the remote SPAN destination VLAN.

**monitor session** *session-num* **destination remote vlan** *remote-vlan-id* **interface** *interface-id*  
[ **switch** ]

Use this command to configure the SPAN session and specify the source VLAN to monitor. Note that the source VLAN should not be a remote VLAN.

**monitor session** *session-num* **source vlan** *vlan-id* [ **rx** | **tx** | **both** ]

Use this command to limit the SPAN source traffic to specific VLANs.

**monitor session** *session-num* **filter vlan** *vlan-id-list*

Use this command to remove the specified SPAN session, or remove the source port or destination port of the specified SPAN session.

**no monitor session** *session-num* [ **source interface** *interface-id* | **destination interface** *interface-id* ]

Use this command to remove the specified remote SPAN session, or remove the destination port of

the remote SPAN session.

**no monitor session** *session-num* [ **destination remote vlan** *remote-vlan-id* **interface** *interface-id* ]

Use this command to remove the specified remote SPAN session, or remove the destination port of the remote SPAN session.

**default monitor session** *session-num* [ **destination remote vlan** *remote-vlan-id* **interface** *interface-id* ]

Use this command to remove the specified SPAN session, or remove the source port or destination port of the SPAN session.

**default monitor session** *session-num* { **source interface** *interface-id* | **destination interface** *interface-id* }

#### Parameter Description

Parameter	Description
<i>session_number</i>	SPAN session number
<i>interface-id</i>	Interface name
<b>acl</b> <i>acl-name</i>	Access list name
<i>remote-vlan-id</i>	Remote VLAN ID
<i>vlan-id</i>	VLAN ID (remote VLAN excluded)
<i>vlan-id-list</i>	VLAN list (remote VLAN excluded)
<b>rx</b>	Monitors the only received traffic.
<b>tx</b>	Monitors the only transmitted traffic.
<b>both</b>	Monitors both received and transmitted traffic. This is the default.
<b>switch</b>	Enables switching on the destination port. Switching function is disabled by default.

**Defaults** Port monitoring is disabled by default.

**Command mode** Global configuration mode.

**Usage Guide** Use this command to configure SPAN or remote SPAN, and specify the source port or destination port.

If the **both**, **rx** or **tx** is not specified for the source port, the **both** parameter is the default.

Configuring an access list for the source port indicates that only the traffic permitted by the access list is monitored.

The **switch** feature is disabled on the destination port.

**Configuration** The following example configures the source port and destination port of the SPAN session.

#### Examples

```
Ruijie(config)# monitor session 1 source interface gigabitEthernet 0/1
Ruijie(config)# monitor session 1 destination interface gigabitEthernet 0/2
```

The following example configures the SPAN session mirroring only the traffic permitted by the access list.

```
Ruijie(config)# monitor session 3 source interface gigabitEthernet 0/3 rx acl 90
```

The following example configures a remote SPAN session.

```
Ruijie(config)# monitor session 10 remote-source
```

The following example configures the destination port of the remote SPAN session.

```
Ruijie(config)# monitor session 4 destination remote vlan 10 interface gigabitEthernet 0/5
```

The following example configures the source VLAN of the SPAN session.

```
Ruijie(config)# monitor session 1 source vlan 1
```

The following example removes the SPAN session.

```
Ruijie(config)# no monitor session 1
```

The following example removes the source port and destination port of the SPAN session.

```
Ruijie(config)# no monitor session 1 source interface gigabitEthernet 0/18
Ruijie(config)# no monitor session 1 destination interface gigabitEthernet 0/18
```

The following example configures the SPAN session monitoring only the traffic sent from CPU.

```
Ruijie(config)# monitor session 3 source interface gigabitEthernet 0/3 tx cpu
```

The following example configures the SPAN session monitoring traffic, including the traffic sent from CPU.

```
Ruijie(config)# monitor session 3 source interface gigabitEthernet 0/3 tx cpu
Ruijie(config)# monitor session 3 source interface gigabitEthernet 0/3 tx
```

**Related  
Commands**

Command	Description
N/A	N/A

**Platform  
Description**

N/A

## 5.3 remote-span

Use this command to configure a remote SPAN VLAN in VLAN configuration mode. Use the **no** form of this command to disable the remote SPAN VLAN.

**remote-span**

**no remote-span****Parameter  
Description**

Parameter	Description
N/A	N/A

**Defaults** Remote SPAN VLAN is disabled by default.

**Command mode** VLAN configuration mode.

**Usage Guide** N/A

**Configuration** The following example configures a remote SPAN VLAN.

**Examples**

```
Ruijie(config)# vlan 100  
Ruijie(config-vlan)# remote-span
```

**Related  
Commands**

Command	Description
<b>show vlan</b>	Displays VLAN configuration.

**Platform** N/A  
**Description**

## 5.4 show monitor

Use this command to display the SPAN configurations.

**show monitor** [ **session** *session\_number* ]

**Parameter  
Description**

Parameter	Description
<i>session_number</i>	Displays the specified SPAN session.

**Defaults** N/A

**Command mode** Privileged EXEC mode, global configuration mode and interface configuration mode

**Usage Guide** N/A

**Configuration** This following example displays all SPAN sessions.

**Examples**

```
Ruijie(config)# show monitor  
sess-num: 2  
span-type: LOCAL_SPAN
```

```
src-intf:
TenGigabitEthernet 0/5      frame-type Both
dest-intf:
TenGigabitEthernet 0/6
sess-num: 1
span-type: LOCAL_SPAN
src-intf:
TenGigabitEthernet 0/3      frame-type Both
dest-intf:
```

The following example displays SPAN session 1.

```
Ruijie(config)# show monitor session 1
sess-num: 1
span-type: LOCAL_SPAN
src-intf:
TenGigabitEthernet 0/3      frame-type Both
dest-intf:
TenGigabitEthernet 0/4
```

Related  
Commands

Command	Description
N/A	N/A

Platform  
Description

N/A

## 6 ERSPAN Commands

### 6.1 destination ip address

Use this command to configure the destination IP address for GRE encapsulation. Use the **no** form of this command to delete the destination IP address.

**destination ip address** *ip\_address*

**no destination ip address**

Parameter Description	Parameter	Description
	<i>ip_address</i>	The destination IP address of GRE encapsulation.

**Defaults** N/A

**Command mode** ERSPAN configuration mode

**Usage Guide** To return to privileged EXEC mode, enter the **end** command or the **Ctrl-C** key combination.  
To return to global configuration mode, enter the **exit** command.

**Configuration** The following example configures the destination IP address.

**Examples**

```
Ruijie(config)# monitor session 2 erspan-source  
Ruijie(config-mon-erspan-src)destination ip address 10.1.1.2
```

Related Commands	Command	Description
	<b>show monitor</b>	Displays the mirror sessions.

**Platform** N/A

**Description**

### 6.2 ip dscp

Use this command to configure the DSCP value of the IP packets. Use the **no** form of this command to restore the default setting.

**ip dscp** *dscp-value*

**no ip dscp**

Parameter Description	Parameter	Description
	<i>dscp-value</i>	The DSCP value of the IP packets.

**Defaults** The default DSCP value is 0.

**Command mode** ERSPAN configuration mode

**Usage Guide** To return to privileged EXEC mode, enter the **end** command or use the **Ctrl-C** key combination.  
To return to global configuration mode, enter the **exit** command.

**Configuration** The following example configures the DSCP value of the IP packets.

**Examples**

```
Ruijie(config)# monitor session 2 erspan-source  
Ruijie(config-mon-erspan-src)#ip dscp 56
```

**Related  
Commands**

Command	Description
<b>show monitor</b>	Displays the mirror sessions.

**Platform** N/A  
**Description**

## 6.3 ip ttl

Use this command to configure the TTL value of the IP packets. Use the **no** form of this command to restore the default setting.

**ip ttl** *ttl-value*  
**no ip ttl**

**Parameter  
Description**

Parameter	Description
<i>ttl-value</i>	The TTL value of the IP packets.

**Defaults** The default TTL value is 64.

**Command mode** ERSPAN configuration mode

**Usage Guide** To return to privileged EXEC mode, enter the **end** command or use the **Ctrl-C** key combination.  
To return to global configuration mode, enter the **exit** command.

**Configuration** The following example configures the TTL value of IP packets.

**Examples**

```
Ruijie(config)# monitor session 2 erspan-source  
Ruijie(config-mon-erspan-src)#ip ttl 65
```

**Related**

Command	Description
---------	-------------

Commands		
	<b>show monitor</b>	Displays the mirror sessions.

Platform N/A

Description

## 6.4 monitor session

Use this command to create an ERSPAN session. Use the **no** form of this command to delete the session.

**monitor session** *session\_num* { **erspan-source** }

**no monitor session** *session\_num*

Parameter Description	Parameter	Description
	<i>session-num</i>	Session ID

Defaults N/A

Command mode Global configuration mode

Usage Guide To return to privileged EXEC mode, enter the **end** command or the **Ctrl-C** key combination.  
To return to global configuration mode, enter the **exit** command.

Configuration The following example creates an ERSPAN session.

Examples 

```
Ruijie(config)# monitor session 2 erspan-source
```

Related Commands	Command	Description
	<b>show monitor</b>	Displays the mirror session information.

Platform N/A

Description

## 6.5 origin ip address

Use this command to configure the source IP address for GRE encapsulation. Use the **no** form of this command to delete the source IP address.

**origin ip address** *ip\_address*

**no origin ip address**



<b>Parameter Description</b>	<b>Parameter</b>	<b>Description</b>
	<i>ip_address</i>	The source IP address of GRE encapsulation.
<b>Defaults</b>	N/A	
<b>Command mode</b>	ERSPAN configuration mode	
<b>Usage Guide</b>	To return to privileged EXEC mode, enter the <b>end</b> command or use the <b>Ctrl-C</b> key combination. To return to global configuration mode, enter the <b>exit</b> command.	
<b>Configuration Examples</b>	The following example configures the source IP address. <pre>Ruijie(config)# monitor session 2 erspan-source Ruijie(config-mon-erspan-src)origin ip address 11.1.1.2</pre>	
<b>Related Commands</b>	<b>Command</b>	<b>Description</b>
	<b>show monitor</b>	Displays the mirror sessions.
<b>Platform Description</b>	N/A	

## 6.6 shutdown

Use this command to shut down the session. Use the **no** form of this command to restore the default setting.

**shutdown**

**no shutdown**

<b>Parameter Description</b>	<b>Parameter</b>	<b>Description</b>
	N/A	N/A
<b>Defaults</b>	The ERSPAN session is enabled by default.	
<b>Command mode</b>	ERSPAN configuration mode	
<b>Usage Guide</b>	To return to privileged EXEC mode, enter the <b>end</b> command or the <b>Ctrl-C</b> key combination. To return to global configuration mode, enter the <b>exit</b> command.	

**Configuration** The following example shuts down ERSPAN session 2.

**Examples**

```
Ruijie(config)# monitor session 2 erspan-source  
Ruijie(config-mon-erspan-src)#shutdown
```

**Related  
Commands**

Command	Description
<b>show monitor</b>	Displays the mirror sessions.

**Platform** N/A

**Description**

## 6.7 source interface

Use this command to configure the ERSPAN source interface. Use the **no** form of this command to delete this source interface.

**source interface** *single-interface* [ **rx** | **tx** | **both** ]  
**no source interface** *single-interface* [ **rx** | **tx** | **both** ]

Use this command to configure the flow-based ERSPAN source interface. Use the **no** form of this command to delete this source interface.

**source interface** *single-interface* **rx acl** *acl-name*

**Parameter  
Description**

Parameter	Description
<i>single-interface</i>	Source interface of the mirror.
<b>rx</b>	Receives only the traffic of Rx direction.
<b>tx</b>	Receives only the traffic of Tx direction.
<b>both</b>	(Default ) Receives the traffic of Tx and Rx directions.
<b>acl</b> <i>acl-name</i>	ACL name.

**Defaults** N/A

**Command  
mode** ERSPAN configuration mode

**Usage Guide** To return to privileged EXEC mode, enter the **end** command or use the **Ctrl-C** key combination.  
To return to global configuration mode, enter the **exit** command.

**Configuration** The following example configures an ERSPAN source interface.

**Examples**

```
Ruijie(config)# monitor session 2 erspan-source  
Ruijie(config-mon-erspan-src)#source interface gigabitEthernet 0/1 both
```

The following example configures a flow-based ERSPAN source interface.

```
source interface gigabitEthernet 0/3 rx acl 90
```

Related Commands	Command	Description
	show monitor	Displays the mirror sessions.

Platform  
Description

N/A

## 7 sFlow Commands

### 7.1 sflow agent

Use this command to configure the address of the sFlow Agent.

```
sflow agent { address { ip-address | ipv6 ipv6-address } } | { interface { interface-name | ipv6 interface-name } }
```

Use this command to delete the address of the sFlow Agent.

```
no sflow agent { address | interface }
```

Use this command to restore the default setting.

```
default sflow agent { address | interface }
```

#### Parameter Description

Parameter	Description
<b>address</b>	Configures the IP address of the sFlow Agent.
<i>ip-address</i>	sFlow Agent IPv4 address.
<b>ipv6</b> <i>ipv6-address</i>	sFlow Agent IPv6 address.
<b>interface</b>	Configures the interface of the sFlow Agent.
<i>interface-name</i>	Interface of IPv4 address.
<b>ipv6</b> <i>interface-name</i>	Interface of IPv6 address.

#### Defaults

**Command Mode** Global configuration mode

**Default Level** 14

**Usage Guide** This command is used to configure the Agent IP address field in the output sFlow datagram. The datagram not configured with this field cannot be output. The sFlow Agent address shall be a host address. When a non-host address (for example, a multicast or broadcast address) is configured as the sFlow Agent address, a message indicating configuration failure is displayed. It is recommended that the IP address of the sFlow Agent device be configured as the sFlow Agent address.

**Configuration Examples** The following example configures 192.168.2.1 as the sFlow Agent address.

```
Ruijie(config)# sflow agent address 192.168.2.1
```

**Verification** Use the show sflow command to display the sFlow configuration.

**Prompt** Prompt an error message when the address is invalid.

**Messages**      `invalid host address.`

**Common Errors**      N/A

**Platforms**      N/A

## 7.2 sflow collector *collector-id* destination

Use this command to configure the address of the sFlow Collector.

**sflow collector** *collector-id* **destination** { *ip-address* | **ipv6** *ipv6\_address* } *udp-port* ]

Use this command to delete the address of the sFlow Collector.

**no sflow collector** *collector-id* **destination** { *ip-address* | **ipv6** *ipv6\_address* } *udp-port* ]

Use this command to delete the address of the sFlow Collector.

**default sflow collector** *collector-id* **destination** { *ip-address* | **ipv6** *ipv6\_address* } *udp-port* ]

### Parameter Description

Parameter	Description
<i>collector-id</i>	sFlow Collector ID. The range is from 1 to 2.
<i>ip-address</i>	sFlow Collector IPv4 address
<b>ipv6</b> <i>ipv6-address</i>	sFlow Collector IPv6 address
<i>udp-port</i>	sFlow Collector listening port number

### Defaults

**Command Mode**      Global configuration mode

**Default Level**      14

**Usage Guide**      This command is used to configure the sFlow Collector address. The sFlow Collector address shall be a host address. When a non-host address (for example, a multicast or broadcast address) is configured as the sFlow Collector address, a message indicating configuration failure is displayed. The sFlow Collector monitors the sFlow datagram on the specified port.

**Configuration Examples**      N/A

**Verification**      Use the **show sflow** command to display the sFlow Collector.

**Prompt**      Prompt an error message when the address is invalid.

**Messages**      `invalid host address.`

No VPN exists.

```
vpn is not exist
```

**Common Errors** N/A

**Platforms** N/A

### 7.3 sflow collector *collector-id* max-datagram-size

Use this command to configure the maximum length of the output sFlow datagram.

**sflow collector** *collector-id* **max-datagram-size** *datagram-size*

Use this command to restore the default maximum length of the output sFlow datagram.

**no sflow collector** *collector-id* **max-datagram-size**

Use this command to restore the default maximum length of the output sFlow datagram.

**default sflow collector** *collector-id* **max-datagram-size**

Parameter Description	Parameter	Description
	<i>collector-id</i>	sFlow Collector ID. The range is from 1 to 2.
	<b>max-datagram-size</b>	The maximum length of the output sFlow datagram. The range is from 200 to 9,000.
	<i>datagram-size</i>	

**Defaults** The default maximum length of the output sFlow datagram is 1,400.

**Command Mode** Global configuration mode

**Default Level** 14

**Usage Guide** N/A

**Configuration Examples** The following example configures 1,000 as the maximum length of the output sFlow datagram for sFlow Collector.

```
Ruijie(config)# sflow collector 1 max-datagram-size 1000
```

**Verification** Use the **show sflow** command to display the maximum length of the output sFlow datagram.

**Prompt Messages** N/A

**Common Errors** N/A

**Platforms** N/A

## 7.4 sflow counter collector

Use this command to enable the sFlow Agent to send counter samples to the sFlow Collector.

**sflow counter collector** *collector-id*

Use this command to disable the sFlow Agent to send counter samples to the sFlow Collector.

**no sflow counter collector**

Use this command to disable the sFlow Agent to send counter samples to the sFlow Collector.

**default sflow counter collector**

**Parameter Description**

Parameter	Description
<i>collector-id</i>	sFlow Collector ID. The range is from 1 to 2.

**Defaults**

**Command Mode** Interface configuration mode

**Default Level** 14

**Usage Guide** This command can be used for physical ports, SVI ports and sub routed ports and aggregate ports. sFlow datagrams can be output only when an IP address is configured for the corresponding sFlow Collector.

**Configuration Examples** The following example enables interface TenGigabitEthernet 0/5 to send counter samples to sFlow Collector 2.

```
Ruijie(config-if-TenGigabitEthernet 0/5)# sflow counter collector 2
```

**Verification** Use the **show sflow** command to display the sFlow counter sampling configuration.

**Prompt Messages** N/A

**Common Errors** N/A

**Platforms** N/A

## 7.5 sflow counter interval

Use this command to configure the sFlow counter sampling interval.

**sflow counter interval** *seconds*

Use this command to restore the default sFlow counter sampling interval.

**no sflow counter interval**

Use this command to restore the default sFlow counter sampling interval.

**default sflow counter interval**

Parameter Description	Parameter	Description
	<i>seconds</i>	sFlow counter sampling interval. The range is form 3 to 2,147,483,647. The unit is second.
<b>Defaults</b>	The default sFlow counter sampling interval is 30 seconds.	
<b>Command Mode</b>	Global configuration mode	
<b>Default Level</b>	14	
<b>Usage Guide</b>	This command is used to configure the global sFlow counter sampling interval, and sFlow Counter sampling of all interfaces uses this sampling interval.	
<b>Configuration Examples</b>	The following example configures the sFlow counter sampling interval to 60 seconds. <pre>Ruijie(config)# sflow counter interval 60</pre>	
<b>Verification</b>	Use the <b>show sflow</b> command to display the sFlow counter sampling interval.	
<b>Prompt Messages</b>	N/A	
<b>Common Errors</b>	N/A	
<b>Platforms</b>	N/A	

## 7.6 sflow enable

Use this command to enable flow sampling and counter sampling on the interface.

**sflow enable** [ *ingress* | *egress* ]



Use this command to disable flow sampling and counter sampling on the interface.

**no sflow enable**

Use this command to disable flow sampling and counter sampling on the interface.

**default sflow enable**

Parameter Description	Parameter	Description
	<b>ingress</b>	Enables sFlow sampling in ingress direction.
	<b>egress</b>	Enables sFlow sampling in egress direction.

**Defaults** The sFlow sampling function on an interface is disabled by default.

**Command Mode** Interface configuration mode

**Default Level** 14

**Usage Guide** This command can be used to enable counter sampling and flow sampling for physical ports, SVI ports, sub routed ports and aggregate ports. sFlow datagram can be output only when an IP address is configured for the corresponding sFlow Collector.

If the direction parameter is not specified, sampling on both directions are enabled.

The SVI ports and sub routed ports support only the **ingress** parameter.

**Configuration Examples** The following example enables the sFlow sampling on interface TenGigabitEthernet 0/5.

```
Ruijie(config-if-TenGigabitEthernet 0/5)# sflow enable
```

**Verification** Use the **show sflow** command to display the status of the sFlow sampling function.

**Prompt Messages** N/A

**Common Errors** N/A

**Platforms** N/A

## 7.7 sflow flow collector

Use this command to enable the sFlow Agent to send flow samples to the sFlow Collector.

**sflow flow collector** *collector-id*

Use this command to disable the sFlow Agent to send flow samples to the sFlow Collector.

**no sflow flow collector**

Use this command to disable the sFlow Agent to send flow samples to the sFlow Collector.

**default sflow flow collector**

Parameter Description	Parameter	Description
	<i>collector-id</i>	sFlow Collector ID. The range is from 1 to 2.

**Defaults**

**Command** Interface configuration mode  
**Mode**

**Default Level** 14

**Usage Guide** This command can be used for physical ports, SVI ports, sub routed ports and aggregate ports. sFlow datagrams can be output only when an IP address is configured for the corresponding sFlow Collector.

**Configuration Examples** The following example enables interface TenGigabitEthernet 0/5 to send flow samples to sFlow Collector 2.

```
Ruijie(config-if-TenGigabitEthernet 0/5)# sflow flow collector 2
```

**Verification** Use the **show sflow** command to display the sFlow flow sampling configuration.

**Prompt Messages** N/A

**Common Errors** N/A

**Platforms** N/A

## 7.8 sflow flow max-header

Use this command to configure the maximum length of the packet header copied during flow sampling.

**sflow flow max-header length**

Use this command to restore the default maximum length of the packet header copied during flow sampling.

**no sflow flow max-header**

Use this command to restore the default maximum length of the packet header copied during flow

sampling.

**default sflow flow max-header**

**Parameter  
Description**

Parameter	Description
<i>length</i>	Maximum length of the packet header to be copied. The range is from 18 to 256. The unit is byte.

**Defaults** The default length is 64 bytes.

**Command  
Mode** Global configuration mode

**Default Level** 14

**Usage Guide** Configure the maximum number of bytes of the packet content copied from the header of the original packet. The copied content is recorded in the generated sample.

**Configuration  
Examples** The following example sets the maximum length of the packet header copied during sFlow flow sampling to 128 bytes.

```
Ruijie(config)# sflow flow max-header 128
```

**Verification** Use the **show sflow** command to display the maximum length of the packet header copied during sFlow flow sampling.

**Prompt  
Messages** N/A

**Common  
Errors** N/A

**Platforms** N/A

## 7.9 sflow sampling-rate

Use this command to configure the sampling rate of sFlow flow sampling.

**sflow sampling-rate** *rate*

Use this command to restore the default the sampling rate of sFlow flow sampling.

**no sflow sampling-rate**

Use this command to restore the default sampling rate of sFlow flow sampling.

**default sflow sampling-rate**

Parameter Description	Parameter	
	Parameter	Description
	<i>rate</i>	Sampling rate of sFlow sampling. One packet is sampled from every <i>n</i> packets ( <i>n</i> equals the value of rate). The range is from 4,096 to 16,777,215.
Defaults	The default sFlow flow sampling rate is 8,192.	
Command Mode	Global configuration mode	
Default Level	14	
Usage Guide	This command is used to configure the global sampling rate of sFlow flow sampling, and sFlow flow sampling of all interfaces uses this sampling rate.	
Configuration Examples	The following example sets the sFlow flow sampling rate to 4,096. <pre>Ruijie(config)# sflow sampling-rate 4096</pre>	
Verification	Use the <b>show sflow</b> command to display the sFlow flow sampling rate.	
Prompt Messages	N/A	
Common Errors	N/A	
Platforms	N/A	

## 7.10 show sflow

Use this command to display the sFlow configuration.

**show sflow**

Parameter Description	Parameter	
	Parameter	Description
	N/A	N/A
Command Mode	Privileged EXEC mode/global configuration mode/interface configuration mode	
Default Level	14	
Usage Guide	N/A	

**Configuration** The following example displays the sFlow configuration.

**Examples**

```
Ruijie(config)#show sflow
sFlow datagram version 5
Global information:
Agent IP: 10.10.10.10
sflow counter interval:30
sflow flow max-header:64
sflow sampling-rate:8192
Collector information:
ID   IP                               Port Size VPN
1    192.168.2.100                    6343 1400
2    NULL                             0    1400
Port information
Interface          CID  FID  Enable
TenGigabitEthernet 0/1      0    1    Y
TenGigabitEthernet 0/2      0    1    N
```

Field Description:

Field	Description
sFlow datagram version	sFlow datagram version. Currently, Ruijie supports V5 only.
Agent IP	IP address of the sFlow Agent. It can be configured by using the sflow Agent address { <i>ip-address</i>   <i>ipv6 ipv6-address</i> } command.
sflow counter interval	Counter sampling interval
sflow flow max-header	The maximum length of bytes of the packet header to be copied
sflow sampling-rate	Flow sampling rate
ID	sFlow Collector ID
IP	The IP address of the sFlow Collector to receive sFlow datagram
Port	Port No. of the sFlow Collector to receive sFlow datagram
Size	The maximum length of the output sFlow datagram
VPN	VPN instance name of sFlow Collector
Interface	An interface configured with sFlow function
CID	The destination sFlow Collector ID to which the sFlow Agent sends the counter samples.
FID	The destination sFlow Collector ID to which the sFlow Agent sends the flow samples.
Enable	The status of the sFlow sampling function

**Prompt Messages**

N/A

**Platforms**

N/A



## Multicast Commands

---

1. IGMP Snooping Commands
2. IPv4 Multicast Routing Commands

# 1 IGMP Snooping Commands

## 1.1 clear ip igmp snooping gda-table

Use this command to clear the Group Destination Address (GDA) table.

**clear ip igmp snooping gda-table**

Parameter Description	Parameter	Description
	N/A	N/A
Defaults	N/A	
Command Mode	Privileged EXEC mode	
Usage Guide	The IGMP Snooping GDA table contains VLAN IDs (VIDs), group addresses, routing interface (static or dynamic) ID, and member interface ID. Among them, the VID and group address identify a forwarding entry; the static routing interfaces will not age and cannot be deleted by using the <b>clear ip igmp snooping gda-table</b> command.	
Configuration	The following example clears the Group Destination Address (GDA) table.	
Examples	<pre>Ruijie# clear ip igmp snooping gda-table</pre>	
Platform	N/A	
Description		

## 1.2 clear ip igmp snooping statistics

Use this command to clear IGMP Snooping statistics.

**clear ip igmp snooping statistics**

Parameter Description	Parameter	Description
	N/A	N/A
Defaults	N/A	
Command Mode	Privileged EXEC mode	

**Usage Guide** This command is used to clear the IGMP Snooping statistics, which can be displayed by using the **show ip igmp snooping statistics** command.

**Configuration** The following example clears the IGMP Snooping statistics.

**Examples**

```
Ruijie# clear ip igmp snooping statistics
```

**Platform** N/A

**Description**

## 1.3 deny

Use this command to deny the forwarding of the multicast streams in the range specified by the profile.  
**deny**

Parameter Description	Parameter	Description
	N/A	N/A

**Defaults** The forwarding of the multicast streams in the range specified by the profile is denied.

**Command Mode** Profile configuration mode

**Usage Guide** First, configure the multicast range using the range command in the profile configuration mode. In addition, the profile must be applied to the interface in order to make the profile configuration take effect.

**Configuration** The following is an example of deny the forwarding of the multicast stream 224.2.2.2 to 224.2.2.244.

**Examples**

```
Ruijie(config)# ip igmp profile 1
Ruijie(config-profile)# range 224.2.2.2 224.2.2.244
Ruijie(config-profile)# deny
```

**Platform** N/A

**Description**

## 1.4 ip igmp profile

Use this command to create a profile and enter the IGMP profile configuration mode.

Use the **no** or **default** form of this command to restore the default setting.

**ip igmp profile** *profile-number*

**no ip igmp profile** *profile-number*

**default ip igmp profile** *profile-number*

Parameter	Parameter	Description
-----------	-----------	-------------



<b>Description</b>		
	<i>profile-number</i>	Profile number, in the range from 1 to 1024
<b>Defaults</b>	No profile is created by default.	
<b>Command Mode</b>	Global configuration mode	
<b>Usage Guide</b>	<p>The profile is a filter to permit/deny specified groups in the following steps:</p> <ul style="list-style-type: none"><li>● Use the <b>ip igmp profile</b> command to create a profile and enter profile configuration mode.</li><li>● Use the <b>range</b> command to define a profile range.</li><li>● Use the <b>permit</b> command to permit this profile in the filtering, or use the <b>deny</b> command to deny this profile in the filtering.</li><li>● If the <b>deny</b> command is used without any profile specified, all profiles in the profile are permitted.</li><li>● If the <b>permit</b> command is used without any profile specified, all profiles in the profile are denied.</li></ul>	
<b>Configuration</b>	The following example creates and permits profile 1 with addresses from 224.2.2.2 to 224.2.2.244.	
<b>Examples</b>	<pre>Ruijie(config)# ip igmp profile 1 Ruijie(config-profile)# range 224.2.2.2 224.2.2.244 Ruijie(config-profile)# permit</pre>	
<b>Platform</b>	N/A	
<b>Description</b>		

## 1.5 ip igmp snooping

Use this command to enable IGMP snooping and enter the IVGL mode.

**ip igmp snooping ivgl**

Use this command to enable IGMP snooping and enter the SVGL mode.

**ip igmp snooping svgl**

Use this command to enable IGMP snooping and enter the IVGL-SVGL mode.

**ip igmp snooping ivgl-svgl**

Use the **no** or **default** command to restore the default setting.

**no ip igmp snooping**

**default ip igmp snooping**

<b>Parameter Description</b>	Parameter	Description
	N/A	N/A

**Defaults** IGMP Snooping is disabled by default.

**Command** Global configuration mode

**Mode**

- Usage Guide**
- **IVGL (Independent VLAN Group Learning):** In this mode, the multicast flows in different VLANs are independent. A host can only request multicast flows to the router interface in the same VLAN. Upon receiving the multicast flow in any VLAN, the switch forwards the flow to the member port in the same VLAN.
  - **SVGL (Shared VLAN Group Learning):** In this mode, the hosts in different VLANs share the same multicast flow. A host can request multicast flows across VLANs. By designating a Shared VLAN, you can only forward the multicast flows received in this Shared VLAN to other member ports in different VLANs. In the SVGL mode, IGMP Profile must be used to divide the multicast address range, within which the multicast flow can be forwarded across VLANs. By default, all group range is not within the SVGL range and all multicast flows are dropped. As shown in Figure-3:
  - **IVGL-SVGL mode:** also known as promiscuous mode. In this mode, the IVGL mode and the SVGL mode can co-exist. Use IGMP Profile to divide a set of multicast address range to the SVGL, within which the member port of the multicast forwarding entry can be forwarded across VLANs and without which the member ports are forwarded in the same VLAN.



SVGL mode and IVGL-SVGL mode conflict with the IP multicast function.



PIM Snooping must depend on either IVGL or IVGL-SVGL mode of IGMP Snooping. Use **no ip igmp snooping** command to disable IGMP Snooping after PIM Snooping is disabled.

**Configuration** The following example enables IGMP Snooping and enters the IVGL mode.

**Examples** Ruijie(config)# ip igmp snooping ivgl

The following example enables IGMP Snooping and enters the SVGL mode.

```
Ruijie(config)# ip igmp snooping svgl
Ruijie(config)# ip igmp snooping svgl profile 1
```

The following example enables IGMP Snooping and enters the IVGL-SVGL mode.

```
Ruijie(config)# ip igmp snooping ivgl-svgl
Ruijie(config)# ip igmp snooping svgl profile 1
```

**Platform** N/A

**Description**

## 1.6 ip igmp snooping dyn-mr-aging-time

Use this command to set the aging time of a dynamic routing interface.

Use the **no** or **default** form of this command to restore the default setting.

**ip igmp snooping dyn-mr-aging-time** *seconds*

**no ip igmp snooping dyn-mr-aging-time**

**default ip igmp snooping dyn-mr-aging-time**

Parameter Description	Parameter	Description
	<i>seconds</i>	Aging time from 1 to 3,600 in the unit of seconds
<b>Defaults</b>	The default is 300 seconds.	
<b>Command Mode</b>	Global configuration mode	
<b>Usage Guide</b>	<p>If a dynamic routing interface does not receive IGMP query packets or PIM hello packets before aged, this interface will be deleted.</p> <p>When the dynamic routing interface learning function is enabled, this command sets the aging time of the routing interface. If the aging time is set too short, the routes may be added and deleted frequently.</p>	
<b>Configuration Examples</b>	<p>The following example sets the aging time of the routing interface that the switch learns dynamically to 100 seconds.</p> <pre>Ruijie(config)# ip igmp snooping dyn-mr-aging-time 100</pre>	
<b>Platform Description</b>	N/A	

## 1.7 ip igmp snooping fast-leave enable

Use this command to enable the fast leave function.

Use the **no** or **default** form of this command to restore the default setting.

**ip igmp snooping fast-leave enable**

**no ip igmp snooping fast-leave enable**

**default ip igmp snooping fast-leave enable**

Parameter Description	Parameter	Description
	N/A	N/A
<b>Defaults</b>	This function is disabled by default.	
<b>Command Mode</b>	Global configuration mode	
<b>Usage Guide</b>	After you execute this command to enable the fast-leave function, the system will remove the corresponding multicast group on the corresponding interface upon the receipt of the IGMP leave message.	

Subsequently, when the system receives a specific group query packet, the system does not forward it to the corresponding interface. Leave packets include IGMPv2 leave packets and IGMPv3 report packets of the include type without source addresses. The fast leave function applies to scenarios in which one interface is connected to only one host. This function saves bandwidth and resources.

**Configuration** The following example enables the fast leave function.

**Examples** Ruijie(config)# ip igmp snooping fast-leave

**Platform** N/A

**Description**

## 1.8 ip igmp snooping filter

Use this command to specify the profile for ports.

Use the **no** or **default** form of this command to restore the default setting.

**ip igmp snooping filter** *profile-number*

**no ip igmp snooping filter** *profile-number*

**default ip igmp snooping filter**

Use this command to specify the profile for VLANs.

Use the **no** or **default** form of this command to restore the default setting.

**ip igmp snooping vlan** *vlan-id* **filter** *profile-number*

**no ip igmp snooping vlan** *vlan-id* **filter**

**default ip igmp snooping vlan** *vlan-id* **filter**

**Parameter  
Description**

Parameter	Description
<i>profile-number</i>	Profile number from 1 to 1024

**Defaults** This function is disabled by default.

**Command  
Mode** Global configuration mode/Interface configuration mode

**Usage Guide** A specific profile must be created before association.

**Configuration** The following example specifies profile 1 for interface fastEthernet 0/1.

**Examples** Ruijie(config)# interface fastEthernet 0/1  
Ruijie(config-if)# ip igmp snooping filter 1

**Platform** N/A

**Description**

## 1.9 ip igmp snooping host-aging-time

Use this command to configure the aging time of IGMP dynamic ports.

Use the **no** or **default** form of this command to restore the default setting.

**ip igmp snooping host-aging-time** *seconds*

**no ip igmp snooping host-aging-time**

**default ip igmp snooping host-aging-time**

Parameter	Parameter	Description
Description	<i>seconds</i>	Aging time. The unit is second. The value ranges from 1 to 65,535.

**Defaults** The default is 260 seconds.

**Command Mode** Global configuration mode

**Usage Guide** The aging time of a dynamic port is set by the system when the port receives an IGMP packet from the host for joining a certain IP multicast group.

When such an IGMP packet is received, the system resets the aging timer for the port. The duration of this timer is determined by **host-aging-time**. If the timer expires, the system determines that there is no host in this port for receiving multicast packets. The multicast device removes the port from the IGMP Snooping group. After the **ip igmp snooping host-aging-time** command is executed, the aging time will be determined by **host-aging-time**. This command takes effect only after the system receives the next IGMP packet. This command does not change the current aging time.

**Configuration Examples** The following example sets the aging time to 30 seconds.

```
Ruijie(config)# ip igmp snooping host-aging-time 30
```

Related Commands	Command	Description
	N/A	N/A

**Platform Description** N/A

## 1.10 ip igmp snooping l2-entry-limit

Use this command to set the maximum number of multicast groups.

Use the **no** or **default** form of this command to restore the default setting.

**ip igmp snooping l2-entry-limit** *number*

**no ip igmp snooping l2-entry-limit**

**default ip igmp snooping l2-entry-limit**

Parameter	Parameter	Description
-----------	-----------	-------------

<b>Description</b>	<i>number</i>	Number of multicast groups. The value ranges from 0 to 65,536.
<b>Defaults</b>	The default is 65,536.	
<b>Command Mode</b>	Global configuration mode	
<b>Usage Guide</b>	The maximum number of multicast groups includes the multicast groups in all ports of all VLANs (including dynamic and static multicast groups). When the number of multicast groups reaches the limit, learning new group records and configuring new static multicast group ports are not allowed.	
<b>Configuration Examples</b>	The following example sets the maximum number of multicast groups to 2000. <pre>Ruijie(config)# ip igmp snooping l2-entry-limit 2000</pre>	
<b>Related Commands</b>	<b>Command</b>	<b>Description</b>
	<b>show ip igmp snooping</b>	Displays the maximum number of multicast groups.
<b>Platform Description</b>	N/A	

## 1.11 ip igmp snooping max-groups

Use this command to configure the maximum number of groups that can be added dynamically to this interface.

Use the **no** or **default** form of this command to restore the default setting.

**ip igmp snooping max-groups** *number*

**no ip igmp snooping max-groups**

**default ip igmp snooping max-groups**

<b>Parameter Description</b>	<b>Parameter</b>	<b>Description</b>
	<i>number</i>	The maximum group number from 0 to 1,024
<b>Defaults</b>	No maximum group number is configured by default.	
<b>Command Mode</b>	Interface configuration mode	
<b>Usage Guide</b>	If a maximum number of multicast groups are configured, the device will no longer receive and process IGMP Report messages when the number of multicast groups on this interface is beyond the range.	
<b>Configuration Examples</b>	The following example configures the maximum number of multicast groups to 100 on the megabit interface 0/1:	

```
Ruijie(config)# interface Ethernet 0/1
Ruijie(config-if)# ip igmp snooping max-group 100
```

**Platform** N/A

**Description**

## 1.12 ip igmp snooping mrouter learn pim-dvmrp

Use this command to configure a device to listen to the IGMP Query/Dvmrp or PIM Hello packets dynamically in order to automatically identify a routing interface

Use the **no** form of this command to disable the dynamic learning.

Use the **default** form of this command to restore the default setting.

**ip igmp snooping mrouter learn pim-dvmrp**

**no ip igmp snooping mrouter learn pim-dvmrp**

**default ip igmp snooping [ vlan vid ] mrouter learn pim-dvmrp**

**Parameter  
Description**

Parameter	Description
<b>vlan vid</b>	VLAN ID. By default, the specified version is supported on all VLANs.

**Defaults** This function is enabled by default.

**Command**

**Mode** Global configuration mode

**Usage Guide** Routing interface is a port through which a multicast device (with IGMP Snooping enabled) is directly connected to a multicast neighbouring device (with multicast routing protocols enabled).  
By default, the dynamic routing interface learning function is enabled. You can use the no form of this command to disable this function and clear all routing interfaces learnt dynamically. With dynamic routing interface learning function disabled globally, the function of all vlans will be disabled. Besides, with this function enabled globally, if the function of specified vlan is disabled, the dynamic routing interface learning function of the corresponding vlan is disabled. When the source port check function is enabled, only the multicast flow enters from the routing interface is legal and it is forwarded to the registered interface by the multicast equipment, the multicast flow from the non routing interface is considered to be illegal and is discarded. With the source port check function enabled, the dynamic routing interface learning function will improve the application flexibility of IGMP snooping.

**Configuration** The following example enables the dynamic routing interface learning function on VLAN 1.

**Examples**

```
Ruijie(config)# no ip igmp snooping mrouter learn pim-dvmrp
Ruijie(config)# ip igmp snooping vlan 1 mrouter learn pim-dvmrp
```

**Platform** N/A

**Description**

## 1.13 ip igmp snooping preview

Use this command to allow the user to preview the specific multicast streams when the user doesn't have access to such multicast streams.

Use **no** or **default** form of this command to disable multicast preview.

**ip igmp snooping preview** *profile-number*

**no ip igmp snooping preview**

**default ip igmp snooping preview**

**Parameter  
Description**

Parameter	Description
<i>profile-number</i>	Profile number (1-1024)

**Defaults**

This function is disabled by default.

**Command  
Mode**

Global configuration mode

**Usage Guide**

Apply the IGMP Profile to a multicast preview function. When the user doesn't have access to the multicast streams (namely the user might be filtered by IGMP Snooping filter), it can allow the user to preview partial contents. This function shall be used in conjunction with IGMP Snooping filter or multicast control in order to realize effective multicast preview.

**Configuration**

The following example associates the profile 2 to the Ethernet 0/1 and associates multicast preview with profile 1.

**Examples**

```
Ruijie(config)# ip igmp snooping preview 1
Ruijie(config-if)# int Ethernet 0/1
Ruijie(config-if)# ip igmp snooping filter 2
```

**Platform**

N/A

**Description**

## 1.14 ip igmp snooping preview interval

Use this command to configure the interval that allows the user to preview the specific multicast streams when the user doesn't have access to such multicast streams.

Use **no** or **default** form of this command to restore the default setting.

**ip igmp snooping preview interval** *seconds*

**no ip igmp snooping preview interval**

**default ip igmp snooping preview interval**



<b>Parameter Description</b>	<b>Parameter</b>	<b>Description</b>
	<i>seconds</i>	Preview interval from 1 to 300 in the unit of seconds
<b>Defaults</b>	The default is 60 seconds.	
<b>Command Mode</b>	Global configuration mode	
<b>Usage Guide</b>	N/A	
<b>Configuration Examples</b>	The following example sets the multicast preview interval as 100 seconds on the 100M port of 0/1: <pre>Ruijie(config)# ip igmp snooping preview 1 Ruijie(config)# ip igmp snooping preview interval 100</pre>	
<b>Platform Description</b>	N/A	

## 1.15 ip igmp snooping querier

Use this command to enable the IGMP querier.

Use **no** or **default** form of this command to restore the default setting.

**ip igmp snooping querier**

**no ip igmp snooping querier**

**default ip igmp snooping [ vlan vid ] querier**

<b>Parameter Description</b>	<b>Parameter</b>	<b>Description</b>
	<b>vlan vid</b>	VLAN ID. By default, the specified version is supported on all VLANs.
<b>Defaults</b>	This function is disabled by default.	
<b>Command Mode</b>	Global configuration mode	
<b>Usage Guide</b>	After globally enabling the IGMP querier, you must enable the IGMP querier function in VLAN to activate this function. If the IGMP querier function is disabled globally, the IGMP querier will be disabled in all VLANs.	
<b>Configuration Examples</b>	The following example enables the IGMP querier function in VLAN 2. <pre>Ruijie(config)# ip igmp snooping querier Ruijie(config)# ip igmp snooping vlan 2 querier</pre>	

**Platform** N/A

**Description**

## 1.16 ip igmp snooping querier address

Use this command to specify a source IP address for IGMP querier.

Use **no** or **default** form of this command to remove the source IP address configured.

**ip igmp snooping [ vlan vid ] querier address a.b.c.d**

**no ip igmp snooping [ vlan vid ] querier address**

**default ip igmp snooping [ vlan vid ] querier address**

**Parameter  
Description**

Parameter	Description
<b>vlan vid</b>	VLAN ID. By default, the specified version is supported on all VLANs.
<b>a.b.c.d</b>	Source IP address of the IGMP querier

**Defaults** N/A

**Command  
Mode**

Global configuration mode

**Usage Guide**

After enabling IGMP querier, you must configure a source IP address for the IGMP querier to activate this function..

If the IGMP querier source IP has been specified in VLAN, the source IP configured in the relevant VLAN will be used first.

**Configuration** The following example specifies the source IP of the IGMP querier as 1.1.1.1 on the device.

**Examples**

```
Ruijie(config)# ip igmp snooping querier address 1.1.1.1
```

The following example specifies the source IP of the IGMP querier as 1.1.1.1 in VLAN 3.

```
Ruijie(config)# ip igmp snooping vlan 3 querier address 1.1.1.1
```

**Platform**

**Description**

## 1.17 ip igmp snooping querier max-response-time

Use this command to configure the maximum response time of the IGMP querier.

Use **no** or **default** form of this command to restore to the default setting.

**ip igmp snooping [ vlan vid ] querier max-response-time seconds**

**no ip igmp snooping [ vlan vid ] querier max-response-time**

**default ip igmp snooping [ vlan vid ] querier max-response-time**

**Parameter**

Parameter	Description
-----------	-------------

<b>Description</b>		
	<i>num</i>	Maximum response time from 1 to 25 in the unit of seconds
	<b>vlan</b> <i>vid</i>	VLAN ID. By default, the specified version is supported on all VLANs.
<b>Defaults</b>	The default is 10 seconds.	
<b>Command Mode</b>	Global configuration mode	
<b>Usage Guide</b>	If the maximum response time has been specified in the corresponding VLAN, the value specified in VLAN will be used first.	
<b>Configuration Examples</b>	<p>The following example specifies the maximum response time of the IGMP querier on the device.</p> <pre>Ruijie(config)# ip igmp snooping querier max-response-time 15</pre> <p>The following example specifies the maximum response time of the IGMP querier in VLAN 3.</p> <pre>Ruijie(config)# ip igmp snooping vlan 3 querier max-response-time 15</pre>	
<b>Platform</b>	N/A	
<b>Description</b>		

## 1.18 ip igmp snooping querier query-interval

Use this command to specify the interval for IGMP querier to send query packets.

Use **no** or **default** form of this command to restore the default setting.

**ip igmp snooping querier query-interval** *seconds*

**no ip igmp snooping querier query-interval**

**default ip igmp snooping [ vlan *vid* ] querier query-interval**

<b>Parameter Description</b>	<b>Parameter</b>	<b>Description</b>
	<i>seconds</i>	Query interval from 1 to 18,000 in the unit of seconds
	<b>vlan</b> <i>vid</i>	VLAN ID. By default, the specified version is supported on all VLANs.
<b>Defaults</b>	The default is 60 seconds.	
<b>Command Mode</b>	Global configuration mode	
<b>Usage Guide</b>	If the query interval has been configured in the corresponding VLAN, the value specified in VLAN will be used first.	
<b>Configuration Examples</b>	<p>The following example configures the query interval on the device.</p> <pre>Ruijie(config)# ip igmp snooping querier query-interval 100</pre>	

The following example configures the query interval in VLAN 3.

```
Ruijie(config)# ip igmp snooping vlan 3 querier query-interval 100
```

**Platform** N/A

**Description**

## 1.19 ip igmp snooping querier timer expiry

Use this command to specify the expiration timer for non-querier.

Use **no** form of this command to restore the default setting.

**ip igmp snooping [ vlan vid ] querier timer expiry seconds**

**ip igmp snooping [ vlan vid ] querier timer expiry seconds**

**default ip igmp snooping [ vlan vid ] querier timer expiry**

Parameter Description	Parameter	Description
	<i>seconds</i>	The expiration timer from 60 to 300 in the unit of seconds
	<i>vlan vid</i>	VLAN ID. By default, the specified version is supported on all VLANs.

**Defaults** The default is 125 seconds.

**Command Mode** Global configuration mode

**Usage Guide** After globally enabling IGMP querier, if the device is elected as a non-querier, execute this command to change the expiration timer for non-querier.

If expiration timer has been configured in the corresponding VLAN, the value specified in VLAN will be used first.

**Configuration** The following example configures the non-querier expiration timer on the device.

**Examples**

```
Ruijie(config)# ip igmp snooping querier timer expiry 60
```

The following example configures the non-querier expiration timer in VLAN 3.

```
Ruijie(config)# ip igmp snooping vlan 3 querier timer expiry 60
```

**Platform** N/A

**Description**

## 1.20 ip igmp snooping querier version

Use the following commands to specify IGMP Snooping querier version.

**ip igmp snooping [ vlan vid ] querier version 1**

**ip igmp snooping [ vlan vid ] querier version 2**

Use **no** or **default** form of this command to restore to the default setting.

**no ip igmp snooping [ vlan *vid* ] querier version**  
**default ip igmp snooping [ vlan *vid* ] querier version**

**Parameter  
Description**

Parameter	Description
<b>vlan <i>vid</i></b>	VLAN ID. By default, the specified version is supported on all VLANs.

**Defaults** The default version is IGMPv2.

**Command  
Mode** Global configuration mode

**Usage Guide** If an IGMP querier version has been configured in a VLAN, the version specified in the VLAN will be used first.  
 IGMPv1 and IGMPv2 are supported.

**Configuration** The following example configures IGMP querier version on the device.

**Examples**

```
Ruijie(config)# ip igmp snooping querier version 1
```

The following example configures IGMP querier version on VLAN3.

```
Ruijie(config)# ip igmp snooping vlan 3 querier version 1
```

**Platform  
Description** N/A

## 1.21 ip igmp snooping query-max-response-time

Use this command to specify the time for the switch to wait for the member join message after receiving the **query** message.

Use the **no** or **default** form of this command to restore the default setting.

**ip igmp snooping query-max-response-time *seconds***  
**no ip igmp snooping query-max-resposne-time**  
**default ip igmp snooping query-max-response-time**

**Parameter  
Description**

Parameter	Description
<b><i>seconds</i></b>	The aging time of the routing interface that the switch learns dynamically, in the range from 1 to 65.535

**Defaults** The default is 10 seconds.

**Command  
Mode** Global configuration mode

**Usage Guide** You can specify the time for the switch to wait for the member join message after receiving the query message. If the switch does not receive the member join message in the specified time, it considers that the member has left and then deletes the member.

This command lets you adjust the waiting time after receiving the query message. This command takes effect only after the switch receives the next member join message. This command does not change the current wait time.

**Configuration Examples** The following examples sets the aging time of the routing interface that the switch learns dynamically to 100 seconds.

```
Ruijie(config)# ip igmp snooping query-max-response-time 100
```

**Platform** N/A

**Description**

## 1.22 ip igmp snooping suppression enable

Use this command to enable IGMP snooping suppression.

Use the **no** or **default** form of this command to restore the default setting.

**ip igmp snooping suppression enable**

**no ip igmp snooping suppression enable**

**default ip igmp snooping suppression enable**

**Parameter Description**

Parameter	Description
N/A	N/A

**Defaults** This function is disabled by default.

**Command Mode** Global configuration mode

**Usage Guide** When this function is enabled, IGMP Snooping only forwards the first report from a specific VLAN or group, and suppresses the following reports to constrain traffic in the networks.

This function is only supported on IGMPv1 and IGMPv2 reports.

**Configuration Examples** The following example enables IGMP snooping suppression on the device.

```
Ruijie(config)# ip igmp snooping suppression enable
```

**Platform** N/A

**Description**

## 1.23 ip igmp snooping svgl profile

Use this command to specify the multicast group address range applied in the SVGL/IVGL-SVGL mode.

Use the **no** or **default** form of this command to restore the default setting.

**ip igmp snooping svgl profile** *profile-number*

**no ip igmp snooping svgl profile**

**default ip igmp snooping svgl profile**

Parameter Description	Parameter	Description
	<i>profile-number</i>	Profile number, in the range of 1-1,024

**Defaults** No profile is associated.

**Command  
Mode** Global configuration mode

**Usage Guide** When the IGMP Snooping works in the SVGL and IVGL-SVGL mode, a profile shall be associated to specify the multicast group address range applied in the SVGL or IVGL-SVGL mode.

**Configuration** The following example specifies the profile 2 applied in SVGL mode.

**Examples** Ruijie(config)# ip igmp snooping svgl profile 2

**Platform  
Description** N/A

## 1.24 ip igmp snooping svgl subvlan

Use this command to specify the subvlan of multicast VLAN.

Use the **no** or **default** form of this command to restore the default setting.

**ip igmp snooping svgl subvlan** [*vid-range*]

**no ip igmp snooping svgl subvlan** [*vid-range*]

**default ip igmp snooping svgl subvlan** [ *vid-range* ]

Parameter Description	Parameter	Description
	<i>vid-range</i>	VLAN ID or range of VLAN ID

**Defaults** By default, all VLANs except shared VLANs serve as its sub VLANs.

**Command  
Mode** Global configuration mode

- Usage Guide** This command only takes effect in SVGL and IVGL-SVGL mode.
- Configuration Examples** The following example specifies VLAN 3 as the shared VLAN and VLAN 2, VLAN 5 to 7 as the sub VLANs.

```
Ruijie(config)# ip igmp snooping svgl vlan 3
Ruijie(config)# ip igmp snooping svgl subvlan 2,5-7
```

**Platform** N/A

**Description**

## 1.25 ip igmp snooping svgl vlan

Use this command to specify the shared VLAN in SVGL mode.

Use the **no** form of this command to restore the default setting.

**ip igmp snooping svgl vlan** *vid*

**no ip igmp snooping svgl vlan**

**default ip igmp snooping svgl vlan**

Parameter Description	Parameter	Description
	<i>vid</i>	VLAN ID

**Defaults** By default , the shared VLAN is VLAN 1.

**Command Mode** Global configuration mode

**Usage Guide** This command only works in the SVGL and IVGL-SVGL mode.

**Configuration Examples** The following example specifies the vlan2 as the shared vlan

The following example specifies VLAN 3 as the shared VLAN and VLAN 2, VLAN 5 to 7 as the sub VLANs.

```
Ruijie(config)# ip igmp snooping svgl vlan 3
Ruijie(config)# ip igmp snooping svgl subvlan 2,5-7
```

**Platform** N/A

**Description**

## 1.26 ip igmp snooping tunnel

Use this command to enable 802.1Q tunneling (QinQ) support for IGMP Snooping.

Use the **no** or **default** form of this command to restore the default setting.

**ip igmp snooping tunnel**



**no ip igmp snooping tunnel**  
**default ip igmp snooping tunnel**

**Parameter  
Description**

Parameter	Description
N/A	N/A

**Defaults** This function is disabled.

**Command  
Mode** Global configuration mode

**Usage Guide** After IGMP Snooping is enabled and dot1q-tunnel port is configured on the device, IGMP packets received from dot1q-tunnel port will be handled in two ways:

- First: QinQ transmits IGMP packets transparently. Create multicast entries in the VLAN to which the IGMP packets belong, and forward IGMP packets in the VLAN.
- For example: It is assumed that IGMP Snooping has been enabled on the device; Port A is a dot1q-tunnel port; the default VLAN of Port A is VLAN 1, and packets from VLAN 1 and VLAN 10 are allowed by Port A. When multicast requests of VLAN 10 are sent to port A, IGMP Snooping will create the multicast entry of VLAN 10 and forward the multicast requests to the router port of VLAN 10.
- Second: Create multicast entries in the default VLAN to which the dot1q-tunnel ports belong, and forward multicast packets in the default VLAN of dot1q-tunnel port after inserting the VLAN Tag of the default VLAN of dot1q-tunnel port.
- For example: It is assumed that IGMP Snooping has been enabled on the device; Port A is a dot1q-tunnel port; the default VLAN of port A is VLAN 1, and packets from VLAN 1 and VLAN 10 are allowed Port A. When multicast requests of VLAN 10 are sent to Port A, IGMP Snooping will create the multicast entry of VLAN 1 and insert the VLAN Tag of VLAN 1 into multicast requests before forwarding the multicast requests to the router port of VLAN 1.

By default, the second way is used.

**Configuration** The following example enables QinQ support for IGMP Snooping.

**Examples** Ruijie(config)# ip igmp snooping tunnel

**Platform** N/A  
**Description**

## 1.27 ip igmp snooping vlan

Use this command to enable the IGMP Snooping in the specified VLAN and enter IVGL mode.

Use the **no** form of this command is used to disable the IGMP Snooping.

Use the **default** form of this command to restore the default setting.

**ip igmp snooping vlan** *vid*

**no ip igmp snooping vlan** *vid*  
**default ip igmp snooping vlan** *vid*

**Parameter  
Description**

Parameter	Description
<i>vid</i>	VLAN ID in the range from 1 to 4,094

**Defaults**


If IGMP Snooping (IVGL mode) is enabled globally, all VLANs are enabled with IGMP Snooping (IVGL mode).  
 If IGMP Snooping (IVGL mode) is not enabled globally, all VLANs are not enabled with IGMP Snooping (IVGL mode).

**Command  
Mode**

Global configuration mode

**Usage Guide**

Use this command to enable or disable the IGMP snooping on the specified vlan.

 The PIM Snooping in the specified VLAN works only when IGMP Snooping is configured. To disable PIM Snooping, you must disable IGMP Snooping in the VLAN first, or disabling will fail and be prompted.

**Configuration**

The following example enters IVGL mode and disables the IGMP Snooping in the VLAN 2.

**Examples**

```
Ruijie(config)# ip igmp snooping ivgl
Ruijie(config)# no ip igmp snooping vlan 2
```

**Platform**

N/A

**Description**

## 1.28 ip igmp snooping vlan mrouter interface

Use this command to configure a static routing interface.

Use the **no** form of this command to delete a static routing interface.

Use the **default** form of this command to restore the default setting.

**ip igmp snooping vlan** *vid mrouter interface interface-type interface-number*

**no ip igmp snooping vlan** *vid mrouter interface interface-type interface-number*

**default ip igmp snooping vlan** *vid mrouter interface interface-type interface-number*

**Parameter  
Description**

Parameter	Description
<i>vid</i>	VLAN ID in the range from 1 to 4,094
<i>interface-type</i> <i>interface-number</i>	Interface ID

<b>Defaults</b>	No static routing interface is configured by default.
<b>Command Mode</b>	Global configuration mode
<b>Usage Guide</b>	<p>A dynamic routing interface is learned dynamically through IGMP Snooping. A static routing interface is configured by using this command and cannot age.</p> <p>When an interface is configured as a static routing interface, all multicast streams received on this interface will be forwarded.</p> <p>When the source port check function is enabled, only the multicast flows from the routing interface are forwarded, and other flows will be discarded.</p>
<b>Configuration</b>	The following example configures a static routing interface.
<b>Examples</b>	<pre>Ruijie(config)# ip igmp snooping vlan 1 mrout erinterface fastEthernet 0/1</pre>
<b>Platform</b>	N/A
<b>Description</b>	

## 1.29 ip igmp snooping vlan static interface

Use this command to configure a static member interface of a multicast group.

Use the **no** form of this command to delete a static member interface from a multicast group.

Use the **default** form of this command to restore the default setting.

**ip igmp snooping vlan** *vid* **static** *group-address* **interface** *interface-type* *interface-number*

**no ip igmp snooping vlan** *vid* **static** *group-address* **interface** *interface-type* *interface-number*

**default ip igmp snooping vlan** *vid* **static** *group-address* **interface** *interface-type* *interface-number*

Parameter Description	Parameter	Description
	<i>vid</i>	VLAN ID in the range from 1 to 4,094
	<i>ip-addr</i>	Multicast IP address
	<i>interface-id</i>	Interface ID

<b>Defaults</b>	No static member interface of any multicast group is configured by default.
<b>Command Mode</b>	Global configuration mode
<b>Usage Guide</b>	<p>The IGMP Snooping GDA table contains VLAN IDs (VIDs), group addresses, routing interface (static or dynamic) ID, and member interface ID. Among them, the VID and group address identify a forwarding entry; the static routing interfaces will not age and cannot be deleted by using the <b>clear ip igmp snooping gda-table</b> command.</p>

**Configuration** The following example configures a static member interface for the multicast group 224.1.1.1.

**Examples**

```
Ruijie(config)# ip igmp snooping vlan 1 static 224.1.1.1 interface
GigabitEthernet 0/1
```

**Platform** N/A

**Description**

## 1.30 permit

Use this command to permit the multicast forwarding for specified ranges of a specified profile.

**permit**

Parameter Description	Parameter	Description
	N/A	N/A

**Defaults** The forwarding of the multicast streams in the range specified by the profile is denied.

**Command  
Mode** Profile configuration mode

**Usage Guide** A profile is used to filter a group of multicast packets, so as to assist other features.

Configuration steps:

1. Use the **ip igmp profile** command to create a profile and enter profile configuration mode.
2. Use the **range** command to define a range for the profile.
3. Use the **permit** command to permit the multicast forwarding for the profile.

**Configuration  
Examples** The following example permits the forwarding of the multicast streams from 224.2.2.2 to 224.2.2.244 of profile 1.

```
Ruijie(config)# ip igmp profile 1
Ruijie(config-profile)# range 224.2.2.2 224.2.2.244
Ruijie(config-profile)# permit
```

**Platform** N/A

**Description**

## 1.31 range

Use this command to define a range for a specific profile.

Use the **no** form of the command to remove the range from the profile.

**range** *low-ip-address* [*high-ip-address*]

**no range** *low-ip-address* [*high-ip-address*]

Parameter Description	Parameter	Description
	<i>low-ip-address</i>	Start address of a range
	<i>high-ip-address</i>	End address of a range
<b>Defaults</b>	No range is defined for a profile by default.	
<b>Command Mode</b>	Profile configuration mode	
<b>Usage Guide</b>	<p>A profile is used to filter a group of multicast packets, so as to assist other features.</p> <p>Configuration steps:</p> <ol style="list-style-type: none"><li>1. Use the <b>ip igmp profile</b> command to create a profile and enter profile configuration mode.</li><li>2. Use the <b>range</b> command to define a range for the profile.</li><li>3. Use the <b>permit</b> command to permit the multicast forwarding for the profile.</li></ol>	
<b>Configuration Examples</b>	<p>The following is an example of allowingpermits the forwarding of the multicast streams from 224.2.2.2 to 224.2.2.244: of profile 1.</p> <pre>Ruijie(config)# ip igmp profile 1 Ruijie(config-profile)# range 224.2.2.2 224.2.2.244224.2.2.2 Ruijie(config-profile)# permit</pre>	
<b>Platform</b>	N/A	
<b>Description</b>		

## 1.32 show ip igmp profile

Use this command to display the profile information.

**show ip igmp profile**

**show ip igmp profile** *profile-number*

Parameter Description	Parameter	Description
	<i>profile-number</i>	Displays configuration information of the designated profile.
<b>Defaults</b>	N/A	
<b>Command Mode</b>	Privileged EXEC mode	
<b>Usage Guide</b>	Use this command to display the profile information.	
<b>Configuration</b>	The following example displays the profile information.	

**Examples**

```
Ruijie(config-if)# show ip igmp profile
Profile 1
Permit
range 224.0.1.0, 239.255.255.255
```

## 1.33 show ip igmp snooping

Use this command to display related information of IGMP Snooping.

**show ip igmp snooping** [*gda-table* | *interfaces interface-type interface-number* | *mrrouter* | *statistics* [*vlan vlan-id*] | *querier* [ *detail* | *vlan vid* ] | *user-info* ]

Parameter Description	Parameter	Description
	<i>vlan vid</i>	VLAN ID. By default, IGMP Snooping information of all VLANs are displayed.
	<i>interface-type</i> <i>interface-number</i>	Interface type and number

**Defaults** N/A

**Command Mode** Privileged EXEC mode

**Usage Guide** N/A

**Configuration** The following example displays global IGMP Snooping information.

**Examples**

```
Ruijie#show ip igmp snooping
IGMP Snooping running mode: IVGL
IGMP Snooping L2-entry-limit: 65536
Source port check: Disable
Source ip check: Disable
IGMP Fast-Leave: Disable
IGMP Report suppress: Disable
IGMP Global Querier: Disable
IGMP Preview: Disable
IGMP Tunnel: Disable
IGMP Snooping version: 2
IGMP Snooping version: 2IGMP Preview group aging time : 60(Seconds)
Dynamic Mroute Aging Time : 300(Seconds)
Dynamic Host Aging Time : 260(Seconds)
```

The following example displays VLAN1 IGMP Snooping information.

```
Ruijie#show ip igmp snooping vlan 1
IGMP Snooping running mode: IVGL
```

```
IGMP Snooping L2-entry-limit: 65536
Global IGMPv2 Fast-Leave :Disable
Global multicast router learning mode :Enable
Query Max Response Time: 10 (Seconds)
Dynamic Mroute Aging Time : 300(Seconds)
Dynamic Host Aging Time : 260(Seconds)

vlan 1
-----
IGMP Snooping state: Enable
Multicast router learning mode: pim-dvmrp
IGMP Fast-Leave: Disable
IGMP VLAN querier: Disable
IGMP VLAN Mode: STATIC
```

**Platform** N/A

**Description**

## 2 IPv4 Multicast Routing Commands

### 2.1 msf ipmc-overflow override

Use this command to enable the overflow overriding mechanism. Use the **no** or **default** form of this command to disable the overflow overriding mechanism.

**msf ipmc-overflow override**

**no msf ipmc-overflow override**

**default msf ipmc-overflow override**

Parameter	Parameter	Description
Description	-	-

**Default** Disabled.

**Command Mode** Global configuration mode.

**Usage Guide** N/A

The following example enables the overflow overriding mechanism.

#### Examples

```
Ruijie (config)# msf ipmc-overflow override
Ruijie (config)#
```

### 2.2 msf nsf

Use this command to configure the parameter for the continuous multicast forwarding. Use the **no** or **default** form of this command to restore the default setting.

**msf nsf {{convergence-time *time*} | {leak *interval*}}**

**no msf nsf {convergence-time | leak}**

**default msf nsf { convergence-time | leak }**

Parameter	Parameter	Description
Description	<b>convergence-time</b> <i>ttl-value</i>	Maximum time for the multicast protocol convergence, in the valid range of the 0-3600s.
	<b>leak</b> <i>interval</i>	Packet multicast leak time, in the valid range of 0-3600s

**Default** convergence-time *time* :140s;  
leak interval: 150s



**Command Mode** Global configuration mode.

**Usage Guide** N/A

The following example sets the maximum time for the protocol convergence.

```
Ruijie (config)# msf nsf convergence-time 300
Ruijie (config)#
```

#### Examples

The following example sets the packets leak time:

```
Ruijie(config)# msf nsf leak 200
Ruijie(config)#
```

## 2.3 show msf msc

Use this command to show IPv4 multi-layer multicast forwarding table.

**show msf msc** [*source-address*] [*group-address*] [*vlan-id*]

**Parameter  
Description**

Parameter	Description
<i>source-address</i>	Specified source IP address of the multi-layer multicast forwarding table.
<i>group-address</i>	Specified group address of the multi-layer multicast forwarding table.
<i>vlan-id</i>	The Vlan id where the incoming interface of the multi-layer multicast forwarding table is. 4096 indicates a routed port.

**Default**

**Command**

**Mode** Privileged EXEC mode/Global configuration mode/Interface EXEC mode

The three parameters in this command are optional.

If no source address and group address are specified, all msc entries are displayed.

**Usage Guide**

- If only the source address is specified as s1, all msc entries with source address 1 are displayed.
- If the source address is specified as s1 and the group address as g1, all corresponding msc entries are displayed.
- If the source address is specified as s1, the group address as g1 and the vlan id as v1, all corresponding msc entries are displayed.
- Each parameter shall be input in order. Only when the parameter in front has been configured, the following one could be set.

**Examples**

The following example shows the IPv4 layer-3 multicast forwarding entries with source IP address 192.168.195.25:

```
Ruijie# show msf msc 192.168.195.25
```

```

Multicast Switching Cache Table
(192.168.195.23, 233.3.3.3, 1), SYNC, MTU:0, 1 OIFs
VLAN 1(0): 1 OPORTs, REQ: DONE
OPORT 6, IGMP-SNP, REQ: DONE

```

The fields in the execution of the **show mrf mfc** command are described in the following table.

Field	Description
192.168.195.23	Source address of the entry.
233.3.3.3	Group address of the entry.
1	Vlan id where the incoming interface of the entry is.
SYNC	The entry has been synchronized to the hardware.
MTU	MTU value
OIFs	Layer-3 outgoing interface number.
VLAN1(0)	The vlan where the layer-3 outgoing interface oif is.
1 OPORTs	The number of layer-2 port in the layer-3 outgoing oif.
REQ: DONE	This oif configuration on the hardware has done.
OPORT 6	The layer-2 port in the oif with index 6.
IGMP-SNP	This port is created by the IGMP SNOOPING protocol. This value can also be the PIM-SNP, which means this port is created by the PIM SNOOPING protocol. And the ROUTER means this port is created by the layer-3 protocol.
REQ: DONE	The port configuration on the hardware has done.

## 2.4 show msf nsf

Use this command to show the configuration of continuous multicast forwarding.

**show msf nsf**

**Parameter**

**Description**

Parameter	Description
-	-

**Command Mode**

Privileged EXEC mode/Global configuration mode/Interface EXEC mode

**Examples**

The following example shows the configuration of continuous multicast forwarding.

```

Ruijie# show msf nsf
Multicast HA Parameters
-----+-----+
protocol convergence timeout 120 secs
flow leak interval 20 secs
Ruijie#

```

**Related Commands**

Command	Description
msf nsf	Configure the multicast NSF parameter.