



**Ruijie RG-ES200 Series Switches  
Web-Based Configuration Guide**

## **Copyright Statement**

Ruijie Networks©2020

Ruijie Networks reserves all copyrights of this document. Any reproduction, excerption, backup, modification, transmission, translation or commercial use of this document or any portion of this document, in any form or by any means, without the prior written consent of Ruijie Networks is prohibited.

## **Exemption Statement**

This document is provided “as is”. The contents of this document are subject to change without any notice. Please obtain the latest information through the Ruijie Networks website. Ruijie Networks endeavors to ensure content accuracy and will not shoulder any responsibility for losses and damages caused due to content omissions, inaccuracies or errors.

## Preface

---

Thank you for using our products.

## Audience

---

This manual is intended for:

- Network engineers
- Technical support and servicing engineers
- Network administrators

## Obtaining Technical Assistance

---

- Ruijie Networks Website: <https://www.ruijienetworks.com/>
- Technical Support Website: <https://ruijienetworks.com/support>
- Case Portal: <https://caseportal.ruijienetworks.com>
- Community: <https://community.ruijienetworks.com>
- Technical Support Email: [service\\_rj@ruijienetworks.com](mailto:service_rj@ruijienetworks.com)
- Skype: [service\\_rj@ruijienetworks.com](https://www.ruijienetworks.com)

## Related Documents

---

Documents	Description
Command Reference	Describes the related configuration commands, including command modes, parameter descriptions, usage guides, and related examples.
Hardware Installation and Reference Guide	Describes the functional and physical features and provides the device installation steps, hardware troubleshooting, module technical specifications, and specifications and usage guidelines for cables and connectors.

## Conventions

---

This manual uses the following conventions:

Convention	Description
<b>boldface</b> font	Commands, command options, and keywords are in <b>boldface</b> .
<i>italic</i> font	Arguments for which you supply values are in <i>italics</i> .
[ ]	Elements in square brackets are optional.
{ x   y   z }	Alternative keywords are grouped in braces and separated by vertical bars.
[ x   y   z ]	Optional alternative keywords are grouped in brackets and separated by vertical bars.

# 1 Overview

eWeb is a Web-based management system that manages or configures devices. You can access eWeb via browsers such as Google Chrome.

Web-based management involves the Web server and Web client. The Web server is integrated in a device, and is used to receive and process requests from the client, and return processing results to the client. The Web client usually refers to a browser, such as Google Chrome, IE, or Firefox.

## 1.1 Conventions

In this document:

- Texts in bold are names of buttons (for example, **Save**) or other graphical user interface (GUI) elements (for example, **VLAN**).
- Devices of different models have slightly different functions. This document uses RG-ES218GC-P as an example for description.

---

**i** Only RG-ES226GC-P, RG-ES218GC-P, RG-ES209GC-P, RG-ES209C-P, RG-ES205GC-P, and RG-ES205C-P support the PoE function and configuration.

**i** Only RG-ES226GC-P, RG-ES218GC-P, RG-ES224GC, and RG-ES216GC support the multi-DHCP alarm function.

**i** The device initially adopts an English OS by default. After it is accessed, the device language can be set to the language used by the current browser. A manually set device language has a higher priority than the language of the browser.

**i** The cloud status and online upgrade are not supported in the English OS.

---


## 2 Configuration Guide

### 2.1 Preparations

#### Scenario

---

As shown in the figure below, administrators can access the device from a browser and configure the device through the eWeb management system.

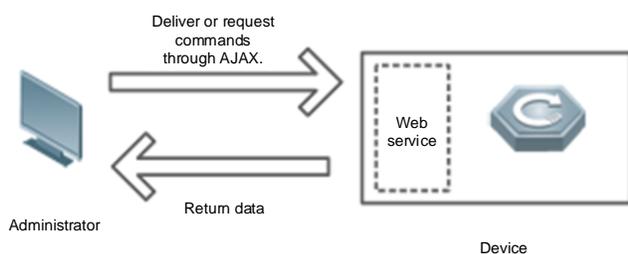

<b>Remarks</b>	The eWeb management system combines various device commands and then delivers them to the device through AJAX requests. The device then returns data based on the commands. A Web service is available on the device to process basic HTTP protocol requests.
----------------	---

## Deployment

### Configuration Environment Requirements

Client requirements:

- An administrator can log into the eWeb management system from a Web browser to manage the device. The client refers to a PC or some other mobile endpoints such as laptops or tablets.
- Google Chrome, Firefox, IE9.0 and later versions, and some Chromium-based browsers (such as 360 Extreme Explorer) are supported. Exceptions such as garble or format error may occur if an unsupported browser is used.
- 1024 x 768 or a higher resolution is recommended. If other resolutions are used, the page fonts and formats may not be aligned, the GUI is less artistic, or other exceptions may occur.
- Ensure that the client IP address is set to be in the same network segment as the device management address. Then you can open the browser and enter the device management address to configure the device. When you use the reserved management address 10.44.77.200 of the device, ensure that the client is directly connected to the switch.

To log into the eWeb management system, open Google Chrome, enter **10.44.77.200** in the address bar, and press **Enter**, as shown in the figure below.

10.44.77.200 says  
You are not allowed to manage the device with the default password. Do you want to change the password?  
OK Cancel

**Device Info**

Model:	RG-ES218GC-P	Firmware Version:	ESW_1.0(1)B1P3,Release(07193011)
MAC Address:	00:D0:F8:21:80:41	SN:	G1NW21M000217
IP Address:	0.0.0.0	Uptime:	00h 00min 43s
Cloud Status:	Unconnected	Hostname:	rujje <span>Edit</span>

**Port Info** Refresh List


Port	Status	Config Status		Actual Status	Flow Control(Config)	Flow Control(Actual)	Rx/Tx Rate (kbps)	Isolation Status	Loop Status	PoE		Downlink Device Search
		Speed	Duplex							PoE Power	Action	
		Port 1	Enabled							Auto	Auto	
Port 2	Enabled	Auto	Auto	Disconnected	Disabled	Disabled	0/0	Unisolated	Normal	--	--	--
Port 3	Enabled	Auto	Auto	Disconnected	Disabled	Disabled	0/0	Unisolated	Normal	--	--	--
Port 4	Enabled	Auto	Auto	Disconnected	Disabled	Disabled	0/0	Unisolated	Normal	--	--	--
Port 5	Enabled	Auto	Auto	Disconnected	Disabled	Disabled	0/0	Unisolated	Normal	--	--	--
Port 6	Enabled	Auto	Auto	Disconnected	Disabled	Disabled	0/0	Unisolated	Normal	--	--	--

The device homepage appears by default. In addition, a dialog box is displayed, asking you whether to change the default password. (The factory settings of the device can be modified only after the password is changed as prompted.)

## 2.2 Default Password Configuration

Under factory default settings, the eWeb management system displays a prompt, asking you whether to change the password. (You can configure switch functions only after changing the password.)

Click **OK**. The Web management system automatically redirects to the **Account Settings** page (or you can choose **System Settings** > **Account Settings** to configure the login password).

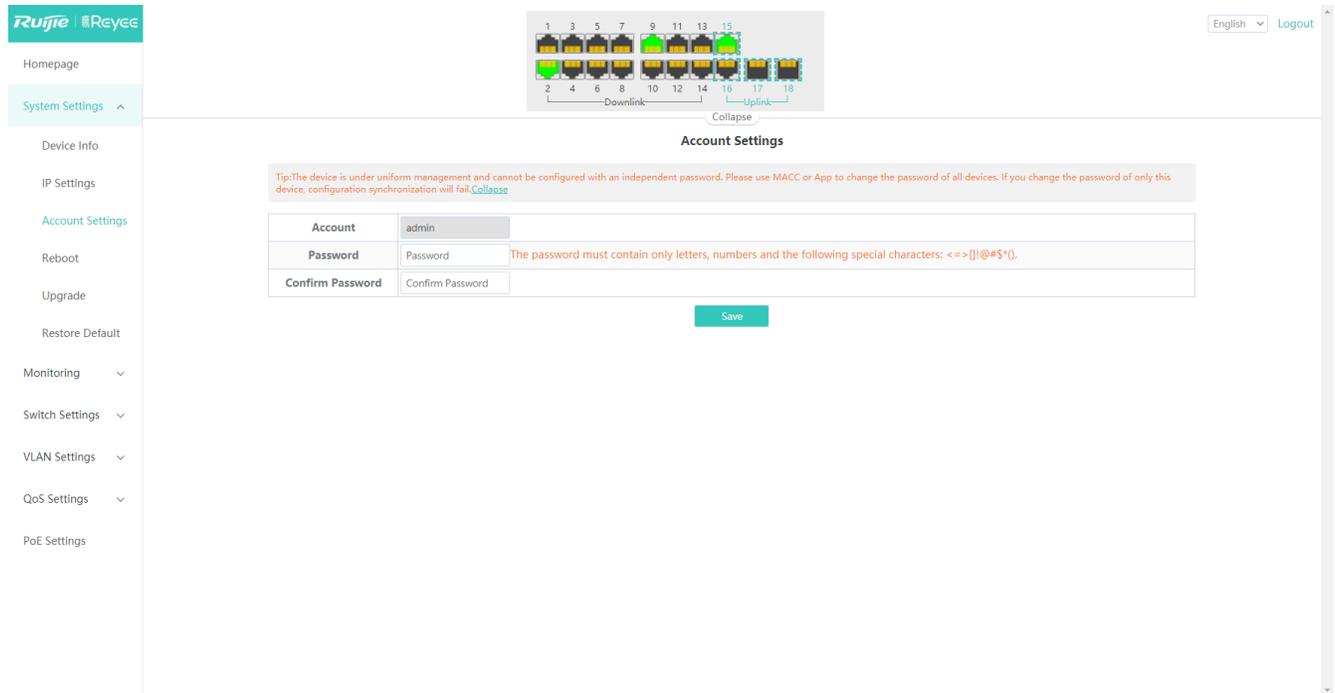


Enter a new password according to password rules and then click **Save**. In the displayed dialog box, click **OK**.

- i** Keep in mind the configured device management password. After password change, the eWeb management system may need re-authentication and login.

## 2.3 Introduction to the Web GUI

The figure below shows the Web GUI of RG-ES226GC-P.

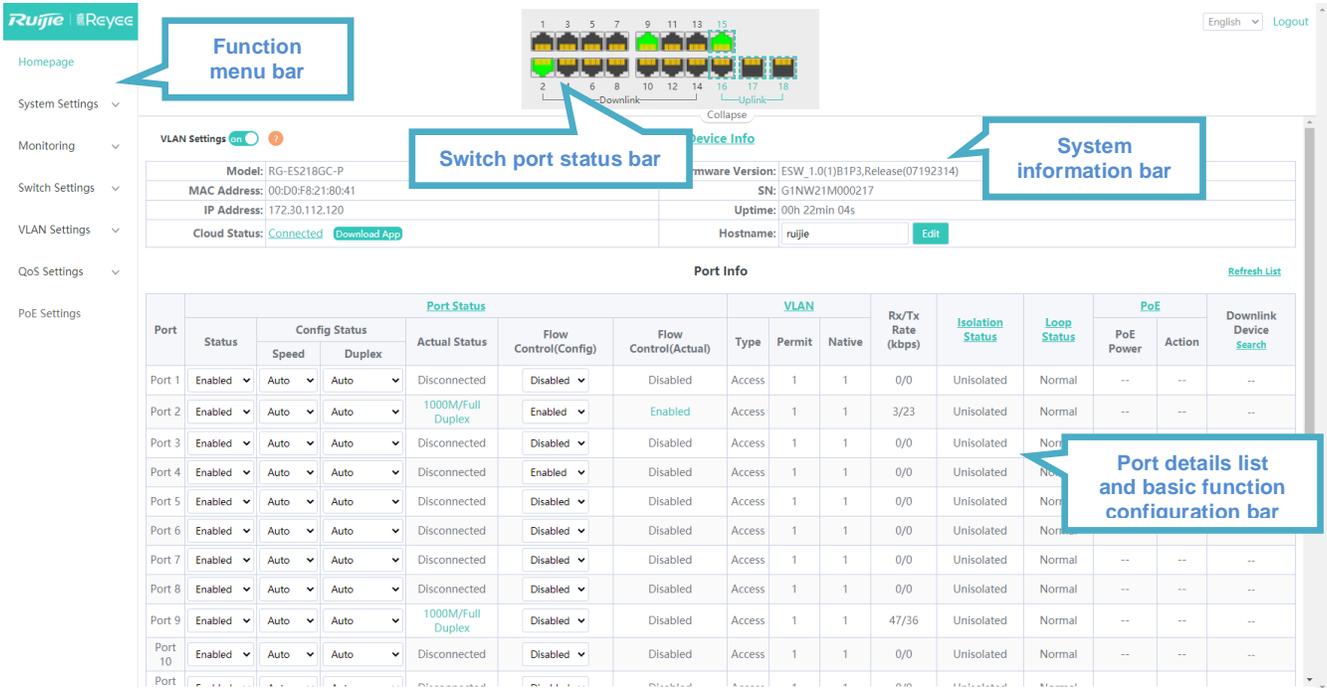


The Web GUI consists of the left and right portions.

The left portion is the menu bar and provides links to all configuration functions of the device, such as **Monitoring** and **VLAN Settings**.


The right portion is the content area, which is divided into two parts. The upper part displays the port status bar and the **Logout** button while the lower part displays the content and configuration area.


Port status bar:


Move the cursor over a port. Basic information about the port (including the port connection status, speed, duplex mode, and flow control status) is displayed. There are uplink and downlink ports. You can click **Collapse** to hide the port status bar so that a larger content area is displayed for viewing configuration details.

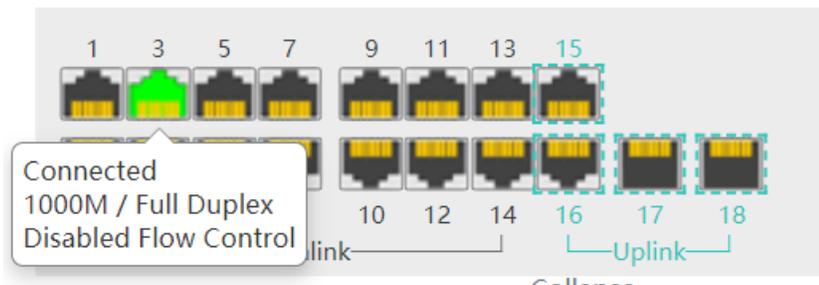


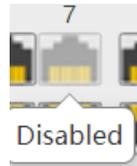

When a port is down, the port icon is grayed out . When a loop occurs on a port, the port icon is displayed in

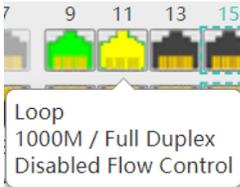

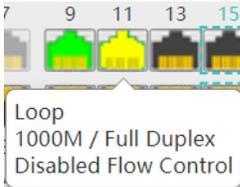yellow . When a port works properly, the port icon is displayed in green

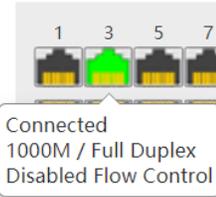

Description of the content area:

Texts in orange indicate a description of a function. Texts in red indicate notes of a function. A question mark (?) against an orange background  indicates an operation prompt, and the prompt pops up when the cursor is moved over the question mark.

VLAN Settings   Move the cursor over the question mark to pop up a description of the operation.

Up to 16 VLAN members can be configured. Description of the content area

VLAN ID
Native VLAN
The packets of this VLAN are untagged. <span>Supplementary description for the field or function</span>
VLAN 1 ▾

### 3 eWeb Configuration

#### 3.1 Homepage

The homepage displays basic information about the device, interface status, and **VLAN Settings**.



Collapse

VLAN Settings on ? Device Info

Model:	RG-ES218GC-P	Firmware Version:	ESW_1.0(1)B1P3,Release(
MAC Address:	00:D0:F8:21:80:41	SN:	G1NW21M000217
IP Address:	172.30.112.120	Uptime:	2d 13h 32min 16s
Cloud Status:	<span>Connected</span> <span>Download App</span>	Hostname:	ruijie <span>Edit</span>

Change the device name.

Refresh List

Port Info

Port	Port Status			Actual Status	Flow Control(Config)	Flow Control(Actual)	VLAN			Isolation Status	Loop Status	PoE		Downlink Device Search
	Status	Config Status	Speed				Duplex	Type	Pri			Native	Rx/Tx Rate (Mbps)	
Port 1	Enabled	Auto	Auto	Disconnected	Disabled	Disabled	Access			Isolated				
Port 2	Enabled	Auto	Auto	Disconnected	Enabled	Disabled	Access			Isolated				
Port 3	Enabled	Auto	Auto	Disconnected	Disabled	Disabled	Access	1	1	0/0				
Port 4	Enabled	Auto	Auto	Disconnected	Enabled	Disabled	Access	1	1	0/0	Normal	--	--	
Port 5	Enabled	Auto	Auto	Disconnected	Disabled	Disabled	Access			0/0	Normal	--	--	
Port 6	Enabled	Auto	Auto	Disconnected	Disabled	Disabled	Access			0/0	Normal	--	--	
Port 7	Enabled	Auto	Auto	Disconnected	Disabled	Disabled	Access			0/0	Normal	--	--	
Port 8	Enabled	Auto	Auto	Disconnected	Disabled	Disabled	Access	1	1	0/0	Normal	--	--	
Port 9	Enabled	Auto	Auto	1000M/Full Duplex	Disabled	Disabled	Access	1	1	52/44	Normal	--	--	
Port 10	Enabled	Auto	Auto	Disconnected	Disabled	Disabled	Access	1	1	0/0	Normal	--	--	
Port 11	Enabled	Auto	Auto	Disconnected	Disabled	Disabled	Access	1	1	0/0	Normal	--	--	
Port 12	Enabled	Auto	Auto	Disconnected	Disabled	Disabled	Access	1	1	0/0	Normal	--	--	

The following figure shows a multi-DHCP alarm displayed on the homepage.

English Logot

Collapse

VLAN Settings on ? Device Info Multiple DHCP servers exist !

Model:	RG-ES218GC-P	Firmware Version:	ESW_1.0(1)B1P3,Release(
MAC Address:	00:D0:F8:21:80:41	SN:	G1NW21M000217
IP Address:	192.168.110.139	Uptime:	00h 09min 28s
Cloud Status:	<span>Connected</span> <span>Download App</span>	Hostname:	ruijie <span>Edit</span>

VLAN ID	Port	IP Address	MAC Address
1	Port 4	192.168.110.1	30.0d.9e.55.7a.cc
1	Port 15	192.168.110.1	00.d0.f8.15.08.43

Move the cursor over the icon. Alarm information (VLAN, port, IP address, and MAC address) is displayed.

## 3.2 System Settings

### 3.2.1 Device Info

Details about the device are displayed.

Collapse

### System Settings

Device Name	ruijie
Model	RG-ES218GC-P
MAC Address	00:D0:F8:21:80:41
IP Address	192.168.110.140
Submask	255.255.255.0
Gateway	192.168.110.1
DNS	192.168.110.1
SN	G1NW21M000217
Firmware Version	ESW_1.0(1)B1P2,Release(07182814)
Firmware Date	Jun 28 2020
Hardware Version	1.00

### 3.2.2 IP Settings

Configure the management IP address and management VLAN for the device. **Auto Obtain IP** is set to **Enabled** by default. When **VLAN Settings** is set to **off**, the management VLAN is 1.

#### IP Settings

VLAN	1 (1-4094) <small>Disable VLAN Settings, and the management packets will be untagged. If you want to tag packets, please enable VLAN Settings.</small>
Auto Obtain IP	Enabled <input type="checkbox"/> <small>If you disable this feature, multi-DHCP alarming will fail.</small>
IP Address	172.30.112.120
Submask	255.255.255.0
Gateway	172.30.112.1
Auto Obtain DNS	Enabled <input type="checkbox"/>
DNS	172.30.44.20

Save

When **VLAN Settings** is set to **on**, the following figure is displayed.

#### IP Settings

VLAN	VLAN 1 <input type="checkbox"/>
Auto Obtain IP	Enabled <input type="checkbox"/> <small>If you disable this feature, multi-DHCP alarming will fail.</small>
IP Address	172.30.112.120
Submask	255.255.255.0
Gateway	172.30.112.1
Auto Obtain DNS	Enabled <input type="checkbox"/>
DNS	172.30.44.20

Save

When **VLAN Settings** is set to **on**, select the management VLAN from configured VLANs (you can choose [VLAN Settings > VLAN Members](#) to add a VLAN).

- i** The device will be disconnected for a short time during IP address configuration. If **Auto Obtain IP** is set to **Enabled**, the device needs to obtain an IP address from the uplink device, or you can enter the management IP address (10.44.77.200) for Web management.
- i** After **VLAN Settings** is set to **on**, change the management VLAN and check whether the port VLAN contains the management VLAN to avoid inaccessible IP address.

### 3.2.3 Account Settings

The settings are the same as those in [2.2 Default Password Configuration](#).

- i** When switches are managed via an ad hoc network, no management password can be separately configured for the device and the global password needs to be configured on the master device.

### 3.2.4 Reboot

Click **Reboot** to reboot the switch.

**Reboot**

Please click Reboot to reboot the switch.


Reboot

### 3.2.5 Upgrade

#### 3.2.5.1 Local Upgrade

Click **Select File**. In the displayed dialog box, select a target upgrade package. (The software upgrade package is an xxx.bin file while the system upgrade package is an xxxx.tar.gz file. You need to manually decompress the package and select the xxx.bin file for upgrade.)

**Keep Old Config** is selected by default. If the target version is much later than the current version, it is recommended to uncheck **Keep Old Config**.

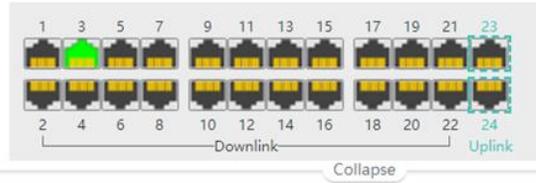

**Local Upgrade**

Select File  Keep Old Config

Decompress the package and select the bin file for upgrade.

### 3.2.5.2 Online Upgrade

Online upgrade will keep your current configuration. If there is a new version available, the **Upgrade** button can be clicked. Click the **Upgrade** button and then confirm upgrade. The device will download the new version from the cloud and upgrade to the target version. The time it takes depends on network performance.

**Online Upgrade**

Online upgrade will keep the old configuration.

<b>Current Version</b>	ESW_1.0(1)B1P3,Release(07193011)
<b>Latest Version</b>	The current version is the latest.

### 3.2.6 Restore Default

Click **Restore** to restore factory settings and reboot the device.

**Restoring**

Restore factory configuration and reboot the device.

## 3.3 Monitoring

### 3.3.1 Switches

When switches are managed by a master device (some functions such as account management are unavailable), the master device of the ad hoc network is displayed. You can access the master device to configure the ad hoc network.

Collapse

**Primary Device**

The current device has been managed by the master device. Please click the IP address to manage the master device.

IP Address	SN	Model
<a href="#">192.168.110.1</a>	EG34942570018	EG205G

The device can discover and display switches in the same management VLAN. The number of discovered switches in a management VLAN varies with the switch model:

The following models can discover up to 32 switches in the management VLAN: **RG-ES226GC-P, RG-ES218GC-P, RG-ES224GC, and RG-ES216GC.**

The following models can discover up to 16 switches in the management VLAN: **RG-ES205C-P, RG-ES205GC-P, RG-ES209C-P, and RG-ES209GC-P.**

Up to 32 switches of the same management VLAN can be discovered.

No.	IP Address	SN	Hostname	Model
1	<a href="#">172.30.112.120(Local)</a>	G1NW21M000217	rujje	RG-ES218GC-P
2	<a href="#">172.30.112.238</a>	MACC123514726	rujje	RG-ES226GC-P

**i** The first entry shows information about the current device and other entries show information about the discovered devices. You can click an IP address to redirect to the eWeb management of a specific device (login is required).

### 3.3.2 Port Statistics

The **Port Statistics** page displays the statistics and status of device ports, such as port Rx/Tx rate and Rx/Tx packets.

**Packet Statistics**

Port	Status	Connection Status	Rx/Tx Rate(kbps)	Rx/Tx Packets(KB)	Rx/Tx Success	Rx/Tx Failure
Port 1	Enabled	Disconnected	0/0	0/0	0/0	0/0
Port 2	Enabled	Disconnected	0/0	29998/55440	116405/164546	0/0
Port 3	Enabled	Disconnected	0/0	0/0	0/0	0/0
Port 4	Enabled	Disconnected	0/0	0/0	0/0	0/0
Port 5	Enabled	Disconnected	0/0	0/0	0/0	0/0
Port 6	Enabled	Disconnected	0/0	0/0	0/0	0/0
Port 7	Enabled	Disconnected	0/0	0/0	0/0	0/0
Port 8	Enabled	Disconnected	0/0	0/0	0/0	0/0
Port 9	Enabled	Connected	8/23	1361114/2001977	4259448/7337545	0/0
Port 10	Enabled	Disconnected	0/0	0/0	0/0	0/0
Port 11	Enabled	Disconnected	0/0	0/0	0/0	0/0
Port 12	Enabled	Disconnected	0/0	0/0	0/0	0/0
Port 13	Enabled	Disconnected	0/0	0/0	0/0	0/0
Port 14	Enabled	Disconnected	0/0	0/0	0/0	0/0
Port 15	Enabled	Connected	29/31	2067594/1615316	7811786/4674787	0/0
Port 16	Enabled	Disconnected	0/0	0/0	0/0	0/0
Port 17	Enabled	Disconnected	0/0	0/0	0/0	0/0
Port 18	Enabled	Disconnected	0/0	0/0	0/0	0/0

Clear

### 3.3.3 Cable Diagnostics

You can learn the general cable status of ports through cable diagnostics, for example, whether a cable is short-circuited or disconnected.

Click **Start**. Test results will be displayed.

#### Cable Diagnostics

<input type="checkbox"/>	Port	Test Result	Details
<input type="checkbox"/>	Port 1	-	-
<input type="checkbox"/>	Port 2	-	-
<input type="checkbox"/>	Port 3	-	-
<input type="checkbox"/>	Port 4	-	-
<input type="checkbox"/>	Port 5	-	-
<input type="checkbox"/>	Port 6	-	-
<input type="checkbox"/>	Port 7	-	-
<input type="checkbox"/>	Port 8	-	-
<input type="checkbox"/>	Port 9	-	-
<input type="checkbox"/>	Port 10	-	-
<input type="checkbox"/>	Port 11	-	-
<input type="checkbox"/>	Port 12	-	-
<input type="checkbox"/>	Port 13	-	-
<input type="checkbox"/>	Port 14	-	-
<input type="checkbox"/>	Port 15	-	-
<input type="checkbox"/>	Port 16	-	-
<input type="checkbox"/>	Port 17	Unsupported	The port does not support cable diagnostics.
<input type="checkbox"/>	Port 18	Unsupported	The port does not support cable diagnostics.

#### Cable Test

<input type="checkbox"/>	Port	Test Result	Details
<input type="checkbox"/>	Port 1	Normal	The cable works well.
<input type="checkbox"/>	Port 2	Disconnected	Please check cable connection or replace the cable.
<input type="checkbox"/>	Port 3	Disconnected	Please check cable connection or replace the cable.
<input type="checkbox"/>	Port 4	Disconnected	Please check cable connection or replace the cable.
<input type="checkbox"/>	Port 5	Disconnected	Please check cable connection or replace the cable.
<input type="checkbox"/>	Port 6	Disconnected	Please check cable connection or replace the cable.
<input type="checkbox"/>	Port 7	Disconnected	Please check cable connection or replace the cable.
<input type="checkbox"/>	Port 8	Disconnected	Please check cable connection or replace the cable.
<input type="checkbox"/>	Port 9	Disconnected	Please check cable connection or replace the cable.
<input type="checkbox"/>	Port 10	Normal	The cable works well.
<input type="checkbox"/>	Port 11	Normal	The cable works well.
<input type="checkbox"/>	Port 12	Disconnected	Please check cable connection or replace the cable.
<input type="checkbox"/>	Port 13	Disconnected	Please check cable connection or replace the cable.
<input type="checkbox"/>	Port 14	Disconnected	Please check cable connection or replace the cable.
<input type="checkbox"/>	Port 15	Normal	The cable works well.
<input type="checkbox"/>	Port 16	Disconnected	Please check cable connection or replace the cable.
<input type="checkbox"/>	Port 17	Unsupported	The port does not support cable test.
<input type="checkbox"/>	Port 18	Unsupported	The port does not support cable test.

### 3.3.4 Loop Guard

#### Loop Guard

The port causing the loop will be shut down. After the loop is removed, the port will be up automatically.

Enabled	off 
---------	---

**i** After loop guard is enabled (which is disabled by default), a port causing a loop on the current device will be automatically disabled. After the loop is removed, the port is restored automatically.

## 3.4 Switch Settings

### 3.4.1 Port Settings

On the **Port Settings** page, you can configure the port status, speed, duplex mode, and flow control attribute in batches. The page is divided into two parts:

Configuration part:

Select a port, configure attributes for the port, and then click **Save** to deliver the configuration to the port.

Display part:

Configured attributes and actual attributes of each port are displayed.

### Port Settings

After the port is shut down, it is not allowed to send or receive packets(PoE is not affected). Shutting down all ports will make the switch unmanageable. Please be cautious.

Port	Status	Speed	Duplex	Flow Control
--Select--	Enabled ▾	Auto ▾	Auto ▾	Disabled ▾

Save

### Port List

Port	Status	Speed/Duplex		Flow Control	
		Config Status	Actual Status	Config Status	Actual Status
Port 1	Enabled	Auto/Auto	Disconnected	Disabled	Disabled
Port 2	Enabled	Auto/Auto	Disconnected	Enabled	Disabled
Port 3	Enabled	Auto/Auto	Disconnected	Disabled	Disabled
Port 4	Enabled	Auto/Auto	Disconnected	Enabled	Disabled
Port 5	Enabled	Auto/Auto	Disconnected	Disabled	Disabled
Port 6	Enabled	Auto/Auto	Disconnected	Disabled	Disabled
Port 7	Enabled	Auto/Auto	Disconnected	Disabled	Disabled
Port 8	Enabled	Auto/Auto	Disconnected	Disabled	Disabled
Port 9	Enabled	Auto/Auto	1000M/Full Duplex	Disabled	Disabled
Port 10	Enabled	Auto/Auto	Disconnected	Disabled	Disabled
Port 11	Enabled	Auto/Auto	Disconnected	Disabled	Disabled
Port 12	Enabled	Auto/Auto	Disconnected	Disabled	Disabled
Port 13	Enabled	Auto/Auto	Disconnected	Disabled	Disabled

**i** A disabled port cannot transmit or receive packets (the PoE function is not affected). Disabling all ports of a switch will make the switch unmanageable. Therefore, exercise caution when disabling ports.

## 3.4.2 Port Mirroring

Port mirroring forwards input/output packets of one or more source port to the destination port to monitor the network.

### Port Mirroring

Packets received and transmitted on the source port will be mirrored to the mirror port.

Source Port Member	Direction	Mirror Port
--Select--	Input ▾	Port 1 ▾

Save

Source Port Member	Direction	Mirror Port
--------------------	-----------	-------------

Delete

**i** Destination mirroring ports on RG-ES205C-P, RG-ES205GC-P, RG-ES209C-P, and RG-ES209GC-P can only capture packets. They cannot transmit data to the switch.

### 3.4.3 Port Isolation

#### Port Isolation

Downlink ports (1-14) will be isolated. The last four ports (15-18) are uplink ports and will not be isolated. (Packets will be forwarded between the uplink port and the downlink port. Downlink ports are not allowed to forward packets to each other).

Status	off <input type="checkbox"/>
--------	------------------------------

**i** Port isolation implements layer-2 isolation of packets. After port isolation is enabled (which is disabled by default), data can be forwarded only between uplink ports and downlink ports, and downlink ports cannot forward packets to each other.

### 3.4.4 Static MAC

The **Static MAC Address** page is divided into two parts:

Adding a static MAC address:

Enter a valid MAC address and VLAN ID, select a port, and then click **Add** to add a static MAC address.

#### Static MAC Address

Up to 16 MAC addresses can be configured.

MAC Address	VLAN ID	Port
<input type="text" value="00:00:00:00:00:00"/>	<input type="text" value="VLAN ID (1-4094)"/>	<input type="text" value="Port 1"/>

Add

Displaying and deleting a static MAC address:

After a valid static MAC address is added, its information is displayed in the list below. Select a static MAC address and click **Delete** to delete the static MAC address.

<input type="checkbox"/>	No.	MAC Address	VLAN ID	Port
<input type="checkbox"/>	1	00:11:22:33:44:55	1	1

Delete

- i** Up to 16 static MAC addresses can be added.
- i** After **VLAN Settings** is set to **off**, no VLAN ID needs to be entered to add a static MAC address.

### 3.4.5 Search MAC

With the search MAC function, you can search for the MAC addresses learned by the device. MAC addresses can be fuzzily searched. You can enter a part of a complete MAC address (such as 00:74:9c:1e:4b:f4) for searching.

MAC Address Search

MAC Address	VLAN ID
<input type="text" value="00:00:00:00:00:00"/>	<input type="text" value="VLAN ID (1-4094)"/>

MAC Address	VLAN ID	Type	Port
00:11:22:33:44:55	1	Static	Port 1

**i** After **VLAN Settings** is set to **off**, the **VLAN ID** column will not be displayed.

### 3.4.6 MAC List

The **MAC Address Info** page lists MAC addresses learned by the device.

MAC Address Info

No.	MAC Address	VLAN ID	Type	Port
1	00:74:9C:71:00:B9	1	Dynamic	15
2	00:74:9C:72:71:4B	1	Dynamic	15

Click **Clear Dynamic MAC**. The device re-obtains the list of learned MAC addresses.

**i** After **VLAN Settings** is set to **off**, the **VLAN ID** column will not be displayed.

### 3.4.7 DHCP Snooping

You can configure the DHCP snooping function for the device.

DHCP Snooping Settings

**Tip:** DHCP Snooping functions as a DHCP packet filter. The DHCP request packets will be forwarded only to the trusted port. The DHCP response packets from only the trusted port will be allowed for forwarding.

**Note:** Generally, the DHCP server port (uplink port) is set as the trusted port.

DHCP Snooping:  on

Select Trusted Port:

Select ALL/Unselect

Port 1  Port 2  Port 3  Port 4  Port 5  Port 6  Port 7  Port 8  Port 9  Port 10  Port 11  Port 12  Port 13  Port 14  Port 15  Port 16  Port 17  Port 18

After **DHCP Snooping** is set to **on**, as shown in the figure above, the device sets the uplink port as a trusted port by default. You can select a port and click **Save** to set the port as a trusted port.

**i** DHCP Snooping functions as a DHCP packet filter. The DHCP request packets will be forwarded only to the trusted port. The DHCP response packets from only the trusted port will be allowed for forwarding.

**i** The port connected to the DHCP server (uplink port) is configured as the trusted port generally.

### 3.5 VLAN Settings


You can add or delete VLANs, and configure port VLANs (only when **VLAN Settings** is set to **on**).

#### 3.5.1 VLAN Members

When **VLAN Settings** is set to **off**, the page is shown in the figure below:



When **VLAN Settings** is set to **on**, the page is shown in the figure below:

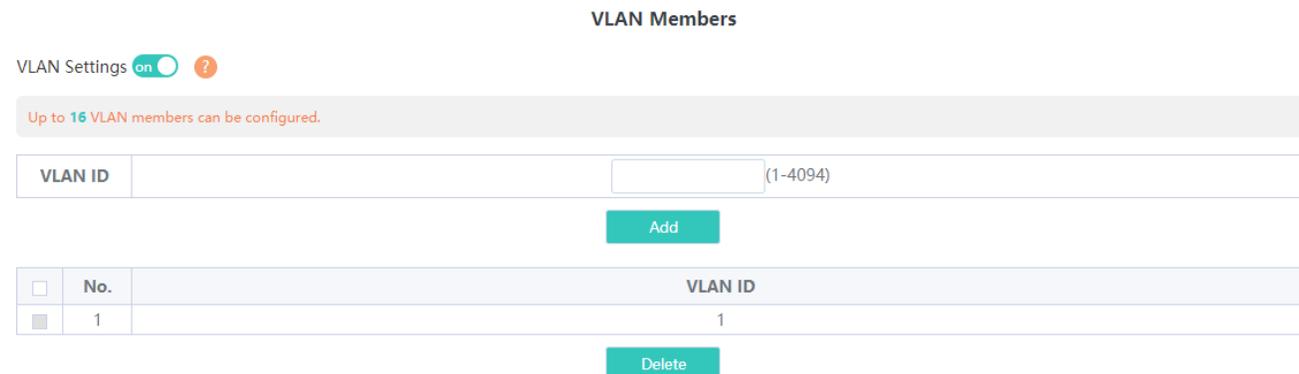

After **VLAN Settings** is set to **on**, enter a valid VLAN ID and click **Add** to configure a new VLAN. In the VLAN list, you can select VLANs and click **Delete** to delete them in batches.

- i** Up to 16 VLANs can be configured.
- i** A VLAN ID bound to a port cannot be deleted.

#### 3.5.2 VLAN Settings

When **VLAN Settings** is set to **off**, the page is shown in the figure below:

### VLAN Settings

VLAN Settings  off ?

VLAN settings are disabled. The device forwards packets according to the destination MAC address. After VLAN settings are enabled, the device will forward packets based on the combination of the destination MAC address and VLAN ID. You can configure a port as an access/trunk port and whether to tag packets. All ports will be initialized as access ports.

When **VLAN Settings** is set to **on**, the page is shown in the figure below:

### VLAN Settings

VLAN Settings  on ?

You can go to [VLAN Members](#) to add a VLAN ID.

Port	VLAN Type	Permit VLAN	Native VLAN <small>The packets of this VLAN are untagged.</small>
--Select--	Access ▼	--Select--	VLAN 1 ▼

Save

Port	VLAN Type	Permit VLAN	Native VLAN
Port 1	Access	1	1
Port 2	Access	1	1
Port 3	Access	1	1
Port 4	Access	1	1
Port 5	Access	1	1
Port 6	Access	1	1
Port 7	Access	1	1
Port 8	Access	1	1
Port 9	Access	1	1
Port 10	Access	1	1
Port 11	Access	1	1
Port 12	Access	1	1
Port 13	Access	1	1
Port 14	Access	1	1
Port 15	Access	1	1
Port 16	Access	1	1

The **VLAN Settings** page is divided into two parts:

The upper part enables port VLAN configuration. You can select a port, set the VLAN type (**Access** or **Trunk**; when **Trunk** is selected, **Permit VLAN** can be configured), **Permit VLAN**, and **Native VLAN**, and click **Save** to save the port VLAN configuration.

The lower part lists the port and VLAN settings.

Note: Packets from ports in the native VLAN are untagged.

### 3.6 QoS Settings

QoS settings include the port rate and storm control function.

#### 3.6.1 Port Rate

You can configure the input and output rates for a port. The **Port Rate** page is divided into two parts:

Configuration part:

Select one or more ports, set the port type and whether to enable rate limiting (if yes, enter the rate limit value of the port), and click **Save**.

Port Rate

Port	Type	Status	Rate(Mbit/sec)
--Select--	Input Port ▾	Disabled ▾	No Limit (1-1000M)

Save

Display part:

The input and output rates configured for device ports are displayed.

Port Rate

Port	Type	Status	Rate(Mbit/sec)
--Select--	Input Port ▾	Disabled ▾	No Limit (1-1000M)

Save

Port	Input Rate(Mbit/sec)	Output Rate(Mbit/sec)
Port 1	No Limit	No Limit
Port 2	No Limit	No Limit
Port 3	No Limit	No Limit
Port 4	No Limit	No Limit
Port 5	No Limit	No Limit
Port 6	No Limit	No Limit
Port 7	No Limit	No Limit
Port 8	No Limit	No Limit
Port 9	No Limit	No Limit
Port 10	No Limit	No Limit
Port 11	No Limit	No Limit
Port 12	No Limit	No Limit
Port 13	No Limit	No Limit
Port 14	No Limit	No Limit
Port 15	No Limit	No Limit
Port 16	No Limit	No Limit
Port 17	No Limit	No Limit

- i For RG-ES205C-P, the range of the port rate limit is from 1 Mbit/s to 100 Mbit/s.
- i For RG-ES209C-P, the maximum rate is 100 Mbit/s for ports 1–8, and the actual rate is 100 Mbit/s if a greater rate is configured. The range of the port rate limit is from 1 Mbit/s to 1000 Mbit/s for port 9.

- For RG-ES226GC-P, RG-ES218GC-P, RG-ES205GC-P, and RG-ES209GC-P, the range of the port rate limit is from 1 Mbit/s to 1000 Mbit/s.

### 3.6.2 Storm Control

The **Storm Control** page consists of the port storm control configuration and display.

Configuration part:

Specify the storm control type, select ports, enable storm control, and enter the storm control rate. Click **Save** to configure storm control.

**Storm Control**

Type	Port	Status	Rate(Mbit/sec)
Broadcast ▼	--Select--	Disable ▼	No Limit (1-1000M)

Save

Display part:

The storm control types and rates configured for device ports are displayed (when storm control is enabled, the storm control rates are displayed).

Type	Broadcast(Mbit/sec)	Unknown Unicast(Mbit/sec)	Unknown Broadcast(Mbit/sec)
Port 1	Disabled	Disabled	Disabled
Port 2	Disabled	Disabled	Disabled
Port 3	Disabled	Disabled	Disabled
Port 4	Disabled	Disabled	Disabled
Port 5	Disabled	Disabled	Disabled
Port 6	Disabled	Disabled	Disabled
Port 7	Disabled	Disabled	Disabled
Port 8	Disabled	Disabled	Disabled
Port 9	Disabled	Disabled	Disabled
Port 10	Disabled	Disabled	Disabled
Port 11	Disabled	Disabled	Disabled
Port 12	Disabled	Disabled	Disabled
Port 13	Disabled	Disabled	Disabled
Port 14	Disabled	Disabled	Disabled
Port 15	Disabled	Disabled	Disabled

- For RG-ES205C-P, the range of the storm control rate is from 1 Mbit/s to 100 Mbit/s.
- For RG-ES209C-P, the maximum rate is 100 Mbit/s for ports 1–8, and the actual rate is 100 Mbit/s if a greater rate is configured. The range of the storm control rate is 1 from Mbit/s to 1000 Mbit/s for port 9.
- For RG-ES226GC-P, RG-ES218GC-P, RG-ES205GC-P, and RG-ES209GC-P, the range of the storm control rate is from 1 Mbit/s to 1000 Mbit/s.

### 3.7 PoE Settings

The PoE system status and PoE port status of the device are displayed.

System status:

The total power, used power, remaining power, and work status of the PoE function of the device are displayed.

PoE Info

<b>Total Power</b> <span style="font-size: 1.2em; color: teal;">240w</span>	<b>Used</b> <span style="font-size: 1.2em; color: teal;">0w</span>	<b>Remaining</b> <span style="font-size: 1.2em; color: teal;">240w</span>	<b>Work Status</b> <span style="font-size: 1.2em; color: teal;">Normal</span>
--	---	--	--

Port status:

The PoE voltage, current, power, and current power status of ports are displayed. You can control whether to enable PoE function on a port and restart PDs.

PoE Settings

PoE Status <small>When off, PoE will not work on this port.</small>	Port	Power(W)	Current(mA)	Voltage(V)	Power Status	Action
<input checked="" type="checkbox"/>	Port 1	0	0	0	Powered Off	--
<input checked="" type="checkbox"/>	Port 2	0	0	0	Powered Off	--
<input checked="" type="checkbox"/>	Port 3	0	0	0	Powered Off	--
<input checked="" type="checkbox"/>	Port 4	0	0	0	Powered Off	--
<input checked="" type="checkbox"/>	Port 5	0	0	0	Powered Off	--
<input checked="" type="checkbox"/>	Port 6	0	0	0	Powered Off	--
<input checked="" type="checkbox"/>	Port 7	0	0	0	Powered Off	--
<input checked="" type="checkbox"/>	Port 8	0	0	0	Powered Off	--
<input checked="" type="checkbox"/>	Port 9	0	0	0	Powered Off	--
<input checked="" type="checkbox"/>	Port 10	0	0	0	Powered Off	--
<input checked="" type="checkbox"/>	Port 11	0	0	0	Powered Off	--
<input checked="" type="checkbox"/>	Port 12	0	0	0	Powered Off	--
<input checked="" type="checkbox"/>	Port 13	0	0	0	Powered Off	--
<input checked="" type="checkbox"/>	Port 14	0	0	0	Powered Off	--
<input checked="" type="checkbox"/>	Port 15	0	0	0	Powered Off	--
<input checked="" type="checkbox"/>	Port 16	0	0	0	Powered Off	--
Port 17 Unsupported						

- i Fiber ports (last two ports) of RG-ES226GC-P and RG-ES218GC-P do not support the PoE function.
- i Disabling PoE on a port will stop powering downlink devices connected to the port.

## 4 FAQs

### **Q1: What can I do when I failed to log into the eWeb management system?**

A: Perform the following steps:

- (1) Check that a PC network cable is correctly connected to a device port and the port indicator blinks.
- (2) Before accessing the setup GUI, you are advised to configure a static IP address for the PC. Set the IP address to 10.44.77.XXX (for example, 10.44.77.199; the IP address cannot be the same as the device IP address 10.44.77.200) and subnet mask to 255.255.255.0.
- (3) Run the **ping** command to test the connectivity between the PC and the device.

### **Q2: What can I do when I forget the device username and password? How can I restore factory settings?**

If you forget the login password, hold down the **Reset** button on the panel for 5 seconds after the device is powered on. Factory settings are restored after the device restarts.